



INSTRUCTIONS

J00256

2013-11-01



DETACHABLE SOLO RACKS

GENERAL

Kit Numbers

53493-95, 53494-95, 53495-95, 53496-95, 53497-95, and 53519-95

This instruction sheet covers the mounting of the following detachable racks. Appropriate docking hardware must have been installed prior to installation of the rack.

Kit Contents

NOTE

There are no service parts with this kit.

⚠ WARNING

Improper loading of cargo or installation of accessories can affect motorcycle stability and handling, which could result in death or serious injury. (00095a)

⚠ WARNING

Do not exceed luggage rack weight capacity. Too much weight can cause loss of control, which could result in death or serious injury. (00373a)

NOTE

Maximum luggage rack weight capacity is 4.5 kg (10 lb).

INSTALLATION/REMOVAL

1. See Figure 1. While standing behind the motorcycle, place the front rack notches (1) into the front docking points (2). (Most of the rack, except a typical sideplate, has been removed for illustration purposes).

NOTE

Rear docking points may be damaged if rotary latches and sideplates are not properly aligned. If the latch does not easily close, do not force. Check alignment as described in step 2.

2. Pull the rotary latches (4) back into their rearmost position. Position the rear rotary latches (4) over the rear docking points (5), making certain the latches and sideplates fit into the neck of the rear docking points. This may require some gentle squeezing or spreading of the sideplates.
3. Push downward and close the rotary latches by pressing the latch lever as far forward. You will hear a click when the latch is in place. **If the latch does not easily close, do not force.** Recheck alignment.
4. To remove the rack, press the release button (6) shown in the diagram, and pull the rotary latch lever back. Carefully lift the rear of the rack up and pull the rack out of the front docking points.

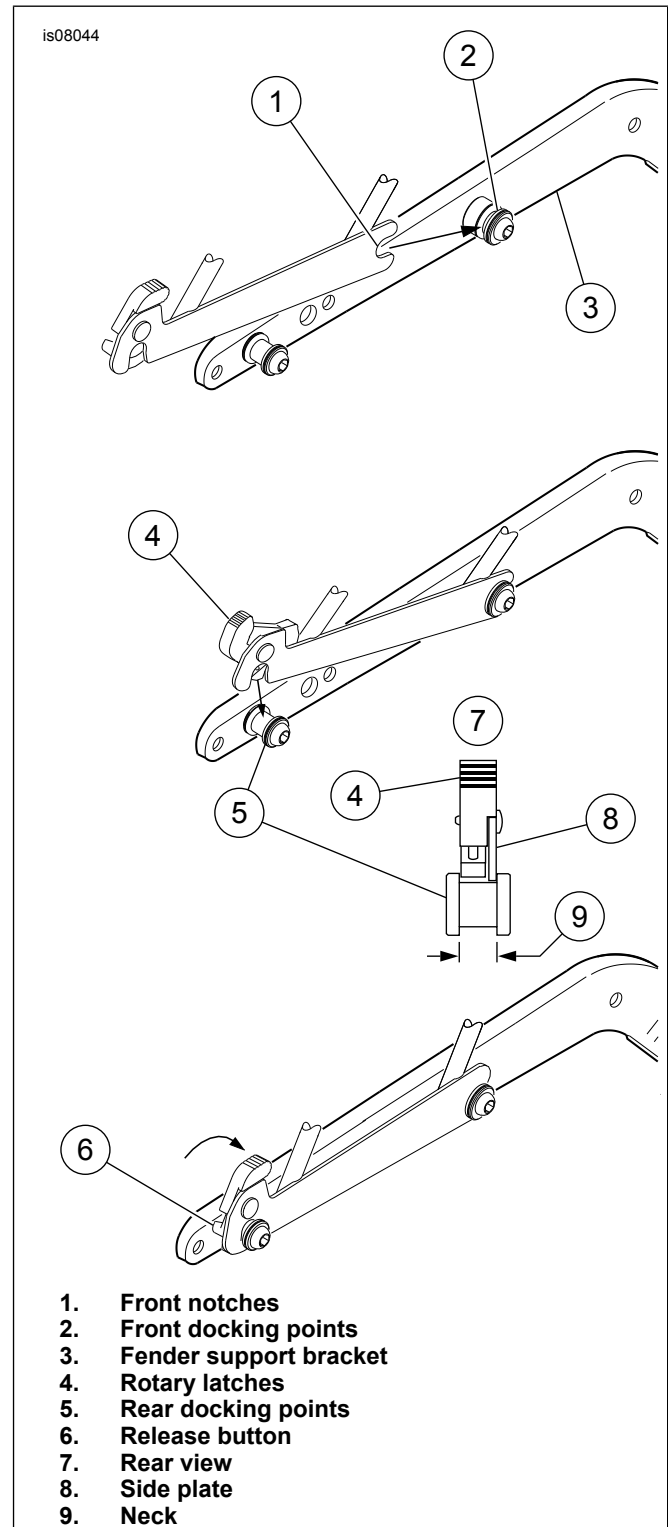 


Figure 1. Attaching Solo Rack