



INSTRUCTIONS

J00711

2013-11-01



FRONT AND REAR FENDER TIP TRIM

GENERAL

Kit Numbers

59333-97, 59334-97, 59002-98, 59052-98

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references Service Manual information. A Service Manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.

Kit Contents

Table 1. Kit Contents

Quantity	Description	Part Number
1	Fender tip trim (1) Front fender: 59333-97 2-tone gold, V-Wing Rear fender: 59334-97 2-tone gold, V-Wing	Front fender: 59002-98 H-D Classic Rear fender: 59052-98 H-D Classic
2	Locknuts, M4 - 0.7 (2)	(kits 59333-97 and 59334-97)
3	Panhead screws (2)	(kit 59002-98 and 59052-98)

NOTE

There are no Service Parts for these kits.

INSTALLATION

General

The original equipment (stock) fender tip lamp assemblies must be removed and the wire(s) must be unplugged or removed as specified in the following instructions.

Front Fender Tip

REMOVAL OF STOCK FRONT FENDER TIP LAMP ON 1994 AND LATER FLT MODELS

1. See the FLT Service Manual. Remove headlamp assembly with housing.
2. Locate the 3-place connector [32 in wiring diagram] through which 12vdc and electrical ground are connected to the fender tip lamp assembly. The connector locations are as follows:
 - a. **FLTC Ultra**: Under fuse and circuit breaker block
 - b. **FLHT/C/C-U**: On bottom of left outer fairing bracket
 - c. **FLHR**: On left front above air suspension valve

NOTE

Before disassembling the connector in the next step, refer to the applicable wiring diagram and check wire colors and connections to verify that connector [32] has been located.

3. See the FLT Service Manual and remove the leads, connected to the fender tip lamp, from the socket half, connector [32B].
4. Insert a small screwdriver blade in rectangular slot at top center of fender tip lamp lens and gently pry lens from lamp.
5. Remove two screws and nuts that fasten fender tip lamp assembly to front fender. Gently remove the lamp assembly taking care not to damage wires connected to lamp assembly.
6. Reach under left side of fender and gently pull wires through rear hole in left side of fender and then through clips on left side of fender and finally through front hole and out of trim strip.

REMOVAL OF STOCK FRONT FENDER TIP LAMP ON 1993 AND EARLIER FLT MODELS, FLSTC & FLSTN

1. Insert a small screwdriver blade in rectangular slot at top center of fender tip lamp lens and gently pry lens from lamp.
2. Remove two screws and nuts that fasten fender tip lamp assembly to front fender. Gently remove the lamp assembly taking care not to damage wire connected to lamp assembly.
3. Unplug wire connector located about 76.2 mm (3 in) from lamp assembly. Cover the socket half of connector (connected to motorcycle wiring) with electrical tape.

INSTALLING FRONT FENDER TIP TRIM FROM KIT-ALL MODELS

1. Position fender tip trim over holes in fender and guide outer ends of fender tip trim into trim strips on sides of fender.
2. Place fender tip trim in position and secure with nuts or screws included in kit. Tighten hardware to 0.6 N·m (6 in-lbs).



REAR FENDER TIP

REMOVAL OF STOCK REAR FENDER TIP LAMP ON ALL MODELS

Follow steps 1 through 3 given above for "1993 AND EARLIER FLT MODELS, FLSTC & FLSTN".

INSTALLING REAR FENDER TIP TRIM FROM KIT-ALL MODELS

1. Position fender tip trim over holes in rear fender.
2. Place fender tip trim in position and secure with nuts or screws included in kit. Tighten to 0.67 N·m (6 **in-lbs**).