

INSTRUCTIONS

2012-10-18

FRONT NINE-SPOKE WHEELS

GENERAL

WARNING

Install only wheels and installation kits approved for your model motorcycle. Contact a Harley-Davidson dealer to verify fitment. Mismatching wheels and installation kits or installing wheels not approved for your model can cause loss of control, which could result in death or serious injury. (00610c)

Kit Number

41880-07, 41886-07, 41886-09, 43300114

J04237

Models

For model fitment information, see the P&A Catalog or the Parts and Accessories section of www.harley-davidson.com.

NOTE

Accessory hub caps are not compatible with this wheel.

Kit Contents

See Figure 1 and Service Parts Tables.

Additional Parts Required

This kit includes the custom wheel only. Some kits also include a hub cap.

Proper installation of this kit requires the separate purchase of the following parts which are available at a Harley-Davidson dealer:

- Wheel Installation Kit (See Table 2 through Table 7 to determine required installation kit.)
- 10 Brake Disc/Hub Cap Screws (3655A) or 2 Chrome screw kits (46646-05)
- Wheel Bearing Remover and Installer (94134-09)
- Hub Cap (43986-00 if installing Kit 41886-09 on a 2009 and Later TLE/U sidecar)

The following Harley-Davidson Genuine Motor Accessories are recommended for proper maintenance and cleaning:

- Harley[®] Bright[™] Chrome Cleaner (94683-99) (not for use on kit 43300114)
- Harley[®] Glaze[™] Polish and Sealant (99701-84)
- Harley[®] Wheel and Spoke Brush (43078-99)
- Harley-Davidson[®] Wheel and Tire Cleaner (94658-98)
- Harley[®] Preserve[™] Bare Aluminum Protectant (99845-07)

A WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson dealer.

INSTALLATION

NOTE

Use plastic protectors on tire mounting tools and rim clamps when mounting a tire to a painted wheel.

When mounting tires, liberally use tire lube on the wheel and tire

For tire removal, use plastic inserts between the rim and tire after breaking the bead to create a large enough gap for the rim clamps to get into.

 Remove existing front wheel assembly. Save axle, axle nut, brake disc, and wheel spacers for kit installation. Refer to FRONT WHEEL in service manual. For FLSTC and FLSTN models: Discard moon-style hub cap.

NOTE

 Install long valve stem (43206-01) included in the installation kit. Discard all other valve stems.

NOTICE

Do not re-use brake disc/rotor screws. Re-using these screws can result in torque loss and damage to brake components. (00319c)

- See Figure 1. Install valve stem assembly (L, M or N) on wheel. Refer to TIRES in service manual.
- Assemble wheel installation kit components and brake disc(s) to wheel, using the appropriate service parts table. Refer to FRONT WHEEL in service manual.

NOTE

Install the primary bearing first with the WHEEL BEARING REMOVER/INSTALLER, following the service manual instructions.

The machined grooves in the hub face indicate the primary bearing side.

The front wheel should be installed so that the valve stem is on the right side of the motorcycle.

- Install wheel assembly parts from the appropriate service parts table for your fitment and stock brake disc(s). Discard parts from the installation kit that are not required. Refer to FRONT WHEEL in service manual.
- For FLSTC and FLSTN Models: Install wheel kit and right side wheel spacer provided in kit installation. All other models: Install wheel spacers previously removed.
- Install front wheel (1), stock axle and stock axle nut. Refer to FRONT WHEEL in service manual.
- For 2009-Later TLE/U Sidecars: Assemble the sidecar brake disc and hub cap (purchased separately) to the wheel. The brake disc is to be installed on the side of the wheel opposite the valve stem. Install wheel according to the sidecar service manual.

MAINTENANCE AND CLEANING

NOTE

This wheel assembly includes plugs that have been installed in the openings between the brake disc mounting holes on one side of the wheel. Missing or damaged plugs can be replaced using the Wheel Plug Kit (41966-07).

Chrome parts must be maintained regularly so they keep their original shine and luster.

- Clean heavily-soiled wheel surfaces using Harley-Davidson Wheel and Tire Cleaner, applied with Harley Wheel and Spoke Brush.
- 2. Thoroughly clean chrome with a good quality chrome cleaner, such as Harley Bright Chrome Cleaner.
- After cleaning and polishing, seal the finish with a good quality sealer, such as Harley Glaze Polish and Sealant.

SERVICE PARTS

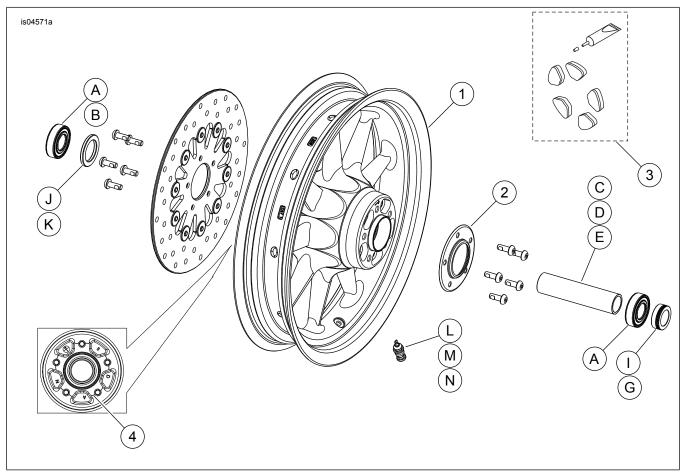


Figure 1. Service Manual: Front Nine-Spoke Wheels

Table 1. Service Parts and Wheel Kit Contents

Kit	Item	Description (Quantity)	Part Number
41886-07, 41886-09,	1	Wheel	Not Sold Separately
43300114	3	Plug service kit (not included in kit)	41966-07
	1	Wheel	Not Sold Separately
41880-07	2	Hub cap	43986-00
	3	Plug service kit (not included in kit)	41966-07

2/4 J04237

Table 1. Service Parts and Wheel Kit Contents

Kit	Item	Description (Quantity)	Part Number					
	Visual indicator mentioned in text:							
	4	Machined groove (all wheels)						

Table 2. FRONT 3/4 Inch Bearing Wheel Installation Kit (43833-07A)

			-		-						
FRONT 3/4 Inch Bearing Wheel Installation Kit (43833-07A)			ITEM	(Qua	ntity l	Used a	and D)escri _l	ption)	,	
Fitment	Wheel Size	Α	С	D	E	G	Н	I	L	M	
2000-2006 FLST and FLSTF (except 2006 FLSTFSE2)	16 x 3.0 in	2	0	1	0	0	0	0	*	*	
2000-2006 FLSTC and FLSTN	16 x 3.0 in	2	0	1	0	0	0	1	*	*	
2006 FLSTFSEi	17 x 3.5 in	2	0	1	0	0	0	1	*	*	
2008-later FLSTSB	18 x 3.5 in	2	0	***	0	***	0	0	*	*	
2000-2007 XL; 2000-2003 Dyna (except FXDWG)	19 x 2.5 in	2	0	0	1	0	0	0	*	*	
2000-2007 XL; 2000-2003 Dyna (except FXDWG)	21 x 2.15 in	2	0	0	1	0	0	0	*	*	
2000-2006 FXST/B/C; 2000-2005 FXDWG**	21 x 2.15 in	2	1	0	0	0	0	0	*	*	
2000-2006 FXSTS**	21 x 2.15 in	2	1	0	0	0	1	0	*	*	
2000-2006 FXSTD (Except FXSTDSE)**	21 x 2.15 in	2	1	0	0	1	0	0	*	*	
Installation kits are designed to work with many different		Α	Bearing, regular (2) 9267								
fitments. Contact a Harley-Davidson dealer to verify that		С	Axle sleeve 43536-00								
stallation kits are both designed and approved for the mo	torcycle they are	D	Axle sleeve 43						43608-00		
being installed on.		Ε	Axle sleeve 43613-00						3-00		
NOTES:		G	Spacer, axle 40910-						0-00A		
* See NOTE above valve installation step in INSTALLATI		Н	H Spacer, axle 43					4331	3-98		
which valve stem to use for your particular kit. Discard other valve stem(s). ** The right side of the wheel is the primary bearing side for this fitment.		I Spacer, wheel					4361	7-00A			
		L	Valve	stem	, shor	t		4315	43157-83A		
*** See INSTALLATION section for separate hardware kit to be used for		M	Valve stem, long 43206-01						6-01		
FLSTSB models.											

Table 3. FRONT 1 Inch Bearing Wheel Installation Kit (43848-08A)

FRONT 1 Inch Bearing Wheel Installation Kit (43848-08A)		ITE	M (Qu	antity	Used a	nd De	escripti	on)	
Fitment	Wheel Size	Α	С	D	E	F	L	М	
2000-2007 Touring	16 x 3.0 in	2	1	0	0	0	*	*	
2004-2007 Touring	18 x 3.5 in	2	1	0	0	0	*	*	
2004-2005 Dyna (except FXDWG)	19 x 2.5 in	2	0	0	0	1	*	*	
2006-2007 Dyna (except FXDWG)	19 x 2.5 in	2	0	0	1	0	*	*	
2002-2007 VRSC	19 x 3.0 in	2	0	0	1	0	*	*	
2006-2007 FXDWG**	21 x 2.15 in	2	0	1	0	0	*	*	
2004-2005 Dyna (except FXDWG)	21 x 2.15 in	2	0	0	0	1	*	*	
Installation kits are designed to work with many different whee		Α	Bearir	ng, reg	9247				
Contact a Harley-Davidson dealer to verify that the wheel a		С	Axle s	leeve	43517-00				
are both designed and approved for the motorcycle they are	e being installed on.	D	Axle s	leeve		43633	-06		
NOTES:		Е	Axle s	leeve			43641	-01	
* See NOTE above valve installation step in INSTALLATION to determine which		F	Axle s	leeve			43755-04		
valve stem to use for your particular kit. Discard other valve stem(s).		L	Valve	stem,	short		43157-83A		
** The right side of the wheel is the primary bearing side for	this fitment.	М	Valve	stem,	long		43206	-01	

Table 4. FRONT 25 mm Bearing Wheel Installation Kit (41455-08C)

FRONT 25 mm Bearing Wheel Installation Kit (41455-08C)			M (Qı	uantit	y Use	ed an	d Des	cripti	ion)	
Fitment Wheel Size A		Α	Ċ	D	J	K	L	M	Ń	
2008 Touring; 2009 and later FLHRC (non-ABS) and Trike (non-	16 x 3.0 in	2	0	1	0	1	*	*	*	
ABS)		_		'		'				
2009 and later Touring (non-ABS)	17 x 3.0 in	2	0	1	0	0	*	*	*	
2008 and later Touring (non-ABS)	18 x 3.5 in	2	0	1	0	**	*	*	*	
2008 and later Dyna (except FLD, FXDWG and FXDF)	19 x 2.5 in	2	1	0	**	0	*	*	0	
2008 and later VRSCAW, VRSCD, VRSCF and VRSCDX (non-	19 x 3.0 in	2	1	0	**	0	*	*	0	
ABS)		_	'			0			O	
2009 and later Touring (non-ABS)	19 x 3.5 in	2	0	1	0	0	*	*	*	
Installation kits are designed to work with many different wheel sty		Α	Bearing, regular (2)					9276		
Contact a Harley-Davidson dealer to verify that the wheel and ins		С	Axle sleeve 4174					8-08		
both designed and approved for the motorcycle they are being ins	stalled on.	D	Axle sleeve 41900-08							
NOTES:		J	Bearing shim*** 4					0-08		
* See NOTE above valve installation step in INSTALLATION to de		K	Bearing shim*** 43903-08							
valve stem to use for your particular kit. Discard other valve stem		L	Valve	sten	n, sho	rt	4315	7-83	1	
** See NOTES for your wheel kit above the wheel assembly step in INSTALLATION			Valve stem, long 43206-01							
to determine if bearing shim is used for your particular wheel kit and fitment.		N	Valve stem, pull thru 40999-87							
*** Bearing shim installed under the primary bearing.										

J04237 3 / 4

Table 5. FRONT 25 mm Bearing Wheel Installation Kit (43851-11A)

,		ITE	M (Qı	uantit	y Use	ed an	d Des	cript	ion)	
Fitment	Wheel Size	Α	С	G	Н	J	L	M	N	
2007 and later FLSTC, FLSTN and FLS (non-ABS)	16 x 3.0 in	2	1	0	1	1	*	*	*	
2008 and later FXDF	16 x 3.0 in	2	1	0	0	0	*	*	*	
2007 and later FLSTF and FLSTFB (non-ABS)	17 x 3.5 in	2	1	0	0	0	*	*	*	
2008 and later FLSTF and FLSTFB (non-ABS)	18 x 3.5 in	2	1	0	0	0	*	*	*	
2008 and later FXDF; 2012 and later FLD	18 x 3.5 in	2	1	0	0	0	*	*	*	
2007 and later FXS, FXST/B/C (non-ABS); 2008 and later FXD-	21 x 2.15 in	2	1	0	0	1	*	*	*	
WG***		_	'			'				
2007 FXSTD***	21 x 2.15 in	2	1	1	0	1	*	*	*	
Installation kits are designed to work with many different wheel sty		Α	Bearing, regular (2) 92					9276		
Contact a Harley-Davidson dealer to verify that the wheel and ins		С	Axle sleeve 41349-07							
both designed and approved for the motorcycle they are being ins	stalled on.	G	Spacer, axle 41504-07							
NOTES:		Н	Spacer, axle 41695-0					5-07		
* See NOTE above valve installation step in INSTALLATION to de		J	Bear	ing sh	nim**		4331	5-07		
valve stem to use for your particular kit. Discard other valve stem(s).		L	Valve	sten	n, sho	rt	4315	7-83	1	
** Bearing shim installed under the primary bearing.		М	Valve stem, long 43206-01				6-01			
*** The left side of the wheel is the primary bearing side for this fit	ment.	N	Valve	e sten	າ, pull	-thru	4099	9-87		

Table 6. FRONT 25 mm Bearing ABS Wheel Installation Kit (41454-08B)

FRONT 25 mm Bearing ABS Wheel Installation Kit (41454-08B)			EM (Quan	tity l	Jsed	and I	Descr	riptio	n)
Fitment	Wheel Size	Α	В	С	D	J	K	L	M	N
2008 Touring and 2009 and later FLHRC with ABS	16 x 3.0 in	1	1	0	1	0	1	*	*	0
2009 and later Touring with ABS	17 x 3.0 in	1	1	0	1	0	0	*	*	*
2008 and later Touring with ABS	18 x 3.5 in	1	1	0	1	**	**	*	*	*
2012 and later Dyna with ABS (Except FLD, FXDWG and FXDF)	19 x 2.5 in	1	1	1	0	**	**	*	*	0
2008 and later VRSCAW, VRSCD, VRSCF and VRSCDX with	19 x 3.0 in	1	1	1	0	**	**	*	*	0
ABS		- 1	' '	' '	"					0
2009 and later Touring with ABS	19 x 3.5 in	1	1	0	1	0	0	*	*	*
Installation kits are designed to work with many different wheel	styles and fit-	Α	Bearing, regular					9276		
ments. Contact a Harley-Davidson dealer to verify that the wheel and installation		В	Bearing, ABS***					9252		
kits are both designed and approved for the motorcycle they are being installed		С	Axle sleeve					41748-08		
on.		D	Axle sleeve					41900-08		
NOTES:		J	Bearing shim****					41450-08		
* See NOTE above valve installation step in INSTALLATION to d		K	Bearing shim****					43903-08		
valve stem to use for your particular kit. Discard other valve ste		L	Valve stem, short					4315	7-83	Ą
** See NOTES for your wheel kit above the wheel assembly ste		М	Valve	e ster	n, Ion	g		4320	6-01	
TION to determine which bearing shim to use for your particula	r wheel kit and	N	, ,					9-87		
fitment.					•					
*** Red side of bearing must be installed toward the wheel. The	ABS bearing is									
primary.										
**** Bearing shim installed under the primary bearing.										

Table 7. FRONT 25 mm Bearing ABS Wheel Installation Kit (42400010)

FRONT 25 mm Bearing ABS Wheel Installation Kit (42400010)			M (Q	uant	ity U	sed	and	Des	cript	ion)	
Fitment	Wheel Size	Α	В	С	G	J	K	L	M	N	
2011 and later FLSTC, FLSTN and FLS with ABS	16 x 3.0 in	1	1	1	1	0	1	*	*	*	
2012 and later FXDF with ABS	16 x 3.0 in	1	1	1	0	0	0	*	*	*	
2011 and later FLSTF and FLSTFB with ABS	17 x 3.5 in	1	1	1	0	0	0	*	*	*	
2011 and later FLSTF and FLSTFB with ABS	18 x 3.5 in	1	1	1	0	0	0	*	*	*	
2012 and later FXDF and FLD with ABS	18 x 3.5 in	1	1	1	0	0	0	*	*	*	
2011 and later FXS, FXST and 2012 and later FXDWG with ABS	21 x 2.15 in	1	1	1	0	0	1	*	*	*	
Installation kits are designed to work with many different wheel styles ar		Α	Bearing, regular					9276A			
Contact a Harley-Davidson dealer to verify that the wheel and installation	kits are both	В	Bearing, ABS**					9252			
designed and approved for the motorcycle they are being installed on.		С	Axle sleeve					41349-07			
NOTES:		G	Spacer 41					416	41695-07		
* See NOTE above valve installation step in INSTALLATION to determine	e which valve	J	Bea	ring	shim	***		414	41448-08		
stem to use for your particular kit. Discard other valve stem(s).		K	Bearing shim***				43315-07				
** Red side of bearing must be installed toward the wheel. The ABS bearing is the			Valve stem, short 43157					57-8	3A		
primary bearing.		M	Valv	e ste	em, lo	ong		432	06-0	1	
*** Bearing shim installed under the primary bearing.		N	Valv	e ste	em, p	ull-th	าru	409	99-8	7	

4 / 4 J04237