



INSTRUCTIONS

J04868

2009-04-29



SCREAMIN' EAGLE PERFORMANCE CLUTCH KIT

GENERAL

Kit Number

37980-10

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

This kit is a direct replacement for the original equipment (OE) clutch pack, and installs in the same manner.

Additional Parts Required

▲ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for this model motorcycle is required for this installation and is available from a Harley-Davidson dealer.

See the service manual for any supplies or additional parts required for proper installation of this kit on this model motorcycle.

Kit Contents

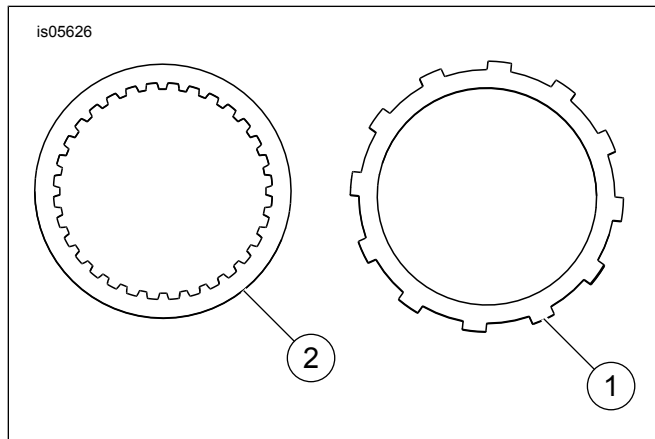


Figure 1. Components, Performance Clutch Kit

Table 1. Kit Contents

Item	Description (Quantity)	Part Number
	Friction and spacer disc set	37980-10
1	Friction disc (9)	Not sold separately
2	Spacer disc (8)	Not sold separately

There are no service parts available with this kit.

INSTALLATION

Follow the service manual instructions to install the friction discs and spacer discs but follow these important guidelines:

1. Remove the eight friction discs, six spacer discs, damper spring and damper spring seat from the clutch assembly following the instructions in the service manual.

NOTE

The spacer discs supplied in this kit must be used with the friction discs supplied in this kit. Do not use the original equipment spacer discs with this kit.

NOTICE

Do not reinstall the damper spring and/or damper spring seat with this kit. Doing so will affect the stacked height of the clutch discs. Failure to comply could result in premature clutch failure and possible engine damage. (00459c)

2. See Figure 1. Install a friction disc (1) into the clutch shell first, then alternate spacer discs (2) and friction discs.
3. Complete the final assembly following the instructions in the service manual.

