



INSTRUCTIONS

J06396

2017-08-22



5-3/4 INCH HEADLAMP TRIM RING

GENERAL

Kit Number

61400429, 61400430, and 61400431

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

1. Loosen screw from original equipment headlamp trim ring and remove ring. Set mounting ring aside.
2. See Figure 1 Position the trim ring so clamp (1) feature is at the bottom. Place top of trim ring over the tabs at the top of the headlamp bucket (2).
3. Rotate the trim ring until the bottom can be positioned over the RH tab, then rotate the ring to position the ring over the LH tab.
4. Rotate the trim ring to center the clamp, verify engagement of both sides of trim ring.
5. Install the screw (3). Tighten.
Torque: 1.3 N·m (12 **in-lbs**)

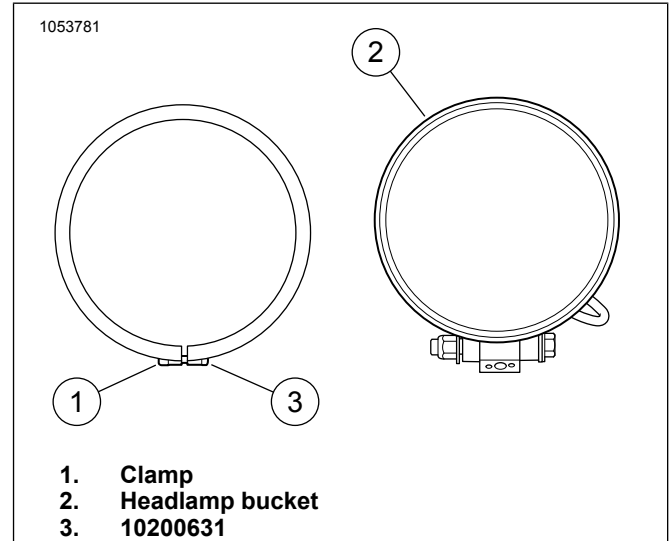


Figure 1. Trim Ring

SERVICE PARTS

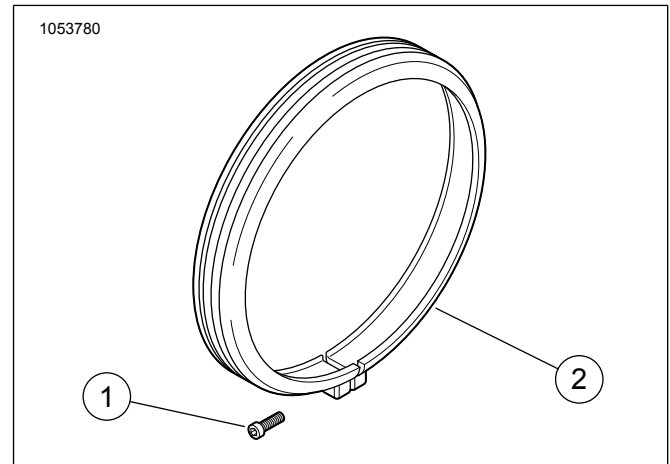


Figure 2. Service Parts: Headlamp Trim Ring

Table 1. Service Parts Table: Headlamp Trim Ring

Item	Description (Quantity)	Part Number
1	Socket head cap screw	10200631
2	Trim ring	Not sold separately