



INSTRUCTIONS





J06752

2021-08-03



AXLE COVERS

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾
43000188, 43000189, 43000214	Safety Glasses, Socket Wrench, Flathead Screwdriver	   

(1) Only simple tools and techniques required

KIT CONTENTS

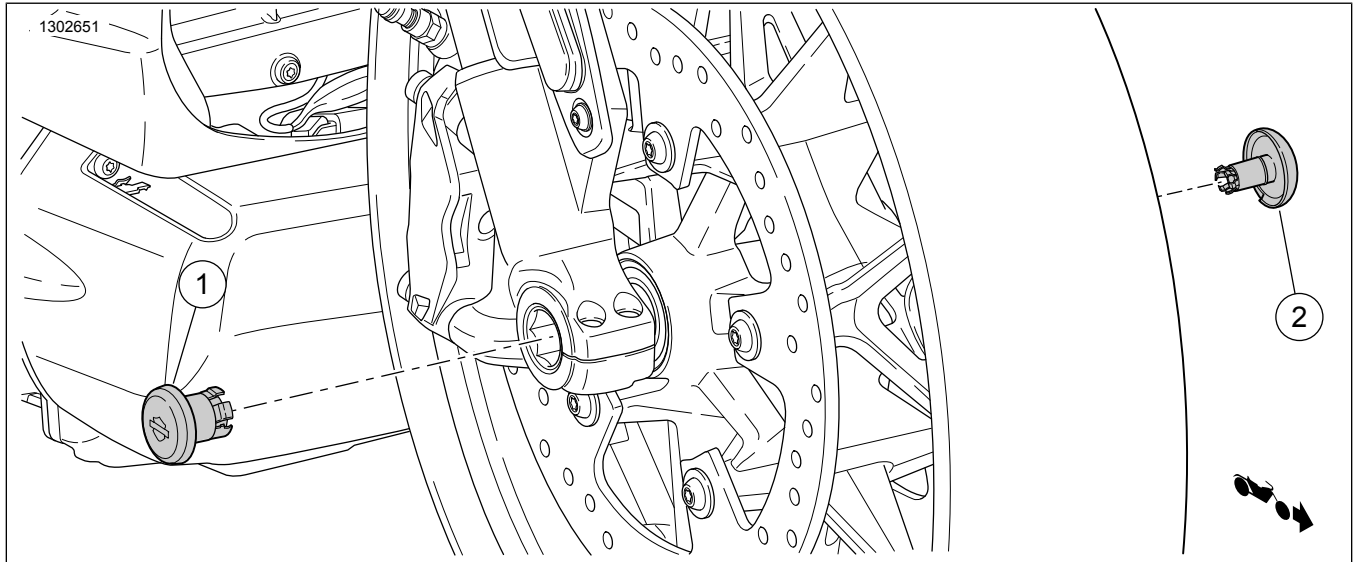


Figure 1. Kit Contents: Axle Covers

Table 2. Kit Contents: Axle Covers (Front shown)

<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1	1	Axle cover, Large, (right side)	Not sold separately	
<input type="checkbox"/>	2	1	Axle cover, Small, (left side)	Not sold separately	
<input type="checkbox"/>	3	1	O-ring, (right side), not shown	11900162	ALL kits
<input type="checkbox"/>			O-ring, (left side), not shown	11900161	Kits 43000188, 43000189
<input type="checkbox"/>			O-ring, (left side), not shown	11900170	Kits 43000214

NOTE

Verify all contents are present in the kit before installing or removing items from vehicle.

GENERAL

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Ensure you are using the most current version of the instruction sheet which is available at: www.harley-davidson.com/isheets



Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

REMOVE

1. See Figure 1. Open Original Equipment (OE) axle covers (1,2).
 - a. Place edge of screwdriver into notch located at the bottom of cover.
 - b. Gently pry outward to remove.

INSTALL

Kits 43000188 & 43000189

1. See Figure 1. Install **new** right (hex) side axle cover (1).
 - a. Using socket wrench, loosely tighten hex nut until spring clip cannot free-spin.
 - b. Align spring clip to axle.
 - c. Gently press clip against axle and rotate to align bar and shield.
 - d. Once aligned, remove cover and fully tighten hex nut to secure spring clip.
 - e. Install cover by aligning spring clip with internal hex of axle.
 - f. Press firmly until cover is fully installed.
2. Figure 1 Install **new** left (circular) side axle cover (2).
 - a. Align spring clip to axle.
 - b. Rotate to align bar and shield.
 - c. Press firmly until cover is fully installed.

Kit 43000214

1. See Figure 1. Install **new** right (hex) side axle cover (1).
 - a. Align spring clip to axle.
 - b. Install cover by aligning spring clip with internal hex of axle.
 - c. Press firmly until cover is fully installed.

2. Figure 1 Install **new** left (circular) side axle cover (2).

- a. Align spring clip to axle.
- b. Press firmly until cover is fully installed.