



INSTRUCTIONS

94100498

2024-01-23



FAIRING SUPPORT KIT

GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾
49000274	Safety Glasses, Torque Wrench	
(1) Tightening to torque value or other moderate tools and techniques required		

KIT CONTENTS

1826272

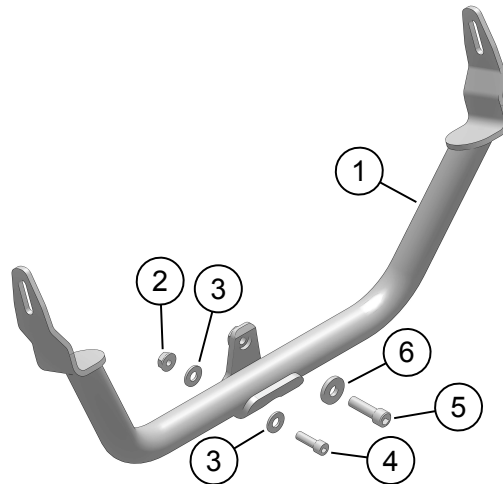


Figure 1. Kit Contents: Fairing Support Kit

Table 2. Kit Contents: Fairing Support Kit

Verify that all contents are present in the kit before installing or removing items from vehicle.					
☒	Item	Qty	Description	Part No.	Notes
☐	1	1	Fairing support	47200354	
☐	2	1	Flange locknut	7716	
☐	3	2	Washer, plain	6703	
☐	4	1	Screw, socket head	4069A	
☐	5	1	Screw, socket head	2708A	
☐	6	1	Washer	6116	

GENERAL

Models

For model fitment information, see the Parts and Accessories (P&A) Retail Catalog or the Parts and Accessories section of www.harley-davidson.com.

Verify that the most current version of the instruction sheet is used. It is available at: h-d.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for the year and model motorcycle is required for this installation and is available from:

- A Harley-Davidson dealer.
- H-D Service Information Portal, a subscription-based access available for most 2001 and newer models. For more information see *Frequently ask questions about subscriptions*.

REMOVE

1. Remove outer fairing. See service manual.
2. See Figure 2. Remove two screws (1) and mounting clamp (2) from fairing support (5).
3. Remove and retain screw (3) and washer (4) from stock fairing support.
 - a. Remove stock fairing support.
4. Repeat procedure on opposite side.
5. Remove two screws that attach the bottom of the stock engine guard to vehicle frame.
6. Remove and discard the hex socket screw and washer holding the top of the guard.
 - a. Remove engine guard from frame, taking care not to scratch the finish or paint on the vehicle.

INSTALL

1. See Figure 3. Hold fairing support assembly in position.
2. See Figure 3. Loosely install mid fairing support mount screws (2, 8), flat washers (3, 7) and nut (9) from kit.
3. Install side brackets to vehicle with two screws (5) and washers (6) that were removed earlier.
4. Tighten upper mid fairing mount screw (8).
Torque: 21.6–24.4 N·m (16–18 ft-lbs) *Mounting screw*
5. Tighten lower mid fairing mount screw (2).
Torque: 5.4–6.7 N·m (48–59 **in-lbs**) *Mounting screw*
6. Tighten two side mount screws (5).
Torque: 10.8–12.2 N·m (96–108 **in-lbs**) *Mounting screw*

7. Install outer fairing. See service manual.

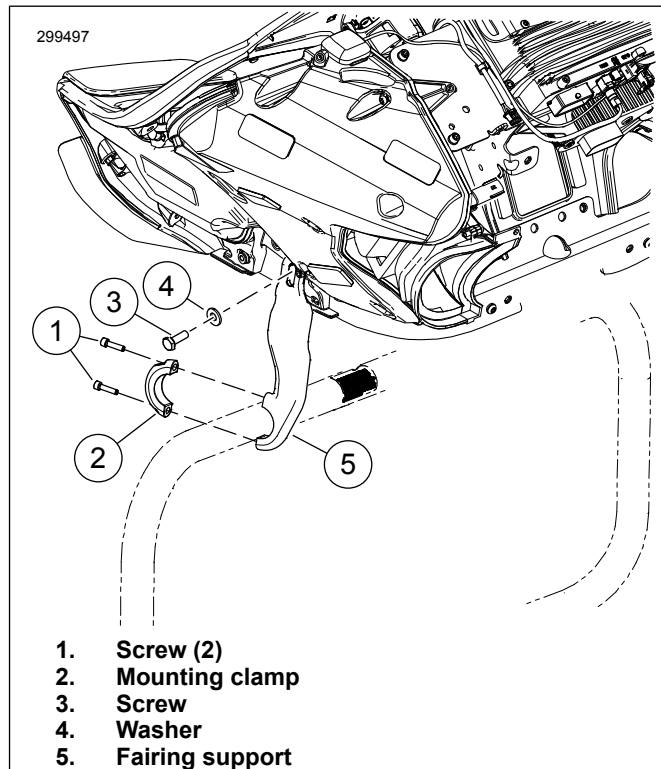


Figure 2. Remove Engine Guard

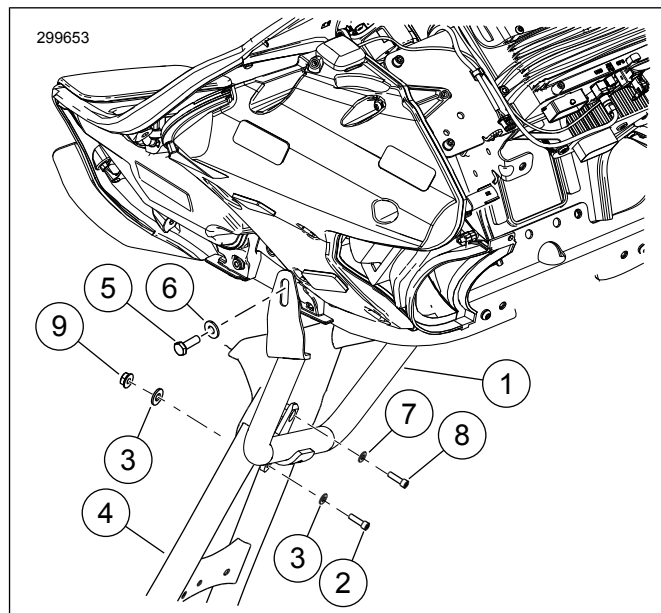


Figure 3.