



# INSTRUCTIONS

J06373

2017-08-28



## HOLDFAST DETACHABLE LUGGAGE RACK, 2-UP SEAT

### GENERAL

#### Kit Numbers

50300132, 50300133, 50300134, 50300135, 50300136, 50300137, 50300140

#### Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Installation Requirements

##### ▲ WARNING

**Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)**

##### NOTE

**Load Rating:** 10 lb. load rating. Do not exceed.

#### Kit Contents

Refer to Figure 3 and Table 1.

### INSTALLATION

- See Figure 3. Position the right (4) and left (3) latch levers in the unlocked position as shown in Figure 1, upper view (Item 1).
  - Pull both detent levers (3) rearward against the compression spring (8, not visible).
  - Rotate the levers upward so each latch nose (4) is positioned inside the lower rear notch (9) of the side plate (6).
  - Each detent pin (7) is now located in the uppermost (unlocked) position notch.
  - The compression spring (8) inside the detent lever holds the latch (5) in the unlocked position.
- Push the luggage rack front notches (10), with grommets (11) in place, firmly and evenly into the **front** docking points (12).
- See Figure 1, lower view. Swing the rear of the luggage rack side plates (6) downward toward the **rear** docking points (13).
  - As the side plates (6) move down, the latches make contact with the plastic surface of the rear docking points.
- As the docking points contact the latches, each latch nose (4) is forced upward.
  - This causes the pin (7) to move down into the lowermost (2-locked) position on the side plate.
  - The springs (8) lock each latch firmly in place around the rear docking points.
  - You should hear an audible click as the latches engage the docking points.
- Make sure that detent pins (7) are fully seated against the side plates (6).
  - If not fully seated, push detent lever (3) forward.
  - If still not fully seated, docking point may need to be rotated. See Docking Hardware Kit instructions.



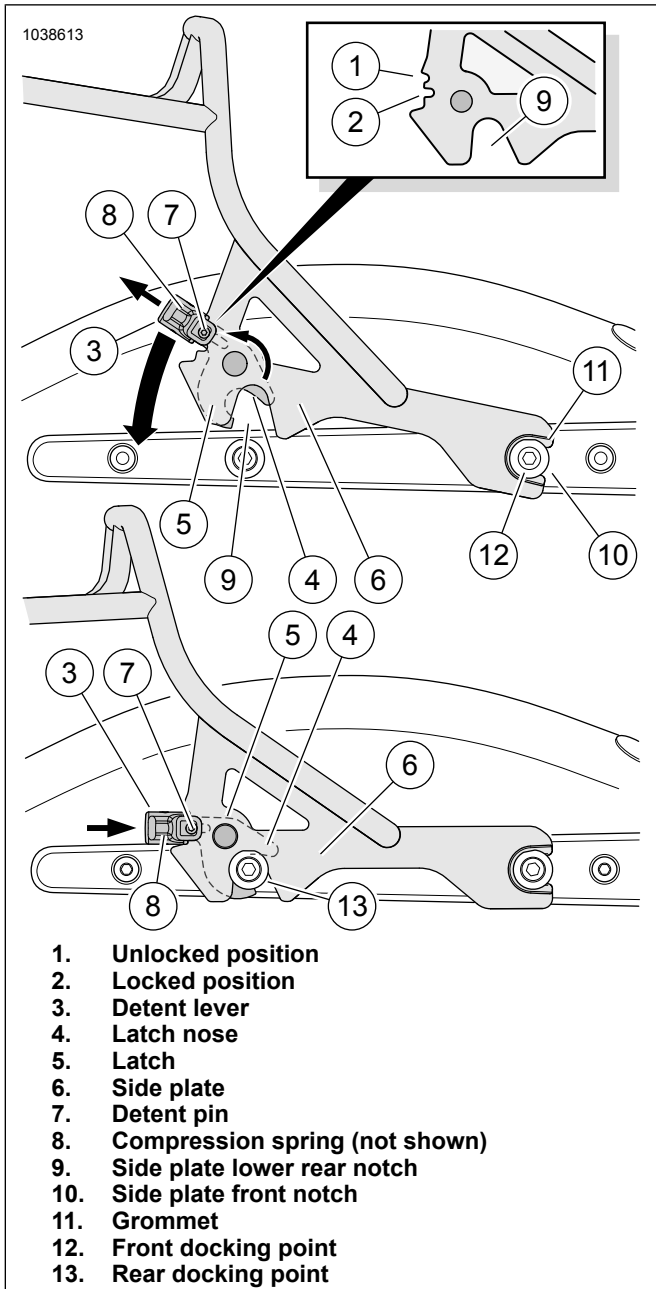


Figure 1. Detachable Luggage Rack Installation

## REMOVAL

1. See Figure 2. Pull both detent levers (3) rearward from the locked position (2), against the compression spring (8).
2. Rotate the detent levers upward while pulling on the levers.
  - a. As the levers rotate upward, the latch noses (4) are forced against the rear docking points (Figure 1, Item 13).

- b. This raises the rear of the backrest side plates (6) out of the docking points.
3. Release the detent levers. The springs (8) will move each lever back into the unlocked position (1).
4. Pull the backrest side plates away from the front docking points.
5. Remove the backrest from the vehicle.

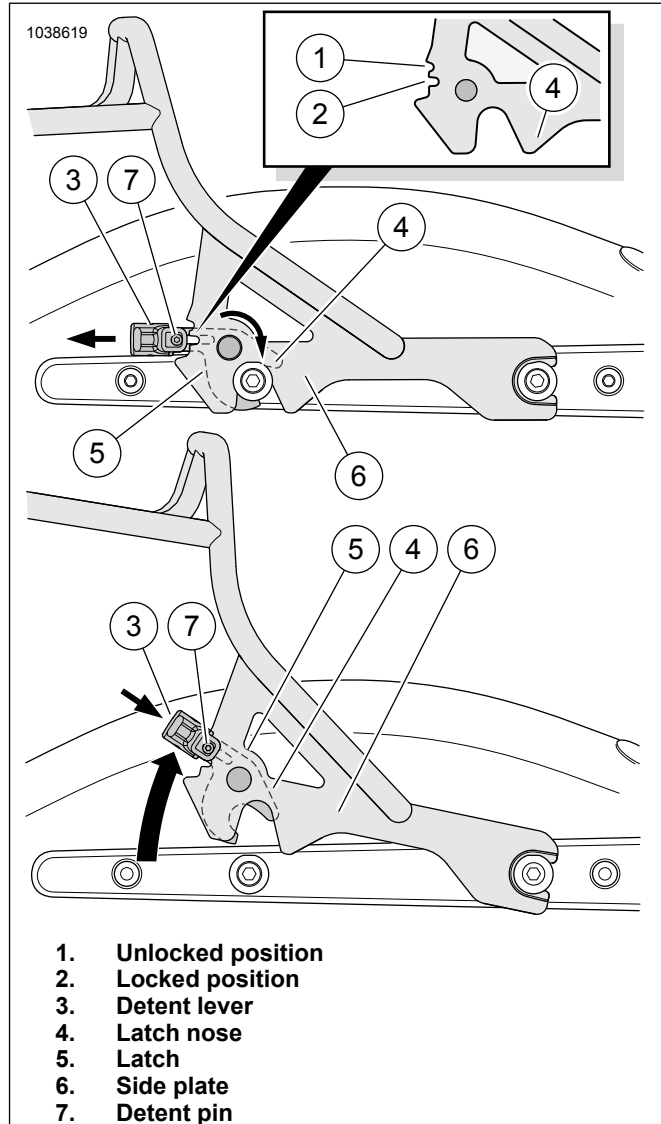


Figure 2. Detachable Luggage Rack Removal

## MAINTENANCE

In time docking points wear, causing the rack to become loose and rattle. Tighten using maintenance procedure found in Docking Hardware Kit J06371.

## Service Parts

1038626

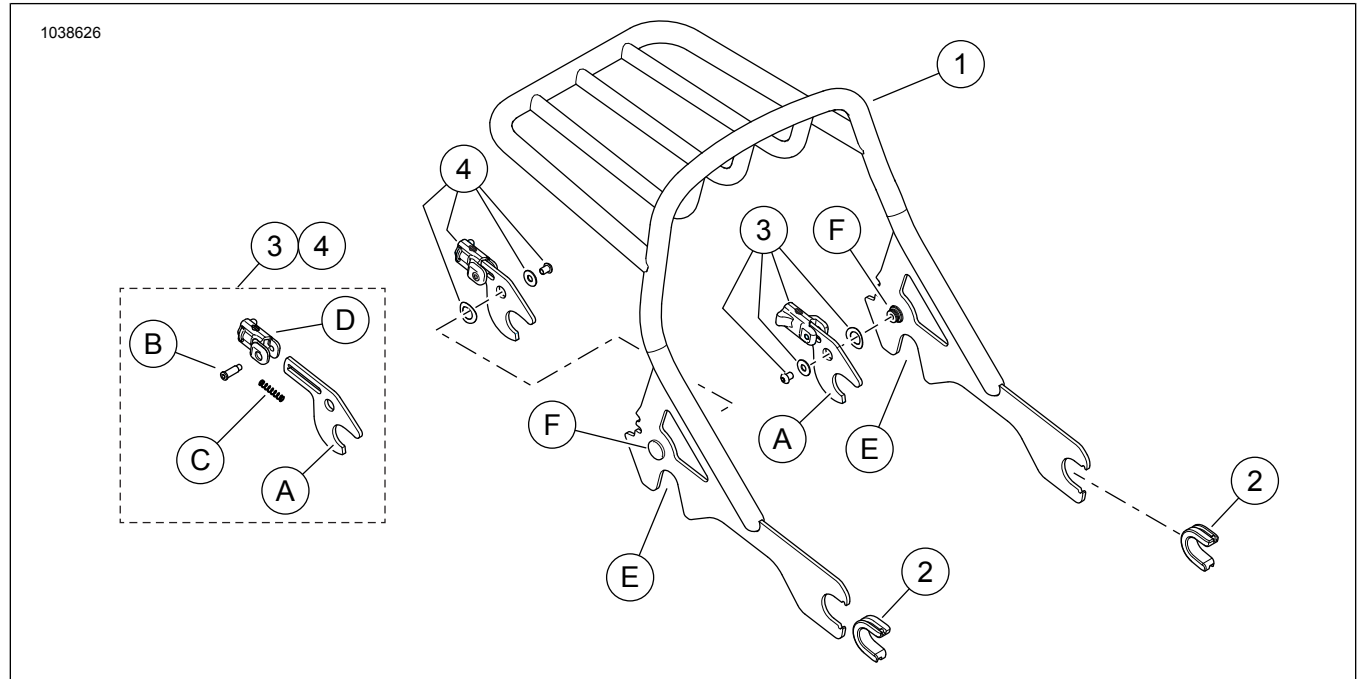


Figure 3. Service Parts, Detachable Luggage Rack Kits

Table 1.

Item	Description (Quantity)	Part Number
1	Luggage rack	Not sold separately
2	Grommet, side plate mounting bracket (2)	52300474
3	Docking System Latch Lever Kit- <b>left</b> (black)	52300496
	Docking System Latch Lever Kit- <b>left</b> (chrome)	52300495
4	Docking System Latch Lever Kit- <b>right</b> (black)	52300494
	Docking System Latch Lever Kit- <b>right</b> (chrome)	52300493
<b>Items mentioned in text.</b>		
A	Latch	
B	Detent pin	
C	Compression spring	
D	Detent lever	
E	Lower rear side plate notch	
F	Pivot plug, threaded	