

# TRIKE MODELS

2021 HARLEY-DAVIDSON® OWNER'S MANUAL



Harley-Davidson Motor Company  
Service Communications  
Milwaukee WI 53208 USA

2025-03-16



94000827

English

Printed in the USA

2021 HARLEY-DAVIDSON® OWNER'S MANUAL  
TRIKE MODELS - 94000827



94000827



# TRIKE MODELS

2021 HARLEY-DAVIDSON® OWNER'S MANUAL







# TABLE OF CONTENTS

## INTRODUCTION

Safety Definitions.....	1
Your Owner's Manual.....	1
We Care About You.....	1
United States Owners.....	2
Customer Service Assistance.....	2

## SAFETY FIRST

Safety Definitions.....	5
Safe Operating Rules.....	5
Harley-Davidson Motorcycles Are for On-Road Use Only.....	5
General.....	6
Operation.....	6
Steering and Handling.....	7
Accessories and Cargo.....	8
Tires.....	9
Towing and Trailering.....	10
Fuel and Exhaust.....	10
Brakes.....	11
Battery.....	12
Hazardous Materials.....	13
Maintenance.....	13
Parts and Accessories.....	13
Anti-Lock Brake System (ABS).....	14

Rules of the Road.....	15
Noise Control System.....	15
Tampering.....	15
Safety Symbol Definitions.....	15
Labels.....	20

## YOUR MOTORCYCLE

Vehicle Identification Number (VIN).....	25
General.....	25
Location.....	25
Abbreviated VIN.....	25
Models and Features.....	28
Primary Controls and Service Components.....	28

## SPECIFICATIONS

Specifications.....	33
Tires.....	33
Weights and Dimensions.....	35
Capacities.....	36
Engine and Transmission.....	37
Electrical.....	37

## BEFORE RIDING

Removing Motorcycle from Storage.....	39
Pre-Ride Checklist.....	39
Break-in Riding Rules.....	40

# TABLE OF CONTENTS

The First 500 Miles (800 Kilometers).....	40	Components.....	61
Filling the Fuel Tank.....	41	Options.....	61
Without Fairing.....	42	Security System Fob.....	61
With Fairing.....	42	Assigning Fob.....	61
Fuel Filler Cap Operation.....	42	Fob Battery.....	62
Fuel System Information.....	44	Riding with a Fob.....	63
Gasoline.....	44	Riding without a Fob.....	63
Catalytic Converter.....	47	Personal Identification Number (PIN).....	63
Reflex Linked Anti-Lock Brake System (ABS).....	47	Changing the PIN.....	64
Identification.....	47	Security Status Indicator.....	66
Checking Tire Pressure and Inspecting Tires.....	48	Arming and Disarming.....	66
General Information.....	48	Arming.....	66
Tire Pressure.....	48	Disarming.....	66
Inspecting Tires.....	51	Disarming with a PIN.....	67
Replacing Tires.....	54	Alarm.....	69
Adjusting Mirrors.....	55	Ignition Disabled.....	69
Adjusting Shock Absorbers.....	56	Warnings.....	69
Calculate Preload Setting.....	56	Alarm Activation.....	69
Adjustment.....	58	Deactivate Alarm.....	70
Parking Brake.....	59	Siren Chirp Mode (Confirmation).....	70
Applying Parking Brake.....	59	Chirp Mode.....	70
Releasing Parking Brake.....	59	Chirpless Mode.....	70
<b>SECURITY SYSTEM</b>		Switching Modes.....	70
Security System.....	61	Transport Mode.....	70
		To Enter Transport Mode.....	71

# TABLE OF CONTENTS

To Exit Transport Mode.....	71	Instruments.....	81
Storage and Service Departments.....	71	Speedometer.....	81
Long-Term Parking.....	71	Tachometer.....	82
Service Departments.....	71	Fuel Gauge.....	82
Disconnecting Power.....	72	Voltmeter.....	82
All Models.....	72	Vehicle Information: With fairing.....	82
Troubleshooting.....	72	Indicators.....	85
Security Lamp.....	72	Check Engine Lamp.....	85
Fob.....	72	Low Fuel Lamp.....	85
Siren (If equipped).....	73	Battery Discharge Lamp.....	85
<b>OPERATION</b>		Security/Fault indicator Lamp.....	86
Ignition Switch.....	75	Turn Signal Indicator Lamps.....	86
Fork Lock.....	78	Headlamp High Beam Lamp.....	86
To Lock Fork: Without fairing.....	78	Neutral Lamp.....	86
To Lock Fork: With fairing.....	78	Cruise Control Lamp.....	86
General: Controls and Indicators.....	79	Auxiliary/Fog Lamp Indicator Lamp: Tri Glide Ultra (FLHTCUTG) DOMESTIC.....	86
Controls, Instruments and Switches.....	79	Gear Indicator: Tri Glide Ultra (FLHTCUTG).....	86
Clutch Hand Lever.....	79	ABS Lamp.....	87
Gear Shift Lever.....	80	Reverse Lamp.....	87
Left-Hand Control Module.....	80	Parking Brake Lamp.....	87
Speedometer/Odometer.....	81	Engine Coolant Temperature Lamp: Tri Glide Ultra (FLHTCUTG).....	87
Right-Hand Control Module.....	81	Oil Pressure Lamp.....	88
Brakes.....	81	Traction Control Lamp.....	88
Throttle Twist Grip.....	81	Left Hand Control Switches.....	89
OFF/RUN Switch.....	81		

# TABLE OF CONTENTS

Trigger Switch.....	89	Cruise Control.....	101
High Beam.....	89	Turn Cruise On.....	101
Low Beam/Flash to Pass.....	89	Set Cruise Speed.....	101
Voice Recognition Switch.....	89	Increase/Decrease Cruise.....	102
Cruise Control Switch.....	89	Disengage Cruise.....	102
HOME/VOLUME/PREVIOUS/NEXT Switch.....	90	Resume Cruise.....	102
Left Turn Signal.....	90	Turn Cruise Off.....	102
Horn.....	90	Electronic Throttle Control (ETC).....	103
Traction Control Switch.....	90	ETC Limited Performance Mode.....	104
Right Hand Control Switches.....	92	ETC Power Management Mode.....	104
Hazard Warning 4-Way Flasher.....	92	ETC Forced Idle Mode.....	104
OFF.....	93	ETC Forced Shut Down Mode.....	104
RUN.....	93	Accessory Switch.....	104
Right Turn Signal.....	93	Auxiliary/Fog Lamps.....	105
CURSOR/SELECT Switch.....	94	Boom! Box Infotainment System.....	106
Back switch.....	94	Headset Connection.....	109
Start/Reverse.....	94	Passenger Controls.....	110
Odometer Window Displays.....	96	Mode Switch.....	110
Odometer.....	96	Push-To-Talk (PTT)/Volume (VOL) Switch.....	110
Trip Odometers.....	96	Radio Antenna.....	111
Fuel Range.....	96	Media Compartment.....	111
Digital Tachometer: Freewheeler (FLRT).....	97	Power Port.....	113
Time: Freewheeler (FLRT).....	97	Starting the Engine.....	114
Tip Indicator.....	98	General.....	114
No Fob Message.....	98	Starting Engine In Neutral.....	114



# TABLE OF CONTENTS

Starting Engine In Gear.....	115	FAIRING LOWERS.....	131
Starting after Tipover.....	115	Vent Door.....	131
Engine Idle Temperature Management System (EITMS).....	116	Cooling System: Twin-Cooled Vehicles.....	131
Operation.....	116	TOUR-PAK.....	132
Enabling / Disabling EITMS.....	117	Operation.....	132
Stopping the Engine.....	118	Removal/Installation.....	133
REFLEX-Linked Brakes with Cornering-Enhanced ABS.....	118	Luggage.....	134
Front Brake Lever.....	118	Trunk.....	134
Rear Brake Pedal.....	118		
Reflex Linked Anti-lock Brake System (ABS).....	119	<b>AFTER RIDING</b>	
How ABS Works.....	120	Genuine Motor Parts and Accessories.....	137
How To Use ABS.....	120	Online Catalog.....	137
ABS: Tires and Wheels.....	120	Shop for Your Bike.....	137
Traction Control.....	122	Cleaning and General Care.....	137
Traction Control System.....	122	Cleaning Wheels and Tires.....	138
How Traction Control Works.....	122	Radiator.....	138
How To Use Traction Control.....	122	Recommended Cleaning Products.....	138
Shifting Gears.....	123	Washing the Motorcycle.....	142
Shifting while Stopped, Engine Off.....	123	Preparation.....	142
Starting from a Stop.....	124	Cleaning Wheels and Tires.....	143
Upshift (Acceleration).....	124	Washing the Motorcycle.....	143
Downshift (Deceleration).....	125	Drying the Motorcycle.....	143
Reverse Operation.....	126	Polishing and Sealing.....	144
Passenger Footboards/Footrests.....	128	Windshield Care.....	144
Fairing Vents.....	129	Leather and Vinyl Care.....	145
Adjustable Air Deflectors.....	130	Denim Finish.....	145

## TABLE OF CONTENTS

Cleaning Denim Finish.....	146	OIL COOLER.....	161
Audio System Care.....	146	Check Transmission Lubricant.....	161
Screen.....	146	Change Transmission Lubricant.....	162
Cleaning the Radio.....	146	Change Primary Chaincase Lubricant.....	163
Speaker Care.....	147	Check Drive Belt Deflection.....	167
Fairing Splitstream Vent Care.....	147	Miscellaneous Lubrication.....	170
Exhaust Care.....	147	BRAKES.....	170
Wheel Care.....	147	Brake Fluid.....	171
Storing Motorcycle.....	148	Brake Pads.....	173
Rear Axle Tie Down Loops.....	149	Parking Brake.....	175
		Inspection.....	175
		Adjustment.....	176
<b>MAINTENANCE AND LUBRICATION</b>		Mechanical Clutch.....	177
Safe Operating Maintenance.....	151	Hydraulic Lifters.....	177
Break-in Maintenance.....	151	Cooling System.....	178
Preparing the Motorcycle for Maintenance.....	152	Checking Coolant Level.....	178
Setting Motorcycle Upright.....	152	Clean Radiators.....	180
Jacking Points.....	152	Checking Coolant Freeze Point.....	180
Disposal and Recycling.....	154	Checking for Exhaust Leaks.....	181
Engine Lubrication.....	154	Maintaining Front Fork.....	181
Engine Lubrication.....	154	Adjusting Steering Head Bearings.....	181
Low Temperature Lubrication.....	155	Steering Damper.....	181
Check Engine Oil Level.....	156	Vehicle Alignment.....	182
Oil Level Cold Check.....	156	Shock Absorbers.....	182
Oil Level Hot Check.....	156	Inspecting Air Filter.....	182
Change Oil and Oil Filter.....	158		

# TABLE OF CONTENTS

Removal.....	182
Installation.....	183
Replacing Spark Plugs.....	184

## SERVICE PROCEDURES

Side Covers.....	187
Battery Tender Connector.....	187
Battery Maintenance.....	189
Battery Safety.....	189
Absorbed Glass Mat (AGM) Battery Charging Information.....	189
Cleaning and Inspecting.....	190
Charging and Storing the Battery.....	190
Battery Replacement.....	192
Disconnection and Removal.....	192
Installation and Connection.....	193
Fuses.....	195
Main Fuse.....	195
System Fuses.....	195
Reverse Motor Circuit Breaker.....	198
Headlamp Alignment.....	199
Check Alignment.....	199
Adjust Alignment.....	200
Headlamp Alignment: Dual LED.....	201
Check Alignment.....	201
Adjust Headlamp Alignment.....	202

Headlamp Replacement.....	203
WITHOUT FAIRING.....	204
WITH FAIRING.....	206
Headlamp Replacement: Dual LED.....	206
Removal.....	206
Installation.....	206
Adjust Auxiliary/Fog Lamps.....	207
Tail Lamp Bulb Replacement: Incandescent.....	208
Removal.....	208
Installation.....	209
Tail Lamp Bulb Replacement: LED.....	209
Turn Signal Bulb Replacement: Incandescent.....	210
Replacing Turn Signal Bulb.....	210
Turn Signal Bulb Replacement: LED.....	210
Seat.....	211
Removal: Without Tour-Pak.....	211
Installation: Without Tour-Pak.....	211
Removal: With Tour-Pak.....	211
Installation: With Tour-Pak.....	211

## TROUBLESHOOTING

Troubleshooting: General.....	213
Engine.....	213
Starter Does Not Operate or Does Not Turn Engine Over.....	213
Engine Turns Over but Does Not Start.....	213

## TABLE OF CONTENTS

Starts Hard.....	213
Starts but Runs Irregularly or Misses.....	214
A Spark Plug Fouls Repeatedly.....	214
Pre-ignition or Detonation (Knocks or Pings).....	214
Overheats.....	214
Excessive Vibration.....	214
Engine Oil Not Circulating (Oil Pressure Lamp Lit).....	214
Transmission.....	215
Transmission Shifts Hard.....	215
Transmission Jumps Out of Gear.....	215
Clutch Slips.....	215
Clutch Drags or Does Not Release.....	215
Clutch Chatters.....	215
Cooling System.....	215
Overheats.....	215
Electrical System.....	215
Alternator Does Not Charge.....	215
Alternator Charge Rate is Below Normal.....	215
Brakes.....	216
ABS System Behavior.....	216
Brakes Do Not Hold Normally.....	216
Reverse Motor.....	216
Reverse Motor Does Not Operate/Cannot Enable.....	216
Handling.....	216
Irregularities.....	216

## WARRANTIES AND RESPONSIBILITIES

Warranty and Maintenance.....	219
Keeping It All Harley-Davidson.....	219
California and Select International Markets Evaporative Emission Controls.....	220
EPA Noise Regulations in the United States.....	220
EPA Regulations.....	220
Warranty/Service Information.....	221
Reporting Safety Defects in the United States.....	221
NHTSA Statement.....	221
Required Documentation for Imported Motorcycles.....	222
Owner Contact Information.....	222
Questions and Concerns.....	222

## LIMITED MOTORCYCLE WARRANTY

2021 HARLEY-DAVIDSON LIMITED MOTORCYCLE WARRANTY.....	225
24 Months/Unlimited Miles.....	225
Duration.....	226
Owner's Obligations.....	226
Exclusions.....	226
Other Limitations.....	227
Important: Read Carefully.....	228
Environmental Factors.....	229

# TABLE OF CONTENTS

## WARRANTY STATEMENT (KOREA)

Warranty Statement (Korea).....	231
---------------------------------	-----

## LIMITED MOTORCYCLE WARRANTY (AUSTRALIA)

2021 AUSTRALIA/NEW ZEALAND HARLEY-DAVIDSON MOTORCYCLE LIMITED WARRANTY.....	235
24 Months/Unlimited Miles.....	235
Your Consumer Rights.....	235
Warranty.....	235
Warranty Period.....	236
Obtaining Warranty Service.....	236
Exclusions.....	236
Other Limitations.....	237
Important: Read Carefully.....	238
Environmental Factors.....	239

## LIMITED MOTORCYCLE WARRANTY (JAPAN)

Harley-Davidson Japan Motorcycle Manufacturer's Limited Warranty.....	241
Regarding the manufacturer's warranty.....	241
Warranty Card.....	241
Warranty and Maintenance .....	241
Regarding the warranty and the owner registration ...	242

Do not neglect the inspections and maintenance.....	242
Regarding the first inspection .....	243
Always keep your Harley genuine.....	243
Regarding address or name changes .....	244
Harley-Davidson Motorcycle Warranty Provisions .....	244
Warranty provisions for genuine parts & accessories installed in a new Harley-Davidson vehicle .....	247
Notes.....	250

## LIMITED NOISE WARRANTY

2021 HARLEY-DAVIDSON MOTORCYCLE NOISE CONTROL SYSTEM LIMITED WARRANTY.....	251
Other Rights.....	252
Recommendations for Required Maintenance.....	252

## LIMITED EMISSION WARRANTY


2021 HARLEY-DAVIDSON EMISSION CONTROL SYSTEM LIMITED WARRANTY.....	253
USA Owners 49 State Limited Emissions Warranty....	253
Items Covered by this Emission Warranty.....	254
Other Rights.....	255
Recommendations for Required Maintenance.....	255

## CALIFORNIA EMISSIONS CONTROL WARRANTY

California Emissions Control Warranty Statement.....	257
--	-----

## TABLE OF CONTENTS

USA Owners California Limited Emissions Warranty.....	257	Warranty Period.....	263
Your Warranty Rights and Obligations.....	257	Exclusions.....	264
Manufacturer's Warranty Coverage.....	257	Obtaining Warranty Service.....	264
Owner's Warranty Responsibilities.....	257		
Additional Warranty Terms.....	258	<b>SERVICE INTERVALS AND RECORDS</b>	
What Is Covered by this Emission Warranty.....	259	Service Records.....	265
What Is Not Covered by this Emission Warranty.....	259	Regular Service Intervals.....	265
		Service Intervals.....	265
<b>LIMITED RADIO WARRANTY</b>		Service Actions.....	268
2021 LIMITED RADIO WARRANTY.....	261	Maintenance Records.....	269
Other Rights.....	262		
<b>LIMITED RADIO WARRANTY (AUSTRALIA)</b>		<b>APPENDIX</b>	
2021 AUSTRALIA/NEW ZEALAND LIMITED RADIO		Acronyms and Abbreviations.....	271
WARRANTY.....	263	H-D U.S.A., LLC Trademark Information.....	273
Your Consumer Rights.....	263	Product Registered Marks.....	273
Warranty.....	263	Patents.....	273
		Copyright.....	273

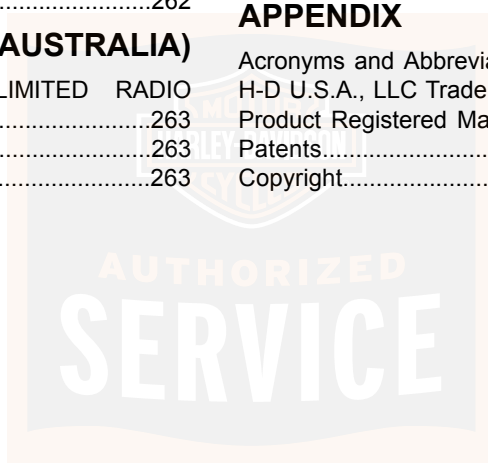

## SAFETY DEFINITIONS

Statements in this manual preceded by the following words are of special significance:

### ▲ WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

### ▲ CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

### NOTICE

**NOTICE** indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140b)

### NOTE

A *NOTE* refers to important information and is placed in italic type. It is recommended that you take special notice of these items.

**HARLEY-DAVIDSON MOTORCYCLES ARE FOR ON-ROAD USE ONLY**

This motorcycle is not equipped with a spark arrester and is designed to be used only on the road. Operation of off-road usage in some areas may be illegal. Obey local laws and regulations. This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when resold.

VISIT THE HARLEY-DAVIDSON WEB SITE

<http://www.harley-davidson.com>

## YOUR OWNER'S MANUAL

### We Care About You

Welcome to the Harley-Davidson Motorcycling Family! When enjoying your Harley-Davidson motorcycle, be sure to ride safely, respectfully and within the limits of the law and your abilities. Always wear a helmet, proper eyewear and protective clothing, and insist your passenger does too. Never ride while under the influence of alcohol or drugs. Know your Harley and read and understand your owner's manual from cover to cover.

This manual has been prepared to acquaint you with the operation, care and maintenance of your motorcycle and to provide you with important safety information. Follow these instructions carefully for maximum motorcycle performance and for your personal motorcycling safety and pleasure. Your Owner's Manual contains instructions for operation and minor

maintenance. Major repairs are covered in the Harley-Davidson Service Manual. Such major repairs require the attention of a skilled technician and the use of special tools and equipment. Your Harley-Davidson dealer has the facilities, experience and Genuine Harley-Davidson parts necessary to properly render this valuable service. We recommend that any emission system maintenance be performed by an authorized Harley-Davidson dealer.

Attend a rider safety course. To enroll in a Harley-Davidson Riding Academy course, call 1-414-343-4056 (U.S.) or visit [www.harley-davidson.com/learntoride](http://www.harley-davidson.com/learntoride). In the United States, for information about Motorcycle Safety Foundation rider courses, call 1-800-446-9227 or visit [www.msf-usa.org](http://www.msf-usa.org).

## United States Owners

Your Harley-Davidson motorcycle conforms to all applicable U.S. Federal Motor Vehicle Safety Standards and U.S. Environmental Protection Agency regulations effective on the date of manufacture. Protect your privilege to ride by joining the American Motorcyclist Association. Visit [www.americanmotorcyclist.com](http://www.americanmotorcyclist.com) for more information.

Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

## CUSTOMER SERVICE ASSISTANCE

Most sales or service issues are resolved at the dealership.

1. Discuss your problem with the appropriate personnel at the dealership in the Sales, Service or Parts area. If that proves unsuccessful, speak to the owner of the dealership or the general manager.
2. If you cannot resolve the issue with the dealership, contact the Harley-Davidson Customer Support Center. Harley-Davidson Motor Company Attention: Harley-Davidson Customer Support Center P.O. Box 653 Milwaukee, Wisconsin 53201 1-800-258-2464 (U.S. only) 1-414-343-4056

For customers outside the US, contact your local Harley-Davidson market office, call 1-414-343-4056 or visit [harley-davidson.com](http://harley-davidson.com).



**Table 2. Vehicle and Personal Data**

PERSONAL INFORMATION	DEALER INFORMATION
Date of Purchase:	
Name:	Name:
Address:	Address:
Address:	Address:
Vehicle Identification Number:	Sales Contact:
Key Number:	Service Contact:



## NOTES

---



## SAFETY DEFINITIONS

Statements in this manual preceded by the following words are of special significance:

### ⚠ WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury. (00119a)

### ⚠ CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. (00139a)

### NOTICE

**NOTICE** indicates a potentially hazardous situation which, if not avoided, may result in property damage. (00140b)

### NOTE

*Refers to important information and is placed in italic type. It is recommended that you take special notice of these items.*

## SAFE OPERATING RULES

### ⚠ WARNING

Three-wheeled motorcycles are different from two-wheeled motorcycles and other vehicles. They operate, steer, handle and brake differently. Unskilled or improper use could result in loss of control, death or serious injury.

- Take a rider training course.
- Read owner's manual before riding, adding accessories or servicing.
- Wear a helmet, eye protection and protective clothing.
- Never tow a trailer.

(00587e)

### Harley-Davidson Motorcycles Are for On-Road Use Only

This motorcycle is not equipped with a spark arrester. This motorcycle is designed to be used only on the road. Operation or off-road usage in some areas may be illegal. Obey local laws and regulations.

## General

### ⚠ WARNING

**Consult a Harley-Davidson dealer regarding any questions or problems that occur in the operation of your motorcycle. Failure to do so can aggravate an initial problem, cause costly repairs, cause an accident and could result in death or serious injury. (00020a)**

#### NOTE

*Harley-Davidson recommends that you obtain information and formal training in the correct motorcycle riding technique. In the United States, the Motorcycle Safety Foundation® offers beginning, advanced and 3-wheel basic rider safety courses. Call 800-446-9227 for information.*

- Steering and handling characteristics for a three wheeled motorcycle are different than a two wheeled motorcycle. Approach corners and sharp turns using the appropriate speed and steering technique to handle the turn and prevent rollover.
- The rear of the vehicle is wider than a typical motorcycle. Check for proper clearance when maneuvering, cornering, parking and operating the vehicle in reverse.
- Make sure all equipment required by federal, state and local law is installed and in good operating condition.

- Know and respect the rules of the road. Read the safety information that is provided by your state or regional traffic authority.
- In the United States, read the RIDING TIPS booklet that is provided with this owner's manual. Read the MOTORCYCLE HANDBOOK which is made available by your state or regional traffic authority.
- Protect your motorcycle against theft. Lock the front fork. Remove the key when parking your motorcycle.

## Operation

Before operating your new motorcycle, it is your responsibility to read and follow the operating and maintenance instructions in this manual and follow these rules for your personal safety.

- Before starting the engine, review the BEFORE RIDING > PRE-RIDE CHECKLIST (Page 39).

### ⚠ WARNING

**Striking an object, such as a curb or pothole can cause internal tire damage. If an object is struck, have the tire inspected immediately inside and out by a Harley-Davidson dealer. A damaged tire can fail while riding and adversely affect stability and handling, which could result in death or serious injury. (00058b)**

### **⚠ WARNING**

**Travel at speeds appropriate for road and conditions and never travel faster than posted speed limit. Excessive speed can cause loss of vehicle control, which could result in death or serious injury. (00008a)**

- Do not exceed the legal speed limit or drive too fast for existing conditions. Always reduce speed when poor driving conditions exist. High speed increases the influence of any other condition affecting stability and increases the possibility of loss of control.
- Pay strict attention to road surfaces and wind conditions and keep both hands on the handlebar grips at all times when riding the motorcycle. The vehicle may be subject to upsetting forces such as wind blasts from passing trucks, holes in the pavement, rough road surfaces, rider control error, etc. These forces may influence the handling characteristics of your motorcycle. If this happens, reduce speed and guide the motorcycle with a relaxed grip to a controlled condition. Do not brake abruptly or force the handlebar. This may aggravate an unstable condition.
- New riders should gain experience under various conditions while riding at moderate speeds.
- Operate your motorcycle defensively. In an accident, a motorcycle does not afford the same protection as an automobile.

- It is the rider's responsibility to instruct passengers on proper riding procedures.
- Do not allow other individuals to operate the motorcycle unless they are experienced, licensed riders and are thoroughly familiar with the operation of the motorcycle.

### **⚠ WARNING**

**If Equipped: Front and/or rear guards are not intended to provide protection from bodily injury in a collision with another vehicle or any other object. (00022d)**

## **Steering and Handling**

### **⚠ WARNING**

**Do not operate vehicle with forks locked. Locking the forks restricts the vehicle's turning ability, which could result in death or serious injury. (00035a)**

### **⚠ WARNING**

**Regularly inspect shock absorbers and front forks. Replace leaking, damaged or worn parts that can adversely affect stability and handling, which could result in death or serious injury. (00012a)**

#### **⚠ WARNING**

Do not operate motorcycle with loose, worn or damaged steering or suspension systems. Contact a Harley-Davidson dealer for repairs. Loose, worn or damaged steering or suspension components can adversely affect stability and handling, which could result in death or serious injury. (00011a)

#### **⚠ WARNING**

Do not open storage compartments while riding. Distractions while riding can lead to loss of control, which could result in death or serious injury. (00082a)

#### **⚠ WARNING**

When riding on wet roads, brake efficiency and traction are greatly reduced. Failure to use care when braking, accelerating or turning on wet roads can cause loss of control, which could result in death or serious injury. (00041a)

## **Accessories and Cargo**

#### **⚠ WARNING**

Do not exceed the motorcycle's Gross Vehicle Weight Rating (GVWR) or Gross Axle Weight Rating (GAWR). Exceeding these weight ratings can lead to component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00016f)

- GVWR is the sum of the weight of the motorcycle, accessories and the maximum weight of the rider, passenger and cargo that can be safely carried.
- The GVWR is shown on the information label, located on the frame steering head or the frame downtube.
- GAWR is the maximum amount of weight that can be safely carried on each end of the motorcycle.
- For GVWR and GAWR, front and rear. See OWNER MANUAL > SPECIFICATIONS (Page 33).
- Keep cargo weight concentrated close to the motorcycle and as low as possible.
- Distribute weight evenly on both sides of the vehicle.
- Do not load bulky items too far behind the rider or add weight to the handlebars or front forks.

- Do not exceed maximum specified load in each saddlebag (if equipped).
- Luggage racks (if equipped) are designed for lightweight items. Do not overload racks.
- Make sure cargo is secure. Make sure the cargo will not shift while riding and check the cargo periodically. Accessories that change the operator's riding position may increase reaction time and affect handling of the motorcycle.
- Large surfaces such as fairings, windshields, backrests and luggage racks (if equipped) can adversely affect on stability and handling.

## Tires

### ⚠ WARNING

Harley-Davidson recommends the use of its specified tires. Harley-Davidson vehicles are not designed for operation with non-specified tires, including snow, moped and other special-use tires. Use of non-specified tires can adversely affect stability, handling or braking and lead to loss of vehicle control, which could result in death or serious injury. (00024d)

### ⚠ WARNING

Be sure tires are properly inflated, balanced, undamaged, and have adequate tread. Inspect your tires regularly and see a Harley-Davidson dealer for replacements. Riding with excessively worn, unbalanced, improperly inflated, overloaded or damaged tires can lead to tire failure and adversely affect stability and handling, which could result in death or serious injury. (00014b)

### ⚠ WARNING

Replace punctured or damaged tires. In some cases, small punctures in the tread area may be repaired from within the removed tire by a Harley-Davidson dealer. Speed should NOT exceed 80 km/h (50 mph) for the first 24 hours after repair, and the repaired tire should NEVER be used over 129 km/h (80 mph). Failure to follow this warning could lead to tire failure and result in death or serious injury. (00015b)

### ⚠ WARNING

Do not use liquid tire balancers or sealants in aluminum wheels. Using liquid tire balancers or sealants can cause rapid corrosion of the rim surface, which could cause tire deflation. Tire deflation can cause loss of vehicle control, which could result in death or serious injury. (00631b)

- Tire pressure will vary with changes in ambient and tire temperature. Always maintain proper tire pressure as specified in OWNER MANUAL > SPECIFICATIONS (Page 33). Do not load tires beyond the GAWR specified in OWNER MANUAL > SPECIFICATIONS (Page 33). Under-inflated, over-inflated or overloaded tires can fail.

## Towing and Trailing

### ⚠ WARNING

**Do not pull a trailer with a motorcycle. Pulling a trailer can cause tire overload, damage and failure, reduced braking performance, and adversely affect stability and handling, which could result in death or serious injury. (00018c)**

### ⚠ WARNING

**Do not tow a disabled motorcycle. Towing can adversely affect stability and handling, which could result in death or serious injury. (00017a)**

- Never tow a trailer.

## Fuel and Exhaust

### ⚠ WARNING

**Stop the engine when refueling or servicing the fuel system. Do not smoke or allow open flame or sparks near gasoline. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00002a)**

### ⚠ WARNING

**Avoid spills. Slowly open fuel filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028b)**

- Refuel in a well-ventilated area with the engine off.
- Remove the fuel filler cap slowly.
- Do not fill fuel tank above the bottom of the filler neck insert. Leave air space to allow for fuel expansion.
- If fuel tank was completely drained, add at least 1 gal (3.79 L) of gas.



#### **⚠ WARNING**

Avoid contact with exhaust system and wear protective clothing that completely covers legs while riding. Exhaust pipes and mufflers get very hot when engine is running and remain too hot to touch, even after engine is turned off. Failure to wear protective clothing could result in burns or other serious injury. (00009a)

#### **⚠ WARNING**

Do not run motorcycle in a closed garage or confined area. Inhaling motorcycle exhaust, which contains poisonous carbon monoxide gas, could result in death or serious injury. (00005a)

#### **⚠ WARNING**

Engine exhaust from this product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. (00004f)

## **Brakes**

#### **⚠ WARNING**

Brakes are a critical safety component. Contact a Harley-Davidson dealer for brake repair or replacement. Improperly serviced brakes can adversely affect brake performance, which could result in death or serious injury. (00054a)

#### **⚠ WARNING**

Apply front and rear brakes evenly. Favoring one brake accelerates wear and reduces braking efficiency. Operation with excessively worn brakes can lead to brake failure, which could result in death or serious injury. (00135a)

#### **⚠ WARNING**

DOT 4 brake fluid absorbs moisture from the atmosphere over time, changing the properties of the fluid. Check brake fluid moisture content at every service interval or annually (whichever comes first). Flush and replace the brake fluid every two years, or sooner if moisture content is 3% or greater. Failure to flush and replace fluid can adversely affect braking, which could result in death or serious injury. (06304b)

### **⚠ WARNING**

**Contact with DOT 4 brake fluid can have serious health effects. Failure to wear proper skin and eye protection could result in death or serious injury.**

- **If inhaled:** Keep calm, remove to fresh air, seek medical attention.
- **If on skin:** Remove contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. If irritation develops, seek medical attention.
- **If in eyes:** Wash affected eyes for at least 15 minutes under running water with eye lids held open. If irritation develops, seek medical attention.
- **If swallowed:** Rinse mouth and then drink plenty of water. Do not induce vomiting. Contact Poison Control. Immediate medical attention required.
- **See Safety Data Sheet (SDS) for more details available at [sds.harley-davidson.com](https://sds.harley-davidson.com)**

**(00240e)**

To ensure the brake system is performing to design, check the moisture content of the brake fluid at every service interval or at least annually using a DOT 4 brake fluid moisture tester (part number HD-48497-A or equivalent) following the instructions included with the tool. Flush DOT 4 fluid every 2

years or sooner if the brake system fluid test shows moisture content is 3% or greater.

Harley-Davidson recommends using Harley-Davidson Platinum Label DOT 4 Brake Fluid because of its superior moisture and corrosion inhibiting properties.

## **Battery**

### **⚠ WARNING**

**Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (00019e)**

### **⚠ WARNING**

**Batteries contain sulfuric acid, which could cause severe burns to eyes and skin. Wear a protective face shield, rubberized gloves and protective clothing when working with batteries. KEEP BATTERIES AWAY FROM CHILDREN. (00063a)**

#### NOTICE

It is possible to overload the vehicle's charging system by adding too many electrical accessories. If the combined electrical accessories operating at any one time consume more electrical current than the vehicle's charging system can produce, the electrical consumption can discharge the battery and cause damage to the vehicle's electrical system. (00211d)

## Hazardous Materials

#### ⚠ CAUTION

Prolonged or repeated contact with used motor oil may be harmful to skin and could cause skin cancer. Promptly wash affected areas with soap and water. (00358b)

## Maintenance

#### ⚠ WARNING

Perform the service and maintenance operations as indicated in the regular service interval table. Lack of regular maintenance at the recommended intervals can affect the safe operation of your motorcycle, which could result in death or serious injury. (00010a)

#### NOTICE

When lifting a motorcycle using a jack, be sure jack contacts both lower frame tubes where down tubes and lower frame tubes converge. Never lift by jacking on cross-members, oil pan, mounting brackets, components or housings. Failure to comply can cause serious damage resulting in the need to perform major repair work. (00586d)

- A new motorcycle must be operated according to the special break-in procedure. See BEFORE RIDING > BREAK-IN RIDING RULES (Page 40).
- Proper care and maintenance, including tire pressure, tire condition, tread depth and proper adjustment to steering head bearings are important to stability and safe operation of the motorcycle. See SPECIFICATIONS > SPECIFICATIONS (Page 33).

## Parts and Accessories

#### ⚠ WARNING

Harley-Davidson parts and accessories are designed for Harley-Davidson motorcycles. Using non-Harley-Davidson parts or accessories can adversely affect performance, stability or handling, which could result in death or serious injury. (00001b)

- Use only Harley-Davidson approved parts and accessories. Use of certain other manufacturer's performance parts will void your new motorcycle warranty. See your Harley-Davidson dealer for details.

#### **⚠ WARNING**

**Use Harley-Davidson replacement fasteners. Aftermarket fasteners can adversely affect performance, which could result in death or serious injury. (00013a)**

- See your Harley-Davidson service manual for proper torque values.
- Aftermarket fasteners may not have the specific property requirements to perform properly.

#### **⚠ WARNING**

**See ACCESSORIES AND CARGO section within the SAFETY FIRST section in your owner's manual. Improper cargo loading or accessory installation can cause component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00021c)**

- Harley-Davidson Motor Company cannot test and make specific recommendations concerning every accessory or combination of accessories sold. Therefore, the rider must be responsible for safe operation of the motorcycle when installing accessories or carrying additional weight.
- Additional electrical equipment may overload the electrical system possibly resulting in electrical system and/or component failure.

## **ANTI-LOCK BRAKE SYSTEM (ABS)**

#### **⚠ WARNING**

**If ABS lamp continues flashing at speeds greater than 5 km/h (3 mph) or remains on continuously, the ABS is not operating. The standard brake system is operational, but wheel lock up can occur. Contact a Harley-Davidson Dealer to have ABS repaired. A locked wheel will skid and can cause loss of vehicle control, which could result in death or serious injury. (00361b)**

To operate motorcycles equipped with an anti-lock brake system, see OPERATION > REFLEX-LINKED BRAKES WITH CORNERING-ENHANCED ABS (Page 118).

## **RULES OF THE ROAD**

- Always use your turn signals and exercise caution when passing other vehicles going in the same direction. Never pass going in the same direction at street intersections, on curves or when going up or down a hill.
- At street intersections, give the right-of-way. Do not presume you have the right-of-way, as the other driver may not know that it is your turn.
- Always signal when preparing to stop, turn or pass.
- Promptly obey all traffic signs, including those signs used for the control of traffic at intersections. Always obey traffic signs near schools and at railroad crossings.
- When intending to turn, signal at least 30.5 m (100 ft) before reaching the turning point. If turning across an intersection, move over to the centerline of the street (unless local rules require otherwise). Slow down when entering the intersection and turn carefully.
- Never anticipate a traffic light. When a change is indicated from GO to STOP (or STOP to GO), slow down and wait for the light to change. Never run through a yellow or red traffic light.
- While turning, watch for pedestrians, animals, as well as vehicles.

- Do not leave the curb or parking area without signaling. Make sure that your way is clear to enter moving traffic. A moving line of traffic always has the right-of-way.
- Make sure that your license plate is installed in the position specified by law. Make sure that your license plate is always clearly visible. Keep the license plate clean.
- Ride at a safe speed that is consistent with the type of highway you are on. Pay strict attention to whether the road is dry, oily, icy or wet.
- Watch for debris such as leaves or loose gravel.
- Weather and traffic conditions on the highway dictate adjusting your speed and driving habits accordingly.

## **NOISE CONTROL SYSTEM**

### **Tampering**

Removal or replacement of any noise control system component may be prohibited by law. This prohibition includes modifications made prior to vehicle sale or delivery to the ultimate purchaser. Use of a vehicle on which noise control system components have been removed or rendered inoperative may also be prohibited by law.

## **SAFETY SYMBOL DEFINITIONS**








These are some of the symbols that you may see on your motorcycle and may accompany safety words, see SAFETY

FIRST > SAFETY DEFINITIONS (Page 5). The symbols indicate potential safety hazards and avoidance actions to prevent a hazardous situation. The symbols may be present in manuals, instructions, on the motorcycle and/or Parts & Accessory product labels. Refer to SAFETY FIRST > SAFE OPERATING RULES (Page 5), the appropriate section in this manual and/or Parts & Accessory instructions for additional safety information.










- Yellow triangle: Safety symbol alerting to a hazard. Table 3
- Red circle with line: Prohibition symbol to avoid a situation which may lead to a hazard, personal injury and/or property damage. Table 4
- Blue circle: Mandatory action to avoid a hazard resulting in personal injury and/or property damage. Table 5



**Table 3. General Warning Symbols**









<b>SYMBOL</b>	<b>SYMBOL DEFINITION</b>	<b>SYMBOL</b>	<b>SYMBOL DEFINITION</b>
	General Warning indicating a hazard.		Explosive material hazard.
	Crash hazard.		Corrosive chemical burn hazard.
	Electric shock hazard.		Hot surface hazard.
	Battery charging hazard.		

**Table 4. General Prohibition Symbols**



SYMBOL	SYMBOL DEFINITION	SYMBOL	SYMBOL DEFINITION
	General prohibition sign to signify a prohibited action.		Do not expose to fire.
	Do not service without proper training or tools. Qualified technician only. Not user serviceable. No user replaceable parts. Refer service to qualified technician.		Do not perform action above indicated temperature.
	Do not touch.		Never tow a trailer.
	Keep away from open flame. Avoid smoking, flames, or sparks.		Do not use an extension cord.
	Do not add weight.		



**Table 5. General Mandatory Action Symbols**

<b>SYMBOL</b>	<b>SYMBOL DEFINITION</b>	<b>SYMBOL</b>	<b>SYMBOL DEFINITION</b>
	General mandatory action.		Wear proper protective riding gear.
	Refer to appropriate manual or instructions.		Wear proper hand protection.
	Take a rider training course.		Wear proper Personal Protective Equipment (PPE).
	Wear a helmet and eye protection.		Wear proper eye protection.

**Table 6. General Information Symbols**


<b>SYMBOL</b>	<b>SYMBOL DEFINITION</b>
	First responder cut loop. Emergency Personnel/First Responder use only.
	Protect from rain or wet conditions.

## **LABELS**

See Figure 1 for safety and maintenance labels which were on the vehicle when new. Refer to Table 7.

### **NOTE**

*Replacement labels can be purchased for your motorcycle. See a Harley-Davidson dealer. Some labels are available in different languages for destinations outside the United States.*

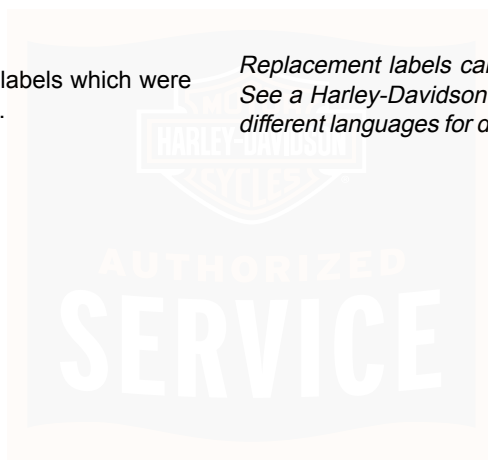

1

**WARNING**

- Take a rider training course.
- Read Owner's Manual before riding, adding accessories or servicing

Three wheeled motorcycles are different from two wheeled motorcycles and other vehicles. They operate, steer, handle and brake differently. Unskilled or improper use could result in loss of control, death or serious injury.

- Wear a helmet, eye protection and protective clothing.
- Never tow a trailer.

For a manual, find nearest dealer at 1-414-343-4058 or [www.harley-davidson.com](http://www.harley-davidson.com)

14000396

2

**WARNING**

A connected battery can cause a spark or motorcycle startup while servicing. Death or serious injury could occur.

- Disconnect negative cable before servicing.
- Keep cable away from terminal while servicing.

15368-01A

3

**WARNING**

Too much weight in Trunk can cause loss of control. Death or serious injury could occur.

- Do not put more than 50 pounds in Trunk.
- See Accessories and Cargo section of Owner's Manual for more information.

BM40-08

4

**WARNING**

Too much weight in Tour-Pak® can cause loss of control. Death or serious injury could occur.

- Do not put more than 25 pounds (11.3 kg) in Tour-Pak® on 2008 & earlier motorcycles.
- Do not put more than 30 pounds (13.63 kg) in Tour-Pak® on 2009 & later motorcycles.
- See Accessories and Cargo section of Owner's Manual for more information.

M0521-71C

5

TIRE AND LOADING INFORMATION  
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY NOMBRE DE PLACES	TOTAL 2	FRONT AVANT 1	REAR ARRIÈRE 1

The combined weight of occupants and cargo should never exceed 771 kg or 1700 lb.  
Le poids total des occupants et du chargement ne doit jamais dépasser 771 kg ou 1700 lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT AVANT	M790B16	248 kPa, 36 psi	VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS
REAR ARRIÈRE	P205/65R15	179 kPa, 26 psi	
SPARE DE SECOURS	NOT APPLICABLE SANS OBJET	NOT APPLICABLE SANS OBJET	

28395-10

6

TIRE AND LOADING INFORMATION  
RENSEIGNEMENTS SUR LES PNEUS ET LE CHARGEMENT

SEATING CAPACITY NOMBRE DE PLACES	TOTAL 2	FRONT AVANT 1	REAR ARRIÈRE 1

The combined weight of occupants and cargo should never exceed 771 kg or 1700 lb.  
Le poids total des occupants et du chargement ne doit jamais dépasser 771 kg ou 1700 lb.

TIRE PNEU	SIZE DIMENSIONS	COLD TIRE PRESSURE PRESSION DES PNEUS À FROID	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT AVANT	130/80B19	248 kPa, 36 psi	VOIR LE MANUEL DE L'USAGER POUR PLUS DE RENSEIGNEMENTS
REAR ARRIÈRE	P205/65R15	179 kPa, 26 psi	
SPARE DE SECOURS	NOT APPLICABLE SANS OBJET	NOT APPLICABLE SANS OBJET	

14000784

Figure 1. Labels

**Table 7. Labels**

ITEM	PART NO.	DESCRIPTION	LOCATION	TEXT
1	14000396	General warnings	Top of air cleaner cover	<p>WARNING: Three wheeled motorcycles are different from two wheeled motorcycles and other vehicles. They operate, steer, handle and brake differently. Unskilled or improper use could result in loss of control, death or serious injury.</p> <ul style="list-style-type: none"><li>• Take a rider training course.</li><li>• Read Owner's Manual before riding, adding accessories or servicing.</li><li>• Wear a helmet, eye protection and protective clothing.</li><li>• Never tow a trailer.</li></ul> <p>For a manual, find nearest dealer at 1-414-343-4056 or <a href="http://www.harley-davidson.com">www.harley-davidson.com</a></p>
2	15368-01A	Battery warning	Under seat, behind fuel tank on main harness trough	<p>WARNING: A connected battery can cause a spark or motorcycle startup while servicing. Death or serious injury could occur.</p> <ul style="list-style-type: none"><li>• Disconnect negative cable before servicing.</li><li>• Keep cable away from terminal while servicing.</li></ul>
3	83446-09	Trunk load limits	Inside trunk door	<p>WARNING: Too much weight in Trunk can cause loss of control. Death or serious injury could occur.</p> <ul style="list-style-type: none"><li>• Do not put more than 50 pounds in Trunk.</li><li>• See Accessories and Cargo section of Owner's Manual for more information.</li></ul>

**Table 7. Labels**

ITEM	PART NO.	DESCRIPTION	LOCATION	TEXT
4	90821-74C	Tour-Pak load limits (FLHTCUTG)	Inside Tour-Pak lid	<p>WARNING: Too much weight in Tour-Pak® can cause loss of control. Death or serious injury could occur.</p> <ul style="list-style-type: none"> <li>• Do not put more than 25 pounds (11.3 kg) in Tour-Pak® on 2008 and earlier motorcycles.</li> <li>• Do not put more than 30 pounds (13.6 kg) in Tour-Pak® on 2009 and later motorcycles.</li> <li>• See Accessories and Cargo section of Owner's Manual for more information.</li> </ul>
5	83563-10	Tire label (FLHTCUTG)	Under right side cover	<p>TIRE AND LOADING INFORMATION SEATING CAPACITY, TOTAL 2, FRONT 1, REAR 1 The combined weight of occupants and cargo should never exceed weight specifications. See BEFORE RIDING &gt; CHECKING TIRE PRESSURE AND INSPECTING TIRES (Page 48) for tire data and see SPECIFICATIONS &gt; SPECIFICATIONS (Page 33) for maximum weight allowed.</p>
6	14000781	Tire label (FLRT)	Under right side cover	<p>TIRE AND LOADING INFORMATION SEATING CAPACITY, TOTAL 2, FRONT 1, REAR 1 The combined weight of occupants and cargo should never exceed weight specifications. See BEFORE RIDING &gt; CHECKING TIRE PRESSURE AND INSPECTING TIRES (Page 48) for tire data and see SPECIFICATIONS &gt; SPECIFICATIONS (Page 33) for maximum weight allowed.</p>

## NOTES

---



## VEHICLE IDENTIFICATION NUMBER (VIN)

### General

See Figure 3. A unique 17-digit serial or Vehicle Identification Number (VIN) is assigned to each motorcycle. Refer to Table 8.

### Location

See Figure 2. The full 17-digit VIN is stamped on the right side of the frame near the steering head. In some destinations, a printed VIN label is also attached on the front downtube.

### Abbreviated VIN

An abbreviated VIN showing the vehicle model, engine type, model year, and sequential number is stamped on the left side of the crankcase between the engine cylinders.

#### NOTE

*Always give the full 17-digit Vehicle Identification Number when ordering parts or making any inquiry about your motorcycle.*


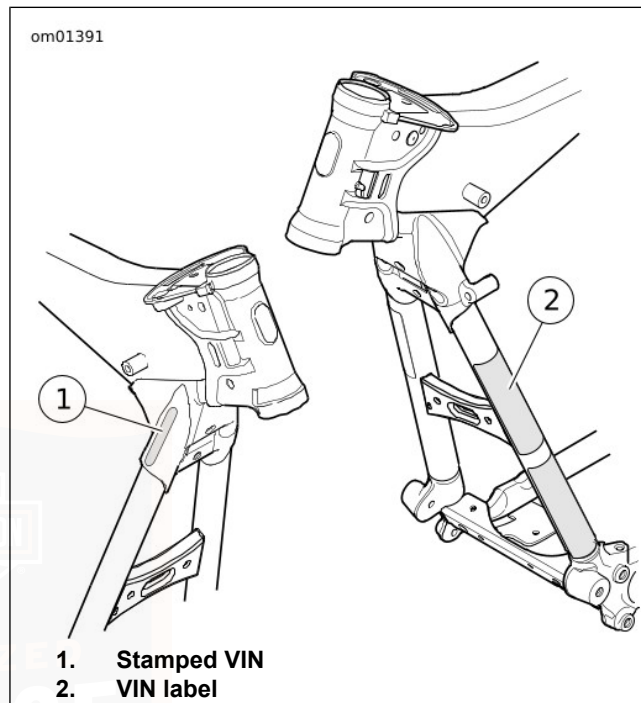


Figure 2. VIN Locations

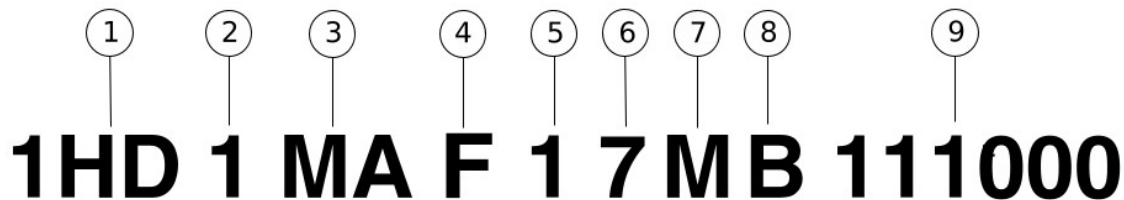

**Figure 3. Typical Harley-Davidson VIN: 2021 Trike Models**

**Table 8. Harley-Davidson VIN Breakdown: 2021 Trike Models**

POSITION	DESCRIPTION	POSSIBLE VALUES
1	World manufacturer identifier	1HD=Originally manufactured in the United States 5HD=Originally manufactured in the United States or Thailand for sale outside of the United States 932=Originally manufactured in Brazil MEG=Originally manufactured in India MLY=Originally manufactured in Thailand
2	Motorcycle type	1=Heavyweight motorcycle (901 cm <sup>3</sup> or larger)
3	Model	See VIN model table
4	Engine type	F=Twin-Cooled™ Milwaukee-Eight™ 114 Engine, 1868 cm <sup>3</sup> P=Milwaukee-Eight™ 114 Engine, 1868 cm <sup>3</sup>



**Table 8. Harley-Davidson VIN Breakdown: 2021 Trike Models**

POSITION	DESCRIPTION	POSSIBLE VALUES
5	Calibration/configuration, introduction	1=Domestic (DOM) 2=California (CAL) 3=Canada (CAN) 4=ENG/EN2/HDI/HD2/HD4 5=Japan (JPN) 6=Australia (AUS) 7=Brazil (BRZ) 8=Asia Pacific (APC) 9=IND/IN2 0=ASEAN (AZN) A=China (CHN) G=HD3
6	VIN check digit	Can be 0-9 or X
7	Model year	M=2021
8	Assembly plant	B=York, PA U.S.A. D=H-D Brazil-Manaus, Brazil (CKD) N=Haryana India (Bawal District Rewari) S=Tasit, Pluagdang, Rayong, Thailand
9	Sequential number	Varies

**Table 9. VIN Model Codes: Trike Models**

CODE	MODEL	CODE	MODEL
MA	FLHTCUTG Tri Glide® Ultra	MC	FLRT Freewheeler

## MODELS AND FEATURES

Some models, features or configurations shown in this manual may not be available in all markets.

## PRIMARY CONTROLS AND SERVICE COMPONENTS

Familiarize yourself with the location of all the controls and service components on your motorcycle.

### NOTE

*Illustrations are for general reference only. Controls and service components shown are general locations and*


*representations that do not show a specific model of motorcycle.*


*Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.*

See Figure 4 for rider controls and service components accessible when seated.

See Figure 5 for rider controls and service components accessible from the right.

See Figure 6 for rider controls and service components accessible from the left.

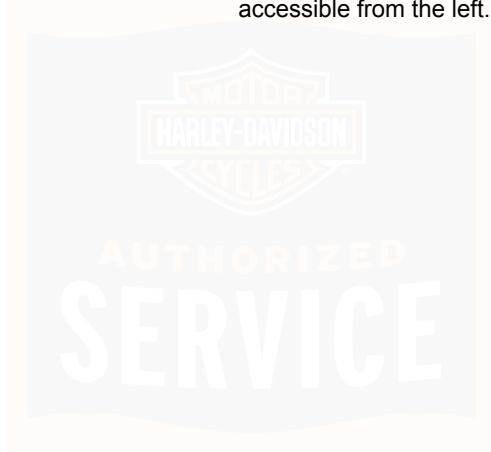

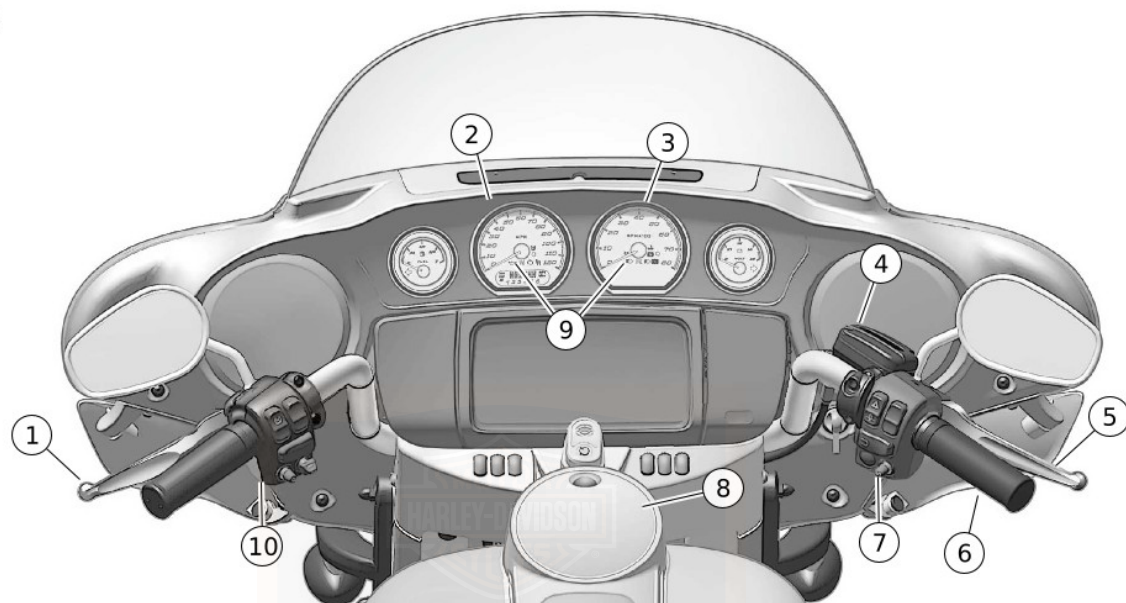


- 1. Clutch hand lever
- 2. Speedometer/odometer
- 3. Tachometer
- 4. Front brake fluid reservoir
- 5. Front brake lever

- 6. Throttle twist grip
- 7. Right hand control module
- 8. Fuel filler door
- 9. Indicator lamps
- 10. Left hand control module


**Figure 4. Controls and Service Components (Typical)**

1165240

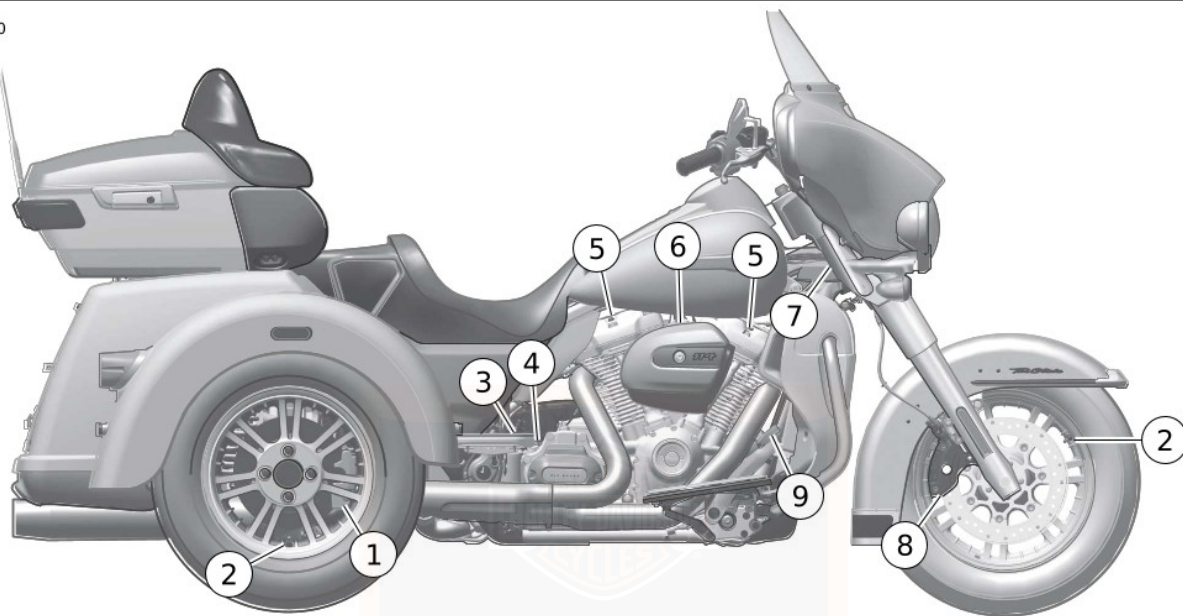

- |                             |                               |
|-----------------------------|-------------------------------|
| 1. Rear brake caliper       | 6. Air cleaner                |
| 2. Air pressure valve       | 7. Rear brake fluid reservoir |
| 3. Oil filler cap/dipstick  | 8. Front brake caliper        |
| 4. Transmission filler plug | 9. Rear brake pedal           |
| 5. Spark plug               |                               |

**Figure 5. Controls and Service Components (typical)**

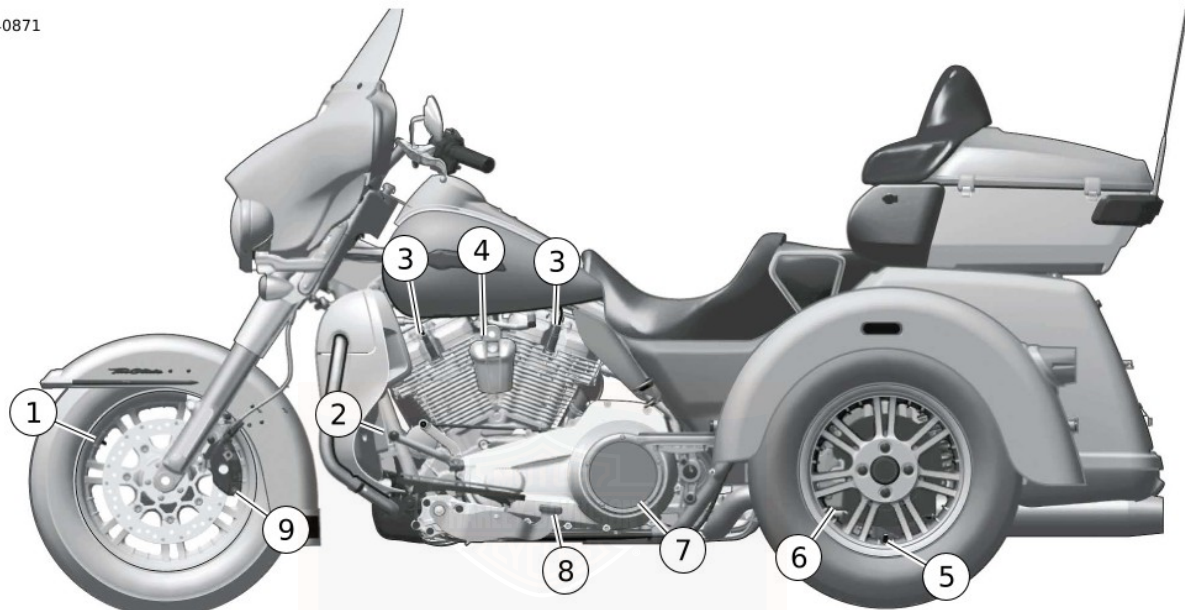

1. Air pressure valve
2. Gear shift lever
3. Spark plug
4. Horn
5. Air pressure valve

6. Rear brake caliper
7. Clutch cover
8. Parking brake
9. Front brake caliper

**Figure 6. Controls and Service Components (typical)**

## NOTES

---



## SPECIFICATIONS

### NOTE

- Specifications in this publication may not match those of official certification in some markets due to timing of publication printing, variance in testing methods, and/or motorcycle differences. Customers seeking officially recognized regulatory specifications for their motorcycle should refer to certification documents and/or contact their respective dealer or distributor.

- Harley-Davidson reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

## Tires

Table 10. Specified Tires


MODEL	MOUNT	SIZE	SPECIFIED TIRE	PRESSURE (COLD 20 °C (68 °F)) *	
				psi	kPa
Tri Glide™ Ultra (FL-HTCUTG)	Front	16 in	Dunlop D402F MT90B16 M/C 72H	36	248
Freewheeler™ (FLRT)	Front	19 in	Dunlop D408F 130/60B19 M/C 61H	36	248
<b>China only:</b> Tri Glide™ Ultra (FL-HTCUTG)	Front	19 in	Dunlop D408F 130/60B19 M/C 61H	36	248

Table 10. Specified Tires

MODEL	MOUNT	SIZE	SPECIFIED TIRE	PRESSURE (COLD 20 °C (68 °F)) *	
				psi	kPa
Tri Glide™ Ultra (FL-HTCUTG), Freewheeler™ (FLRT)	Rear	15 in	Dunlop P205/65 R15 92T	26	179
<b>China only:</b> Tri Glide™ Ultra (FL-HTCUTG)	Rear	18 in	Dunlop TK100 P215/45 R18 83T	26	179

**▲ WARNING**

Harley-Davidson recommends the use of its specified tires. Harley-Davidson vehicles are not designed for operation with non-specified tires, including snow, moped and other special-use tires. Use of non-specified tires can adversely affect stability, handling or braking and lead to loss of vehicle control, which could result in death or serious injury. (00024d)

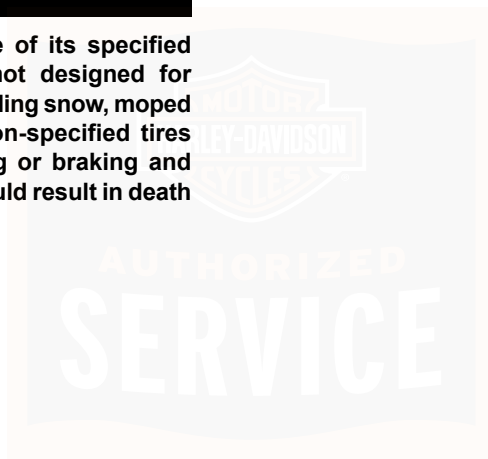



## Weights and Dimensions

**Table 11. Weights**

ITEM	Tri Glide™ Ultra (FLHTCUTG)				Freewheeler™ (FLRT)					
	DOM		HDI		DOM		HDI		JPN	
	lb	kg	lb	kg	lb	kg	lb	kg	lb	kg
Running weight <sup>(1)</sup>	1243	564	1243	564	1118	507	1118	507	1118	507
Maximum added weight allowed <sup>(2)</sup>	457	207	457	207	582	264	582	264	582	264
GVWR <sup>(3)</sup>	1700	771	1700	771	1700	771	1700	771	1700	771
GAWR front	511	232	511	232	511	232	511	232	511	232
GAWR rear	1188	539	1188	539	1188	539	1188	539	1188	539

(1) The total weight of the motorcycle as delivered with all oil/fluids and approximately 90% of fuel.

(2) The total weight of accessories, cargo, riding gear, passenger and rider must not exceed this weight.

(3) European Union only: A minimum of 30% loading on front axle is required by EU 44/2014. This may limit the load capacity of the Tour-Pak and trunk depending on rider and passenger weights.

**Table 12. Dimensions**

ITEM	Tri Glide™ Ultra (FLHTCUTG)		Freewheeler™ (FLRT)			
			DOM		HDI / JPN	
	in	mm	in	mm	in	mm
Length	105.1	2670	103	2615	103	2615
Overall width	54.7	1390	55.3	1405	55.3	1405
Overall height <sup>(1)</sup>	56.3	1430	45.3	1150	45.3	1150
Wheelbase	65.7	1670	65.7	1670	65.7	1670

**Table 12. Dimensions**

ITEM	Tri Glide™ Ultra (FLHTCUTG)		Freewheeler™ (FLRT)			
			DOM		HDI / JPN	
	in	mm	in	mm	in	mm
Ground clearance	4.9	125	4.9	125	4.9	125
Saddle height <sup>(2)</sup>	27.1	700	26.2	665	26.2	665
(1) To top of mirrors. (2) With 81.7 kg (180 lb) rider on seat.						

## Capacities

**Table 13. Capacities**

ITEM	U.S.	METRIC
Fuel tank (total)	6.0 gal	22.7 L
Low fuel warning light on (approximate)	1.0 gal	3.8 L
Engine oil capacity with filter *		
Twin-cooled (new system)	5.0 qt	4.7 L
Air-cooled (new system)	5.2 qt	4.9 L
Service oil change (all)	4.75 qt	4.5 L
Transmission ** (approximate)	32 oz	0.95 L
Primary chaincase (dry fill; approximate) ***	34 oz	1.0 L

**Table 13. Capacities**

ITEM	U.S.	METRIC
Coolant, Twin-cooled models (approximate)	0.8 qt	0.8 L
* When refilling, initially add 3.8 L (4.0 qt). Add more as needed to bring level within specification. ** When refilling, initially add 0.83 L (28 fl oz) Add more as needed to bring level within specification. *** Amount is approximate. Fill to bottom of pressure plate OD with vehicle upright.		

## Engine and Transmission

**Table 14. Engine: Milwaukee-Eight™ 114 Engine**

ITEM	SPECIFICATION	
Number of cylinders	2	
Type	4-cycle, 45 degree V-Type, air-cooled Single camshaft Single balance shaft	
Compression ratio	10.5:1	
Bore	4.016 in	102 mm
Stroke	4.500 in	114.3 mm
Displacement	114 in <sup>3</sup>	1868 cm <sup>3</sup>
Fuel requirement	Premium unleaded	
Lubrication system	Pressurized, dry sump with oil cooler and fan	

**Table 15. Engine: Twin-Cooled™ Milwaukee-Eight™ 114 Engine**

ITEM	SPECIFICATION	
Number of cylinders	2	
Type	4-cycle, 45 degree V-Type, Twin-Cooled Single camshaft Single balance shaft	

**Table 15. Engine: Twin-Cooled™ Milwaukee-Eight™ 114 Engine**

ITEM	SPECIFICATION	
Compression ratio	10.5:1	
Bore	4.016 in	102 mm
Stroke	4.500 in	114.3 mm
Displacement	114 in <sup>3</sup>	1868 cm <sup>3</sup>
Fuel requirement	Premium unleaded	
Lubrication system	Pressurized, dry sump	
Cooling system	Liquid-cooled cylinder heads with lower fairing-mounted radiators and electric pump	

**Table 16. Transmission**

ITEM	SPECIFICATION
Type	Constant mesh, foot shift
Speeds	6 forward

## Electrical

**Table 17. Electrical**

ITEM	SPECIFICATION
Ignition timing	Not adjustable
Battery	12 V, 28 Ah, 405 CCA sealed and maintenance free
Charging system	46-50 A maximum output
Spark plug size	10 mm

**Table 17. Electrical**

ITEM	SPECIFICATION	
Spark plug gap	0.031-0.035 in	0.80-0.90 mm

**Table 17. Electrical**

ITEM	SPECIFICATION	
Spark plug torque	84-108 <b>in-lbs</b>	9.5-12.2 Nm



## REMOVING MOTORCYCLE FROM STORAGE

1. Charge and install the battery. See SERVICE PROCEDURES > BATTERY MAINTENANCE (Page 189).
2. Inspect spark plugs. See MAINTENANCE AND LUBRICATION > REPLACING SPARK PLUGS (Page 184).
3. Inspect air filter and replace if necessary. See MAINTENANCE AND LUBRICATION > INSPECTING AIR FILTER (Page 182).
4. Inspect drive belt and sprocket. See MAINTENANCE AND LUBRICATION > CHECK DRIVE BELT DEFLECTION (Page 167).
5. Perform the items in the BEFORE RIDING > PRE-RIDE CHECKLIST (Page 39).

## PRE-RIDE CHECKLIST

1. Check the amount of fuel in the tank. Add fuel if required. See BEFORE RIDING > FILLING THE FUEL TANK (Page 41).
2. Adjust mirrors to proper riding positions. See BEFORE RIDING > ADJUSTING MIRRORS (Page 55).
3. Check the engine oil level. See MAINTENANCE AND LUBRICATION > CHECK ENGINE OIL LEVEL (Page 156).
4. Check the coolant level (if equipped). See MAINTENANCE AND LUBRICATION > COOLING SYSTEM (Page 178).
5. Check brake fluid level. See MAINTENANCE AND LUBRICATION > BRAKES (Page 170).
6. Inspect brake pads and discs for wear. See MAINTENANCE AND LUBRICATION > BRAKES (Page 170).
7. Check the hand and foot controls to be sure they are operating properly. Operate the front and rear brakes, throttle, clutch and shifter. See OWNER MANUAL > OPERATION (Page 75).
8. Inspect brake lines for wear or damage.
9. Check steering for smoothness by turning the handlebar through the full operating range.

### **⚠ WARNING**

**Be sure tires are properly inflated, balanced, undamaged, and have adequate tread. Inspect your tires regularly and see a Harley-Davidson dealer for replacements. Riding with excessively worn, unbalanced, improperly inflated, overloaded or damaged tires can lead to tire failure and adversely affect stability and handling, which could result in death or serious injury. (00014b)**

10. Check tire condition, pressure and motorcycle loading. Refer to BEFORE RIDING > CHECKING TIRE PRESSURE AND INSPECTING TIRES (Page 48) for correct tire inflation pressure and motorcycle weight allowances.
11. Check rear shock settings. Adjust if necessary. See BEFORE RIDING > ADJUSTING SHOCK ABSORBERS (Page 56).
12. Check for any fuel, oil or hydraulic fluid leaks.
13. Check drive belt for wear or damage.

### **⚠ WARNING**

**Be sure headlamp, tail and stop lamp and turn signals are operating properly before riding. Poor visibility of rider to other motorists can result in death or serious injury. (00478b)**

14. Check all electrical equipment and switches including the stop lamp, turn signals and horn for proper operation.
15. Service your motorcycle as necessary.

## **BREAK-IN RIDING RULES**

### **The First 500 Miles (800 Kilometers)**

The sound design, quality materials, and workmanship that are built into your new Harley-Davidson will give you optimum performance right from the start.

To allow your engine to wear-in its critical parts, we recommend that you observe the riding rules provided below for the first 800 km (500 mi).

1. During the first 80 km (50 mi) of riding, keep the engine speed below 3000 rpm in any gear. Do not lug the engine by running or accelerating at very low rpm, or by running at high rpm longer than needed for shifting or passing.

2. Up to 800 km (500 mi), vary the engine speed and avoid operating at any steady engine speed for long periods. Engine speed up to 3500 rpm in any gear is permissible.
3. Drive slowly and avoid fast starts at wide open throttle until the engine has warmed up.
4. Avoid lugging the engine by not running the engine at very low speeds in higher gears.
5. Avoid hard braking. Break-in new brakes with moderate use for the first 160 km (100 mi).

## FILLING THE FUEL TANK

See SAFETY FIRST > SAFE OPERATING RULES (Page 5) and review the following safety procedures.

### ⚠ WARNING

**Avoid spills. Slowly open fuel filler cap. Do not fill above bottom of filler neck insert, leaving air space for fuel expansion. Secure filler cap after refueling. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00028b)**

### ⚠ WARNING

**Do not store motorcycle with gasoline in tank within the home or garage where open flames, pilot lights, sparks or electric motors are present. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00003a)**

### ⚠ WARNING

**Do not use aftermarket fuel caps. Aftermarket fuel caps may fit improperly and leak, which could lead to death or serious injury. See a Harley-Davidson dealer for approved fuel caps. (00034a)**

### NOTICE


**Do not spill fuel onto the motorcycle while refueling. Immediately wipe up fuel spills on your motorcycle. Fuel can cause damage to cosmetic surfaces. (00147b)**

### NOTICE

**Use only unleaded fuel in catalytic converter-equipped motorcycles. Using leaded fuel will damage the emission control system. (00150c)**

See Figure 7. Do not overfill the fuel tank. Insert the pump nozzle into the filler hole. Do not fill the tank beyond the bottom of the filler neck. A warm engine, the sun or extreme

temperatures can cause the fuel to expand. Fuel can spill out of the tank and damage the finish. See SAFETY FIRST > SAFE OPERATING RULES (Page 5).

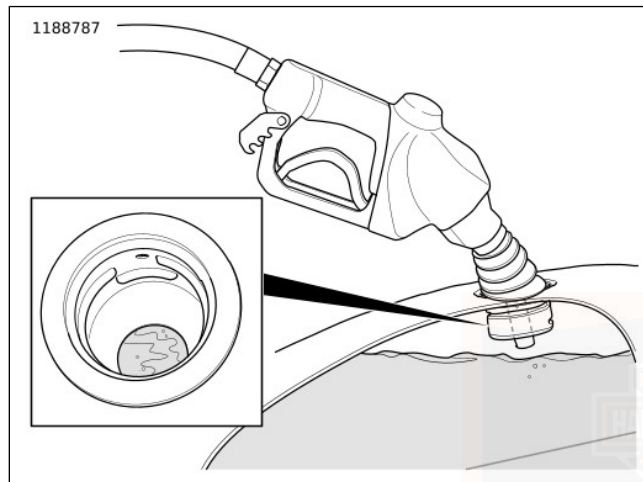

**Figure 7. Fuel Level below Filler Neck**

## Without Fairing

See Figure 8. The fuel filler cap is on the right side of the fuel tank. Some vehicles have a locking fuel cap.

The cap on the left side is the fuel gauge. The fuel gauge is not removable.

## With Fairing

The fuel filler cap is beneath a pushbutton or locking door on the fuel tank.

**Pushbutton fuel door:** See Figure 9. Push button to release the door.

**Locking fuel door:** See Figure 10. Unlock fuel door with the ignition key. Lock fuel door by removing key and closing fuel door.

## Fuel Filler Cap Operation

**Remove:** Turn fuel filler cap counterclockwise to remove.

**Install:** Turn fuel filler cap clockwise until it clicks. The ratchet action of the cap prevents over-tightening.



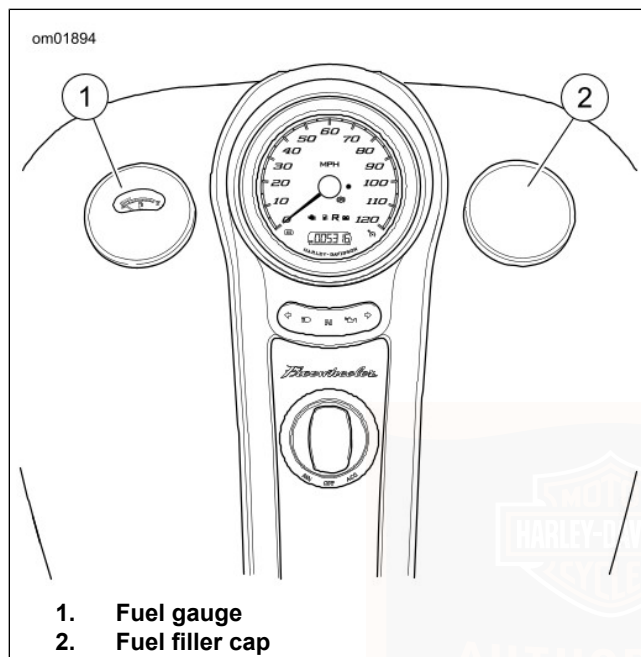


Figure 8. Fuel Tank: Without Fairing

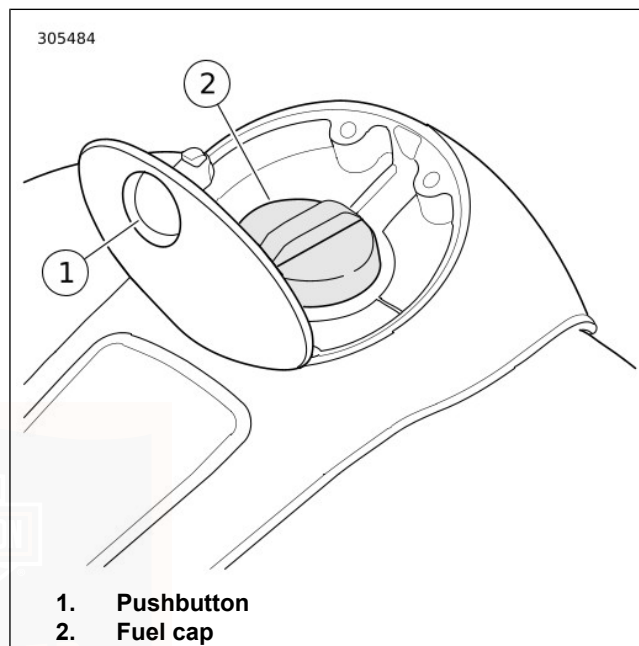


Figure 9. Pushbutton Fuel Door

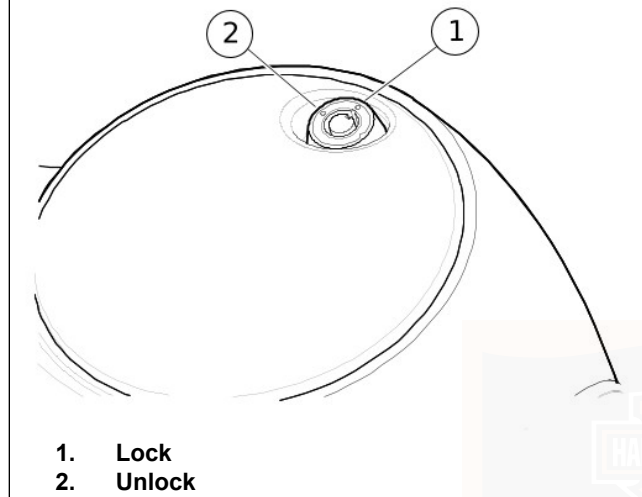


Figure 10. Locking Fuel Door

## FUEL SYSTEM INFORMATION

### Gasoline

Your motorcycle was designed to get the best performance and efficiency using unleaded gasoline. Most gasoline is blended with alcohol and/or ether to create oxygenated blends.

The type and amount of alcohol or ether added to the fuel is important.

#### NOTICE

**Do not use gasoline that contains methanol. Doing so can result in fuel system component failure, engine damage and/or equipment malfunction. (00148a)**

#### NOTICE

**Use only unleaded fuel in catalytic converter-equipped motorcycles. Using leaded fuel will damage the emission control system. (00150c)**

- ETHANOL fuel is a mixture of ethanol (grain alcohol) and unleaded gasoline and can have an impact on fuel mileage.
- REFORMULATED OR OXYGENATED GASOLINES (RFG) describes gasoline blends that are specifically designed to burn cleaner than other types of gasoline. This results in fewer tailpipe emissions. They are also formulated to reduce evaporative losses to the environment. Reformulated gasolines use additives to oxygenate the gas. Your motorcycle will run normally using this type of fuel. Harley-Davidson recommends using it whenever possible as an aid to cleaner air in our environment.




- Some gasoline blends might adversely affect starting, driveability or fuel efficiency. If any of these problems are experienced, try a different brand of gasoline or gasoline with a higher octane blend.

**Table 18. Octane Rating**

SPECIFICATION	RATING
Pump Octane (R+M)/2	91 (95 RON)



**Table 19. Fuel Specification**

Common Identifier	Specification	Rating
MTBE	Methyl Tertiary Butyl Ether	Gasoline/Methyl Tertiary Butyl Ether (MTBE) blends are a mixture of gasoline and as much as 15% MTBE. Gasoline/MTBE blends use in your motorcycle is approved.
Methanol	Methanol or Racing Fuel	Do not use racing fuel or fuel containing methanol; use of these fuels will damage the fuel system.
	5% Ethanol	Fuels with an ethanol content of up to 5% (E5) may be used in your motorcycle without affecting vehicle performance.
	10% Ethanol	Fuels with an ethanol content of up to 10% (E10) may be used in your motorcycle without affecting vehicle performance. United States customers: The United States' Clean Air Act prohibits the use of gasoline blends containing greater than 10% ethanol in motorcycles.
	22% Ethanol	Fuel in the Brazilian market has ethanol content which ranges from 21–27.5%. Harley-Davidson Motorcycles configured for Brazil are equipped with engine control calibrations developed to work properly with these fuels. Use of fuels with high ethanol content in Harley-Davidson motorcycles intended for other regulatory markets may result in poor drivability, setting of the check engine light and potential engine damage.
	85% Ethanol	Do not use fuel containing 85% ethanol. Use of these fuels will damage the fuel system and may lead to engine damage.

## Catalytic Converter

Vehicles in some markets are equipped with catalytic converters.

### NOTICE

**Do not operate catalytic converter-equipped vehicle with engine misfire. If you operate the vehicle under this condition, the exhaust will become abnormally hot, which can cause vehicle damage, including emission control loss. (00149c)**


## REFLEX LINKED ANTI-LOCK BRAKE SYSTEM (ABS)

### Identification

See Figure 11. Reflex Linked ABS can be identified by a wheel speed sensor on the left side of the front wheel. The wheel speed sensor has a clip with an 'ABS' marking.

See Figure 12. This system can also be identified by an ABS module (EHCU) behind the right side cover.

See OPERATION > REFLEX-LINKED BRAKES WITH CORNERING-ENHANCED ABS (Page 118) for linked brake operation.

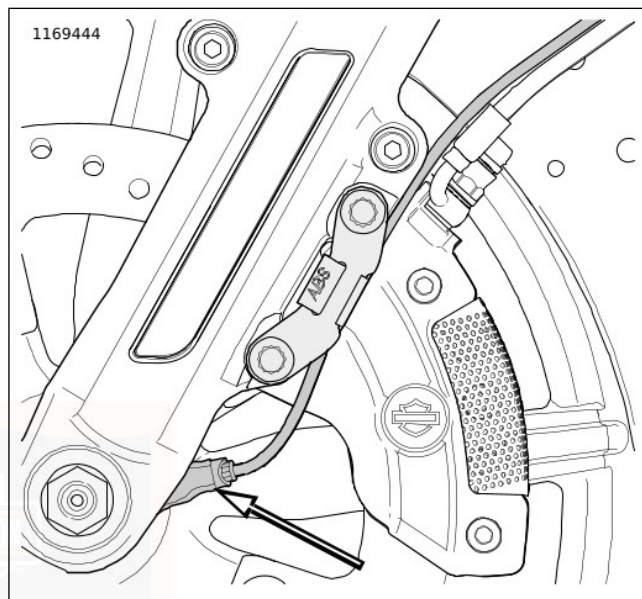

**Figure 11. Wheel Speed Sensor (ABS identification typical)**

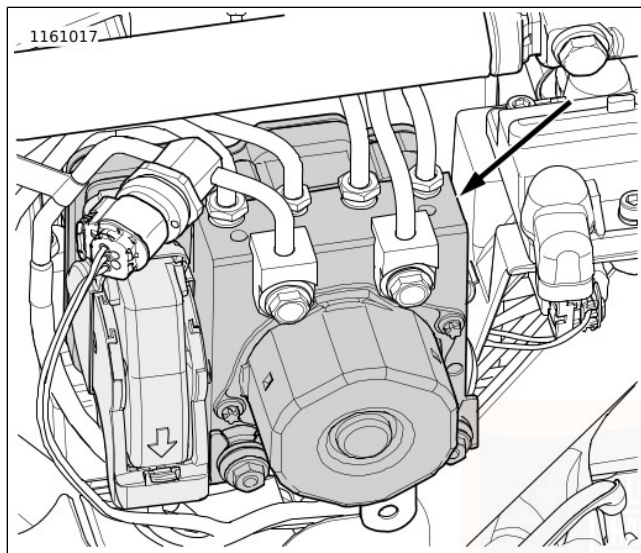


Figure 12. ABS Module (EHC) (behind right side cover)

## CHECKING TIRE PRESSURE AND INSPECTING TIRES

### General Information

#### ⚠ WARNING

Match tires, tubes, rim strips or seals, air valves and caps to the correct wheel. Contact a Harley-Davidson dealer. Mismatching can lead to tire damage, allow tire slippage on the wheel or cause tire failure, which could result in death or serious injury. (00023c)

#### ⚠ WARNING

Harley-Davidson front and rear tires are not the same. Interchanging front and rear tires can cause tire failure, which could result in death or serious injury. (00026a)

### Tire Pressure

#### ⚠ WARNING

Be sure tires are properly inflated, balanced, undamaged, and have adequate tread. Inspect your tires regularly and see a Harley-Davidson dealer for replacements. Riding with excessively worn, unbalanced, improperly inflated, overloaded or damaged tires can lead to tire failure and adversely affect stability and handling, which could result in death or serious injury. (00014b)

Tire pressures should be set using information in Table 20 and Table 21. Tires are considered Cold Tires if the vehicle has not been recently ridden. The tire pressure increases as the tire warms. Tires can warm due to both riding and high ambient air temperatures. Tires can remain warm for up to 2 hours after riding. For the most accurate reading, check tire pressures with a good gauge before riding while the tires are cold.

Check tire pressure:

- As part of the pre-ride checklist.
- At every scheduled service interval.

For Cold Tires with an Ambient Air Temp of 20 °C (68 °F) or less: Table 20

**Table 20. Specified Tires**

MODEL	MOUNT	SIZE	SPECIFIED TIRE	PRESSURE (COLD 20 °C (68 °F)) *	
				psi	kPa
Tri Glide™ Ultra (FL-HTCUTG)	Front	16 in	Dunlop D402F MT90B16 M/C 72H	36	248
Freewheeler™ (FLRT)	Front	19 in	Dunlop D408F 130/60B19 M/C 61H	36	248
<b>China only:</b> Tri Glide™ Ultra (FL-HTCUTG)	Front	19 in	Dunlop D408F 130/60B19 M/C 61H	36	248
Tri Glide™ Ultra (FL-HTCUTG), Freewheeler™ (FLRT)	Rear	15 in	Dunlop P205/65 R15 92T	26	179
<b>China only:</b> Tri Glide™ Ultra (FL-HTCUTG)	Rear	18 in	Dunlop TK100 P215/45 R18 83T	26	179

For Cold Tires with an Ambient Air Temp higher than 20 °C (68 °F): Refer to the first column in Table 21 to determine the tire pressure adjustments. For example: If the motorcycle has not been ridden for 2 hours or more and the ambient temperature is 31 °C (88 °F), the recommended front and rear pressures are Table 20 pressures plus 14 kPa (2 psi).

Tires warm due to riding which increases the tire pressure. If the vehicle has been recently ridden, refer to the second column in Table 21 to determine the tire pressure adjustment. For example: If the motorcycle has been recently ridden and

the ambient temperature is 31 °C (88 °F), the recommended front and rear pressures are the Table 20 pressures plus 48 kPa (7 psi).

If a tire pressure adjustment is made when the vehicle has been recently ridden, re-adjust the tire pressure per recommendations when the tires have cooled. Tires can remain warm for up to 2 hours after riding.

Harley-Davidson does not perform any testing with only nitrogen in tires. Harley-Davidson neither recommends nor discourages the use of pure nitrogen to inflate tires.

**Table 21. Tire Pressure Adjustment**

<b>AMBIENT AIR TEMPERATURE</b>	<b>MOTORCYCLE NOT RIDDEN FOR 2 HOURS OR MORE: ADD TO FRONT AND REAR PRESSURES IN SPECIFIED TIRES TABLE</b>	<b>MOTORCYCLE RECENTLY RIDDEN: ADD TO FRONT AND REAR PRESSURES IN SPECIFIED TIRES TABLE</b>
20 °C (68 °F) or less	0 kPa (0 psi)	34 kPa (5 psi)
26 °C (79 °F)	7 kPa (1 psi)	41 kPa (6 psi)
31 °C (88 °F)	14 kPa (2 psi)	48 kPa (7 psi)
37 °C (99 °F)	21 kPa (3 psi)	55 kPa (8 psi)
42 °C (108 °F) or higher	28 kPa (4 psi)	62 kPa (9 psi)



## Inspecting Tires

### ⚠ WARNING

**Replace tire immediately with a Harley-Davidson specified tire when wear bars become visible or only 1 mm (1/32 in) tread depth remains. Riding with a worn tire could result in death or serious injury. (00090c)**

Check tire tread:

- As part of the pre-ride checklist.
  - At every scheduled service interval.
1. Inspect each tire for punctures, cuts and breaks.


Harley-Davidson tires are equipped with wear bars that run horizontally across the tread.

A tire is considered worn when the wear bars are visible or if only 0.8 mm (0.031 in) tread depth remains. A worn tire can:


- Be more easily damaged leading to tire failure.
- Provide reduced traction.
- Adversely affect stability and handling.

See Figure 13, Figure 14 and Figure 17. Arrows on tire sidewalls pinpoint location of wear bar indicators.


See Figure 15, Figure 16 and Figure 18. Always replace tires before the tread wear bars appear.

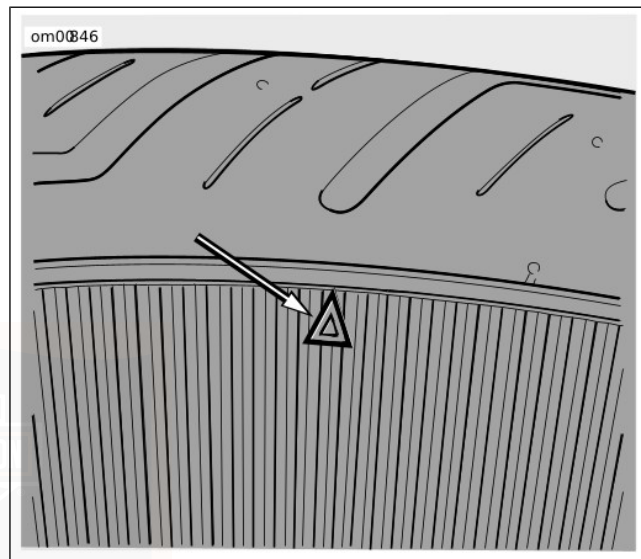


**Figure 13. Dunlop Sidewall Tread Wear Indicator Bar Locator**

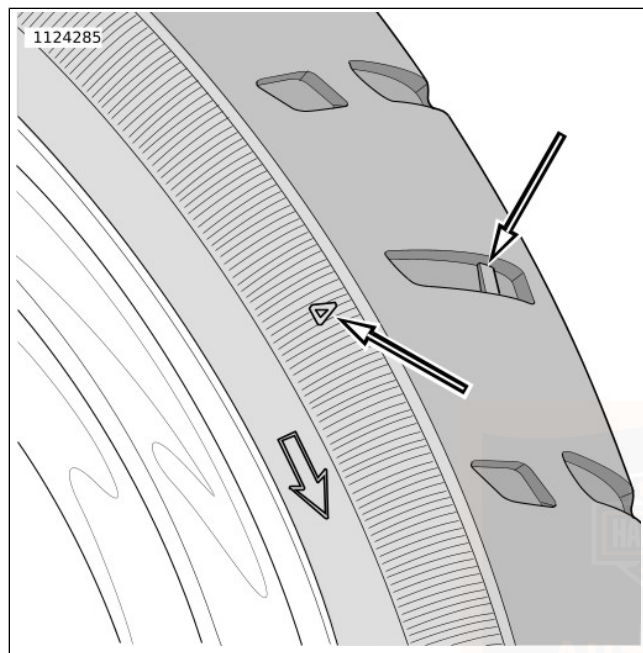


**Figure 14. Tire Sidewall Wear Bar Locator: FLRT**

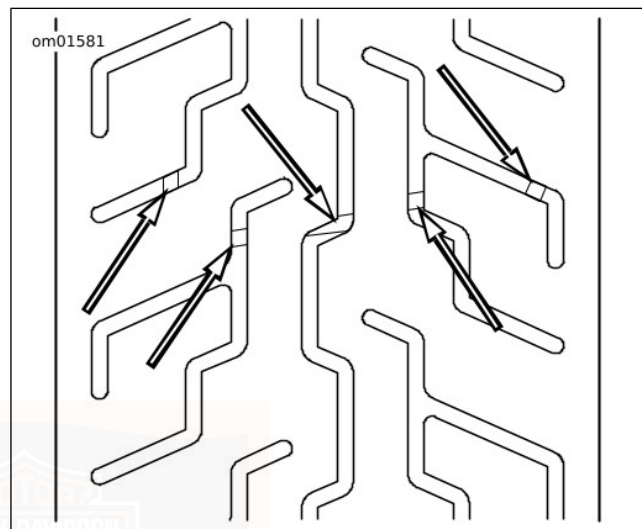

**Figure 15. Dunlop Tread Wear Indicator Bar Appearance**

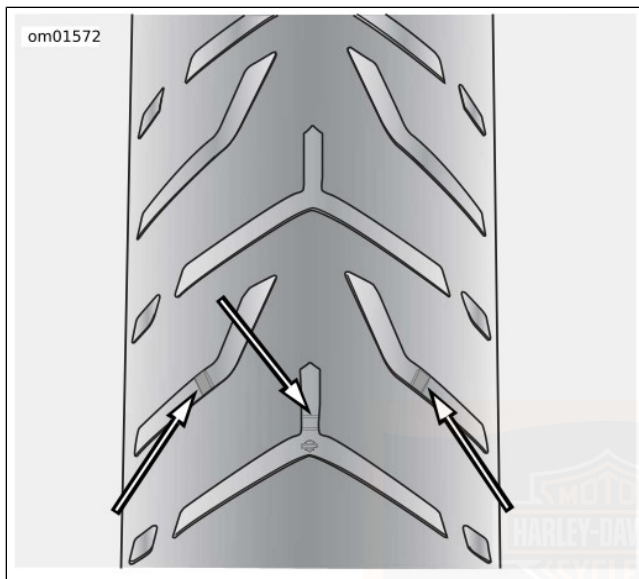

**Figure 16. Wear Bar Appearance: FLRT**

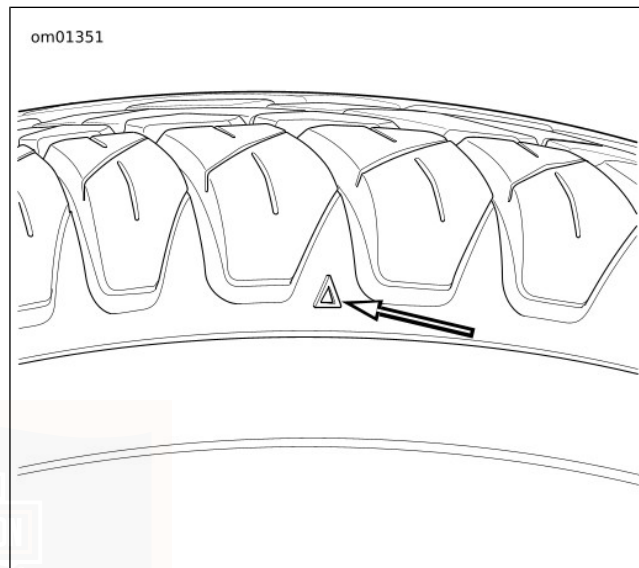

**Figure 17. Rear Tire Tread Wear Bar Indicator**

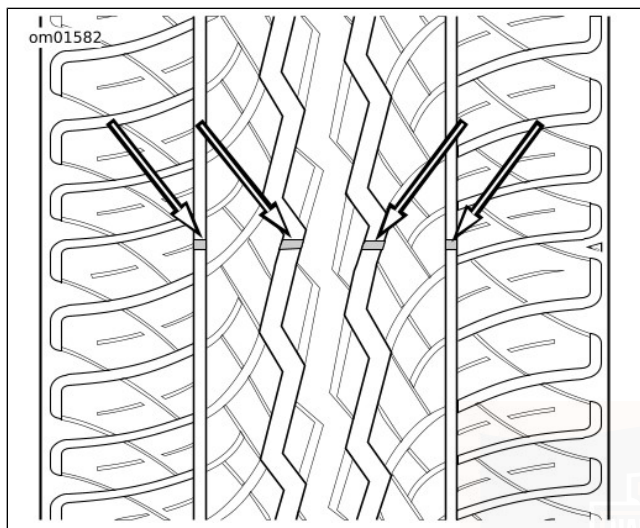


Figure 18. Dunlop Rear Tire Wear Bar Appearance

## Replacing Tires

### ⚠ WARNING

Tires are a critical safety component. Contact a Harley-Davidson dealer for tire repair or replacement. Improper tire service can adversely affect stability and handling, which could result in death or serious injury. (00057a)

### ⚠ WARNING

Harley-Davidson recommends the use of its specified tires. Harley-Davidson vehicles are not designed for operation with non-specified tires, including snow, moped and other special-use tires. Use of non-specified tires can adversely affect stability, handling or braking and lead to loss of vehicle control, which could result in death or serious injury. (00024d)

### ⚠ WARNING

Only install original equipment tire valves and valve caps. A valve, or valve and cap combination, that is too long or too heavy can strike adjacent components and damage the valve, causing rapid tire deflation. Rapid tire deflation can cause loss of vehicle control, which could result in death or serious injury. (00281a)

### ⚠ WARNING

Replace punctured or damaged tires. In some cases, small punctures in the tread area may be repaired from within the removed tire by a Harley-Davidson dealer. Speed should NOT exceed 80 km/h (50 mph) for the first 24 hours after repair, and the repaired tire should NEVER be used over 129 km/h (80 mph). Failure to follow this warning could lead to tire failure and result in death or serious injury. (00015b)

### **⚠ WARNING**

**Replace tire immediately with a Harley-Davidson specified tire when wear bars become visible or only 1 mm (1/32 in) tread depth remains. Riding with a worn tire could result in death or serious injury. (00090c)**

**New** tires are needed if any of the following conditions exist (refer to Table 20 for the specified replacement tires):

- Tread wear bars become visible on the tread surfaces.
- Tire cords or fabric become visible through cracked sidewalls, snags or deep cuts.
- Bumps, bulges or slits in the tire.
- Punctures, cuts, or other damage to the tire that cannot be repaired.

When installing tires on rims, do not rely on tread design to determine direction of rotation. Always be sure the rotational arrows molded into the sidewalls point in the direction of rotation when the vehicle is moving forward.

## **ADJUSTING MIRRORS**

### **⚠ WARNING**

**Objects in mirrors are closer than they appear. Use caution when judging distance of objects in mirrors. Failure to judge correct distances could result in death or serious injury. (00033a)**

Your motorcycle has two convex rear view mirrors.

This type of mirror is designed to give a much wider view to the rear than a flat mirror. However, cars and other objects seen in this type of mirror look smaller and farther away than they actually are.

- Use caution when judging the size or relative distance of objects seen in rear view mirrors.
- Always adjust the rear view mirrors to reflect the area behind the motorcycle before riding.

### **NOTE**

*Adjust mirrors so you can see a small portion of your shoulders in each mirror. This will help you establish the relative distance of vehicles to the rear of your motorcycle.*

## ADJUSTING SHOCK ABSORBERS

### Calculate Preload Setting

#### ⚠ WARNING

Do not exceed the motorcycle's Gross Vehicle Weight Rating (GVWR) or Gross Axle Weight Rating (GAWR). Exceeding these weight ratings can lead to component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00016f)

Adjust rear suspension to suit load conditions, riding style and personal comfort. Increase preload to accommodate additional weight and cargo, reduce preload to accommodate less weight and cargo. Do not exceed maximum GVWR or GAWR.

#### NOTE

*To determine the motorcycle configuration check the model character stamped on the VIN. See YOUR MOTORCYCLE > VEHICLE IDENTIFICATION NUMBER (VIN) (Page 25).*

1. Refer to Table 22 or Table 23. Add weight of rider to total weight of passenger and/or cargo to identify proper preload setting.



**Table 22. Suspension Preload Table: Tri Glide Ultra (FLHTCUTG)**

		<b>Additional Weight of PASSENGER, CARGO AND ACCESSORIES</b>																		
	LB	0	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180
	KG	0	5	9	14	18	23	27	32	36	41	45	50	54	59	64	68	73	77	82
RIDER WEIGHT																				
LB	KG	Full Turns of Knob																		
150	68	0	0	0	0	1	3	4	5	6	8	9	10	11	12	14	15	16	17	19
160	73	0	0	0	1	2	3	5	6	7	8	10	11	12	13	14	16	17	18	19
170	77	0	0	1	2	3	4	6	7	8	9	10	12	13	14	15	17	18	19	20
180	82	0	0	2	3	4	5	6	8	9	10	11	12	14	15	16	17	19	20	21
190	86	0	1	2	4	5	6	7	8	10	11	12	13	15	16	17	18	19	21	22
200	91	1	2	3	4	6	7	8	9	10	12	13	14	15	17	18	19	20	21	23
210	95	2	3	4	5	6	8	9	10	11	13	14	15	16	17	19	20	21	22	24
220	100	2	4	5	6	7	8	10	11	12	13	15	16	17	18	19	21	22	23	NA
230	104	3	4	6	7	8	9	10	12	13	14	15	17	18	19	20	22	23	NA	
240	109	4	5	7	8	9	10	11	13	14	15	16	17	19	20	21	22	NA		
250	113	5	6	7	9	10	11	12	13	15	16	17	18	19	21	22	23	NA		
260	118	6	7	8	9	11	12	13	14	15	17	18	19	20	22	23	NA			
270	122	7	8	9	10	11	13	14	15	16	17	19	20	21	22	NA				

**SERVICE**

**Table 23. Suspension Preload Table: FLRT**

		Additional Weight of PASSENGER, CARGO AND ACCESSORIES																			
		LB	0	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180
		KG	0	5	9	14	18	23	27	32	36	41	45	50	54	59	64	68	73	77	82
Rider Weight																					
LB	KG		Full Turns of Knob																		
150	68		0	0	0	2	3	5	6	8	9	11	13	14	16	17	19	20	22	23	25
160	73		0	0	1	3	4	6	7	9	11	12	14	15	17	18	20	21	23	25	26
170	77		0	1	2	4	5	7	8	10	12	13	15	16	18	19	21	22	24	26	27
180	82		0	2	3	5	6	8	10	11	13	14	16	17	19	20	22	24	25	27	28
190	86		1	3	5	6	8	9	11	12	14	15	17	18	20	22	23	25	26	28	29
200	91		3	4	6	7	9	10	12	13	15	16	18	19	21	23	24	26	27	28	29
210	95		4	5	7	8	10	11	13	14	16	17	19	21	22	24	25	27	28	29	30
220	100		5	6	8	9	11	12	14	15	17	19	20	22	23	25	26	28	29	30	
230	104		6	7	9	10	12	13	15	17	18	20	21	22	24	25	27	28	29	30	
240	109		7	8	10	11	13	14	16	18	20	21	22	24	25	27	28	29	30		
250	113		8	9	11	12	14	15	17	20	21	22	23	25	26	28	29	30			
260	118		9	10	12	13	15	16	18	21	23	23	24	26	27	28	29	30			
270	122		10	11	13	14	16	17	19	23	24	24	25	27	28	29	30				


## Adjustment

1. Remove seat. See SERVICE PROCEDURES > SEAT (Page 211).
2. Rotate adjuster out of stowed position.

3. See Figure 19. Rotate adjustment knob clockwise to increase preload setting, or counterclockwise to decrease preload setting until indicator knob shows appropriate preload setting on the scale.
4. Return adjuster to stowed position.



5. Install seat. See SERVICE PROCEDURES > SEAT (Page 211).

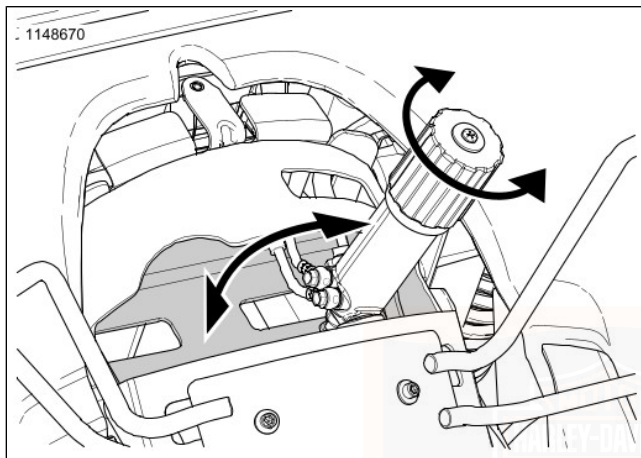

**Figure 19. Rear Suspension Adjuster**  
**PARKING BRAKE**

See Figure 20. The parking brake pedal is on the left side of vehicle. The parking brake mechanically engages brakes for both rear wheels preventing the vehicle from rolling when parked. The parking brake indicator lamp turns on when the parking brake is applied.

Do not use parking brake when the vehicle is in motion. It is not an emergency brake. Always release the parking brake before riding.

#### **NOTE**

*As brake pads wear, the parking brake may require adjustment to firmly engage the rear brakes. The parking brake indicator lamp turns on when the parking brake is applied, even if the parking brake is not properly adjusted. See MAINTENANCE AND LUBRICATION > PARKING BRAKE (Page 175) for inspection and adjustment.*

### **Applying Parking Brake**

1. Bring the vehicle to a complete stop.
2. Shift to first gear and shut off engine.
3. Apply front brake and cover rear brake with right foot.
4. See Figure 20. With the left foot, firmly push down the parking brake pedal until it cannot be pushed any further.


### **Releasing Parking Brake**

1. Apply front brake and cover rear brake with right foot.
2. See Figure 20. With the left foot, firmly press the parking brake pedal and release. The parking brake returns to the released position.

### NOTE

*Foot pressure on the parking brake pedal when it is released may not allow the parking brake to reset properly. Allow the pedal to return to the released position with the operator's foot off the parking brake pedal.*

3. Start motorcycle. The parking brake indicator lamp should be off. Operate the motorcycle normally.

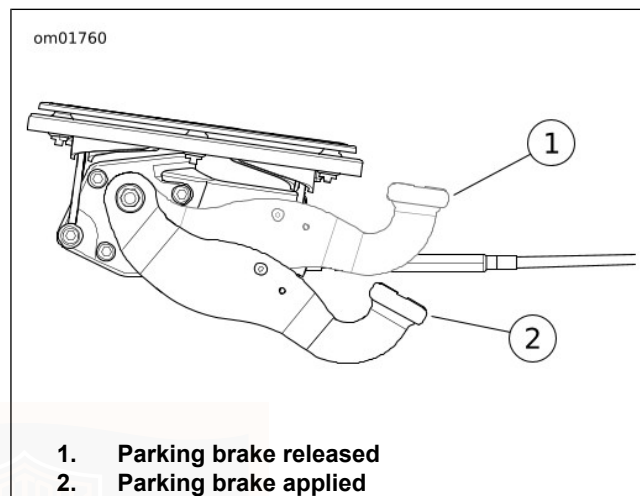

**Figure 20. Parking Brake**

## SECURITY SYSTEM

### Components

The security system consists of a control module, a hands-free antenna mounted on the motorcycle and a hands-free fob carried by the rider. The security system lamp in the speedometer face indicates when security is armed or disarmed.

See SECURITY SYSTEM > ARMING AND DISARMING (Page 66).

### Options


See a Harley-Davidson dealer or [www.harley-davidson.com](http://www.harley-davidson.com) for security system options.

## SECURITY SYSTEM FOB

### Assigning Fob

See Figure 21. Key fobs are electronically assigned to the security system by a Harley-Davidson dealer. Only two fobs can be assigned at any one time.

Purchase replacement fobs from a Harley-Davidson dealer. The fobs can only be assigned to an individual motorcycle by a trained Harley-Davidson technician.

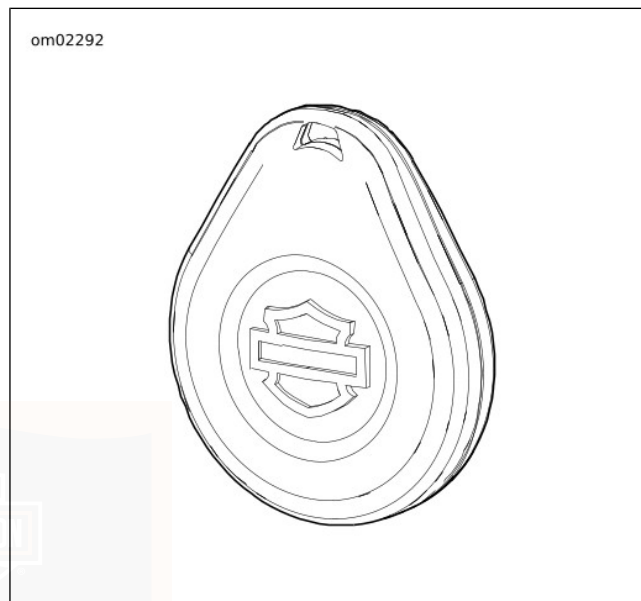

**Figure 21. Fob: Security System**

#### NOTE

- The module will arm only if the fob has been assigned by a Harley-Davidson dealer and a Personal Identification Number (PIN) has been entered in the system. Record the PIN on the Personal Information page in the front of this Owner's Manual and on the removable wallet card.

- If the fob is misplaced or fails, the rider can refer to the wallet card and use the PIN to manually disarm the system. See SECURITY SYSTEM > ARMING AND DISARMING (Page 66) and SECURITY SYSTEM > TROUBLESHOOTING (Page 72).
- The rider can change the PIN at any time. See SECURITY SYSTEM > PERSONAL IDENTIFICATION NUMBER (PIN) (Page 63).

## Fob Battery

### ⚠ WARNING




**CONTAINS BUTTON OR COIN CELL BATTERY. KEEP OUT OF REACH OF CHILDREN.**

**Ingestion can result in death or serious injury. Choking, chemical burns and perforation of soft tissue may result. Severe burns can occur within 2 hours of ingestion or placement in any part of the body. Seek medical attention immediately. (13105b)**

Replace the fob battery every year.

### NOTE

- The reusable label found on the fob packaging lists the serial number of the fob. For reference, affix the label to a blank "NOTES" page in this Owner's Manual.
  - See Figure 22. The serial number of the fob is also found on the inside of the fob.
1. See Figure 22. To open the fob, turn a thin blade in the slot (1).
  2. Remove the battery (2) and discard in accordance with local regulations.
  3. Install a **new** battery (Panasonic CR2032 or equivalent) with the positive side up.
  4. Align the two halves of the fob. Snap the halves together.

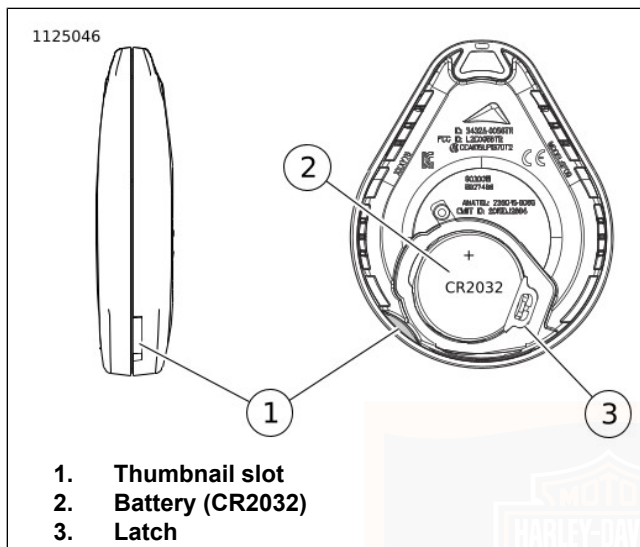

**Figure 22. Replace Fob Battery**

### **Riding with a Fob**

- Always carry the fob when riding, loading, fueling, moving, parking or servicing the motorcycle.
- Do not leave the fob attached to the handlebars or store the fob in a luggage compartment. Unintentionally leaving the fob with the motorcycle when it is parked prevents the system from activating the alarm.

- Do not ride with the fob stored in a metal case or with the fob closer than 76 mm (3.0 in) to a mobile phone, PDA, display or other electronic device. Any electromagnetic interference may prevent the fob from disarming the system.
- For added security, always lock the fork and remove the key when parked. If the fob is within range and the motorcycle is unlocked, tampering with the motorcycle will not activate the alarm.

### **Riding without a Fob**

If the motorcycle is ridden without the fob in acceptable proximity, the odometer window temporarily displays "NO FOB." To restart a motorcycle without a fob, disarm the security system with the PIN.

### **PERSONAL IDENTIFICATION NUMBER (PIN)**

The personal identification number (PIN) is a number that can be used to disarm the security system. Use the PIN in case the assigned fob is misplaced, fails or if the fob cannot communicate with the motorcycle because of electromagnetic interference.

A PIN is a five-digit number (1-9, no zeros).

## Changing the PIN

The rider can change the PIN at any time. Refer to Table 24.

Table 24. Changing the PIN

STEP NO.	ACTION	WAIT FOR CONFIRMATION	NOTES
1	Select a 5-digit (1 thru 9) PIN and record on the wallet card from owner's manual.		
2	With an assigned fob present, turn the engine stop switch to <b>OFF</b> .		
3	Turn the ignition switch to <b>IGN</b> .		
4	Cycle the OFF/RUN switch twice: <b>RUN - OFF - RUN - OFF - RUN</b> .		
5	Press <b>left</b> turn signal switch <b>two times</b> .	ENTER PIN will scroll through the odometer window.	
6	Press <b>right</b> turn signal switch <b>one time</b> and release.	Turn signals will flash three times. Current PIN will appear in odometer. The first digit will be flashing.	
7	Enter first digit of new PIN by pressing and releasing the <b>left</b> turn signal switch until the selected digit appears.		
8	Press <b>right</b> turn signal switch <b>one time</b> and release.	The new digit will replace the current in odometer window.	
9	Enter second digit of selected PIN by pressing and releasing the <b>left</b> turn signal switch until the selected digit is present.		

**Table 24. Changing the PIN**

<b>STEP NO.</b>	<b>ACTION</b>	<b>WAIT FOR CONFIRMATION</b>	<b>NOTES</b>
10	Press <b>right</b> turn signal switch <b>one time</b> and release.	The new digit will replace the current in odometer window.	
11	Enter third digit of the selected PIN by pressing and releasing the <b>left</b> turn signal switch until the selected digit is present.		
12	Press <b>right</b> turn switch <b>one time</b> and release.	The new digit will replace the current in odometer window.	
13	Enter fourth digit of new PIN by pressing and releasing the <b>left</b> turn signal switch until the selected digit is present.		
14	Press <b>right</b> turn switch <b>one time</b> and release.	The new digit will replace the current in odometer window.	
15	Enter fifth digit of the new PIN by pressing and releasing the <b>left</b> turn signal switch until the selected digit is present.		
16	Press <b>right</b> turn switch <b>one time</b> and release.	The new digit will replace the current in odometer window.	
17	Turn the engine stop switch <b>OFF</b> , then turn the ignition switch to <b>OFF</b> .		Pushing the engine stop switch to <b>OFF</b> stores the new PIN in the module.

## SECURITY STATUS INDICATOR

See OPERATION > INDICATORS (Page 85). The security lamp in the speedometer face indicates the status of the security system.

- **Armed:** A lamp that blinks approximately every 3 seconds indicates that the system is armed.
- **Disarmed:** After the system disarms and the ignition is on, the lamp will remain illuminated for approximately four seconds and then turn off.
- **Service:** If the lamp remains lit continuously, see a Harley-Davidson dealer.

## ARMING AND DISARMING

### Arming

When the motorcycle is parked and the ignition is turned to OFF or ACCESSORY, the security system arms automatically within five seconds if no motion is detected. Even when the fob is present, the system arms.

On arming, the turn signals flash twice and the optional siren chirps twice if the siren is in the chirp mode. While armed, the indicator lamp in the speedometer face flashes every three seconds.

### NOTE

**Models with optional siren:** The system must be in the chirp mode for the siren to chirp on arming or disarming. See SECURITY SYSTEM > SIREN CHIRP MODE (CONFIRMATION) (Page 70).

### Disarming

With the fob present, the rider may ride or move the motorcycle for parking, storage or service without setting off the alarm. Disarming is automatic as long as the fob is within range.

**Fob:** An armed security system is automatically disarmed when the fob is present and the motorcycle is moved or the ignition switch is turned to IGNITION or ACCESSORY. The range of the fob is 2 m (5 ft).

When the system disarms, the optional siren chirps once and the security indicator lamp illuminates for a solid four seconds and then turns off.

**Personal identification number (PIN):** If the fob is misplaced or if the present fob fails to communicate, the system can be disarmed with the personal identification number (PIN). Refer to Table 25.



## Disarming with a PIN

Disarm the security system manually using the PIN if the fob is lost, the fob battery is discharged or if where you parked there is a strong electromagnetic interference.

Do not turn handlebars, straddle seat or lift motorcycle off the jiffy stand. During a PIN disarm, if the security system detects motorcycle motion the system will activate the alarm.

### NOTE

- If a mistake is made while entering PIN, turn the ignition switch to OFF before entering the last digit and then start the procedure from the beginning.
- If the procedure fails to disarm the security system, wait two minutes before attempting another PIN disarm.
- The security system remains disarmed until the ignition is turned to OFF.
- At any time during a PIN disarm if the fob is brought within range, the security system disarms as the module receives the coded signal from the fob.

**Table 25. Entering a PIN to Disarm Security System**

STEP NO.	ACTION	WAIT FOR CONFIRMATION	NOTES
1	If necessary, verify the current 5-digit PIN.		Should be recorded.
2	Turn ignition to <b>IGN</b> .	If armed, the odometer window display will read: ENTER PIN and the security lamp will be flashing at a fast rate. The headlight will not be on.	
3	Press and release the left turn signal switch.	In the odometer window, a flashing 1 will appear.	
4	Advance the digit by tapping the left turn signal until the odometer window displays the first digit of the PIN.	The first digit in the odometer will be the first digit in the PIN.	

**Table 25. Entering a PIN to Disarm Security System**

STEP NO.	ACTION	WAIT FOR CONFIRMATION	NOTES
5	Press <b>right</b> turn switch <b>1 time</b> .	The first digit is stored and the next digit will flash.	Serves as enter key.
6	Advance the second digit using the left turn switch until the digit reaches the second digit of the PIN.	The second digit in the odometer will be the second digit in the PIN.	
7	Press <b>right</b> turn switch <b>1 time</b> .	The second digit is stored and the next dash will flash.	Serves as enter key.
8	Advance the third digit using the left turn switch until it reaches the third digit of the PIN.	The third digit in the odometer will be the third digit in the PIN.	
9	Press <b>right</b> turn switch <b>1 time</b> .	The third digit is stored and the next dash will flash.	Serves as enter key.
10	Advance the fourth digit using the left turn switch until it reaches the fourth digit of the PIN.	The fourth digit in the odometer will be the fourth digit in the PIN.	
11	Press <b>right</b> turn switch <b>1 time</b> .	The fourth digit is stored and the next dash will flash.	Serves as enter key.
12	Advance the fifth digit using the left turn switch until it reaches the fifth digit of the PIN.	The fifth digit in the odometer will be the fifth digit in the PIN.	
13	Press <b>right</b> turn switch <b>1 time</b> .	The fifth digit is stored. The security system indicator lamp stops blinking.	Security System is disarmed.

## ALARM

### Ignition Disabled

When the fob is not present and the system is armed, if the ignition switch is turned to IGNITION or ACCESSORY, the security lamp will flash at a fast rate and the odometer window display will scroll "ENTeR PIN". The headlamp will not turn on.

After approximately 10 seconds, if the system does not receive a left turn signal switch input, the display will go blank. The ignition system will remain disabled until the fob is present or the current PIN is entered.

### Warnings

Once armed, if the motorcycle is moved and the fob is not present, the alarm will warn the operator with three alternate flashes of the turn signals and a chirp of the optional siren.

Within four seconds, if no further motion is detected and/or the ignition is turned to OFF, the system will remain armed without activating the alarm.

If the motorcycle motion continues, the system will issue a second warning four seconds after the first.

### NOTE

*During warnings and alarms, the starter motor and the ignition circuits are disabled.*

### Alarm Activation

If the security system is still detecting motion and/or if the ignition has not been turned back to OFF after a second warning, the system will activate the alarm.

When activated, the security system will:

- Alternately flash the four turn signals.
- Sound the optional siren.

**Duration:** The alarm will stop within 30 seconds and if no motion is detected, the alarm will not restart.

However, if motorcycle motion continues, the system will repeat the 30 second alarm and recheck for motion. The alarm will repeat this 30 second alarm cycle for five minutes (10 cycles) or until the alarm is deactivated.

### NOTE

*The alarm will also activate the LED, vibration or audible modes of a Harley-Davidson security pager. A pager can operate either in silent or in combination with an optional siren. The range of a pager can be up to 0.8 km (0.5 mi). See a Harley-Davidson dealer for details.*

## Deactivate Alarm

- **Key fob:** Bring the fob to within 1.5 m (5 ft) of the motorcycle. After the module identifies that the fob is present, the system will terminate the alarm.
- **PIN entry:** Enter the PIN to deactivate the alarm. If an error is made while entering the PIN, wait until the alarm is between cycles to enter the PIN.

## SIREN CHIRP MODE (CONFIRMATION)

Vehicles with optional siren can be set to chirp upon arming and disarming.

### Chirp Mode

In chirp mode, the siren sounds two chirps when arming, and a single chirp when disarming.

### Chirpless Mode

In chirpless mode, the siren does not chirp on arming or disarming.

The siren still provides warning chirps and sounds the alarm if the motorcycle is moved without the fob present.

## Switching Modes

Perform the following to switch between chirp and chirpless modes.

1. With security fob present, set the ignition switch to IGNITION.
2. Count two seconds, set the ignition switch to OFF.
3. When the security lamp turns off (but before the turn signals flash twice), immediately set the ignition switch to IGNITION.
4. Count two seconds, immediately set the ignition switch to OFF.
5. When the security lamp turns off (but before the turn signals flash twice), immediately set the ignition switch to IGNITION. The system changes mode. The siren chirps or remains silent accordingly.

## TRANSPORT MODE

When transporting the motorcycle, place the system in the transport mode. Otherwise, the alarm activated by motion detection can discharge the battery.

In the transport mode, the security system is armed without enabling the motion detector for one ignition cycle. This allows the vehicle to be picked up and moved in an armed state.

However, any attempt to start the engine when the fob is not within range will trigger the alarm.

## To Enter Transport Mode

1. With an assigned fob within range, turn the ignition switch to IGNITION.
2. Before the security lamp goes out, turn the ignition switch to OFF.
3. Within three seconds, simultaneously press both the left and the right turn signal switches.
4. After the turn signals flash once, the system enters the transport mode. With the fob removed, the motorcycle can be moved without setting off the alarm.

### NOTE

**Models with fairing:** When transport mode is enabled the odometer window will display *TSPORT MODE ACTIVE* message.

## To Exit Transport Mode

With the fob present, turn the ignition switch to IGNITION to disarm the system.

# STORAGE AND SERVICE DEPARTMENTS

## Long-Term Parking

To maintain arming, store the fob beyond the range of the antenna. The antenna range is approximately 1.5 m (5 ft). Have the fob present before moving parked motorcycle.

If the motorcycle will not be operated for several months, such as during the winter season, see AFTER RIDING > STORING MOTORCYCLE (Page 148).

## Service Departments

When the motorcycle is left at a Harley-Davidson dealer, there are two options:

1. Leave an assigned fob with the dealer.
2. To maintain possession of the fob, ask the dealer to disable the system for service (service mode) before leaving the dealership. Once service mode is active, the vehicle can be operated without an assigned fob present. To maintain the service mode, the assigned fobs must be kept out of range. If the fob appears in range, the service mode is cancelled.

## DISCONNECTING POWER

### All Models

When disconnecting the battery or removing the main fuse, perform the following steps.

1. Verify that the fob is present.
2. Turn the ignition switch to IGNITION.
3. Pull the main fuse from its holder.
4. Disconnect the battery if needed.

#### NOTE

*Place the ignition switch in the OFF position before installing the main fuse.*

## TROUBLESHOOTING

### Security Lamp

If the security lamp stays illuminated while riding, see a Harley-Davidson dealer.

### Fob

If the security system continues to actuate warnings and alarms with the fob present, check for:

1. **Electromagnetic interference:** Other electronic devices, power lines, or other electromagnetic sources can cause the security system to operate inconsistently.
  - a. Verify that the fob is not in a metal enclosure or within 76 mm (3 in) of any other electronic devices.
  - b. Place the fob on the seat and set the ignition switch to IGNITION. After the system disarms, return the fob to a convenient location.
  - c. Move motorcycle at least 5 m (15 ft) from the spot of interference.
2. **Discharged fob battery:** Use the PIN to disarm the system. Replace the battery. See SECURITY SYSTEM > SECURITY SYSTEM FOB (Page 61).

#### NOTE

**Models with fairing:** When fob battery is low the odometer window will display FOB LOW BATT message.

3. **Damaged fob:** Use the PIN to disarm the motorcycle. Replacement fobs are available for purchase from a Harley-Davidson dealer.

## Siren (If equipped)

- If the siren does not chirp two or three times on a valid arming command from the security module, the siren is either in the Chirpless Mode, not connected, not working, or the siren wiring was opened or shorted while the siren was disarmed.
- If the siren is armed and the internal siren battery is dead, shorted, disconnected, or has been charging for a period longer than 24 hours, the siren will respond with three chirps on arming instead of two.
- The internal siren battery may not charge if the vehicle's battery is less than 12.5 volts.
- If the siren enters the self-driven mode where it is powered from the siren's internal 9 volt battery, the turn signal lamps may or may not alternately flash. If the security module activates the siren, the turn signal lamps will alternately flash. If the siren has been armed and a security event occurs, and the siren is in self-driven mode, the siren will alarm 20-30 seconds and then turn off for 5-10 seconds. This alarm cycle will be repeated ten times if the siren is in the self-driven mode.



## NOTES

---





## IGNITION SWITCH

### ⚠ WARNING

The automatic-on headlamp feature provides increased visibility of the rider to other motorists. Be sure headlamp is on at all times. Poor visibility of rider to other motorists can result in death or serious injury. (00030b)

See YOUR OWNER'S MANUAL section. Be sure to record all your key numbers in the space provided at the front of this book.

See Figure 23. The ignition switch controls electrical functions of the motorcycle.

### ⚠ WARNING

Do not operate vehicle with forks locked. Locking the forks restricts the vehicle's turning ability, which could result in death or serious injury. (00035a)

### NOTICE

Protect your vehicle against theft. Failure to lock the motorcycle after parking could result in theft and/or equipment damage. (00151b)

### NOTICE

Do not lubricate barrel locks with petroleum based lubricants or graphite. Inoperative locks may result. (00152a)

### NOTE

- *Harley-Davidson recommends removing key from ignition/fork lock before operating motorcycle. If you do not remove key, it can fall out during operation.*
- *ACCESSORY - Accessories and hazard warning flasher can be turned on. Instrument lamps are on. Brake lamp and horn can be activated. Key may be removed.*
- *The lamps illuminate when the switch is in the IGNITION position, as required by law in some localities.*

AUTHORIZED  
SERVICE

**Table 26. Ignition Switch Positions**

MODEL	FUNCTION	LABEL	OPERATION
Without Fairing	Switch*	OFF	Ignition, lamps and accessories are off.
		ACCESSORY	Accessories are on. Hazard warning flashers can be left on. Instrument lamps are on. Brake lamp and horn can be activated.*
		IGNITION	Ignition, lamps and accessories are on.**
With Fairing	Key Lock	LOCK	Locks the switch in either the FORK LOCK or ACCESSORY position. Remove the key for security.
		UNLOCK	Unlocks the switch. Unlocked, the switch can be rotated to any of the 4 positions. To prevent loss when riding, remove the key.
	Switch	FORK LOCK	Locks fork in left position to discourage unauthorized use of vehicle when parked. See OPERATION > FORK LOCK (Page 78) for operation.
		OFF	When switch is in OFF position, the ignition, lamps and accessories are off.
		IGNITION	When the switch is in the IGNITION position, the motorcycle can be started and all lamps and accessories will operate.
		ACCESSORY	In ACCESSORY, the instrument lamps and accessories operate but the engine can not be started. Brake lamp and horn can be activated. The 4-way hazard flashers operate. The switch can be locked in ACCESSORY.

\* Switch lock is under the switch cover. Insert key and turn key counterclockwise to lock, clockwise to unlock. Key may be removed in any position.

\*\* International models: Position lamp and tail lamp are also on.

SERVICE

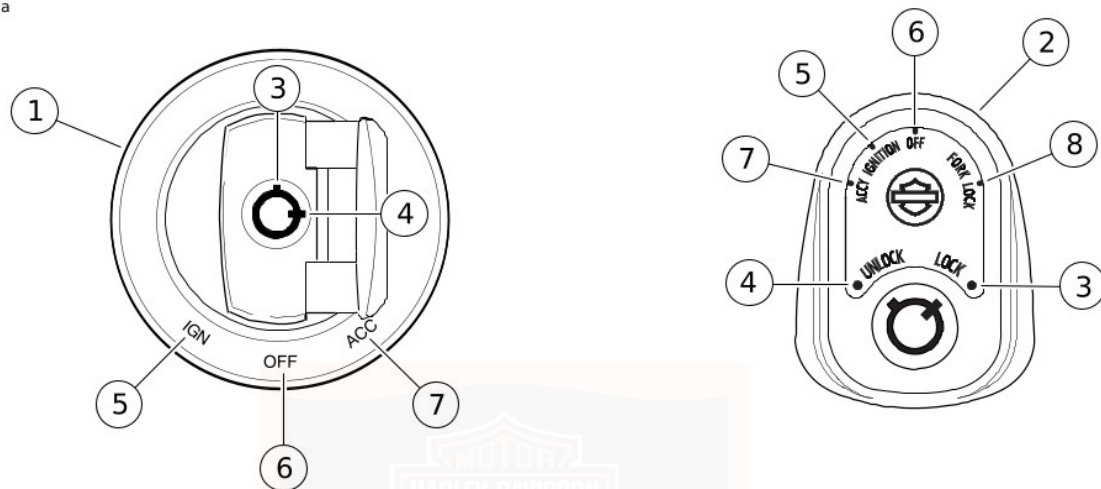


Figure 23. Ignition Switch

## FORK LOCK

### NOTICE

**Protect your vehicle against theft. Failure to lock the motorcycle after parking could result in theft and/or equipment damage. (00151b)**

Using the fork lock immediately after parking your motorcycle will discourage unauthorized use or theft.

**Without fairing:** See Figure 24. The fork lock is at the top of the steering head, behind the headlamp nacelle and inset in the handlebar clamp shroud.

**With fairing:** See Figure 23. The fork lock is integrated into the ignition switch.

### NOTE

*Do not force the switch into the locked position or switch damage can occur.*

### ⚠ WARNING

**Do not operate vehicle with forks locked. Locking the forks restricts the vehicle's turning ability, which could result in death or serious injury. (00035a)**

## To Lock Fork: Without fairing

1. Turn fork to full left position.
2. See Figure 24. Insert key and turn key counterclockwise to LOCK position. Remove key.
3. To unlock fork, insert key and turn clockwise to UNLOCK position. Remove key.
4. Check steering for proper operation by turning the handlebars through the full operating range. Handlebars should turn smoothly without binding.

## To Lock Fork: With fairing

1. Turn fork to full left position.
2. See Figure 23. Turn switch knob to FORK LOCK. Push knob down.
3. Insert key and turn key to LOCK position. Remove key.
4. To unlock fork, insert key and turn to UNLOCK position. Remove key. Rotate switch knob out from the FORK LOCK position.
5. Check steering for proper operation by turning the handlebars through the full operating range. Handlebars should turn smoothly without binding.

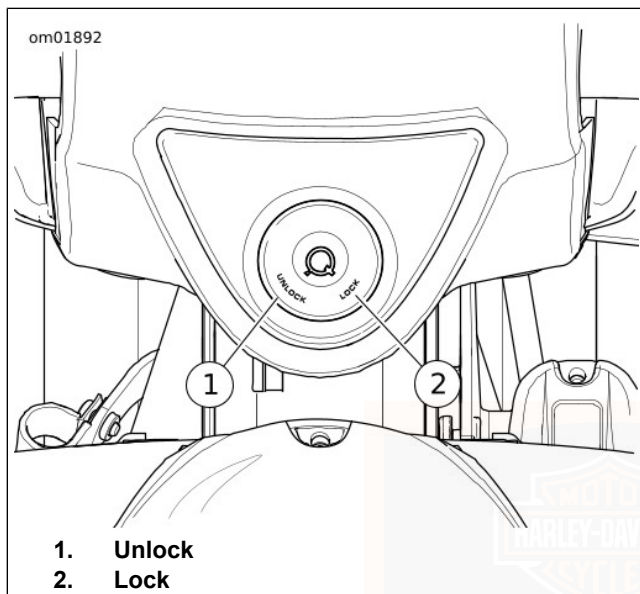


Figure 24. Fork Lock: Without Fairing

## GENERAL: CONTROLS AND INDICATORS

### ▲ WARNING

Identify and understand the specific features of your vehicle. Failure to understand how these features affect the vehicle's operation can lead to an accident, which could result in death or serious injury. (00043b)

Some features explained are unique to certain models. These features may be available as accessories for your Harley-Davidson motorcycle. See a Harley-Davidson dealer for a complete list of accessories that will fit your specific motorcycle.

## CONTROLS, INSTRUMENTS AND SWITCHES

### Clutch Hand Lever


### ▲ WARNING

Do not position fingers between hand control lever and handlebar grip. Improper hand positioning can impair control lever operation and cause loss of vehicle control, which could result in death or serious injury. (00032a)

See Figure 4. The clutch hand lever is operated with the fingers of the left hand. See OPERATION > SHIFTING GEARS (Page 123).

## **Gear Shift Lever**

See Figure 25. The gear shift lever is operated with the left foot. Neutral is found between first and second gear in the six speed shift pattern. See OPERATION > SHIFTING GEARS (Page 123).

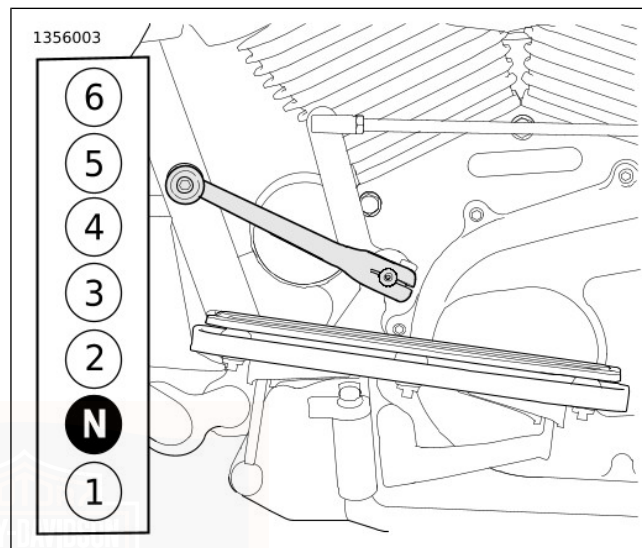

**Figure 25. Gear Shift Lever and Shift Pattern**

## **Left-Hand Control Module**

See Figure 4. Operate the switches on the left hand control module with the thumb of the left hand. See OPERATION > LEFT HAND CONTROL SWITCHES (Page 89).

## Speedometer/Odometer

See Figure 4. The current road speed is displayed in the speedometer. The accumulated mileage and individual trip mileage is displayed in the odometer window in the face of the speedometer. See OPERATION > INSTRUMENTS (Page 81).

## Right-Hand Control Module

See Figure 4. Operate the switches on the right hand control module with the thumb of the right hand. See OPERATION > RIGHT HAND CONTROL SWITCHES (Page 92).

## Brakes

### ⚠ WARNING

**Do not position fingers between hand control lever and handlebar grip. Improper hand positioning can impair control lever operation and cause loss of vehicle control, which could result in death or serious injury. (00032a)**

**Front brake lever:** See Figure 4. The front brake lever controls the front brake. Operate the hand lever with the fingers of the right hand.

**Rear brake pedal:** See Figure 5. The rear brake pedal activates the rear wheel brake.

Apply brakes evenly to prevent wheels from locking up. A balance between rear and front brake is best.

## Throttle Twist Grip

**Accelerate:** See Figure 4. Slowly twist throttle twist grip backward (toward rear of motorcycle) to open the throttle.

**Decelerate:** Slowly twist throttle control grip forward (toward the front) to close the throttle.

## OFF/RUN Switch

### NOTE

*The headlamp and tail lamps operate when the switch is in the RUN position.*

See Figure 30. To start the engine, see OPERATION > STARTING THE ENGINE (Page 114).

## INSTRUMENTS

### Speedometer

### ⚠ WARNING

**Travel at speeds appropriate for road and conditions and never travel faster than posted speed limit. Excessive speed can cause loss of vehicle control, which could result in death or serious injury. (00008a)**

**With fairing:** See Figure 26.

**Without fairing:** See Figure 27. The speedometer registers forward speed in miles per hour (U.S.) or kilometers per hour (international).

Instrument backlighting activates after a slight delay. Changes to ambient lighting, such as going through a tunnel, may briefly change backlighting.

## Tachometer

### NOTICE

See OPERATING RECOMMENDATIONS section. Do not operate the engine above maximum safe RPM as shown under OPERATION (red zone on tachometer). Lower the RPM by upshifting to a higher gear or reducing the amount of throttle. Failure to lower RPM may cause equipment damage. (00159a)

**With fairing:** See Figure 26. The tachometer measures the engine speed in revolutions per minute (rpm x 100).

**Without fairing:** See Figure 27. A digital tachometer is displayed in the odometer window.

## Fuel Gauge

The fuel gauge indicates the approximate amount of fuel in the fuel tank.

**Without fairing:** The fuel gauge is on the left side of the fuel tank. See Figure 28.

**With fairing:** See Figure 26. The fuel gauge is on the instrument panel.

## Voltmeter

**With fairing:** See Figure 26. The voltmeter indicates the measured electrical system voltage. With the engine running above 1500 rpm, the voltmeter should register 13.0-14.5 volts with battery at full charge.


## Vehicle Information: With fairing


More information can be displayed within the infotainment system. See OPERATION > BOOM! BOX INFOTAINMENT SYSTEM (Page 106).



- |   |                                  |
|---|----------------------------------|
| 1. Fuel gauge                           | 15. Auxiliary/fog lamp indicator |
| 2. Low fuel                             | 16. Reverse                      |
| 3. Speedometer                          | 17. Headlamp high beam           |
| 4. Traction control                     | 18. Not used                     |
| 5. Security/Fault indicator             | 19. Cruise control               |
| 6. Not used                             | 20. Check engine                 |
| 7. Tachometer                           | 21. Neutral                      |
| 8. Engine coolant temperature           | 22. Gear indicator               |
| 9. Light sensor (not an indicator)      | 23. Odometer window              |
| 10. Battery discharge                   | 24. Oil pressure                 |
| 11. Voltmeter                           | 25. Not used                     |
| 12. Right turn signal indicator         | 26. Not used                     |
| 13. Parking brake                       | 27. Left turn signal indicator   |
| 14. ABS icon (km/h ABS icon also shown) |                                  |

**Figure 26. Indicator Lamps: With Fairing**

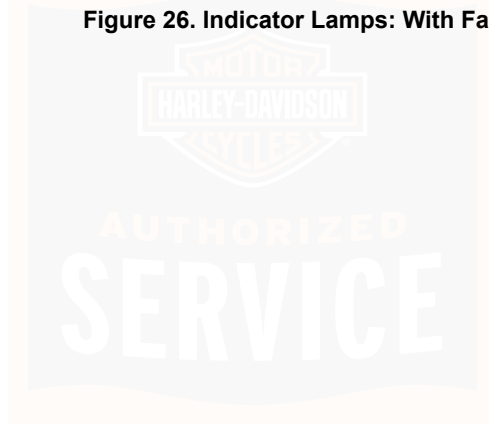

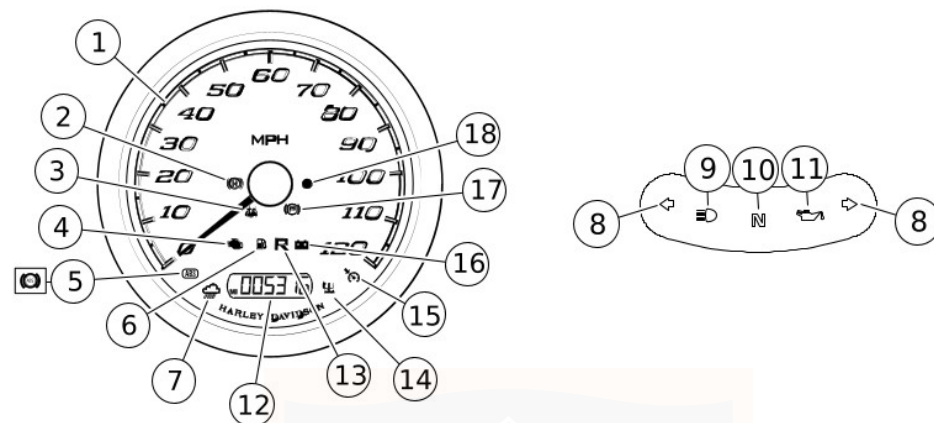

- |  |                              |
|--|------------------------------|
| 1. Speedometer                         | 10. Neutral                  |
| 2. Not used                            | 11. Oil pressure             |
| 3. Traction control                    | 12. Odometer window          |
| 4. Check engine                        | 13. Reverse                  |
| 5. ABS icon (km/h ABS icon also shown) | 14. Not used                 |
| 6. Low fuel                            | 15. Cruise control           |
| 7. Not used                            | 16. Battery discharge        |
| 8. Turn signal indicator               | 17. Parking brake            |
| 9. Headlamp high beam                  | 18. Security/Fault indicator |

Figure 27. Indicator Lamps: Without Fairing

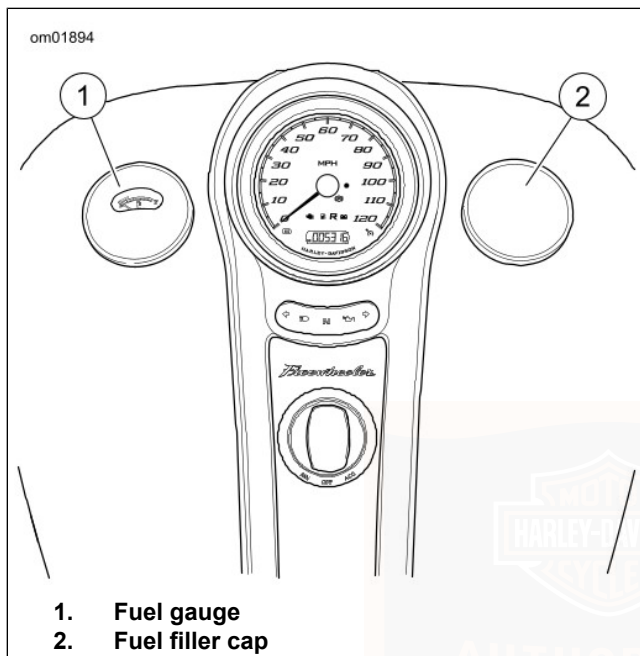


Figure 28. Fuel Tank: Without Fairing  
**INDICATORS**

**NOTE**

*Some indicator lamps may not be on all models.*

## Check Engine Lamp

See OPERATION > INSTRUMENTS (Page 81). The check engine lamp indicates the condition of the engine/engine management system.

The check engine lamp normally comes on when the motorcycle is first turned on. During this time, the engine management system runs a series of self-diagnostics.

If the engine lamp does not turn off after starting the engine or comes on at any other time, see a Harley-Davidson dealer.

## Low Fuel Lamp

See OPERATION > INSTRUMENTS (Page 81). The low fuel warning lamp indicates when the gasoline in the tank reaches the low fuel level (approximate). Refer to Table 13 for the low fuel level. See OPERATION > ODOMETER WINDOW DISPLAYS (Page 96) for fuel range features.

**Flashing:** If the low fuel lamp flashes continuously or remains on after filling the fuel tank, see a Harley-Davidson dealer.

## Battery Discharge Lamp

See OPERATION > INSTRUMENTS (Page 81). The battery discharge lamp indicates overcharging or undercharging of the battery. Refer to SERVICE PROCEDURES > BATTERY MAINTENANCE (Page 189).

## Security/Fault indicator Lamp

See OPERATION > INSTRUMENTS (Page 81). The security lamp displays the status of the security system and electrical self-diagnostics for the motorcycle. Refer to SECURITY SYSTEM > SECURITY SYSTEM (Page 61) for security system operation.

**Flashing:** The security system is armed.

**Solid (security system armed):** The alarm has been activated.

**Solid (security system disarmed):** If lamp remains on this indicates a fault, see a Harley-Davidson dealer.

## Turn Signal Indicator Lamps

**Flashing:** A turn signal is activated. When the 4-way hazard flashers are operating, both turn indicators flash simultaneously.

**Rapid flashing:** A turn signal bulb is not operating. Exercise caution and use hand signals. Replace inoperative components at earliest opportunity.

## Headlamp High Beam Lamp

See OPERATION > INSTRUMENTS (Page 81). The headlamp high beam lamp is on when the high beam or flash to pass switch is activated.

## Neutral Lamp

See OPERATION > INSTRUMENTS (Page 81). The neutral lamp is on when the transmission is in neutral and reverse is not enabled. The neutral lamp turns off when the reverse lamp turns on.

## Cruise Control Lamp

**Off:** Cruise control is not enabled.

**Orange:** Cruise control is enabled. Cruising speed is not set or has been disengaged.

**Green:** Cruising speed is set.

## Auxiliary/Fog Lamp Indicator Lamp: Tri Glide Ultra (FLHTCUTG) DOMESTIC

The auxiliary/fog lamp indicator is on when the auxiliary/fog lamps are turned on.

## Gear Indicator: Tri Glide Ultra (FLHTCUTG)

See OPERATION > INSTRUMENTS (Page 81). On equipped models, the currently selected gear (1-6) is displayed in the odometer window. The gear indicator is calculated from the vehicle speed and engine speed. The gear indicator remains blank when the transmission is in neutral, the clutch lever is pulled in or the vehicle is not moving.

The gear indicator may be momentarily inaccurate depending on rider clutch use characteristics and clutch wear. This can occur if the clutch is allowed to slip either due to excessive wear, misadjusted clutch or if the operator rides the clutch.

## ABS Lamp

### ▲ WARNING

**If ABS lamp continues flashing at speeds greater than 5 km/h (3 mph) or remains on continuously, the ABS is not operating. The standard brake system is operational, but wheel lock up can occur. Contact a Harley-Davidson Dealer to have ABS repaired. A locked wheel will skid and can cause loss of vehicle control, which could result in death or serious injury. (00361b)**

**Flashing:** See OPERATION > INSTRUMENTS (Page 81). The ABS lamp begins flashing when the vehicle is turned on. The flashing lamp indicates that the system is in self-diagnosis mode. It continues to flash until motorcycle speed exceeds 5 km/h (3 mph). ABS is not operational until the lamp turns off.

**Solid:** Continuous illumination of the lamp indicates an ABS fault. ABS is disabled and the brakes are operating as non-ABS brakes. See a Harley-Davidson dealer for service.

## Reverse Lamp

See OPERATION > INSTRUMENTS (Page 81). The reverse lamp indicates that reverse is enabled. See OPERATION > REVERSE OPERATION (Page 126) for reverse operation.

## Parking Brake Lamp

See OPERATION > INSTRUMENTS (Page 81). The parking brake indicator lamp turns on when the parking brake is applied. See BEFORE RIDING > PARKING BRAKE (Page 59) for parking brake operation.

## Engine Coolant Temperature Lamp: Tri Glide Ultra (FLHTCUTG)

### NOTICE

**If the engine coolant temperature indicator lamp remains lit, always check the coolant level. If the coolant level is normal and the lamp is still lit, stop the engine at once and do not ride further until the trouble is located and the necessary repairs are made. Failure to do so may result in engine damage. (00158a)**

### **▲ WARNING**

**Do not loosen or remove pressure cap when cooling system is hot. The cooling system is under pressure and hot coolant and steam can escape from pressure cap, which could cause severe burns. Allow motorcycle to cool before servicing the cooling system. (00091c)**

On Twin-Cooled vehicles, the engine coolant temperature lamp is on when the coolant has exceeded threshold temperature.

Check and add coolant as necessary. See MAINTENANCE AND LUBRICATION > COOLING SYSTEM (Page 178). For other possible coolant system issues, see MAINTENANCE AND LUBRICATION > COOLING SYSTEM (Page 178).

If coolant level is sufficient and the lamp remains on, stop the engine immediately and see a Harley-Davidson dealer for service.

## **Oil Pressure Lamp**

### **NOTICE**

**If the oil pressure indicator lamp remains lit, always check the oil supply first. If the oil supply is normal and the lamp is still lit, stop the engine at once and do not ride further until the trouble is located and the necessary repairs are made. Failure to do so may result in engine damage. (00157a)**

See OPERATION > INSTRUMENTS (Page 81). The oil pressure lamp turns on when the ignition is turned on. The lamp remains on until the engine is started.

If the lamp is on while the engine is running, sufficient oil is not circulating through the engine.

Check and add engine oil as necessary. See MAINTENANCE AND LUBRICATION > CHECK ENGINE OIL LEVEL (Page 156). For other possible causes, see TROUBLESHOOTING > ENGINE (Page 213).

If the engine oil level is sufficient and the lamp remains on, stop the engine immediately and see a Harley-Davidson dealer for service.

## **Traction Control Lamp**

**Solid:** Traction control has been turned off.

**Flashing:** Traction control system active intervention.

**Off:** Traction control system is on.

**Solid with Security/Fault indicator lamp On:** Continuous illumination of the lamp with the Security/Fault indicator lamp indicates a traction control fault. Traction control is disabled and the motorcycle is operating as traction control turned off. See a Harley-Davidson dealer for service.

## LEFT HAND CONTROL SWITCHES

### Trigger Switch

See Figure 29. **Vehicle off:** Press the trigger switch (1) to display the accumulated mileage in the odometer.

**Vehicle in accessory/ignition mode:** Press the trigger switch to cycle through the odometer functions Refer to Table 27.

### High Beam

See Figure 29. Press the high beam switch (2) to activate the high beam. The (blue) high beam indicator lamp is lit when the high beam is on. Refer to Table 27.

### Low Beam/Flash to Pass

**Low beam:** See Figure 29. Press the bottom of the switch to (3) activate the low beam.

**Flash to pass:** When the low beam switch is on, press and release the flash to pass switch (3) to flash the high beam before passing another vehicle. The high beam indicator lamp on the instrument cluster is illuminated as long as the flash to pass switch is pressed.

When in accessory, press the flash to pass switch to activate the headlamp. Refer to Table 27.

### Voice Recognition Switch

See Figure 29. The voice recognition switch (4) activates the voice recognition features on equipped vehicles. With a headset connected, press the voice command switch. The radio shows a list of available commands. Speak the desired command into the headset microphone. See the BOOM! BOX OWNER'S MANUAL.

### Cruise Control Switch

See Figure 29. The CRUISE/SET/RESUME switch (5) automatically regulates the speed of the vehicle. See OPERATION > CRUISE CONTROL (Page 101) for detailed operation. Refer to Table 27

**CRUISE:** Press the CRUISE switch straight in to enable cruise control. The cruise control indicator lights orange. Pressing the CRUISE switch again turns off cruise control

**SET/-:** With cruise control enabled, press SET/- to set the cruising speed. The cruise control indicator lights green. While at cruising speed, press SET/- to decrease the regulated speed.

**RESUME/+:** If cruise control is disengaged (such as a braking event), press RESUME/+ to resume the previous cruising speed. While at cruising speed, press RESUME/+ to increase speed.

## HOME/VOLUME/PREVIOUS/NEXT Switch

See Figure 29. The HOME/VOLUME/PREVIOUS/NEXT (6) five-way switch operates radio features on equipped vehicles. See the BOOM! BOX OWNER'S MANUAL.

**HOME:** Press the HOME switch straight in to transition to the HOME screen on the radio.

**VOLUME:** Press the switch up to increase volume or down to decrease volume.

**PREVIOUS/NEXT:** Press the switch to the left or right to seek up/down for a radio station or to select the previous/next media file.

## Left Turn Signal

**Activate:** See Figure 29. Press the left turn signal switch (7) to activate the left turn signal. Refer to Table 27.

## Cancel:

**Manual Operation:** Press the left turn signal switch to cancel the right turn signal.

**Automatic Operation:** The turn signal lamps automatically cancel when a full turn has been detected based on speed, acceleration and turn completion.

The lamps also cancel if the turn signal has been activated for a prolonged period (20 flashes) while the motorcycle speed is greater than 7 mph (11 km/h). If the motorcycle is stopped or moving slower than this speed, the turn signal continues flashing.

### NOTE

*Front turn signal lamps also function as running lamps. This feature may not be available in all markets.*

## Horn

See Figure 29. The horn is operated by pressing the horn switch (8). The horn can be activated for up to 10 seconds at a time. If the horn switch is held for a longer period, the horn automatically deactivates. Refer to Table 27.

## Traction Control Switch

See Figure 29. The traction control switch (9) activates and deactivates the traction control system. Refer to Table 27.




**Disable:** Press switch for 1 second with engine running and vehicle stopped.

**Enable:** Press switch at anytime to resume traction control operation.



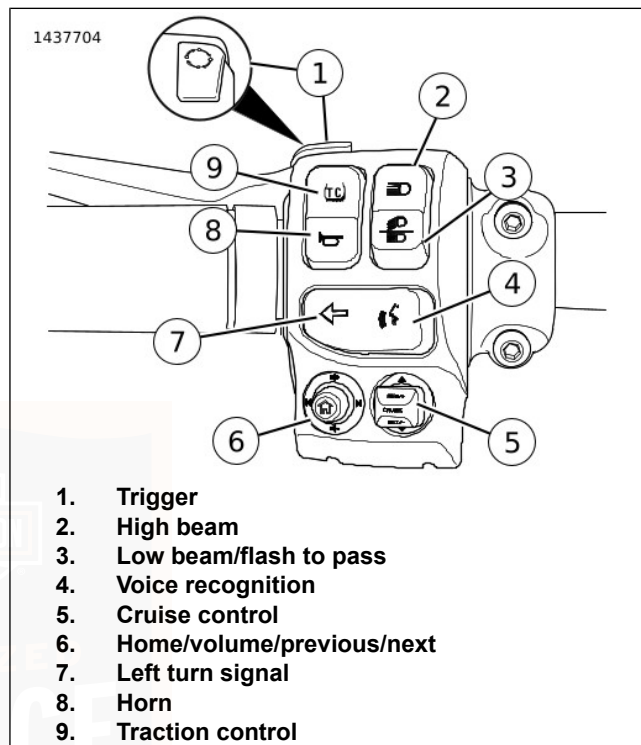


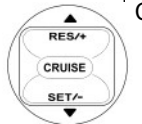
**NOTE**

*Traction control is automatically enabled at each ignition start cycle.*







**Figure 29. Left Hand Switch Module (typical)**

**Table 27. Left-Hand Control Switches**

SWITCH	NAME	FUNCTION
	Trigger	Press the switch to alternate odometer displays.
	High beam	Press the switch to switch the headlamp to high beam.
	Low beam/ Flash to pass	Press the switch to switch the headlamp to low beam. Press and release to flash the high beam.
		In ACC, press to activate the headlamp.
	Voice recognition	Initiates a voice recognition session.
	Cruise control	Three-way switch, operates cruise control functions.

**Table 27. Left-Hand Control Switches**

SWITCH	NAME	FUNCTION
	Home/volume/ previous/next	Five-way switch, operates radio functions.
	Left turn	Press the switch to signal a left turn.
	Horn	Press the switch to sound the horn.
	Traction control	Press the switch to deactivate and activate traction control.

## RIGHT HAND CONTROL SWITCHES

### Hazard Warning 4-Way Flasher

See Figure 30. The hazard switch (1) is used to leave a stranded motorcycle in the 4-way flashing mode. With the flashers, the motorcycle can be left with the ignition off until assistance is found. Refer to Table 28.

1. With the OFF/RUN switch in the run position, press on the hazard warning triangle to activate the 4-way flashers.

**NOTE**

- *The fob must be present when turning on the 4-way flashers and when canceling the flashers.*
  - *The four-way flashers will operate when the vehicle is tipped over regardless of OFF/RUN switch position. See OPERATION > STARTING AFTER TIPOVER (Page 115).*
2. Turn OFF/RUN switch to the off position. The 4-way flashers continue for 2 hours or until cancelled by the rider.
  3. To cancel, turn the OFF/RUN switch to the run position. Press the warning triangle above the start switch.

## OFF

See Figure 30. Press the engine OFF/RUN switch to off (2) to shut off the engine. Refer to Table 28.

## RUN

See Figure 30. Push the engine OFF/RUN switch to run (3) to enable engine start and run. The engine OFF/RUN switch must be in the run position to start or operate the engine. Refer to Table 28.

## Right Turn Signal

### Activate:

See Figure 30. Press the right turn signal switch (4) to activate the right turn signal. Refer to Table 28.

### Cancel:

Manual Operation: Press the right turn signal switch to cancel the right turn signal.

Automatic Operation: The turn signal lamps automatically cancel when a full turn has been detected based on speed, acceleration and turn completion.

The lamps also cancel if the turn signal has been activated for a prolonged period (20 flashes) while the motorcycle speed is greater than 7 mph (11 km/h). If the motorcycle is stopped or moving slower than this speed, the turn signal continues flashing.

**NOTE**

*Front turn signal lamps also function as running lamps. This feature may not be available in all markets.*

## CURSOR/SELECT Switch

See Figure 30. The CURSOR/SELECT five-way switch (5) operates radio features on equipped vehicles. See the BOOM! BOX OWNER'S MANUAL. Refer to Table 28.

**SELECT:** Press the SELECT switch straight in to select or toggle a feature on the radio screen.

**CURSOR:** Press the switch in the desired direction to move the cursor or selection on the radio screen.

## Back switch

See Figure 30. The back switch (6) operates radio features on equipped vehicles. See the BOOM! BOX OWNER'S MANUAL. Refer to Table 28.

## Start/Reverse

### Start:

1. Turn ignition switch to IGNITION.
2. Figure 30. Switch the OFF/RUN switch to the run position (3). Shift the transmission to neutral. The neutral (green) indicator illuminates. See OPERATION > STARTING THE ENGINE (Page 114).
3. Press the start switch (7) to operate the starter motor. Refer to Table 28.


### NOTE

- When the starter is activated, the headlamp is momentarily turned off to reduce battery load.
- If the engine does not start, the starter motor runs for ten seconds and stops. Release the start switch. Press the start switch to try again. After several unsuccessful attempts to start the engine, see a Harley-Davidson dealer.

### Reverse:

The reverse control switch operates the electric reverse motor once the engine is running and transmission is in neutral. The reverse enable indicator is lit when reverse operation is enabled. See OPERATION > REVERSE OPERATION (Page 126) for detailed operation.

1172469

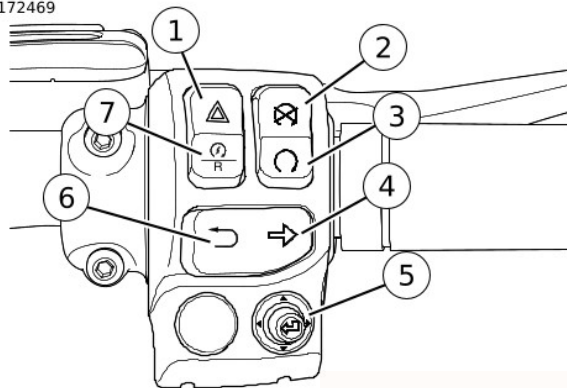




1. Hazard warning
2. Off
3. Run
4. Right turn signal
5. Cursor/Select
6. Back
7. Start/Reverse

Figure 30. Right Hand Switch Module

Table 28. Right Hand Control Switches

SWITCH	NAME	FUNCTION
	Hazard	Press to activate the 4-way flashers.
	Off	Press to stop the engine or to prevent the engine from starting.
	Run	Press to allow the engine to start.
	Right turn	Press to signal a right turn.
	Cursor/Select	Five-way switch, operates radio functions.

**Table 28. Right Hand Control Switches**

SWITCH	NAME	FUNCTION
	Back	Press to go back to previous screen on radio.
 	Start/Reverse	Press to start the engine. <b>Engine running:</b> Press to engage reverse.

## ODOMETER WINDOW DISPLAYS

### NOTICE

**Never attempt to tamper with or alter the vehicle odometer. This is illegal. Tampering with or altering a vehicle odometer may cause equipment damage. (00160a)**

#### NOTE

*The trigger switch is located on the front of the left hand control. See Figure 29.*

## Odometer

See Figure 31. The odometer shows the total accumulated mileage for the motorcycle. Press the trigger switch to cycle through different odometer functions. The time (Freewheeler®

(FLRT)) and odometer can be displayed while the motorcycle is turned off by pressing the trigger switch.

**Changing units (Freewheeler (FLRT)):** With odometer displayed, press and hold the trigger switch until the units change to MI or KM for motorcycles without an audio system. All odometer functions will display the selected units.

**Changing units (Tri Glide Ultra (FLHTCUTG)):** Change the settings in the radio to ENGLISH UNITS or METRIC. All radio and odometer functions will display the selected units. See BOOM! BOX OWNER'S MANUAL.

## Trip Odometers

The two trip odometers (A and B) display the total accumulated mileage since they were last reset. To check, press and release the trigger switch until the desired trip odometer (A or B) is displayed.

**Reset:** With the desired trip odometer displayed (A or B), press and hold the trigger switch until the selected trip odometer resets to zero.

## Fuel Range

The fuel range display shows the approximate mileage available with the amount of fuel left in the fuel tank. The range display is only updated when the vehicle is moving.

**Display Fuel Range:** With the ignition switch in the ACCESSORY or IGNITION position, press the trigger switch until fuel range is displayed. The fuel range is indicated by the letter "R" in the left side of the display. The calculated remaining distance (miles or kilometers) to empty is displayed, based on the amount of fuel in the tank.

**Low Fuel:** The fuel range is automatically displayed in the odometer window when the low fuel lamp is on. When the fuel range drops to 10 miles or 10 kilometers remaining, the odometer window displays "LO RNG" to indicate that the motorcycle is nearly out of fuel. Refuel as soon as possible. Refer to Table 13.

**Turn Off Automatic Low Fuel Popup:** With the fuel range displayed, hold the trigger switch until the fuel range flashes two times. To turn this feature back on, hold the trigger switch until the fuel range flashes once.

**Reset:** Resetting the low fuel warning lamp and fuel range requires sufficient fuel in the tank and an ignition cycle change (IGNITION-OFF-IGNITION).

Adding at least 7.6 L (2 USgal) of fuel allows the fuel range to update. The fuel range slowly updates over the next 48 km (30 mi) after refueling.

**Battery Reconnection and Initialization:** If the battery is disconnected and reconnected, the gauge requires

approximately a half tank of fuel to initialize fuel range functionality.

## Digital Tachometer: Freewheeler (FLRT)

Press and release the trigger switch until the digital tachometer is displayed. The odometer window briefly displays a "GEAR/RPM" message, then displays the current gear and engine speed (revolutions per minute).

## Time: Freewheeler (FLRT)

See Figure 32. On Freewheeler® (FLRT) models, the time is displayed in the odometer window. Perform the following steps to configure time.

1. Turn the ignition switch to ACCESSORY or IGNITION.
2. Repeatedly press the trigger switch until the time is displayed.
3. **12HR/24HR:** Press and hold the trigger switch until 12HR begins to flash. Press the trigger switch to toggle between 12 hour (12HR) or 24 hour (24HR) clock display.
4. **Hour:** Press and hold the trigger switch until the hour is flashing. Repeatedly press the trigger switch to advance hours to the correct time.
5. **Minutes:** Press and hold the trigger switch until the minutes begin flashing. Repeatedly press the trigger switch to advance minutes to the correct time.

6. **AM/PM:** If 12HR was selected, press and hold the trigger switch until AM/PM begins flashing. Press the trigger switch to toggle between AM or PM.

*NOTE*

*AM or PM will not appear in the regular time display. The motorcycle uses the selection for diagnostic purposes.*

7. Press and hold the trigger switch to save time settings.
8. Turn ignition switch OFF.

## Tip Indicator

### ⚠ WARNING


**If tip occurs, check all controls for proper operation. Restricted control movement can adversely affect the performance of the brakes, clutch or ability to shift, which could result in loss of vehicle control and death or serious injury. (00350a)**

See Figure 33. If the motorcycle is tipped over, the word "tiP" appears in the odometer window. The engine will not start until the tip condition is reset. See OPERATION > STARTING AFTER TIPOVER (Page 115) to reset.


## No Fob Message

If the motorcycle has a security system and is driven off leaving the fob behind, 'NO FOB' temporarily displays in the odometer window.

Without the fob, the motorcycle can only be started with a manual PIN entry to disarm the security system. See SECURITY SYSTEM > ARMING AND DISARMING (Page 66).

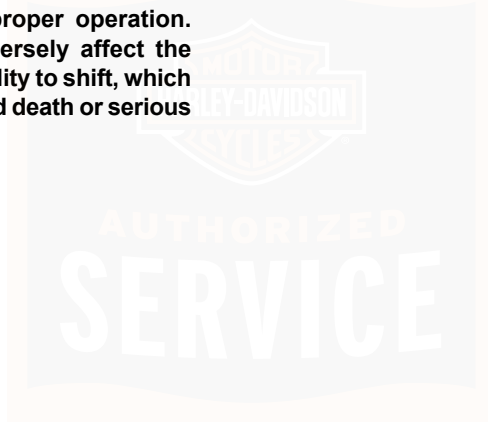




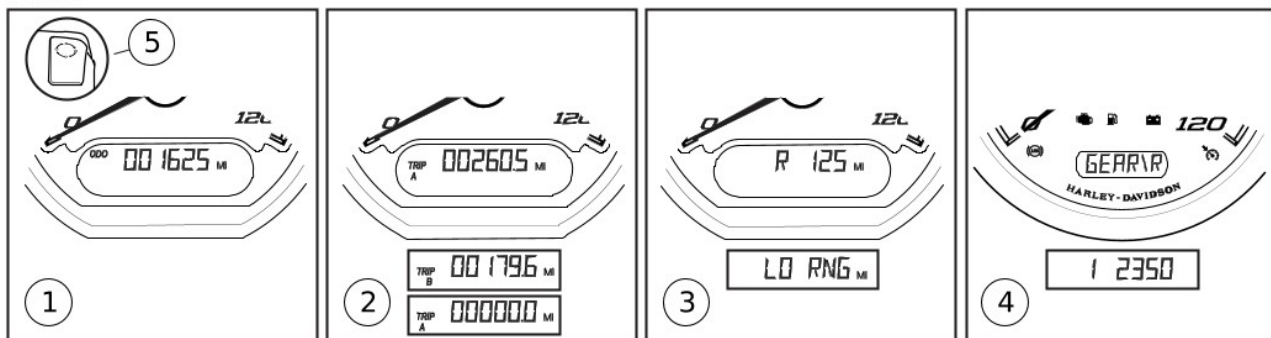

1. Odometer
2. Trip odometers (A, B, reset)
3. Fuel range (low fuel range)
4. Digital tachometer (Freewheeler® (FLRT))
5. Trigger switch (left hand control)

Figure 31. Odometer Functions

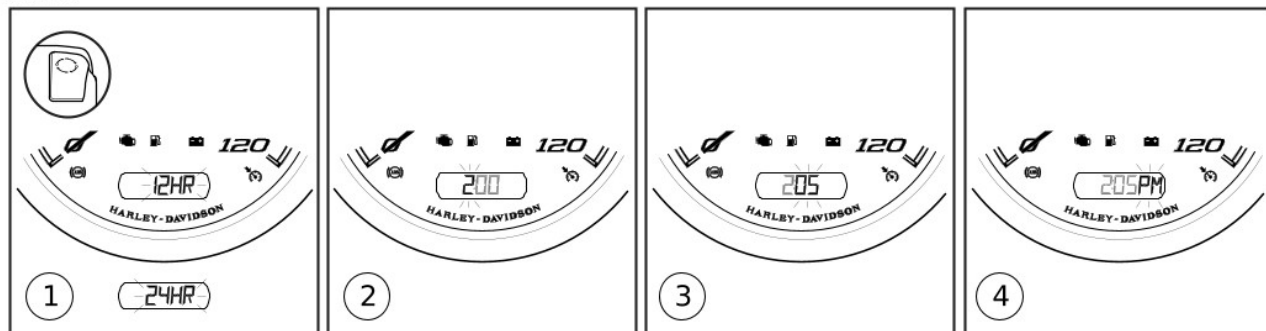

1. 12-hour/24-hour setting
2. Hours setting
3. Minutes setting
4. AM/PM setting (12-hour mode)

Figure 32. Setting Time: Freewheeler (FLRT)

om01682

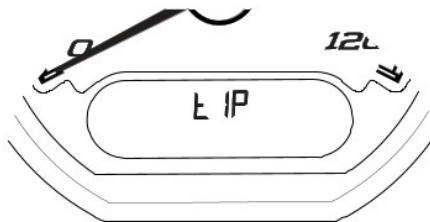


Figure 33. Tip Indicator

## CRUISE CONTROL

### ⚠ WARNING

Do not use the cruise control system in heavy traffic, on roads with sharp or blind curves or on slippery roads of any kind. Using the cruise control in these circumstances can cause loss of control, which could result in death or serious injury. (00083a)

### ⚠ WARNING

Travel at speeds appropriate for road and conditions and never travel faster than posted speed limit. Excessive speed can cause loss of vehicle control, which could result in death or serious injury. (00008a)

## Turn Cruise On

### NOTE

*Cruise control operates when:*

- At least 10 seconds have lapsed since the engine was started.
- Vehicle speed is between 40–145 km/h (25–90 mph) in second or higher gear.

See Figure 34. Press the CRUISE switch to turn on cruise (1). When on, the cruise icon in the speedometer face glows amber.

## Set Cruise Speed

See Figure 34. When the motorcycle reaches your intended speed, press the SET/- switch down to set the cruise speed (2). The amber cruise icon changes to green.

If necessary, adjust the cruise speed to match the speed limit or traffic conditions:

## Increase/Decrease Cruise

Tapping the RES/+ switch up increases speed by 1.6 km/h (1 mph). Holding up the RES/+ switch gradually increases cruise speed.

Tapping the SET/+ switch down decreases speed by 1.6 km/h (1 mph). Holding the switch down gradually decreases cruise speed.

## Disengage Cruise

See Figure 34. To drop out of cruise speed, roll the throttle closed through the roll-off switch (3).

Cruise also disengages when the rider:

- Squeezes the front brake lever or presses the rear brake pedal.
- Squeezes the clutch lever.
- Rolls the throttle open more than 16 km/h (10 mph) above the set speed.

### NOTE

*Traction control intervention can cause cruise control to disengage.*

## Resume Cruise


### NOTE


*If the current speed is more than 24 km/h (15 mph) below the cruise speed, cruise will not resume.*

See Figure 34. If cruise has been disengaged yet the cruise indicator is amber, pressing the RES/+ switch up resumes cruise (4). The icon glows green. The motorcycle automatically resumes cruise at the set speed.

## Turn Cruise Off

Press the CRUISE switch to turn off cruise control. The cruise icon goes blank.

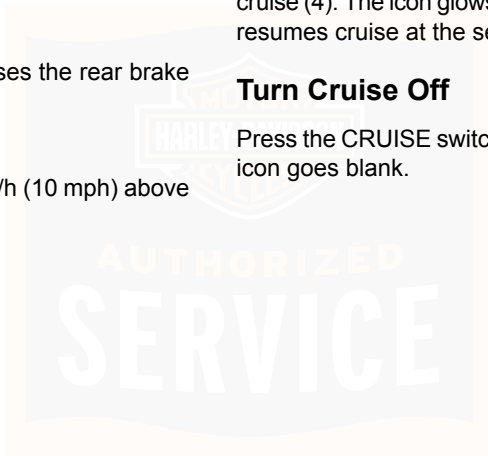

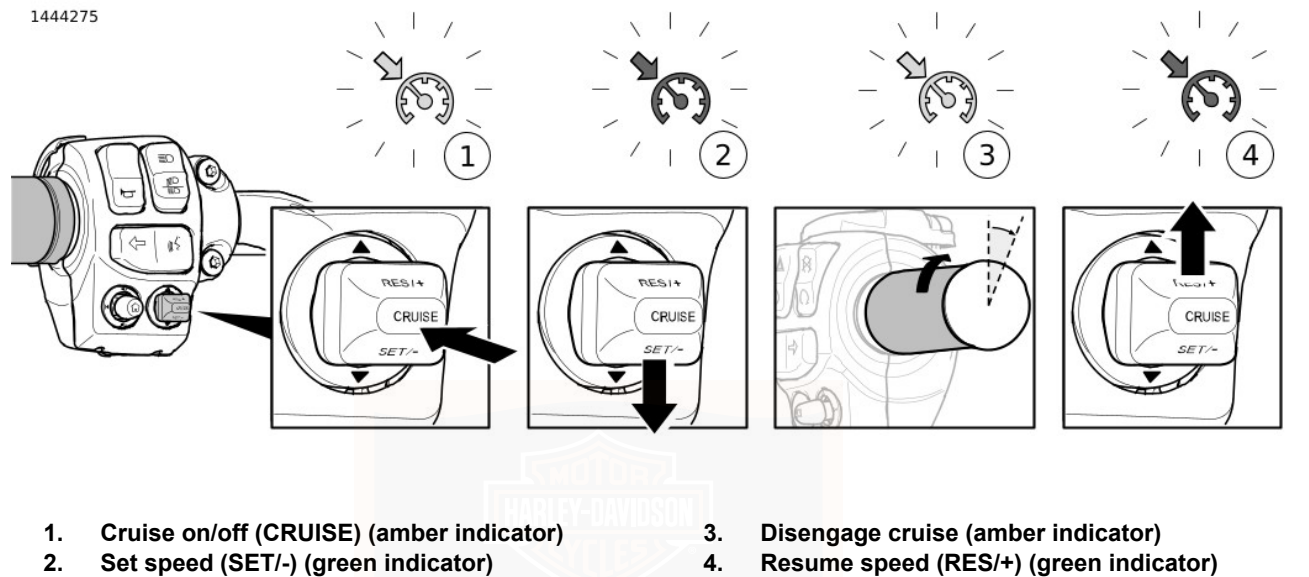

**Figure 34. Cruise Control (typical)**

## ELECTRONIC THROTTLE CONTROL (ETC)

This motorcycle has an Electronic Throttle Control (ETC). Instead of using a mechanical cable connection to the throttle body, this technology uses redundant grip sensors to indicate rider requested throttle position to the Electronic Control

Module (ECM). The ECM then regulates proper fuel/air intake and ignition timing based on the rider's actions.

The Electronic Control Module (ECM) monitors the status of the grip sensors, throttle plate actuation and airflow. If Trouble Codes are detected, the ECM disables cruise control,

illuminates the check engine lamp and will transition to one of the following modes.

### **ETC Limited Performance Mode**

The rider experiences near-normal operation. The motorcycle operates with provisions to guard against unintended acceleration.

### **ETC Power Management Mode**

The throttle plate actuator returns to an "idle detent" or "limp-home" position, which provides enough torque to achieve speed of about 40 km/h (25 mph). The motorcycle's response to grip sensor input is reduced.

### **ETC Forced Idle Mode**

The throttle plate actuator is forced to a "fast idle" position, which provides enough torque to crawl, but not enough torque to operate at traffic speeds.

### **ETC Forced Shut Down Mode**

The engine is forced to shut down.


## **ACCESSORY SWITCH**

### **NOTICE**


**It is possible to overload the vehicle's charging system by adding too many electrical accessories. If the combined electrical accessories operating at any one time consume more electrical current than the vehicle's charging system can produce, the electrical consumption can discharge the battery and cause damage to the vehicle's electrical system. (00211d)**

See Figure 35. A panel for accessory switches is next to the ignition switch in the fairing cap. Switches can be added for installed accessories. The maximum load per switch is 2 amps.

See Figure 36. The accessory connector is located under the left side cover. See a Harley-Davidson dealer or [www.harley-davidson.com](http://www.harley-davidson.com) for electrical accessories that fit your motorcycle.

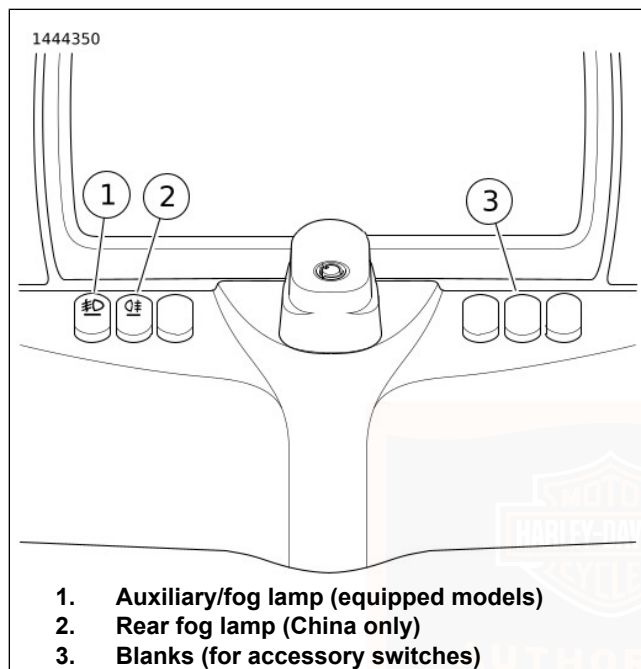

**Figure 35. Dash Panel Switches**

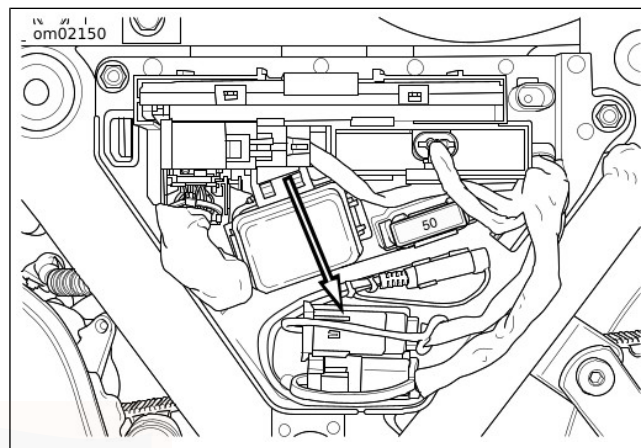

**Figure 36. Accessory Connector (under left side cover)**  
**AUXILIARY/FOG LAMPS**

The auxiliary/fog lamps provide extra light to the road and surrounding environment in dark or rainy conditions. The lamps also give the motorcycle more visibility to other motorists.

See Figure 35. On models equipped with the auxiliary/fog lamps, the switch is on the left side of the fairing cap.

**Domestic/Canada configurations:** The auxiliary/fog lamps are configured to turn off when the high beam headlamp is turned on, except as required by state/province.

Auxiliary/fog lamps can be configured to remain on or turn off with high beam operation based on legal requirements for each location. See your Harley-Davidson dealer.

## BOOM! BOX INFOTAINMENT SYSTEM

### ⚠ WARNING

**Set volume levels and other controls on audio and electronic devices before riding. Distractions can lead to loss of control, resulting in death or serious injury. (00088b)**

### ⚠ WARNING

**Do not select a volume level that blocks out traffic noise or interrupts the concentration necessary for safe operation of the motorcycle. Distractions or a volume level that blocks out traffic noise could cause loss of control resulting in death or serious injury. (00539b)**


### NOTE

- See *BOOM! BOX OWNER'S MANUAL* for a complete description of features and instructions for operation.
- Perform system set-up and get familiar with the controls and features of the infotainment system before operating the motorcycle on the road.
- For additional instruction and information, see an authorized Harley-Davidson dealer and online resources at [www.harley-davidson.com/touring](http://www.harley-davidson.com/touring).


A full version of the Boom!™ Box GTS owner's manual is downloadable at [www.harley-davidson.com](http://www.harley-davidson.com) or [H-D.com/BoomBoxGTS/manual](http://H-D.com/BoomBoxGTS/manual).

See Figure 37. Some vehicles have a Boom! Box infotainment system. The system operates while the ignition switch is in the IGNITION or ACCESSORY position.

Refer to Table 29 for infotainment button functions.

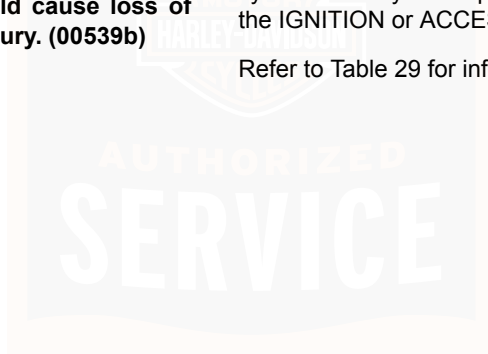



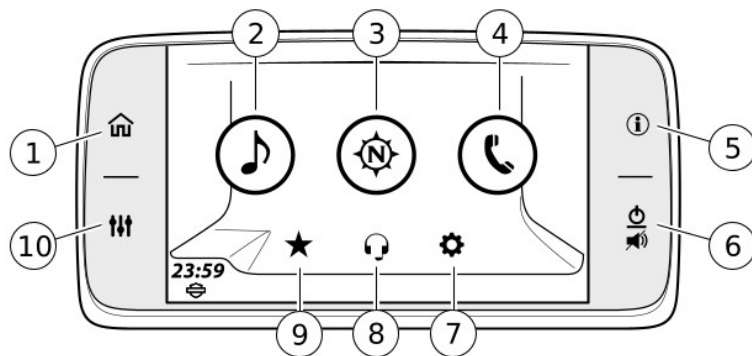

- |                                 |                    |
|---------------------------------|--------------------|
| 1. Home                         | 6. Power/Mute      |
| 2. Audio                        | 7. Setup           |
| 3. Navigation                   | 8. Communications  |
| 4. Phone                        | 9. Favorites       |
| 5. Information (Vehicle Status) | 10. Audio Settings |

Figure 37. Faceplate Home Screen Selections

Table 29. Faceplate Home Screen Selections

Press	Result
1 [Home]	Displays Home screen. Toggle between Home screen and active media.
	<b>Available selections:</b> Audio, Navigation, Phone, Setup, Communications, Favorites.

**Table 29. Faceplate Home Screen Selections**

<b>Press</b>	<b>Result</b>
2 [Audio]	Displays active source with audible content information. <b>Available selections:</b> FM, AM, WB (weather band). <b>Optional selections:</b> When connected: iPod, USB Media, Bluetooth Audio. If equipped: SiriusXM.
3 [Navigation]	Displays map with current position. <b>Available selections:</b> Search, Menu, Stop Route, Highway Services (shows only on highways), Data Wing (right and left), Zoom (in and out). <b>Informational display:</b> Current Street, Compass, Next Maneuver, Distance to Next Maneuver, Next Street, Repeat.
4 [Phone]	Displays menus for staying connected. <b>Available selections:</b> Calls, Contacts, Messages, Keypad, SOS.
5 [Info]	Displays vehicle status. <b>Available selections:</b> Info, Engine/Fuel Info, Ride Summary, TPMS (models with).
6 [Mute/Power]	Toggles power on and off (hold for three seconds). Silence or pause audio.
7 [Setup]	Configure system settings. <b>Do before riding the motorcycle.</b> <b>Available selections:</b> Audio Settings, Display, Global Presets, Keyboard, Bluetooth setup, Wireless Headset, Units, Clock, Rear Controls, System Information, Language, Projection Mode.
8 [Communication]	Displays enabled communication devices. <b>Available selections:</b> Intercom (when enabled), Citizen Band (CB, if equipped).
9 [Favorites]	Displays saved favorites. <b>Available selections:</b> Tuner, Media, Phone, Destination.
10 [Audio Setup]	Displays audio setting screen. <b>Available selections:</b> Bass, Treble, Audio Routing, Fade, Volumes.

## HEADSET CONNECTION

### NOTICE

**Do not pull on the cord to remove the headset from the socket. Pull on the headset jack to disconnect the headset from the socket. (00174a)**


See Figure 38 and Figure 39. Some vehicles have a rider headset connector on the fuel tank panel and a passenger headset connector on the left speaker pod. The headsets are used to operate the CB, intercom, voice recognition and other features on equipped models.

Use the Harley-Davidson 7-pin DIN headset that is supplied with equipped models or purchased from a Harley-Davidson dealer. Other headset microphones will not work. See the instructions that are included with the headset to install in a helmet.


Connect the headset by aligning the connector index on the headset connector with the console index on the connector.

Audio routing for the headset is controlled through the radio. Volume and push-to-talk functions are done using the rider and passenger hand controls. See the BOOM! BOX OWNER'S MANUAL.

The socket caps remain shut when not in use to prevent dirt and water from entering the socket. Close both socket caps before washing the motorcycle.

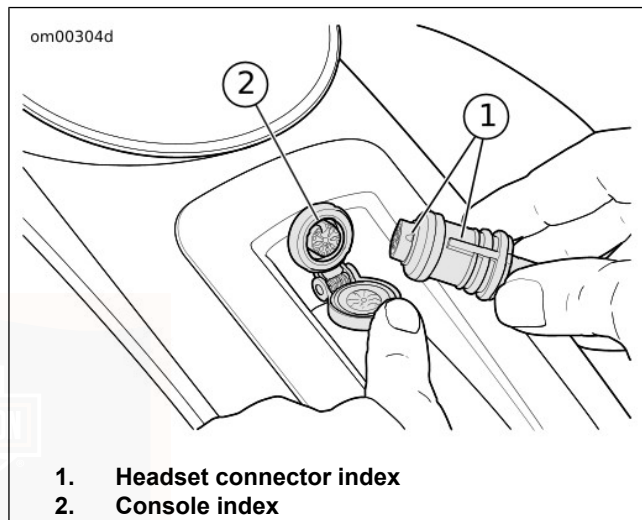

**Figure 38. Rider Headset Connector (typical)**

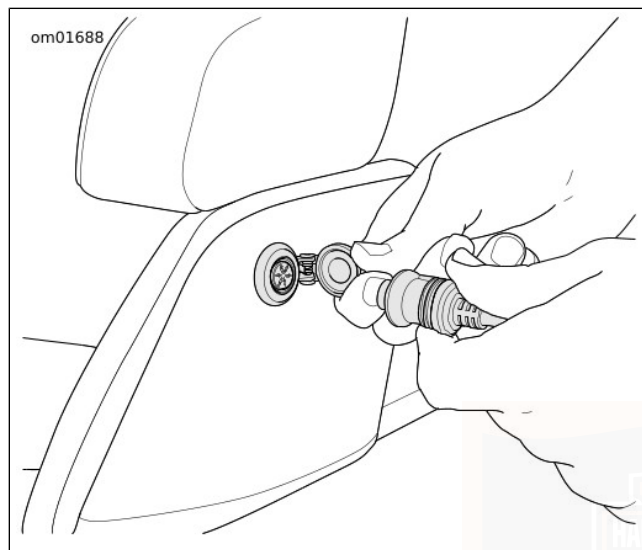

**Figure 39. Passenger Headset Connector**

## **PASSENGER CONTROLS**

See Figure 40. Some vehicles have passenger controls on the right side of the Tour-Pak. These controls allow the passenger to operate functions in the infotainment system. See **BOOM! BOX OWNER'S MANUAL** for detailed instructions.

### **Mode Switch**

**MODE:** Press switch straight in to select the next available audio source.

**UP/DN:** Press switch up/down to select the previous/next radio station or media file.

### **Push-To-Talk (PTT)/Volume (VOL) Switch**

**PTT:** Press switch to transmit over CB or intercom.

**VOL+/VOL-:** Press switch up/down to raise/lower the volume to the passenger headset.

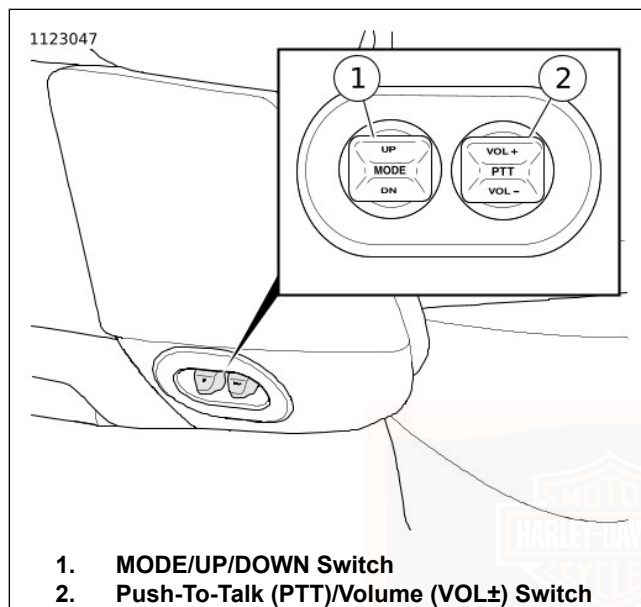


Figure 40. Passenger Controls

## RADIO ANTENNA

The radio antenna mast is threaded on a mount at the rear of the vehicle. When installing, hand-tighten only.

## MEDIA COMPARTMENT

See Figure 41. The Jukebox media compartment is an enclosure in the dash which may be used to connect a media device or store small items. Media players and USB storage devices with media files can be connected to the USB port. Radio system updates are also performed through a USB storage device.

The USB port charges the connected device while the motorcycle is turned on or while in accessory mode. See **BOOM! BOX OWNER'S MANUAL** to install updates or play files.

**Open:** See Figure 41. Push lower portion of door and release.

**Close:** Firmly push the door shut until latch engages.

**Install USB or media device:** Connect device to the USB port. Rest device in the padded cradle. Close the compartment door.


**Door latch reset:** If compartment door was forced open or is not latching properly, the door latch may need to be reset. Push the door shut. Open the door. Close the door again to engage the latch mechanism.

Keep door closed while riding to prevent items from falling out. Remove valuable items from the media compartment before leaving the vehicle unattended.

The cradle can be removed to clean within the media compartment. Install the cradle before riding to prevent media devices from moving in the compartment and to minimize vibration.

**NOTE**

Do **not** use media players with hard drives. Vibration may cause internal damage to device.

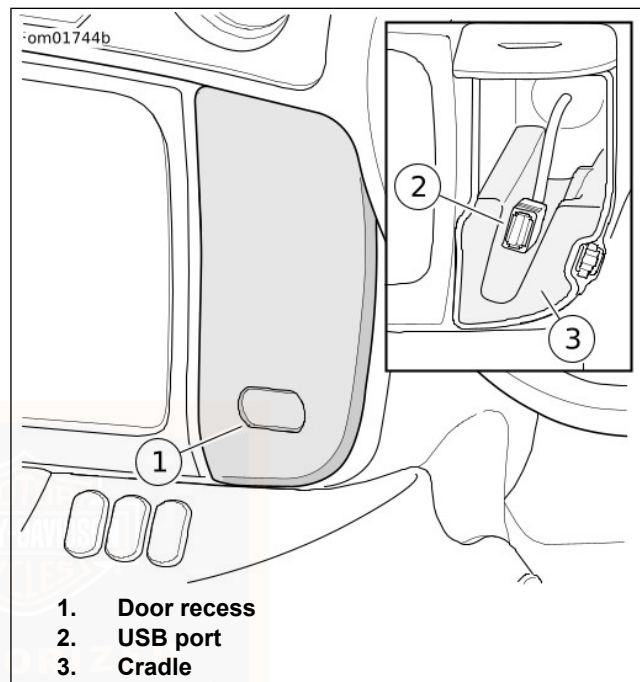

**Figure 41. Media Compartment**

## POWER PORT

APPLICABILITY	
	<ul style="list-style-type: none"><li>• 2021 TRI GLIDE ULTRA (FLHTCUTG)</li></ul>

See Figure 42. The power port is on the right side of the fairing. The port can be used to power or charge 12 VDC accessories with a standard automotive power connector. Follow the manufacturer instructions when installing and operating accessories. Firmly push the accessory connector into the power port.

### ⚠ WARNING

**Be sure that steering is smooth and free without interference. Interference with steering could result in loss of vehicle control and death or serious injury. (00371a)**


### NOTE

- *Before riding, rotate handlebars to the full right position and check for contact between installed accessories or wiring and the fuel tank.*
- *Do not use the power port as a cigarette lighter. Damage to the socket may occur. See an authorized Harley-Davidson dealer for available accessories.*

The port is energized while the ignition switch is in the IGNITION or ACCESSORY position. Powering accessories for an extended time while the engine is not running drains the battery.

The maximum current draw for all connected accessories is 20 A. This current draw includes the total current for all power ports and any other installed accessories. If excessive current is detected, the P&A fuse will fail and the accessories will stop operating until the overcurrent situation has been corrected (such as when a faulty or high powered accessory has been removed) and the fuse has been replaced.

Items charging with the power port may cause interference with radio reception.

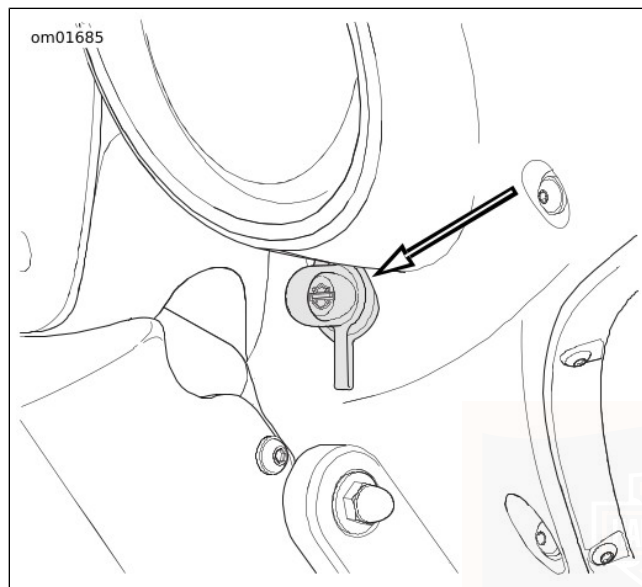

**Figure 42. Fairing Power Port**

## STARTING THE ENGINE

### General

#### NOTICE

The engine should be allowed to run slowly for 15-30 seconds. This will allow the engine to warm up and let oil reach all surfaces needing lubrication. Failure to comply can result in engine damage. (00563b)

1. With security system fob present, turn ignition switch to IGNITION.
2. Set the OFF/RUN switch to RUN. See Figure 43.

#### NOTE

- The check engine lamp will light when the ignition is turned on. You will hear the fuel pump run for a short time as it pressurizes the fuel system.
- To allow enhanced lubrication of the engine before startup, the engine will crank a number of turns before starting.

### Starting Engine In Neutral

1. Apply the front or rear brake to prevent movement of the motorcycle.
2. Squeeze the clutch lever in against the hand grip. Shift transmission to neutral (with the green neutral lamp lit).



3. Do not roll the throttle.
4. Press the engine start switch to start the engine.

## Starting Engine In Gear

1. You **must** apply the front or rear brake to start the engine and to prevent movement of the motorcycle.
2. You **must** squeeze the clutch lever in against the hand grip.
3. Do not roll the throttle.
4. Press the engine start switch to start the engine.

### NOTE

*If the engine does not start, the starter motor will operate for five seconds and then stop. Release and press the START switch. After several unsuccessful start attempts, see TROUBLESHOOTING > ENGINE (Page 213). See an authorized Harley-Davidson dealer for service.*

When the engine has started, release the parking brake before riding the motorcycle as you normally would. See BEFORE RIDING > PARKING BRAKE (Page 59).

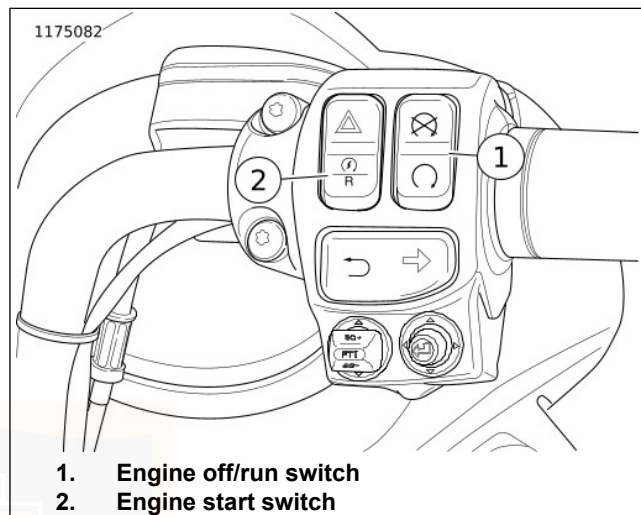


Figure 43. Right Handlebar Controls (typical)

## STARTING AFTER TIPOVER

### ⚠ WARNING

If tip occurs, check all controls for proper operation. Restricted control movement can adversely affect the performance of the brakes, clutch or ability to shift, which could result in loss of vehicle control and death or serious injury. (00350a)

#### NOTE

- If the motorcycle is tipped over, the word "tIP" appears in the odometer window and four-way flashers activate.
- The engine cannot start until the tip condition is reset.
- The ignition must be reset to turn four-way flashers off.

1. Set motorcycle upright.
2. Cycle the ignition switch and the OFF/RUN switch to OFF.
3. Wait 10 seconds.
4. Cycle the ignition switch to IGNITION.
5. Cycle the OFF/RUN switch to RUN.
6. Push hazard switch to turn four-way flashers off.

## ENGINE IDLE TEMPERATURE MANAGEMENT SYSTEM (EITMS)

The Engine Idle Temperature Management System (EITMS) can provide limited cooling of the rear cylinder for riders who frequently find themselves in prolonged idle conditions or traffic congestion. Riders can enable or disable EITMS to complement their riding style.

## Operation

- If EITMS is active, releasing the clutch lever to the clutch engagement zone will deactivate EITMS and begin firing the rear cylinder. While the vehicle is stopped, the rider may benefit from twisting the throttle/raising engine speed slightly just before riding away, which will deactivate EITMS and begin firing the rear cylinder immediately regardless of clutch lever position.
- The Milwaukee Eight 114 engine warm idle speed is 950 RPM. Idle speed can vary depending on other factors including electrical load on the vehicle. When EITMS is active on these engines, the idle speed will increase to 950-1000 RPM until EITMS is deactivated.

## Activation

#### NOTE

EITMS will not operate within the first 30 seconds after starting the engine.

EITMS will turn off the rear cylinder fuel injector **when all of the following preset parameters are met:**

- Throttle position is at idle
- Motorcycle speed is under 1.2 mph (2 km/h)
- Engine speed is under 1200 RPM

- Engine Temperature (ET) sensor input reading is above preset level
- Ambient Air Temperature (AAT) sensor reading is above preset level (radio equipped models only)

## Deactivation

EITMS will deactivate and the rear cylinder fuel injector will resume operation **if any one of the following conditions occur:**

- Ambient Air Temperature (AAT) sensor reading drops below preset levels (radio equipped models only)
- Engine Temperature (ET) sensor reading drops below preset level
- Throttle position is above idle (rider rolls throttle)
- Motorcycle speed exceeds 1.9 mph (3 km/h)
- Engine speed exceeds 1350 RPM
- The clutch is released with the motorcycle in gear

## Enabling / Disabling EITMS

### NOTE

- *EITMS can be enabled or disabled with the engine running or shut off.*

- *On vehicles equipped with radios, the EITMS activation and enabled / disabled can be viewed in the Information Screen.*

**Enabled:** The EITMS engine cooling feature automatically activates whenever the vehicle comes to a complete stop and is idling during elevated temperature conditions. When the feature is enabled, it may not activate under cool riding conditions.

**Disabled:** The EITMS feature is not active under any conditions.

EITMS can be enabled or disabled by performing the following procedure.

1. Turn ignition switch ON. Push the engine OFF/RUN switch on the right handlebar to the RUN position.
2. Push the throttle to roll-off position and hold.
3. See OPERATION > INSTRUMENTS (Page 81). After 3 seconds, the cruise control indicator lamp will flash indicating the EITMS status.
  - Flashing green indicates EITMS is enabled.
  - Flashing amber indicates that EITMS is disabled.
4. Repeat the procedure to enable or disable EITMS.

#### NOTE

- A flashing cruise lamp indicates the EITMS setting. A solid (non-flashing) lamp indicates the cruise control setting.
- The EITMS setting remains in effect until it is changed by the rider or dealer. There is no need to reconfigure EITMS at each startup.

## STOPPING THE ENGINE

1. Stop the engine by turning OFF the engine stop switch on right handlebar.
2. Turn OFF the ignition switch. If the engine should be stalled or stopped in any way, turn off the ignition switch at once to prevent battery discharge.
3. Shift the transmission into gear and apply the parking brake.

## REFLEX-LINKED BRAKES WITH CORNERING-ENHANCED ABS

### Front Brake Lever


#### WARNING

Do not position fingers between hand control lever and handlebar grip. Improper hand positioning can impair control lever operation and cause loss of vehicle control, which could result in death or serious injury. (00032a)

See Figure 44. The front brake hand lever (1) controls the front wheel brake. The lever is on the right handlebar. Operate the hand lever with the fingers of the right hand.

### Rear Brake Pedal

See Figure 44. The rear brake pedal (2) controls the rear wheel brake. The pedal is on the right side. Operate the rear brake pedal with the right foot.

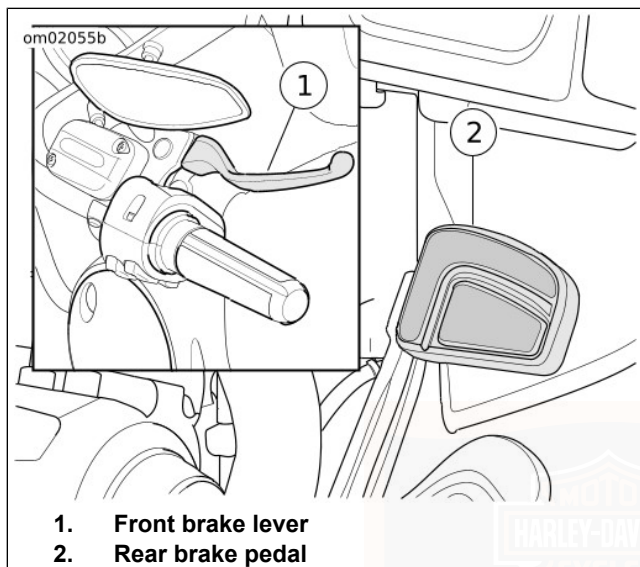

**Figure 44. Brake Controls**

### **Reflex Linked Anti-lock Brake System (ABS)**

Harley-Davidson's reflex linked anti-lock brake system assists the rider in maintaining control when braking in an emergency situation. Reflex Linked ABS monitors front and rear brakes to keep the wheels rolling and prevent uncontrolled wheel

lock-ups either on dry pavement or on slick surfaces such as gravel, leaves or when riding in wet conditions.

Reflex Linked ABS is more responsive than conventional ABS and allows for more balanced front and rear braking under a wide variety of brake applications.

At speeds greater than 7 km/h (4 mph), the system dynamically adjusts the linking for the amount of brake applied as well as vehicle speed to achieve an optimized brake balance. The system provides more linking when the rider is applying heavier braking and reduces or eliminates linking for light braking and low speeds.

#### **NOTE**

*When applying both brakes, the rider may detect slight feedback in the front brake lever or rear brake pedal while the dynamic balancing occurs.*

When linked, applying the front brake lever alone causes the system to also dynamically apply an amount of braking to the rear. Applying the rear brake pedal alone causes the system to also apply an amount of braking to the front calipers. When applying both brakes, the system attempts to dynamically balance braking across both the front and rear wheels.

At speeds less than 3 km/h (2 mph), the brakes are not linked so that low speed maneuverability is not adversely affected, such as when riding the motorcycle in a parking lot.

## How ABS Works

The ABS monitors sensors at the front and rear wheels to determine wheel speed. If the system detects one or more wheels are slowing down too quickly, which indicates they are close to locking, or if the deceleration rate does not match a criteria stored in memory, the ABS reacts. The system rapidly opens and closes valves to modulate the brake pressure. During ABS activation, the system provides the electronic equivalent of manually pumping the brakes. The system can cycle many times per second.

The rider recognizes ABS activation by the slight pulsing sensation in the hand lever or the rear brake pedal. A clicking sound from the ABS module can also be heard. Both are the result of normal operation. Refer to Table 30.

For additional ABS information visit [www.harley-davidson.com/trikeorientation](http://www.harley-davidson.com/trikeorientation).

## How To Use ABS

While an advantage in emergency braking, ABS is not a substitute for safe riding. The safest way to stop a motorcycle is using both brakes.

Harley-Davidson ABS is a manual assist system. During an emergency stopping situation, maintain pressure on the brakes through all ABS events. Do not modulate or "pump" the brake controls. The wheels do not lock until the end of the stop when motorcycle speed slows to a rate at which ABS is no longer needed.

## ABS: Tires and Wheels

Motorcycles equipped with ABS must always use Harley-Davidson tires and wheels. The ABS monitors the rotational speed of the wheels through individual wheel speed sensors. Changing to different diameter wheels or different size tires can alter the rotational speed. Different-sized wheels and tires can upset the calibration of the ABS and have an adverse effect on its ability to detect and prevent uncontrolled wheel lockups. Operating at tire pressures other than those pressures specified can reduce ABS braking performance. Refer to SPECIFICATIONS > SPECIFICATIONS (Page 33).

**Table 30. ABS Symptoms and Conditions**

<b>SYMPTOM</b>	<b>CONDITION</b>
ABS lamp continuously lit	ABS malfunction detected. See a Harley-Davidson dealer for service.
ABS lamp flashing	This indicates a normal self-diagnostics process when the motorcycle is first turned on and the speed is under 5 km/h (3 mph). ABS is not operational until the lamp turns off. If the lamp continues flashing at speeds greater than 5 km/h (3 mph), see a Harley-Davidson dealer for service.
Pulsing brake lever or pedal during an ABS event	Normal condition.
Clicking sound during an ABS event	Normal condition.
"Surge" sensation while braking	Normal condition. This is most noticeable when braking with one brake (front only or rear only). Result of a reduction in deceleration which can be caused by cracks or bumps in road, engine braking (high engine RPMs causing the rear wheel to slow down), hard braking at slow speeds, and other conditions. This is due to ABS modulating caliper brake pressure to prevent uncontrolled wheel lock.
Temporarily stiff rear brake pedal	Normal condition. Engine braking (high engine RPMs causing the rear wheel to slow down) or down shifting can activate ABS. If applying the rear brake at the same time or immediately after, the ABS may be closing a valve to prevent pressure to the rear brake. This is due to ABS modulating caliper brake pressure to prevent uncontrolled wheel lock.
Tire chirp	Normal condition. Depending on surface, tire can chirp without locking the wheel.
Black mark on pavement	Normal condition. Depending on surface, tire can leave a black mark without locking the wheel.
Wheel lock at low speed	Normal condition. ABS does not activate on front wheel below 5 km/h (3 mph) or on rear wheel below 8 km/h (5 mph).

## TRACTION CONTROL

### Traction Control System

While an advantage in certain situations, traction control is not a substitute for safe riding.

Harley-Davidson's cornering enhanced traction control system can detect when one or both of the drive wheels lose traction. In wet or slippery conditions, or under abrupt acceleration, the traction-control system will limit torque or apply brakes to the drive wheels that lose traction.

By reducing tire spin, the Traction Control System will maintain control, while allowing maximum acceleration.

The vehicle is also equipped with a Drag Torque Slip Control System to help maintain control under deceleration. When you deliver an abrupt reduction in acceleration to the vehicle, during early downshifts, or when the powertrain decelerates on wet or slippery surfaces, the vehicle may experience rear wheel slip.

### How Traction Control Works

The cornering enhanced traction control System constantly monitors the vehicles lateral acceleration during turns, and will adjust torque to the drive wheels when it senses a loss of traction, or when necessary to improve vehicle control while cornering.

This adjustment is designed to limit wheel spin and help the rider maintain the desired course of travel in corners.

During start up, the traction-control lamp flashes simultaneously with the ABS lamp, this indicates that both systems are waiting for the vehicle to complete a wheel speed sensor check. The traction control system is operational after startup even during the wheel speed sensor check. The traction control lamp should turn off when the sensor check is complete.

If the drag torque slip control system senses rear wheel slip under powertrain deceleration, in straight-aways or corners, it may decrease drag torque, by increasing engine Revolutions Per Minute (rpm), to limit the slip and maintain control.

### How To Use Traction Control

#### NOTE

*When running a vehicle on a dyno it is advised that traction control be disabled to prevent intervention based on tire speed differences front to rear.*

Traction control is automatically enabled at each ignition start cycle. The rider may choose to disable traction control anytime the vehicle is at a complete stop and the engine is running by pressing and holding the traction control switch for one full second.



The rider may find it beneficial to disengage traction control in low speed low traction situations such as, riding in deep sand, riding uphill on wet grass, or similar situations. The traction control lamp will illuminate and remain illuminated to indicate traction control is disabled. However, if the TC lamp remains on in conjunction with the fault indicator lamp, it means the traction control system has faulted. If this occurs, see an authorized Harley-Davidson dealer.

The rider may again enable traction control at any time during vehicle operation by pressing and releasing the Traction control switch.

If the traction control lamp begins fast-blinking while riding, it means the traction-control system is intervening.

Intervention of the Drag Torque Slip Control is indicated by fast-blinking of the traction control lamp. However, disabling your Traction Control will not disable Drag Torque Slip Control.

**Table 31. Traction Control Symptoms and Conditions**

SYMPTOM	CONDITION
Traction control lamp off	Traction control system active.
Traction control lamp continuously lit	Traction control system deactivated by user.
Traction control lamp and security/fault indicator lamp continuously lit	Traction control system faulted.
Traction control lamp flashing	Normal condition. Traction control intervention.
Reduction of throttle response during a traction control event	Normal condition. Traction control intervention.
"Surge" sensation while decelerating	Normal condition. Drag torque slip control intervention.

## SHIFTING GEARS

### Shifting while Stopped, Engine Off

Squeeze in the clutch lever to fully disengage the clutch. Gears may not engage because the transmission shafts are not turning and shifter components are not lined up. Rock the

motorcycle backward and forward while lightly pressing on the shift lever.

## Starting from a Stop

### NOTE

*Release parking brake before riding motorcycle. See BEFORE RIDING > PARKING BRAKE (Page 59).*

### NOTICE

**The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch can result in equipment damage. (00182a)**

### NOTE

*Always start the engine with the transmission in neutral. Always start forward motion in first gear.*

1. With motorcycle engine running and parking brake released, pull the clutch hand lever in against handlebar grip to fully disengage clutch.
2. Press the gear shift lever down to end of its travel and release. The transmission is now in first gear.
3. Ease out the clutch lever and at the same time, gradually open the throttle.

## Upshift (Acceleration)

See Figure 45. Engage the next higher gear when the motorcycle reaches the shifting speed. Refer to Table 32.

**Table 32. Recommended Upshift Speeds**

GEAR CHANGE	mph	km/h
First to second	15	25
Second to third	25	40
Third to fourth	35	55
Fourth to fifth	45	70
Fifth to sixth	55	85

1. Close the throttle.
2. Disengage the clutch (pull the clutch lever in).
3. Lift the gear shift lever up to the end of its travel and release.
4. Ease out the clutch lever and gradually open the throttle.
5. Repeat the previous steps to engage remaining gears.

### NOTE

- *Disengage the clutch completely before each gear change.*
- *Partially close the throttle so the engine will not drag when the clutch lever is released.*

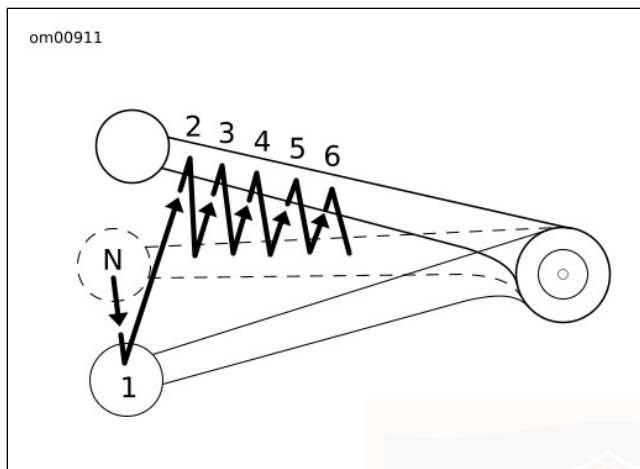


Figure 45. Shifting Sequence: Upshift

## Downshift (Deceleration)

### ⚠ WARNING

**Do not downshift at speeds higher than those listed. Shifting to lower gears when speed is too high can cause the rear wheel to lose traction and lead to loss of vehicle control, which could result in death or serious injury. (00045b)**

See Figure 46. When engine speed decreases, as when climbing a hill or slowing for a turn, shift to the next lower gear. Refer to Table 33.

Table 33. Recommended Downshift Speeds

GEAR CHANGE	mph	km/h
Sixth to fifth	50	80
Fifth to fourth	40	65
Fourth to third	30	50
Third to second	20	30
Second to first	10	15

### NOTE

*The shifting points shown in the table are recommendations. Vehicle owners may determine that their own individual shifting patterns may differ from those stated and are additionally appropriate for individual riding styles.*

1. Close the throttle.
2. Disengage the clutch (pull the clutch lever in).
3. Press the gear shift lever down to the end of its travel and release.
4. Ease out the clutch lever and gradually open the throttle.
5. Repeat the previous steps to engage remaining gears.


### NOTE

- Disengage the clutch completely before each gear change.
- Partially close the throttle so the engine will not drag when clutch lever is released).

### NOTICE

**Shift to neutral before stopping engine. Shifting mechanism can be damaged by shifting gears while engine is stopped. (00183a)**

The gear shifter mechanism permits shifting the transmission to neutral from either first or second gear.

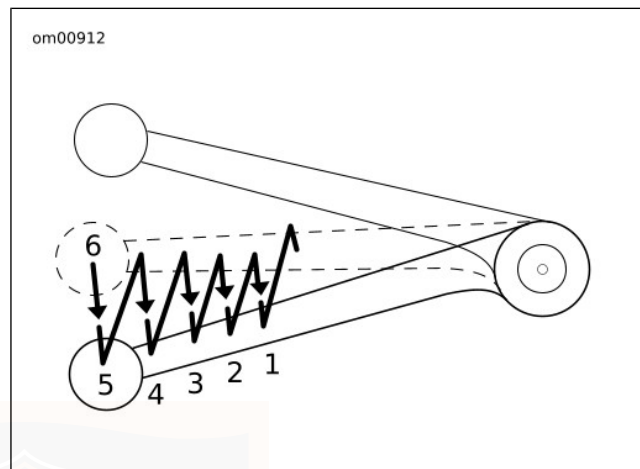

**Figure 46. Shifting Sequence: Downshift  
REVERSE OPERATION**

The vehicle has an electric reverse motor. The reverse motor uses battery power to move the vehicle in reverse with the engine running and the transmission in neutral.

The reverse motor is designed for light load, short duration use. Excessive loads can cause the reverse circuit breaker to trip when:

- Going up steep inclines.

- Long-distance travel in reverse.
- Attempted operation with the brakes or parking brake applied.
- Repeatedly pushing the reverse button in rapid succession.
- Attempted operation while the vehicle is against resistance (such as a curb).

To reset the reverse circuit breaker, see SERVICE PROCEDURES > REVERSE MOTOR CIRCUIT BREAKER (Page 198).

Light application of the brakes during reverse, backing into something then trying to pull away, or backing up a steep incline and then allowing the vehicle to coast the other direction may cause the reverse drive to not disengage. If this occurs, a loud whine is heard when pulling forward and considerable drag is felt as if the parking brake is applied.

In the event this happens, stop immediately and rock the vehicle slightly to disengage the drive. If the reverse drive remains engaged and the vehicle is driven in a forward direction, reverse motor damage may occur.

#### NOTE

- *Always come to a complete stop before placing the vehicle in forward gear or enabling the reverse motor.*
- *Engine idle speed may increase to provide additional battery charging during reverse operation.*

1. Bring the vehicle to a complete stop using front and/or rear brake. If parked, check that the parking brake is released.
2. See Figure 47. With the vehicle started and in neutral, press and hold the reverse switch in the right side controls until the reverse lamp illuminates. **With fairing:** The lamp in the tachometer indicates that the reverse is enabled. See OPERATION > INSTRUMENTS (Page 81). **Without fairing:** The lamp in the speedometer indicates that the reverse is enabled. See OPERATION > INSTRUMENTS (Page 81). Release the reverse switch. The neutral lamp turns off when the reverse lamp turns on.
  - **AUS models:** The reverse lamp will illuminate.

#### NOTE

*The lamp will not come on or will flash three times to indicate that the conditions for operating the electric reverse are not met. If the lamp will not illuminate or continues to flash, verify that the vehicle is started, in neutral and the circuit breaker is not tripped.*

3. Check that area behind vehicle is clear.

#### NOTE

*Do not repeatedly press and release the reverse button in rapid succession.*

4. Press and hold the reverse switch a second time to operate the electric reverse motor. The motorcycle continues moving in reverse as long as the reverse switch is held down. The reverse automatically turns off when the engine is stopped or when the motorcycle is shifted into a forward gear.

- **AUS models:** The reverse lamp will turn off.

#### NOTE

- *Surface incline affects reverse vehicle speed. When backing down a hill, use both front and rear brakes to control reverse speed. Do not exceed walking speed. Be prepared to slow or stop the vehicle.*
  - *The rear of the vehicle is wider than a typical motorcycle. Check for proper clearance when maneuvering.*
  - *If the reverse motor does not operate, see SERVICE PROCEDURES > REVERSE MOTOR CIRCUIT BREAKER (Page 198) to reset the circuit breaker.*
5. Release the reverse switch. Brake as necessary to stop the vehicle.
  6. Shift into a forward gear and ride normally or turn ignition to OFF and apply the parking brake.

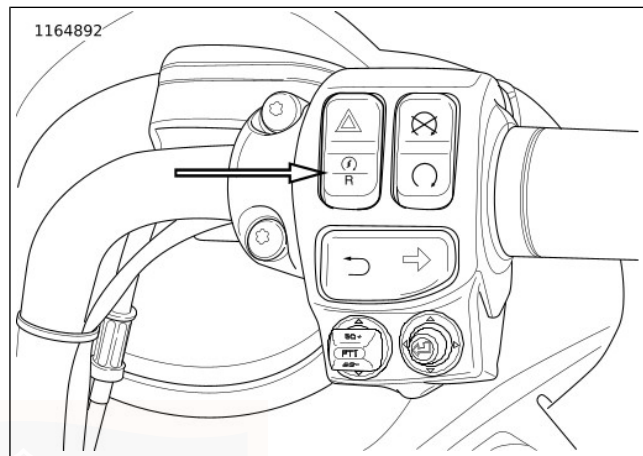


Figure 47. Reverse Switch (typical)

## PASSENGER FOOTBOARDS/FOOTRESTS

Passenger footboards can be adjusted to one of three positions.

1. See Figure 48. Remove socket screw with lockwasher (1) from top of footboard bracket (3).

#### NOTE

*Do not remove lower screw (4). The lower screw is a shoulder screw that rides in a slot in the bracket.*

2. Slide the bracket to the desired height. Match the upper hole in the bracket to one of the three holes in the frame.
3. Apply a drop of LOCTITE 243 THREADLOCKER AND SEALANT (BLUE) to the threads of the socket screw (1). Install socket screw with lockwasher. Tighten to 49–56 N·m (36–42 ft-lbs).

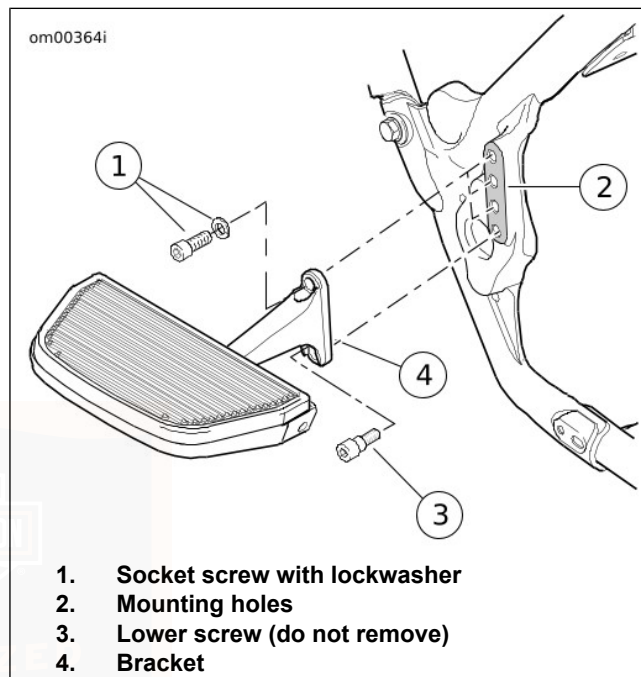



Figure 48. Passenger Footboard

## FAIRING VENTS

See Figure 49. Vehicles with a fork mounted fairing have a vent in the upper dash for ventilation. The vent provides a

comfortable flow of air to the rider and to minimize wind buffeting.

Keep the vent free of foreign objects. Periodically clean the vent to remove dirt, bugs and leaves. See AFTER RIDING > FAIRING SPLITSTREAM VENT CARE (Page 147).

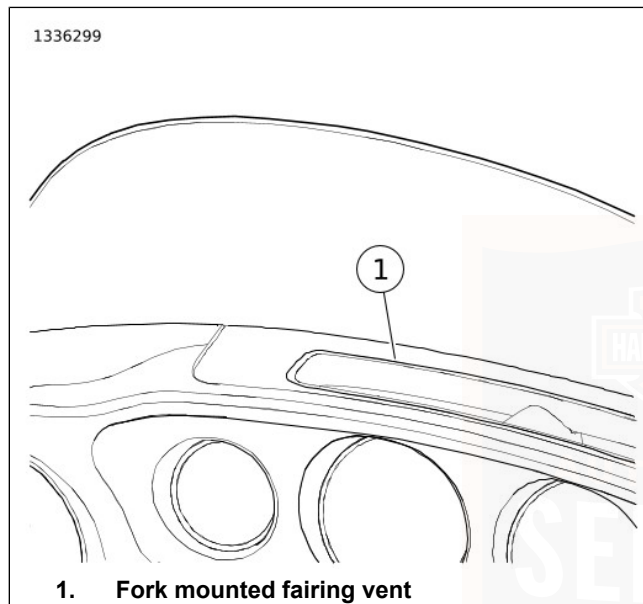


**Figure 49. Fairing Splitstream Vent (Fork Mounted Fairing)**

## ADJUSTABLE AIR DEFLECTORS

See Figure 50. Some models have adjustable air deflectors located along the left and right edge of the fairing. These deflectors can be rotated to direct airflow for rider and passenger comfort.

**Adjust:** With the vehicle parked, grasp the outer edge of the deflector and pivot to the desired position.



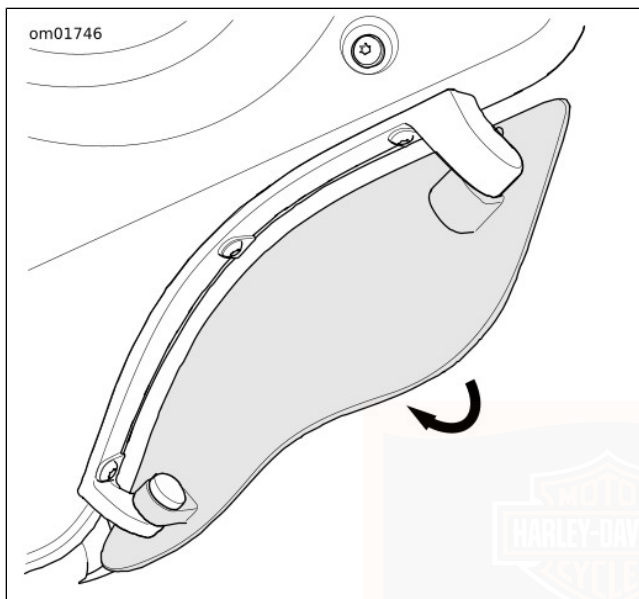

**Figure 50. Air Deflector**

## **FAIRING LOWERS**

Some models have fairing lowers. The fairing lowers provide an extra level of riding comfort by blocking wind and water from the rider's legs.

### **NOTE**

*The fairing lowers on Twin-Cooled models contain cooling system components and do not have a storage compartment.*

*Do not remove fairing lowers on Twin-Cooled vehicles.*

*Do not store any items in the fairing lowers on a Twin-Cooled vehicle.*

## **Vent Door**

See Figure 51. The fairing lower vent door can be adjusted to direct airflow for rider comfort and circulate air across the engine. Slide the vent door lever to adjust or close the vent door.

## **Cooling System: Twin-Cooled Vehicles**

See Figure 51. On Twin-Cooled vehicles, the fairing lowers include cooling system components. The coolant bottle is behind the access panel in the right side fairing lower. See **MAINTENANCE AND LUBRICATION > COOLING SYSTEM** (Page 178) to check the coolant level.

The access panel is secured with three retainers. Carefully pry at the top and at each lower corner to remove the access panel. To install, push the panel until the retainers snap into place.

Keep the radiator screen and outlet duct clean and free from obstructions.

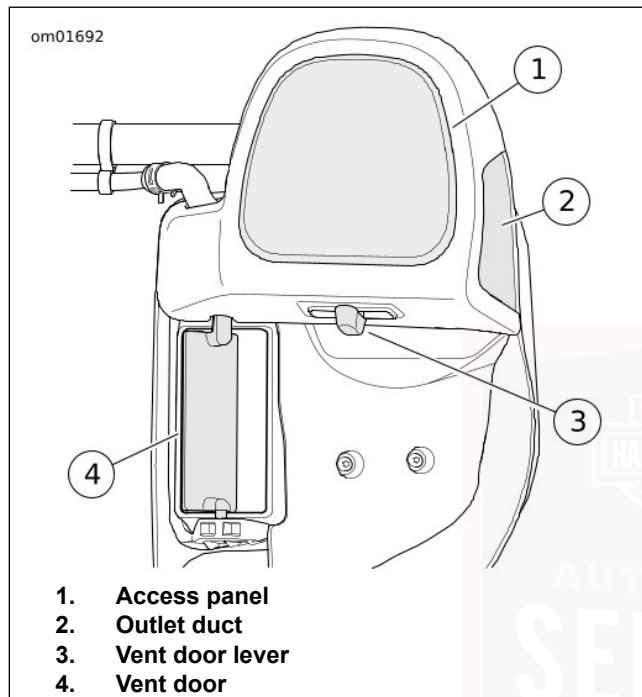


Figure 51. Fairing Lower: Twin-Cooled Models

## TOUR-PAK

### ⚠ WARNING

Do not exceed Tour-Pak weight capacity. Too much weight can cause loss of control, which could result in death or serious injury. (00401c)

### ⚠ CAUTION

Do NOT pull on any electrical wires. Pulling on electrical wires may damage the internal conductor causing high resistance, which may result in minor or moderate injury. (00168a)

## Operation

See Figure 52. Some vehicles have a lockable Tour-Pak for storing cargo.

**Lock/Unlock:** Use the ignition key to lock or unlock the latch handle.

**Open:** Pull the latch handle. Raise the lid.

**Close:** Close the lid. Push the latch handle to secure the lid. Lift on lid to check that it is secure.

## Removal/Installation

### ⚠ CAUTION

**Do NOT pull on any electrical wires. Pulling on electrical wires may damage the internal conductor causing high resistance, which may result in minor or moderate injury. (00168a)**

The Tour-Pak can be installed in the forward or rearward position. The motorcycle is shipped from the factory with the Tour-Pak installed in the rearward position. See the service manual or a Harley-Davidson dealer.

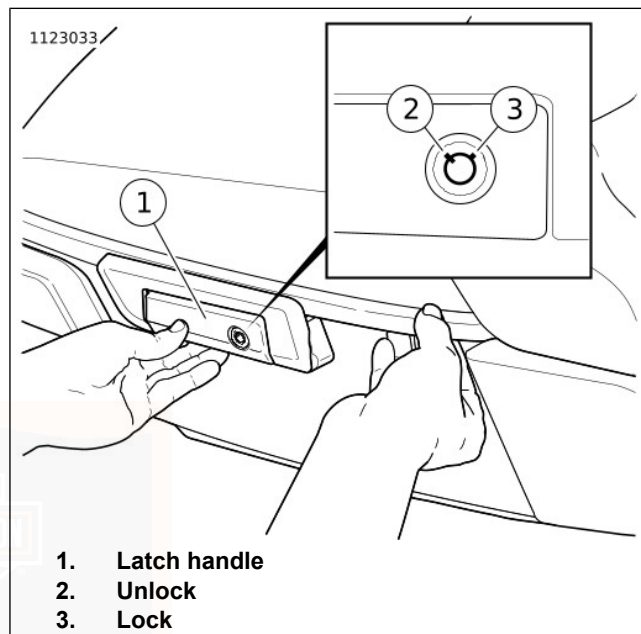


Figure 52. Tour-Pak

## LUGGAGE

### ⚠ WARNING

See **ACCESSORIES AND CARGO** section within the **SAFETY FIRST** section in your owner's manual. Improper cargo loading or accessory installation can cause component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00021c)

### ⚠ WARNING

Do not exceed the motorcycle's **Gross Vehicle Weight Rating (GVWR)** or **Gross Axle Weight Rating (GAWR)**. Exceeding these weight ratings can lead to component failure and adversely affect stability, handling and performance, which could result in death or serious injury. (00016f)

- GVWR is the total weight of the motorcycle, accessories, rider, passenger and cargo that can be safely carried.
- GAWR is the maximum amount of weight that can be safely carried on each axle.
- See information label on frame steering head or frame downtube for GVWR and GAWR.

### ⚠ WARNING

Improper loading of cargo or installation of accessories can affect motorcycle stability and handling, which could result in death or serious injury. (00095a)


- Keep cargo weight concentrated close to the motorcycle and as low as possible to minimize the change in the motorcycle's center of gravity. Distribute weight evenly on both sides of the vehicle. Do not load bulky items too far behind the rider or add weight to the handlebars or front forks. Do not exceed maximum load on the label within the luggage.
- Check that cargo is secure. The cargo cannot shift while riding. Periodically recheck load.
- Close and lock luggage before riding or leaving the vehicle unattended.

## TRUNK


The vehicle has a lockable trunk. When loading the trunk, distribute weight evenly. Do not exceed the maximum load of 22 kg (50 lb). Contents in trunk may shift while riding.


1. See Figure 53. To unlock trunk, insert key into barrel lock and turn one-eighth turn clockwise. Return key to center position and remove.

2. See Figure 54. Push in the barrel lock to unlatch door. Pull handle to open trunk door.
3. Firmly close the trunk door to engage latch. Pull handle to make sure that trunk door is secure.
4. To lock trunk, insert key into barrel lock and turn one-eighth turn counterclockwise. Return key to center position and remove. Push on barrel lock to make sure that trunk is locked.

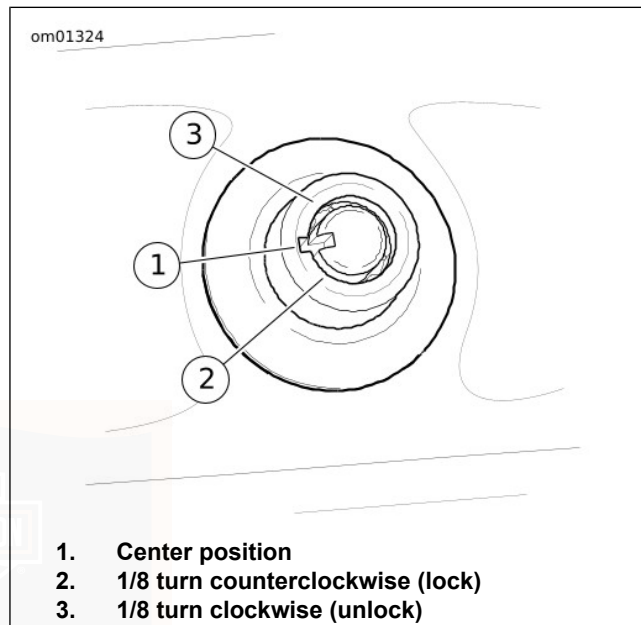

**Figure 53. Trunk Lock**

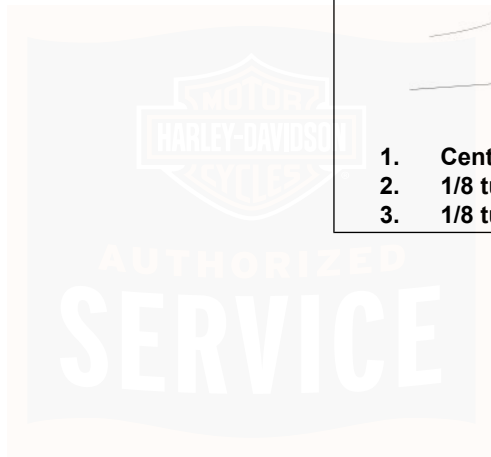

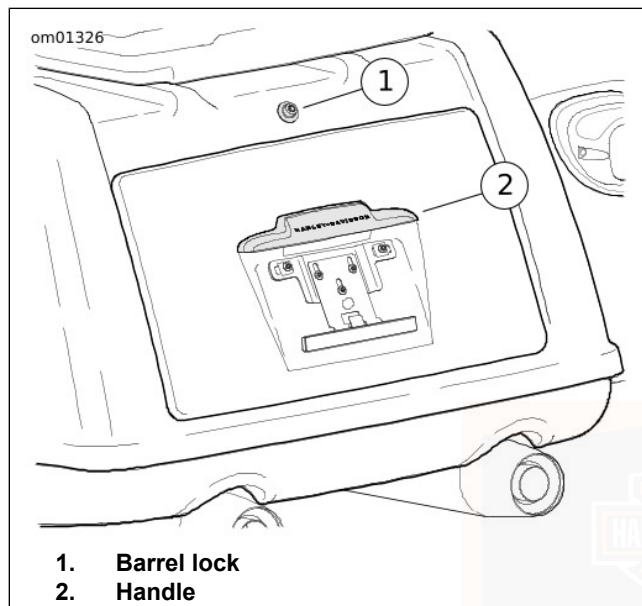

**Figure 54. Trunk (typical)**

## GENUINE MOTOR PARTS AND ACCESSORIES

Stop at your Harley-Davidson dealer to pick up a copy of the Genuine Motor Parts and Accessories catalog or go to [www.harley-davidson.com](http://www.harley-davidson.com) to view thousands of Genuine Motor Accessories that are available for Harley-Davidson motorcycles.

The website includes the following tools and resources for accessorizing and personalizing your motorcycle.

### Online Catalog

The full Genuine Motor Parts and Accessories catalog is available online in Portable Document Format (PDF) format. The catalog includes hundreds of pages of Harley-Davidson accessories and maintenance products.

### Shop for Your Bike

Browse through categories of accessories and options available specifically for your motorcycle. View product descriptions, pricing, fitment and online instruction sheets for many of the available products.

## CLEANING AND GENERAL CARE

- Harley-Davidson cleaning products are tested extensively for use on motorcycle surfaces. These products are formulated to be compatible with one another. See a Harley-Davidson dealer to purchase recommended cleaning products. Refer to Table 34 and Table 35.
- Care, cleaning and protection of the vehicle surfaces is the responsibility of the owner.
- Clean and protect the cosmetic surfaces on your motorcycle as often as possible to inhibit rust and corrosion.
- Some painted finishes and other surfaces may be scratched if gravel, dirt or grime are rubbed across the surface during washing. Use clean towels and avoid rubbing sediment across gloss finishes.
- Do not use paper towels, cloth diapers or other materials with nylon fibers which can cause fine scratches to surfaces.
- For repair of scratched surfaces, see a Harley-Davidson dealer.

### **⚠ WARNING**

**Observe warnings on labels of cleaning compounds. Failure to follow warnings could result in death or serious injury. (00076a)**

### **▲ WARNING**

**Do not wash brake discs with cleaners containing chlorine or silicone. Cleaners containing chlorine and silicone can impair brake function, which could result in death or serious injury. (00077a)**

### **NOTICE**

**Do not use a pressure washer to clean motorcycle. Using a pressure washer can result in equipment damage. (00489c)**

### **NOTICE**

**Use of abrasive products or powered buffing equipment will cause permanent cosmetic damage to body panels. Use only recommended products and techniques outlined in this manual to avoid damaging body panels. (00245b)**

## **Cleaning Wheels and Tires**

### **NOTE**

*Corrosion to wheels is not considered to be a defect in materials or workmanship.*

- Wheels can corrode or be cosmetically damaged if they are not properly cleaned, polished and preserved.
- Harley-Davidson recommends that wheels be cared for weekly.
- Keep wheels clean from harsh chemicals, acid-based wheel cleaners, salt, and accumulated brake dust.
- After washing wheels with WHEEL & TIRE CLEANER, use the polish and sealing products according to the type of wheels on your motorcycle. Refer to Table 34.

## **Radiator**

See MAINTENANCE AND LUBRICATION > COOLING SYSTEM (Page 178) for important information regarding the cleaning of the radiator.

## **RECOMMENDED CLEANING PRODUCTS**

The following products are recommended for Harley-Davidson motorcycles, parts and accessories. Your motorcycle may not have all the components shown in the tables.



**Table 34. Recommended Cleaning and Care Products**

<b>PRODUCT PART NO.</b>	<b>PURPOSE</b>	<b>FRAME</b>	<b>BODY PANELS</b>	<b>WHEELS</b>	<b>DENIM FINISH</b>	<b>OTHER</b>
BARE METAL POLISH 93600028 (U.S.) 93600083 (Non-U.S.)	Polishes non-clear coated polished aluminum or polished stainless steel surfaces. <sup>(1)</sup>	As applicable				
BLACK LEATHER REJUVENATOR 93600033 (U.S.) 93600081 (Non-U.S.)	Rejuvenates black leather products so they look brand new.	No	No	No	No	Black leather goods
BUG REMOVER 93600122 (U.S.) 93600140 (Non-U.S.)	Removes bugs from metal, plastic or painted surfaces.	Yes	Yes	Yes	Yes	
CHROME CLEAN & SHINE 93600031 (U.S.) 93600082 (Non-U.S.)	Shines chrome-plated surfaces and cleans brushed aluminum or stainless steel surfaces.	As applicable				
DENIM PAINT CLEANER 93600124 (U.S.) 93600127 (Non-U.S.)	Waterless quick cleaner and detailer.	Yes	Yes	Yes	Yes	
ENGINE BRIGHTENER 93600002 (U.S.) 93600068 (Non-U.S.)	Rejuvenates wrinkle black engine finish.	No	No	No	No	Wrinkle black engines
EVERYDAY DETAILER 93600157 (U.S.) 93600158 (Non-U.S.)	Cleans, shines, brightens and protects in a short amount of time.	Yes	Yes	Yes	No	

**Table 34. Recommended Cleaning and Care Products**

<b>PRODUCT PART NO.</b>	<b>PURPOSE</b>	<b>FRAME</b>	<b>BODY PANELS</b>	<b>WHEELS</b>	<b>DENIM FINISH</b>	<b>OTHER</b>
GRAPHENE SPRAY COATING 93600166 (U.S.) 93600169 (Non-U.S.)	Provides a protective barrier for glossy paint surfaces and chrome. Repels water and dust.	Yes	Yes	As applicable	No	
GLOSS DETAILER 93600123 (U.S.) 93600125 (Non-U.S.)	Produces high gloss with UV protection. Allows chrome to breathe, unlike wax. Good for windshields.	Yes	Yes	Yes	No	
HARLEY TRAVEL CARE KIT 93600149 (U.S. only)	Travel size cleaning and care products. (Not for use on denim finishes.)	Yes	Yes	Yes	No	
LEATHER PROTECTANT 93600034 (U.S.) 93600080 (Non-U.S.)	Weatherproofs and preserves leather products.	No	No	No	No	Leather goods
QUICK WASH 93600162 (U.S.) 93600171 (Non-U.S.)	A quick wash for a lightly soiled motorcycle. Cleans all surfaces, sheeting action prevents spots.	Yes	Yes	Yes	Yes	
SCRATCH & SWIRL REPAIR 93600155 (U.S.) 93600156 (Non-U.S.)	Removes fine scratches and swirls.	Yes	Yes	No	No	
SEAT, SADDLEBAG & TRIM CLEANER 93600167 (U.S.) 93600170 (Non-U.S.)	Cleans and conditions vinyl, leather and plastic. Use on seats, saddlebags, inner fairings and any other trim.	No	No	No	No	Seats, saddlebags and trim

**Table 34. Recommended Cleaning and Care Products**

PRODUCT PART NO.	PURPOSE	FRAME	BODY PANELS	WHEELS	DENIM FINISH	OTHER
SPRAY CLEANER & POL- ISH 93600029 (U.S.) 93600084 (Non-U.S.)	Aerosol quick cleaner and detailer. Reduces static attraction to dust. Works great for removing bugs. <sup>(1)</sup>	Yes	Yes	Yes	No	
SUNWASH BIKE SOAP 93600129 (U.S.) 93600141 (Non-U.S.)	Thorough washing of all surfaces with a wash mitt. Reduces hard water spots when washing a motorcycle in the sun.	Yes	Yes	Yes	Yes	
WHEEL & TIRE CLEANER 93600121 (U.S.) 93600126 (Non-U.S.)	Removes brake dust and road grime from wheels, tires and whitewalls. Do not use on frames or anodized parts.	No	No	Yes	No	Black- coated exhaust pipes and mufflers
<i>(1) DO NOT use BARE METAL POLISH or SPRAY CLEANER &amp; POLISH on coated aluminum wheels, protective coating will be removed.</i>						

**Table 35. Recommended Surface Care Products**

PRODUCT PART NO.	PURPOSE
BUG EATER SPONGE 93600110	When paired with water and BUG REMOVER, the BUG EATER SPONGE breaks down and dissolves baked on bugs and road grime.
CLEANING BRUSH KIT 94844-10	Brush kit for detailing your motorcycle.
DETAILING SWABS 93600107	Large cotton swabs for cleaning crevices and detailed surfaces.

**Table 35. Recommended Surface Care Products**

<b>PRODUCT PART NO.</b>	<b>PURPOSE</b>
BIKE WASH BUCKET 93600133	Wash bucket. Includes GRIT GUARD insert.
HOG BLASTER MOTORCYCLE DRYER 94651-09A	Blows a stream of warm dry filtered air. Reduces streaks and water spots.
MICROFIBER APPLICATORS (4 pack) 93600168	Use to apply most wax, coating, sealant, and dressing products.
MICROFIBER DETAILING CLOTH 94663-02	Highly absorbent detailing cloth for polishing and sealing. Contains no nylon fibers.
MICROFIBER DETAILING CLOTHS (3 pack) 93600136	Highly absorbent detailing cloths for polishing and sealing.
MICROFIBER SOFT DRYING TOWEL 93600132	Washable and reusable. Provides a lint- and streak-free drying action for a professional results.
MICROFIBER WASH MITT 93600130	Premium quality microfiber washing mitten. Use with either hand.
WHEEL & SPOKE BRUSH 43078-99	Cone-shaped scrub brush for wheels.

## **WASHING THE MOTORCYCLE**

Use only recommended cleaning and care products. Refer to Table 34 and Table 35.

### **NOTE**

*During rinsing and washing, avoid direct spray on electrical components, air filter element and any luggage or saddlebag*

*sealing areas (if equipped). Avoid spraying water under leather saddlebag covers (if equipped).*

## **Preparation**

1. Allow motorcycle to cool before rinsing or washing. Spraying water on hot surfaces can leave water spots and mineral deposits.

2. Rinse the motorcycle from the bottom up.
3. To loosen dried bugs or hardened dirt, allow surfaces to soak under a damp towel.

## **Cleaning Wheels and Tires**

1. Rinse wheel and tire surfaces. Avoid splashing brake dust on chrome or painted parts.
2. Apply WHEEL & TIRE CLEANER. Allow cleaner to set for one minute.
3. Clean the wheel with a BUG EATER SPONGE or WHEEL & SPOKE BRUSH. Thoroughly scrub all brake dust and other sediments off the wheel. Accumulated brake dust can trap moisture and dirt, which leads to wheel corrosion.
4. Rinse well.

## **Washing the Motorcycle**

### *NOTE*

*See the appropriate instructions in this section for cleaning leather, denim (flat) finishes, windshields or other special surfaces.*

1. If necessary, use BUG REMOVER to remove bug splatters.
  - a. Rinse the affected surfaces during preparation.

- b. Spray the area with BUG REMOVER.
  - c. Wait one minute while the BUG REMOVER penetrates the bug splatters.
  - d. Use the BUG EATER SPONGE while washing to easily remove bugs.

2. Prepare the wash.
  - a. Fill a HARLEY WASH BUCKET with clean water.
  - b. Add SUNWASH BIKE SOAP, following the directions on the package.
  - c. Soak the WASH MITT and/or a BUG EATER SPONGE in the SUNWASH solution.
3. Wash all surfaces starting at the top working down toward the ground.
4. Rinse the motorcycle twice in both directions:
  - a. Rinse from the bottom up.
  - b. Rinse from the top down.

## **Drying the Motorcycle**

1. Dry the surfaces from the top down using a SYNTHETIC DRYING CHAMOIS or a HOG BLASTER MOTORCYCLE DRYER. Avoid using any type of forced air on speakers or other sensitive components.

2. Dampen chamois in clean water and wring out the excess. The chamois is more absorbent when wet.
3. Wipe across the vehicle surface.
4. Repeat as necessary until surface is dry.

## Polishing and Sealing

### NOTE

*If motorcycle has denim finish, skip the Polishing and Sealing procedure.*

1. Apply GLAZE POLY SEALANT with a DISPOSABLE DETAILING SOFT CLOTH or MICROFIBER DETAILING CLOTH, following the instructions on the package.
2. Buff with a DISPOSABLE DETAILING SOFT CLOTH.
3. Polish and seal the wheels to prevent corrosion.

## WINDSHIELD CARE

### NOTICE

**Polycarbonate windshields/wind deflectors require proper attention and care to maintain. Failure to maintain polycarbonate properly can result in damage to the windshield/wind deflector. (00483e)**

### NOTICE

**Use only Harley-Davidson recommended products on Harley-Davidson windshields. Do not use harsh chemicals or rain sheeting products, which can cause windshield surface damage, such as dulling or hazing. (00231c)**

- Powdered, abrasive or alkaline cleanser can damage windscreen/windshields. Ammonia-based window cleaners cause permanent yellow effects to windshields.
- Do not use gas station windshield cleaner as finish can be damaged.
- Do not use a brush or squeegee as finish can be damaged.
- Do not clean in hot sun or high temperature.

Windshields require special care. However, windshields can be washed with WINDSHIELD CLEANER - INDIVIDUAL WIPES, SUNWASH BIKE SOAP or QUICK WASH when washing the entire motorcycle. Refer to Table 34.

### NOTE

- Use BUG REMOVER to soft bug splatters. Wipe clean with a BUG EATER SPONGE.
- Covering windshields with a clean, wet cloth for approximately 15-20 minutes before washing makes dried bug removal easier.

1. Use WINDSHIELD CLEANER to detail windshields.
2. Wipe dry with a clean MICROFIBER DETAILING CLOTH.

#### NOTE

*To minimize swirl marks, clean windshield when the motorcycle is cool and parked in the shade. Faint swirl marks are normal. Swirl marks are more visible on tinted windshields.*

## LEATHER AND VINYL CARE

### NOTICE

**Do not use bleach or detergents containing bleach on saddlebags, seats, tank panels or painted surfaces. Doing so can result in equipment damage. (00229a)**

Do not use ordinary soap to clean leather or fur. It could dry or remove the oils from the leather.

Leather, vinyl and other synthetic surfaces must be periodically cleaned and treated to maintain its appearance and extend its life. Clean and treat these surfaces once a season or more frequently under adverse conditions.

These surfaces are not designed for long-term exposure to inclement weather. Protect these surfaces with a Harley-Davidson Seat Rain Cover or Motorcycle Storage Cover (sold separately).

1. Vacuum or blow dust off surface.

2. Thoroughly clean surfaces with SEAT, SADDLEBAG & TRIM CLEANER, following directions on the bottle.
3. Allow the material to dry naturally and completely at room temperature before applying other products to the material. Do not use artificial means to dry the material quickly.
4. For leather only, rejuvenate faded black surfaces with BLACK LEATHER REJUVENATOR, and apply LEATHER PROTECTANT to weatherproof and preserve the leather.

#### NOTE

*Many Harley-Davidson accessories and seats are made of either treated or untreated leather or have leather inserts. Natural materials age differently and require different care than man-made materials. Seat covers and panels made of leather gain "character", such as wrinkles, with age. Leather is porous and organic. Each leather product settles into its own distinct form with use. Your leather product matures into its own custom shape and style from the sun, rain and time. This maturing is natural and enhances the custom quality of your Harley-Davidson motorcycle.*

## DENIM FINISH

Some motorcycles have a denim (flat or matte) finish. The denim finish has qualities which differ from high gloss finishes on all other Harley-Davidson motorcycles. Like denim fabric, denim paint will burnish or mar with age and use, thus adding

character and personality to the finish. For recommended products, refer to Table 34.

- If scratched, the color coat of paint does nick/scuff and these marks cannot be rubbed out.
- If polished, the finish will become less matte and more glossy over time.

## Cleaning Denim Finish

**For Light deposits:** Use DENIM PAINT CLEANER and a SOFTCLOTH.

**For heavier deposits:** Use either SUNWASH BIKE SOAP and a clean H-D WASH MITT or QUICK WASH. Rinse thoroughly with clean water.

## AUDIO SYSTEM CARE

Use only Harley-Davidson recommended products and methods to keep the radio, speakers and other audio system components clean and in good condition. Do not use any abrasives, polishes or rubbing compounds to clean the screen or other components. Do not use any ammonia-based cleaners on the screen. Use of other products or methods may cause damage to components.

## Screen

### NOTE

*Do not use any chemical cleaners or chemical containing wipes or cloths. These can cause damage to the screen surface.*

Gently clean the display glass surface with a clean, dry microfiber cloth. Prior to cleaning it is suggested to remove any deposits of visible dust, dirt, sand particles with a gentle stream of compressed air. Cleaning the display glass in the presence of above can create scratches.

## Cleaning the Radio

Spray a light amount of HARLEY GLOSS on a MICROFIBER DETAILING CLOTH. Be careful to gently remove any sediments without rubbing them into the screen. Apply circular motions from the center and outwards. Use a dry MICROFIBER DETAILING CLOTH to dry the screen. Repeat the process as necessary.

### NOTE

*Do not use any screen enhancing chemicals or products. These can damage the screen surface.*



## Speaker Care

If a haze develops on speakers with a protective grille, use HARLEY SEAT, SADDLEBAG, AND TRIM CLEANER and a SOFTCLOTH or SOFT DETAILING PAD to clean. Do not apply wax or any other similar products on speaker grilles.

Do not use compressed or forced air on speakers.

Vehicles with saddlebag speakers are designed to prevent water intrusion and to allow water to drain during washing or riding in all weather. To remove any standing water from saddlebag speakers, open the saddlebags and gently shake any remaining water from the speakers.

## FAIRING SPLITSTREAM VENT CARE

Keep the vent free of foreign objects. Periodically clean the vent to remove dirt, bugs and leaves.

1. Using mild soapy water and a soft brush, remove dirt, leaves and bugs from vent.

## EXHAUST CARE

Allow exhaust components to cool before cleaning.

For chrome exhaust surfaces, apply Boot Mark Remover to remove boot marks, melted plastic or asphalt resin. Allow the gel to set for a few minutes, scrape off the melted material, and rinse clean.

For black-coated exhaust surfaces, apply Wheel & Tire Cleaner while motorcycle is wet during washing. Wipe or scrub exhaust surfaces and rinse clean.

### NOTE

*There is no warranty on exhaust pipes and mufflers with regard to any discoloration. Blueing is caused by tuning characteristics, cam timing, over-heating, and so on. It is not caused by defective manufacturing.*

## WHEEL CARE

Wheels can corrode or be cosmetically damaged if they are not properly cleaned, polished and preserved. Cleaning and sealing wheels with the proper treatment guards against pitting, corrosion, spots and stains. Harley-Davidson recommends that wheels be cared for weekly. Corrosion to wheels is not considered a defect in materials or workmanship.

### NOTE

*Bare aluminum wheels do not have a protective coating and corrode unless properly treated. Apply BARE ALUMINUM WHEEL PROTECTANT when purchasing the motorcycle and at least twice per year to prevent cosmetic damage.*

Keep wheels clean from harsh chemicals, acid-based wheel cleaners, salt and accumulated brake dust. After washing wheels with WHEEL & TIRE CLEANER, use the polish and

sealing products according to the type of wheels. Refer to Table 36.

**Table 36. Wheel Polish and Sealing Products**

WHEELS	PRODUCT	DESCRIPTION
Anodized	GRAPHENE	Cleans surface, removes fine scratches. Provides a breathable sealant against acid, chemicals, salt and brake dust.
	GLOSS DETAILER	Seals and protects against harsh chemicals, salt and other sediments to prevent corrosion.
Chrome	CHROME CLEAN & SHINE	Non-abrasive cleaner to brighten chrome wheels.
	GLOSS DETAILER	Seals and protects against harsh chemicals, salt and other sediments to prevent oxidation.
Polished and bare aluminum or stainless steel	BARE METAL POLISH <sup>(1)</sup>	Microabrasive polish to refurbish polished wheels. Do not use on chrome.

*(1) DO NOT use BARE METAL POLISH on coated aluminum wheels, protective coating will be removed.*

## STORING MOTORCYCLE

If the motorcycle will not be operated for several months, take steps to protect the motorcycle. Always protect parts against corrosion, preserve the battery and prevent the build-up of gum and varnish in the fuel before storage.

Make a list of everything you do and fasten it to a handlebar grip. When you take the motorcycle out of storage, this list is your reference/checklist to get your motorcycle in operating condition.

### ⚠ WARNING

**Do not store motorcycle with gasoline in tank within the home or garage where open flames, pilot lights, sparks or electric motors are present. Gasoline is extremely flammable and highly explosive, which could result in death or serious injury. (00003a)**

1. Fill fuel tank. Add a gasoline stabilizer. Use one of the commercially available gasoline stabilizers and follow the manufacturer's instructions.

2. Warm motorcycle to operating temperature. Change oil and turn engine over to circulate the new oil. See MAINTENANCE AND LUBRICATION > CHANGE OIL AND OIL FILTER (Page 158).
3. Prepare battery for storage. See SERVICE PROCEDURES > BATTERY MAINTENANCE (Page 189).
4. Check and fill the cooling system on applicable vehicles. See MAINTENANCE AND LUBRICATION > COOLING SYSTEM (Page 178).
5. To protect the body panels, engine, chassis and wheels from corrosion, follow the cosmetic care procedures before storage. See AFTER RIDING > CLEANING AND GENERAL CARE (Page 137).
6. Cover the motorcycle with a material such as light canvas that breathes. Plastic materials that do not breathe promote condensation and corrosion.

## REAR AXLE TIE DOWN LOOPS

The rear axle has steel loops on the bottom (left and right sides) which may be used to tie down the rear end of the vehicle when transporting on a trailer.



## NOTES

---



## SAFE OPERATING MAINTENANCE

### ⚠ WARNING

Perform the service and maintenance operations as indicated in the regular service interval table. Lack of regular maintenance at the recommended intervals can affect the safe operation of your motorcycle, which could result in death or serious injury. (00010a)

### ⚠ WARNING

If you operate your motorcycle under adverse conditions (severe cold, extreme heat, very dusty environment, very bad roads, through standing water, etc.), you should perform the regular maintenance intervals more frequently to ensure the safe operation of your motorcycle. Failure to maintain your motorcycle could result in death or serious injury. (00094a)

### NOTICE

When lifting a motorcycle using a jack, be sure jack contacts both lower frame tubes where down tubes and lower frame tubes converge. Never lift by jacking on cross-members, oil pan, mounting brackets, components or housings. Failure to comply can cause serious damage resulting in the need to perform major repair work. (00586d)

Keep the motorcycle maintained according to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265). Frequently inspect the motorcycle between regular service intervals and after periods of storage to determine if additional maintenance is necessary.

Check the following items:

1. Tires for correct pressure, excessive wear or any signs of tire damage.
2. Belt for proper tension, wear or damage.
3. Brakes, steering and throttle for responsiveness and freedom from binding.
4. Brake fluid level and condition. Hydraulic lines and fittings for leaks. Coolant level if applicable. Also, check brake pads and discs for wear.
5. Cables for fraying or crimping and free operation.
6. Engine oil and primary chaincase/transmission fluid levels.
7. Headlamp, tail lamp, brake lamp and turn signals for proper operation.

## BREAK-IN MAINTENANCE

### NOTE

*The performance of new motorcycle initial service is required to keep your new motorcycle warranty in force and for proper emissions system operation.*

After a new motorcycle has been ridden 1,600 km (1000 mi), visit an authorized Harley-Davidson dealer for initial service. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).

## PREPARING THE MOTORCYCLE FOR MAINTENANCE

### ⚠ WARNING

Be sure to check capacity rating and condition of hoists, slings, chains and cables before use. Exceeding capacity ratings or using lifting devices that are in poor condition can lead to an accident, which could result in death or serious injury. (00466c)

### NOTE

Always support a motorcycle that is being serviced with blocks or stands.

## Setting Motorcycle Upright

1. Place motorcycle upright on a level surface or suitable lift, if available.
2. Verify that the motorcycle is level.
3. Secure with tie-downs.

## JACKING POINTS

### NOTICE

When lifting a motorcycle using a jack, be sure jack contacts both lower frame tubes where down tubes and lower frame tubes converge. Never lift by jacking on cross-members, oil pan, mounting brackets, components or housings. Failure to comply can cause serious damage resulting in the need to perform major repair work. (00586d)

### NOTE

- Never use differential housing as lifting point.
- Set the parking brake and block the wheels as necessary to prevent the vehicle from rolling.
- Lift against the forgings where the down tubes and lower frame tubes join.
- Never lift using the passenger hand grab handles.


Because the balance point is toward the rear, special consideration must be made when lifting with a jack for service.

See Figure 55. When lifting the front, engage the parking brake. Place the jack under the forward portion of the frame, approximately centered under the crankshaft, and make sure


that it contacts the frame tube forgings on both sides. Verify that the jack is not contacting the parking brake components.

See Figure 56. When lifting the rear, secure the front tire in a wheel vise. Secure front end to the motorcycle lift using straps. Place the jack under the rear portion of the frame, approximately centered under the clutch cover. Make sure that it contacts the frame tube forgings on both sides.

Alternatively, each rear wheel can be raised by placing a jack under the left or right side of the axle.

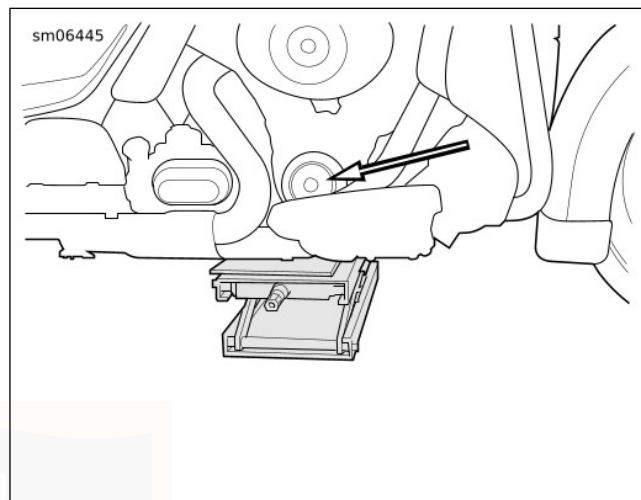

**Figure 55. Jack Placement to Lift Front**

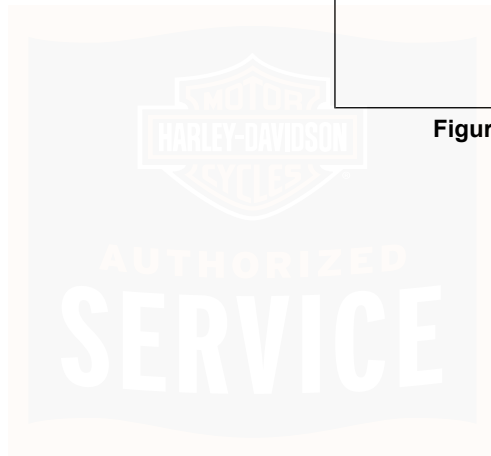

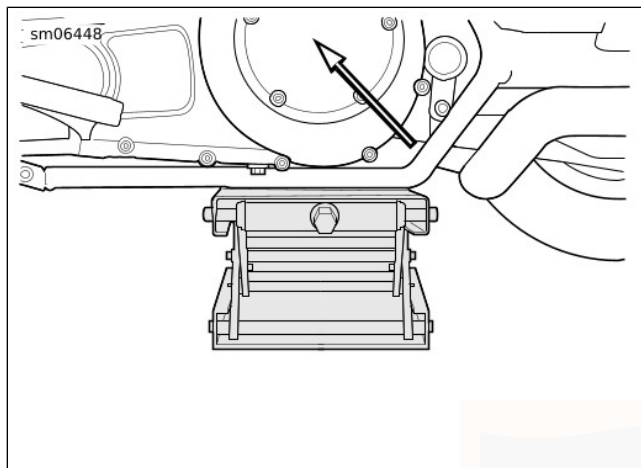


Figure 56. Jack Placement to Lift Rear

## DISPOSAL AND RECYCLING

Help protect our environment! Many communities maintain facilities for recycling used fluids, plastics and metals. Dispose of or recycle used oil, lubricants, fuel, coolant, brake fluid and batteries in accordance with local regulations. Many Harley-Davidson parts and accessories are made of plastics and metals which can also be recycled.

## ENGINE LUBRICATION

### Engine Lubrication

#### ⚠ CAUTION

Prolonged or repeated contact with used motor oil may be harmful to skin and could cause skin cancer. Promptly wash affected areas with soap and water. (00358b)

#### ⚠ CAUTION

If engine oil is swallowed, do not induce vomiting. Contact a physician immediately. In case of contact with eyes, immediately flush with water. Contact a physician if irritation persists. (00357d)

#### NOTICE

Do not switch lubricant brands indiscriminately because some lubricants interact chemically when mixed. Use of inferior lubricants can damage the engine. (00184a)

Always use the proper grade of oil for the lowest temperature expected before the next scheduled oil change. Refer to Table 37.

This motorcycle was originally equipped with GENUINE HARLEY-DAVIDSON H-D 360 MOTORCYCLE OIL 20W/50. H-D 360 is the preferred oil under normal operating conditions.



If operation under extreme cold or heat are expected, refer to Table 37 for alternative choices.

If necessary and H-D 360 is not available, add oil certified for diesel engines. Acceptable designations include: CH-4, CI-4

and CJ-4. The preferred viscosities, in descending order are: 20W50, 15W40 and 10W40.

At the first opportunity, see an authorized dealer to change back to 100 percent Harley-Davidson oil.

**Table 37. Recommended Engine Oils**

TYPE	VISCOSITY	LOWEST AMBIENT TEMPERATURE	COLD-WEATHER STARTS BELOW 50 °F (10 °C)
Screamin' Eagle SYN3 Full Synthetic Motorcycle Lubricant	SAE 15W50	Above -1 °C (30.2 °F)	Excellent
Screamin' Eagle SYN3 Full Synthetic Motorcycle Lubricant	SAE 20W50	Above -1 °C (30.2 °F)	Excellent
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 20W50	Above 4 °C (39.2 °F)	Good
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 50	Above 16 °C (60.8 °F)	Poor
Genuine Harley-Davidson H-D 360 Motorcycle Oil	SAE 60	Above 27 °C (80.6 °F)	Poor

### Low Temperature Lubrication

Change engine oil often in colder climates. If motorcycle is frequently ridden less than 24 km (15 mi), in ambient temperatures below 16 °C (60 °F), reduce oil change intervals to 2,400 km (1500 mi).

#### NOTE

*Lower ambient temperatures require more frequent oil changes.*

Water vapor is a normal by-product of combustion. During cold-weather operation, some water vapor condenses to liquid form on the cool surfaces inside the engine. In freezing

weather, this water becomes slush or ice. If the engine is not warmed to operating temperature, accumulated slush or ice blocks the oil lines and causes engine damage. Over time, water will accumulate, mix with the engine oil and form a sludge that is harmful to the engine.

If the engine is allowed to warm to normal operating temperature, most of the water evaporates and exits through the crankcase breather.

## CHECK ENGINE OIL LEVEL

### ⚠ CAUTION

**Prolonged or repeated contact with used motor oil may be harmful to skin and could cause skin cancer. Promptly wash affected areas with soap and water. (00358b)**

### NOTICE

**Do not overfill oil. Doing so can result in oil carryover to the air cleaner leading to equipment damage and/or equipment malfunction. (00190b)**

### NOTE

*See Figure 58. When checking oil level, use the gauge marked FULL HOT VEHICLE UPRIGHT.*

## Oil Level Cold Check

1. For pre-ride inspection, park vehicle on level ground.
2. See Figure 57. Remove filler plug/dipstick. Wipe off the dipstick. Insert the dipstick and tighten into the fill spout.

### NOTE

*Oil level on a cold engine should never be above the midway point.*

3. See Figure 58. Remove filler plug/dipstick. Using the gauge marked FULL HOT VEHICLE UPRIGHT on the dipstick, verify the oil level. The correct oil level should register midway (2) between the ADD QT and FULL HOT marks on the dipstick.
4. If oil level is at or below the ADD QT mark, add only enough oil to bring the level to the ADD QT mark.
5. Start and idle engine for two minutes. Turn off engine.
6. Check oil level. Add only enough to bring level midway between the ADD QT (1) and FULL HOT (3).

## Oil Level Hot Check

### NOTICE

**Do not allow hot oil level to fall below Add/Fill mark on dipstick. Doing so can result in equipment damage and/or equipment malfunction. (00189a)**

#### NOTE

- *The engine requires a longer warm-up period in colder weather.*
- *Perform engine oil level hot check only when engine is at normal operating temperature.*

1. Run motorcycle until engine oil is at normal operating temperature (93.4 °C (200 °F) or higher).
2. Park vehicle on level ground. Allow engine to idle for 1-2 minutes. Turn off engine.
3. See Figure 57. Remove filler plug/dipstick and wipe off the dipstick. Insert the dipstick and tighten into the fill spout.
4. See Figure 58. Remove filler plug/dipstick. Using the gauge marked FULL HOT VEHICLE UPRIGHT on the dipstick, verify the oil level. The level should be between the ADD QT (1) and FULL HOT (3) marks. Add oil as necessary to bring the level to the FULL HOT mark on the dipstick. Do not overfill.

#### NOTE

*Use only recommended oil specified in MAINTENANCE AND LUBRICATION > ENGINE LUBRICATION (Page 154). Refer to Table 37.*

5. Start engine and carefully check for oil leaks around drain plug and oil filter.

#### NOTE

- *Check engine oil level at each complete fuel refill.*
- *Change oil at specified intervals in normal service at warm or moderate temperatures. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).*
- *Oil change intervals should be more frequent in cold weather or severe operating conditions. See SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).*


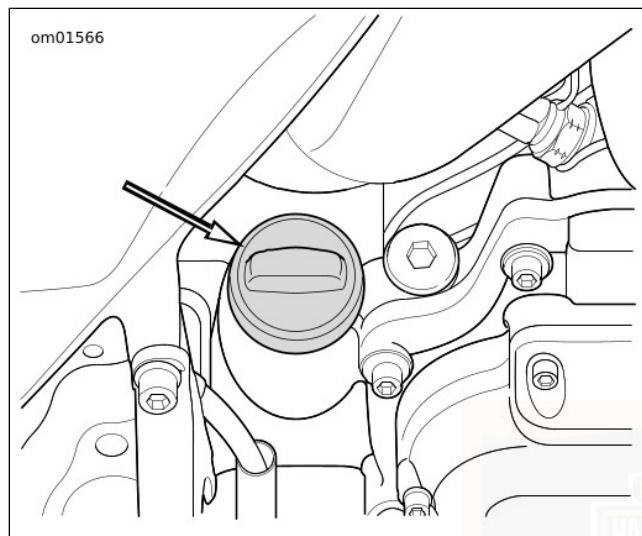


Figure 57. Engine Oil Filler Plug

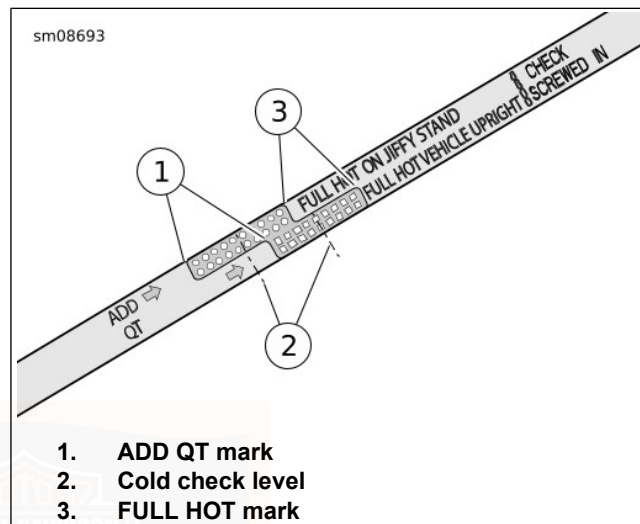

1. ADD QT mark
2. Cold check level
3. FULL HOT mark

Figure 58. Engine Oil Dipstick

## CHANGE OIL AND OIL FILTER

### ⚠ WARNING

Be sure that no lubricants or fluids get on tires, wheels or brakes when changing fluid. Traction can be adversely affected, which could result in loss of control of the motorcycle and death or serious injury. (00047d)

## NOTICE

**Do not switch lubricant brands indiscriminately because some lubricants interact chemically when mixed. Use of inferior lubricants can damage the engine. (00184a)**

## ⚠ CAUTION

**Prolonged or repeated contact with used motor oil may be harmful to skin and could cause skin cancer. Promptly wash affected areas with soap and water. (00358b)**

- Change engine oil at the first 1,600 km (1000 mi) for a **new** engine. After the initial service, change oil at regular intervals in normal service at warm or moderate temperatures. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).
  - Change oil at more frequent intervals in cold weather or severe operating conditions. See Winter Lubrication in MAINTENANCE AND LUBRICATION > ENGINE LUBRICATION (Page 154).
1. Run motorcycle until engine is at normal operating temperature. Turn off engine.
  2. Remove filler plug/dipstick.

## NOTE

*Replace drain plug O-ring.*

3. See Figure 59. Remove the oil drain plug (2) and O-ring. Allow oil to drain completely.

## NOTE

*Use P&A Oil Catcher (Part No. 62700199) or equivalent to keep drain oil off crankcase when removing oil filter. Residual drain oil could falsely appear as a crankcase oil leak at a later time.*

4. Remove the oil filter using oil filter wrench and hand tools. Do not use with air tools.

Special Tool: OIL FILTER WRENCH (94863-10)

Special Tool: OIL FILTER WRENCH (94686-00)

5. Clean the oil filter mount flange.
6. Clean any residual oil for crankcase and transmission housing.
7. See Figure 60. Install **new** oil filter.
  - a. Lubricate gasket with a thin film of clean engine oil.
  - b. Install **new** oil filter.
  - c. Hand-tighten oil filter one-half to three-quarters of a turn after gasket first contacts filter mounting surface. Do NOT use oil filter wrench for installation.

8. Install engine oil drain plug and **new** O-ring.

Torque: 19–28.5 N·m (14–21 ft-lbs) *Engine oil drain plug*

**NOTE**


*Use the proper grade of oil for the lowest temperature expected before the next oil change. Refer to Table 37 for recommended oil.*

9. Add an initial volume of engine oil. Refer to Table 38.


**Table 38. Initial Oil Fill**

ITEM	QUANTITY
Engine oil initial fill	3.8 L (4.0 qt)

10. Verify proper oil level. See MAINTENANCE AND LUBRICATION > CHECK ENGINE OIL LEVEL (Page 156).
- Perform engine oil level **cold check**.
  - Start engine and carefully check for oil leaks around drain plug and oil filter.
  - Perform engine oil level **hot check**.

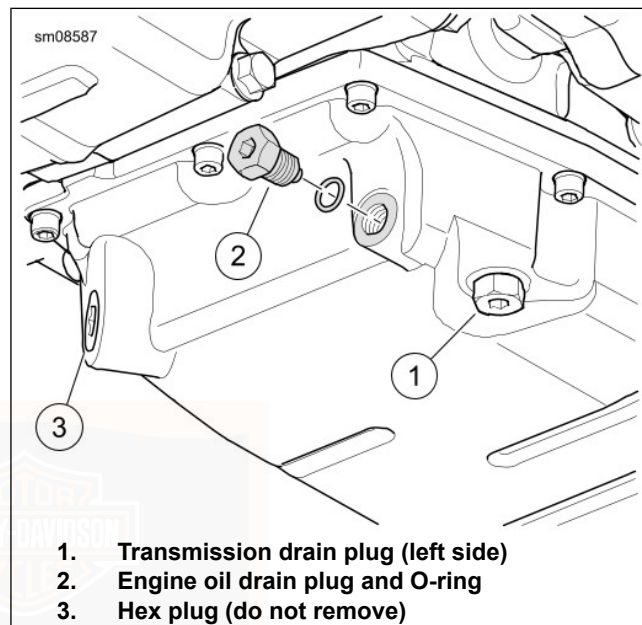

**Figure 59. Oil Pan**

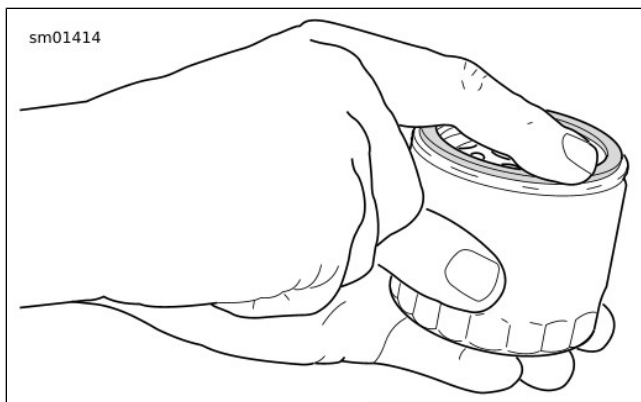

**Figure 60. Lubricating New Oil Filter Gasket**  
**OIL COOLER**

Models that are not Twin-Cooled have an oil cooler. Some also have a oil cooler fan. Keep the cooler and fan clean and free from dirt and debris to maintain maximum cooling efficiency.

## CHECK TRANSMISSION LUBRICANT


### NOTE

*Check transmission fluid with the motorcycle at ambient temperature. Inspect transmission dipstick O-ring. Replace if necessary.*


1. Park motorcycle on a level surface.
2. See Figure 61. Remove transmission filler plug/dipstick. Wipe dipstick clean.
3. Install filler plug/dipstick until O-ring contacts the case. Do not tighten.
4. See Figure 62. Remove filler plug/dipstick. Check lubricant level on dipstick. Proper oil level is between the Add (A) (1) and Full (F) (2) marks.
5. If lubricant level is low, add recommended Harley-Davidson lubricant to bring level to between the A mark and the F mark. Refer to Table 39.
6. Install filler plug/dipstick. Tighten to specification.  
 Torque: 2.8–8.5 N·m (25–75 in-lbs) *Transmission dipstick*

**Table 39. Transmission Lubricant**

MODEL	LUBRICANT
All	FORMULA+ TRANSMISSION AND PRIMARY CHAIN LUBRICANT or SCREAMIN' EAGLE SYN3 FULL SYNTHETIC MOTORCYCLE LUBRICANT 20W50

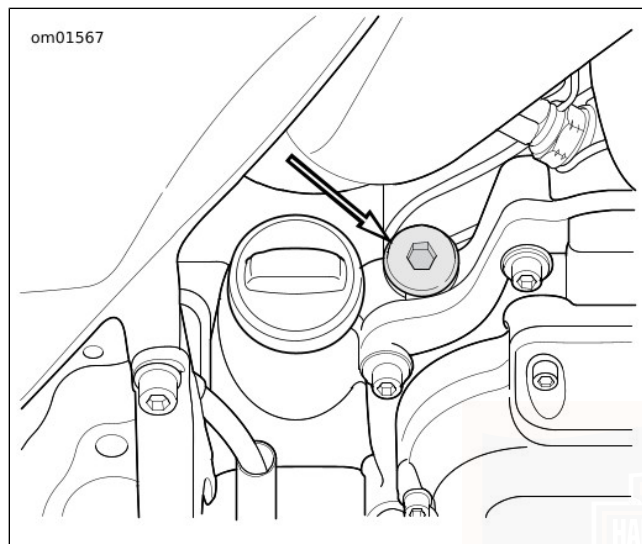

**Figure 61. Transmission Filler Plug/Dipstick Location**

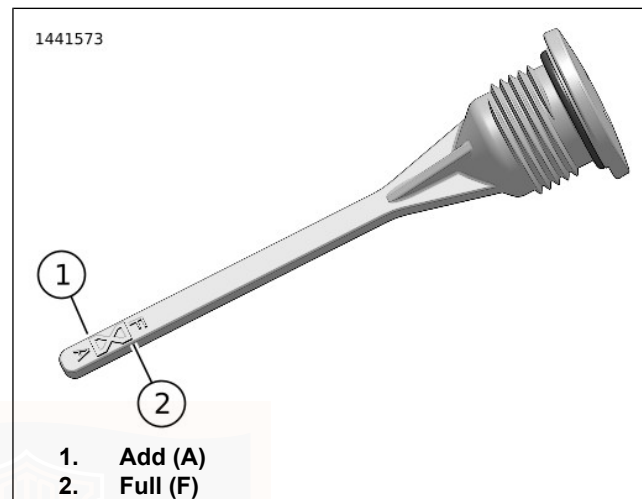

**Figure 62. Transmission Lubricant Level**  
**CHANGE TRANSMISSION LUBRICANT**

1. See Figure 62. Remove transmission filler plug/dipstick.

**⚠ WARNING**

Be sure that no lubricants or fluids get on tires, wheels or brakes when changing fluid. Traction can be adversely affected, which could result in loss of control of the motorcycle and death or serious injury. (00047d)



2. See Figure 63. Remove transmission drain plug. Drain transmission.
3. Clean and inspect drain plug and O-ring.

**NOTICE**

**Do not over-tighten filler or drain plug. Doing so could result in a lubricant leak. (00200b)**

4. Install drain plug with **new** O-ring. Tighten. Do not over-tighten.

Torque: 19–28.5 N·m (14–21 ft-lbs) *Transmission drain plug*


5. Fill the transmission with recommended Harley-Davidson lubricant. Refer to Table 39.

Volume: 0.83 L (28 fl oz)

6. Check lubricant level. Add enough lubricant to bring the level between the add (A) and full (F) marks. See Figure 62.

7. Install filler plug/dipstick. Tighten.

Torque: 2.8–8.5 N·m (25–75 **in-lbs**) *Transmission filler plug/dipstick*

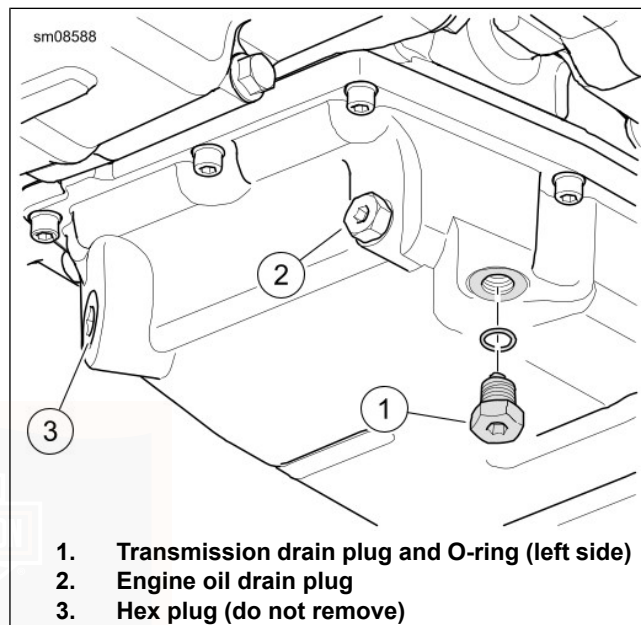

**Figure 63. Transmission Drain**

## **CHANGE PRIMARY CHAINCASE LUBRICANT**


1. Run motorcycle until engine is at normal operating temperature. Turn off engine.

**▲ WARNING**

Be sure that no lubricants or fluids get on tires, wheels or brakes when changing fluid. Traction can be adversely affected, which could result in loss of control of the motorcycle and death or serious injury. (00047d)

2. Secure motorcycle upright (not leaning on jiffy stand) on a level surface.
3. See Figure 64. Drain primary chaincase.
4. Clean drain plug magnet. If plug has excessive debris, inspect the condition of chaincase components.
5. Install drain plug and **new** O-ring. Tighten.

Torque: 19–28.5 N·m (14–21 ft-lbs) *Primary chaincase drain plug*

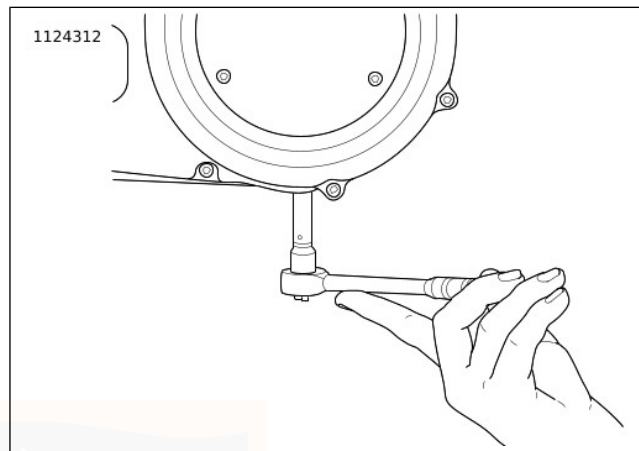

**Figure 64. Removal/Installation of Chaincase Drain Plug**

6. See Figure 66. Remove screws (3) and clutch inspection cover (2).
7. Remove seal (1). Wipe oil from groove in chaincase cover and mounting surface.


## NOTICE

Do not overfill the primary chaincase with lubricant. Overfilling can cause rough clutch engagement, incomplete disengagement, clutch drag and/or difficulty in finding neutral at engine idle. (00199b)

8. Add lubricant.
  - a. Pour specified amount of FORMULA+ TRANSMISSION AND PRIMARY CHAINCASE LUBRICANT or SCREAMIN' EAGLE SYN3 FULL SYNTHETIC MOTORCYCLE LUBRICANT 20W50 through clutch inspection cover opening. Refer to Table 40.
  - b. See Figure 65. Proper level is approximately at bottom of pressure plate OD.

**Table 40. Primary Chaincase Lubricant**

ITEM	DRY FILL <sup>(2)</sup>		WET FILL <sup>(3)</sup>	
	Oz	L	Oz	L
Amount <sup>(1)</sup>	34	1.0	30	0.9
(1) Amount is approximate. Fill to bottom of pressure plate OD with vehicle upright.				
(2) Cover was removed and installed.				
(3) Lubricant was drained through the drain plug only.				

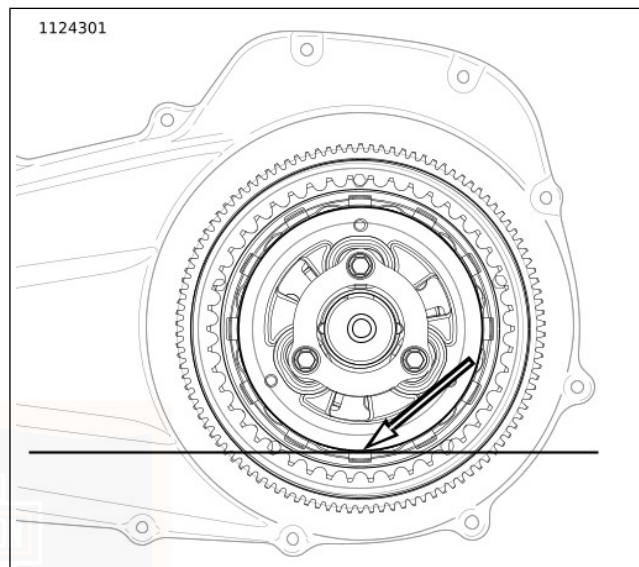

**Figure 65. Primary Lubricant Level**

9. Install clutch inspection cover and **new** seal:
  - a. Thoroughly wipe all lubricant from cover mounting surface and groove in chaincase cover.

- b. See Figure 66. Position **new** seal (1) in groove in clutch inspection cover (2). Press each of the nubs on seal into the groove.
- c. Secure clutch inspection cover (2) with screws with captive washers (3).
- d. See Figure 67. Tighten in sequence shown to 9.5–12.2 N·m (84–108 **in-lbs**).


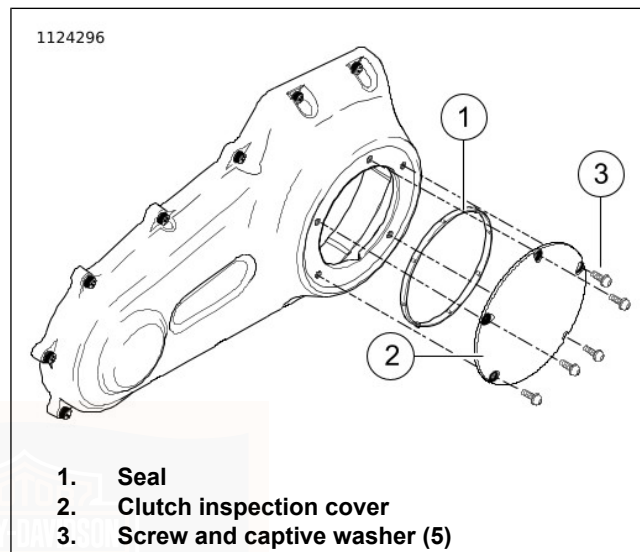


Figure 66. Clutch Cover (Typical)

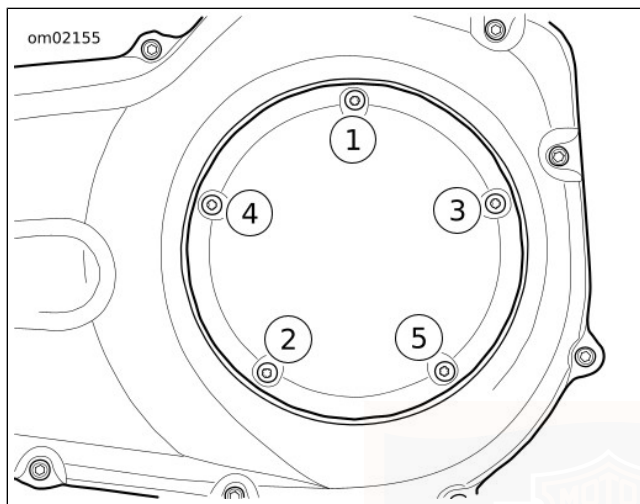

**Figure 67. Clutch Cover Tightening Sequence**  
**CHECK DRIVE BELT DEFLECTION**

**NOTE**

*Always use BELT TENSION GAUGE (PART NUMBER: HD-35381-A) to measure belt deflection. Failure to use tension gauge may cause under-tensioned belts. Loose belts can fail due to "ratcheting" (jumping a tooth) which causes tensile cord crimping and breakage.*

Check deflection:

- With transmission in neutral.
- With motorcycle at ambient temperature.
- With motorcycle upright or on jiffy stand with rear wheel on the ground.
- With the vehicle unladen: no rider, no luggage and empty saddlebags.

**⚠ WARNING**

**To prevent accidental vehicle start-up, which could cause death or serious injury, remove main fuse before proceeding. (00251b)**

1. Disarm security system. Remove main fuse. See SERVICE PROCEDURES > FUSES (Page 195).
2. Shift transmission to neutral.

**NOTE**

*When adjusting a **new** belt, rotate rear wheel a few revolutions prior to setting the tension.*

3. See Figure 68. Measure belt deflection using:  
 Special Tool: BELT TENSION GAUGE (HD-35381-A)
  - a. Slide O-ring (4) to zero mark (3).

b. **Models equipped with belt deflection window:**  
Fit belt cradle (2) against bottom of drive belt in line with belt deflection window.

c. **All other models:** Fit belt cradle (2) against bottom of drive belt halfway between drive pulleys.

d. Press upward on knob (6) until O-ring slides down to 4.54 kg (10 lb) mark (5) and hold steady.

4. Measure belt deflection:

a. **Models equipped with belt deflection window:**  
See Figure 70. Measure belt deflection as viewed through belt deflection viewing window while holding gauge steady. Each deflection graduation is approximately 1.6 mm (1/16 in)

b. **All other models:** See Figure 69. Measure amount of deflection (4) while holding gauge steady.

5. **NOTE**

*Set to the lower (tightest) specification if the belt has less than 1,600 km (1000 mi).*

Compare with specifications. Refer to Table 41. If not within specifications, see a Harley-Davidson dealer.

6. Install main fuse.

**Table 41. Belt Deflection**

MODELS	in	mm
All models	3/8-7/16	9.5-11.1

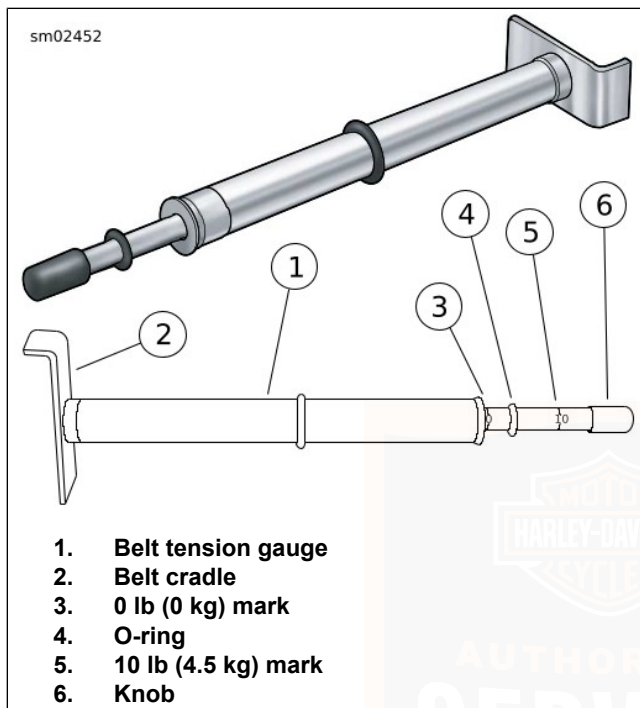


Figure 68. Belt Tension Gauge

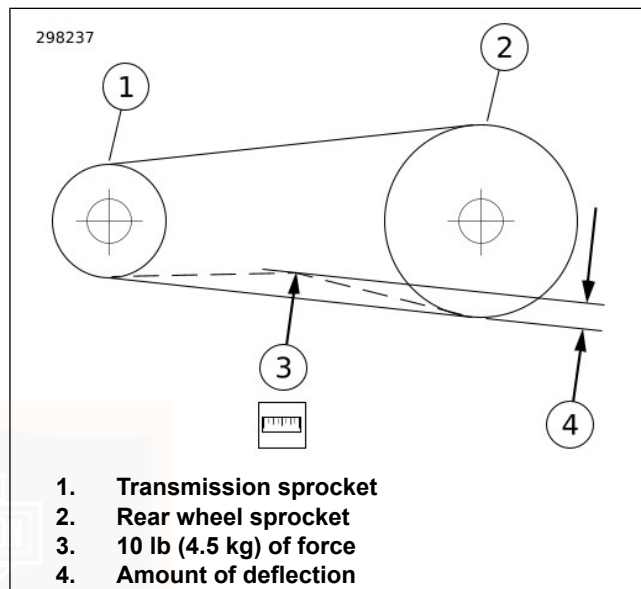


Figure 69. Checking Belt Deflection

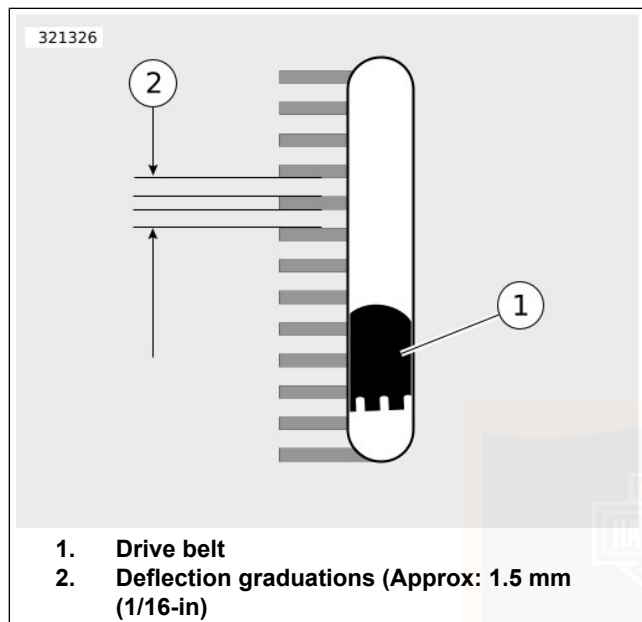


Figure 70. Belt Deflection Window

## MISCELLANEOUS LUBRICATION

Inspect and lubricate the following components according to the maintenance schedule. Refer to **SERVICE INTERVALS AND RECORDS > SERVICE RECORDS** (Page 265).

- Front brake lever pivot

- Clutch control hand lever pivot
- Foot shift lever pivot
- Rear brake lever pivot
- Hinges and latches (such as fuel door and footrests)
- Locks, as required
- Jiffy stand (use ANTI-SEIZE LUBRICANT)

Use HARLEY LUBE unless otherwise specified.

If motorcycle is operated on muddy or dusty roads, clean and lubricate more frequently.

## BRAKES

### ⚠ WARNING

**DOT 4 brake fluid absorbs moisture from the atmosphere over time, changing the properties of the fluid. Check brake fluid moisture content at every service interval or annually (whichever comes first). Flush and replace the brake fluid every two years, or sooner if moisture content is 3% or greater. Failure to flush and replace fluid can adversely affect braking, which could result in death or serious injury. (06304b)**

To ensure the brake system is performing to design, check the moisture content of the brake fluid at every service interval



or at least annually using a DOT 4 brake fluid moisture tester (part number HD-48497-A or equivalent) following the instructions included with the tool. Flush DOT 4 fluid every 2 years or sooner if the brake system fluid test shows moisture content is 3% or greater.

Harley-Davidson recommends using Harley-Davidson Platinum Label DOT 4 Brake Fluid because of its superior moisture and corrosion inhibiting properties.

## Brake Fluid

### ⚠ WARNING

Contact with DOT 4 brake fluid can have serious health effects. Failure to wear proper skin and eye protection could result in death or serious injury.

- **If inhaled:** Keep calm, remove to fresh air, seek medical attention.
- **If on skin:** Remove contaminated clothing. Rinse skin immediately with plenty of water for 15-20 minutes. If irritation develops, seek medical attention.
- **If in eyes:** Wash affected eyes for at least 15 minutes under running water with eye lids held open. If irritation develops, seek medical attention.

- **If swallowed:** Rinse mouth and then drink plenty of water. Do not induce vomiting. Contact Poison Control. Immediate medical attention required.
- **See Safety Data Sheet (SDS)** for more details available at [sds.harley-davidson.com](https://sds.harley-davidson.com)

(00240e)

### NOTICE

DOT 4 brake fluid will damage painted and body panel surfaces it comes in contact with. Always use caution and protect surfaces from spills whenever brake work is performed. Failure to comply can result in cosmetic damage. (00239c)

- If DOT 4 brake fluid contacts painted surfaces, IMMEDIATELY flush area with clear water.

### NOTICE

Do not allow dirt or debris to enter the master cylinder reservoir. Dirt or debris in the reservoir can cause improper operation and equipment damage. (00205c)


1.

**NOTE**

- *If the brake system is not leaking, there should never be a need to add fluid. If fluid level is low, pads are probably worn and must be replaced. By replacing pads, fluid level rises.*
- *Use only DOT 4 Platinum brake fluid and replace brake fluid every two years or sooner if moisture content is 3% or greater. See a Harley-Davidson dealer.*

See Figure 71. Check fluid level in brake master cylinder reservoir. Place vehicle on a flat level surface. Turn handlebar so master cylinder is level.

- a. View front reservoir sight glass. Fluid level must be at or above the minimum mark on glass. If fluid level is below minimum mark, see a Harley-Davidson dealer.
  - b. The rear fluid level must be between the MIN and MAX lines. If fluid level is below MIN line, see a Harley-Davidson dealer.
2. Verify front brake hand lever and rear brake foot pedal have a firm feel when applied. If brakes are not firm, the brake system must be bled.

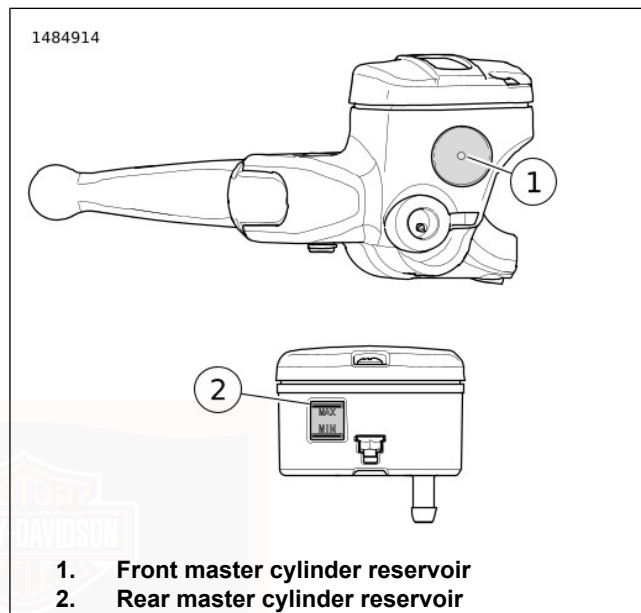

**Figure 71. Brake Fluid Sight Glass**

## Brake Pads

### ⚠ WARNING

Inspect brake pads for wear at service maintenance intervals. If you ride under adverse conditions (steep hills, heavy traffic, etc.), inspect more frequently. Excessively worn brake pads can lead to brake failure, which could result in death or serious injury. (00052a)

### ⚠ WARNING

Always replace brake pads in complete sets for correct and safe brake operation. Improper brake operation could result in death or serious injury. (00111a)

### ⚠ WARNING

Brakes are a critical safety component. Contact a Harley-Davidson dealer for brake repair or replacement. Improperly serviced brakes can adversely affect brake performance, which could result in death or serious injury. (00054a)

### ⚠ WARNING

Perform routine scheduled brake maintenance. Lack of maintenance at recommended intervals can adversely affect brake performance, which could result in death or serious injury. (00055a)

### ⚠ WARNING

Be sure wheel and brake caliper are aligned. Riding with a misaligned wheel or brake caliper can cause the brake disc to bind and lead to loss of control, which could result in death or serious injury. (00050a)

Harley-Davidson has provided your new motorcycle with the optimum brake pad friction material available. It is selected to give the best performance possible under dry, wet and high operating temperature conditions. It exceeds all regulatory requirements currently in effect. However, during some braking conditions you may experience noise. This is normal for this friction material.

1. Inspect for grit and debris buildup at caliper piston areas. Clean if necessary.
  - a. Rinse area with warm soapy water.
  - b. Dry using low-pressure compressed air.
2. See Figure 72 and Figure 73. Check brake disc/rotor as it spins. Disc/rotor should run true in brake caliper.


3. **NOTE**  
*Front and rear brake pads have wear indicator slots in the friction material to indicate brake pad wear.*

*Outer rear pads can be visually inspected for wear without rear wheels removed.*


*When operating properly, inner rear brake pad will be worn similarly to outer.*

Visually inspect brake pad wear indicator slots. Pads may not wear evenly. Check each viewable pad.

4. Replace brake pads before wear indicator slot is worn away.
5. Replace brake pads before friction material reaches minimum thickness. Always replace brake pads in pairs. See a Harley-Davidson dealer. Refer to Table 42.

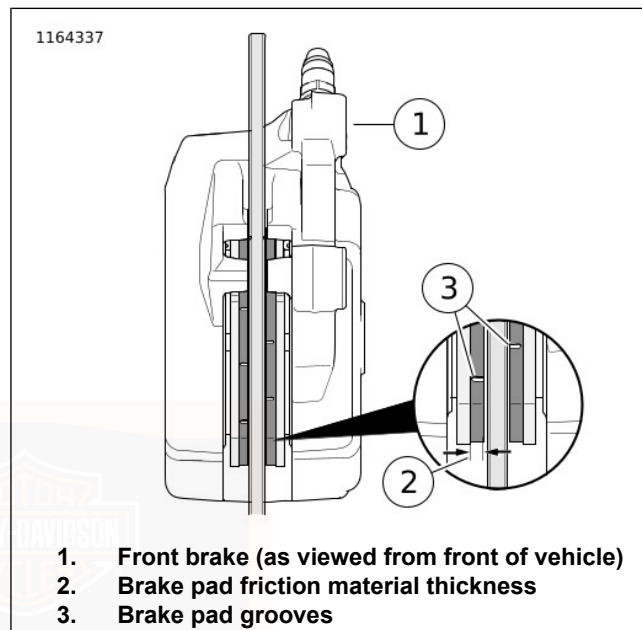

**Figure 72. Front Brake Pad Friction Material**

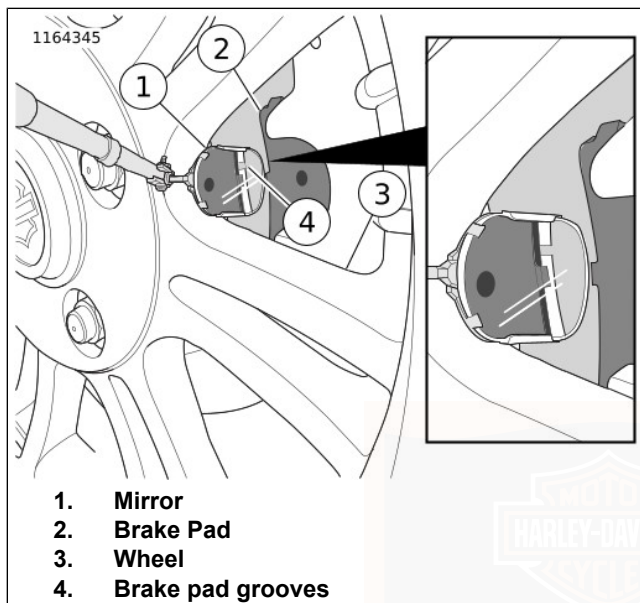

**Figure 73. Rear Brake Pad Friction Material**

**Table 42. Minimum Brake Pad Friction Material Thickness**

BRAKE	in	mm
Front	0.016	0.4
Rear	0.039	1.0

## PARKING BRAKE

As brake pads begin to wear in, the parking brake pedal will move further when the parking brake is applied. Inspect and adjust the parking brake:

- At regular intervals. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).
- Periodically after extensive rear brake usage.
- After replacement of rear brake pads or other rear brake service.

### NOTE

*The following inspection and adjustment procedures can be used to adjust the parking brake between service intervals. For regular service intervals, see a Harley-Davidson dealer or service manual for complete maintenance instructions.*

### Inspection

1. Park vehicle (with normal load) on a steep incline. Turn ignition switch to OFF and shift transmission into first gear.
2. Apply front brake and cover rear brake pedal with right foot.

3. See Figure 20. With left foot, firmly push down parking brake pedal until it cannot be pushed any further. The brake gives a number of clicks before reaching its maximum position.
4. With parking brake applied, release front brake and gradually pull in clutch lever.
5. The rear brakes should hold securely and vehicle should remain still. See ADJUSTMENT to adjust parking brake as necessary.
- b. If wheels turn freely, release parking brake and lengthen adjuster. Check and repeat until resistance is felt.
5. Push parking brake pedal two more clicks to **third** click. Vehicle should not move when pushed. If wheels turn, release parking brake and lengthen adjuster. Check and repeat until wheels will not turn.
6. Release parking brake pedal. Verify vehicle moves freely.

#### NOTE

*Apply grease to adjuster threads to ease future adjustments.*

## Adjustment

1. Place vehicle on a flat level surface.
2. Release parking brake. Verify vehicle moves easily when pushed by hand.
3. See Figure 74. Pull the boot back. Loosen jamnut.
4. Push parking brake pedal to **first** click. Attempt to roll vehicle.
  - a. If some resistance is felt, go to next step.
7. Hold adjuster and tighten jamnut.

Torque: 12–16 N·m (106–142 **in-lbs**) *Parking brake adjuster jamnut*
8. Install boot over adjuster.
9. See INSPECTION to check performance of adjusted parking brake.

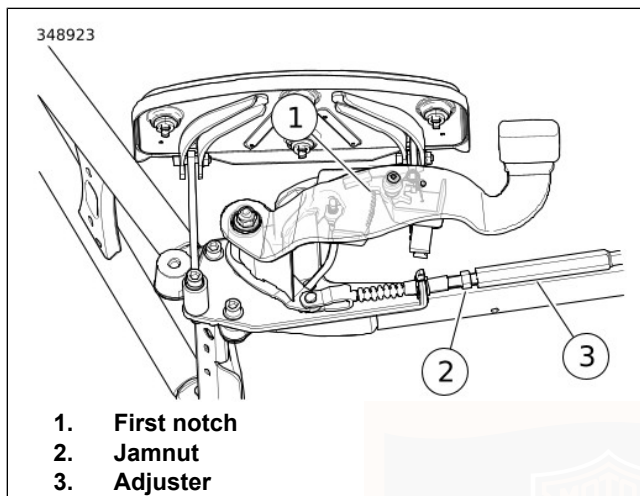


Figure 74. Parking Brake Adjustment

## MECHANICAL CLUTCH

### NOTICE

The clutch control cable must be oiled and adjusted periodically to compensate for lining wear. Failure to oil and adjust the clutch control cable can result in equipment damage. (00203c)

Adjust the clutch control cable at specified intervals. Refer to **SERVICE INTERVALS AND RECORDS > SERVICE RECORDS** (Page 265).

If the clutch slips under load or drags when released, the control cable may need to be adjusted or clutch service may need to be performed. See a Harley-Davidson dealer for service.

## HYDRAULIC LIFTERS

The hydraulic lifters are self-adjusting. They automatically adjust length to compensate for engine expansion and valve mechanism wear. This keeps the valve mechanism free of lash when the engine is running.

When starting an engine which has been turned off even for a few minutes, the valve mechanism may be slightly noisy until the hydraulic units completely refill with oil. If at any time the valve mechanism becomes abnormally noisy, other than for a short period immediately after engine is started, it is an indication that one or more of the hydraulic units may not be functioning properly.

Always check the engine oil level first since normal circulation of oil through the engine is necessary for proper operation of the hydraulic lifters.

If engine oil is at the proper level, the lifters may not be functioning properly because of dirt in the oil supply passages

leading to the lifter units. See a Harley-Davidson dealer for service.

## COOLING SYSTEM

### ▲ WARNING

Coolant mixture contains toxic chemicals, which may be fatal if swallowed. If swallowed, do not induce vomiting; call a physician immediately. Use in a well ventilated area. Irritation to skin or eyes can occur from vapors or direct contact. In case of skin or eye contact, flush thoroughly with water and go to hospital, if necessary. Dispose of used coolant according to federal, state and local regulations. (00092a)

### ▲ CAUTION

At operating temperature, radiators and oil coolers contain hot fluids. Contact with a radiator or oil cooler can result in minor or moderate burns. (00141b)

### NOTICE

Use only Genuine Harley-Davidson Extended Life Antifreeze and Coolant. Use of other coolants/mixtures may lead to motorcycle damage. (00179c)

GENUINE HARLEY-DAVIDSON EXTENDED LIFE ANTIFREEZE AND COOLANT is pre-diluted and ready to

use full strength. It provides temperature protection to -36.7 °C (-34 °F). DO NOT add water.

### NOTICE

De-ionized water must be used with the antifreeze in the cooling system. Hard water can cause scale accumulation in water passages which reduces cooling system efficiency, leading to overheating and motorcycle damage. (00195b)

If GENUINE HARLEY-DAVIDSON EXTENDED LIFE ANTIFREEZE AND COOLANT is unavailable, a mixture of de-ionized water and ethylene glycol-based antifreeze may be used. At the first opportunity, change back to GENUINE HARLEY-DAVIDSON EXTENDED LIFE ANTIFREEZE AND COOLANT.

## Checking Coolant Level

### NOTE

*Check coolant level with engine cold and motorcycle on level ground.*

1. Remove access panel from lower right fairing. Pry the center top and pull out to release retainers.



### NOTE

See Figure 75. The coolant bottle has two lines. Use the angled line (2) when the motorcycle is leaning on the jiffy stand.

2. See Figure 75. Check that coolant level in coolant bottle is at or slightly above the "COLD" line (1).

### NOTE

- Do not remove the pressure cap (4). Fill the coolant bottle by removing the rubber plug (3).
  - If the coolant bottle is empty when the engine is cold, inspect the system for leaks. Repair as needed. Fill system with coolant and perform bleed procedure. See a Harley-Davidson dealer for service.
3. If level is below "COLD" line on tank, remove rubber plug (3). Add GENUINE HARLEY-DAVIDSON EXTENDED LIFE ANTIFREEZE AND COOLANT until fluid level reaches, or is slightly above the "COLD" line.
  4. Install rubber plug.
  5. Install access panel.

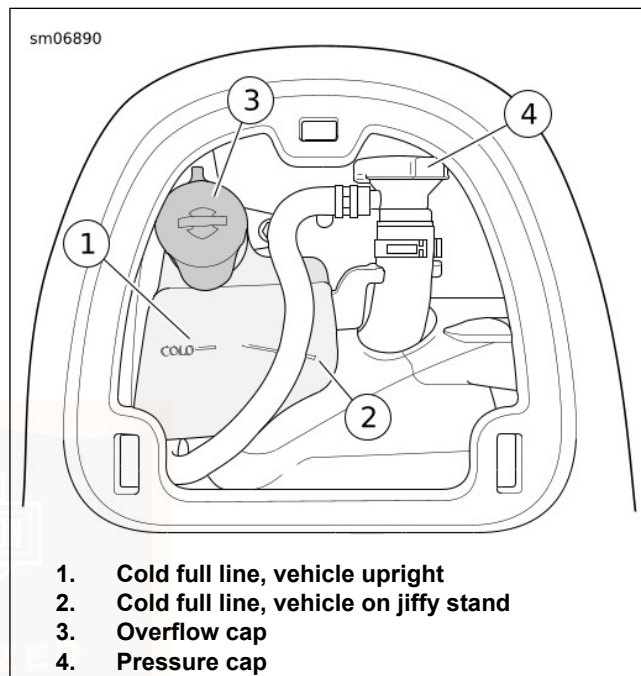


Figure 75. Coolant Level

## Clean Radiators

### NOTICE

Clean the inlet surface of the radiator regularly. Leaves and other debris can collect on the radiator surface and degrade radiator performance which could lead to overheating and motorcycle damage. (00197d)

1. See Figure 76. Remove outer grille from lower fairing.
  - a. Carefully pry on curved edge of panel to release latches.
  - b. Remove from fascia.
2. Clean debris from radiator fins.
3. Install outer grille.

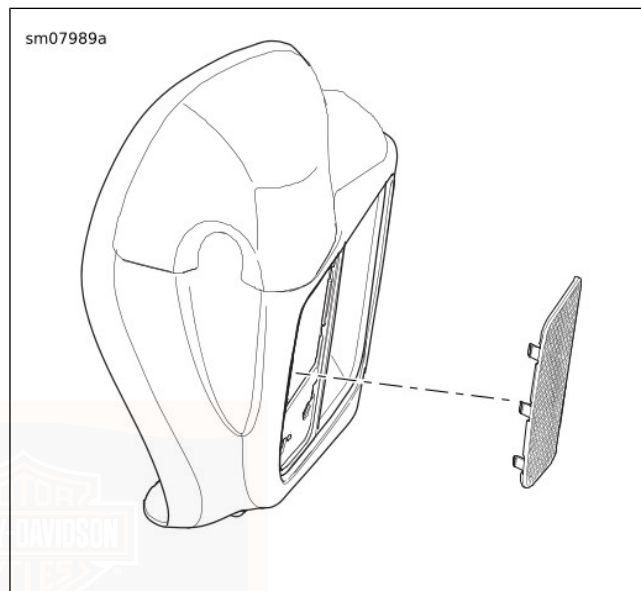


Figure 76. Lower Fairing Grille Panel

## Checking Coolant Freeze Point

See a HARLEY-DAVIDSON dealer for coolant freeze point test.

## CHECKING FOR EXHAUST LEAKS

Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265) for all maintenance schedules.

1. Allow exhaust components to cool.
2. Check exhaust system for obvious signs of leakage such as carbon marks or marks at pipe joints.
  - a. Check for loose or missing fasteners.
  - b. Check for fractured pipe clamps or brackets.
  - c. Check for loose or fractured exhaust shields.
3. Correct any detected leaks. See a Harley-Davidson dealer.

## MAINTAINING FRONT FORK

### ⚠ WARNING

**Regularly inspect shock absorbers and front forks. Replace leaking, damaged or worn parts that can adversely affect stability and handling, which could result in death or serious injury. (00012a)**

Have a Harley-Davidson dealer drain the front fork oil and refill at proper intervals.

Rebound action of the fork will be impaired if the fork oil level is low.

If fork does not appear to be working properly or a significant oil leak should develop, see a Harley-Davidson dealer.

Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265) for all maintenance schedules.

## ADJUSTING STEERING HEAD BEARINGS

### ⚠ WARNING

**Adjustments to steering head bearings should be performed by a Harley-Davidson dealer. Improperly adjusted bearings can adversely affect handling and stability, which could result in death or serious injury. (00051b)**

Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265) for all maintenance schedules.

See a Harley-Davidson dealer to adjust the steering head bearings.

## STEERING DAMPER

Inspect the hydraulic steering damper for leaks at specified intervals. Elevate the front wheel slightly and turn handlebars through their full range of steering travel several times to check for smooth damper action. Check all damper mounting

fasteners for tightness. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).

The steering damper must be replaced or rebuilt at specified intervals. If steering damper leaks or is damaged, see a Harley-Davidson dealer.

## VEHICLE ALIGNMENT

Check vehicle alignment at regular intervals. This includes whenever the rear drive belt is adjusted. Check the stabilizer link and engine mounts for wear according to Service Manual procedures at proper intervals. Refer to SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).

Vehicle alignment is important. Vehicle stability is adversely affected if wheels are out of alignment. Inspect both front to rear alignment and lateral (side to side) alignment. Major alignment of the front and rear wheels are partially controlled by one stabilizer link at the top of the engine and alignment of the rear axle. See a Harley-Davidson dealer for this service.

### ⚠ WARNING

**Only a Harley-Davidson dealer should perform vehicle alignment. Improper alignment can adversely affect stability and handling, which could result in death or serious injury. (00060a)**

## SHOCK ABSORBERS

Inspect shock absorbers and rubber bushings for leaks and bushing deterioration at proper intervals.

### ⚠ WARNING

**Shock absorber cannot be serviced. Attempting service can cause an explosion, which could result in death or serious injury. (00602d)**

- Do not refill, disassemble, puncture or expose shock to flames.
- Replacement and disposal should only be done by an authorized Harley-Davidson dealer.

## INSPECTING AIR FILTER

### Removal

1. See Figure 77. Remove screw (1) and air cleaner cover (2) with rubber seal (6).
2. Remove three screws (3).
3. Remove filter element (4) pulling breather tube from hole on inboard side.
4. Remove breather tube (5) from breather bolts.

5. Inspect the breather tube and fittings for damage.

**⚠ WARNING**

**Do not use gasoline or solvents to clean filter element. Flammable cleaning agents can cause an intake system fire, which could result in death or serious injury. (00101a)**

**⚠ WARNING**

**Compressed air can pierce the skin and flying debris from compressed air could cause serious eye injury. Wear safety glasses when working with compressed air. Never use your hand to check for air leaks or to determine air flow rates. (00061a)**

6. Clean filter element.

- a. Wash the paper/wire mesh air filter element and breather tube in lukewarm water with a mild detergent. Do not strike filter element on a hard surface to dislodge dirt.
- b. Allow filter element to air dry or use low-pressure compressed air blowing from the inside. Do NOT use air cleaner filter oil on the Harley-Davidson paper/wire mesh air filter element.

- c. Hold the filter element up to a strong light source. The element is sufficiently clean when light is uniformly visible through the media.
- d. Replace the filter element if damaged or if filter media cannot be adequately cleaned.


## Installation

*NOTE*

*Air cleaner mounting without installation of the breather tubes allows crankcase vapors to vent into the atmosphere. This violates emissions regulations.*

1. See Figure 77. Install breather tube (5) onto breather bolts.
2. Install filter element (4) while pushing breather tube into element.
3. Install screws (3). Tighten screws to 4.5–6.8 N·m (40–60 in-lbs).
4. Verify that rubber seal (6) is not damaged and is properly seated around perimeter of air cleaner cover.

5. Place air cleaner cover onto backplate. Apply a drop of **LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (blue)** to the threads of screw (1). Install screw. Tighten to 4.1–6.8 N·m (36–60 **in-lbs**).

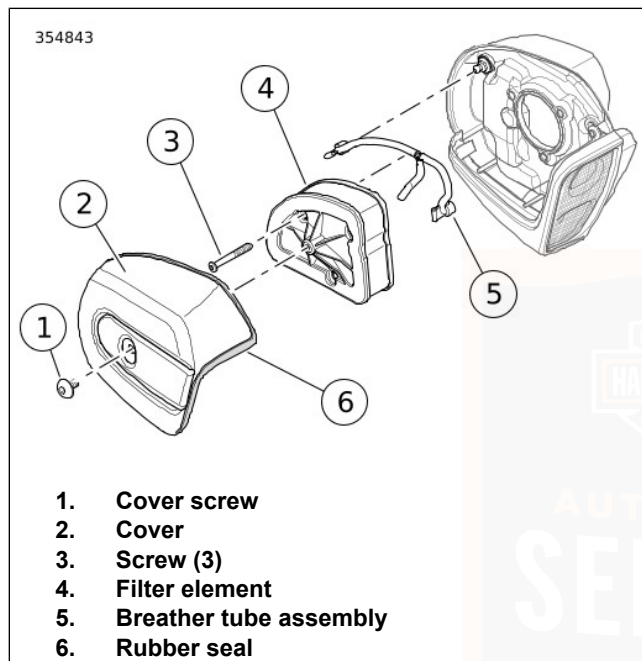

**Figure 77. Air Cleaner Assembly**

## REPLACING SPARK PLUGS

### ⚠ WARNING

**Disconnecting spark plug cable with engine running can result in electric shock and death or serious injury. (00464b)**

### ⚠ CAUTION

**Do NOT pull on any electrical wires. Pulling on electrical wires may damage the internal conductor causing high resistance, which may result in minor or moderate injury. (00168a)**

### NOTE

*Fuel tank removal improves access to the center spark plug. Refer to the service manual or see a Harley-Davidson dealer for service.*

Check the spark plugs at proper intervals. Refer to **SERVICE INTERVALS AND RECORDS > SERVICE RECORDS** (Page 265).

1. Disconnect spark plug cables from plugs by pulling up on the molded connector caps.
2. Check spark plug type. Only use spark plugs specified for your model motorcycle.

3. Check spark plug gap against specifications. Refer to Table 17.
4. Always tighten to the proper torque. Spark plugs must be tightened to the torque specified for proper heat transfer. Refer to Table 17.
5. Connect each molded connector cap until the cap snaps firmly into place over the spark plug.



## NOTES

---





## SIDE COVERS

See Figure 78. Remove side covers to access fuses and other components.

**Remove:** Pull side cover off.

**Install:** Align barbed studs on side cover with grommets in frame. Push in to secure cover.

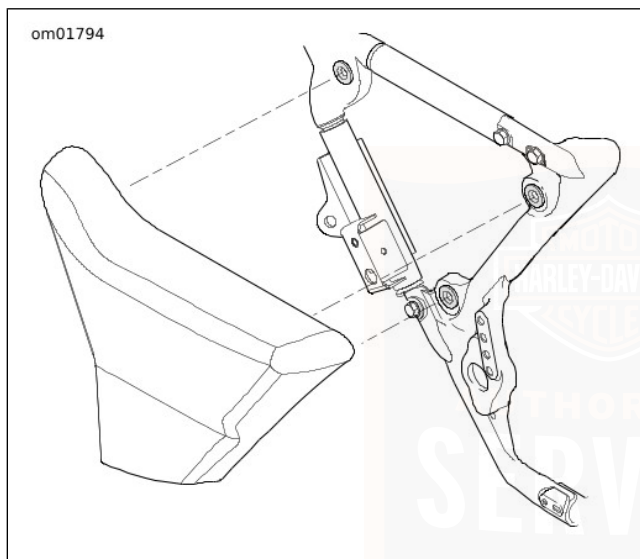


Figure 78. Side Cover

## BATTERY TENDER CONNECTOR

### NOTE

*The main fuse and P&A fuse must both be installed to use a battery tender.*


See Figure 79. The motorcycle has a quick disconnect battery tender connector under the left side cover below the main fuse. Connecting a battery tender between rides and during storage can maintain battery charge and extend the life of the battery.

To access connector, remove left side cover. See SERVICE PROCEDURES > SIDE COVERS (Page 187).


Route the connector through the slot in the bottom of the electrical caddy. Secure the harness and connector with cable straps in a location that prevents damage to the connector and surrounding areas. Make sure to apply ELECTRICAL CONTACT LUBRICANT to the terminals. Keep the connector capped to prevent moisture damage when not in use.

See Figure 80. Connect an automatic, constant monitoring battery charger/tender as shown. The connector is compatible with all Harley-Davidson battery tenders.

For more charging information, see SERVICE PROCEDURES > BATTERY MAINTENANCE (Page 189).

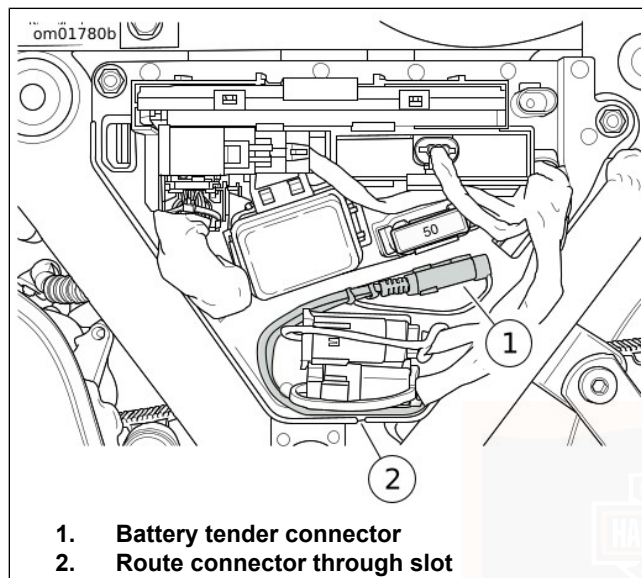

**Figure 79. Battery Tender Connector (under left side cover)**

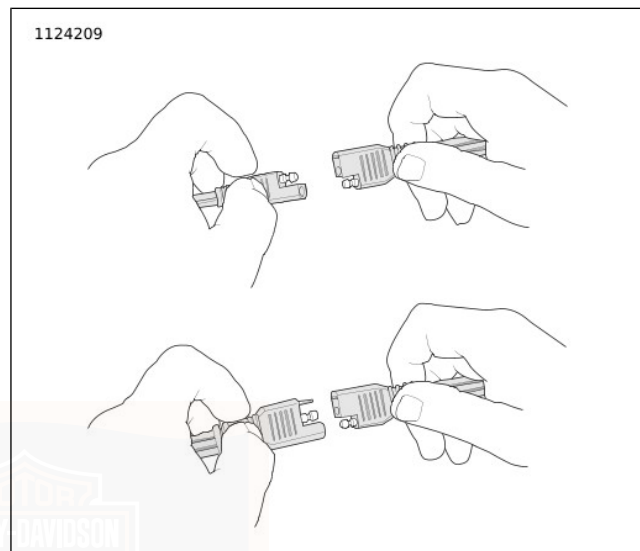

**Figure 80. Battery Tender Connection**

## BATTERY MAINTENANCE

### Battery Safety

#### ⚠ WARNING

Batteries contain sulfuric acid, which could cause severe burns to eyes and skin. Wear a protective face shield, rubberized gloves and protective clothing when working with batteries. **KEEP BATTERIES AWAY FROM CHILDREN.** (00063a)

#### ⚠ WARNING

Explosive hydrogen gas, which escapes during charging, could cause death or serious injury. Charge battery in a well-ventilated area. Keep open flames, electrical sparks and smoking materials away from battery at all times. **KEEP BATTERIES AWAY FROM CHILDREN.** (00065a)

#### ⚠ WARNING

Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (00019e)

#### ⚠ WARNING

Never remove warning label from battery. Failure to read and understand all precautions contained in warning, could result in death or serious injury. (00064b)

### Absorbed Glass Mat (AGM) Battery Charging Information

The motorcycle has a permanently sealed, maintenance-free Absorbed Glass Mat (AGM) battery design that is superior to conventional flooded lead acid batteries. This battery design will provide many years of dependable service when the proper battery charging equipment and storage procedures are used. Because of the sealed, nonspillable battery design, an automatic, constant monitoring battery charger/tender with a charging rate of 5 amps or less at less than 14.6 volts is recommended to prevent overcharging conditions that will dry out the cells of the battery. Constant current battery chargers (including trickle chargers) are not recommended and can damage AGM batteries. Do not attempt to open the battery for any reason.

A Harley-Davidson constant monitoring battery charger or tender is recommended to maintain a full charge between rides or when your motorcycle will not be ridden for more than two weeks. The best practice is installing the charger/tender any time the motorcycle is not in use. Harley-Davidson offers a variety of fully automatic charger/tenders (North American

and international versions available). These battery charger/tenders include a quick disconnect cable, allowing easy connection to charge the battery without disassembly of the motorcycle.

Lack of regular battery charging or use of constant current battery chargers may void battery warranty.

## **Cleaning and Inspecting**

Battery top must be clean and dry. Dirt and electrolyte on top of the battery can cause battery to self-discharge.

1. Clean top of battery.
2. Clean cable connectors and battery terminals using a wire brush or fine grit sandpaper to remove any oxidation.
3. Inspect and clean the battery screws, clamps and cables. Check for breakage, loose connections and corrosion.
4. Check the battery posts for melting or damage caused by over-tightening.
5. Inspect the battery for discoloration, a raised top or a warped or distorted case. Any of these conditions indicate that the battery has been frozen, overheated or overcharged.
6. Inspect the battery case for cracks or leaks.

## **Charging and Storing the Battery**

A battery that is left in the motorcycle can either self-discharge or discharge from parasitic loads. Parasitic loads occur from things like diode leakage and maintaining computer memory. A battery that is removed from the motorcycle can also self-discharge. It is not necessary to remove battery from vehicle for storage.

- Batteries self-discharge at a faster rate at higher ambient temperatures.
- To reduce the self-discharge rate, store battery in a cool, dry place.

An automatic, constant monitoring battery charger/tender with a charging rate of 5 amps or less at less than 14.6 volts is recommended. The use of constant current chargers (including trickle chargers) to charge sealed AGM batteries is not recommended. Any overcharge will cause dry-out and premature battery failure. Never charge a battery without first reviewing the instructions for the charger being used. In addition to the manufacturer's instructions, follow the general safety precautions.

Charge the battery when:

- Motorcycle lights appear dim.
- Electric starter sounds weak.
- Battery has not been used for two weeks or more.

**⚠ WARNING**

**Unplug or turn OFF battery charger before connecting charger cables to battery. Connecting cables with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00066a)**

**NOTE**

*Make sure that the ignition and all electrical accessories are turned off.*

*Always follow charging instructions supplied with the charger/tender.*

1. With battery in the motorcycle.
  - a. Connect battery charger/tender lead to motorcycle battery tender connector. See SERVICE PROCEDURES > BATTERY TENDER CONNECTOR (Page 187).
  - b. When charging is completed turn OFF the charger. Disconnect the motorcycle battery tender connector.
2. With battery removed from motorcycle.
  - a. Place the battery on a level surface.

- b. Connect battery charger/tender lead to battery connector adapter lead supplied with the battery charger/tender.

**NOTICE**

**Do not reverse the charger connections described in the following steps or the charging system of the motorcycle could be damaged. (00214a)**

- c. Connect the red battery charger lead to the positive terminal of the battery.
    - d. Connect the black battery charger lead to the negative terminal of the battery.
    - e. Step away from the battery and turn on the charger.

**⚠ WARNING**

**Unplug or turn OFF battery charger before disconnecting charger cables from battery. Disconnecting clamps with charger ON can cause a spark and battery explosion, which could result in death or serious injury. (00067a)**

- f. When charging is completed turn OFF the charger. Disconnect the black battery charger lead. Disconnect the red battery charger lead.

## BATTERY REPLACEMENT

### Disconnection and Removal

1. Remove seat.
2. See Figure 81. Release ECM (1) from top caddy. Move out of the way.
3. If present, move purge solenoid (2) up to release from top caddy.
4. **Models with security system:** Release security antenna (3) from top caddy and move out of the way.
5. Release connectors (7) from anchors on top caddy.
6. Remove fasteners (5).
7. Cut cable straps (4). Move harnesses to allow more clearance for the top caddy.
8. Push top caddy forward to disengage front of caddy from front hold-down bracket. Remove top caddy.
9. In order to prevent damage to electrical components, use the following procedure to deactivate the electrical system before disconnecting power.
  - a. Verify that the hands-free fob is present.
  - b. Turn the ignition switch to ON position.
  - c. Remove left side cover.
  - d. Remove the main fuse from its connector.

#### ⚠ WARNING

**Disconnect negative (-) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00049a)**

10. See Figure 82. Disconnect both battery cables, negative battery cable first.
11. Pull up battery strap to raise battery. When battery is extracted far enough to get a good grip, grasp battery and remove completely.

## Installation and Connection

1. Turn ignition switch OFF.
2. Run battery strap rearward across the bottom of the battery tray, then up and across the frame crossmember.
3. See Figure 82. Place the battery into the battery tray, terminal side forward.

### ⚠ WARNING

**Connect positive (+) battery cable first. If positive (+) cable should contact ground with negative (-) cable connected, the resulting sparks can cause a battery explosion, which could result in death or serious injury. (00068a)**

### NOTICE

**Connect the cables to the correct battery terminals. Failure to do so could result in damage to the motorcycle electrical system. (00215a)**

### NOTICE

**Do not over-tighten bolts on battery terminals. Use recommended torque values. Over-tightening battery terminal bolts could result in damage to battery terminals. (00216a)**

4. Connect both battery cables, positive battery cable first. Tighten.


Torque: 6.8–7.9 N·m (60–70 **in-lbs**) *Battery terminal bolt*

### NOTICE

**Keep battery clean and lightly coat terminals with petroleum jelly to prevent corrosion. Failure to do so could result in damage to battery terminals. (00217a)**

5. Apply a light coat of petroleum jelly or ELECTRICAL CONTACT LUBRICANT to both battery terminals.
6. Fold battery strap forward over top of battery.
7. See Figure 81. Place top caddy into position and engage latch on hold-down bracket.
8. Fasten top caddy to frame crossmember with fasteners (5). Tighten.  
Torque: 8.1–10.9 N·m (72–96 **in-lbs**) *Top caddy screws*
9. Engage security antenna (3) and purge solenoid (2) on top caddy. Verify that all other connectors and harnesses are routed properly.
10. Secure connectors (7) to anchors on top caddy.

11. Latch ECM (1) into place on top caddy.
12. Secure harnesses to frame with cable straps (4).
13. Install seat. After installing seat, pull up on the seat to be sure it is secure.
14. Install main fuse.
15. Install left side cover.

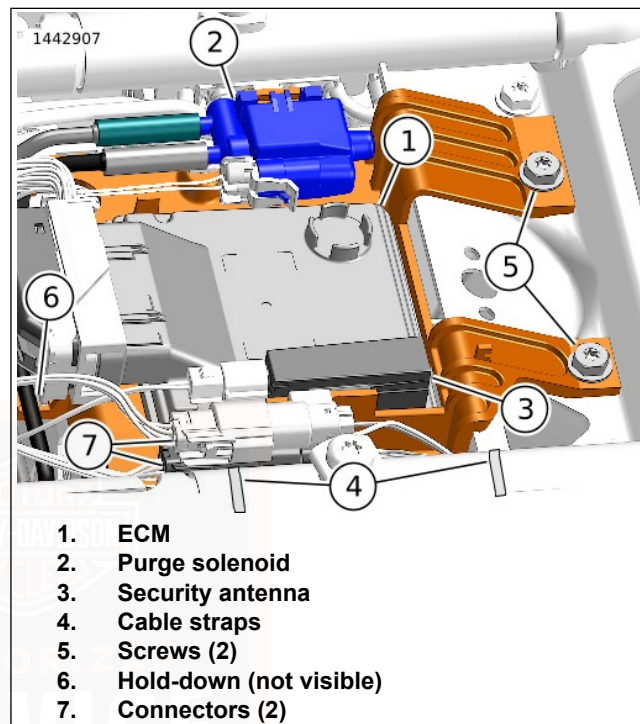

**Figure 81. Top Caddy**



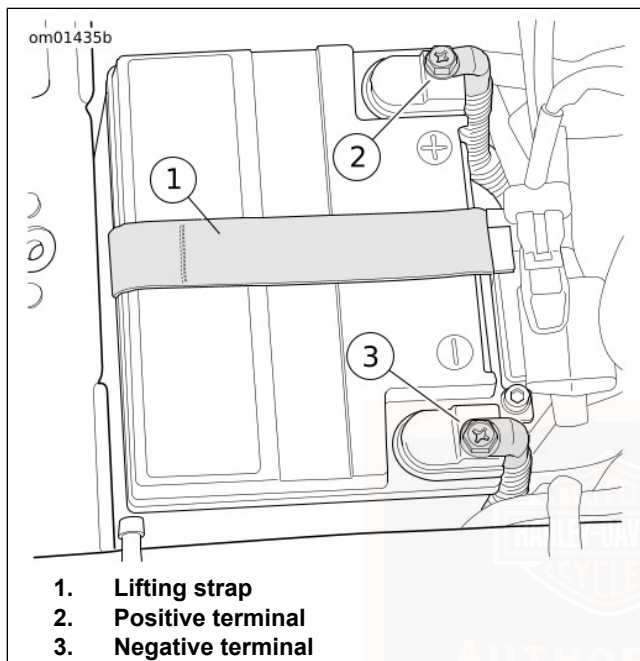


Figure 82. Battery Compartment

## FUSES

### Main Fuse

See Figure 83. A 50 amp main fuse is located near the fuse block. Removing the main fuse disconnects power to all systems except the starter motor/solenoid.

In order to prevent damage to electrical components, use the following procedure to deactivate the electrical system before disconnecting power.

1. Verify that the hands-free fob is present.
2. Turn the ignition switch to ON position.
3. Remove the main fuse from its connector.

#### NOTE

*Place the ignition switch in the OFF position before installing the main fuse.*

### System Fuses

#### NOTICE

**Do not skip any steps for fuse replacement. Skipping fuse replacement steps can result in damage to the sound system and/or other motorcycle systems. (00223a)**

See Figure 83. Fuses are located under left side cover.

If fuse replacement does not correct a problem, see a Harley-Davidson dealer for electrical diagnosis.

1. Turn ignition switch OFF.
2. Remove left side cover. See SERVICE PROCEDURES > SIDE COVERS (Page 187).
3. Press in tabs on the left and right sides of fuse block cover. Remove the cover.
4. See Figure 84. Remove fuse and inspect the element.

#### NOTICE


**Always use replacement fuses that are of the correct type and amperage rating. Use of incorrect fuses can result in damage to electrical systems. (00222a)**

5. Replace the fuse if the element is burned or damaged.


#### NOTE

*Use automotive-type fuses for replacements. The fuse block has spare fuses.*

6. Install the fuse block cover.
7. Install left side cover.

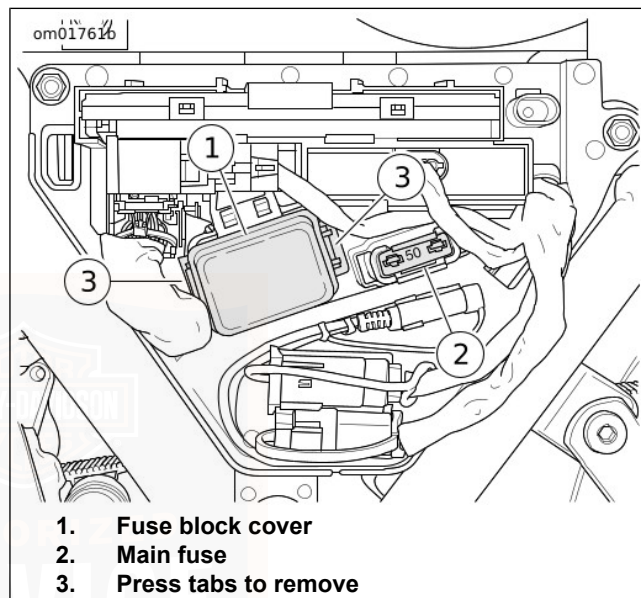

**Figure 83. Fuse Block (under left side cover)**

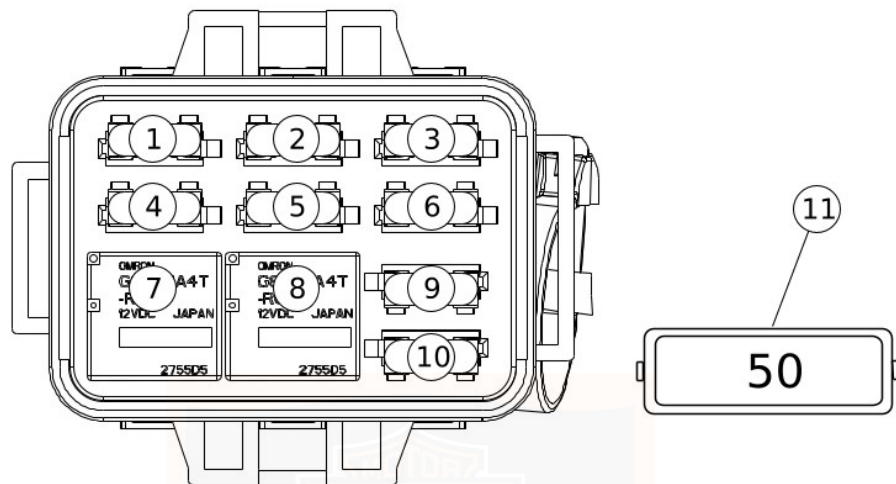

1. Radio power (20 A)
2. System power (7.5 A)
3. Battery (5 A)
4. P&A (20 A)
5. Cooling (15 A)
6. Spare (5 A)

7. P&A relay
8. Cooling relay
9. Spare (7.5 A)
10. Spare (20 A)
11. Main fuse (50 A)

Figure 84. Fuses and Relays

## REVERSE MOTOR CIRCUIT BREAKER

The reverse motor circuit has a circuit breaker to prevent current overload conditions to the motor and power cabling.

1. If reverse motor does not run or cuts off during operation:
  - a. Perform reverse operation.
  - b. Turn off engine.
  - c. Remove right side cover. See SERVICE PROCEDURES > SIDE COVERS (Page 187).
  - d. Check condition of circuit breaker.
  - e. See OPERATION > REVERSE OPERATION (Page 126).

See Figure 85. The circuit breaker is located in the electrical caddy behind the right side cover. This manually resettable circuit breaker has a red trip pushbutton (2) and a reset lever (1). To manually trip the circuit breaker, push down on the trip push button (which causes the reset lever to extend out).

If the reset lever is extended as shown, the reverse circuit is open/tripped. Push the reset lever into the center of the circuit breaker body until an audible click is heard to reset.

If the circuit breaker repeatedly opens under non-strenuous loading conditions or if the reverse motor will not operate after resetting circuit breaker, see a Harley-Davidson dealer.

### NOTE

- *The reverse lamp in the instrument cluster illuminates even if the circuit breaker is tripped/open.*
  - *It is a normal function that the pinion on the reverse motor engages the ring gear when the circuit breaker is tripped. A **click** will be heard but there will not be reverse movement.*
2. Install right side cover. See SERVICE PROCEDURES > SIDE COVERS (Page 187).
  3. Test reverse operation.

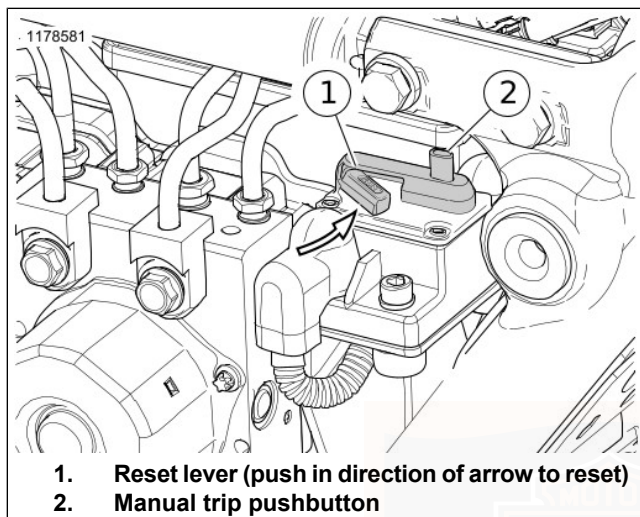


Figure 85. Reverse Motor Circuit Breaker

## HEADLAMP ALIGNMENT

### Check Alignment

1. Check tire pressure.
2. Adjust rear shocks for the rider and intended load.
3. Fill fuel tank or add an equal amount of ballast.

4. **NOTE**  
Choose a wall in minimum light.

See Figure 86. Park the motorcycle on a line (1) perpendicular to the wall.

5. Position motorcycle so the front axle is measured distance from the wall.  
Length/Dimension/Distance: 7.6 m (25 ft)
6. Draw a vertical centerline (2) on the wall.

7. **NOTE**  
The upper lens is **low beam** on LED headlamps.

With the motorcycle loaded, point the front wheel straight forward at wall. Measure the distance (4) from the floor to the center of the **low beam (upper)** lens.

8. See Figure 86. Draw a horizontal line (5) through the vertical line at measured height.

9. **NOTE**  
See Figure 86. The headlamp is aligned when the top of light beam hot spot is located as shown with headlamp set to **low beam**.

See Figure 86. Verify headlamp alignment.

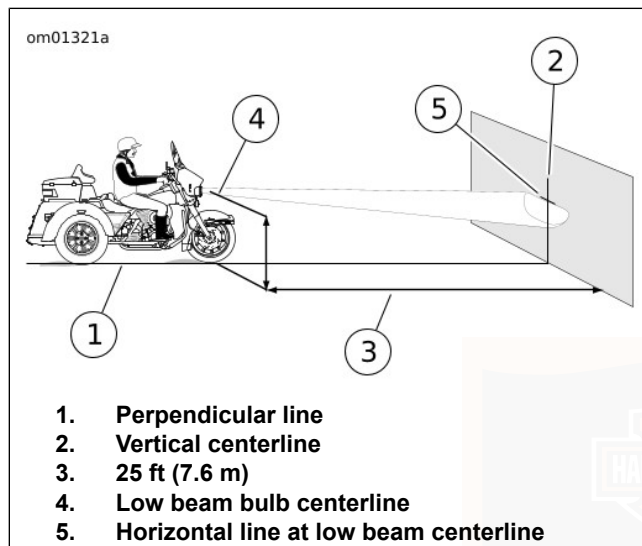



Figure 86. Headlamp Alignment: LED

## Adjust Alignment

1. *NOTE*  
*Do not remove trim ring for headlamp adjustment.*

Set LED headlamp to **low beam**.

2. See Figure 87. Insert a 5/32 ball end hex wrench through adjuster slots in trim ring.
  - a. **Horizontal:** Turn the horizontal adjusting screw (1) to adjust light beam left and right.
  - b. **Vertical:** Turn the vertical adjusting screw (2) to adjust light beam up and down.
3. See Figure 86. Adjust headlamp **low beam** as shown.

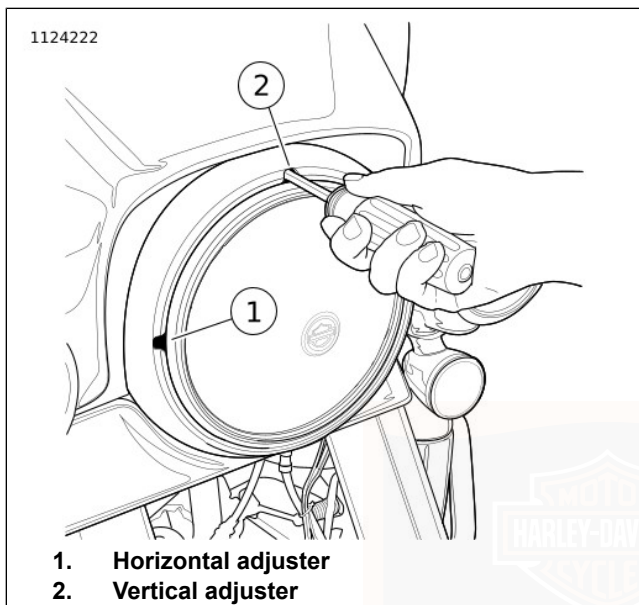

**Figure 87. Headlamp Adjusters: All except Frame-Mounted Fairing (typical)**

## HEADLAMP ALIGNMENT: DUAL LED

### Check Alignment

1. Check tire pressure.

2. Adjust rear shocks for the rider and intended load.
3. Fill fuel tank or add an equal amount of ballast.

4. **NOTE**  
*Choose a wall in minimum light.*

See Figure 88. Park the motorcycle on a line (1) perpendicular to the wall.

5. Position motorcycle so the front axle is measured distance from the wall.

Length/Dimension/Distance: 7.6 m (25 ft)

6. Draw a vehicle vertical centerline (2) on the wall.

7. **NOTE**  
*The upper lens is **low beam** on LED headlamps.*

With the motorcycle loaded, point the front wheel straight forward at wall. Measure the distance (4) from the floor to the center of the **low beam (upper)** lens.

8. Draw targets on the wall.
  - a. Draw a horizontal line (5) at the low beam centerline height.


- b. Measure the distance from the vehicle centerline to the vertical centerline of each headlamp.
- c. Draw vertical lines (6, 7) at the headlamp centerlines.

9. **NOTE**

*LED headlamps create a beam that is nearly flat on the top.*

Check headlamp alignment.

- a. Set headlamps to **low beam**.
- b. See Figure 89. The headlamps are aligned when the light beam hot spots are located at or below line (4) and centered on lines (2, 3).

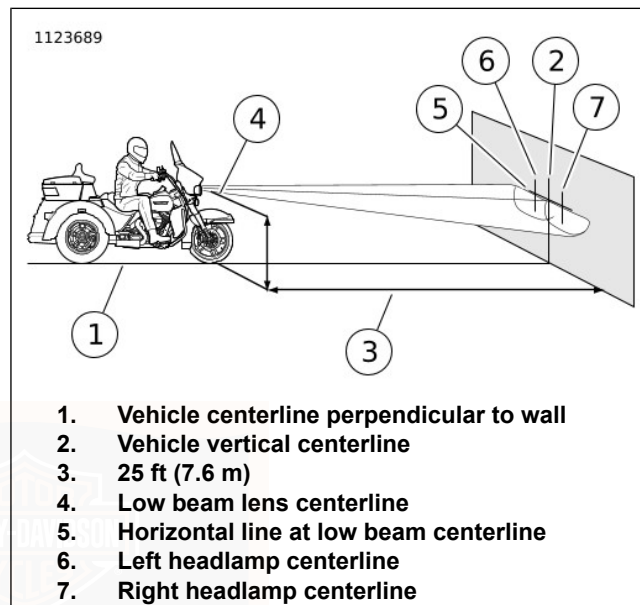

**Figure 88. Headlamp Alignment: Dual LED**

### Adjust Headlamp Alignment

1. Place the vehicle perpendicular to a target wall as described above.



2. Remove screw and lockwasher securing turn signal lamps. Remove turn signal lamps from headlamp mounting brackets.
3. Loosen headlamp nuts only enough to allow movement of the lamp.
4. Turn headlamps on low beam.
5. See Figure 89. Cover the right headlamp. Adjust left headlamp so the top of the high intensity zone (6) is at or below horizontal line (4) and centered under the left centerline (2).
6. Cover the left headlamp. Adjust right headlamp so the top of the high intensity zone (5) is at or below horizontal line (4) and centered under the right centerline (3).
7. Tighten headlamp nut to:  
*Torque: 27.1–32.5 N·m (20–24 ft-lbs) Headlamp nut: Dual LED*
8. Secure turn signal lamps with screw and lockwasher. Tighten to:  
*Torque: 10.9–17.6 N·m (8–13 ft-lbs) Turn signal lamp screw, front LED*

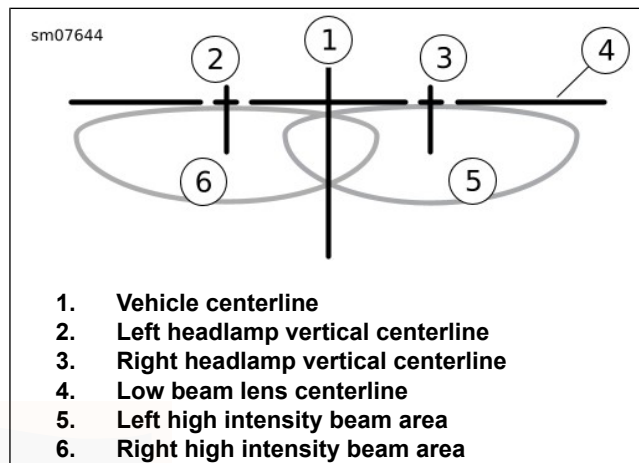


Figure 89. Headlamp Beam Pattern: Dual LED  
**HEADLAMP REPLACEMENT**

**⚠ WARNING**

Handle bulb carefully and wear eye protection. Bulb contains gas under pressure, which, if not handled carefully, could cause serious eye injury. (00062b)

### NOTICE

When replacement is required, use only the specified sealed beam unit or bulb, available from a Harley-Davidson dealer. An improper wattage sealed beam or bulb, can cause charging system problems. (00209a)

## WITHOUT FAIRING

### Bulb Replacement

1. Remove headlamp assembly.
2. Disconnect wire harness connectors from the bulbs.
3. Rotate bulb assembly 1/4 turn counterclockwise to remove from the reflector/lens.

### NOTICE


Never touch the quartz bulb. Fingerprints will etch the glass and decrease bulb life. Handle the bulb with paper or a clean, dry cloth. Failure to do so could result in bulb damage. (00210b)

4. Insert new bulb into reflector/lens and rotate 1/4 turn clockwise.
5. **HDI Models:** Rotate position lamp bulb retainer 1/4 turn counterclockwise to remove. Replace bulb and install bulb retainer in lamp housing.
6. Connect the wiring harness connectors to the bulbs.
7. Secure the headlamp assembly and headlamp door.


### Installation

1. Install headlamp connectors.
2. Figure 90 Secure headlamp assembly with retaining ring and screws (1). Tighten.  
Torque: 2.6–2.9 N·m (23–26 **in-lbs**) *Headlamp retaining screws*
3. Install the headlamp door (chrome ring):
  - a. Verify that rubber seal is in place on headlamp door. Apply glass cleaner to seal to ease installation.

- b. With the headlamp door rotated a few degrees counterclockwise, push headlamp door straight onto headlamp.
  - c. Rotate clockwise until screw can be installed.
  - d. Install screw. Tighten.
- Torque: 1–2 N·m (9–18 **in-lbs**) *Headlamp door screws*

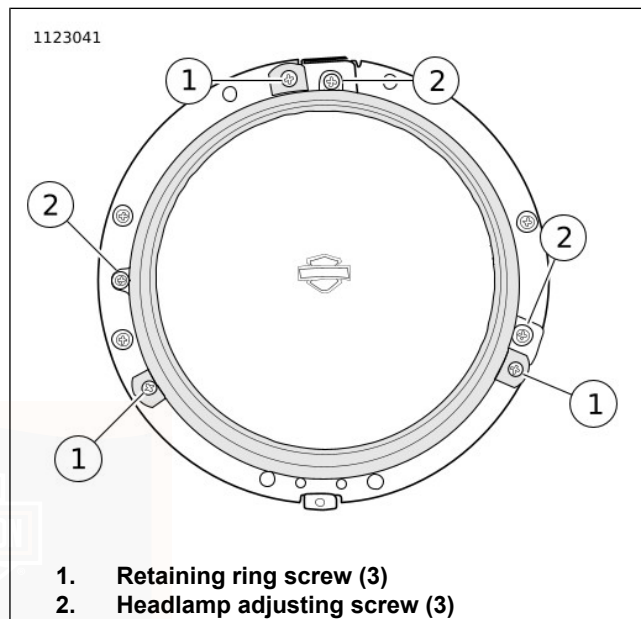

**Figure 90. Headlamp Retaining Ring**

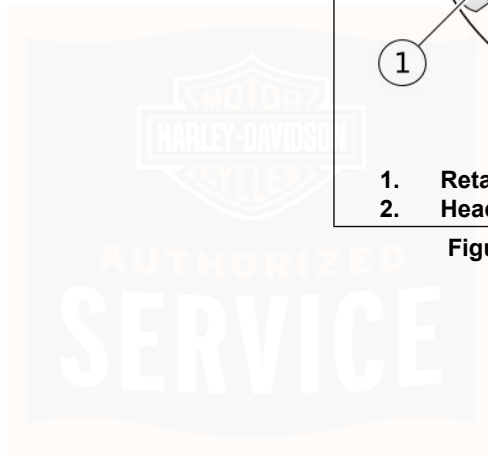

## WITH FAIRING

### Bulb Replacement

#### NOTE

*LED headlamp contains no replacement bulbs. Replace assembly upon failure. See a Harley-Davidson dealer.*

### HEADLAMP REPLACEMENT: DUAL LED

#### NOTE

*LED headlamps contain no replacement bulbs. Replace the entire assembly if failure occurs. See a Harley-Davidson dealer.*


### Removal

1. See Figure 91. Remove screw (1). Remove trim ring (2) from lamp housing.
2. Remove headlamp bulb assembly and nesting ring.
3. Disconnect connector from headlamp.

### Installation

1. See Figure 91. Place nesting ring (4) on back of **new** bulb (3) with the index tab facing away from bulb.

2. Mate connector to bulb.
3. Install bulb assembly.
4. Engage index tab of nesting ring with slot at bottom of lamp housing.
5. Engage index tabs on bulb assembly with slots in nesting ring.
6. Install trim ring on lamp housing with screw centered at bottom. Tighten.  
  
Torque: 1–1.6 N·m (9–14 **in-lbs**) *Headlamp ring screw, HDI*
7. Check headlamp alignment. See SERVICE PROCEDURES > HEADLAMP ALIGNMENT: DUAL LED (Page 201).

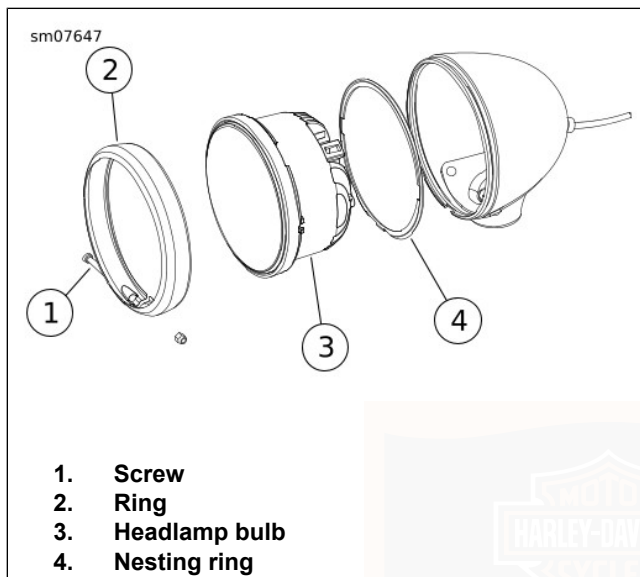

**Figure 91. Headlamp Assembly**  
**ADJUST AUXILIARY/FOG LAMPS**

**NOTE**

*Auxiliary/Fog lamps are LED type which contain no replacement bulbs. Replace assembly upon failure. See a Harley-Davidson dealer.*

1. Position the vehicle facing a target wall as described in **SERVICE PROCEDURES > HEADLAMP ALIGNMENT** (Page 199).

**NOTE**

*The weight of the rider compresses the suspension slightly. Have a person whose weight is roughly the same as the principal rider sit on the motorcycle.*

2. With the vehicle upright and a rider seated, measure the distance from the floor to the centerline of each auxiliary/fog lamp.
3. Measure the horizontal distance from the headlamp vertical centerline to the vertical centerline of each auxiliary/fog lamp.
4. See Figure 92. Mark the auxiliary/fog lamp horizontal and vertical centerlines (2, 3) on the wall.
5. Remove the turn signal lamp from the mounting bracket.
6. Using flare nut socket, loosen the auxiliary/fog lamp flange nut only enough to allow movement of the lamp.  
Special Tool: FLARE NUT SOCKET (FRX181)

7. Turn on the headlamp low beam and cover both the headlamp and the right auxiliary/fog lamp. Adjust the left auxiliary/fog lamp so the entire high intensity zone (4) is below the centerline as shown in Figure 92.

8. Repeat procedure with right lamp.

9. Tighten auxiliary/fog lamp nut to .

Torque: 27.1–32.5 N·m (20–24 ft-lbs) *Auxiliary/fog lamp flange nut*

10. Install turn signal. Secure turn signal lamp to mounting bracket. Tighten to .

Torque: 10.9–13.5 N·m (96–119 in-lbs) *Turn signal lamp to mounting bracket screw: Models with bullet style turn signal lamps*

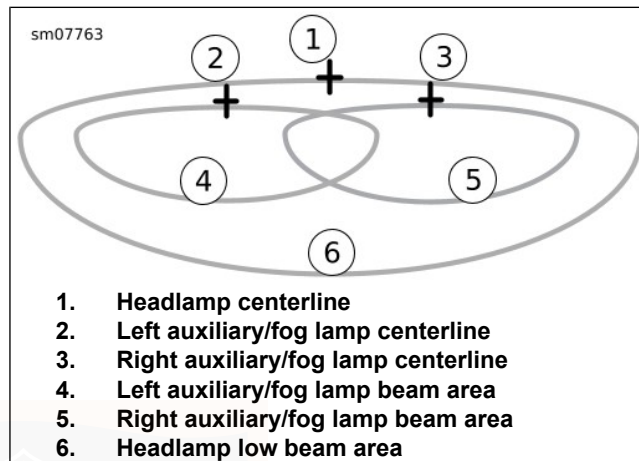


Figure 92. Headlamp Pattern: LED Type with Auxiliary/Fog Lamps

## TAIL LAMP BULB REPLACEMENT: INCANDESCENT

### Removal

1. Remove two screws to release tail lamp assembly from chrome base.
2. See Figure 93. Disconnect tail lamp connector (3).
3. Rotate bulb socket (4) a quarter turn counterclockwise and remove from tail lamp assembly. Remove bulb.

## Installation

1. Coat base of **new** bulb with ELECTRICAL CONTACT LUBRICANT. Install **new** bulb.
2. See Figure 93. Insert socket (4) into tail lamp assembly. Rotate a quarter turn clockwise.
3. Attach tail lamp connector (3).
4. Place tail lamp into position against chrome base.

### NOTE

*Do not over-tighten screws.*

5. Install two screws. Tighten to 2.3–2.7 N·m (20–24 in-lbs).

### ⚠ WARNING

**Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)**

6. Check operation of all lamps.

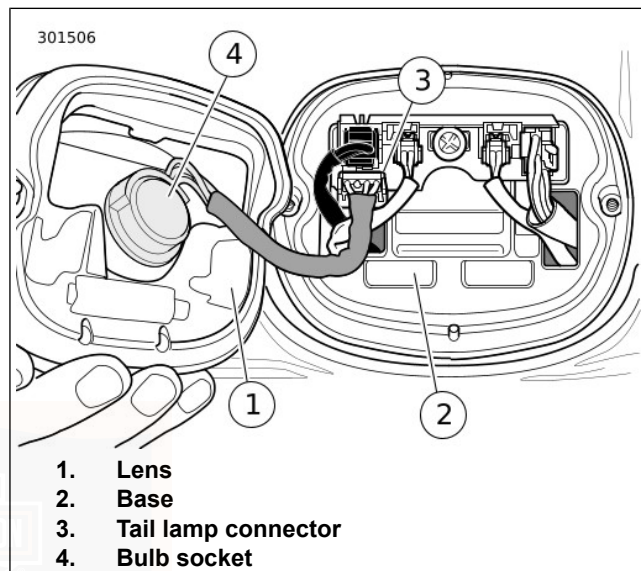


Figure 93. Tail Lamp Assembly

## TAIL LAMP BULB REPLACEMENT: LED

The tail lamp is a Light Emitting Diode (LED) assembly. Replace the tail lamp as a unit. See a Harley-Davidson dealer.

## TURN SIGNAL BULB REPLACEMENT: INCANDESCENT

### Replacing Turn Signal Bulb

1. See Figure 94. Insert coin in notch. Carefully twist until the lens cap pops out of the lamp housing.
2. While pushing bulb in, rotate counterclockwise to remove. Remove bulb.
3. Inspect condition of electrical contacts in socket. If necessary, clean with a small wire brush and electrical contact cleaner.
4. Apply ELECTRICAL CONTACT LUBRICANT to the contacts in socket and at bottom of the **new** bulb.
5. Align pins on **new** bulb with guides in bulb socket. Push and rotate **new** bulb clockwise into socket.
6. With the notch at the bottom, snap the lens cap onto the lamp housing.

### ⚠ WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

7. Check operation of all lamps.

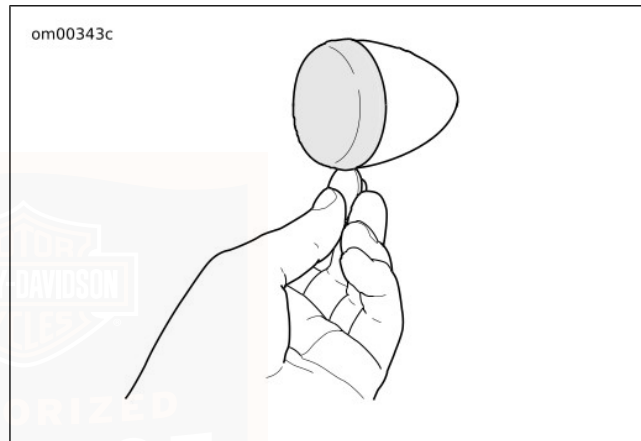


Figure 94. Remove Lens

## TURN SIGNAL BULB REPLACEMENT: LED

The LED turn signal lamp is a sealed assembly. Replace the turn signal lamp as a unit. See a Harley-Davidson dealer.



## SEAT

### Removal: Without Tour-Pak

1. Remove screw securing rear of seat.
2. To protect body assembly finish, cover rear seat mounting bracket with palm of hand.
3. See Figure 95. While pushing seat forward, raise rear of seat until bracket clears top of body assembly. Push seat rearward slightly to free seat from tongue on rear fuel tank bracket.

### Installation: Without Tour-Pak

1. See Figure 96. Firmly push front of seat downward and forward until slot engages tongue.
2. Secure rear of seat with screw. Tighten.  
Torque: 5.4–8.1 N·m (48–72 **in-lbs**) *Seat mounting screw*
3. Pull up on the front and rear of seat to verify that it is properly secured.


### Removal: With Tour-Pak

1. See OPERATION > TOUR-PAK (Page 132). Open Tour-Pak to move passenger seat backrest out of the way.


2. Remove screw securing rear of seat.
3. To protect Tour-Pak finish, cover rear seat mounting bracket with palm of hand.
4. See Figure 95. While pushing seat forward, raise rear of seat until bracket clears top of Tour-Pak. Push seat rearward slightly to free seat from tongue on rear fuel tank bracket.

### Installation: With Tour-Pak

1. See Figure 96. Place seat on frame backbone.
2. To protect finish of Tour-Pak, cover rear seat mounting bracket with palm of hand.
3. While raising rear of seat approximately 76.2 mm (3 in), use other hand to firmly push front of seat downward and forward until tongue engages slot in seat.
4. Push seat rearward until seat retention nut is centered in hole of mounting bracket.
5. Install seat mounting screw. Tighten to 5.4–8.1 N·m (48–72 **in-lbs**).
6. Pull up on the front and rear of seat to verify that it is properly secured.

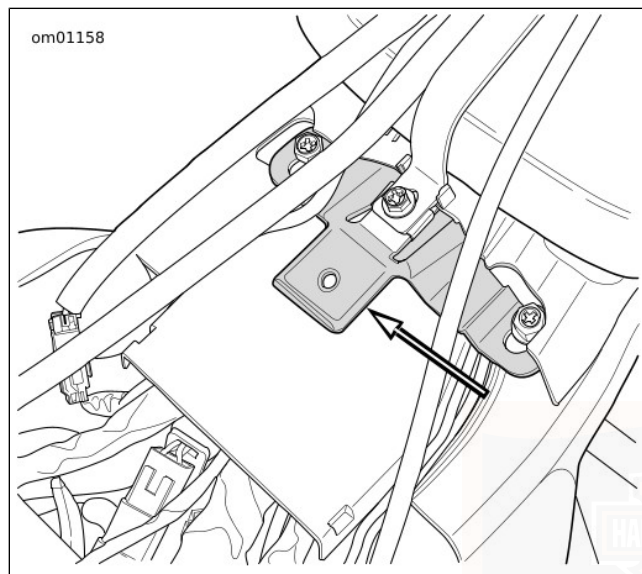

**Figure 95. Seat Tongue**

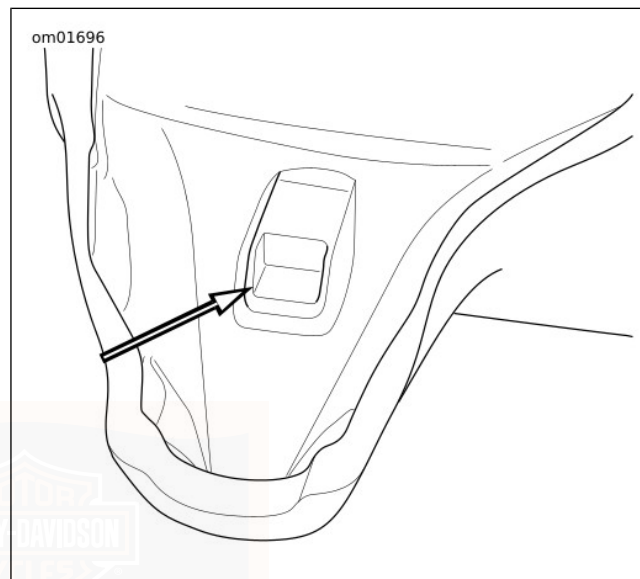

**Figure 96. Seat Mounting Slot**

## TROUBLESHOOTING: GENERAL

### ⚠ WARNING

The troubleshooting section of the Owner's Manual is a guide to diagnose problems. Read the service manual before performing any work. Improper repair and/or maintenance could result in death or serious injury. (00080a)

Use the following checklists for troubleshooting. Carefully check each cause because more than one condition can cause trouble.

## ENGINE

### Starter Does Not Operate or Does Not Turn Engine Over

1. Engine OFF/RUN switch in OFF position.
2. Ignition switch not in IGNITION position.
3. Discharged battery or loose or corroded connections (solenoid chatters).
4. Clutch lever not squeezed against handlebar and front or rear brake applied or transmission not in neutral.
5. Main fuse not in place.

### Engine Turns Over but Does Not Start

1. Fuel tank empty.
2. Fuel filter is clogged.
3. Discharged battery or loose or damaged battery terminal connections.
4. Fouled spark plugs.
5. Spark plug cable connections loose or in bad condition and shorting.
6. Loose or corroded wire or cable connections at coil or battery.
7. Fuel pump is inoperative.
8. Main fuse not in place.

### Starts Hard

1. Spark plugs in bad condition, have improper gap or are partially fouled.
2. Spark plug cables in bad condition and leaking.
3. Battery nearly discharged.
4. Damaged or loose wire or cable connections at one of the battery terminals or at ignition coil.
5. Engine oil too heavy (cold-weather operation).
6. Water or dirt in fuel system.

7. Fuel pump is inoperative.

### **Starts but Runs Irregularly or Misses**

1. Spark plugs in bad condition or partially fouled.
2. Spark plug cables in bad condition and leaking.
3. Spark plug gap too close or too wide.
4. Battery nearly discharged.
5. Damaged wire or loose wire connection at ignition coil, battery or ECM connector.
6. Intermittent short circuit due to damaged wire insulation.
7. Water or dirt in fuel system.
8. Fuel vent system plugged. See dealer.
9. One or more injectors fouled.

### **A Spark Plug Fouls Repeatedly**

1. Fuel mixture too rich.
2. Incorrect spark plug.

### **Pre-ignition or Detonation (Knocks or Pings)**

1. Incorrect fuel.
2. Incorrect spark plug for the kind of service.

### **Overheats**

1. Insufficient oil supply or oil not circulating.
2. Heavy carbon deposit from lugging engine. See dealer.
3. Insufficient air flow over cylinder heads during extended periods of idling or parade duty.

### **Excessive Vibration**

1. Rear fork pivot shaft nuts loose. See dealer.
2. Front engine mounting bolts loose. See dealer.
3. Engine to transmission mounting bolts loose. See dealer.
4. Damaged frame. See dealer.
5. Front chain or links tight as a result of insufficient lubrication or belt badly worn.
6. Wheels and/or tires damaged. See dealer.
7. Vehicle not properly aligned. See dealer.
8. Steering head damper worn or damaged. See dealer.
9. Panhard rod fasteners loose. See dealer.

### **Engine Oil Not Circulating (Oil Pressure Lamp Lit)**

1. Insufficient or diluted oil supply.
2. Oil feed clogged with ice and sludge in freezing weather.

3. Grounded oil signal switch wire or faulty signal switch. See dealer.
4. Damaged or improperly installed check valve. See dealer.
5. Oil pump problem. See dealer.

## **TRANSMISSION**

### **Transmission Shifts Hard**

1. Clutch controls improperly adjusted. See dealer.
2. Bent shifter rod. See dealer.

### **Transmission Jumps Out of Gear**

1. Worn shifter dogs in transmission. See dealer.

### **Clutch Slips**

1. Clutch controls improperly adjusted. See dealer.
2. Worn friction discs. See dealer.
3. Insufficient clutch spring tension. See dealer.

### **Clutch Drags or Does Not Release**

1. Clutch controls improperly adjusted. See dealer.
2. Primary chaincase overfilled.
3. Clutch discs warped. See dealer.

## **Clutch Chatters**

1. Friction discs or steel discs worn or warped. See dealer.

## **COOLING SYSTEM**

### **Overheats**

1. Low coolant level.
2. Restricted radiator air flow.
3. Coolant pump or fans inoperative. See dealer.
4. Vent hose crimped.
5. Air in coolant.

## **ELECTRICAL SYSTEM**

### **Alternator Does Not Charge**

1. Regulator not grounded. See dealer.
2. Engine ground wire loose or damaged. See dealer.
3. Loose or damaged wires in charging circuit. See dealer.

### **Alternator Charge Rate is Below Normal**

1. Weak battery.
2. Excessive use of add-on accessories.
3. Loose or corroded connections.

4. Extensive periods of idling or low speed riding.

## **BRAKES**

### **ABS System Behavior**

1. Anti-lock Braking System (ABS) lamp does not shut off above 5 km/h (3 mph). See dealer.
2. Other ABS symptoms. Refer to Table 30.

### **Brakes Do Not Hold Normally**

1. Master cylinder low on fluid. See dealer.
2. Brake line contains air bubbles. See dealer.
3. Master cylinder or caliper piston worn. See dealer.
4. Brake pads contaminated with grease or oil. See dealer.
5. Brake pads badly worn. See dealer.
6. Brake disc badly worn or warped. See dealer.
7. Brake fades because of heat build up. Excessive braking or brake pads dragging. See dealer.
8. Brake drags. Insufficient hand lever free play. See dealer.

## **REVERSE MOTOR**

### **Reverse Motor Does Not Operate/Cannot Enable**

1. Vehicle not started or vehicle not in neutral.
2. Reverse motor circuit breaker open/tripped.

## **HANDLING**

### **Irregularities**

1. Improperly loaded motorcycle. Non-standard equipment on the front end such as heavy radio receivers, extra lighting equipment or luggage tends to cause unstable handling.
2. Damaged tire(s) or improper front-rear tire combination.
3. Irregular or peaked front tire tread wear.
4. Incorrect tire pressure.
5. Shock absorber not functioning normally. See dealer.
6. Loose front wheel axle nuts or rear wheel lug nuts. Tighten to recommended torque specification. See dealer.
7. Rear axle out of alignment with frame and front wheel. See dealer.

8. Steering head bearings improperly adjusted. Correct adjustment and replace pitted or worn bearings and races. See dealer.
9. Damaged or inoperative steering damper.
10. Tire and wheel unbalanced. See dealer.
11. Rear fork pivot assembly: improperly tightened or assembled, or loose/pitted or damaged pivot bearings. See dealer.
12. Engine mounts and/or stabilizer links loose, worn or damaged. See dealer.
13. Uneven rear brake operation. See dealer.
14. Loose rear axle bearing cap bolts or bearing retainer nuts. See dealer.



## NOTES

---





## WARRANTY AND MAINTENANCE

This owner's manual contains your new motorcycle limited warranty and your owner's maintenance record.

It is your responsibility as the owner to follow the maintenance schedule at the mileage intervals as specified in the owner's manual. All of the specified maintenance services must be performed on schedule to keep your limited warranty valid.

Some countries, states or other locations may require all regular maintenance and service work to be done by an authorized Harley-Davidson dealer for your limited warranty to remain in effect. Check with your authorized Harley-Davidson dealer for local requirements.

1. Make an appointment with a Harley-Davidson dealer for inspection and service prior to the first 1,600 km (1000 mi), and as soon as possible after any issue arises.
2. Bring this owner's manual with you when you visit your authorized Harley-Davidson dealer to have your motorcycle inspected and serviced.
3. Have the dealer technician sign the maintenance record in the owner's manual at the proper mileage interval. These records should be retained by the owner as proof of proper maintenance.
4. Keep receipts covering any parts, service or maintenance performed.

These records should be transferred to each subsequent owner.

Use only Harley-Davidson approved parts and accessories that have been designed, tested and approved for your model and model year motorcycle.

Use of aftermarket performance parts may void all or parts of your limited warranty. See an authorized Harley-Davidson dealer for details.

Harley-Davidson authorized dealerships are independently owned and operated and may sell and install parts and accessories that are not manufactured or approved by Harley-Davidson for use on your motorcycle. Therefore, you should understand that Harley-Davidson is not and cannot be responsible for the quality, suitability, or safety of any non-Harley-Davidson part, accessory or design modification, including labor, which may be sold and/or installed by authorized Harley-Davidson dealerships.

## KEEPING IT ALL HARLEY-DAVIDSON

Genuine Harley-Davidson parts are engineered and tested specifically for use on your motorcycle. Insist that your authorized Harley-Davidson dealer uses only genuine Harley-Davidson replacement parts and accessories to keep your Harley-Davidson motorcycle and its limited warranty intact. Not all Harley-Davidson parts and accessories are appropriate for your model or model year motorcycle.

## NOTICE

**It is possible to overload the vehicle's charging system by adding too many electrical accessories. If the combined electrical accessories operating at any one time consume more electrical current than the vehicle's charging system can produce, the electrical consumption can discharge the battery and cause damage to the vehicle's electrical system. (00211d)**

### NOTE

*Installing off-road or competition parts to enhance performance may void all or parts of your limited warranty. See the Harley-Davidson Motorcycle Limited Warranty in this owner's manual or an authorized Harley-Davidson dealer for details.*

## CALIFORNIA AND SELECT INTERNATIONAL MARKETS EVAPORATIVE EMISSION CONTROLS

All new Harley-Davidson motorcycles sold in the State of California and select international markets have an evaporative emission control system. This system is designed to meet CARB and local regulations in effect at the time of manufacture.

The system requires a small amount of maintenance. Periodically inspect system to verify that hoses are properly routed, not kinked or blocked and that all fittings are secure. Periodically check mounting hardware for tightness.

220 Warranties and Responsibilities

## EPA NOISE REGULATIONS IN THE UNITED STATES

EPA noise regulations require that the following statements be included in the Owner's Manual.

### EPA Regulations

**TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:** Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

**AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE FOLLOWING:**

1. Replacing the muffler(s) and/or the entire exhaust system with parts not certified to be noise legal for street use.
2. Removing or modifying the muffler internal baffles in any way.
3. Replacing the air intake/cleaner assembly with one not certified to be noise legal for street use.

4. Modifying the air intake/cleaner assembly in such a way as to make the vehicle no longer noise legal for street use.

Harley-Davidson recommends that any and all noise related maintenance be done by an authorized Harley-Davidson dealer using Genuine Harley-Davidson parts.

## **WARRANTY/SERVICE INFORMATION**

Any authorized Harley-Davidson dealer may provide warranty repair work on your motorcycle. The fact that an authorized Harley-Davidson dealership performs warranty repairs does not create an agency relationship between Harley-Davidson and the authorized dealership. If you have any questions regarding warranty obligations contact your authorized Harley-Davidson dealer.

For normal service work or warranty work under the above conditions, you may obtain the name and location of your nearest U.S. authorized Harley-Davidson dealer by calling 1-800-258-2464 (U.S. only). To find dealers worldwide, see [www.harley-davidson.com](http://www.harley-davidson.com).

## **REPORTING SAFETY DEFECTS IN THE UNITED STATES**

Safety defects must be reported to the National Highway Traffic Safety Administration (NHTSA) and Harley-Davidson.

## **NHTSA Statement**

If you believe that your motorcycle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Harley-Davidson.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of motorcycles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your authorized Harley-Davidson dealer, or Harley-Davidson.

You can contact NHTSA through the following means. Additional information about motor vehicle safety is available through the website.

**Telephone:** Vehicle Safety Hotline (toll-free) at 1-888-327-4236 (TTY: 1-800-424-9153).

**Website:** [www.safercar.gov](http://www.safercar.gov)

**Address:** Administrator, NHTSA, 400 Seventh Street SW, Washington, DC 20590

## **REQUIRED DOCUMENTATION FOR IMPORTED MOTORCYCLES**

If a Harley-Davidson motorcycle is imported into the United States, additional documentation is required for that motorcycle to be eligible for the United States Harley-Davidson Motorcycle Limited Warranty. An authorized Harley-Davidson dealer can provide a form explaining the requirements.

## **OWNER CONTACT INFORMATION**

If you move from your present address, sell your motorcycle, or purchase a pre-owned Harley-Davidson motorcycle, see an authorized Harley-Davidson dealer to update your owner contact information.

This will provide Harley-Davidson with an accurate registration (as required by law in some countries), and will allow Harley-Davidson to notify you in the event of a recall or product program.

The rights and benefits conferred upon you and the obligations of Harley-Davidson as set forth herein are separate and distinct from any rights and duties set forth in any service contract you may have purchased from a dealership and/or third-party insurance company. Harley-Davidson does not authorize any entity to expand Harley-Davidson's warranty obligations in connection with your motorcycle or this limited warranty.

When updating your contact information, your authorized Harley-Davidson dealer will need your Vehicle Identification Number (VIN), odometer mileage, and date of vehicle transfer (if applicable).

## **QUESTIONS AND CONCERNS**

If you have questions or concerns regarding the performance of your motorcycle or the application of the limited warranty described here, or are not satisfied with the service you are receiving from an authorized Harley-Davidson dealership, do the following:

1. Contact the selling and/or servicing dealership and speak to the sales and/or service manager.
2. If your concern cannot be addressed to your satisfaction by the dealership, contact the Harley-Davidson Customer Support Center by mailing your concern to the following address or calling the phone number below.

In the U.S., state warranty laws, often referred to as lemon laws, may provide you with certain rights not specifically mentioned here. To the extent allowed by your state, Harley-Davidson requests that you first send written notification of any defect or warranty non-conformity that you have experienced with your motorcycle to Harley-Davidson. Harley-Davidson appreciates the opportunity to investigate your concerns and restore your satisfaction in your motorcycle by making the necessary repairs consistent with the terms of

Harley-Davidson's limited warranty. Harley-Davidson requests that you send your complaint to the Harley-Davidson Customer Support Center.

- Harley-Davidson Motor Company Attention:  
Harley-Davidson Customer Support Center P.O. Box 653  
Milwaukee, Wisconsin 53201 1-800-258-2464 (U.S. only)  
1-414-343-4056

This warranty does not mean that each Harley-Davidson motorcycle is free from defects. Defects may be unintentionally introduced into motorcycles during the design and manufacturing processes and such defects could result in the

need for repairs. For this reason, Harley-Davidson provides the Limited Warranty in order to remedy any such defects that result in a component malfunction or failure during the warranty period. The remedy under this written warranty, and any implied warranty, is limited to repair, replacement or adjustment of the defective part. This exclusive remedy shall not be deemed to have failed its essential purpose so long as Harley-Davidson, through its authorized dealers, is willing and able to repair, replace or adjust defective parts in the prescribed manner. Harley-Davidson's liability, if any, shall in no event exceed the cost of correcting any defect as herein provided and upon expiration of this warranty, any such liability shall terminate.



## NOTES

---



## 2021 HARLEY-DAVIDSON LIMITED MOTORCYCLE WARRANTY

### 24 Months/Unlimited Miles

Harley-Davidson warrants for any new 2021 Harley-Davidson motorcycle that an authorized Harley-Davidson dealer will repair or replace without charge any parts found under normal use to be defective in factory materials or workmanship. Such repair or replacement of defective parts will be Harley-Davidson's sole obligation and your sole and exclusive remedy under this limited warranty. This limited warranty applies only for the duration identified below.

No person, including Harley-Davidson dealers, may modify, extend or waive any part of this warranty.

As a condition of this warranty, you are responsible for properly using, maintaining, and caring for your motorcycle as outlined in your Owner Manual. Harley-Davidson recommends that you maintain copies of all maintenance records and receipts.

THERE IS NO OTHER EXPRESS WARRANTY (OTHER THAN THE SEPARATE EMISSIONS, NOISE, AND RADIO LIMITED WARRANTIES) ON THE MOTORCYCLE. Any implied warranty of merchantability or fitness for particular purpose is limited to the duration of the express warranty, or to the duration set forth in your state's warranty statutes,

whichever is shorter. Any implied warranty is not transferred to subsequent purchasers/buyers of the motorcycle.

The implied warranty of fitness for a particular purpose does not apply if your motorcycle is used for racing, even if the motorcycle is equipped for racing.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

TO THE FULLEST EXTENT ALLOWED BY LAW, NEITHER HARLEY-DAVIDSON NOR ITS AUTHORIZED DEALERS SHALL BE LIABLE FOR LOSS OF TIME, INCONVENIENCE, LOSS OF MOTORCYCLE USE, COMMERCIAL LOSS OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Harley-Davidson and your dealer are not responsible for any time or income that you lose, any inconvenience, the loss of your transportation or use of your motorcycle, the cost of a rental motorcycle, fuel, travel, meals, or lodging, or for any other incidental or consequential damages you may have.

Punitive, exemplary, or multiple damages may not be recovered unless applicable law prohibits their disclaimer. You may not bring any warranty-related claim as a class representative, a private attorney general, a member of a class of claimants or in any other representative capacity. Harley-Davidson shall not be liable for any damages caused

by delay in delivery or furnishing of any products and/or services.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The following terms and conditions apply to this limited warranty:

### **Duration**

1. The duration of this limited warranty is twenty-four months, starting from the earlier of (a) the date of initial retail purchase and delivery of the motorcycle from an authorized Harley-Davidson dealer, or (b) the third anniversary of the last day of the model year of the motorcycle. Your authorized Harley-Davidson dealer will submit an electronic Sales and Warranty Registration form to initiate your limited warranty.
2. Any unexpired portion of this limited warranty will be transferred to subsequent owners, upon the resale of the motorcycle during the limited warranty period.

### **Owner's Obligations**

To obtain warranty service, return your motorcycle at your expense within the limited warranty period to an authorized Harley-Davidson dealer. The authorized Harley-Davidson dealer should be able to provide warranty service during normal business hours, depending upon the workload of the authorized dealer's service department and the availability of necessary parts.

### **Exclusions**

This limited warranty will not apply to any motorcycle.

1. Which has not been operated or maintained as specified in the owner's manual.
2. Which has been abused, neglected, misused, improperly stored, used "off the highway," or used for racing or competition of any kind.
3. Which is not manufactured to comply with the laws of the market in which it is registered.



4. Which has off-road or competition parts installed to enhance performance, a trailer hitch, or has other unapproved modifications (even if these modifications include genuine Harley-Davidson parts and accessories that are not approved for use on your motorcycle). These modifications may void all or parts of your new motorcycle limited warranty. See an authorized Harley-Davidson dealer for details.
  5. Which has been subjected to an act of God, war, riot, insurrection, nuclear contamination, natural disasters, including, but not limited to, lightning, forest fires, dust storms, hail storms, ice storms, earthquakes, or floods, or other circumstances out of Harley-Davidson's control.
  6. Which has been in an accident or collision or has been dropped or struck.
2. Cosmetic concerns that arise as a result of owner abuse, lack of proper maintenance or environmental conditions (except concerns that result from defects in factory materials or workmanship, which are covered by this limited warranty for the duration of the limited warranty period).
  3. Any cosmetic condition existing at the time of retail delivery that has not been documented by the authorized Harley-Davidson selling dealer prior to retail delivery.
  4. Defects or damage to the motorcycle caused by alterations outside of Harley-Davidson's factory specifications or caused by alterations or use of parts or accessories not approved for the make and model year of your motorcycle.
  5. Damage caused by installation or use of non-Harley-Davidson components, even those installed by an authorized Harley-Davidson dealership, that cause a Harley-Davidson part to fail. Examples include, but are not limited to performance-enhancing powertrain components or software, exhaust systems, trailer hitches, non-approved tires, lowering kits, handlebars, and add-ons connected to the factory electrical system.
  6. **United States customers:** Defects or damage impacting the functionality of powertrain components in a motorcycle that has been tuned using a tuner or calibration that was not covered by a California ARB Executive Order or otherwise approved by EPA.

## Other Limitations

This limited warranty does not cover:

1. Parts and labor for normal maintenance as recommended in the owner's manual, or the replacement of parts due to normal wear and tear including, but not limited to, the following: light bulbs, tires, lubrication, oil and filter change, fuel system cleaning, battery maintenance, engine tune-up, spark plugs, brake, clutch, chain/belt adjustment and chain replacement.

## **Important: Read Carefully**

1. Authorized Harley-Davidson dealers are independently owned and operated and may sell non-Harley-Davidson products. Because of this, HARLEY-DAVIDSON IS NOT RESPONSIBLE FOR THE SAFETY, QUALITY, OR SUITABILITY OF ANY NON-HARLEY-DAVIDSON PART, ACCESSORY OR DESIGN MODIFICATION INCLUDING, BUT NOT LIMITED TO, LABOR WHICH MAY BE SOLD AND/OR INSTALLED BY AUTHORIZED HARLEY-DAVIDSON DEALERS.
2. This limited warranty is a contract between you and Harley-Davidson. It is separate and apart from any warranty you may receive or purchase from an authorized Harley-Davidson dealer. An authorized Harley-Davidson dealer is not authorized to alter, modify, expand, or in any way change the terms and conditions of this limited warranty.
3. Any warranty work or parts replacement authorized by Harley-Davidson will not preclude Harley-Davidson from later relying on any exclusion where applicable.
4. Harley-Davidson and its authorized dealers reserve the right to modify or service motorcycles designed and manufactured by Harley-Davidson at any time without incurring any additional obligation to make the same alteration or change to a motorcycle previously built and sold. Harley-Davidson reserves the right to provide post-warranty repairs, conduct repair campaigns, offer good-will or customer satisfaction repairs or extend the warranty coverage for certain motorcycles at its sole discretion. Said repairs or extensions of warranty coverage in no way obligates Harley-Davidson to provide similar accommodations to other owners of similar motorcycles. Sometimes Harley-Davidson may offer a special adjustment program to pay all or part of the cost of certain repairs beyond the terms of your limited warranty. Check with your authorized Harley-Davidson dealer to learn whether such programs are available to you. Your state may prohibit these types of offers, in which case, they may not be available to you.
5. The fact that a part is labeled or branded Harley-Davidson does not necessarily make it appropriate or warranted for the make and model of your motorcycle. The use of parts not designed and tested for your motorcycle may have negative consequences on the performance of your motorcycle and may create conditions not covered by this limited warranty.

## Environmental Factors

1. Warranty will cover rust/corrosion and/or pitting on one component, one time only, under appropriate conditions. If a vehicle is exhibiting any of these conditions on more than one component, warranty coverage will be denied.
2. Warranty will cover rust/corrosion and/or pitting on multiple components only if they are the same component (i.e. both mirrors, both rider footboards, etc.)
3. Warranty will not cover rust/corrosion and/or pitting on wheels at any time unless the condition had been properly documented in the DPQA. For warrantable conditions see Cosmetic Quality Guide.

4. Warranty will not cover rust/corrosion and/or pitting as a result of damage from road debris, hazards, neglect, chemical exposure or abuse/misuse of the motorcycle.
5. Warranty will not cover rust/corrosion inside fuel tanks.
6. Warranty will not cover rust/corrosion and/or pitting or part wear that results from off-road use.

The owner is responsible for protecting the motorcycle from any cosmetic concerns that result from use and/or from exposure to the elements.



## NOTES

---



## WARRANTY STATEMENT (KOREA)

### Warranty

Kiheung Motors Ltd. provides the following services either free of charge or on a paid basis for motorcycles sold by the Company in accordance with the warranty policy of Harley Davidson Motor Company Inc., as well as with the Consumer Framework Act and the Clean Air Conservation Act.

#### 1. Warranty Coverage

Harley-Davidson will provide repair services either free of charge or on a limited paid basis in accordance with the warranty period and terms specified in the warranty, provided that the customer's motorcycle was operated and maintained in accordance with the check and maintenance schedule and operating guidelines specified in the Owner's Manual provided by the Company and that the defect is a result of a component material deficiency or manufacturing process(es).

#### 2. Warranty Period

The warranty period is 24 months from the date of retail sale and delivery, with no warranty limitation applied to total mileage.

If the ownership of the motorcycle is transferred to another individual prior to expiration of the warranty, the remaining warranty period shall be passed on to the individual who takes over ownership.

Warranty period for parts related to fuel exhaust

Warranty period for parts related to fuel exhaust shall be provided as indicated below in accordance with Article 63 of the Clean Air Conservation Act.

(Warranty period is 24 months from the date of retail sale and delivery, however warranty shall expire anytime upon exceeding total mileage of 10,000km within this period)

#### 3. Related Parts

##### Classification | Parts Covered

##### Engine

Cylinder; cylinder head; rocker cover; pistons; crank case; fly wheel; intake and exhaust valves; oil pump; cam shaft; rocker arm; radiator; water pump; cam chain; various engine gaskets and rubber sealing

##### Power Train and Brake System

Transmission gear and housing; belt; brake master cylinder; brake caliper; wheel bearing; transmission bearings, gaskets and rubber sealing; ABS module

##### Frame and Exterior Parts

Fuel tank; fuel pump; front fork; rear shock absorber; frame; oil tank; wheel; operating devices (levers and switches); various covers

## Electric/Electronic Devices

Module (induction/ignition/ECM); stereo; stator; rotor; regulator; various sensor/switches/relays/displays; wiring; battery; cooling fan; thermostat

## 4. Warranty Coverage For Parts Related With Fuel Exhaust and Detailed Items

### Classification

### Covered Parts

### Engine

Oxygen sensor; catalyst for purifier

### Frame and Exterior Parts

Induction module; electronic control unit; throttle position sensor; barometric pressure sensor; fuel sprayer; fuel pressure controller; engine temperature sensor; fuel spray pump

## Electric/Electronic Devices

Ignition coil; spark plugs (pre-delivery); regulator/rectifier

### Fuel Exhaust Self-Diagnostic Device

Knocking sensor; oxygen sensor

## 5. Notes for Owners

- Please use and maintain the motorcycle in accordance with the check and maintenance schedule and operating guidelines specified in the Owner's Manual.

Please maintain the motorcycle at authorized service centers with genuine Harley-Davidson parts.

## 6. Warranty Exceptions

- Occurrences excluded from the warranty coverage specified in the Owner's Manual or those included in other limitations.

- Failures stemming from non-use of genuine Harley-Davidson parts or failure to top up engine oil

- Motorcycle was checked and maintained by general shops other than authorized Harley-Davidson service center or defects found in motorcycles imported by parallel importers

- Use of defective fuel including fake gasoline and other sensory phenomenon that does not affect the normal functioning performance (noise, vibration)

- Consequential damages, costs or expenses, including transportation costs; shipping costs, storage costs, loss of time, inconvenience, or loss of use of the motorcycle.

- Regular checkup for ensuring full function of the vehicle – cleaning of fuel tank and fuel filter; wheel alignment; adjustment of steering system; brake check (oil and brake pad replacement), ignition plug; spark plug cable; clutch disk;

brake pad; fuse; light bulbs; filters, oils; natural discoloration of painting; corrosion from unsatisfactory maintenance

- Odometer failure; mileage cannot be determined due to modification/remodeling

- Odometer failure; mileage cannot be determined due to modification/remodeling - Other occurrences that breach Harley-Davidson warranty policies

#### 7. Warranty Repair Process

- Visit your authorized Harley-Davidson Service Center with your motorcycle and warranty card during normal business

hours and provide them to the person responsible for warranty repairs.

(Gangnam Service Center: TEL. +82-70-7405-8241 / Yongin Service Center: TEL. +82-70-7405-8251 / Daegu Service Center: TEL. +82-70-7405-8340 / Daejeon Service Center: TEL. +82-70-4048-4633 / Busan Service Center: TEL. +82-70-7457-6882)

8. Harley-Davidson Motor Company Inc. is not required to apply any design changes to vehicles already sold and delivered to customers as a result of specification changes during manufacturing of the same model.



## NOTES

---





## 2021 AUSTRALIA/NEW ZEALAND HARLEY-DAVIDSON MOTORCYCLE LIMITED WARRANTY

### 24 Months/Unlimited Miles

This motorcycle limited warranty, referred to below as the "H-D Motorcycle Warranty" applies to all persons who purchase a new 2021 or prior-model Harley-Davidson motorcycle in Australia and New Zealand only after 1st January 2020.

### Your Consumer Rights

The benefits given to you under this H-D Motorcycle Warranty are additional to, and do not detract from, other rights and remedies that you may have in respect of the motorcycle under Australian and New Zealand laws, including consumer protection laws.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand, our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

### Warranty

This H-D Motorcycle Warranty, is provided by **Harley-Davidson, Motor Company**, P.O. Box 653, Milwaukee, Wisconsin 53201, U.S.A, phone: +1 (414) 343-4056, ("Harley-Davidson").

Harley-Davidson warrants for any new 2021 Harley-Davidson motorcycle that an authorised Harley-Davidson dealer will repair or replace without charge any parts found to be defective in factory materials or workmanship under normal use during the warranty period set out below.

Such repair or replacement of parts will be Harley-Davidson's sole obligation and your sole remedy under this H-D Motorcycle Warranty, however you may have other rights under Australian and New Zealand laws, as described above.

**Note:** Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair goods.

The following terms and conditions apply to this H-D Motorcycle Warranty:

## Warranty Period

The duration of this H-D Motorcycle Warranty is twenty-four months, starting from the earlier of:

- (a) the date of delivery by an authorised Harley-Davidson dealer to the first retail purchaser; or
- (b) the third anniversary of the last day of the model year of the motorcycle (if not sold to a retail purchaser before that date).

Your authorised Harley-Davidson dealer will submit an electronic Sales and Warranty Registration form to initiate your H-D Motorcycle Warranty.

**Note:** If the motorcycle was used as a demonstrator or company motorcycle, then the warranty period may have started and/or expired prior to the initial retail sale. See an authorised Harley-Davidson dealer for details.

Any unexpired portion of this H-D Motorcycle Warranty will be transferred to subsequent owners, upon the resale of the motorcycle during the warranty period. See the OWNER CONTACT INFORMATION section of the Owner's Manual for information regarding notification of ownership changes.

## Obtaining Warranty Service

To obtain warranty service, return your motorcycle at your expense within the warranty period to an authorised dealer.

Harley-Davidson's network of authorised dealers is large, and continues to expand. To find current contact information for your nearest authorised dealer, visit our website at [www.h-d.com.au](http://www.h-d.com.au).

The authorised Harley-Davidson dealer should be able to provide warranty service during normal business hours and as soon as possible, depending upon the workload of the authorised dealer's service department and the availability of necessary parts

You are responsible for collecting the motorcycle from the authorized dealer once the warranty service has been completed, at your expense.

## Exclusions

This H-D Motorcycle Warranty will not apply to any motorcycle (or part or accessory):

1. Which has not been operated or maintained as specified in the Owner's Manual.
2. Which has been abused, neglected, misused, improperly stored, used "off the highway," or used for racing or competition of any kind.
3. Which was not originally manufactured for use or sold in Australia and New Zealand and/or does not comply with Australian and New Zealand homologation requirements.

4. Which has off-road or competition parts installed to enhance performance, or has unapproved modifications. These modifications may void all or part of your new H-D Motorcycle Warranty. See an authorised Harley-Davidson dealer for details.
5. Where damage is caused by, or Harley-Davidson is unable to honour this H-D Motorcycle Warranty due to, acts of God, war, riot, insurrection, natural disasters, including, but not limited to, nuclear contamination, lightning, forest fires, dust storms, hail storms, ice storms, earthquakes, floods, or other circumstances out of Harley-Davidson's control.
6. Which has been in an accident, collision, dropped or struck.

**Note:** Even though this H-D Motorcycle Warranty does not apply in the circumstances set out above, you may still have rights under Australian and New Zealand laws, including the Australian Consumer Law in such circumstances.

## Other Limitations

This H-D Motorcycle Warranty does not cover:

1. Parts and accessories not manufactured by Harley-Davidson, or any damage caused to the motorcycle by the installation of such parts and accessories, even if such parts and accessories are installed on the motorcycle at the date of initial retail purchase. A separate third party warranty may apply to such parts and accessories. See an authorised Harley-Davidson dealer for details.
2. Parts and labour for normal maintenance as recommended in the Owner's Manual, or the replacement of parts due to normal wear and tear including, but not limited to, the following: light bulbs, tyres, lubrication, oil and filter change, fuel system cleaning, battery maintenance, engine tune-up, spark plugs, brake, clutch, chain/belt adjustment and chain replacement.
3. Cosmetic or other concerns that arise as a result of owner abuse, lack of proper maintenance or environmental conditions (except concerns that result from defects in factory materials or workmanship, which are covered by this H-D Motorcycle Warranty for the duration of the warranty period).
4. Any cosmetic condition existing at the time of retail delivery that has not been documented by the authorised Harley-Davidson selling dealer prior to retail delivery.

5. Defects or damage to the motorcycle caused by alterations outside of Harley-Davidson's factory specifications, including the installation of competition or closed course parts and accessories and the addition of loads and stresses to the motorcycle above those recommended by Harley-Davidson.
6. Damage caused by installation or use of non-Harley-Davidson components, even those installed by an authorised dealership, that cause a Harley-Davidson part to fail. Examples include, but are not limited to performance-enhancing powertrain components or software, exhaust systems, non-approved tyres, lowering kits, handlebars, add-ons connected to the factory electrical system, tow bars, etc.

**Note:** Even though this H-D Motorcycle Warranty does not cover the circumstances set out above, you may still have rights under Australian and New Zealand laws, including the Australian Consumer Law.

### Important: Read Carefully

1. Authorised Harley-Davidson dealers are independently owned and operated and may sell non-Harley-Davidson products. Because of this, HARLEY-DAVIDSON IS NOT RESPONSIBLE FOR THE SAFETY, QUALITY, OR SUITABILITY OF ANY NON-HARLEY-DAVIDSON PART, ACCESSORY OR DESIGN MODIFICATION WHICH MAY BE SOLD AND/OR INSTALLED BY AUTHORISED HARLEY-DAVIDSON DEALERS OR LABOUR CARRIED OUT BY DEALERS.
2. This H-D Motorcycle Warranty is a contract between you and Harley-Davidson. It is separate and apart from any warranty you may receive or purchase from an authorised Harley-Davidson dealer. An authorised Harley-Davidson dealer is not authorised to alter, modify, or in any way change the terms and conditions of this H-D Motorcycle Warranty.

Any warranty work or parts replacement authorised by Harley-Davidson will not preclude Harley-Davidson from later relying on any exclusion where Harley-Davidson later becomes aware that an exclusion applied or the warranty claim did not otherwise comply with the terms of this H-D Motorcycle Warranty.

## Environmental Factors

1. Warranty will cover rust/corrosion and/or pitting on one component, one time only, under appropriate conditions. If a vehicle is exhibiting any of these conditions on more than one component, warranty coverage will be denied.
2. Warranty will cover rust/corrosion and/or pitting on multiple components only if they are the same component (i.e. both mirrors, both rider footboards, etc.)
3. Warranty will not cover rust/corrosion and/or pitting on wheels at any time unless the condition had been properly documented in the DPQA. For warrantable conditions see Cosmetic Quality Guide.
4. Warranty will not cover rust/corrosion and/or pitting as a result of damage from road debris, hazards, neglect, chemical exposure or abuse/misuse of the motorcycle.
5. Warranty will not cover rust/corrosion inside fuel tanks.

The owner is responsible for protecting the motorcycle from any cosmetic concerns that result from use and/or from exposure to the elements.



## NOTES

---



## HARLEY-DAVIDSON JAPAN MOTORCYCLE MANUFACTURER'S LIMITED WARRANTY

### Regarding the manufacturer's warranty

Harley-Davidson Japan (HDJ) imports from Harley-Davidson Main company (USA). Harley-Davidson's motorcycles, which are delivered through Harley-Davidson Japan (HDJ)'s official distribution network, are accompanied by a Manufacturer's warranty that guarantees long-term security.

By filling out the given documents ("S.W.R. Warranty registration Form), the 36-month (regardless of mileage) warranty for the motorcycle's main unit becomes effective from the date of the first registration at the Land Transportation Office.

However, depending on the date of the first registration, the warranty period might be shortened.

Please read the later-mentioned warranty provisions for details.

Receive the S.W.R. Warranty registration form (A registration form confirming the sale and the warranty) from the HDJ's official distribution network store where you made the purchase, promptly fill out the required information, and then hand it in to the HDJ's official distribution network store.

### Warranty Card

This certificate is to verify that you are the owner of a Harley-Davidson® motorcycle and have the right to receive warranty repairs. It contains your name and address, the frame number that will be the individual number of your motorcycle, and the warranty expiration date.

Please store this warranty card carefully as it is absolutely necessary when receiving warranty services in HDJ's official distribution network.

The warranty card is issued after the details of the "S.W.R. Warranty registration form" and the "Warranty transfer certificate" are registered.

Please inform the HDJ's official distribution network store if you need to receive warranty repairs before receiving the warranty card.

### Warranty and Maintenance

The warranty provisions for the motorcycle you have purchased are written in this manual.

Also, please use the information in this paper regarding the warranty and maintenance of the purchased motorcycle.

Please conduct 12-month/24-month inspections as well as periodic inspections for each mileage based on regular

maintenance and the maintenance procedures and rules described in this paper, as this is your duty as an owner.

If you don't receive all assigned maintenance services, the warranty becomes invalid.

## **Regarding the warranty and the owner registration**

Please bring the inspection maintenance record, when you visit the store from the official distribution network for the 12-month/24-month inspection maintenance, the first vehicle inspection on the 36th month, the vehicle inspections every 24 months after that, as well as the designated inspections and maintenance for every mileage.

This will be proof that you have received maintenance services during the warranty period.

When receiving maintenance services for the first inspection and during periodic inspections, the record of inspection maintenance implemented at a HDJ official distribution store will be proof that a proper maintenance was conducted, so please store it carefully.

Please keep the receipts for any other services and maintenance you have received as well.

If the motorcycle is transferred in the future, please transfer all these records together with it.

Please do not use parts or accessories other than the ones authorized by Harley-Davidson.

For details, please visit a HDJ official distribution network store.

The stores from the HDJ official distribution network have separate capital and management from Harley-Davidson, so it is possible for them to sell parts and accessories that the said company has not manufactured or authorized.

The company cannot guarantee in any way the non-Harley-Davidson parts, accessories, or design changes (including the work) that these stores sell or install.

Please do not use non-genuine parts or customized front forks.

This might negatively affect the performance or handling.

## **Do not neglect the inspections and maintenance**

### *NOTE*

*Removing or remodeling of the genuine parts installed at the time of factory shipment might not only negatively affect the performance, but can also lead to fatal accidents or serious injuries. (0001a)*



All the types of inspections described in this paper are the minimum requirements for safe and pleasant use.

If a malfunction occurs as a result of these inspections being neglected or performed inadequately, or if points 1 to 6 in the "≥" are not observed, we cannot provide the warranty repairs.

### **Regarding the first inspection**

The first inspection of the motorcycle you have purchased is the first "Doctor's check" to maintain its excellent condition forever.

Please ask an official HDJ distribution network store for it after approximately 1 month of running.

Please undergo the first inspection about 1 month after the new vehicle registration.

However, even if 1 month has not passed, if the mileage has reached 800 km (500 mi), please undergo the first inspection at that time.

Even if the mileage has not reached 800 km (500 mi), please undergo the first inspection after 1 month has passed.

If you cannot undergo the first inspection, not only will the new vehicle warranty become invalid, but the function/performance of the motorcycle may be damaged and its durability may be seriously affected.

### **Always keep your Harley genuine**

For the sake of your Harley-Davidson and the warranty, always instruct the store to use genuine replacements parts.

Please always keep your Harley-Davidson genuine.

Our company's strict design and testing support the performance and the warranty.

Use genuine parts without exception and keep your Harley-Davidson genuine.

If you install parts for racing or competitions to try to improve the performance, the new vehicle warranty will become invalid.

For details, please ask in a HDJ official distribution network store.

If you use too many electricity-powered accessories, the charging system of the motorcycle might overload.

If you use too many accessories simultaneously and their electricity consumption surpasses the charging ability of the motorcycle, the battery might be completely discharged, which might lead to damage in the electric power system of the motorcycle.

## Regarding address or name changes

### NOTE

*Please consult with a HDJ official distribution network store regarding the electricity consumption of additional accessories, or the accompanying necessary changes in the electric system. (00211c)*

If there has been a change in the recorded details, such as address or name, please contact a HDJ official distribution network store.

If there is a change in the name of the holder accompanying the warranty transfer, you will have to undergo an inspection corresponding to the 24-month inspection determined by Harley-Davidson.

For details, please contact a HDJ official distribution network store.

## Harley-Davidson Motorcycle Warranty Provisions

### 1. Warranty content

HDJ guarantees implementation of free repair or replacement of malfunctions in production or material quality that have occurred under normal usage conditions of the purchased vehicle for new purchasers or subsequent purchasers of a 2020 model motorcycle according to the following provisions.

244 Limited Motorcycle Warranty (Japan)

Furthermore, Harley-Davidson will gain possession of the replaced parts.

### 2. Warranty period and application after resale

The period when you can receive warranty repairs is as described below.

- The period of 36 months since the first recorded month (Record date) in the automobile inspection certificate record. The mileage during this period is irrelevant.

However, if the first record was made after August 1, 2023, the warranty period is until July 31, 2026.

- The motorcycle warranty that HDJ offers is also applied in cases where the vehicle is being resold during the warranty period. However, if the holder of the automobile inspection certificate is changed, you will need to process the warranty transfer in HDJ's official distribution network.

Also, during the proceedings, you will have to undergo an inspection corresponding to the 24-month inspection determined by Harley-Davidson.

Furthermore, this work is different from warranty repair work, so the cost will be paid separately.

- The warranty comes into effect after the procedures from 3. "Warranty Enactment" described below.

### 3. Warranty Enactment

This warranty comes into effect going back to the new record date of the automobile inspection certificate when the necessary information in the "S.W.R. Warranty registration form", issued by HDJ, is filled in and signed at HDJ's official distribution network, signed by the purchaser, and then accepted by HDJ.

#### 4. Receiving warranty repairs

When you are receiving warranty repairs, it is your responsibility to bring the vehicle to HDJ's official distribution network store during regular working hours (the transportation cost, etc. is covered by the client), and present the warranty card, the automobile inspection certificate, and the documents proving the implementation of the periodic inspections. Afterwards, you can order the warranty repair.

The warranty application propriety will be determined after the vehicle has been inspected at HDJ's official distribution network store.

Furthermore, we are trying to implement the warranty repairs as soon as possible, but depending on the service garage and inventory state of the store, there might be cases when the repair cannot be carried out immediately.

#### 5. Matters to be observed by the client

In order for the warranty to be valid, you need to observe the following:

#### NOTE

*If the holder of the automobile inspection certificate changes, a warranty card for the new owner or user is required.*

- Keep the warranty card.
- Appropriate use according to the handling methods described in the Owner's Manual issued by HDJ.
- Implement the regular inspections determined in Section 4, Article 47-2 of the Road Transport Vehicle Law.
- Implement the legal periodic inspections determined in Section 4, Article 48 of the Road Transport Vehicle Law as well as the periodic inspection required by HDJ and described in the Owner's Manual.
- Replace the regular replacement parts according to the instructions in "Periodic inspection".
- Keep documents proving the implementation of periodic inspections.

#### 6. Items that cannot be guaranteed

(1) A warranty repair cannot be offered if a malfunction is determined to be caused by one of the following:

- Inadequate or improper implementation of maintenance/services.

- Remodeling that has not been approved by the law or by HDJ.
- Vehicles with performed remodeling that does not conform to the safety standards, or cases where because of such remodeling the vehicle condition cannot be verified by a test drive at HDJ's official distribution network.
- Cases where an exhaust system other than the Harley-Davidson muffler installed at the time of factory shipment is installed, and conformance to the safety standards cannot be verified by HDJ's official distribution network.
- Using parts different from the genuine Harley-Davidson parts and oils or gasoline other than the ones designated by HDJ.
- Using off-road or racing performance parts.
- Using parts developed/manufactured and sold by HDJ's official distribution network.
- Usage that is different from the handling methods described in the prints explaining the operation procedures, such as the Owner's Manual. Also, usage that passes the limitation of the methods indicated by HDJ. (Maximum loading capacity, riding capacity, speed, engine rotation speed, etc.)
- Usage at competitions, including races, abusing the original purpose of the motorcycle, as well as usage at places besides roads where vehicles do not usually run.
- Malfunctions caused by accidents, such as crashes or over-turning.
- Malfunctions caused by natural disasters, such as earthquakes, typhoons and floods, or by fire.
- Malfunctions caused by external factors, such as soot and smoke, chemicals, bird feces, salt damage, etc.
- Malfunctions caused by aging, such as wear and tear from usage or rust.
- External malfunctions caused by inappropriate usage, lack of appropriate maintenance, or environmental conditions (excluding malfunctions caused by the production or material quality, for which this warranty's provisions apply).
- Malfunctions caused by inappropriate storage.
- Phenomena, such as brake noises, resonance noises from the engine or the frame that generally do not affect the function, but are simply sensory ones.
- Formation of condensation or dirt due to natural phenomena or environmental conditions.
- Secondary malfunctions caused by continued usage of the vehicle even after an abnormality has been discovered.

- Malfunctions that occurred due to not following the "Matters to be observed by the client " mentioned above in section 5.

(2) The expenses for the following items are not included in the warranty repair.

- Consumables and oils.
- Defects in the exterior parts and rust (excluding the items requested from and approved by HDJ by HDJ's official distribution network before registration).
- Parts other than the Harley-Davidson genuine parts.
- Periodic inspection maintenance appointed by the law and HDJ, as well as all other inspections, tuning, and cleaning.
- Inspections or maintenance which accompany the vehicle inspection test as determined by the law.
- Repairs outside the HDJ's official distribution network.
- Incidental or consequent losses, such as telephone bills, collecting expenses, travel expenses, compensation for absence from work, losses derived from the inability to use the said vehicle, inconvenience, or business losses.

#### 7. Other

This warranty guarantees free repairs based on the period and conditions stated in this document. Repairs for

malfunctions which occur after the warranty period expiration will require payment.

However that excludes cases of recall.

## **Warranty provisions for genuine parts & accessories installed in a new Harley-Davidson vehicle**

### 1. Warranty content

HDJ guarantees that it will implement free repair or replacement of malfunctions in genuine parts & accessories bought together with a new 2020 model motorcycle and properly installed in HDJ's official distribution network that were caused by the production or material quality and occurred under normal usage conditions for new purchasers or subsequent purchasers according to the following provisions.

The subjects of the warranty are restricted to the items indicated with "3-year warranty" in the 2020 and later editions of the "Genuine parts and accessories catalog" and "New product news".

Parts & accessories not conforming to the safety standards, or ones that do, but are installed after the delivery of the new vehicle are not subjects of the warranty.

Furthermore, HDJ will gain possession of the replaced parts.

## 2. Warranty period and transfer

The period when you can receive warranty repairs is as described below.

- The period of 36 months since the first recorded month (Record date) in the automobile inspection certificate record of the motorcycle. The mileage during this period is irrelevant.

However, if the first record was made after August 1, 2023, the warranty period will be in effect until July 31, 2026.

- The warranty of the genuine parts & accessories installed in the new vehicle that HDJ offers is applied also in cases of the vehicle being resold during the warranty period. However, when the holder of the automobile inspection certificate is changed, you will need to process the warranty transfer in HDJ's official distribution network.

Also, during the procedure you will have to undergo an inspection corresponding to the 24-month inspection determined by Harley-Davidson.

Furthermore, this work is different from warranty repair work, so the cost will be paid separately.

- The warranty comes into effect after the procedures from 3. "Warranty Enactment" described below.

## 3. Warranty Enactment

### 248 Limited Motorcycle Warranty (Japan)

Conforms to Harley-Davidson Motorcycle Warranty Provisions.

As for the genuine parts & accessories that couldn't be installed because they were out of stock when the new vehicle was delivered, the warranty will become valid when they are later properly installed at HDJ's official distribution network.

However, the warranty period becomes identical to that of the vehicle.

## 4. Receiving warranty repairs

When you are receiving warranty repairs, it is your responsibility to bring the vehicle to HDJ's official distribution network store during regular working hours (the transportation cost, etc. is covered by the client), and present the warranty card, the automobile inspection certificate, and the documents proving the implementation of the periodic inspections. Afterwards, you can order the warranty repair.

Furthermore, depending on the service garage and inventory state of the store, there might be cases when the repair cannot be carried out immediately.

## 5. Matters to be observed by the client

Conforms to Harley-Davidson Motorcycle Warranty Provisions.

## 6. Items that cannot be guaranteed

(1) Warranty cannot be offered if a malfunction is determined to be caused by one of the following:

- Use or installation conditions not approved by the law or by HDJ.
  - Use or installation for models or model years other than the ones HDJ determines as compatible.
  - Malfunctions derived from time-related deterioration or defects in the exterior, rust or scratches from use/running.
  - Usage at competitions, including races, abusing the original purpose of the motorcycle, as well as usage at places besides roads where vehicles do not usually run.
  - Malfunctions caused by accidents, such as crashes or over-turning.
  - Malfunctions caused by natural disasters, such as earthquakes, typhoons and floods, or by fire.
  - Malfunctions caused by external factors, such as soot and smoke, chemicals, bird feces, salt damage, etc.
  - Phenomena, such as brake noises, resonance noises from the engine or the frame that generally do not affect the function, but are simply sensory ones.
  - Formation of condensation or dirt due to natural phenomena or environmental conditions.
  - Secondary malfunctions caused by continued usage of the vehicle even after an abnormality has been discovered.
  - Malfunctions that occur due to not following the "Matters to be observed by the client" that conform to Harley-Davidson Motorcycle Warranty Provisions.
  - Malfunctions caused by installation or removal carried out outside the HDJ's official distribution network.
  - Malfunctions caused by not implementing the periodic inspection maintenance appointed by the law and HDJ.
- (2) The following parts cannot be considered subject of the warranty.
- Parts that do not conform to the safety standards appointed in the Road Transport Vehicle Law
  - Screaming Eagle performance parts
  - Maintenance supplies (oils, chemicals, tools, motorcycle covers, plugs, filters, belts, battery chargers, etc.)
  - Consumables (valves, brake pads, gaskets)
  - Parts that are not subject to the warranty for genuine parts & accessories installed in a new Harley-Davidson vehicle.
  - Parts purchased outside of the HDJ's official distribution network
- (3) The following parts conform to warranty provisions determined separately from the 3-year warranty for new vehicle installation.

For details, please contact a HDJ official distribution network store.

- Battery
- Tires
- Sound system
- Speedometer, etc.

(4) The expenses for the following things cannot be considered subject of the warranty.

- Periodic inspection maintenance appointed by the law and HDJ, as well as all other inspections, tuning, and cleaning.
- Expenses for installation or removal carried out outside the HDJ's official distribution network.


- Incidental or consequent losses, such as telephone bills, collecting expenses, travel expenses, compensation for absence from work, losses derived from the inability to use the said vehicle, inconvenience, or business losses.

#### 7. Other

This warranty guarantees free repairs based on the period and conditions stated in this document. Repairs for malfunctions which occur after the warranty period expiration will require payment.

However that excludes cases of recall.

### Notes

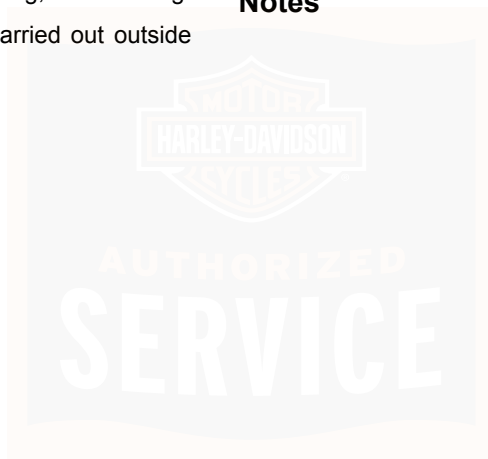



## 2021 HARLEY-DAVIDSON MOTORCYCLE NOISE CONTROL SYSTEM LIMITED WARRANTY

The following limited warranty applies to the noise control system, is in addition to the MOTORCYCLE LIMITED WARRANTY and EMISSION CONTROL SYSTEM LIMITED WARRANTY, and applies only to Harley-Davidson motorcycles sold in the U.S.

Harley-Davidson warrants to the first owner and each subsequent owner that this motorcycle is designed and built so as to conform at the time of sale with applicable regulations of the U.S. Environmental Protection Agency (as tested following F-76 Drive-By test procedure) and that it is free from defects in factory materials and workmanship which can cause this motorcycle not to meet U.S. Environmental Protection Agency Standards within one (1) year from initial retail purchase and delivery from an authorized Harley-Davidson dealer or one (1) year from the [second] anniversary of the last day of the model year of the motorcycle, or 6,000 km (3730 mi) whichever occurs first. Any unexpired portion of this limited warranty will be transferred to subsequent owners, upon the resale of the motorcycle during the limited warranty period. If the motorcycle was used as a demonstrator or company motorcycle, then the limited warranty period may have started and/or expired prior to the initial retail sale. See an authorized Harley-Davidson dealer for details.

THERE IS NO OTHER EXPRESS WARRANTY (OTHER THAN THE SEPARATE MOTORCYCLE AND EMISSIONS LIMITED WARRANTIES) ON THE MOTORCYCLE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

The limited warranty period shall begin on the date the motorcycle is delivered to the first retail purchaser or, if the motorcycle is placed in service as a demonstrator or company motorcycle prior to sale at retail, on the date it is first placed in service.

### THE FOLLOWING ITEMS ARE NOT COVERED BY THE NOISE CONTROL SYSTEM LIMITED WARRANTY

1. Failures which arise as a result of misuse, alteration, or non-performance of maintenance as specified in the Owner's Manual.
2. Replacing, removing, or modifying any portion of the NOISE CONTROL SYSTEM (consisting of the exhaust system and air intake/cleaner assembly) with parts not certified to be noise legal for street use.
3. Any motorcycle on which the odometer mileage has been changed so that the mileage cannot be determined.

4. TO THE FULLEST EXTENT ALLOWED BY LAW, NEITHER HARLEY-DAVIDSON NOR ITS AUTHORIZED DEALERS SHALL BE LIABLE FOR LOSS OF TIME, INCONVENIENCE, LOSS OF MOTORCYCLE USE, COMMERCIAL LOSS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.


Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### **Other Rights**

This limited warranty gives you specific legal rights, and you may have other rights which vary from state to state.

### **Recommendations for Required Maintenance**

It is recommended that any noise system maintenance be performed by an authorized Harley-Davidson dealer using genuine Harley-Davidson replacement parts. The maintenance, replacement or repair of the noise control system may be performed by any other qualified service outlet or individual. Non-genuine Harley-Davidson parts may be used only if such parts are certified to comply with U.S. Environmental Protection Agency Standards.

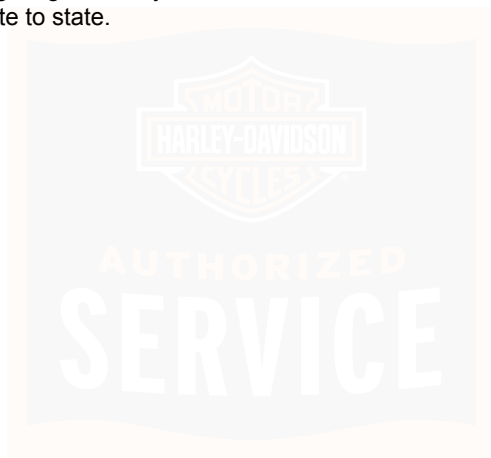

## 2021 HARLEY-DAVIDSON EMISSION CONTROL SYSTEM LIMITED WARRANTY

### USA Owners 49 State Limited Emissions Warranty

The following limited warranty applies to the emission control system, is in addition to the MOTORCYCLE LIMITED WARRANTY and NOISE CONTROL SYSTEM LIMITED WARRANTY, and applies only to Harley-Davidson motorcycles certified for sale, registered, and normally operated in the U.S. For California models, refer to the CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT for additional warranty provisions.

Harley-Davidson Motor Company warrants to the first owner and each subsequent owner that this vehicle is designed, built, and equipped so as to conform at the time of sale with applicable regulations under section 7521 of Title 42 of the United States Code, and that it is free from defects in materials and workmanship which would cause this motorcycle to fail to conform with applicable emissions regulations for five (5) years from the initial retail purchase and delivery from an authorized Harley-Davidson dealer (or five (5) years from the date the motorcycle is first placed in service, if it is first placed in service as a "demonstrator" or "company" motorcycle prior to delivery), or 30,000 km (18641 mi), whichever occurs first. Any unexpired portion of this limited warranty will be

transferred to subsequent owners, upon the resale of the motorcycle during the warranty period.

THERE IS NO OTHER EXPRESS WARRANTY (OTHER THAN THE SEPARATE MOTORCYCLE AND NOISE LIMITED WARRANTIES) ON THE MOTORCYCLE. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

The limited warranty period shall begin on the date the motorcycle is delivered to the first retail purchaser or, if the motorcycle is placed in service as a demonstrator or company motorcycle prior to sale at retail, on the date it is first placed in service.

#### THE FOLLOWING ITEMS ARE NOT COVERED BY THE EMISSION CONTROL SYSTEM LIMITED WARRANTY

1. Failures which arise as a result of misuse, tampering, alterations, accident, acts of nature, or improper or inadequate maintenance as specified in the Owner's Manual.
2. Required maintenance services (as specified in the Owner's Manual) and the replacement of parts (such as spark plugs, fuel and oil filters, etc.) used in required maintenance.

3. Any motorcycle on which the odometer mileage has been changed so that the mileage cannot be determined.
4. TO THE FULLEST EXTENT ALLOWED BY LAW, NEITHER HARLEY-DAVIDSON NOR ITS AUTHORIZED DEALERS SHALL BE LIABLE FOR LOSS OF TIME, INCONVENIENCE, TOWING OF THE VEHICLE, LOSS OF MOTORCYCLE USE, COMMERCIAL LOSS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### **Items Covered by this Emission Warranty**

The emission control system warranty may cover the following parts if the defect is deemed to be emissions-related:

- Air cleaner assembly
- Cam shaft
- Spark plug
- Ignition coil
- Ignition wires
- Vapor valve
- Catalytic converter

- Muffler
- Crankcase breather
- MAP sensor
- TMAP sensor
- Intake air temperature sensor
- Throttle position sensor
- Fuel injectors
- Induction module or throttle body
- Engine temperature sensor
- Electronic control unit
- Oxygen sensors
- Fuel pump module
- Engine Control Module

### **Fuel Tank** (non-cosmetic failures only)

- Leaks
- Fuel vapor separator
- Fuel cap

If used on the above: hoses, clamps, fittings, tubing, sealing gaskets and mounting hardware.

Detailed instructions for proper maintenance and use of this motorcycle, including the time and/or mileage intervals at which such maintenance is to be performed, may be found in this Owner's Manual under SERVICE INTERVALS AND RECORDS > SERVICE RECORDS (Page 265).

## Other Rights

This limited warranty gives you specific legal rights, and you may have other rights which vary from state to state.

## Recommendations for Required Maintenance

It is recommended that any emission system maintenance be performed by an authorized Harley-Davidson dealer using genuine Harley-Davidson replacement parts. However the maintenance, replacement or repair of the emissions control system may be performed by any other qualified service outlet or individual. Non-genuine Harley-Davidson parts may be used only if such parts are certified to comply with U.S. Environmental Protection Agency Standards.



## NOTES

---



## **CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT**

### **USA Owners California Limited Emissions Warranty**

#### **Your Warranty Rights and Obligations**

The California Air Resources Board and Harley-Davidson Motor Company are pleased to explain the emission control system warranty on your new motorcycle. In California, new motor vehicles must be designed, built and equipped to meet the State's stringent anti-smog standards. Harley-Davidson Motor Company warrants the emission control system on your motorcycle for the periods of time listed below, provided there has been no abuse, unapproved modification, neglect or improper maintenance of your motorcycle.

Your emission control system may include parts such as the carburetor or fuel-injection system, the ignition system, catalytic converter, and engine computer. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, within the warranty period noted below, Harley-Davidson will repair your motorcycle at no cost to you including diagnosis, parts and labor.

#### **Manufacturer's Warranty Coverage**

For a period of use of five years or 30,000 km (18641 mi), whichever first occurs, beginning on the date the motorcycle is delivered to the ultimate purchaser or, if the motorcycle is placed in service as a demonstrator or company motorcycle prior to sale at retail, the date it is first placed in service.

If any emission-related part on your motorcycle is defective, the part will be repaired or replaced by Harley-Davidson Motor Company. This is your emission control system DEFECTS WARRANTY.

#### **Owner's Warranty Responsibilities**

As the motorcycle owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. Harley-Davidson recommends that you retain all receipts covering maintenance on your motorcycle, but Harley-Davidson cannot deny emissions warranty coverage solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance, unless the condition is caused by your lack of maintenance or improper maintenance.

You are responsible for presenting your motorcycle to an authorized Harley-Davidson dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

As the motorcycle owner, you should also be aware that Harley-Davidson may deny you warranty coverage if your motorcycle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact Harley-Davidson Customer Service Department at 1-800-258-2464 (U.S. only) or 1-414-343-4056, or the California Air Resources Board at 9528 Telstar Ave., El Monte, California 91731.

## **Additional Warranty Terms**

The emission control system of each new Harley-Davidson motorcycle was designed, built and tested using only Genuine Harley-Davidson parts and with these parts the motorcycle is certified as being in conformity with California emission control regulations.

We recommend that you take your motorcycle to an authorized Harley-Davidson dealer for repairs under this warranty. The dealer has factory-trained mechanics and genuine Harley-Davidson parts. However, in the case of an "emergency" (as defined below), you may have repairs performed at any available service establishment or by the owner, using any replacement part. An authorized Harley-Davidson dealer not being reasonably available, or a part not being available within a reasonable time period (not to exceed 30 days from the time the motorcycle is initially presented to a Harley-Davidson dealer for repair) constitutes

an "emergency." Harley-Davidson will reimburse the owner for such repairs, including diagnosis, only if it is established that the repairs are covered under this emission warranty. Harley-Davidson's parts reimbursement, however, will not exceed our suggested retail price for all warranted parts replaced and our labor reimbursement will be limited to our recommended time allowances for emission system repairs at the geographically appropriate hourly labor rate.

To obtain reimbursement from Harley-Davidson for such emergency repairs, you must keep all failed parts and original receipts, so you can present them to an authorized Harley-Davidson dealer for inspection. Harley-Davidson recommends that you bring your motorcycle to an authorized dealer for inspection to ensure that the emergency repairs were done properly.

**Remember:** Use of non-Harley-Davidson replacement parts may impair the effectiveness of the emission control system or otherwise damage your motorcycle. If other than genuine Harley-Davidson parts are used for maintenance, replacement or repair of components affecting emission control, you should obtain written assurances that such non-Harley-Davidson parts are warranted by their manufacturer to be equal in quality to Genuine Harley-Davidson parts in both performance and durability. The use of non-Harley-Davidson replacement parts does not invalidate the existing warranty, if any, on other Harley-Davidson components unless the non-Harley-Davidson parts cause damage to warranted parts or result in the creation



of an emissions non-compliant motorcycle. However, HARLEY-DAVIDSON ASSUMES NO LIABILITY UNDER THIS WARRANTY WITH RESPECT TO ANY PARTS WHICH ARE NOT GENUINE HARLEY-DAVIDSON PARTS, unless Harley-Davidson parts cause damage to non-genuine Harley-Davidson parts.

### **What Is Covered by this Emission Warranty**

The emission control system warranty covers the following "warranted parts" only:

- Air cleaner assembly
- Cam shaft
- Spark plug
- Ignition coil
- Ignition wires
- Vapor valve
- Catalytic converter
- Muffler
- Crankcase breather
- MAP sensor
- TMAP sensor
- Intake air temperature sensor

- Throttle position sensor
- Fuel injectors
- Induction module or throttle body
- Engine temperature sensor
- Electronic control unit
- Oxygen sensors
- Carbon canister
- Purge control valve
- Fuel pump module
- Engine Control Module

#### **Fuel Tank** (non-cosmetic failures only)

- Leaks
- Fuel vapor separator
- Fuel cap

If used on the above: hoses, clamps, fittings, tubing, sealing gaskets and mounting hardware.

### **What Is Not Covered by this Emission Warranty**

The emission control system warranty does not cover:

Malfunctions in any "warranted parts" caused by any of the following: abuse, misuse, unapproved modification or alteration, tampering, disconnection, or improper or inadequate maintenance. The warranty also does not cover replacement of listed parts in the event that the vehicle has been rendered emissions non-compliant in the state of California through actions noted above .

Damage resulting from accident, acts of nature or other events beyond the control of Harley-Davidson.


The repair or replacement of "warranted parts" which are scheduled for replacement prior to 30,000 km (18641 mi), once these parts have been replaced at the first replacement interval as part of required maintenance services.

TO THE FULLEST EXTENT ALLOWED BY LAW, NEITHER HARLEY-DAVIDSON NOR ITS AUTHORIZED DEALERS SHALL BE LIABLE FOR LOSS OF TIME, INCONVENIENCE, TOWING OF THE VEHICLE, LOSS OF MOTORCYCLE USE, COMMERCIAL LOSS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES

Repairs and services performed by anyone other than an authorized Harley-Davidson Dealer (except in case of emergency as defined above).

Loss of time, inconvenience, loss of use of the motorcycle, towing of the vehicle, or commercial loss and/or consequential damages.

Repairs on any motorcycle of which odometer mileage has been changed so that mileage cannot be readily determined.

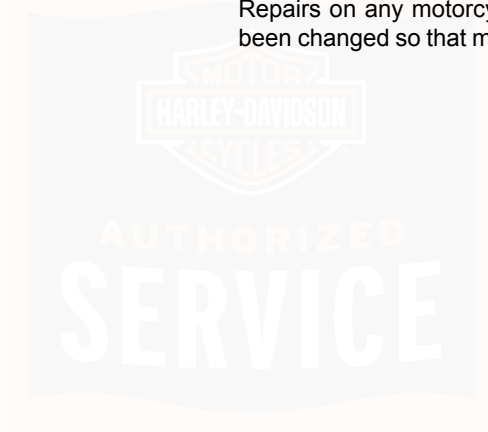

## 2021 LIMITED RADIO WARRANTY

Harley-Davidson warrants that your Harley-Davidson radio will be free from factory defects in factory materials and workmanship, under normal use and service, for a period of twenty-four (24) months starting from the earlier of (a) the date of initial retail purchase of the motorcycle on which the radio is installed, or (b) the third anniversary of the last day of the model year of the motorcycle on which the radio is installed. Any unexpired portion of this limited warranty will be transferred to subsequent owner(s), upon the resale of the motorcycle during the limited warranty period. If the motorcycle was used as a demonstrator or company motorcycle, then the limited warranty period may have started and/or expired prior to the initial retail sale. See an authorized Harley-Davidson Dealer for details.

This limited warranty does not cover defects or damage due to abuse, misuse or improper installation, or any radio on a motorcycle which has been registered with Harley-Davidson as a collector's vehicle. The limited warranty does not cover syncing issues or an improper functioning radio caused by an incompatible phone or other media storage device (MP3, jump drive, etc.). See an authorized Harley-Davidson dealer for details. Use of aftermarket parts may void all or parts of your limited warranty.

This limited warranty does not cover repairs under certain conditions. Examples include:

- Loss of personal media, software or data.
- Failure to provide proper installation environment.
- Damage caused by abnormal use, unauthorized modification, computer viruses, or installation of unauthorized software, peripherals and attachments; unauthorized, unapproved or incompatible devices or upgrades; or malfunction of a mobile phone or digital media device, including inadequate signal reception by the external antenna, viruses or other software problems.

To obtain warranty service, return your motorcycle with sound system intact, at your expense, within the limited warranty period to an authorized Harley-Davidson dealer. Authorized Harley-Davidson dealers should be able to provide warranty service during normal business hours depending upon the workload of the authorized dealer's service department and the availability of necessary parts.

The remedy for breach of this warranty is expressly limited to the repair or replacement (**which may include a refurbished replacement radio**), without charge for parts and labor, of any part that proves to be defective, AND DOES NOT EXTEND TO LIABILITY FOR CONSEQUENTIAL DAMAGES, COSTS OR EXPENSES, INCLUDING LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, OR LOSS OF USE OF THE VEHICLE, RESULTING FROM ANY PART THAT PROVES TO BE DEFECTIVE.

THERE IS NO OTHER EXPRESS WARRANTY ON THE RADIO. ANY IMPLIED WARRANTY RELATING TO THIS RADIO, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS EXPRESSLY LIMITED TO THE DURATION OF THIS LIMITED WARRANTY.

TO THE FULLEST EXTENT ALLOWED BY LAW, HARLEY-DAVIDSON AND ITS AUTHORIZED DEALERS SHALL NOT BE LIABLE FOR LOSS OF TIME, INCONVENIENCE, LOSS OF MOTORCYCLE USE,

COMMERCIAL LOSS OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

### **Other Rights**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



## 2021 AUSTRALIA/NEW ZEALAND LIMITED RADIO WARRANTY

### Your Consumer Rights

The benefits given to you under this H-D Radio Warranty are additional to, and do not detract from, other rights and remedies that you may have in respect of the radio or its installation under Australian and New Zealand laws, including consumer protection laws.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand, our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

### Warranty

This warranty is provided by Harley-Davidson Motor Company P.O. Box 653, Milwaukee, Wisconsin 53201, U.S.A, phone: +1 (414 343-4056) ("Harley-Davidson").

Harley-Davidson warrants that an authorised Harley-Davidson dealer will repair or replace your Harley-Davidson radio if it is found to be defective in factory materials or workmanship, under normal use and service, during the warranty period set out below.

Such repair or replacement will be Harley-Davidson's sole obligation and your sole remedy under this H-D Radio Warranty, however you may have other rights under Australian and New Zealand laws, as described above.

**Note** that goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair goods.

### Warranty Period

The warranty period is a period of twenty-four (24) months starting from the earlier of:

- (a) the date of delivery of the motorcycle on which the radio is installed by an authorised Harley-Davidson dealer to the first retail purchaser; or
- (b) the third anniversary of the last day of the model year of the motorcycle on which the radio is installed (if not sold to a retail purchaser before that date).

Any unexpired portion of this H-D Radio Warranty will be transferred to subsequent owners, upon the resale of the motorcycle during the limited warranty period. See the

OWNER CONTACT INFORMATION section of this Owner's Manual for information regarding notification of ownership changes.

**Note:** If the motorcycle was used as a demonstrator or company motorcycle, then the warranty period may have started and/or expired prior to the initial retail sale. See an authorised Harley-Davidson dealer for details.

## Exclusions

This H-D Radio Warranty does not cover defects or damage due to abuse, misuse or improper installation, or any radio on a motorcycle which has been registered with Harley-Davidson as a collector's vehicle. The limited warranty

does not cover syncing issues or an improper functioning radio caused by an incompatible phone or other media storage device (MP3, jump drive, etc.). See an authorised Harley-Davidson dealer for details.

## Obtaining Warranty Service

To obtain warranty service, return your motorcycle with sound system intact, at your expense, within the warranty period to an authorised Harley-Davidson dealer.

Harley-Davidson's network of authorised dealers is large, and continues to expand. To find current contact information for your nearest authorised dealer, visit our website at [www.h-d.com.au](http://www.h-d.com.au).



## SERVICE RECORDS

### Regular Service Intervals

Service must be performed at specified intervals to keep your Harley-Davidson motorcycle operating at peak performance. Refer to Service Intervals for table.

Refer to Service Actions for service action definitions used in the service interval table.

#### NOTE

- The use of parts and service procedures other than Harley-Davidson approved parts and service procedures may void the limited warranty. Any alterations to the emission system components, such as the intake and exhaust system, may be in violation of motor vehicle laws.

- Some countries, such as Brazil, may require all regular maintenance or additional annual (or semi-annual) regular maintenance steps to be performed to keep your limited warranty in effect and/or comply with vehicle regulations. Check with your authorized Harley-Davidson dealer as well as the motorcycle regulations in your country.
- Whenever a vehicle is in for maintenance:
  - always check for and complete recalls and open product programs.
  - always verify that the latest calibration is installed.
- After completing the final service interval, repeat the service schedule starting at the 8000 km (5000 mi) interval.

### Service Intervals

Table 43. Regular Service Intervals: Harley-Davidson Trike Models

COMPONENT	ACTION	1600 KM 1000 MI	8000 KM 5000 MI	16000 KM 10000 MI	24000 KM 15000 MI	32000 KM 20000 MI	40000 KM 25000 MI	48000 KM 30000 MI	56000 KM 35000 MI	64000 KM 40000 MI	72000 KM 45000 MI	80000 KM 50000 MI	NOTES
Service Intervals													
Electrical equipment and switches	Inspect	x	x	x	x	x	x	x	x	x	x	x	
Front tire pressure and tread	Check	x	x	x	x	x	x	x	x	x	x	x	1
Front brake fluid level	Inspect	x	x	x	x	x	x	x	x	x	x	x	6

Table 43. Regular Service Intervals: Harley-Davidson Trike Models

COMPONENT	ACTION	1600 KM 1000 MI	8000 KM 5000 MI	16000 KM 10000 MI	24000 KM 15000 MI	32000 KM 20000 MI	40000 KM 25000 MI	48000 KM 30000 MI	56000 KM 35000 MI	64000 KM 40000 MI	72000 KM 45000 MI	80000 KM 50000 MI	NOTES
Clutch cable	Lubricate	x	x	x	x	x	x	x	x	x	x	x	9
Clutch cable	Adjust	x	x	x	x	x	x	x	x	x	x	x	2
DOT4 front brake fluid moisture content	Check	x	x	x	x	x	x	x	x	x	x	x	1, 2
Hand control switch housing screw torque	Tighten	x		x		x		x		x		x	1, 2, 4
Clutch lever handlebar clamp screw torque	Tighten	x		x		x		x		x		x	1, 2, 4
Front brake handlebar clamp screw torque	Tighten	x		x		x		x		x		x	1, 2, 4
Steering head bearings	Lubricate						x					x	2
Steering dampener	Check	x	x	x	x	x	x	x	x	x	x	x	8
Air cleaner filter	Inspect	x	x	x	x	x	x	x	x	x	x	x	3
Engine oil and filter	Replace	x	x	x	x	x	x	x	x	x	x	x	1, 3
Oil pan fastener torque	Tighten	x											4
Engine coolant	Check	x	x	x	x	x	x	x	x	x	x	x	10
Engine coolant	Replace										x		2
Radiators or oil cooler	Clean	x	x	x	x	x	x	x	x	x	x	x	
Primary chaincase lubricant	Replace	x		x		x		x		x		x	3
Transmission lubricant	Replace	x				x				x			3
Oil and brake lines	Inspect	x	x	x	x	x	x	x	x	x	x	x	1, 2, 5
Fuel lines and fittings	Inspect	x	x	x	x	x	x	x	x	x	x	x	1, 2, 5
Rear brake fluid level	Inspect	x	x	x	x	x	x	x	x	x	x	x	6



Table 43. Regular Service Intervals: Harley-Davidson Trike Models

COMPONENT	ACTION	1600 KM 1000 MI	8000 KM 5000 MI	16000 KM 10000 MI	24000 KM 15000 MI	32000 KM 20000 MI	40000 KM 25000 MI	48000 KM 30000 MI	56000 KM 35000 MI	64000 KM 40000 MI	72000 KM 45000 MI	80000 KM 50000 MI	NOTES
DOT4 rear brake fluid moisture content	Check	x	x	x	x	x	x	x	x	x	x	x	1, 2
Brake system	Replace	..... Flush brake system and replace DOT 4 hydraulic brake fluid every two years or sooner if moisture content is 3 percent or greater. ....											2
Brake pads and discs	Inspect	x	x	x	x	x	x	x	x	x	x	x	
Brake and clutch controls	Lubricate	x	x	x	x	x	x	x	x	x	x	x	2, 9
Parking brake	Adjust	x	x	x	x	x	x	x	x	x	x	x	2
Rear tire pressure and tread	Check	x	x	x	x	x	x	x	x	x	x	x	1
Drive belt and sprockets	Inspect	x	x	x	x	x	x	x	x	x	x	x	2
Drive belt	Adjust	x	x	x	x	x	x	x	x	x	x	x	2
Rear sprocket isolators	Inspect					x				x			2
Rear lug nut	Tighten	x		x		x		x		x		x	1, 2, 4, 7
Rear fork pivot shaft nut	Tighten	x		x		x		x		x		x	1, 2, 4
Exhaust system, fasteners and shields	Inspect	x	x	x	x	x	x	x	x	x	x	x	1, 3
12 volt battery	Check	..... Check battery, terminal torque and clean connections annually. Lubricate terminals with ELECTRICAL CONTACT LUBRICANT. ....											1
Spark plugs	Replace	..... Replace spark plugs every two years or every 30,000 mi (48,000 km), whichever comes first. ....											
Fuel door hinge and latch	Lubricate	x	x	x	x	x	x	x	x	x	x	x	9
Trunk lock and latch	Lubricate	x	x	x	x	x	x	x	x	x	x	x	9
Front forks	Rebuild											x	2
Fuel filter	Replace	..... Replace fuel filter element every 100,000 mi (161,000 km). ....											2, 3

**Table 43. Regular Service Intervals: Harley-Davidson Trike Models**

COMPONENT	ACTION	1600 KM 1000 MI	8000 KM 5000 MI	16000 KM 10000 MI	24000 KM 15000 MI	32000 KM 20000 MI	40000 KM 25000 MI	48000 KM 30000 MI	56000 KM 35000 MI	64000 KM 40000 MI	72000 KM 45000 MI	80000 KM 50000 MI	NOTES
Reverse operation	Road Test	x	x	x	x	x	x	x	x	x	x	x	
Component and system functions	Road Test	x	x	x	x	x	x	x	x	x	x	x	
<b>NOTES</b>													
1. Perform annually or at specified intervals, whichever comes first. 2. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 3. Perform maintenance more frequently in severe riding conditions. This includes extreme temperatures, dusty environments, mountainous or rough roads, long storage conditions, short runs, heavy stop/go traffic or poor fuel quality. 4. For torque instructions, see Shop Practices in the service manual. 5. Check for leaks, contact or abrasion. 6. Brake fluid level drops as brake pads wear. 7. Always check lug nut torque within 500-1,000 mi (800-1,600 km) after wheel installation. 8. Check for leaks, smooth damper action and mounting fastener torque. 9. Use HARLEY LUBE. 10. Check coolant level, freeze point and inspect for leaks.													

## Service Actions

**Table 44. Service Action Definitions**

ACTION	DEFINITION
Inspect	Carefully examine component for excess wear, abnormality, contact, or leaks.
Check	Verify the component is within the owner's manual or service manual service limits. Adjust or repair as necessary.

**Table 44. Service Action Definitions**

ACTION	DEFINITION
Lubricate	Lubricate the component as specified in the owner's or service manual with Harley-Davidson approved product.
Replace	Replace the component at the specified intervals.

**Table 44. Service Action Definitions**

<b>ACTION</b>	<b>DEFINITION</b>
Clean	Clean the component as specified in the owner's or service manual.
Rebuild	Rebuild the component according to the procedures in the service manual.

**Maintenance Records**

Maintain a record of this service to keep your new motorcycle limited warranty in force. Refer to Table 45.

**Table 45. Owner's Maintenance Records**

<b>SERVICE MILE INTERVAL</b>	<b>DATE</b>	<b>DEALER NUMBER</b>	<b>TECHNICIAN NAME</b>	<b>TECHNICIAN SIGNATURE</b>
1,600 km (1,000 mi)				
8,000 km (5,000 mi)				
16,000 km (10,000 mi)				
24,000 km (15,000 mi)				
32,000 km (20,000 mi)				
40,000 km (25,000 mi)				
48,000 km (30,000 mi)				
56,000 km (35,000 mi)				
64,000 km (40,000 mi)				
72,000 km (45,000 mi)				
80,000 km (50,000 mi)				

**SERVICE**

## NOTES

---



## ACRONYMS AND ABBREVIATIONS

Table 46. Acronyms and Measurement Symbols

ITEM	DEFINITION
A	Amperes
ABS	Anti-lock braking system
AC	Alternating current
ACR	Automatic compression release
AGM	Absorbed glass mat (battery)
Ah	Ampere-hour
BCM	Body control module
°C	Celsius (Centigrade)
CCA	Cold cranking amps
CI	Cubic inch
cm	Centimeters
cm <sup>3</sup>	Cubic centimeters (cc)
CVO	Custom vehicle operations
DC	Direct current
DLC	Data link connector
DOM	Domestic
DT II	Digital Technician II
DTC	Diagnostic trouble code
ECM	Electronic control module
EFI	Electronic fuel injection
EHCUC	Electro hydraulic control unit
EITMS	Engine idle temperature management system

Table 46. Acronyms and Measurement Symbols

ITEM	DEFINITION
EHCUC	Electro hydraulic control unit
ETC	Electronic throttle control
EV	Electric vehicle
EVAP	Evaporative emissions control system
EVPT	Electric vehicle powertrain
EVSE	Electric vehicle supply equipment
°F	Fahrenheit
fl oz	Fluid ounce
ft	Feet
ft-lbs	Foot pounds
FTP	Flash to pass
g	Gram
gal	Gallon
GAWR	Gross axle weight rating
GND	Ground (electrical)
GPS	Global positioning system
GVWR	Gross vehicle weight rating
H-DSSS	Harley-Davidson smart security system
HCU	Hydraulic control unit
HDI	Harley-Davidson International
HHC	Hill hold control
HP	Horsepower
HV	High voltage
Hz	Hertz
IGN	Ignition light/key switch position

**Table 46. Acronyms and Measurement Symbols**

ITEM	DEFINITION
IM	Instrument module
IMU	Inertia measurement unit
in	inch
in <sup>3</sup>	Cubic inch
<b>in-lbs</b>	Inch pounds
kg	Kilogram
km	Kilometer
km/h	Kilometers per hour
kPa	Kilopascal
kW	Kilowatt
L	Liter
lb	Pounds
LED	Light emitting diode
Li-ion	Lithium-Ion
LV	Low voltage
mA	Milliampere
mi	Mile
MIL	Malfunction indicator lamp
Min	Minimum
mL	Milliliter
mm	Millimeter
mph	Miles per hour
ms	Millisecond
Nm	Newton-meter
OBC	Onboard charger

**Table 46. Acronyms and Measurement Symbols**

ITEM	DEFINITION
oz	Ounce
P&A	Parts and Accessories
PA	Public address
Part No.	Part number
PIN	Personal identification number
PPE	Personal protective equipment
psi	Pounds per square inch
PTT	Push to talk
qt	Quart
RDRS	Reflex defensive rider systems
RESS	Rechargeable energy storage system
rpm	Revolutions per minute
SDS	Safety data sheet
SoC	State of charge
SoH	State of health
SW	Software
TCS	Traction control system
TCU	Telematic Control Unit
TPMS	Tire pressure monitoring system
USB	Universal serial bus
USB-C	Universal serial bus - type C
V	Volt
VAC	Volts of alternating current
VDC	Volts of direct current
VIN	Vehicle identification number

**Table 46. Acronyms and Measurement Symbols**

ITEM	DEFINITION
VR	Voice recognition
W	Watt
WSS	Wheel speed sensor
Wh	Watt-hour
WHIM	Wireless Headset Interface Module

## **H-D U.S.A., LLC TRADEMARK INFORMATION**

Bar & Shield, Boom!, Breakout, Cruise Drive, CVO, Digital Tech, Digital Technician, Digital Technician II, Electra Glide, Evolution, Fat Bob, Fat Boy, Forty-Eight, FXDR 114, Glaze, Gloss, H-D, H-Dnet.com, Harley, Harley-Davidson, HD, Heritage Softail, Iron 1200, Iron 883, Low Rider, Milwaukee-Eight, Night Rod, Pan America, Profile, Reflex, Revolution X, Road Glide, Road King, Road Tech, Roadster, Screamin' Eagle, Seventy-Two, Slim, Softail, Sport Glide, Sportster, Street Bob, Street Glide, Street Rod, Sun Ray, Sunwash, SuperLow, Supersmart, SYN3, TechLink, TechLink II, TechLink 3, Tour-Pak, Tri Glide, Twin-Cooled, Ultra Classic, and Harley-Davidson Genuine Motor Parts and Genuine Motor Accessories are among the trademarks of H-D U.S.A., LLC.

## **PRODUCT REGISTERED MARKS**

Android, Apple, Alcantara S.p.A., Allen, Amp Multilock, Bluetooth, Brembo, CarPlay, City Navigator, Delphi, Deutsch, Dunlop, Dynojet, Fluke, G.E. Versilube, Garmin, Gunk, Heli-Coil, Hydroseal, Hylomar, iPhone, iPod, Kevlar, Lexan, Loctite, Lubriplate, Keps, K&N, Magnaflux, Marson Thread-Setter Tool Kit, MAXI fuse, Molex, Michelin, MPZ, Multilock, nano, NGK, Novus, Packard, Pirelli, Permatex, Philips, Pozidriv, Road Tech, Robinair, S100, Sems, Siri, SiriusXM, Snap-on, Teflon, Threadlocker, Torca, Torco, TORX, Tufoil, Tyco, Ultratorch, Velcro, X-Acto and XM Satellite Radio are among the trademarks of their respective owners.

## **PATENTS**

Harley-Davidson products are covered by one or more United States and international patents or pending patent applications.

## **COPYRIGHT**

ALL RIGHTS RESERVED.

©2020 H-D.

## NOTES

---





# Index

## A

Accessories and Cargo Guidelines.....	5
Acronyms and Abbreviations.....	271
Adjust.....	55,56
Adjusting Steering Head Bearings.....	181
AGM Battery.....	189
Air Filter, Inspecting.....	182
Alarm.....	69
Anti-Lock Brake System (ABS).....	14

## B

Battery.....	72,189,192
Before You Ride.....	39
Brake.....	79
Brakes.....	216
Break-in.....	40,151
Break-in Maintenance.....	151
Bulb, Replacement Incandescent Tail Lamp.....	208
Bulb, Replacement Incandescent Turn Signal.....	210
Bulb, Replacement LED Tail Lamp.....	209
Bulb, Replacement LED Turn Signal.....	210

## C

California Evaporative Emission Controls.....	220
Capacity.....	56
Carrying Capacity.....	56
Catalytic Converter.....	44
Changing Engine Oil.....	158
Changing Transmission Lubricant.....	162
Charging.....	189
Charging Battery.....	189
Checking Engine Oil.....	156
Checklist.....	39
Clean.....	137,138,142,145,145, 189
Cleaning.....	138,142
Clutch.....	177
Controls.....	28,79
Coolant.....	33,215
Cooling System.....	215
Copyright.....	273
Customer service.....	2

## D

Dealer Locator.....	221
---------------------	-----

# Index

Dealer Locator Phone Number.....	221
Denim Finish.....	145
Displays, Odometer Window.....	96
Disposal and Recycling.....	154
Drive Belt.....	167
Drive Belt Deflection Specifications.....	167

## E

EITMS.....	116
Electrical System.....	215
Engine.....	40,118,213
Engine Idle Temperature Management System.....	116
Engine OFF/RUN Switch.....	92
Engine Oil.....	154,156,158
Engine Oil and Filter.....	158
EPA Noise Regulations.....	220

## F

Factory Replacement Parts.....	219
Fill.....	41
Fob.....	61

Front Fork, Maintaining.....	181
Fuel.....	41,44
Fuses.....	72,195
Fuses and Relays.....	72

## G

Gasoline.....	44
Gear Shift.....	79
Genuine Motor Parts and Accessories.....	137

## H

Hand Control Modules.....	89,92
Hazard Warning 4-Way Flashers.....	66
Hydraulic Lifters.....	177

## I

Importing a Motorcycle.....	222
Indicators.....	85
Inspect.....	189
Inspecting Air Filter.....	182

# Index

Inspection.....	189
Instruments.....	81

## K

Key.....	61
----------	----

## L

Labels.....	20
Leather.....	145
Leather Care.....	145
Low Beam Switch.....	89

## M

Maintaining Front Fork.....	181
Maintenance.....	151, 151, 154, 156, 158, 162, 167, 177, 177, 182, 219, 265
Maintenance, Preparing the Motorcycle for.....	152
Manual.....	1
Mirror Adjustment.....	55
Mirrors.....	55
Models and Features.....	28

## N

National Highway Traffic Safety Administration.....	221
National Highway Traffic Safety Administration (NHTSA).....	221
Noise Control System.....	15

## O

Odometer Window Displays.....	96
Oil.....	154
Oil Cooler.....	161
Oil Level.....	156
Operation.....	115, 118
Owner Contact Information.....	222

## P

Parking Brake.....	59
Patents.....	273
Polishing.....	142
Power Disconnect.....	72
Pre-Ride Checklist.....	39
Preload Adjustment.....	56
Preparing the Motorcycle for Maintenance.....	152
Primary Chaincase.....	33, 163

# Index

<b>R</b>		Steering Damper.....	181
Recommended Cleaning Products.....	138	Steering Head Bearings, Adjusting.....	181
Registered Marks.....	273	Stopping the Engine.....	118
Reverse Motor.....	216	Storage.....	39
Rules of the Road.....	15	Storing.....	39,189
		Storing.....	148
		Switch.....	79,89,92
<b>S</b>		<b>T</b>	
Safe Operating Rules.....	5	Tail Lamp Bulb Relacemaent Incandescent.....	208
Safety.....	5,20,151,189	Tail Lamp Bulb Replacement LED.....	209
Safety Defintions.....	1	Throttle.....	79
Safety Symbols, Definitions.....	15	Tire.....	137
Seat.....	211	Tires.....	137
Security System.....	61,61,63,66,66, 69, 70, 70, 71, 72, 72	Tires, Checking Pressure and Inspecting.....	48
Service Records.....	265	Traction Control.....	122
Shifting Gears.....	123	Traction Control (TC) Description.....	122
Shock Absorbers.....	182	Trademarks.....	273
Shocks.....	56	Transmission.....	33,161,162,215
Smart Security System.....	71,72,72	Transport Mode.....	70
Specifications.....	33,154,167	Troubleshooting.....	72,213,215,215,216, 216, 216
Start Switch.....	92	Turn Signal Bulb Replacement Incandescent.....	210
Starting the Engine.....	114,115		

## Index

---

Turn Signal Bulb Replacement LED.....210

### V

Vehicle Identification Number (VIN).....25

Vehicle Storage.....39

Vinyl.....145

Vinyl Care.....145

Voltage test.....189


### W

Warranty.....219,221,222

Warranty Repair Work.....221

Washing.....142

Wheels.....137

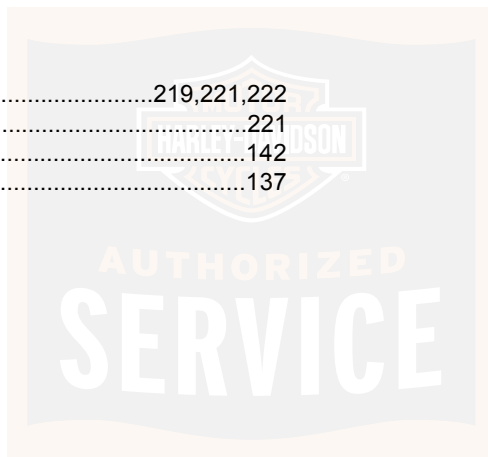

## NOTES

---



Front of label sheet goes here

Back of label sheet goes here



INSIDE BACK COVER GOES HERE

OUTSIDE BACK COVER GOES HERE

# PRINTER INSTRUCTIONS: Insert appropriate language card for KEYED BCM (dated 04/10 on c

## Operation

To Arm the System

- Park the motorcycle and turn the ignition switch to OFF. Within 5 seconds, the system responds with two turn signal flashes and two chirps from optional siren.

To Disarm the System

- With an assigned fob present, the system automatically disarms when the theft indicator switch is turned to IGN. The security indicator lamp will illuminate for 4 seconds and turn off and the optional siren will chirp once.

## Transport Mode

To Arm the System

- With fob present, theft indicator switch to IGN.
- Before security lamp goes out, turn ignition switch to OFF.
- Press both turn signal switches. Both turn signals flash at once.

To Disarm the System

- With fob present, theft indicator switch to IGN.

Harley-Davidson®  
Smart Security System  
and Owner's Record



04/10

## Operation

To Arm the System

- Park the motorcycle and turn the ignition switch to OFF. Within 5 seconds, the system responds with two turn signal flashes and two chirps from optional siren.

To Disarm the System

- With an assigned fob present, the system automatically disarms when the theft indicator switch is turned to IGN. The security indicator lamp will illuminate for 4 seconds and turn off and the optional siren will chirp once.

## Transport Mode

To Arm the System

- With fob present, theft indicator switch to IGN.
- Before security lamp goes out, turn ignition switch to OFF.
- Press both turn signal switches. Both turn signals flash at once.

To Disarm the System

- With fob present, theft indicator switch to IGN.

Harley-Davidson®  
Smart Security System  
and Owner's Record



04/10

Vehicle owner: This card is intended to provide a convenient reference for important information concerning your motorcycle. Please fill out applicable information and keep this card in your wallet.

# PRINTER INSTRUCTIONS: Insert appropriate language card for KEYED BCM (dated 04/10 on ca

## Personal Identification Number (PIN)

ex. a - b - c - d - e

- Turn ignition switch to IGN.
- Press and release left turn signal switch
- Enter first digit of code (a) by tapping left turn switch until first digit (a) is shown.
- Press right turn switch time
- Enter second digit of code (b) by tapping left turn switch until second digit (b) is shown.
- Press right turn switch time
- Enter third digit of code (c) by tapping left turn switch until third digit (c) is shown.
- Press right turn switch time
- Enter fourth digit of code (d) by tapping left turn switch until fourth digit (d) is shown.
- Press right turn switch time
- Enter fifth digit of code (e) by tapping left turn switch until fifth digit (e) is shown.
- Press right turn switch time



## Owner's Record

### Vehicle Identification Number

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

### Date of Purchase

---

## Personal Identification Number (PIN)

ex. a - b - c - d - e

- Turn ignition switch to IGN.
- Press and release left turn signal switch
- Enter first digit of code (a) by tapping left turn switch until first digit (a) is shown.
- Press right turn switch time
- Enter second digit of code (b) by tapping left turn switch until second digit (b) is shown.
- Press right turn switch time
- Enter third digit of code (c) by tapping left turn switch until third digit (c) is shown.
- Press right turn switch time
- Enter fourth digit of code (d) by tapping left turn switch until fourth digit (d) is shown.
- Press right turn switch time
- Enter fifth digit of code (e) by tapping left turn switch until fifth digit (e) is shown.
- Press right turn switch time



## Owner's Record

### Vehicle Identification Number

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

### Date of Purchase

---