-J00796

Kit Numbers 51949-01YYB, 51949-01YYD, 51949-01YYL, 51949-01YYU, 51949-01YYM, 51949-01YYV, 51949-01YYE, 51949-01YYX, 51949-01YYA REV. 11-08-2000

S3 CUSTOM SEAT

General

This kit is designed for all 1997 and later S3 and S3T vehicles.

Kit contents:

ITEM	DESCRIPTION	PART NO.
1	Seat,Carbon Black	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

Kit Number 51949-01YYD

ITEM	DESCRIPTION	PART NO.
1	Seat, Blue Streak	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

Kit Number 51949-01YYL

TEM	DESCRIPTION	PART NO.
1	Seat, Molten Orange	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

Kit Number 51949-01YYU

KIL NUMBER 31949-01110			
TEM	DESCRIPTION	PART NO.	
1	Seat, Reactor Yellow	Not sold separately	
2	Grab strap	51950-01Y	
3	Bolt, 5/16-1.00 flange head	4206	

Kit Number 51949-01YYM

TEM	DESCRIPTION	PART NO.
1	Seat, Spark Red	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

Kit Number 51949-01YYV

TEM	DESCRIPTION	PART NO.
1	Seat, Onyx Alloy	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

Vit Number E1040 01VVE


Rit Number 51949-0111E			
ITEM	DESCRIPTION	PART NO.	
1	Seat, Amazon Green	Not sold separately	
2	Grab strap	51950-01Y	
3	Bolt, 5/16-1.00 flange head	4206	

Kit Number 51949-01YYX

THE HUMBON ON THE CONTRACT			
ITEM	DESCRIPTION	PART NO.	
1	Seat, Demon Blue	Not sold separately	
2	Grab strap	51950-01Y	
3	Bolt. 5/16-1.00 flange head	4206	

Kit Number 51949-01YYA

TEM	DESCRIPTION	PART NO.
1	Seat, Billet Metallic	Not sold separately
2	Grab strap	51950-01Y
3	Bolt, 5/16-1.00 flange head	4206

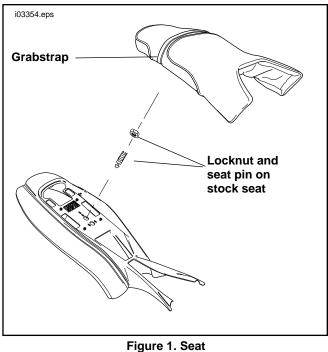

NOTE Items 2 and 3 are already installed on seat.

A Service Manual for your vehicle is available from your Buell Dealer.

Installation

- Refer to the applicable Service Manual for instructions on removing seat from vehicle.
- 2. Remove lock nut and seat pin from stock seat.
- Install pin and lock nut on new seat. Run lock nut down as far as possible on pin. Finger tighten lock nut.
- Install seat on vehicle. If seat does not latch firmly, remove seat and adjust pin into the seat. If seat does not latch at all, then adjust pin out from seat.
- 5. Once the fitment is correct, tighten lock nut against seat pan to secure pin.
- Install seat and verify that seat is firmly locked in place. Lock rear of seat with key.

WARNING

After installing seat, pull upward on front of seat to be sure it is locked in position. If seat is loose, it could shift position during vehicle operation, causing loss of control of vehicle and death or serious injury.