



Harley-Davidson and Buell Service Intervals

This collection of service interval tables is made available to use as a quick reference for service technicians. Please see the appropriate service manual or supplement for detailed service instructions. The pages are formatted to allow 8.5 x 11 printing at the dealership.

See the Dealer Marketing Engine (DME) for customizable detailed interval sheets for technicians.

SPORTSTER MODELS

Table 43. Regular Service Intervals: 2006 Sportster Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X	X	X	X	X	1, 4
Transmission lubricant	Replace	X		X		X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake, enricher and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1
Jiffy stand	Inspect and lubricate	X		X		X		1
Fuel valve, lines and fittings	Inspect for leaks	X	X	X	X	X	X	1
Fuel tank filter screen	Clean						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Front brake lever pin	Inspect		X	X	X	X		1, 2
Front brake lever pin	Lubricate						X	1, 2
Brake caliper pins	Inspect		X	X	X	X		1, 2
Brake caliper pins	Lubricate						X	1, 2
Brake caliper boots and bushings	Inspect		X	X	X	X		1, 2
Brake caliper boots and bushings	Replace						X	1, 2
Rear master cylinder outer boot	Inspect		X	X	X	X	X	1, 2
Brake components	Replace brake rubber components in master cylinders and calipers						X	1, 2
Brake components	Lubricate master cylinder pistons						X	1, 2
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace					X		1
Steering head bearings	Adjust	X				X		1
Steering head bearings	Lubricate			X		X		1
Rear fork bearings		Replace every 30,000 miles (48,000 kilometers).						1
Shock absorbers	Inspect	X	X	X	X	X	X	1
Critical fasteners	Check tightness	X		X		X		1
Engine mounts and stabilizer links	Inspect			X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Replace every four (4) years. 3. Perform annually. 4. Not all vehicles are equipped with spoke wheels. Consult appropriate topic in service manual.							

DYNA MODELS

Table 44. Regular Service Intervals: 2006 Dyna Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X	X	X	X	X	X	
Transmission lubricant	Replace	X	X	X	X	X	X	
Clutch	Check adjustment	X	X	X	X	X	X	1
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1
Jiffy stand	Inspect and lubricate	X		X		X		1
Fuel, lines and fittings	Inspect for leaks	X	X	X	X	X	X	1
Fuel tank filter screen	Clean						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X	X	X	X	X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Front fork oil	Replace					X		1
Steering head bearings	Adjust	X		X		X		1, 2
Rear fork bearings		Inspect every 30,000 miles (48,000 kilometers).						1
Rear primary bearing		Replace every 15,000 miles (24,000 kilometers).						6
Critical fasteners	Check tightness	X		X		X		1
Engine mounts and stabilizer links	Inspect			X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enrichener, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Replace D.O.T. 4 HYDRAULIC BRAKE FLUID and flush system every two (2) years. 6. See an authorized Harley-Davidson dealer.							

SOFTAIL MODELS

Table 45. Regular Service Intervals: 2006 Softail Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake, enricher and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1, 4
Jiffy stand	Inspect and lubricate	X		X		X		1
Fuel valve, lines and fittings	Inspect for leaks	X	X	X	X	X	X	1, 4
Fuel tank filter screen	Clean (EFI: replace)						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	6
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace					X		1
Steering head bearings (Softail Models)	Adjust	X		X		X		1
Steering head bearings (Softail Models)	Lubricate			X		X		2
Steering head bearings (Springer models)		Adjust and lubricate every 2500 miles (4000 kilometers).						1, 5
Rear fork bearings (if applicable)	Repack					X		1
Windshield bushings	Inspect			X		X		1
Springer rocker bearings	Adjust	X		X		X		1
Fuel door, Tour-Pak, saddlebags	Lubricate hinges and latches	X	X	X	X	X		
Critical fasteners	Check tightness	X		X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enricher, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Disassemble, lubricate and inspect every 20,000 miles (32,000 kilometers). 6. Change D.O.T. 4 fluid and flush brake system every two years.							

VRSC MODELS

Table 46. Regular Service Intervals: 2006 VRSC Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Clutch fluid	Check level and condition	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect		X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Front fork oil		Replace every 30,000 miles (48,000 kilometers)						1
Steering head bearings	Adjust	X				X		1, 2
Rear fork bearings		Repack every 30,000 miles (48,000 kilometers).						1
Valve lash		Adjust valve lash every 12,000 miles (19,000 kilometers).						1, 4
Cooling system	Inspect; check clamps for tightness, check coolant freeze point	X		X		X		1
Coolant		Replace every 30,000 miles (48,000 kilometers).						1
Radiator	Clean	X	X	X	X	X	X	
Critical fasteners	Check tightness	X		X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually. 4. Could vary with frequency of operation and riding style. 5. Change D.O.T. 4 and flush brake system every two years.							

TOURING MODELS

Table 47. Regular Service Intervals: 2006 Touring Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake, enricher and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1, 4
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	1
Fuel valve, lines and fittings	Inspect for leaks	X	X	X	X	X	X	1, 4
Fuel tank filter screen	Clean (EFI: replace)						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace	To be performed by an authorized Harley-Davidson dealer every 50,000 miles (80,000 kilometers).						1, 2
Steering head bearings	Lubricate	X		X		X		2
Steering head bearings	Adjust						X	1
Air suspension	Check pressure, operation and leakage	X	X	X	X	X	X	1
Windshield bushings (if applicable)	Inspect			X		X		1
Cruise control	Inspect disengage switch and components	X	X	X	X	X	X	1
Fuel door, Tour-Pak, saddle-bags	Lubricate hinges and latches	X	X	X	X	X	X	
Critical fasteners	Check tightness	X		X		X		1
Engine mounts and stabilizers	Inspect			X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 50,000 miles (80,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enricher, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Change D.O.T. 4 and flush brake system every two years.							

POLICE MODELS

Table 48. Regular Service Intervals: 2006 Police Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1, 4
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	1
Fuel lines and fittings	Inspect for leaks	X	X	X	X	X	X	1, 4
Fuel tank filter screen	Replace						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace	To be performed by an authorized Harley-Davidson dealer every 50,000 miles (80,000 kilometers).						1, 2
Steering head bearings	Lubricate	X		X		X		2
Steering head bearings	Adjust						X	1
Air suspension	Check pressure, operation and leakage	X	X	X	X	X	X	1
Cruise control	Inspect disengage switch and components	X	X	X	X	X	X	1
Fuel door, Tour-Pak, saddle-bags	Lubricate hinges and latches	X	X	X	X	X	X	
Critical fasteners	Check tightness	X		X		X		1
Engine mounts and stabilizers	Inspect			X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 50,000 miles (80,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enrichener, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Change D.O.T. 4 and flush brake system every two years.							

VRSCSE2 MODEL

Table 49. Regular Service Intervals: 2006 VRSCSE2 Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	4000 MI. 6400 KM	8000 MI. 12,800 KM	12,000 MI. 19,300 KM	16,000 MI. 25,700 KM	20,000 MI. 32,100 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Clutch fluid	Check level and condition	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect		X		X		X	
Spark plugs	Replace				X			
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Front fork oil		Replace every 28,000 miles (45,000 kilometers).						1
Steering head bearings	Adjust	X					X	1, 2
Rear fork bearings		Repack every 28,000 miles (45,000 kilometers).						1
Valve lash	Adjust				X			1, 4
Cooling system	Inspect; check clamps for tightness, check coolant freeze point	X		X		X		1
Coolant		Replace every 28,000 miles (45,000 kilometers).						1
Radiator	Clean	X	X	X	X	X	X	
Seat latch	Lubricate	X	X	X	X	X	X	1
Critical fasteners	Check tightness	X		X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 28,000 miles (45,000 kilometers). 3. Perform annually. 4. Could vary with frequency of operation and riding style. 5. Change D.O.T. 4 and flush brake system every two years.							

FLSTFSE2 MODEL

Table 50. Regular Service Intervals: 2006 FLSTFSE2 Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1, 4
Jiffy stand	Inspect and lubricate	X		X		X		1
Fuel lines and fittings	Inspect for leaks	X	X	X	X	X	X	1, 4
Fuel pump filter screen	Replace						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace	To be performed by an authorized Harley-Davidson dealer every 30,000 miles (48,000 kilometers).						1
Steering head bearings	Adjust	X		X		X		1
Steering head bearings	Lubricate			X		X		2
Rear fork bearings (if applicable)	Repack					X		1
Critical fasteners	Check tightness	X		X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 30,000 miles (48,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enrichener, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Change D.O.T. 4 brake and clutch fluid and flush every two years.							

FLHTCUSE MODEL

Table 51. Regular Service Intervals: 2006 FLHTCUSE Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X	X	X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	
Wheel spokes	Check tightness	X	X			X		1, 4
Primary chaincase lubricant	Replace	X		X		X		
Transmission lubricant	Replace	X				X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	
Rear belt and sprockets	Inspect, adjust belt	X	X	X	X	X	X	1
Throttle, brake, enricher and clutch controls	Check, adjust and lubricate	X	X	X	X	X	X	1, 4
Jiffy stand	Inspect and lubricate	X	X	X	X	X	X	1
Fuel valve, lines and fittings	Inspect for leaks	X	X	X	X	X	X	1, 4
Fuel tank filter screen	Clean (EFI: replace)						X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	5
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Inspect	X	X		X		X	
Spark plugs	Replace			X		X		
Electrical equipment and switches	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Front fork oil	Replace	To be performed by an authorized Harley-Davidson dealer every 50,000 miles (80,000 kilometers).						1, 2
Steering head bearings	Lubricate	X		X		X		2
Steering head bearings	Adjust						X	1
Air suspension	Check pressure, operation and leakage	X	X	X	X	X	X	1
Windshield bushings (if applicable)	Inspect			X		X		1
Cruise control	Inspect disengage switch and components	X	X	X	X	X	X	1
Fuel door, Tour-Pak, saddle-bags	Lubricate hinges and latches	X	X	X	X	X	X	
Critical fasteners	Check tightness	X		X		X		1
Engine mounts and stabilizers	Inspect			X		X		1
Battery	Check battery and clean connections	Perform annually.						3
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Harley-Davidson dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Disassemble, lubricate and inspect every 50,000 miles (80,000 kilometers). 3. Perform annually. 4. Not all vehicles are equipped with an enricher, fuel valve or spoke wheels. Consult appropriate topic in service manual. 5. Change D.O.T. 4 and flush brake system every two years.							

BUELL XB MODELS

Table 52. Regular Service Intervals: 2006 XB Models

ITEM SERVICED	PROCEDURE	1000 MI. 1600 KM	5000 MI. 8000 KM	10,000 MI. 16,000 KM	15,000 MI. 24,000 KM	20,000 MI. 32,000 KM	25,000 MI. 40,000 KM	NOTES
Engine oil and filter	Replace	X	X	X	X	X	X	
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required	X	X	X	X		X	
Air cleaner	Replace					X		
Tires	Check condition and tread	X	X	X	X	X	X	
Transmission lubricant	Replace	X		X		X		
Clutch	Check adjustment	X	X	X	X	X	X	1
Primary chain	Check adjustment	X	X	X	X	X	X	1
Rear belt and idler sprockets	Inspect	X	X	X	X	X	X	1
Throttle, brake, clutch controls, sidestand, active muffler cable and active intake cable adj (if equipped)	Check, adjust, lubricate	X	X	X	X	X	X	1
Brake fluid	Check levels and condition	X	X	X	X	X	X	2
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	
Spark plugs	Replace			X		X		1
Electrical switches and equipment	Check operation	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	1
Ignition timing	Check			X		X		1
Throttle position sensor (TPS)	Zero	X		X		X		1
Front fork oil	Replace			X		X		1
Steering head bearings	Perform resistance test		X	X	X	X	X	1
Oil cooler fins	Clean	X	X	X	X	X	X	
Brake system, oil lines, front forks, rear shock, exhaust system, exhaust system mounting, evaporative emission system (if applicable)	Inspect	X	X	X	X	X	X	1
Critical fasteners	Check tightness			X		X		1
Engine mounts and stabilizer links	Inspect			X		X		1
Road test	Verify component and system functions	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Buell dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Change brake fluid every two (2) years.							

BUELL BLAST MODEL

Table 53. Regular Service Intervals: 2006 Blast Models

ITEM SERVICED	PROCEDURE	1,000 MI	2,500 MI	5,000 MI	7,500 MI	10,000 MI	12,500 MI	15,000 MI	17,500 MI	20,000 MI	22,500 MI	25,000 MI	NOTES
		1,600 KM	4,000 KM	8,000 KM	12,000 KM	16,000 KM	20,000 KM	24,000 KM	28,000 KM	32,000 KM	36,000 KM	40,000 KM	
Engine oil and filter	Replace	X		X		X		X		X		X	
Engine oil and filter	Inspect		X		X		X		X		X		
Oil lines and brake system	Inspect for leaks	X	X	X	X	X	X	X	X	X	X	X	1
Air cleaner	Inspect, service as required					X				X			
Crankcase breather hose	Drain	X		X		X		X		X		X	
Tires	Check pressure, inspect tread	X	X	X	X	X	X	X	X	X	X	X	
Transmission lubricant	Replace	X				X				X			1
Clutch	Check adjustment	X		X		X		X		X		X	1
Primary chain	Check adjustment	X	X	X	X	X	X	X	X	X	X	X	1
Rear belt and rear sprocket	Replace							X					1
Throttle control	Check operation	X	X	X	X	X	X	X	X	X	X	X	1
Throttle, brake and clutch controls, sidestand	Lubricate			X		X		X		X		X	1
Fuel valve, lines and fittings	Inspect for leaks	X	X	X	X	X	X	X	X	X	X	X	1
Fuel tank filter screen	Clean									X			1
Brake fluid	Check levels and condition	X		X		X		X		X		X	1, 3
Brake pads and discs	Inspect for wear	X	X	X	X	X	X	X	X	X	X	X	
Rear brake pads and rear brake pins	Replace							X					1
Rear brake pedal	Check operation	X		X		X		X		X		X	1
Spark plug	Replace					X				X			
Electrical equipment and switches, starter interlock	Check operation	X	X	X	X	X	X	X	X	X	X	X	
Engine idle speed	Check adjustment	X	X	X	X	X	X	X	X	X	X	X	1
Ignition timing	Check					X				X			1
Front fork oil	Replace									X			1
Steering head bearings	Lubricate and adjust									X			1
Rear shock absorber	Check					X				X			
Wheel bearings		Inspect wheel bearings whenever wheel is removed (tire change, fork fluid change, etc).											2
Exhaust system hardware including muffler strap	Inspect					X				X			1
Critical fasteners	Check tightness					X				X			1
Engine mounts and stabilizer links	Inspect					X				X			1
Battery	Check battery and clean connections	X	X	X	X	X	X	X	X	X	X	X	
Road test	Verify component and system functions	X	X	X	X	X	X	X	X	X	X	X	
NOTES:	1. Should be performed by an authorized Buell dealer, unless you have the proper tools, service data and are mechanically qualified. 2. Inspect wheel bearings whenever wheel is removed (tire change, fork fluid change, etc). 3. Replace every two (2) years.												