

⇔ Boom!™ Box GTS Quick Start Guide

RADIO

Turning System ON/OFF

- 1. Switch power to Accessory, Ignition or Run (CVO models).
- 2. If radio is OFF, press POWER (12).
- 3. Read the warning and select Accept.

Pressing MUTE for more than 3 seconds will turn off radio

4. To mute or unmute audio, briefly press MUTE (12).

Select Source

- 1. Navigate: Home (7) > Audio (8).
- 2. Select: Source field (28).
- 3. Select band: AM FM WB (27).
- 4. Select media: USB (when connected), phone (Bluetooth), SiriusXM (if equipped) (27).

Seek and Save Station

- 1. Select: SEEK DOWN (2) or SEEK UP (3) on left hand control.
- 2. Press and hold preset (29) until it beeps.

Selecting a Favorite

If selecting a favorite that is saved from a phone or media device, the radio will not recognize the file unless the media source is connected.

- 1. Navigate: Home (7) > Favorites (15).
- 2. Select: Favorite.

SETUP

Audio Settings


- 1. Navigate: Home (7) > Setup (13) > Audio Settings.
- 2. Adjust: BASS or TREBLE.

Saving a Favorite

- 1. Navigate: Home (7) > Favorites (15).
- 2. Press and hold desired preset until screen title changes to Select a Favorite Type.
- 3. **Select:** Type.
 - a. Tuner: Currently playing station, SXM, AM, FM or WB.
 - b. Phone: Recent, Contacts on Radio or Contacts on Phone. Select from list.
 - c. Location: Recent or Saved. Select from list.
 - d. Media: USB. Select from list.

ITEM	ICON	FUNCTION
1	⇧	Home Short Press: Toggles between current screen and Home screen. Long Press: Toggles the Quick Jump screen.
2	M	Previous /Seek Down Media: Previous media file. Tuner: Tune/seek down.
3	▲	Next/Seek 3 Up Media: Next media file. Tuner: Tune/seek up.
4	+	Volume Up: Increases volume.
5		Volume Down: Decreases volume.
6	(((&	Voice Recognition: Initiates a voice recognition session.
7		Home: Displays Home screen.
8	1	Audio: Displays active source with audible content information.
9	\$	Navigation: Displays map with current position.
10	C	Phone: Displays menus for staying connected.
11	i	Info: Displays vehicle status.
12	<u></u>	Mute/Power: Toggles power on and off.
13	•	Setup: Configure system settings. Do before riding the motorcycle.
14	Q	Communication: Displays enabled communication devices.

ITEM	ICON	FUNCTION
15	*	Favorites: Displays saved favorites.
16	t¥t	Audio Setup: Displays audio setting screen.
17	n	Back Button Short Press Back to previous screen. Long Press: Screen transitions between normal day color and high contrast color.
18	SQ +	CB Squelch +: Increases CB squelch level (if equipped).
19	PTT	CB Push to Talk: Press and hold to transmit on CB/intercom (if equipped).
20	SQ -	CB Squelch: Decreases CB squelch level (if equipped).
21		Cursor Up: Moves the highlighting up through the selections.
22		Cursor Right: Moves the highlighting right through the selections. Tuner: Next preset up.
23		Cursor Down: Moves the highlighting down through the selections.
24	•	Cursor Left: Moves the highlighting left through the selections. Tuner: Next preset down.
25	(Select/Enter: Selects highlighted item.
26	A	Quick Jump.
27	FM	Band/Media.
28		Source Field.
29	1	Preset.

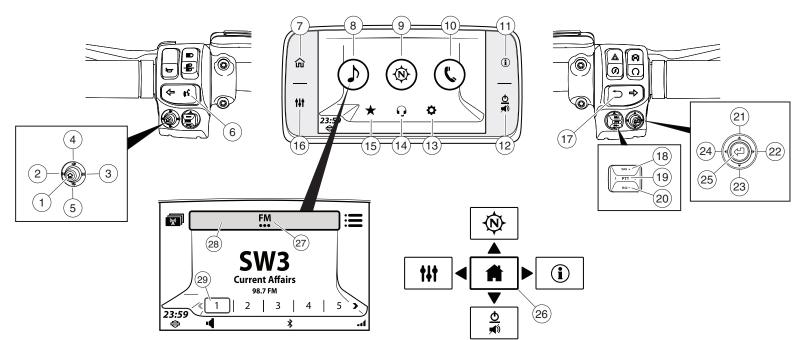

SETUP (cont.) **Speaker Volumes**

- 1. Navigate: Home (7) > Setup (13) > Audio Settings > Speaker Volumes.
- 2. Adjust: Media/Tuner, Prompt Nav, Phone, CB, Beep.

Activating Headsets or Speakers

(if equipped with headset)

- 1. Navigate: Home (7) > Setup (13) > Audio Settings > Audio Routing.
- 2. Select: Speaker or headset.

Streaming Audio

NOTE

The device must first be paired with the Boom! Audio system before it can be used -See BLUETOOTH

Device must also support Bluetooth audio streaming profile

- 1. **Navigate:** Home (7) > Audio (8).
- 2. Select: Source button (28).
- 3. **Select media:** Phone (Bluetooth (27).

BLUETOOTH

Pair a Phone or Other Device

- 1. Activate Bluetooth on your device.
- 2. **Navigate:** Home (7) > Phone (10).
- 3. **Prompt:** No device connected. Would you like to connect a device?
 - a. Select: Yes.
- 4. **Select:** Add new device.
- 5. **Prompt:** Does PIN match on device?
 - a. Check PINs (auto-generated) on audio system and device.
 - b. Select: Yes (if numbers match).
- 6. **Prompt:** Would you like to set an Emergency number?
 - a. Select: Yes or No.

PHONE

The phone must first be paired with the audio system before it can be used through the Boom!™ Box infotainment system - see BLUETOOTH

A Harley-Davidson headset with microphone is required to make and receive calls via Bluetooth

Making a Call

- 1. Navigate: Home (7) > Phone (10).
- 2. Select: Calls, Contacts, SOS (Emergency) or Keypad.

Receiving a Call

1. **Select:** Accept or Ignore.

Boom!™ Box GTS Quick Start Guide

NAVIGATION SYSTEM

One Box Search

- 1. Navigate: Home (7) > Navigation (9).
- 2. Select: Search (30).
- 3. Select: Search.
 - a. Input location information.

Route to Destination: Go Home

- 1. Navigate: Home (7) > Navigation (9).
- 2. Select: Search (30).
- 3. **Select:** Go Home.

Saving a Destination: Go Home

- 1. Navigate: Home (7) > Navigation (9).
- 2. Select: Search (30).
- 3. Select: Go Home.
- 4. From Set Home screen, select a destination (perform a search, select a recent destination, select a POI or a Saved file).
- 5. Select: Save.
- 6. Select: As Home.

Skip Waypoint

NOTE

While in route and from Map screen

- 1. **Select:** Menu (31).
- 2. Select: Skip.
- 3. Select: Yes.

Route to Destination: Repeat Navigation Instruction

1. **Select:** Repeat icon (33). This will repeat the last command given by navigation.

Canceling or Pausing a Route: Using Menu

- 1. **Select:** Stop icon (32) on the map screen.
- 2. **Select:** Stop or Pause.

NOTE

When selecting a new route, the system provides a notification to either add or replace the existing route

There is no need to manually cancel the current route when adding or replacing it with a new route



Quick Jump (26)

On the left-hand control do a long press on the Home button (1). This will display the Quick jump screen.

VOICE RECOGNITION

- 1. **Select:** Voice recognition (6).
- 2. When the system beeps, speak a voice command into headset microphone.

ITEM	ICON	FUNCTION
30	ď	Search: Opens up search bar.
31		Menu: Opens a menu of additional options. Select the icon again to return to the original screen.
32	0	Pause or stop route.
33		Repeat: Repeat navigation route instruction.
34	•	Apple CarPlay: Takes the things you want to do with your iPhone while riding and puts them right on your radio's display.
35		Android Auto: Takes the things you want to do with your Android phone while riding and puts them right on your radio's display.

ACTIVATION REQUIREMENTS Apple CarPlay®/Android™ Auto

- Rider headset with microphone connected to radio through a wired or wireless connection.¹
- An iPhone 5 or newer/An Android phone running Android 5.0 and up with a data plan.²
- iPhone or Android phone connected via the USB port.
- ¹ The vehicle may require the purchase and installation of additional parts or accessories to enable wired/wireless headset connections. Consult your Harley-Davidson® dealer.
- ² An Android 6.0 phone and up is recommended for best performance.

Setup

NOTE


No app is required for Apple CarPlay operation.

- 1. Switch power to Accessory, Ignition or Run (CVO™ models).
- 2. **Connect:** Wired or wireless headset to vehicle.
- 3. Connect: iPhone to USB port on vehicle.
 - a. CarPlay icon (34) or Android Auto icon (35) replaces phone icon (10) on Home page.
- 4. Select: CarPlay (34) or Android Auto (35).
- 5. Apple CarPlay is visible on radio screen.


Troubleshoot

If Apple CarPlay/Android Auto does not activate, in no specific order please verify:

- 1. Headset is connected to vehicle.
- 2. iPhone/Android phone is connected via USB port.
- 3. Projection Mode is turned on in radio settings.
 - a. **Navigate:** Home (7) > Setup (13).
 - b. Select: Projection Mode ON.
- 4. Verify Apple CarPlay is enabled in iPhone settings/Android Auto app is installed and up to date (from Google Play Store).
- 5. Verify Siri is enabled in iPhone settings/GTS Radio software is M21.20.17.00 for Android Auto operation.
- 6. Verify Apple CarPlay can be accessed while iPhone is locked in iPhone settings/ALL notifications for Android Auto are turned off.
- 7. Verify factory phone USB cable is used. This ensures proper performance for data change.

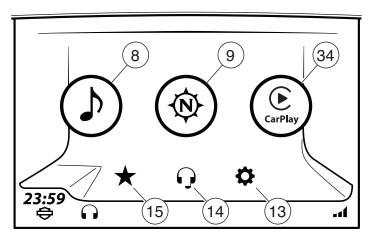

Boom!™ Box Home Screen with CarPlay.

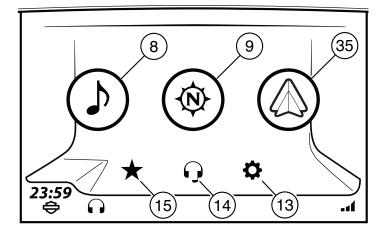

Boom![™] Box Home Screen with Android Auto.

Apple CarPlay is a trademark of Apple Inc., registered in the U.S. and other countries. Android Auto is trademark of Goole LLC., registered in the U.S. and other countries.

HARLEY-DAVIDSON

A full version of the Boom!™ Box 6.5 GTS owner's manual downloadable at Harley-Davidson.com or H-D.com/BoomBoxGTS/manual

Harley-Davidson Customer Care Representative: 1-800-258-2464 or 414-343-4056.

Representatives are available: Monday through Friday, 8:00 a.m. – 8:00 p.m. Central Standard Time (CST)