



2004 HARLEY-DAVIDSON® WIRING DIAGRAMS

P/N 99949-04

2004 WIRING DIAGRAMS - TABLE OF CONTENTS

| 2004 Domestic and International Models | Page Number |
|---|-------------|
| XL 883, XL883C, XL 1200C, XL 1200R | |
| Main Harness (Lights, Instruments, Indicators and Hand Controls are on page 2.) | 1 |
| Lights, Instruments, Indicators and Hand Control Switches | 2 |
| Ignition circuit | 3C |
| Horn and Instruments | 4C |
| Lighting circuit (Sheet 1 of 2) | 5C |
| Lighting circuit (Sheet 2 of 2) | 6C |
| Security Circuit (Sheet 1 of 2) | 7C |
| Security Circuit (Sheet 2 of 2) | 8C |
| Starting and Charging circuits | 9C |
| FLSTC, FLSTF, FXST, FXSTB, FXSTD, FXSTS (ALL CARBURETED SOFTAILS) | |
| Main Harness (Lights, Fuel Gauge and Indicators are on page 11.) | 10 |
| Lights, Fuel Gauge and Indicators | 11 |
| Ignition circuit | 12C |
| Lighting circuit (Sheet 1 of 2) | 13C |
| Lighting circuit (Sheet 2 of 2) | 14C |
| Horn and Instruments | 15C |
| Starting and Charging circuits | 16C |
| Security Circuit (Sheet 1 of 2) | 17C |
| Security Circuit (Sheet 2 of 2) | 18C |
| FLSTCI, FLSTFI, FXSTI, FXSTBI, FXSTDI, FXSTDSE2, FXSTSI (ALL FUEL INJECTED {EFI} SOFTAILS) | |
| Main Harness (Sheet 1 of 3) | 19 |
| Main Harness (Sheet 2 of 3) | 20 |
| Main Harness (Sheet 3 of 3) | 21 |
| Ignition circuit | 22C |
| Charging circuit | 23C |
| Lighting circuit (Sheet 1 of 2) | 24C |
| Lighting circuit (Sheet 2 of 2) | 25C |
| Horn and Instruments | 26C |
| Starting | 27C |
| Security Circuit (Sheet 1 of 2) | 28C |
| Security Circuit (Sheet 2 of 2) | 29C |
| FXD, FXDL, FXDX (ALL CARBURETED DYNAS, EXCEPT FXDWG) | |
| Main Harness (Lights, Instruments and Indicators are on page 32.) | 30 |
| Lights, Instruments and Indicators | 31 |
| Lighting circuit (Sheet 1 of 2) | 32C |
| Lighting circuit (Sheet 2 of 2) | 33C |
| Horn and Instruments | 34C |
| Charging circuit | 35C |
| Starting circuit | 36C |
| Ignition circuit | 37C |
| Security Circuit (Sheet 1 of 2) | 38C |
| Security Circuit (Sheet 2 of 2) | 39C |
| FXDWG (CARBURETED) | |
| Main Harness (Lights, Fuel Gauge and Indicators are on page 41.) | 40 |
| Lights, Fuel Gauge and Indicators | 41 |
| Horn and Instruments | 42C |
| Charging circuit | 43C |
| Ignition circuit | 44C |
| Lighting circuit (Sheet 1 of 2) | 45C |
| Lighting circuit (Sheet 2 of 2) | 46C |
| Starting circuit | 47C |
| Security Circuit (Sheet 1 of 2) | 48C |
| Security Circuit (Sheet 2 of 2) | 49C |
| FXDI, FXDLI, FXDXI (ALL EFI DYNAS, EXCEPT FXDWG) | |
| Main Harness (Lights, Instruments and Indicators are on page 51.) | 50 |
| Lights, Instruments and Indicators (CONTINUED IN NEXT COLUMN.) | 51 |

| 2004 Domestic and International Models | Page Number |
|--|-------------|
| Hand Controls and Charging Circuit | 52 |
| Lighting circuit (Sheet 1 of 2) | 53C |
| Lighting circuit (Sheet 2 of 2) | 54C |
| Horn and Instruments | 55C |
| Starting circuit | 56C |
| Ignition circuit (Sheet 1 of 2) | 57C |
| Ignition circuit (Sheet 2 of 2) | 58C |
| Security Circuit (Sheet 1 of 2) | 59C |
| Security Circuit (Sheet 2 of 2) | 60C |
| FXDWGI (EFI) | |
| Main Harness (Sheet 1 of 3) | 61 |
| Rear Lights, Speedo. and Indicators (Sheet 2 of 3) | 62 |
| Fuel Gauge and Charging circuit (Sheet 3 of 3) | 63 |
| Horn and Instruments | 64C |
| Ignition circuit | 65C |
| Lighting circuit (Sheet 1 of 2) | 66C |
| Lighting circuit (Sheet 2 of 2) | 67C |
| Starting circuit | 68C |
| Security Circuit (Sheet 1 of 2) | 69C |
| Security Circuit (Sheet 2 of 2) | 70C |
| FLHTPI (Fuel Injected) Police | |
| Main Harness | 71 |
| Ignition Harness | 73 |
| Interconnect Harness | 75 |
| Siren, Strobe harness, Hand controls | 76 |
| Ignition switch, Tail lamp, Pursuit lamps, and Directional lamps | 78 |
| Ignition circuit (Sheet 1 of 3) | 79C |
| Ignition circuit (Sheet 2 of 3) | 80C |
| Ignition circuit (Sheet 3 of 3) | 81C |
| Lights circuit (Sheet 1 of 5) | 82C |
| Lights circuit (Sheet 2 of 5) | 83C |
| Lights circuit (Sheet 3 of 5) | 84C |
| Lights circuit (Sheet 4 of 5) | 85C |
| Police equipment (Sheet 1 of 3) | 87C |
| Police equipment (Sheet 2 of 3) | 88C |
| Police equipment (Sheet 3 of 3) | 89C |
| Horn and Instruments (Sheet 1 of 4) | 90C |
| Horn and Instruments (Sheet 2 of 4) | 91C |
| Horn and Instruments (Sheet 3 of 4) | 92C |
| Horn and Instruments (Sheet 4 of 4) | 93C |
| Starting and Charging Circuits | 94C |
| Starting Circuit (FLHTPI only) | 95C |

TABLE OF CONTENTS IS CONTINUED ON INSIDE BACK COVER

HOW-TO-USE THESE WIRING DIAGRAMS

Page numbering

The wiring diagrams identified with page numbers "1", "2", etc. are overall diagrams that include all electrical/electronic systems and their associated wiring and connectors. Circuit specific diagrams for the Starting, Charging, Ignition, Horn and Instruments, Lighting, Cruise Control System, Security, Police and Audio System have been added. The circuit specific diagrams only show the components and wiring in the System(s) listed in the page title. The pages containing circuit specific diagrams are numbered "3C", "4C", etc. The "C" indicates circuit specific.

Troubleshooting

Once a problem has been isolated to a specific system or circuit, the circuit specific diagrams will simplify locating the problem.

NOTE

Harness Part No.'s may be included on some wiring diagrams. Use these numbers for reference purposes only. ALWAYS REFER TO THE PARTS CATALOG WHEN ORDERING WIRING HARNESSSES.