


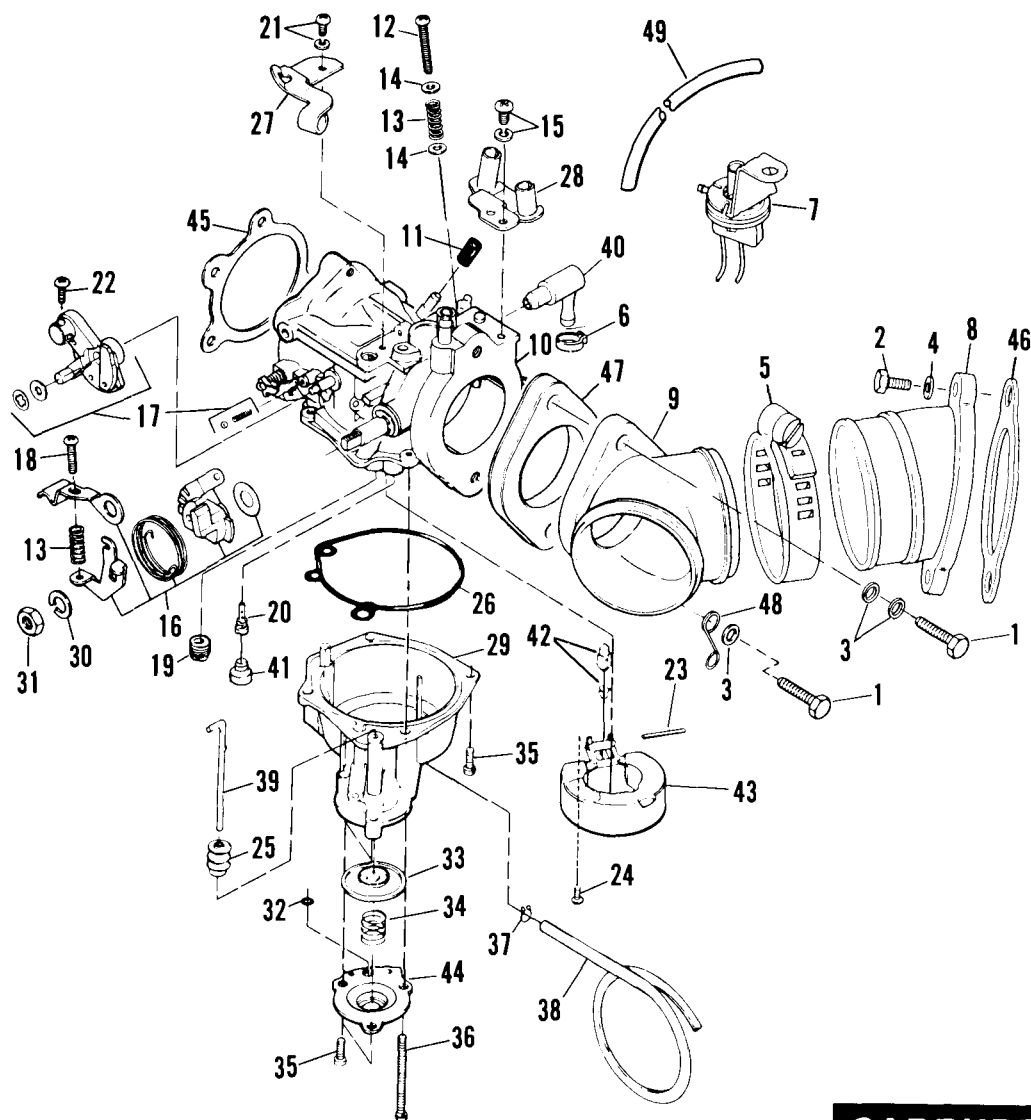

**CARBURETOR
1987 TO 1989**

INDEX NO.	PART NO.	NAME	FLT MODELS	FXR MODELS	SOFTAIL MODELS
1	2818	BOLT	89-ALL	89-ALL	89-ALL
	2871W	BOLT (2-1987 & 1988)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
2	3494	BOLT (4)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
3	6016	WASHER (3)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
4	6771	WASHER (4)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
5	9991A	CLAMP, compliance fitting	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
6	10014	CLAMP, fuel hose (2)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
7	26555-84	VACUUM SWITCH	87 to 89-ALL	--	--
	26557-83	VACUUM SWITCH	--	87 to 89-ALL	--
	26558-84	VACUUM SWITCH	--	--	87 to 89-ALL
8	27008-83A	COMPLIANCE FITTING, front cyl. hd.	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
	27012-83A	COMPLIANCE FITTING, rear cyl. hd.	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
9	27019-83	INTAKE MANIFOLD	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
10	27026-88A	CARBURETOR (F59B)(Cal. only)	88&89-ALL	88&89-ALL	88&89-ALL
	27029-86B	CARBURETOR (02BR)	--	87-ALL	87-ALL
	27029-88	CARBURETOR (F58A)	88&89-ALL	88&89-ALL	88&89-ALL
	27034-86B	CARBURETOR (B88R)	87-ALL	--	--
11	27079-84	CAP, evaporative port	87-ALL	87-ALL	87-ALL
12	27130-81	SCREW, throttle stop	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
13	27136-81	SPRING, throt. stop & fast idle scr. (2)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
14	27137-81	WASHER, throt. stop screw	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
15	27139-81	SCREW W/WASHER, throt. cable brkt.	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
16	27143-81	LEVER KIT, accelerator pump	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
17	27144-86A	CHOKE LEVER KIT	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
18	27145-81	SCREW, fast idle	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
19	27301-86	MAIN JET, 1.70 mm	87-ALL	--	--
	27616-88	MAIN JET, 1.40 mm (Cal. only)	88&89-ALL	88&89-ALL	88&89-ALL
	27898-78	MAIN JET, 1.65 mm	88&89-ALL	87 to 89-ALL	87 to 89-ALL
20	27302-84	LOW SPEED JET, 0.50 mm	87-ALL	87-ALL	87-ALL
	27329-83	LOW SPEED JET, 0.52 mm	88&89-ALL	88&89-ALL	88&89-ALL
	27383-88	LOW SPEED JET, 0.42 mm (Cal. only)	88&89-ALL	88&89-ALL	88&89-ALL

FLT MODELS

FLTC DB
 FLHT DD
 FLHTC DJ
 FLTC-U DM
 FLHTC-U DP
 FLHS FA

FXR MODELS

FXR EA
 FXRS EB
 FXRT EC
 FXRS-SP EG
 FXLR EL
 FXRS-CON EM

SOFTAIL MODELS

FXST BH
 FLST/C BJ
 FXSTC BK
 FXSTS BL
 FLSTF BM

INDEX NO.	PART NO.	NAME	FLT MODELS	FXR MODELS	SOFTAIL MODELS
21	27304-76	SCREW W/WASHER, choke cable brkt.	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
22	27307-76	SCREW, wire block	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
23	27308-76	PIN, float	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
24	27309-76	SCREW, float pin	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
25	27311-76	CAP, accelerator pump (rubber)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
26	27324-83	O-RING, bowl	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
27	27325-86	BRACKET, choke cable	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
28	27327-83	BRACKET, throt. cable	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
29	27330-83	BOWL (02BH)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
30	27333-76	LOCKWASHER, throt. lever	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
31	27335-76	NUT, throt. lever	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
32	27360-76	O-RING	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
33	27361-76	DIAPHRAGM, accelerator pump	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
34	27362-76	SPRING, diaphragm	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
35	27366-76	SCREW (5)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
36	27367-76	SCREW	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
37	27368-76	CLIP, overflow hose	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
38	27369-76	HOSE, overflow	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
39	27370-83	ROD, accelerator pump	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
40	27371-76	FITTING, fuel hose	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
41	27385-76	PLUG, low speed jet	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
42	27886-78A	FLOAT VALVE, w/clip	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
43	27887-78	FLOAT	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
44	27891-80	HOUSING, accelerator pump	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
45	29058-77	GASKET, air cleaner to carb.	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
46	29242-83	GASKET, compliance fitting (2)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
47	29250-78A	INSULATING SPACER	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
48	45092-66A	CABLE GUIDE	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL

NOTE: Hose is sold only in bulk length under the following part number. Cut to length.

49	26570-84	HOSE, 3/16" I.D. (10 ft.)(black)	87 to 89-ALL	87 to 89-ALL	87 to 89-ALL
----	----------	----------------------------------	--------------	--------------	--------------

H-D INTERNATIONAL ONLY

10	27026-88A	CARBURETOR (F59B) (Swiss only)	88&89-ALL	88&89-ALL	88&89-ALL
20	27383-88	LOW SPEED JET, 0.42 mm (Swiss only)	88&89-ALL	88&89-ALL	88&89-ALL
19	27616-88	MAIN JET, 1.40 mm (Swiss only)	88&89-ALL	88&89-ALL	88&89-ALL

FLT MODELS

FLTC	DB	FXR	EA
FLHT	DD	FXRS	EB
FLHTC	DJ	FXRT	EC
FLTC-U	DM	FXRS-SP	EG
FLHTC-U	DP	FXLR	EL
FLHS	FA	FXRS-CON	EM

FXR MODELS**SOFTAIL MODELS**

FXST	BH
FLST/C	BJ
FXSTC	BK
FXSTS	BL
FLSTF	BM