TOURING MODELS

1987-1990 HARLEY-DAVIDSON® PARTS CATALOG

Harley-Davidson Motor Company
Service Communications
Milwaukee WI 53208 USA

99450-90A
English

Printed in the USA

1987-1990 HARLEY-DAVIDSON® PARTS CATALOG
TOURING MODELS - 99450-90A



TOURING MODELS

1987-1990 HARLEY-DAVIDSON® PARTS CATALOG

GENERAL INFORMATION

THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH.

About this Manual

This Parts Catalog has been prepared to make it easier for you to order parts for your motorcycles. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Consult the illustrations when ordering parts to make sure that you receive all the required parts. The number in parentheses following the part description is the quantity needed for complete assembly. If there is no number in parentheses, only one is used. Prices of parts in this catalog are published separately.

When ordering parts, the following instructions should be followed carefully.

- Make sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Review your system documentation on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with vehicle identification number (VIN). All non-warranty replacement frame orders require return of the steering neck with vehicle identification number (VIN). Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact Dealer Services.
- The sale or use of these parts or accessories does not grant the purchaser a license or other right under any Harley-Davidson patent.
- To request a missing or loose part, simply submit a Return Material Authorization (RMA) claim on h-dnet.com with code "T-part not included with vehicle" for all vehicle missing parts claims. Then place an order for the missing item on your next Parts and Accessories order. Upon filing the RMA claim, your dealership will be credited for the dealer net cost of the part. The Vehicle Identification Number must be included on the RMA claim in order for you to receive credit. This process is to be used for vehicles manufactured at all plants.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

©2022 H-D

GENERAL INFORMATION

NUMERICAL INDEX

The Numerical Index is located at the back of this parts catalog. This index includes all part numbers used in this catalog and the page numbers of where they can be found.

SIP (SERVICE INFORMATION PORTAL)

For the latest updates to these manuals, see the Service Information Portal at https://serviceinfo.harley-davidson.com.

VEHICLE IDENTIFICATION NUMBER (1981 and LATER MOTORCYCLES)

A unique 17-digit serial, or vehicle identification number (VIN), is assigned to each motorcycle.

The full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the frame backbone at the rear of the steering head. The vehicle identification number (VIN) is also printed on a label on the right front downtube. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase between the front and rear cylinders.

Always give the full 17-digit vehicle identification number (VIN) when ordering parts or making any inquiry about your motorcycle.

ALPHABETICAL INDEX

PART DESCRIPTION ..... PAGE

1987 FXRC MODEL UNIQUE PART LISTING. 365
1988 - 85TH ANNIVERSARY EDITIONS. 369
AIR CLEANER AND CHOKE (1 OF 3). 45
AIR CLEANER AND CHOKE (2 OF 3). 47
AIR CLEANER AND CHOKE (3 OF 3). 49
ALTERNATOR AND REGULATOR. 51
BATTERY. 261
BELTS, CHAINS AND SPROCKETS. 91
C.B. AND INTERCOM SYSTEMS. 303
CALIFORNIA EVAPORATIVE EMISSIONS KIT (1 OF 2). 361
CALIFORNIA EVAPORATIVE EMISSIONS KIT (2 OF 2). 363
CARBURETOR - 1987 TO 1989 (1 OF 3). 31
CARBURETOR - 1987 TO 1989 (2 OF 3). 33
CARBURETOR - 1987 TO 1989 (3 OF 3). 35
CARBURETOR - 1990 AND LATER (1 OF 4). 37
CARBURETOR - 1990 AND LATER (2 OF 4). 39
CARBURETOR - 1990 AND LATER (3 OF 4). 41
CARBURETOR - 1990 AND LATER (4 OF 4). 43
CLUTCH - 1987 TO 1989 (1 OF 2). 81
CLUTCH - 1987 TO 1989 (2 OF 2). 83
CLUTCH - 1990 AND LATER (1 OF 2). 85
CLUTCH - 1990 AND LATER (2 OF 2). 87
CLUTCH CONTROL. 89
CRANKCASE (1 OF 2). 19
CRANKCASE (2 OF 2). 21
CRANKCASE - GEAR SIDE (1 OF 3). 23
CRANKCASE - GEAR SIDE (2 OF 3). 25
CRANKCASE - GEAR SIDE (3 OF 3). 27
CRUISE CONTROL. 191
CYLINDER, HEAD AND VALVES (1 OF 3). 7
CYLINDER, HEAD AND VALVES (2 OF 3). 9
CYLINDER, HEAD AND VALVES (3 OF 3). 11
ELECTRONIC IGNITION SYSTEM (1 OF 2). 53
ELECTRONIC IGNITION SYSTEM (2 OF 2). 55
EXHAUST SYSTEM - FLT MODELS. 255
EXHAUST SYSTEM - FXR AND SOFTAIL MODELS (1 OF 2). 257
EXHAUST SYSTEM - FXR AND SOFTAIL MODELS (2 OF 2). 259
FAIRING LOWERS - ULTRA. 211
FLTC AND FLHTC WITH CHROME POWERTRAIN. . . 367
FOOTBOARDS. 173
FOOTRESTS (1 OF 2). 169
FOOTRESTS (2 OF 2). 171
FORK ROCKERS AND CALIPER MOUNTING - FXSTS. 145
FRAME, REAR FORK AND JIFFY STAND - FLT MODELS (1 OF 2). 151
FRAME, REAR FORK AND JIFFY STAND - FLT MODELS (2 OF 2). 153
FRAME, REAR FORK AND JIFFY STAND - FXR MODELS (1 OF 2). 155
FRAME, REAR FORK AND JIFFY STAND - FXR MODELS (2 OF 2). 157
FRAME, REAR FORK AND JIFFY STAND - SOFTAIL MODELS (1 OF 2). 159
FRAME, REAR FORK AND JIFFY STAND - SOFTAIL MODELS (2 OF 2). 161
FRONT BRAKE CALIPER. 99
FRONT BRAKE CONTROL (1 OF 2). 95
FRONT BRAKE CONTROL (2 OF 2). 97

PART DESCRIPTION ..... PAGE

FRONT FENDERS (1 OF 2). 221
FRONT FENDERS (2 OF 2). 223
FRONT FORK - 1987 FXLR AND FXRS-SP; 1988 AND LATER FXR MODELS (1 OF 2). 131
FRONT FORK - 1987 FXLR AND FXRS-SP; 1988 AND LATER FXR MODELS (2 OF 2). 133
FRONT FORK - 1987 FXR AND FXRS. 129
FRONT FORK - 1987 FXRT. 135
FRONT FORK - FLST (1 OF 2). 139
FRONT FORK - FLST (2 OF 2). 141
FRONT FORK - FLT MODELS. 127
FRONT FORK - FXST/C. 137
FRONT FORK - FXSTS. 143
FRONT FORK AIR CONTROL - FLT MODELS. 147
FRONT FORK AIR CONTROL - FXRT AND FXRS-SP. . 149
FRONT TURN SIGNALS - FXR, FXRS, FXLR AND SOFTAIL MODELS (1 OF 2). 275
FRONT TURN SIGNALS - FXR, FXRS, FXLR AND SOFTAIL MODELS (2 OF 2). 277
FRONT WHEEL (1 OF 2). 101
FRONT WHEEL (2 OF 2). 103
FUEL TANK - FLT MODELS - 1987 AND 1988. 237
FUEL TANK - FLT MODELS - 1989 AND LATER. 239
FUEL TANK - FXR MODELS. 241
FUEL TANK - SOFTAIL MODELS. 245
FUEL TANK INSTRUMENTS - FXR MODELS. 243
FUEL TANK TRIM (1 OF 2). 247
FUEL TANK TRIM (2 OF 2). 249
GEAR SHIFTER (1 OF 2). 69
GEAR SHIFTER (2 OF 2). 71
HANDLEBAR (1 OF 2). 185
HANDLEBAR (2 OF 2). 187
HANDLEBAR SWITCHES (1 OF 2). 307
HANDLEBAR SWITCHES (2 OF 2). 309
HEADLAMP (1 OF 2). 213
HEADLAMP (2 OF 2). 215
HORNS AND MIRRORS (1 OF 2). 283
HORNS AND MIRRORS (2 OF 2). 285
INNER FAIRING, RADIO CADDY AND GAUGES - FLT MODELS (1 OF 2). 199
INNER FAIRING, RADIO CADDY AND GAUGES - FLT MODELS (2 OF 2). 201
INSTRUMENTS - FLT MODELS. 263
INSTRUMENTS - FXR AND FXLR. 267
INSTRUMENTS - FXRS AND FXRS-SP. 265
INSTRUMENTS - FXRT. 269
INSTRUMENTS - SOFTAIL MODELS (1 OF 2). 271
INSTRUMENTS - SOFTAIL MODELS (2 OF 2). 273
LAMPS AND SPEAKER HOUSINGS - ULTRA TOUR-PAK. 179
LICENSE PLATE BRACKET. 229
LUGGAGE BOX (KING TOUR-PAK) (1 OF 2). 175
LUGGAGE BOX (KING TOUR-PAK) (2 OF 2). 177
MISCELLANEOUS ELECTRICAL (1 OF 3). 291
MISCELLANEOUS ELECTRICAL (2 OF 3). 293
MISCELLANEOUS ELECTRICAL (3 OF 3). 295
OIL PUMP. 29
OIL TANK (1 OF 2). 251
OIL TANK (2 OF 2). 253

ALPHABETICAL INDEX

PART DESCRIPTION ..... PAGE


PASSING LAMPS AND FRONT TURN SIGNALS - FLHT/C, FLHS AND FLSTC (1 OF 2). 217
PASSING LAMPS AND FRONT TURN SIGNALS - FLHT/C, FLHS AND FLSTC (2 OF 2). 219
PISTONS, CONNECTING RODS AND FLYWHEELS. . . 17
PRIMARY HOUSING (1 OF 2). 233
PRIMARY HOUSING (2 OF 2). 235
REAR BELT GUARD. 93
REAR BRAKE CALIPER (1 OF 2). 119
REAR BRAKE CALIPER (2 OF 2). 121
REAR BRAKE CONTROL - FLST MODELS (1 OF 2). . 115
REAR BRAKE CONTROL - FLST MODELS (2 OF 2). . 117
REAR BRAKE CONTROL - FLT MODELS. 105
REAR BRAKE CONTROL - FXR MODELS (1 OF 2). . . 107
REAR BRAKE CONTROL - FXR MODELS (2 OF 2). . . 109
REAR BRAKE CONTROL - FXST MODELS (1 OF 2). . 111
REAR BRAKE CONTROL - FXST MODELS (2 OF 2). . 113
REAR FENDER SUPPORTS. 231
REAR FENDERS (1 OF 2). 225
REAR FENDERS (2 OF 2). 227
REAR WHEEL (1 OF 2). 123
REAR WHEEL (2 OF 2). 125
RIDER TOOLS - FLT MODELS. 329
ROCKER ARMS, COVERS AND PUSH RODS - V2 EVOLUTION (1 OF 2). 13
ROCKER ARMS, COVERS AND PUSH RODS - V2 EVOLUTION (2 OF 2). 15
SADDLEBAG GUARDS - FLT MODELS. 327
SADDLEBAGS - FLSTC. 325
SADDLEBAGS - FLT MODELS. 319
SADDLEBAGS - FXRS-CON. 323
SADDLEBAGS - FXRT. 321
SEAT AND LUGGAGE RACK - FLT MODELS. 163
SEATS AND SISSY BAR - FXR MODELS. 165
SEATS AND SISSY BAR - SOFTAIL MODELS. 167
SHOCK ABSORBERS - AIR AND HYDRAULIC. 181
SHOCK ABSORBERS - SOFTAIL MODELS. 183
SIDECAR - ULTRA. 357
SIDECAR BODY AND CHASSIS - TLE AND RLE (1 OF 3). 331
SIDECAR BODY AND CHASSIS - TLE AND RLE (2 OF 3). 333
SIDECAR BODY AND CHASSIS - TLE AND RLE (3 OF 3). 335
SIDECAR BRAKE - TLE AND RLE (1 OF 2). 343
SIDECAR BRAKE - TLE AND RLE (2 OF 2). 345
SIDECAR CONNECTION KIT - RLE (1 OF 2). 339
SIDECAR CONNECTION KIT - RLE (2 OF 2). 341

PART DESCRIPTION ..... PAGE

SIDECAR CONNECTION KIT - TLE. 337
SIDECAR FENDER - TLE AND RLE (1 OF 2). 347
SIDECAR FENDER - TLE AND RLE (2 OF 2). 349
SIDECAR TAIL LAMP - TLE AND RLE. 351
SIDECAR TURN SIGNAL - TLE AND RLE. 353
SIDECAR WHEEL - TLE AND RLE. 355
SOUND SYSTEM - 1988 AND LATER (1 OF 2). 299
SOUND SYSTEM - 1988 AND LATER (2 OF 2). 301
SOUND SYSTEM 1987. 297
SOUND SYSTEM ULTRA SIDECAR. 359
STARTER MOTOR - 1987 AND 1988 (1 OF 2). 59
STARTER MOTOR - 1987 AND 1988 (2 OF 2). 61
STARTER MOTOR AND SHAFT - 1989 AND LATER (1 OF 3). 63
STARTER MOTOR AND SHAFT - 1989 AND LATER (2 OF 3). 65
STARTER MOTOR AND SHAFT - 1989 AND LATER (3 OF 3). 67
STARTER SHAFT AND HOUSING - 1987 AND 1988. . . 57
STARTER SOLENOID - 1987 AND 1988. 305
SWITCHES AND CIRCUIT BREAKERS - FLT MODELS (1 OF 2). 311
SWITCHES AND CIRCUIT BREAKERS - FLT MODELS (2 OF 2). 313
SWITCHES AND CIRCUIT BREAKERS - FXR MODELS. 315
SWITCHES AND CIRCUIT BREAKERS - SOFTAIL MODELS. 317
TAIL LAMP AND REAR TURN SIGNALS (1 OF 2). 279
TAIL LAMP AND REAR TURN SIGNALS (2 OF 2). 281
THROTTLE CONTROL. 189
TRANSMISSION GEARS. 79
TRANSMISSION HOUSING (1 OF 3). 73
TRANSMISSION HOUSING (2 OF 3). 75
TRANSMISSION HOUSING (3 OF 3). 77
WINDSHIELD - FLHS AND FLSTC. 207
WINDSHIELD AND FAIRING - FXRT (1 OF 2). 203
WINDSHIELD AND FAIRING - FXRT (2 OF 2). 205
WINDSHIELD FXRS-CON. 209
WINDSHIELD, FAIRING AND LAMPS - FLTC (1 OF 2). . 193
WINDSHIELD, FAIRING AND LAMPS - FLTC (2 OF 2). . 195
WINDSHIELD, FAIRING, HEADLAMP AND NACELLE - FLHT/C AND FLHS. 197
WIRING (1 OF 2). 287
WIRING (2 OF 2). 289

REFERENCE MATERIAL

NUMERICAL INDEX 370

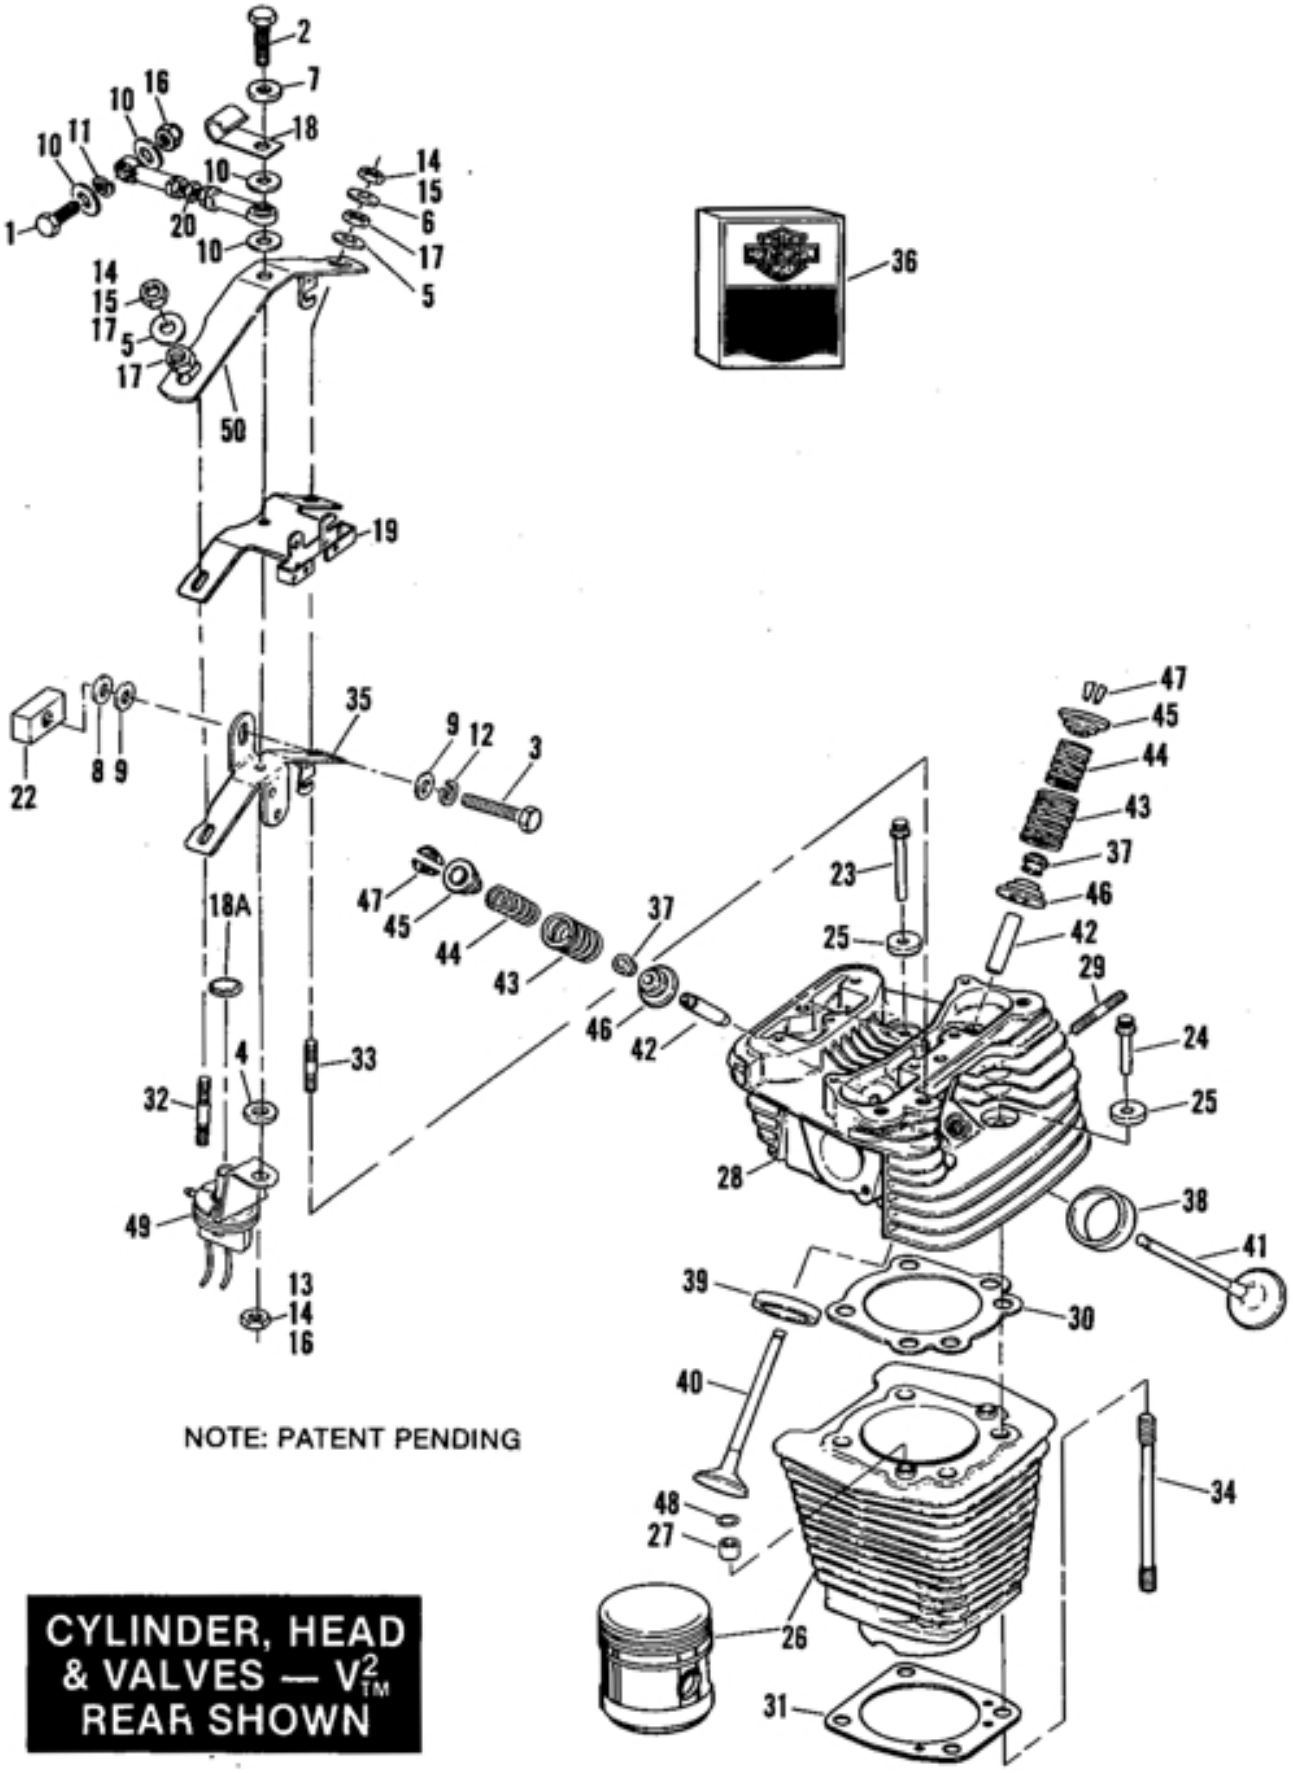


CYLINDER, HEAD & VALVES — V²™ REAR SHOWN

CYLINDER, HEAD AND VALVES (1 of 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4337W	SCREW (1)	Touring: 87 to 89-ALL
1	4355	SCREW (1)	Touring: 90 to 90-ALL
2	4411	BOLT (1)	Touring: 87 to 90-ALL
2	4721	BOLT (2)	FXR: 87 to 90-ALL
3	4726	BOLT (1)	Softail: 87 to 90-ALL
4	6016	WASHER (1)	Softail: 87 to 90-ALL
5	6019	WASHER (2)	ALL
6	6379W	WASHER (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
7	6400HB	WASHER (1)	FXR: 87 to 90-ALL
8	6497HW	WASHER, as req'd (1)	Softail: 87 to 90-ALL
9	6516HW	WASHER, as req'd (1)	Softail: 87 to 90-ALL
10	6701	WASHER, 2-87 (3)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
11	7038	LOCKWASHER (1)	Touring: 87 to 89-ALL
12	7039	LOCKWASHER (1)	Softail: 87 to 90-ALL
13	7739	LOCKNUT (1)	Softail: 87 to 90-ALL
14	7775	LOCKNUT, 2-FLT (1)	ALL
15	7776W	LOCKNUT (1)	ALL
16	7778	LOCKNUT, 2-FXR (1)	FXR: 87 to 90-ALL Touring: 90 to 90-ALL
17	7800W	NUT, 2-Softail (1)	ALL
18	10003	CLAMP (1)	FXR: 90 to 90-ALL Touring: 87 to 89-ALL
18A	11192	RETAINING RING (1)	Touring: 90 to 90-ALL
18A	16101-90	ENGINE ASSY., comp. (1340 cc), N/A (1)	Touring: 90 to 90-FA
18A	16103-90	ENGINE ASSY., comp. (1340 cc) (Cal. only), N/A (1)	Touring: 90 to 90-FA
18A	16105-90	ENGINE ASSY., comp. (1340 cc), N/A (1)	Softail: 90 to 90-BM
18A	16106-90	ENGINE ASSY., comp. (1340 cc) (Cal. only), N/A (1)	Softail: 90 to 90-BM
18A	16108-90	ENGINE ASSY., comp. (1340 cc) (1)	Softail: 90 to 90-BH/J
18A	16109-90	ENGINE ASSY., comp. (1340 cc) (Cal. only), N/A (1)	Softail: 90 to 90-BH/J
18A	16114-90	ENGINE ASSY., comp. (1340 cc) (1)	FXR: 90 to 90-EA/C/G/M
18A	16121-90	ENGINE ASSY., comp. (1340 cc) (C and BW), N/A (1)	Softail: 90 to 90-BJ/K/L
18A	16124-90	ENGINE ASSY., comp. (1340 cc) (C and BW), N/A (1)	FXR: 90 to 90-EB/L
18A	16125-90	ENGINE ASSY., comp. (1340 cc) (C and BW), N/A (1)	Touring: 90 to 90-DB/J/M/P
18A	16126-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (Cal. only), N/A (1)	Softail: 90 to 90-BJ/K/L
18A	16127-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (Cal. only), N/A (1)	Touring: 90 to 90-DB/J/M/P
18A	16128-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (Cal. only), N/A (1)	FXR: 90 to 90-EA/C/GM
18A	16131-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (Cal. only), N/A (1)	FXR: 90 to 90-EB/L
19	16216-83D	BRACKET, engine mounting (1)	FXR: 87 to 89-ALL
19	16216-90	BRACKET, engine mounting (1)	FXR: 90 to 90-ALL
20	16219-79A	STABLIZER LINK, top (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

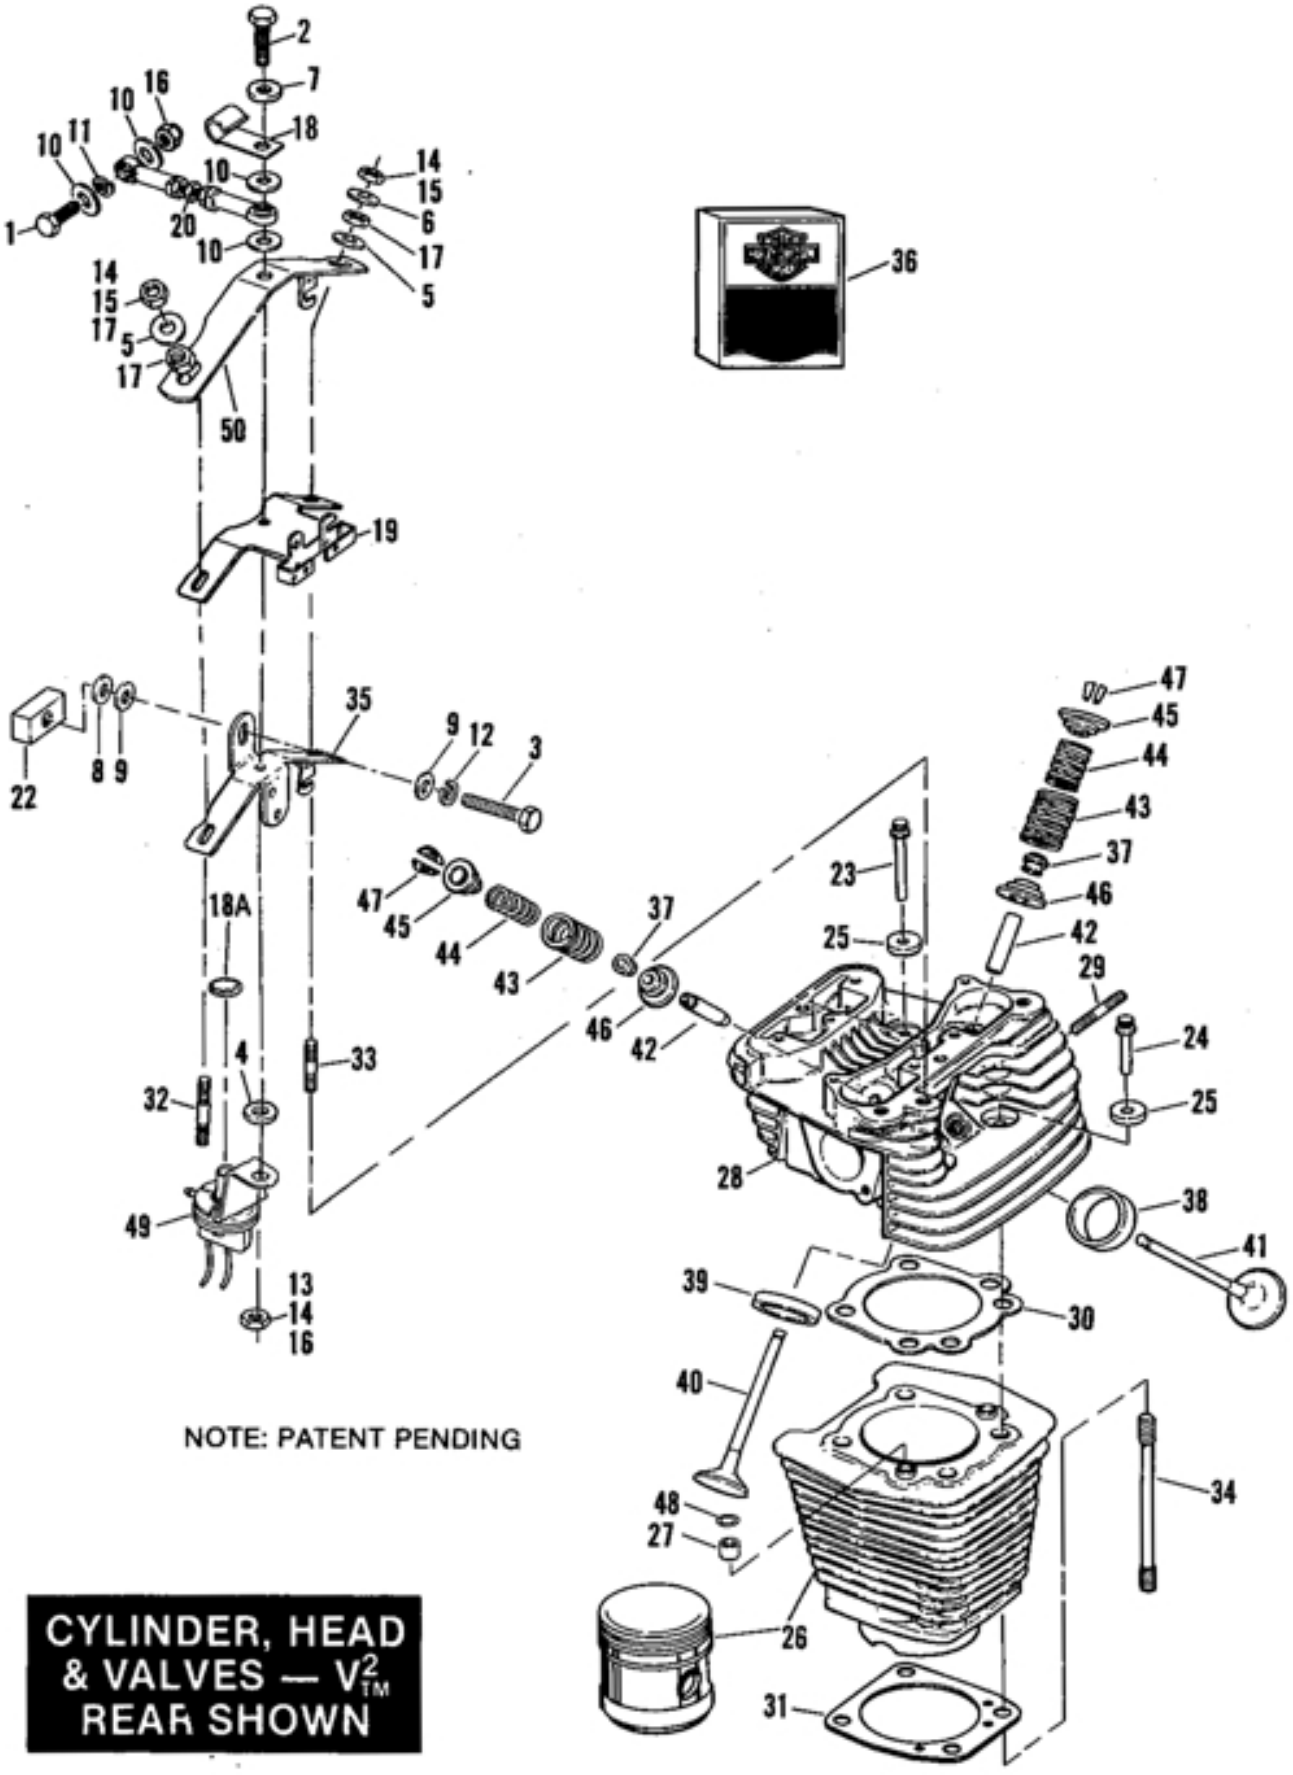


CYLINDER, HEAD & VALVES — V²™ REAR SHOWN

CYLINDER, HEAD AND VALVES (2 of 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	16284-84	MOUNTING BLOCK (1)	Softail: 87 to 90-ALL
23	16478-85A	SCREW, internal thread (4)	ALL
24	16480-85A	SCREW, internal thread (4)	ALL
25	16482-85	WASHER (8)	ALL
26	16510-83A	CYLINDER W/PISTON (2)	FXR: 87-EB; 87 to 90-EA/C/G/M Softail: 87 to 90-BH/J/M Touring: 87 to 90-ALL
26	16512-86A	CYLINDER W/PISTON, blk wrinkle (2)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
27	16573-83	INSERT, cylinder stud (4)	ALL
28	16690-85B	HEAD, rear cyl. w/guides and seats (1)	FXR: 87-EB; 87 to 90-EA/C/G/M Softail: 87 to 90-BH/J/M Touring: 87 to 90-ALL
28	16691-85C	HEAD, front cyl. w/guides and seats (1)	FXR: 87-EB; 87 to 90-EA/C/G/M Softail: 87 to 90-BH/J/M Touring: 87 to 90-ALL
28	16692-85C	HEAD, front cyl. w/guides and seats (blk wrkl) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
28	16696-85B	HEAD, rear cyl. w/guides and seats (blk wrkl) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
29	16715-83	STUD, exhaust port (4)	ALL
30	16770-84B	GASKET, cylinder head (2)	ALL
31	16774-86B	GASKET, cylinder base (2)	ALL
32	16830-29A	STUD, eng. mtg. bracket (short) (1)	ALL
33	16831-83	STUD, eng. mtg. bracket (long) (1)	ALL
34	16837-85A	STUD, cylinder base (8)	ALL
35	16852-83A	BRACKET, engine mounting (1)	Softail: 87 to 89-ALL
35	16852-90	BRACKET, engine mounting (1)	Softail: 90 to 90-ALL
36	17033-83A	GASKET KIT, top overhaul (1)	ALL
36	17035-83B	GASKET KIT, engine overhaul (1)	ALL
37	18001-83A	SEAL, valve (4)	ALL
38	18011-86	INSERT, exhaust valve seat (2)	ALL
38	18124-83	INSERT, exhaust valve seat-0.005 O.S. (2)	ALL
39	18020-83	INSERT, intake valve seat (2)	ALL
39	18134-83	INSERT, intake valve seat-0.005 O.S. (2)	ALL
40	18074-83A	INTAKE VALVE (2)	ALL
40	18076-83	INTAKE VALVE, 0.03 short (2)	ALL
41	18082-83	EXHAUST VALVE (2)	ALL
41	18087-83	EXHAUST VALVE, 0.03 short (2)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

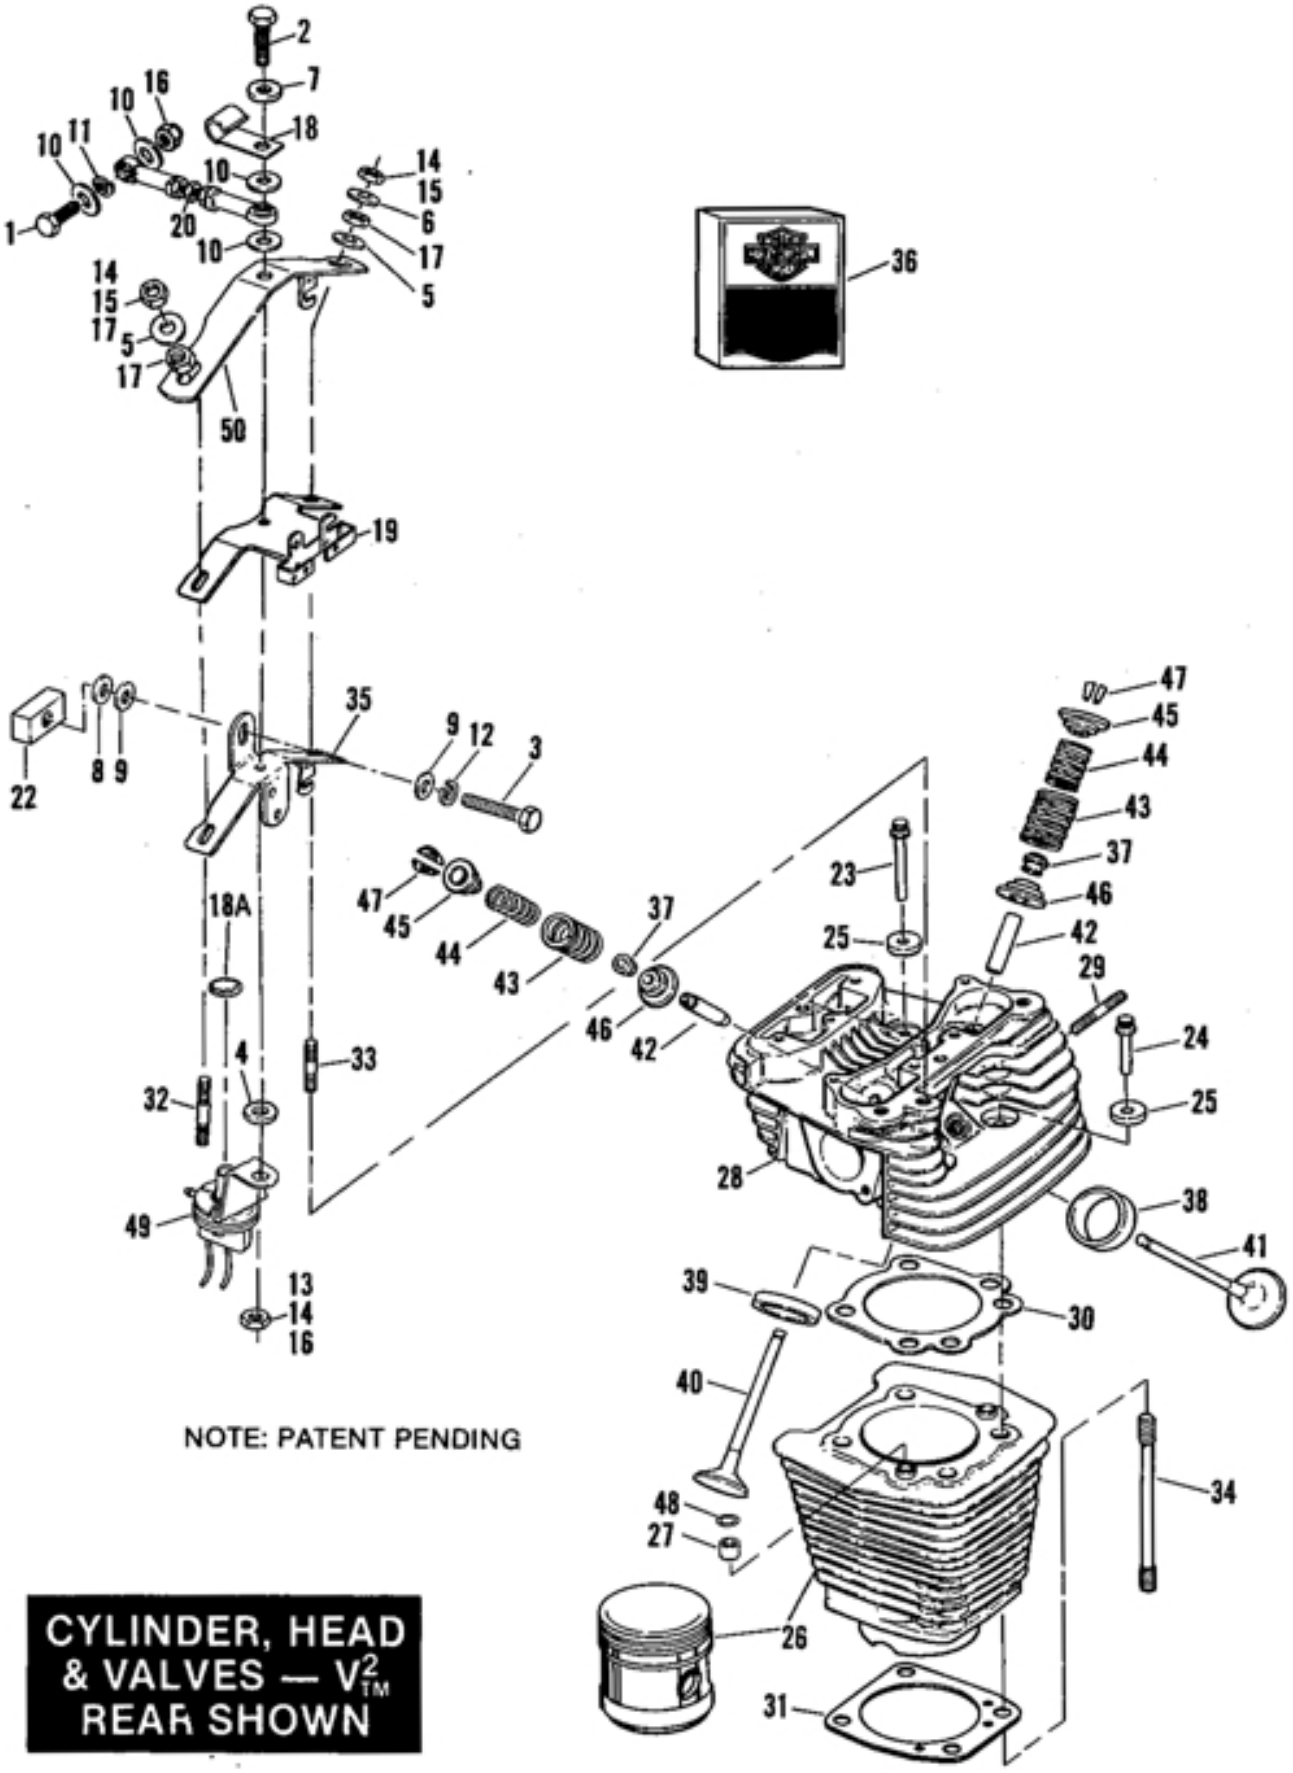

CYLINDER, HEAD & VALVES — V²™ REAR SHOWN


CYLINDER, HEAD AND VALVES (3 of 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
42	18130-83C	VALVE GUIDE, int. and exh.-0.001 O.S. (4)	ALL
42	18131-83C	VALVE GUIDE, int. and exh.-0.003 O.S. (4)	ALL
42	18133-83A	VALVE GUIDE, int. and exh.-0.002 O.S. (4)	ALL
43	18201-83	VALVE SPRING, outer (4)	ALL
44	18202-83	VALVE SPRING, inner (4)	ALL
45	18219-83	COLLAR, valve spring-upper (4)	ALL
46	18222-83	COLLAR, valve spring-lower (4)	ALL
47	18229-83	RETAINER, valve collar (8)	ALL
48	26432-76A	O-RING, cylinder stud insert (4)	ALL
49	26555-84	VACUUM SWITCH, carburetor (1)	Touring: 87 to 89-ALL
49	26555-90	VACUUM SWITCH, carburetor (1)	Touring: 90 to 90-ALL
49	26557-83	VACUUM SWITCH, carburetor (1)	FXR: 87 to 90-ALL
49	26558-84	VACUUM SWITCH, carburetor (1)	Softail: 87 to 90-ALL
50	47169-83A	BRACKET, engine mounting (1)	Touring: 87 to 89-ALL
50	47169-90	BRACKET, engine mounting (1)	Touring: 90 to 90-ALL
		INTERNATIONAL MODELS ONLY	
	16107-90	ENGINE ASSY., comp. (1340 cc) (HDI only), N/A (1)	Softail: 90 to 90-BH/J
	16115-90	ENGINE ASSY., comp. (1340 cc) (HDI only), N/A (1)	FXR: 90 to 90-EA/C/G/M
	16120-90	ENGINE ASSY., comp. (1340 cc) (HDI only), N/A (1)	Softail: 90 to 90-BM
	16122-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (HDI only), N/A (1)	Softail: 90 to 90-BJ/K/L
	16123-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (HDI only), N/A (1)	FXR: 90 to 90-EB/L
	16135-90	ENGINE ASSY., comp. (1340 cc) (HDI only), N/A (1)	Touring: 90 to 90-FA
	16136-90	ENGINE ASSY., comp. (1340 cc) (C and BW) (HDI only), N/A (1)	Touring: 90 to 90-DB/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

ROCKER ARMS, COVER & PUSHROD — V^2_{TM}

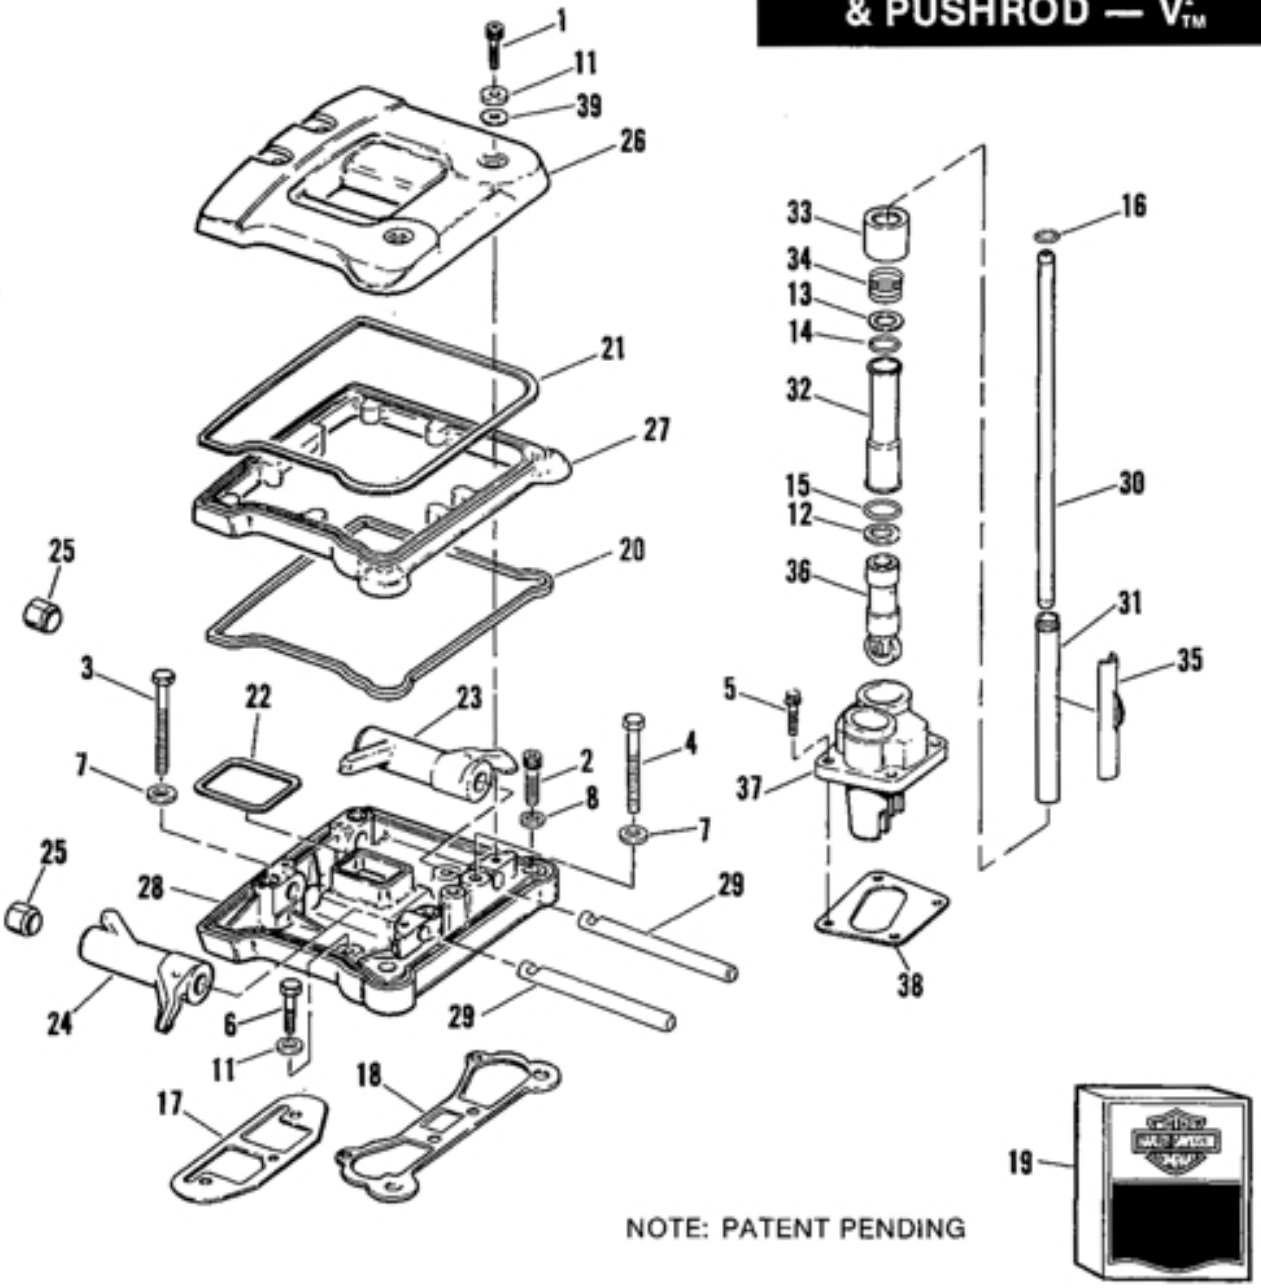

NOTE: PATENT PENDING


ROCKER ARMS, COVERS AND PUSH RODS - V2 EVOLUTION (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	852	SCREW (8)	ALL
2	3481	SCREW (4)	ALL
3	3500	BOLT (4)	ALL
4	3501	BOLT (4)	ALL
5	3770	SCREW (8)	ALL
6	3997	BOLT (6)	ALL
7	6016	WASHER (8)	ALL
8	6099	WASHER (4)	ALL
11	6736	WASHER (14)	ALL
12	6737	WASHER (1)	ALL
13	6762B	WASHER (4)	ALL
14	11132	O-RING, push rod cover (1)	ALL
15	11145	QUAD SEAL, push rod cover (1)	ALL
16	11157	O-RING (1)	ALL
17	16778-84A	GASKET, cylinder head-right (2)	ALL
18	16779-84A	GASKET, cylinder head-left (2)	ALL
19	17033-83A	GASKET KIT, top overhaul (1)	ALL
19	17035-83B	GASKET KIT, engine overhaul (1)	ALL
20	17355-84A	GASKET, rocker cover-lower (2)	ALL
21	17356-84A	GASKET, rocker cover-upper (2)	ALL
22	17358-84A	GASKET, rocker cover-inner (2)	ALL
23	17360-83	ROCKER ARM, front intake, rear exhaust (2)	ALL
24	17375-83	ROCKER ARM, rear intake, front exhaust (2)	ALL
25	17428-57	BUSHING, rocker arm (8)	ALL
26	17503-84B	ROCKER COVER, outer (2)	FXR: 87-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J Touring: 87 to 90-ALL
26	17528-84A	ROCKER COVER, outer (chrome) (2)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L/M Touring: 87 to 90-DB/J/M/P
27	17510-84	SPACER, rocker covers (2)	FXR: 87-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J Touring: 87 to 90-ALL
27	17529-84A	SPACER, rocker covers (chrome) (2)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
27	17539-90	SPACER, rocker covers (yellow) (2)	Softail: 90 to 90-BM
28	17521-84B	ROCKER COVER, inner (2)	FXR: 87-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J Touring: 87 to 90-ALL
28	17530-84B	ROCKER COVER, inner (chrome) (2)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L/M Touring: 87 to 90-DB/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

ROCKER ARMS, COVER & PUSHROD — V^2_{TM}

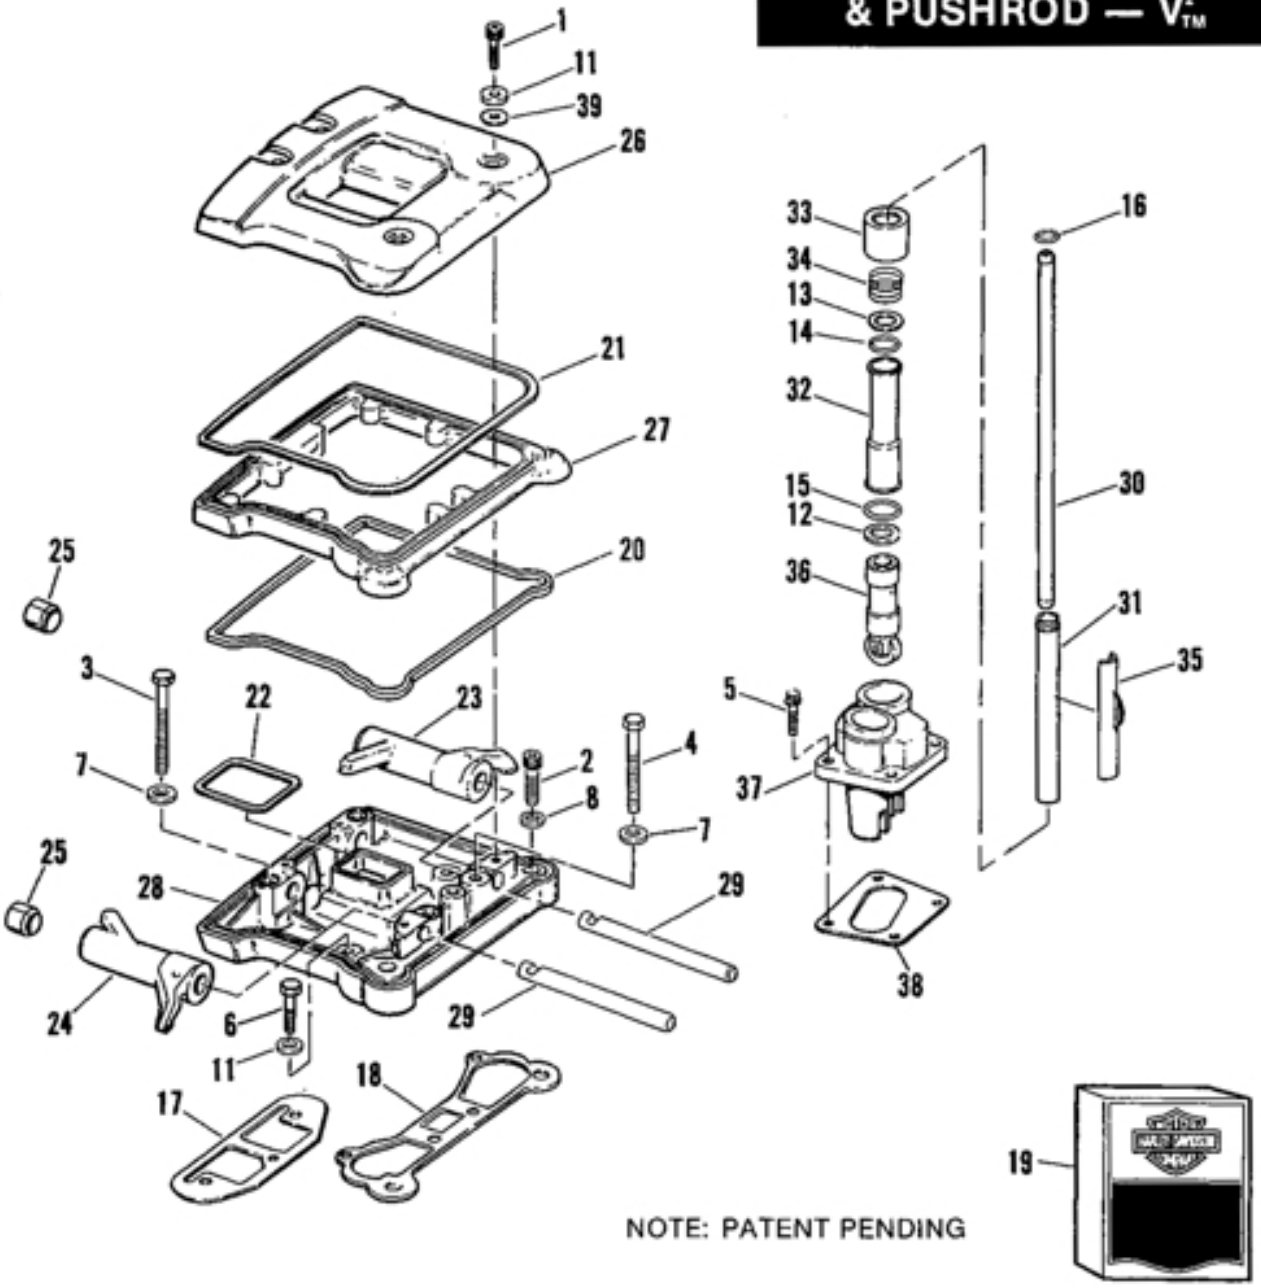

NOTE: PATENT PENDING


ROCKER ARMS, COVERS AND PUSH RODS - V2 EVOLUTION (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	17611-83	SHAFT, rocker arm (4)	ALL
30	17921-83	PUSH ROD, rear exhaust-11.210 inches long (1)	ALL
30	17924-83	PUSH ROD, rear intake-11.045 inches long (1)	ALL
30	17927-83	PUSH ROD, front exhaust-11.325 inches long (1)	ALL
30	17930-83	PUSH ROD, front intake-11.090 inches long (1)	ALL
31	17935-79B	COVER, push rod-upper (4)	ALL
32	17938-83	COVER, push rod-lower (4)	ALL
33	17945-36B	CAP, cover spring (4)	ALL
34	17947-36	SPRING, push rod cover (4)	ALL
35	17950-66	RETAINER, spring cap (4)	ALL
36	18523-86	TAPPET, w/roller (4)	ALL
37	18540-83A	TAPPET GUIDE, rear (1)	FXR: 87-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J/M Touring: 87 to 90-ALL
37	18622-85A	TAPPET GUIDE, rear (black wrinkle) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
37	18542-83A	TAPPET GUIDE, front (1)	FXR: 87 to 90-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J/M Touring: 87 to 90-ALL
37	18623-85A	TAPPET GUIDE, front (black wrinkle) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
38	18633-48D	GASKET, tappet guide-rear (1)	ALL
38	18634-48C	GASKET, tappet guide-front (1)	ALL
39	63858-49	WASHER (8)	ALL

PATENT PENDING

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

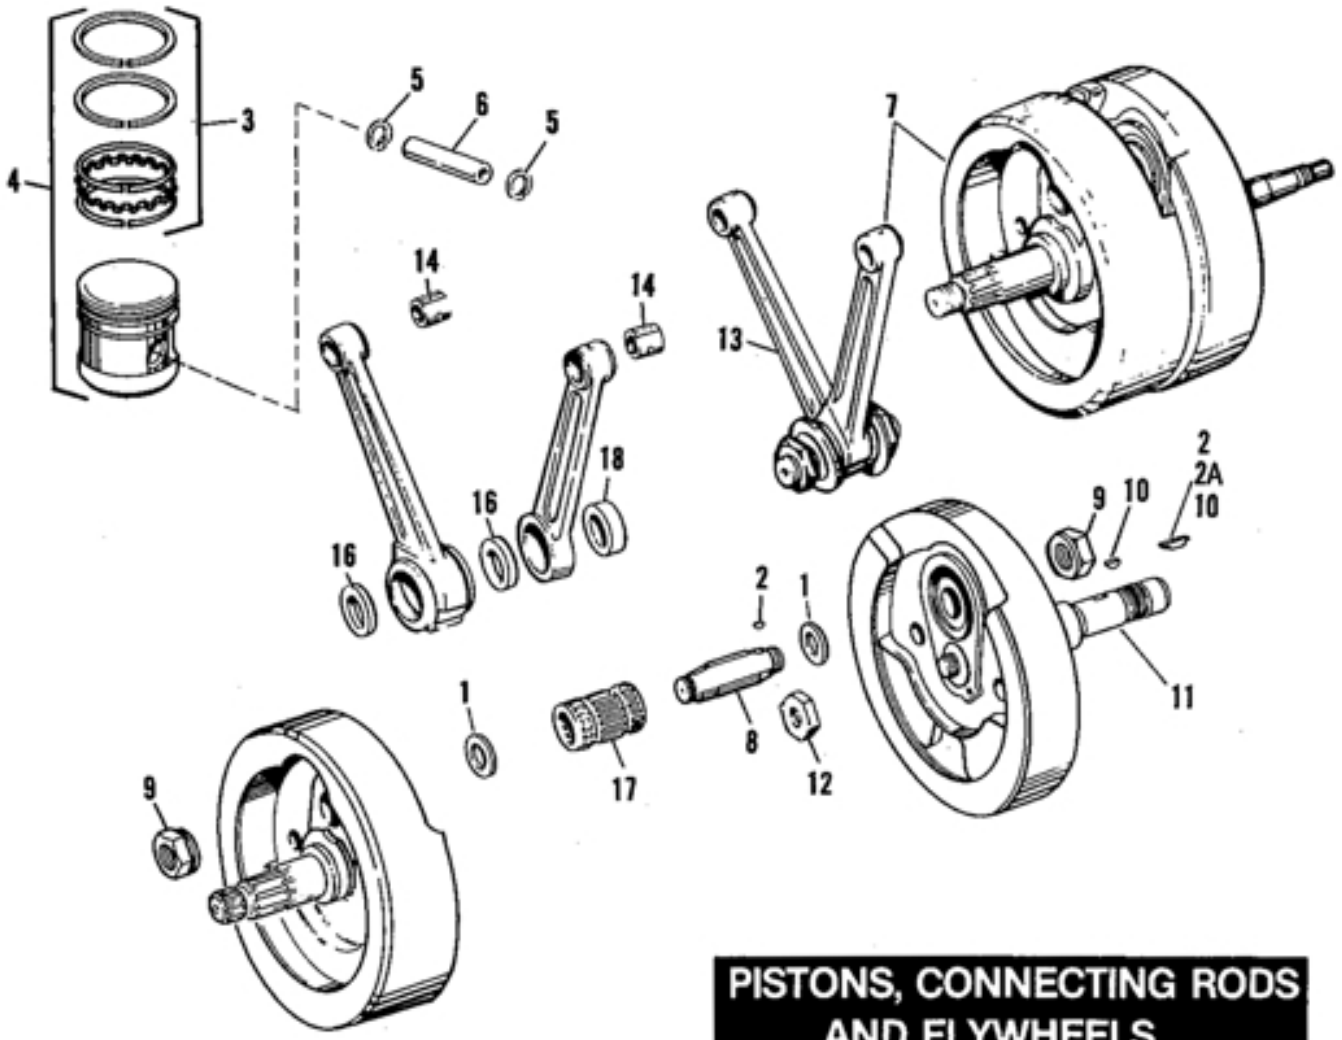


PISTONS, CONNECTING RODS AND FLYWHEELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6506	WASHER, bronze (2)	ALL
2	11218	KEY, crank pin and gearshaft (2-1987 and 1988) (1)	ALL
2A	11219	T-KEY (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
3	21920-83	PISTON RING SET, std. (2)	ALL
3	21921-83	PISTON RING SET, 0.005 inch O.S. (2)	ALL
3	21922-83	PISTON RING SET, 0.010 inch O.S. (2)	ALL
3	21923-83	PISTON RING SET, 0.020 inch O.S. (2)	ALL
3	21924-83	PISTON RING SET, 0.030 inch O.S. (2)	ALL
4	21940-83	PISTON AND RINGS ASSY., std. (2)	ALL
4	21941-83	PISTON AND RINGS ASSY., 0.005 inch O.S. (2)	ALL
4	21942-83	PISTON AND RINGS ASSY., 0.010 inch O.S. (2)	ALL
4	21943-83	PISTON AND RINGS ASSY., 0.020 inch O.S. (2)	ALL
4	21944-83	PISTON AND RINGS ASSY., 0.030 inch O.S. (2)	ALL
5	22589-83A	LOCK RING, piston pin (4)	ALL
6	22764-83	PISTON PIN (2)	ALL
7	23906-87A	SET OF FLYWHEELS AND SHAFTS W/RODS (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
7	23906-90	SET OF FLYWHEELS AND SHAFTS W/RODS (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
8	23961-80A	CRANK PIN, std. (1)	ALL
8	23974-87	CRANK PIN, 0.001 inch O.S. (1)	ALL
8	23974-87	CRANK PIN, 0.002 inch O.S. (1)	ALL
9	23969-83	NUT, crank pin (2)	ALL
10	23985-54	KEY, gear shaft pinion (2-1989) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
11	24006-87	GEAR SHAFT, std. (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
11	24020-87	GEAR SHAFT, 0.001 inch O.S. (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
11	24021-87	GEAR SHAFT, 0.002 inch O.S. (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
12	24016-80	NUT, gear shaft (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
13	24281-83	SET OF RODS W/BRGS. AND CRANK PIN (1)	ALL
14	24334-36	BUSHING, piston pin-0.002 inch O.S. (2)	ALL
14	24335-36	BUSHING, piston pin-0.010 inch O.S. (2)	ALL
16	24345-36A	BUSHING, rear conn. rod-lower (2)	ALL
17	24346-87A	BEARING SET (1)	ALL
18	24356-36A	BUSHING, front conn. rod-lower (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CRANKCASE

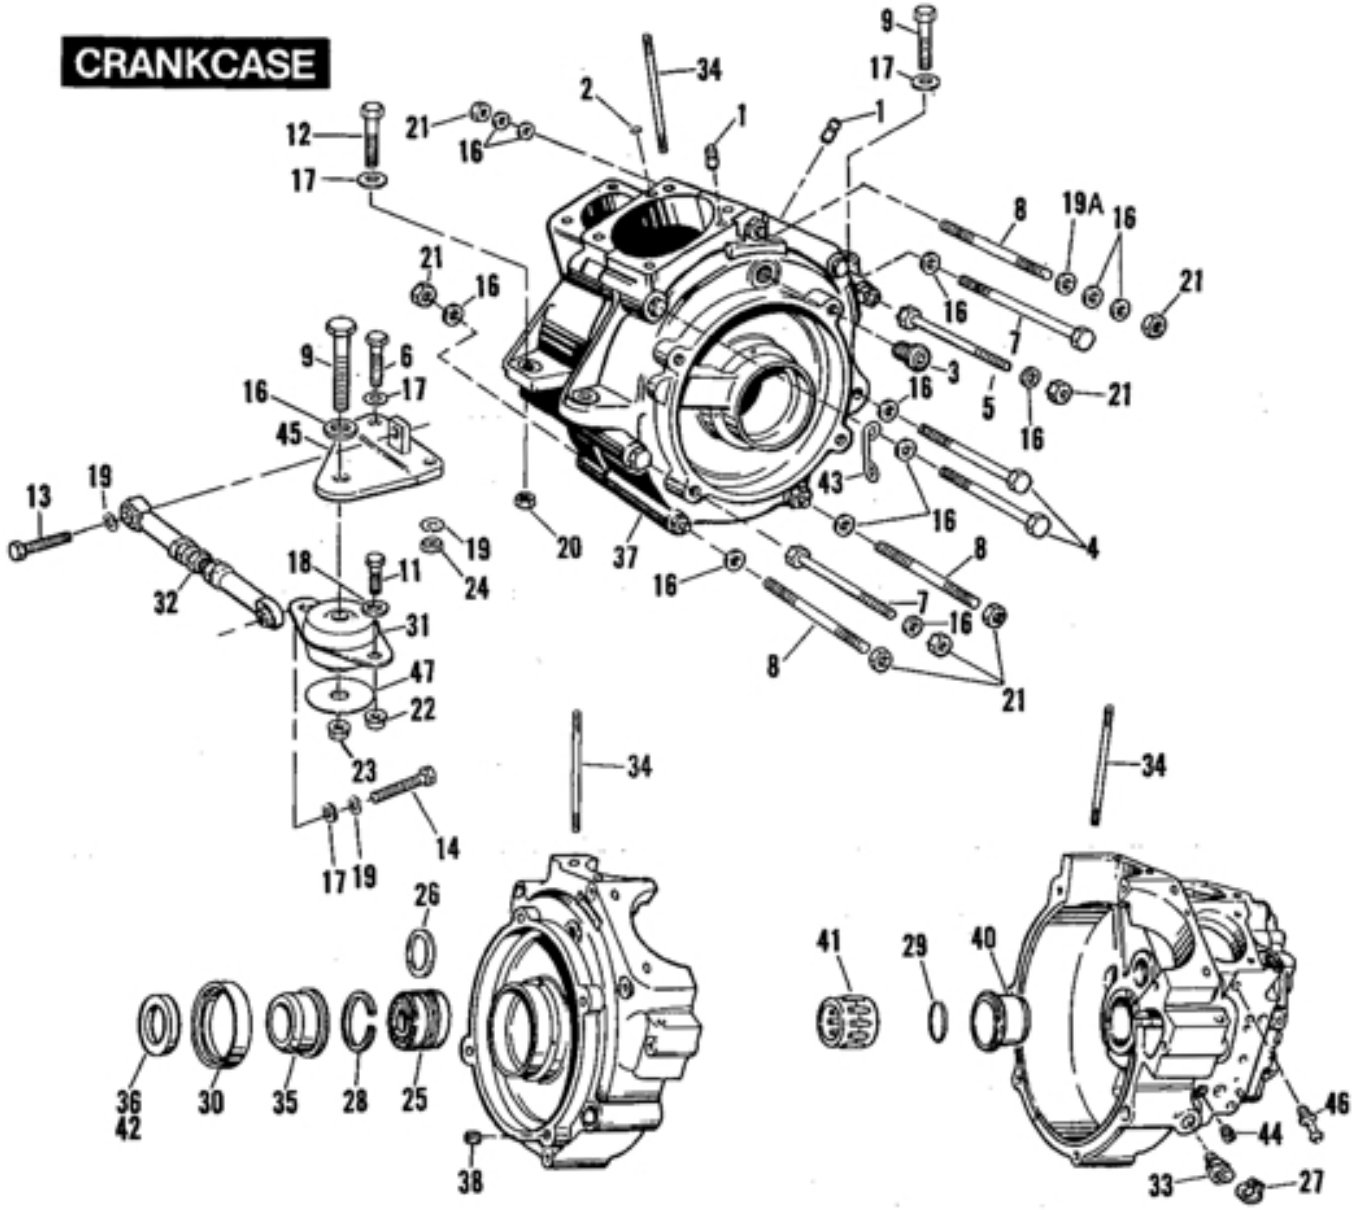
9
17
34
2
1
1
12
21
16
17
8
19A
16
21
16
16
7
3
5
16
21
16
9
6
17
16
45
43
16
4
13
19
19
24
20
37
18
11
32
16
8
7
16
8
21
31
47
22
23
14
17
19
34
34
26
41
29
40
36
42
30
35
28
25
38
46
44
33
27


CRANKCASE (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	358	DOWEL PIN (2)	ALL
2	653	EXPANSION PLUG (1)	ALL
3	720	PLUG, timing hole (1)	ALL
4	3427	BOLT (2)	ALL
5	3430	BOLT (1)	ALL
7	3504	BOLT (2)	ALL
8	3506	STUD (3)	ALL
9	3512	BOLT (2)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
9	3528	BOLT (2)	FXR: 88 to 90-ALL Touring: 88 to 90-ALL
10	3554	BOLT (2)	ALL
11	4319	BOLT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
12	4416	BOLT (2)	Softail: 87 to 90-ALL
13	4716W	SCREW (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
14	4721	BOLT (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
14	4724	BOLT (1)	Touring: 87 and 88-ALL
16	6016	WASHER, 16-Softail (18)	ALL
17	6019	WASHER (6)	ALL
19	7038	LOCKWASHER (4)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
19A	7232	LOCKWASHER (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
20	7506	NUT (4)	Softail: 87 to 90-ALL
21	7753	NUT (9)	ALL
22	7780	LOCKNUT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
23	7782	LOCKNUT (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
24	7783	NUT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
25	9028	BEARING ASSY., sprocket shaft (1)	ALL
26	9110	SHIM, brg. assy. 0.0905-.0895 inch (1)	ALL
26	9120	SHIM, brg. assy. 0.0925-.0915 inch (1)	ALL
26	9121	SHIM, brg. assy. 0.0945-.0935 inch (1)	ALL
26	9122	SHIM, brg. assy. 0.0965-.0955 inch (1)	ALL
26	9123	SHIM, brg. assy. 0.0985-.0975 inch (1)	ALL
26	9124	SHIM, brg. assy. 0.1005-.0995 inch (1)	ALL
26	9125	SHIM, brg. assy. 0.1025-.1015 inch (1)	ALL
26	9126	SHIM, brg. assy. 0.1045-.1035 inch (1)	ALL
26	9127	SHIM, brg. assy. 0.1065-.1055 inch (1)	ALL
26	9128	SHIM, brg. assy. 0.1085-.1075 inch (1)	ALL
26	9129	SHIM, brg. assy. 0.1105-.1095 inch (1)	ALL
26	9130	SHIM, brg. assy. 0.1125-.1115 inch (1)	ALL
26	9131	SHIM, brg. assy. 0.1145-.1135 inch (1)	ALL
26	9132	SHIM, brg. assy. 0.1165-.1155 inch (1)	ALL
26	9133	SHIM, brg. assy. 0.1185-.1175 inch (1)	ALL
26	9134	SHIM, brg. assy. 0.1205-.1195 inch (1)	ALL
27	10080	CLAMP (1)	ALL
28	11160A	RETAINING RING, brg.-left (1)	ALL
29	11177	RETAINING RING, brg.-right (1)	ALL
30	12026B	OIL SEAL (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CRANKCASE

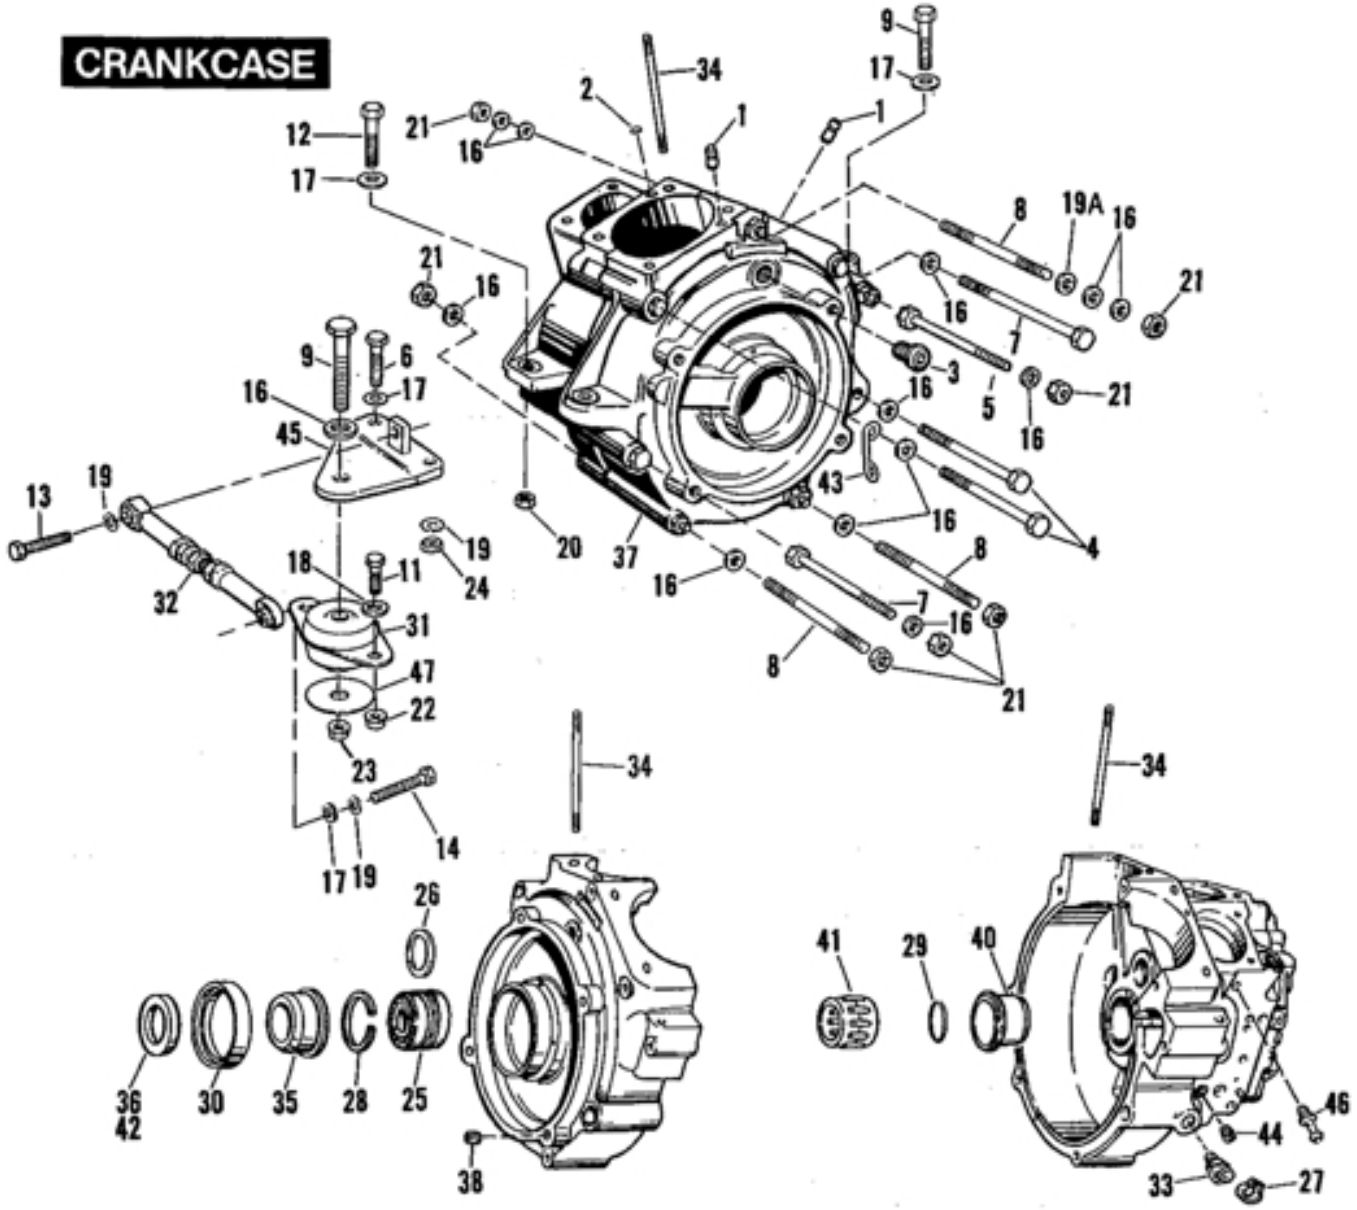
9
17
34
2
1
1
12
21
16
17
8
19A
16
21
16
16
7
3
16
5
16
21
9
6
16
17
45
43
16
4
13
19
19
24
20
37
16
18
11
32
8
7
16
8
21
31
47
22
23
14
17
19
34
34
26
41
29
40
36
42
30
35
28
25
38
46
44
33
27


CRANKCASE (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	16207-79B	ENGINE MOUNT, front (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
32	16219-79A	STABILIZER LINK, lower (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
33	16302-81	FITTING, crankcase (1)	Softail: 87 to 90-ALL
33	16304-87	FITTING, crankcase (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
34	16837-85A	STUD, cylinder base (8)	ALL
35	24002-70	SPACER, sprocket shaft (1)	ALL
36	24032-70	SPACER, sprocket shaft-0.060 inch thk. (1)	ALL
36	24033-70	SPACER, sprocket shaft-0.090 inch thk. (1)	ALL
36	24034-70	SPACER, sprocket shaft-0.120 inch thk. (1)	ALL
36	24035-70	SPACER, sprocket shaft-0.150 inch thk. (1)	ALL
36	24036-70	SPACER, sprocket shaft-0.180 inch thk. (1)	ALL
36	24037-70	SPACER, sprocket shaft-0.210 inch thk. (1)	ALL
37	24473-85B	SET OF CRANKCASES, black wrinkle (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K Touring: 87 to 90-DB/J/M/P
37	24469-83B	SET OF CRANKCASES (1)	FXR: 87 to 90-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/M Touring: 87 to 90-ALL
38	24553-83	INSERT, left crankcase, N/A (4)	ALL
40	24599-58A	BUSHING, right crankcase-std. (1)	ALL
40	24600-58A	BUSHING, right crankcase-0.002 inch O.S. O.D. (1)	ALL
40	24601-58A	BUSHING, right crankcase-0.005 inch O.S. O.D. (1)	ALL
41	24626-87	BEARING SET, gear side (white/grey) (1)	ALL
41	24628-87	BEARING SET, gear side (green) (1)	ALL
41	24641-87	BEARING SET, gear side (red) (1)	ALL
41	24643-87	BEARING SET, gear side (blue) (1)	ALL
42	35850-84	SPACER, sprocket shaft-0.010 inch thk. (1)	ALL
42	35851-84	SPACER, sprocket shaft-0.020 inch thk. (1)	ALL
42	35852-84	SPACER, sprocket shaft-0.030 inch thk. (1)	ALL
43	45095-85	RETAINER, connector plug (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
44	45830-48	PLUG, crankcase oil line (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
45	47159-79A	BRACKET, front engine mount (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
46	63533-41	FITTING, oil hose (1)	ALL
47	96210-80	WASHER (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CRANKCASE — GEAR SIDE

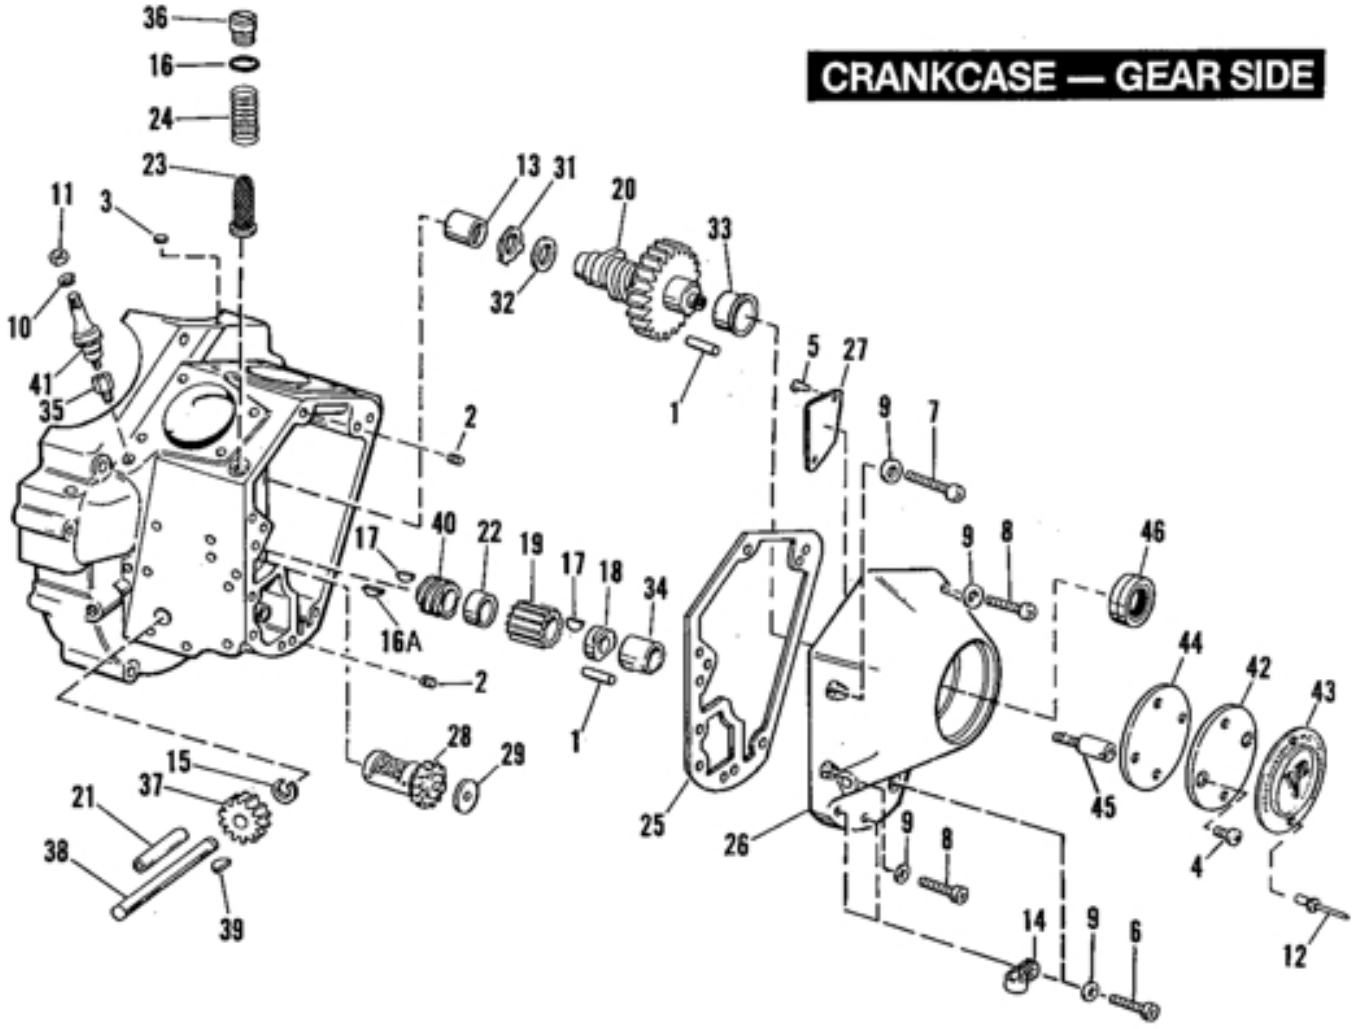


CRANKCASE - GEAR SIDE (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	275	DOWEL PIN, 2-as req'd (1)	ALL
2	358	DOWEL PIN (2)	ALL
3	653	PLUG, crankcase (1)	ALL
4	1601	SCREW (2)	ALL
5	2511	SCREW (2)	ALL
6	4718A	SCREW (3)	FXR: 87 to 90-ALL
6	4740A	SCREW (3)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
7	4810	SCREW (1)	ALL
8	4813A	SCREW (2)	ALL
9	6099	WASHER (6)	ALL
10	7069	LOCKWASHER (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
11	7634	NUT (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
12	8699	RIVET, ignition cover (2)	ALL
13	9058	NEEDLE BEARING, crkc. cam cover (1)	ALL
14	10046	CLAMP, ignition wire (1)	FXR: 87 to 90-ALL
15	11002	RETAINING RING, oil pump drive shaft. (1)	ALL
16	11105	O-RING (1)	ALL
16A	11219	T-KEY (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
17	23985-54	KEY, gear shaft (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
18	24022-90	NUT, gear shaft (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
18	24023-54	NUT, gear shaft (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24040-78	PINION GEAR, 1.4751-56 pd. (orn.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24040-90	PINION GEAR, 1.4850-53 pd. (orn.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	24041-78	PINION GEAR, 1.4745-51 pd. (wht.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24041-90	PINION GEAR, 1.4846-49 pd. (wht.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	24042-78	PINION GEAR, 1.4737-45 pd. (yel.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24042-90	PINION GEAR, 1.4842-45 pd. (yel.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	24043-78	PINION GEAR, 1.4729-37 pd. (red) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24043-90	PINION GEAR, 1.4838-41 pd. (red) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CRANKCASE — GEAR SIDE

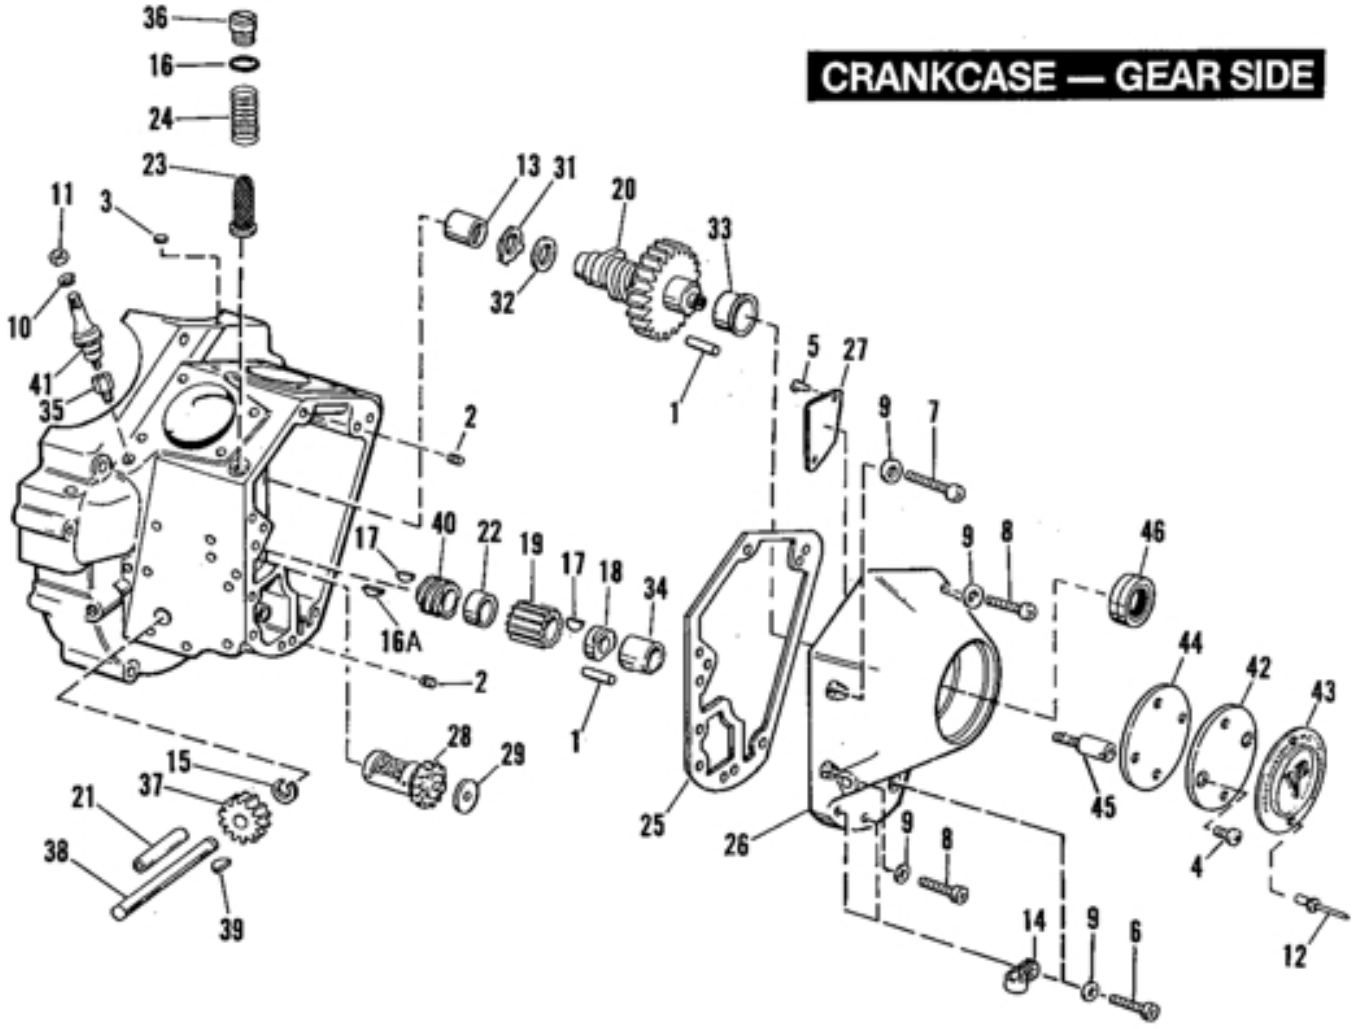


CRANKCASE - GEAR SIDE (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	24044-78	PINION GEAR, 1.4721-29 pd. (blue) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24044-90	PINION GEAR, 1.4834-37 pd. (blue) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	24045-78	PINION GEAR, 1.4715-21 pd. (grn.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24045-90	PINION GEAR, 1.4830-33 pd. (grn.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	24046-78	PINION GEAR, 1.4710-15 pd. (blk.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	24046-90	PINION GEAR, 1.4826-29 pd. (blk.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
20	24581-88	SET OF CAM AND PINION GEARS, matched (Cal. only) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
20	24581-90	SET OF CAM AND PINION GEARS, matched (Cal. only) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
20	24582-83A	SET OF CAM AND PINION GEARS, matched (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
20	24582-88	SET OF CAM AND PINION GEARS, matched (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
20	24582-90	SET OF CAM AND PINION GEARS, matched (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
21	24641-36	BUSHING, oil pump shaft (1)	ALL
22	24703-54B	SPACER, pinion gear shaft (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
22	24704-90	SPACER, pinion gear shaft (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
23	24981-70	OIL SCREEN, crankcase (1)	ALL
24	24982-70	SPRING, oil screen (1)	ALL
25	25225-70B	GASKET, gear cover (1)	ALL
26	25258-80B	GEAR COVER, w/#5, 27 and 46 (1)	FXR: 87-EA/B/C/G; 88 to 90-EA/C/G/M Softail: 87 to 90-BH/J Touring: 87 to 90-ALL
26	25268-84A	GEAR COVER, w/#5, 27 and 46 (chrome) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L/M Touring: 87 to 90-DB/J/M/P
27	25275-82	COVER, breather valve (1)	ALL
28	25310-82A	BREATHER VALVE W/GEAR (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CRANKCASE — GEAR SIDE

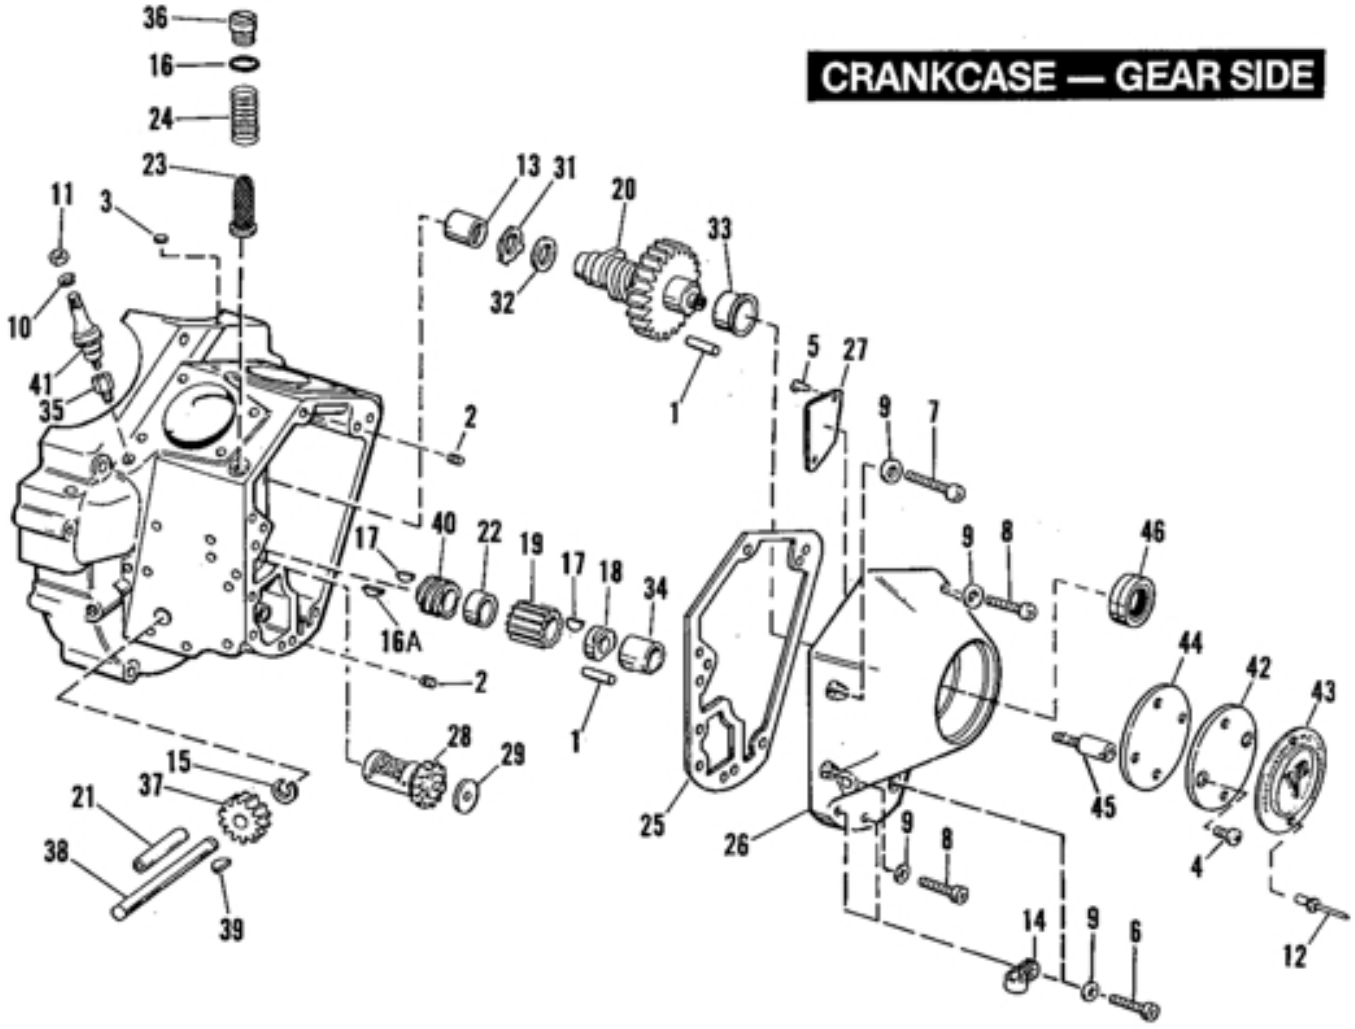


CRANKCASE - GEAR SIDE (3 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	25320-82	THRUST WASHER, brthr valve-0.130 inch thk. (1)	ALL
29	25321-82	THRUST WASHER, brthr valve-0.135 inch thk. (1)	ALL
29	25322-82	THRUST WASHER, brthr valve-0.140 inch thk. (1)	ALL
29	25323-82	THRUST WASHER, brthr valve-0.145 inch thk. (1)	ALL
29	25325-82	THRUST WASHER, brthr valve-0.150 inch thk. (1)	ALL
29	25326-82	THRUST WASHER, brthr valve-0.155 inch thk. (1)	ALL
29	25327-82	THRUST WASHER, brthr valve-0.160 inch thk. (1)	ALL
29	25328-82	THRUST WASHER, brthr valve-0.165 inch thk. (1)	ALL
31	25550-57	LOCKWASHER, cam gear (1)	ALL
32	25555-84	THRUST WASHER, cam gear-0.045 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25550-36	THRUST WASHER, cam gear-0.050 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25551-36	THRUST WASHER, cam gear-0.055 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25552-36	THRUST WASHER, cam gear-0.060 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25553-36	THRUST WASHER, cam gear-0.065 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25554-36	THRUST WASHER, cam gear-0.070 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25555-36	THRUST WASHER, cam gear-0.075 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25556-79	THRUST WASHER, cam gear-0.080 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25557-79	THRUST WASHER, cam gear-0.085 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25558-79	THRUST WASHER, cam gear-0.090 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
32	25559-79	THRUST WASHER, cam gear-0.095 inch thk. (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
33	25581-70	BUSHING, gear cover (1)	ALL
34	25582-73	BUSHING, gear cover pinion shaft (1)	ALL
35	26052-86	FITTING, oil pressure (1)	Touring: 87 to 90-ALL
36	26263-80	PLUG, oil screen (1)	ALL
37	26345-73	DRIVE GEAR, oil pump-24T (1)	ALL
38	26346-70	DRIVE SHAFT, oil pump (1)	ALL
39	26348-15	KEY, drive shaft (1)	ALL
40	26349-84	DRIVE GEAR, oil pump (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
40	26354-90	DRIVE GEAR, oil pump (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
41	26561-84	OIL PRESSURE SWITCH (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 to 90-FA
41	74406-87	OIL PRESSURE SWITCH (1)	Touring: 87 to 90-DB/D/J/M/P
42	32504-80	COVER, inner (1)	ALL
43	32524-83	TIMER COVER (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/L Touring: 87 to 90-ALL
43	32525-89	TIMER COVER (1)	Softail: 90 to 90-BM
44	32591-80	GASKET, ignition cover (1)	ALL
45	32606-82	SCREW (2)	ALL
46	83162-51	OIL SEAL, bearing (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

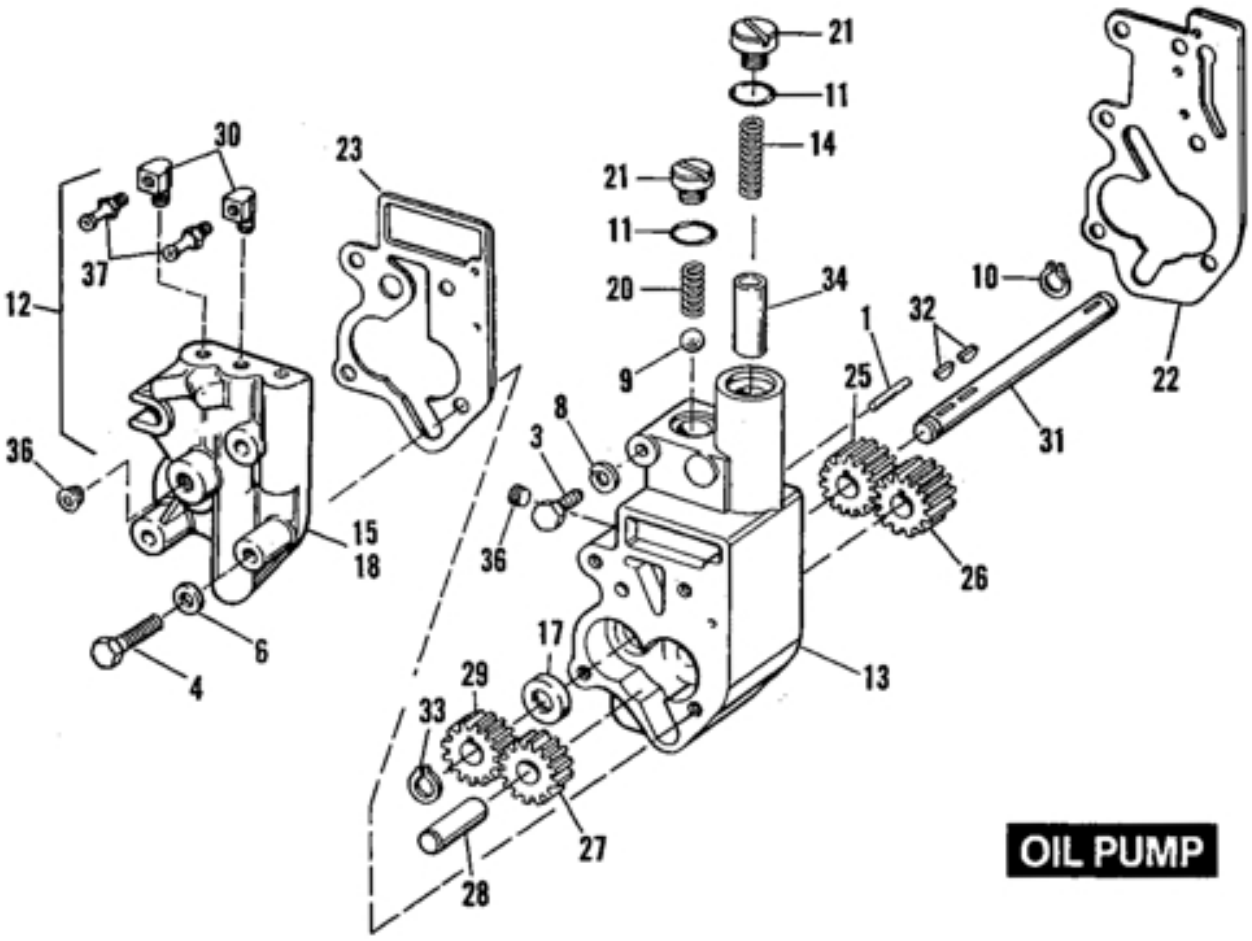

21
11
14
21
11
20
34
9
30
23
37
12
36
15
18
6
4
8
3
36
17
29
33
27
28
25
1
32
31
10
22
26
13

OIL PUMP

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	239	PIN, valve stop (1)	ALL
3	2872W	BOLT (2)	ALL
4	3429	BOLT (4)	ALL
6	6738	WASHER (4)	ALL
8	7036	WASHER (2)	ALL
9	8873	BALL, check valve-3/8 inch dia. (1)	ALL
10	11002	RETAINING RING, oil pump (1)	ALL
11	11105	O-RING, check valve cover screw (2)	ALL
12	26058-84	COVER ASSY., oil pump w/#18, 30 and 37, N/A (1)	FXR: 87 to 90-ALL
13	26190-73	OIL PUMP KIT (1)	ALL
14	26207-83	SPRING, relief valve (1)	ALL
15	26216-84	COVER, oil pump (1)	ALL
17	26227-58	OIL SEAL (1)	ALL
18	26234-84	COVER KIT, oil pump w/ #30 and 37 (1)	ALL
18	26242-84	COVER, oil pump (1)	ALL
20	26262-80	SPRING, check valve (1)	ALL
21	26263-80	COVER SCREW, check and relief valves (1)	ALL
22	26273-80B	GASKET, body (paper) (1)	ALL
23	26276-80A	GASKET, cover (paper) (1)	ALL
24	26277-84	COVER ASSY., oil pump w/#18, 30 and 37, N/A (1)	Softail: 87 to 90-ALL
24	26285-82A	COVER ASSY., oil pump w/#18, 30 and 37, N/A (1)	Touring: 87 to 90-ALL
25	26315-68A	DRIVE GEAR (1)	ALL
26	26317-68A	IDLER GEAR (1)	ALL
27	26326-62A	DRIVE IDLER GEAR (1)	ALL
28	26327-68	IDLER GEAR (1)	ALL
29	26328-74	DRIVE GEAR (1)	ALL
30	26338-68	ELBOW, oil pump (2)	ALL
31	26346-70	DRIVE SHAFT (1)	ALL
32	26348-15	KEY, drive shaft (2)	ALL
33	26348-36	RETAINING RING, drive shaft (1)	ALL
34	26400-82	VALVE, oil pump (1)	ALL
36	45830-48	PLUG (2)	ALL
37	63533-41	FITTING, oil line hose (2)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

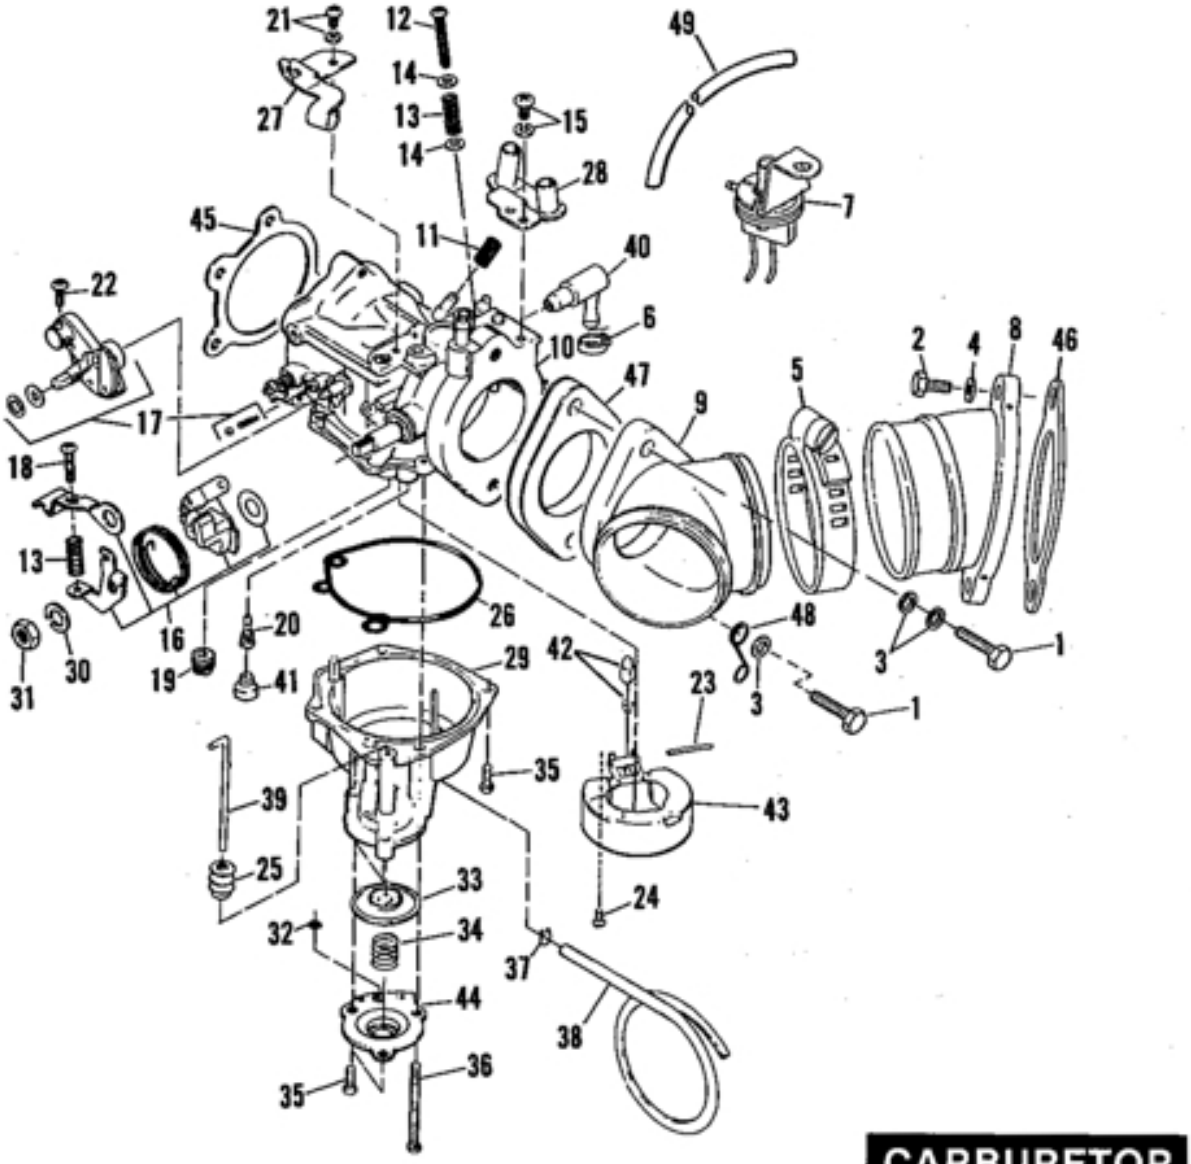


CARBURETOR
1987 TO 1989

CARBURETOR - 1987 TO 1989 (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2818	BOLT (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
1	2871W	BOLT, 2-1987 and 1988 (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
2	3494	BOLT (4)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
3	6016	WASHER (3)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
4	6771	WASHER (4)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
5	9991A	CLAMP, compliance fitting (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
6	10014	CLAMP, fuel hose (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
7	26555-84	VACUUM SWITCH (1)	Touring: 87 to 89-ALL
7	26557-83	VACUUM SWITCH (1)	FXR: 87 to 89-ALL
7	26558-84	VACUUM SWITCH (1)	Softail: 87 to 89-ALL
8	27008-83A	COMPLIANCE FITTING, front cyl. hd. (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
8	27012-83A	COMPLIANCE FITTING, rear cyl. hd. (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
9	27019-83	INTAKE MANIFOLD (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
10	27026-88A	CARBURETOR, F59B (Cal. only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
10	27029-86B	CARBURETOR, 02BR (1)	FXR: 87-ALL Softail: 87-ALL
10	27029-88	CARBURETOR, F58A (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
10	27034-86B	CARBURETOR, B88R (1)	Touring: 87-ALL
11	27079-84	CAP, evaportive port (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
12	27130-81	SCREW, throttle stop (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
13	27136-81	SPRING, throt. stop and fast idle scr. (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
14	27137-81	WASHER, throt. stop screw (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
15	27139-81	SCREW W/WASHER, throt. cable brkt. (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
16	27143-81	LEVER KIT, accelerator pump (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

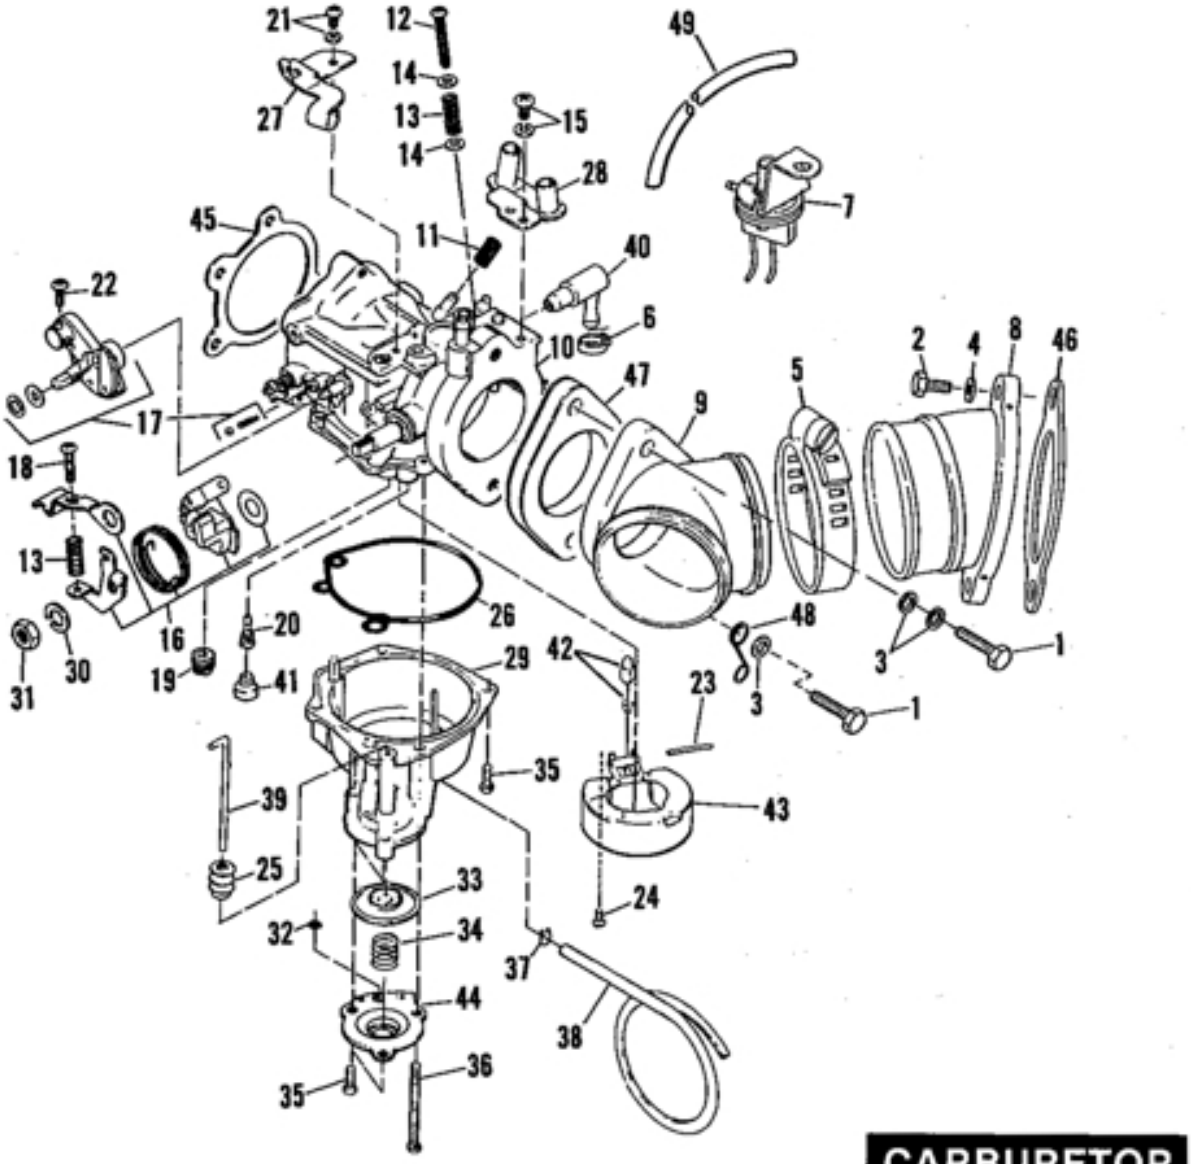


CARBURETOR
1987 TO 1989

CARBURETOR - 1987 TO 1989 (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	27144-86A	CHOKE LEVER KIT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
18	27145-81	SCREW, fast idle (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	27301-86	MAIN JET, 1.70 mm (1)	Touring: 87-ALL
19	27616-88	MAIN JET, 1.40 mm (Cal. only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
19	27898-78	MAIN JET, 1.65 mm (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 88 and 89-ALL
20	27302-84	LOW SPEED JET, 0.50 mm (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
20	27329-83	LOW SPEED JET, 0.52 mm (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
20	27383-88	LOW SPEED JET, 0.42 mm (Cal. only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
21	27304-76	SCREW W/WASHER, choke cable brkt. (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
22	27307-76	SCREW, wire block (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
23	27308-76	PIN, float (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
24	27309-76	SCREW, float pin (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
25	27311-76	CAP, accelerator pump (rubber) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
26	27324-83	O-RING, bowl (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
27	27325-86	BRACKET, choke cable (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
28	27327-83	BRACKET, throt. cable (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
29	27330-83	BOWL, 02BH (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
30	27333-76	LOCKWASHER, throt. lever (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
31	27335-76	NUT, throt. lever (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
32	27360-76	O-RING (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
33	27361-76	DIAPHRAGM, accelerator pump (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

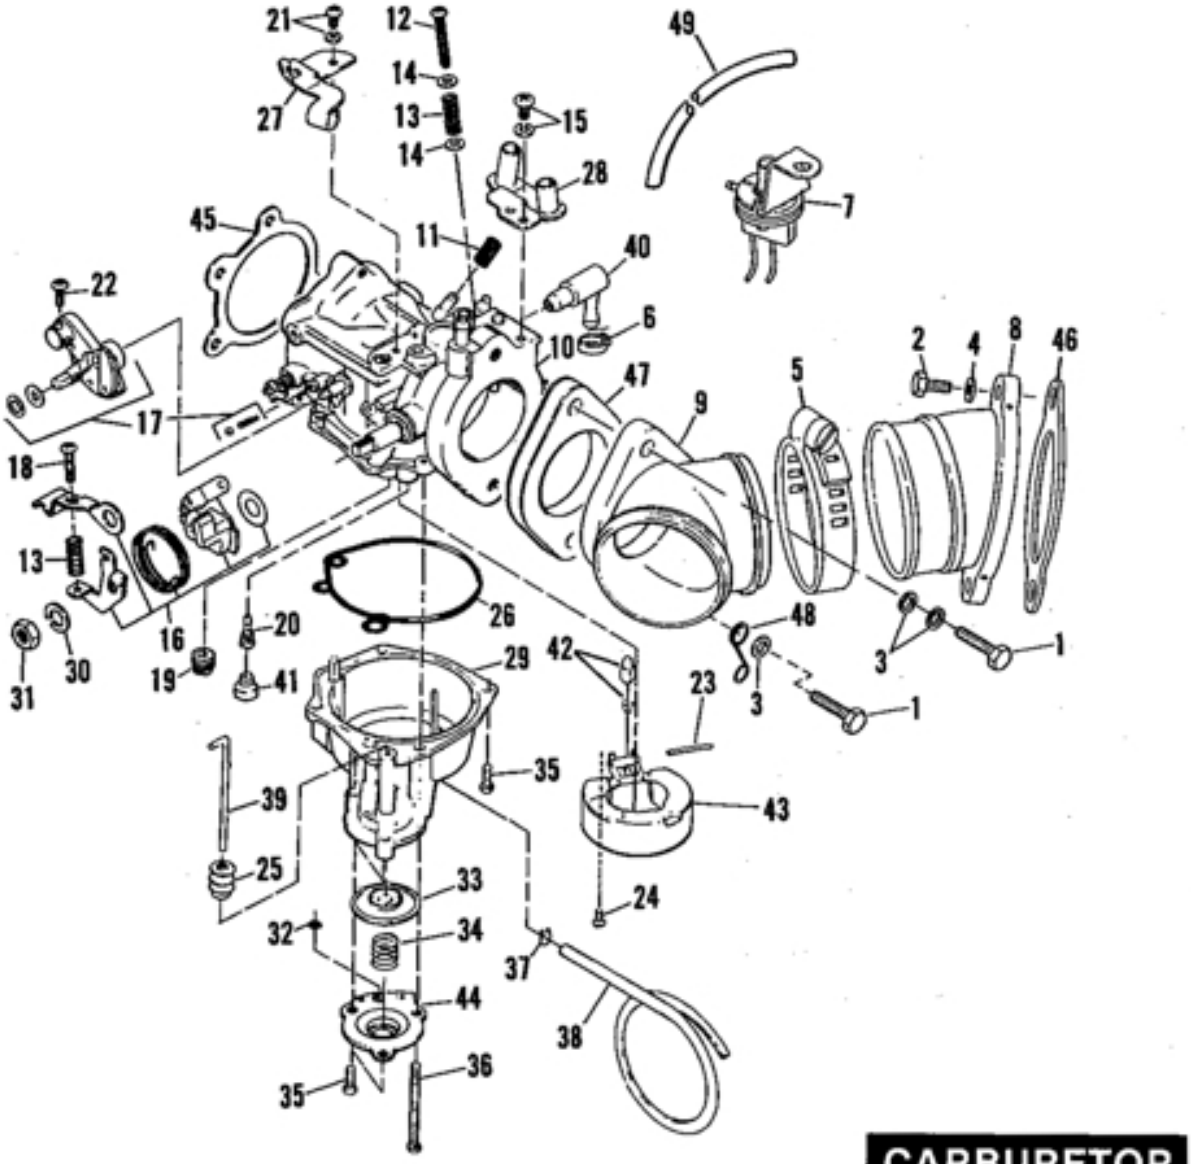


CARBURETOR
1987 TO 1989

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	27362-76	SPRING, diaphragm (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
35	27366-76	SCREW (5)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
36	27367-76	SCREW (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
37	27368-76	CLIP, overflow hose (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
38	27369-76	HOSE, overflow (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
39	27370-83	ROD, accelerator pump (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
40	27371-76	FITTING, fuel hose (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
41	27385-76	PLUG, low speed jet (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
42	27886-78A	FLOAT VALVE, w/clip (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
43	27887-78	FLOAT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
44	27891-80	HOUSING, accelerator pump (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
45	29058-77	GASKET, air cleaner to carb. (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
46	29242-83	GASKET, compliance fitting (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
47	29250-78A	INSULATING SPACER (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
48	45092-66A	CABLE GUIDE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
49	26570-84	HOSE, 3/16 inch I.D. (10 ft.) (black) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
		INTERNATIONAL MODELS ONLY	
10	27026-88A	CARBURETOR, F59B (Swiss only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
20	27383-88	LOW SPEED JET, 0.42 mm (Swiss only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
19	27616-88	MAIN JET, 1.40 mm (Swiss only) (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

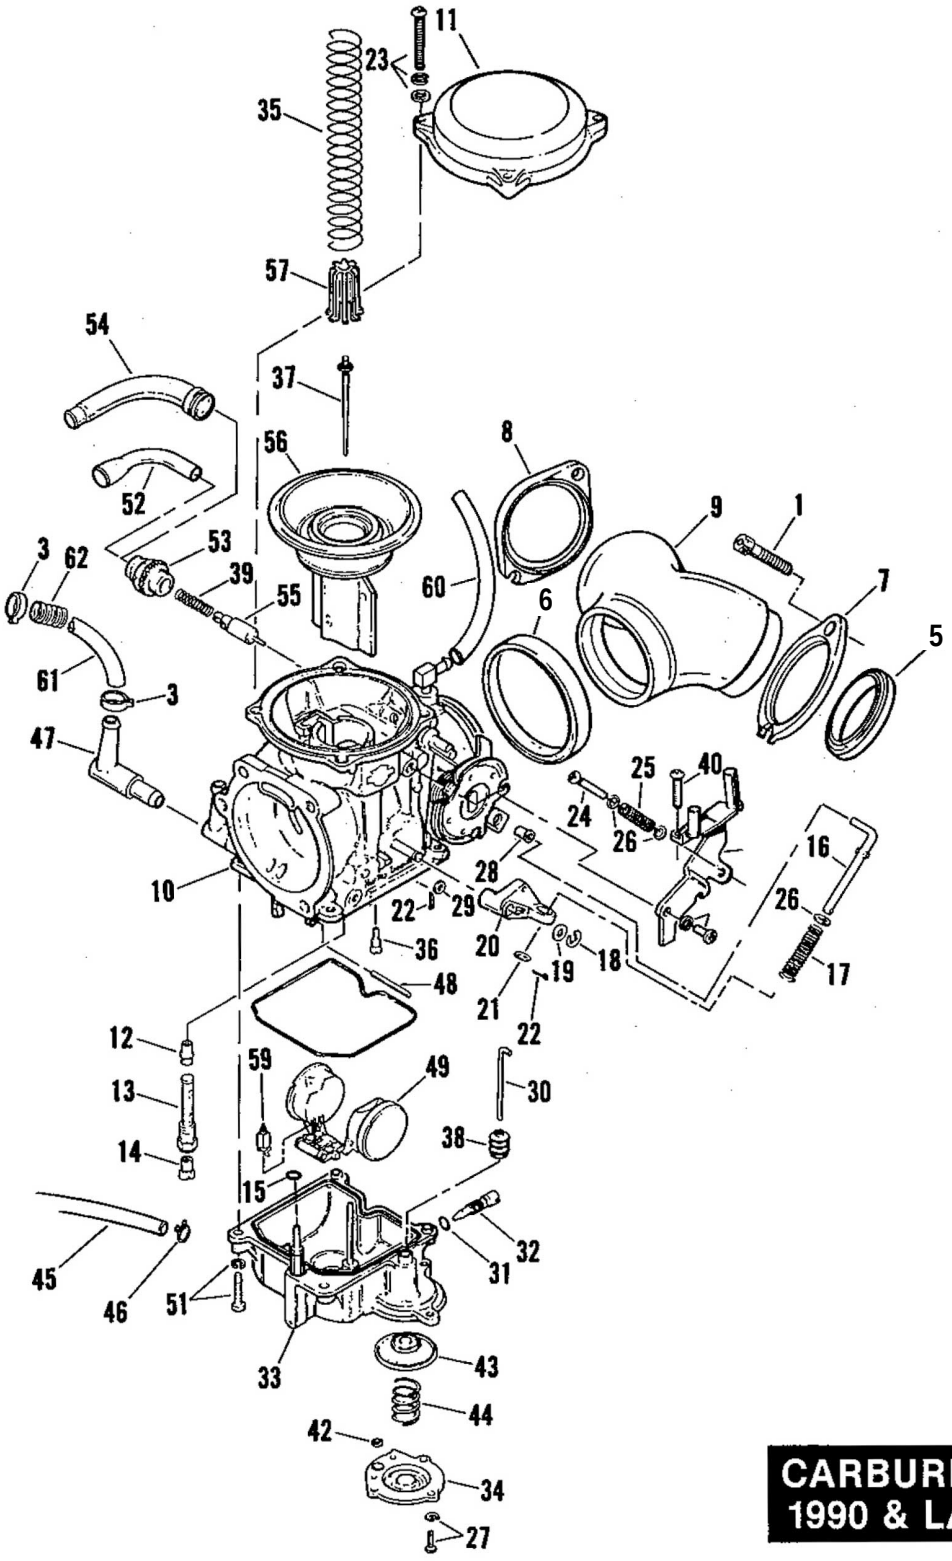


CARBURETOR
1990 & LATER

CARBURETOR - 1990 AND LATER (1 OF 4)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3201W	SCREW (4)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
3	10014	CLAMP (2)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
5	26995-86A	SEAL, intake manifold (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
6	27002-89	SEAL RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
7	27009-86A	FLANGE, mtg.-front (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
8	27010-86A	FLANGE, mtg.-rear (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
9	27019-89	MANIFOLD (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
10	27026-90	CARBURETOR, Cal. only (1)	Touring: 90 to 90-ALL
10	27035-90A	CARBURETOR, Cal. only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
10	27038-90A	CARBURETOR (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
10	27039-90A	CARBURETOR (1)	Touring: 90 to 90-ALL
11	27040-88	TOP, carburetor (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
12	27100-88	NEEDLE JET (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
13	27101-88	NEEDLE JET HOLDER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
14	27116-88	MAIN JET, 1.65 mm (Cal. only) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
14	27185-90	MAIN JET, 1.85 mm (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
15	27121-89	O-RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
16	27122-89	ROD (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
17	27123-89	SPRING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
18	27124-89	E-CLIP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

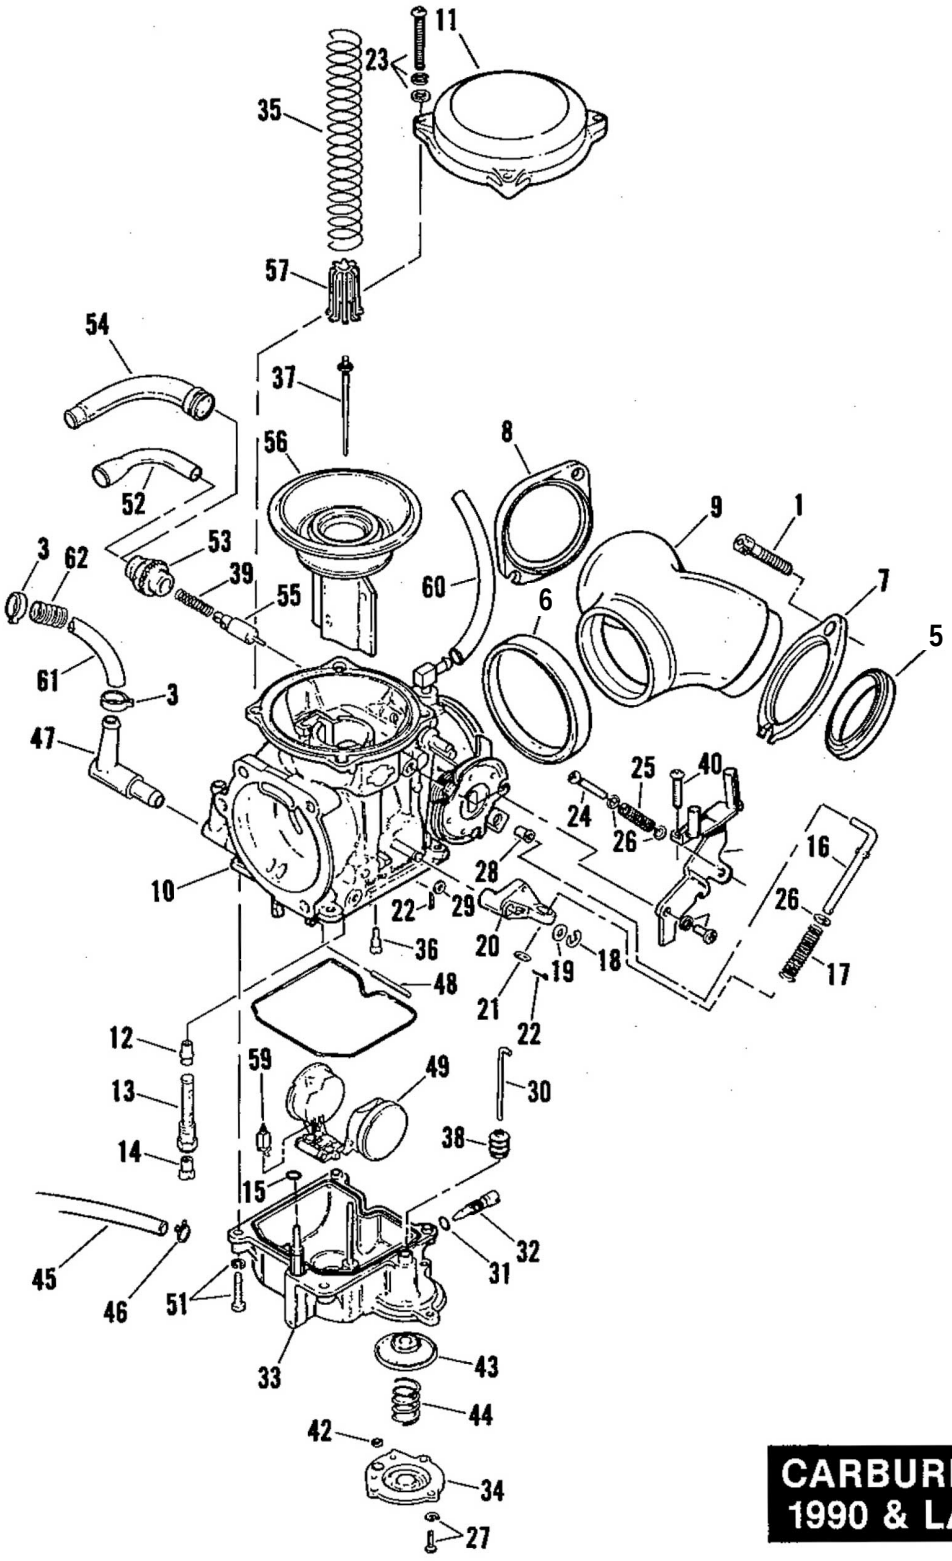


CARBURETOR
1990 & LATER

CARBURETOR - 1990 AND LATER (2 OF 4)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	27125-89	WASHER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
20	27126-89	LEVER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
21	27127-89	WASHER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
22	27128-89	PIN (2)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
23	27129-88	SCREW, top (3)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
24	27130-81	IDLE SCREW (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
25	27136-81	SPRING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
26	27137-81	WASHER (3)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
27	27146-89	SCREW W/WASHER (3)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
28	27147-89	COLLAR (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
29	27148-89	WASHER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
30	27156-89	ROD (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
31	27157-89	O-RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
32	27158-89	DRAIN SCREW (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
33	27159-89	FLOAT CHAMBER ASM. (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
34	27160-89	PUMP HOUSING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
35	27162-89	SPRING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
36	27170-89	SLOW JET (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

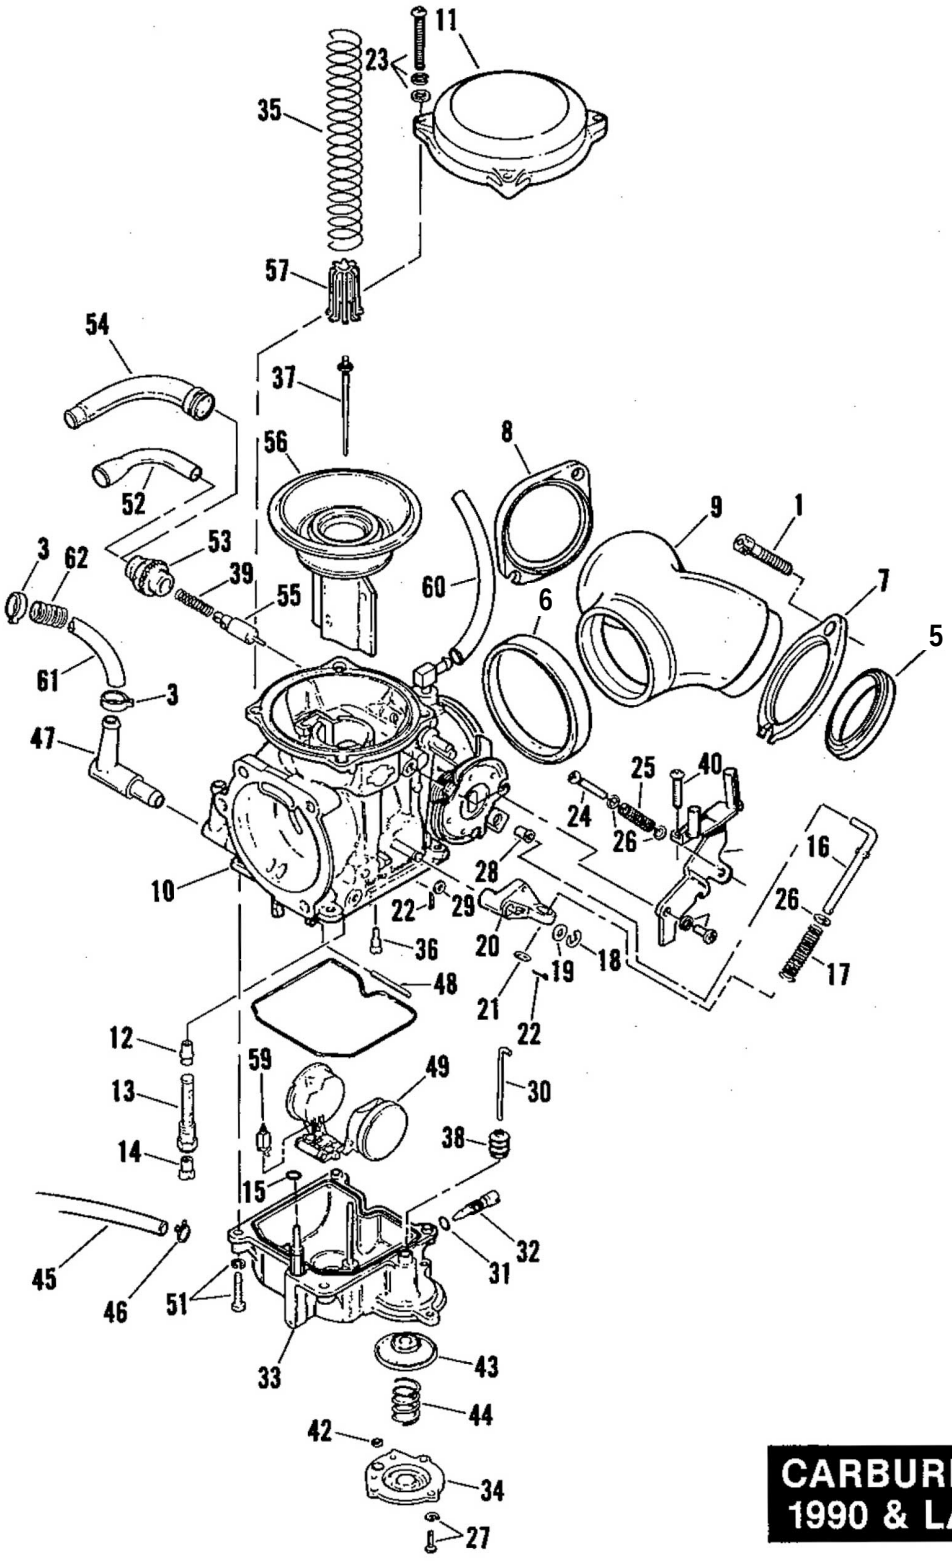


CARBURETOR
1990 & LATER

CARBURETOR - 1990 AND LATER (3 OF 4)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	27171-89	SLOW JET, Cal. only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
37	27175-90	JET NEEDLE (1)	Touring: 90 to 90-ALL
37	27176-90	JET NEEDLE, Cal. only (1)	Touring: 90 to 90-ALL
37	27178-90	JET NEEDLE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
37	27179-90	JET NEEDLE, Cal. only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
38	27311-76	CAP, accelerator pump (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
39	27315-88	SPRING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
40	27317-88	SCREW (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
41	27339-90	BRACKET, throttle cables (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
41	27340-90	BRACKET, throttle cables (1)	Touring: 90 to 90-ALL
42	27360-76	O-RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
43	27361-76	DIAPHRAGM, accelerator pump (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
44	27362-76	SPRING, diaphragm (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
45	27363-88	HOSE, overflow (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
46	27368-76	CLIP, overflow hose (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
47	27371-76	FITTING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
48	27575-88	PIN (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
49	27576-88	FLOAT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
50	27577-88	O-RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

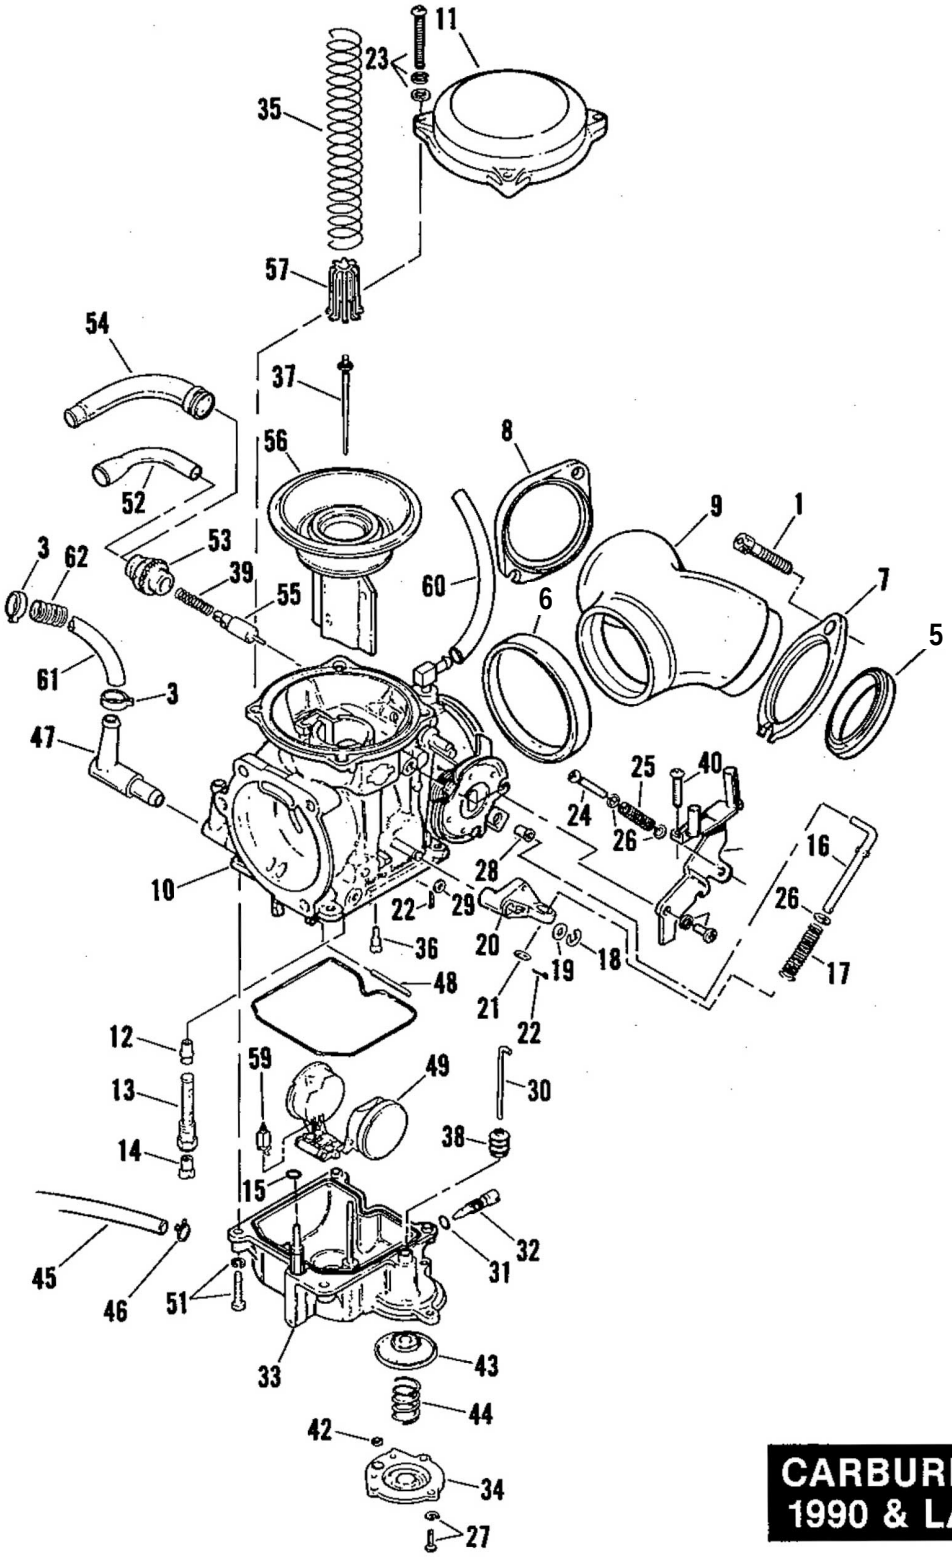

CARBURETOR
1990 & LATER


CARBURETOR - 1990 AND LATER (4 OF 4)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
51	27579-88	SCREW (4)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
52	27580-88	CABLE GUIDE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
53	27581-88	STARTER CAP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
54	27582-88	CABLE SEALING CAP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
55	27583-88	STARTER VALVE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
56	27585-88	VACUUM PISTON (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
57	27586-88	SPRING SEAT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
58	27587-88	SCREW (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
59	27886-78A	VALVE W/CLIP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
60	26570-84	HOSE, 3/16 I.D. (10 ft. lg.) (black) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
61	63501-68	HOSE, 1/4 I.D. (25 ft. lg.) (black) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
62	63505-84	INSULATOR, 1/2 I.D. (nylon) (8 ft. lg.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
		INTERNATIONAL MODELS ONLY	
9	26994-90	MANIFOLD, HDI only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
10	27025-90A	CARBURETOR, HDI only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
10	27029-90A	CARBURETOR, HDI only (1)	Touring: 90 to 90-ALL
14	27115-88	MAIN JET, 1.70 mm (HDI only) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL
37	27177-90	JET NEEDLE, HDI only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

AIR CLEANER AND CHOKE

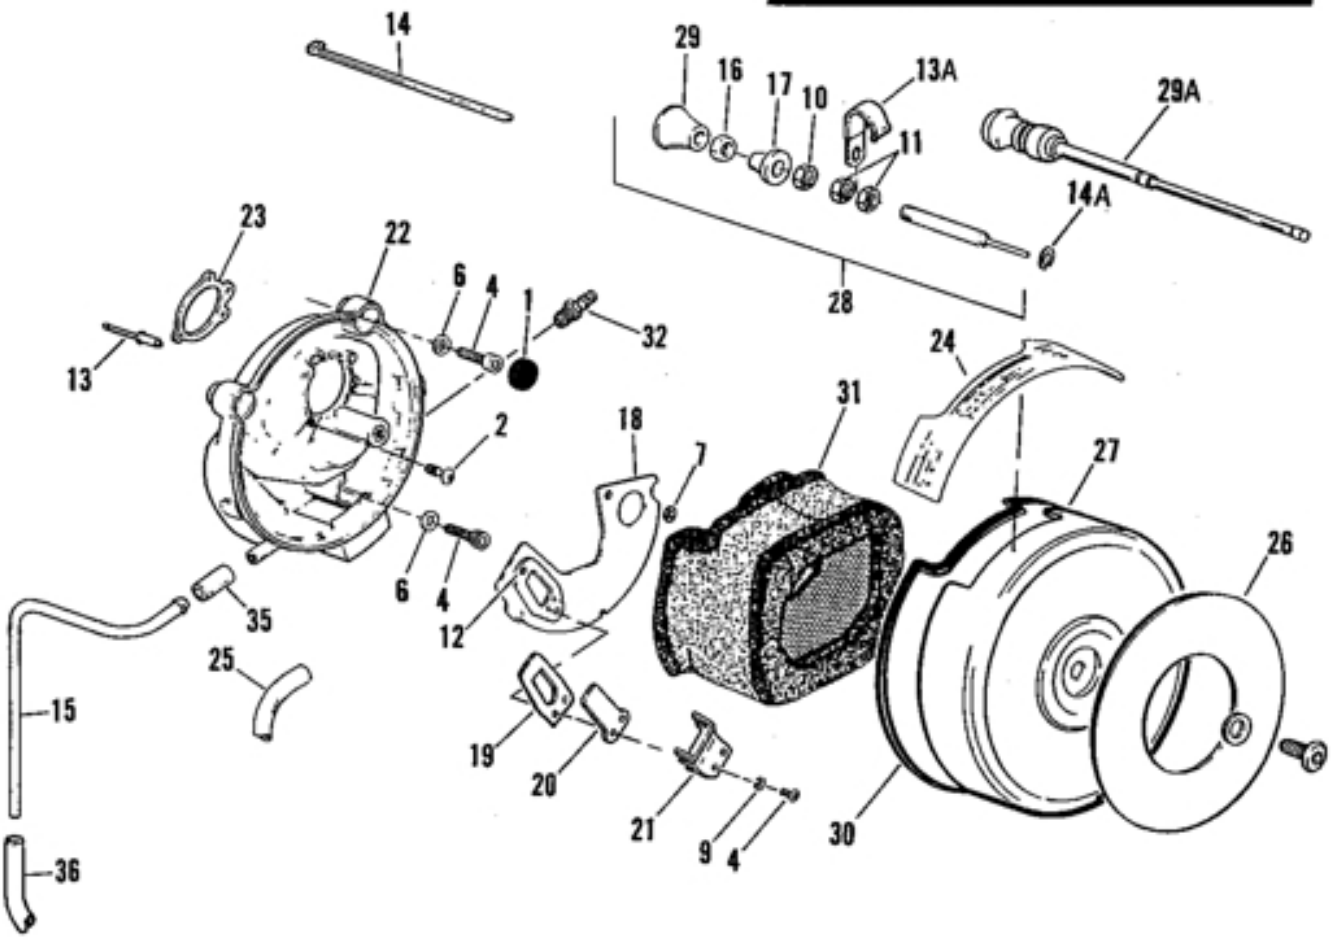


AIR CLEANER AND CHOKE (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	738	PLUG, air cleaner (2)	ALL
2	864	SCREW (3)	ALL
4	2737	SCREW, Cal. only, N/A (4)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
5	3210	SCREW (2)	ALL
6	6016	WASHER (2)	ALL
7	6048W	WASHER, Cal. only (2)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
8	6109	WASHER (1)	ALL
9	6969	LOCKWASHER, Cal. only, N/A (4)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
10	7638	NUT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
11	7744	JAMNUT (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
12	8519	RIVET, Cal. only (2)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
13	8625	POP RIVET, Cal. only (2)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
13A	10003	CLAMP, coil wire (1)	FXR: 88 and 89-ALL
14	10006	CABLE STRAP (1)	ALL
14	10065	CABLE STRAP (1)	Touring: 87 to 90-ALL
14A	11013	RETAINING RING (1)	Softail: 87 to 89-ALL
15	24922-86	VENT TUBE, chrome (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 87 to 90-ALL
16	27450-82	NUT (1)	Softail: 87 to 89-ALL
17	27451-82	GROMMET, black (1)	Softail: 87 to 89-ALL
18	28816-86	BAFFLE PLATE ASSY., Cal. only, N/A (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
18	28816-90	BAFFLE PLATE ASSY., Cal. only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
18	29068-86	BAFFLE PLATE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
18	29068-89	BAFFLE PLATE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

AIR CLEANER AND CHOKE

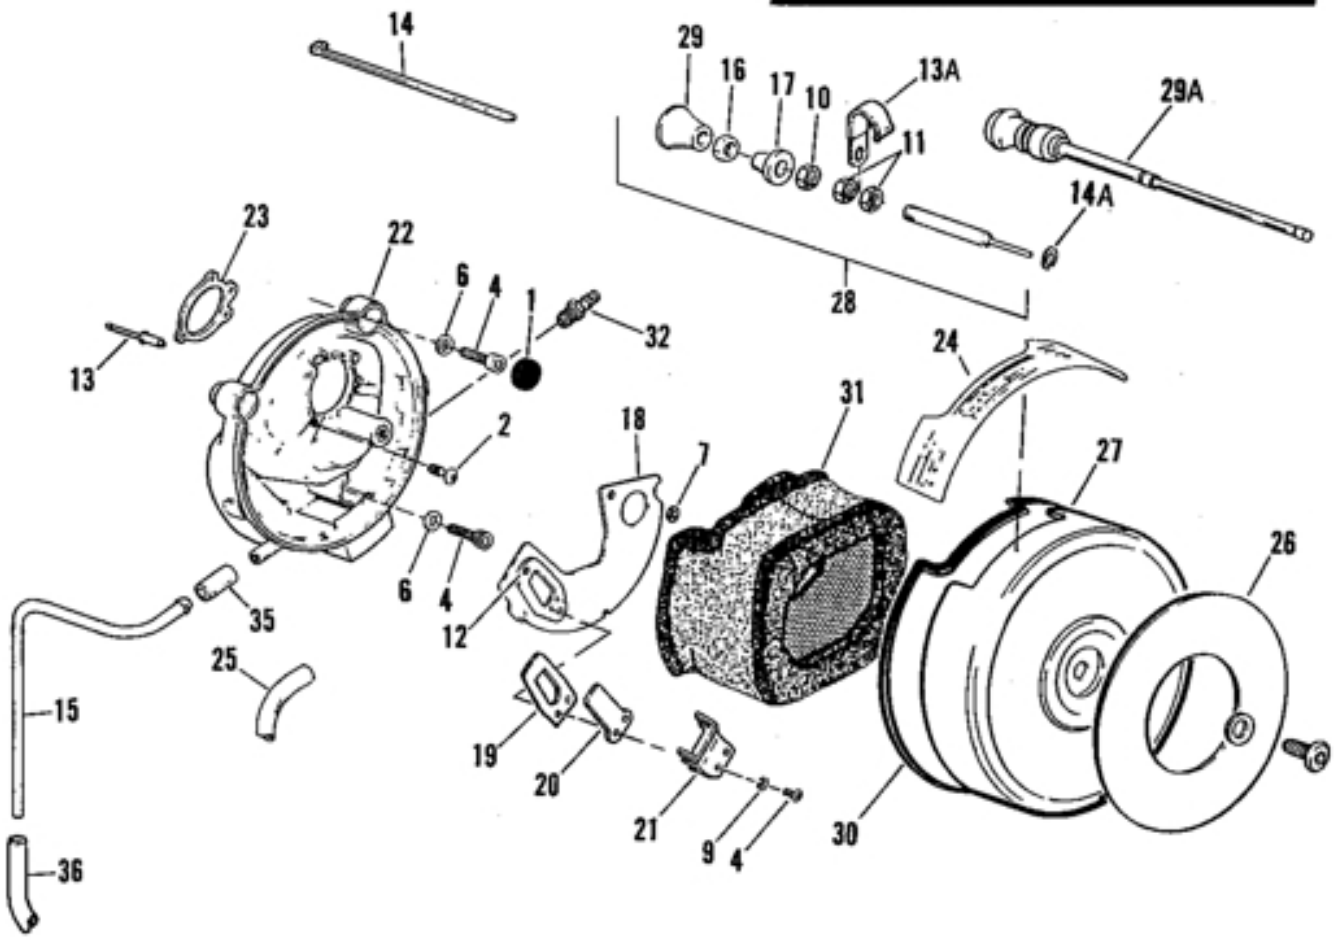


AIR CLEANER AND CHOKE (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	28820-86	REED BOTTOM, Cal. only (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
20	28821-86	REED TOP, Cal. only (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
21	28825-86	REED STOP, Cal. only (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
22	29016-88	BACKPLATE ASSY., Cal. only (1)	Touring: 88 and 89-ALL
22	29017-88	BACKPLATE ASSY., Cal. only (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL
22	29017-90	BACKPLATE ASSY., Cal. only (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
22	29134-86	BACKPLATE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
22	29134-90	BACKPLATE ASSY. (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
23	29058-77	GASKET (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
23	29059-88	GASKET (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
24	29126-90	SAFETY LABEL (1)	ALL
25	29145-86	HOSE, air cleaner to crankcase (1)	Softail: 87 to 90-ALL
26	29161-86	TRIM, "HERITAGE SOFTAIL" (1)	Softail: 87 to 90-BJ
26	29164-87	TRIM, "LOW RIDER CUSTOM" (1)	FXR: 87 to 90-EL
26	29166-86	TRIM, "LOW RIDER SPORT" (1)	FXR: 87 to 90-EG
26	29169-84	TRIM, "SOFTAIL" (1)	Softail: 87 to 90-BH/K
26	29172-85	TRIM, "LOW RIDER" (1)	FXR: 87 to 90-EB
26	29174-85	TRIM, "SPORT GLIDE" (1)	FXR: 87 to 90-EC
26	29181-88	TRIM, "SPRINGER SOFTAIL" (1)	Softail: 88 to 90-BL
26	29256-90	TRIM, "FAT BOY" (1)	Softail: 90 to 90-BM
26	29278-86	TRIM, "TOUR GLIDE" (1)	Touring: 87 to 90-DB/M
26	29279-86	TRIM, ""ELECTRA GLIDE" (1)	Touring: 87 to 90-DD/J/P, FA
26	90358-89	TRIM, "LOW RIDER CONVERTIBLE" (1)	FXR: L89 to 90-EM

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

AIR CLEANER AND CHOKE

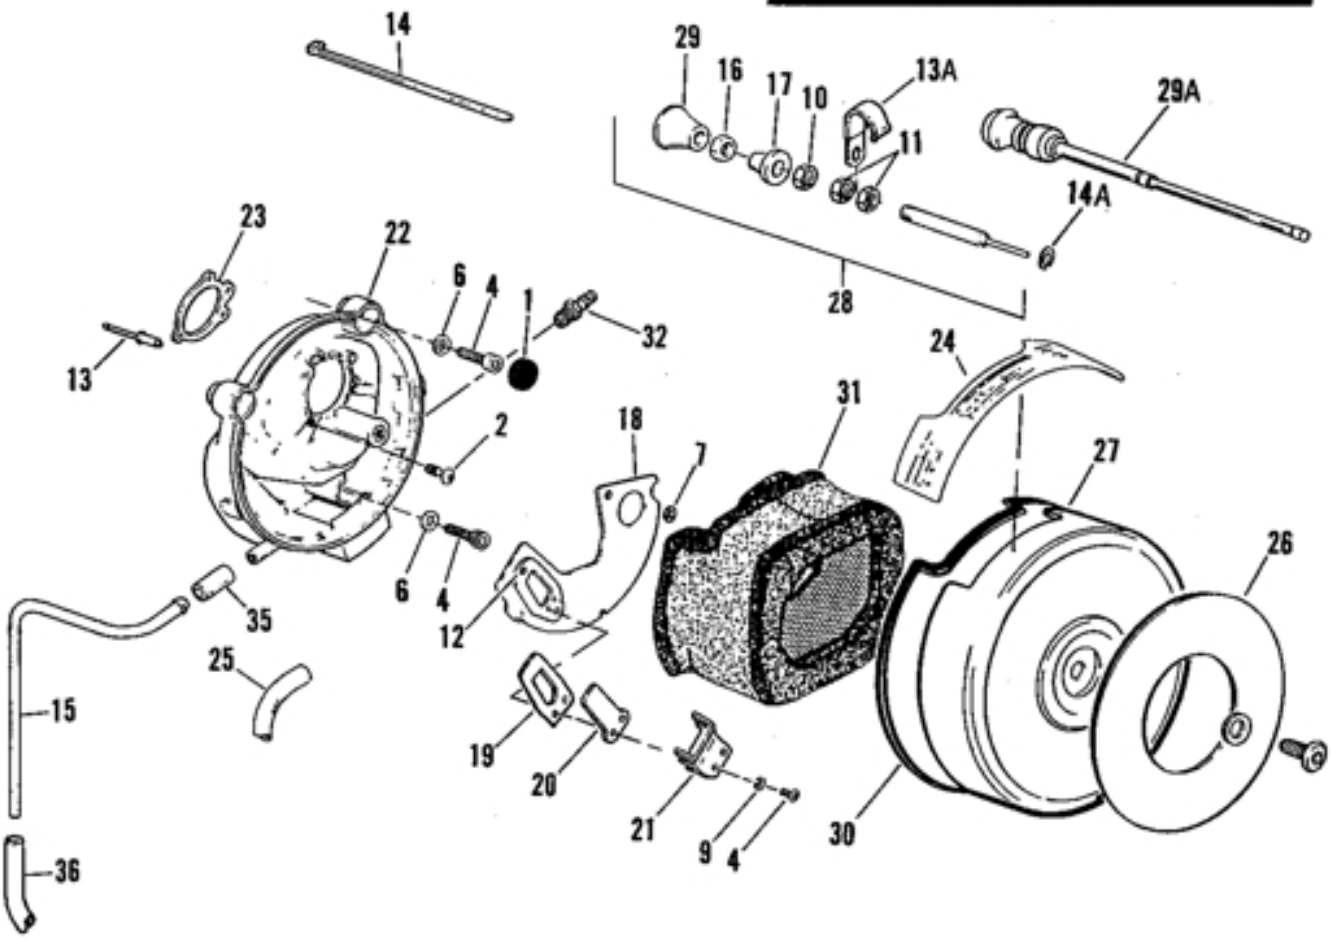


AIR CLEANER AND CHOKE (3 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	29165-83A	COVER, air cleaner (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
27	29165-89	COVER, air cleaner (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
28	29209-86	CONTROL CABLE, choke (1)	Touring: 87 to 89-ALL
28	29210-86	CONTROL CABLE, choke (1)	FXR: 87 to 89-ALL
28	29211-86	CONTROL CABLE, choke (1)	Softail: 87 to 89-ALL
29	29214-71	KNOB, choke cable (1)	Softail: 87 to 89-ALL
29	29228-80	KNOB, choke cable (1)	FXR: 87 to 89-ALL Touring: 87 to 89-ALL
29A	29236-90	CABLE, enrichment (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
30	29252-86B	SEAL STRIP (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
30	29252-89	SEAL STRIP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
31	29259-86	FILTER ELEMENT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
31	29259-89	FILTER ELEMENT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
31	29293-86	FILTER ELEMENT, foam only (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
32	29264-86	FITTING, rear-FLT (Cal. only) (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
33	29269-83	SCREW (1)	ALL
35	63509-86A	BOOT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 87 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
36	63500-68	HOSE, 3/8 inch I.D. (rubber) (25 ft. lg.) (1)	FXR: 87 to 90-ALL Softail: 90 to 90-ALL Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
18	28816-86	BAFFLE PLATE ASSY., Swiss. only, N/A (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

ALTERNATOR AND REGULATOR

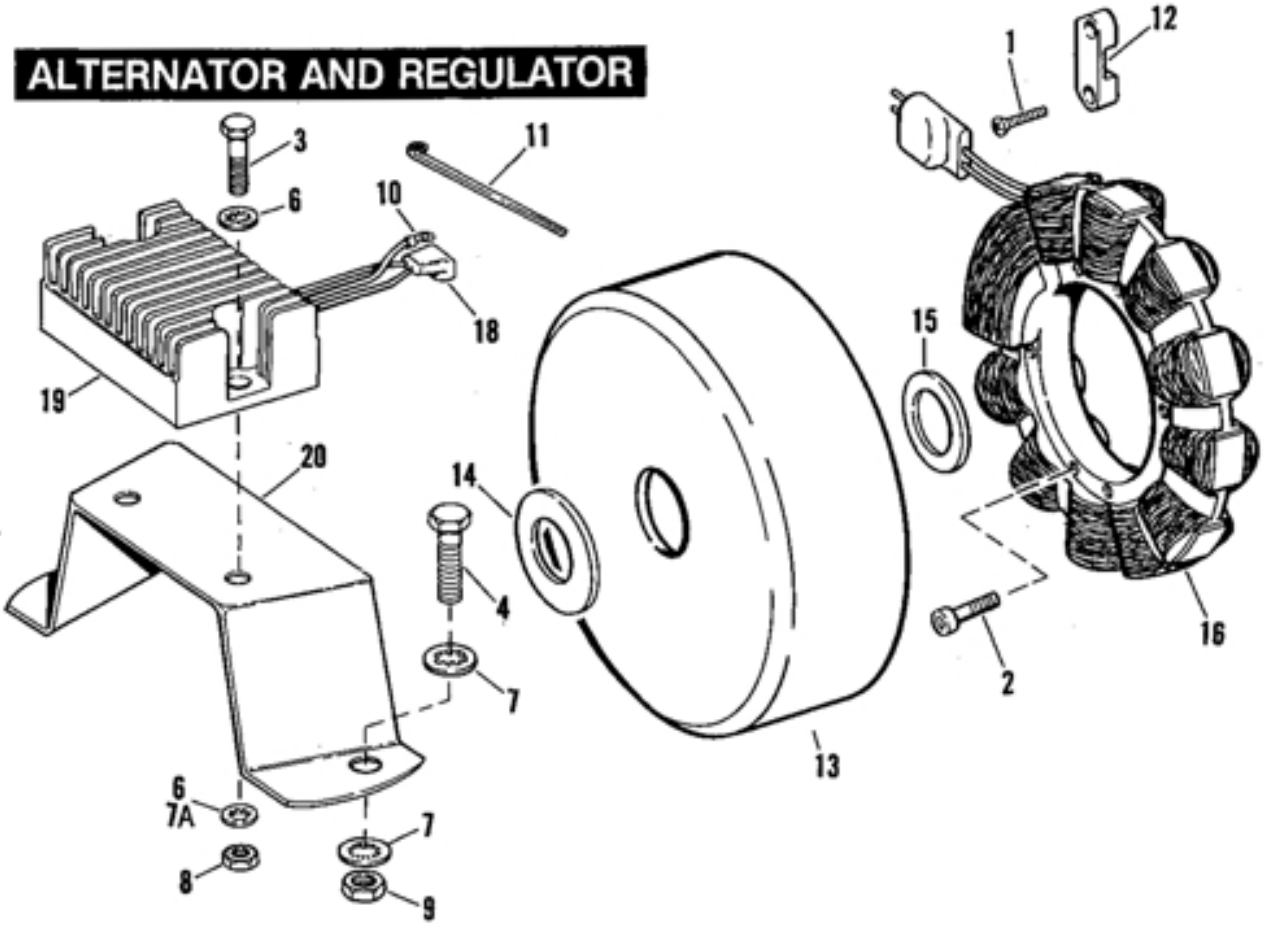


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2216W	SCREW (2)	ALL
2	2712	SCREW (4)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
2	2720	SCREW (4)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
3	3787	BOLT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
4	3974HW	BOLT (2)	Touring: 89 to 90-ALL
4	4391	BOLT (2)	FXR: 87 to 90-ALL Touring: 87 and 88-ALL
6	7124	LOCKWASHER, 2-Softail, 1989 and Later-FLT and FXR (4)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
7	7127	LOCKWASHER, 2-FLT (4)	FXR: 87 to 90-ALL Touring: 87 and 88-ALL
7A	7229W	LOCKWASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
8	7688	NUT (2)	ALL
9	7753	NUT (2)	FXR: 87 to 90-ALL
10	9862	WIRE TERMINAL, ring type (1)	ALL
11	10006	CABLE STRAP (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
12	29954-71A	RETAINER, alternator plug (1)	ALL
13	29957-81B	ROTOR ASSEMBLY (1)	ALL
14	29960-85	SPACER (1)	ALL
15	29961-85	SPACER (1)	ALL
16	29965-81A	STATOR (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
16	29970-88A	STATOR (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
18	71875-81	CONNECTOR, plug (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
19	74516-86	REGULATOR (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
19	74519-88	REGULATOR (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
20	74529-79	BRACKET, regulator mtg. (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

ELECTRONIC IGNITION SYSTEM

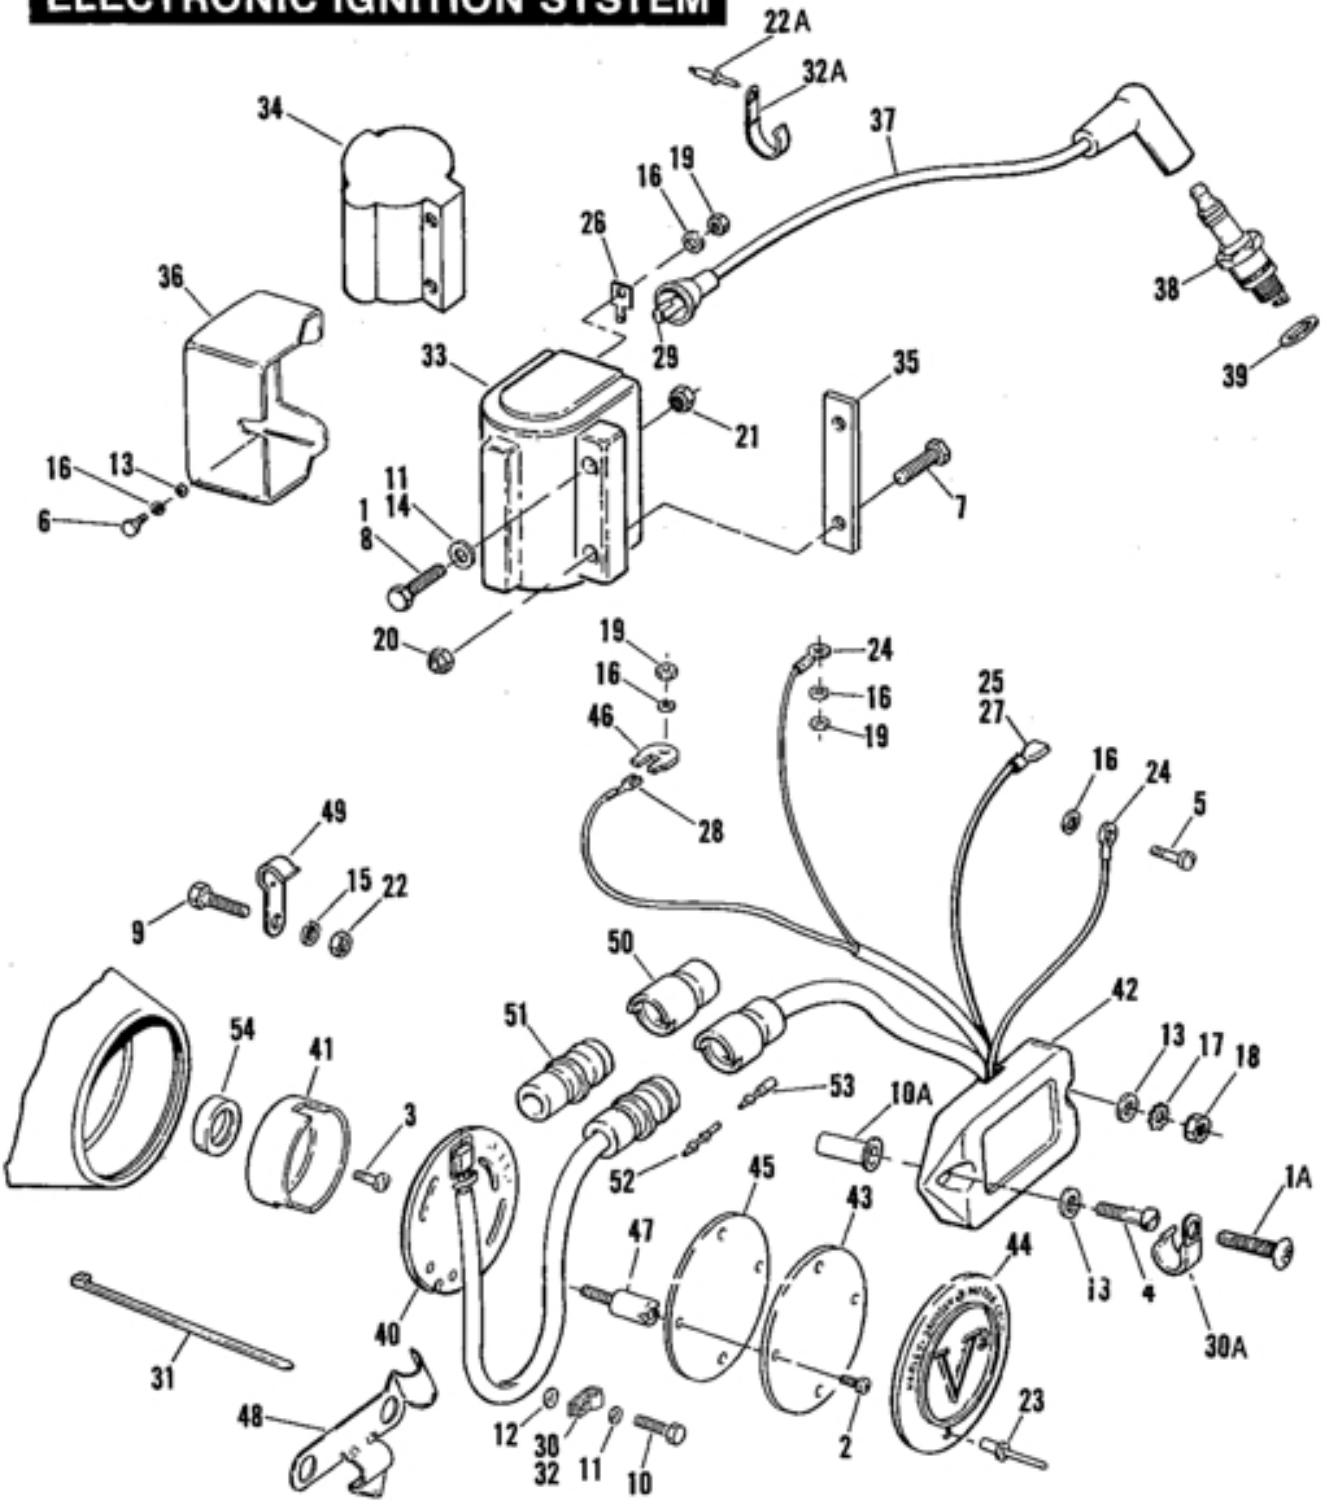


ELECTRONIC IGNITION SYSTEM (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	812	SCREW (2)	FXR: 87 to 90-ALL
1A	933	SCREW (2)	Softail: 89 to 90-ALL
2	1601	SCREW (2)	ALL
3	2611B	BOLT (1)	ALL
4	2665	SCREW (2)	Softail: 87 and 88-ALL
5	2731W	SCREW (1)	ALL
6	3473	BOLT (2)	FXR: 87 to 90-ALL Softail: 89 to 90-ALL
7	3826	BOLT (2)	Touring: 87 to 90-ALL
8	3993	BOLT (2)	Softail: 87 to 90-ALL
9	4391	BOLT (1)	Softail: 87 to 90-ALL
10	4340	SCREW, 2-FLT (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
10	4718A	SCREW (1)	FXR: 87 to 90-ALL
10A	5207	WELL NUT (2)	Softail: 89 to 90-ALL
11	6099	WASHER, 2-FLT; 3-Softail (1)	ALL
12	6242W	WASHER (1)	Softail: 87 to 90-ALL
13	6716	WASHER (2)	ALL
14	7036	WASHER (2)	Softail: 87 to 90-ALL
15	7041	LOCKWASHER (1)	Softail: 87 to 90-ALL
16	7069	LOCKWASHER (2)	Softail: 89 to 90-ALL
16	7118	LOCKWASHER (3)	Softail: 87 and 88-ALL
17	7220	LOCKWASHER (1)	FXR: 87 to 90-ALL
18	7634	NUT, brass (2)	FXR: 87 to 90-ALL Softail: 87 and 88-ALL Touring: 87 to 90-ALL
19	7638	NUT (2)	ALL
20	7683	LOCKNUT (2)	Touring: 87 to 90-ALL
21	7686	LOCKNUT (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
22	7753	NUT (1)	Softail: 87 to 90-ALL
23	8699	RIVET, ign. module (2)	ALL
24	9857	TERMINAL, ring type (2-FLT, FXR) (1)	ALL
25	9860	TERMINAL, female spade type (1)	Softail: 87 to 90-ALL
26	9881	ADAPTOR, terminal (1)	Softail: 87 to 90-ALL
27	9885	TERMINAL, female spade type (1)	ALL
28	9900	TERMINAL, female spade type (1)	ALL
29	9908	TERMINAL, spark plug cable (1)	Softail: 87 to 90-ALL
30	9990W	CLIP, module wire (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
30A	10003	CLAMP, 2-1987 and 1988 (1)	Softail: 89 to 90-ALL
31	10006	CABLE STRAP (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
32	10046	CLAMP, ignition wire (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
33	31614-83A	SPARK COIL (1)	ALL
34	31625-82	COVER, coil (1)	FXR: 87 to 90-ALL
35	31727-85	PLATE, spark coil (1)	Softail: 87 to 90-ALL
36	31800-78A	SPARK COIL COVER KIT, chrome (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

ELECTRONIC IGNITION SYSTEM

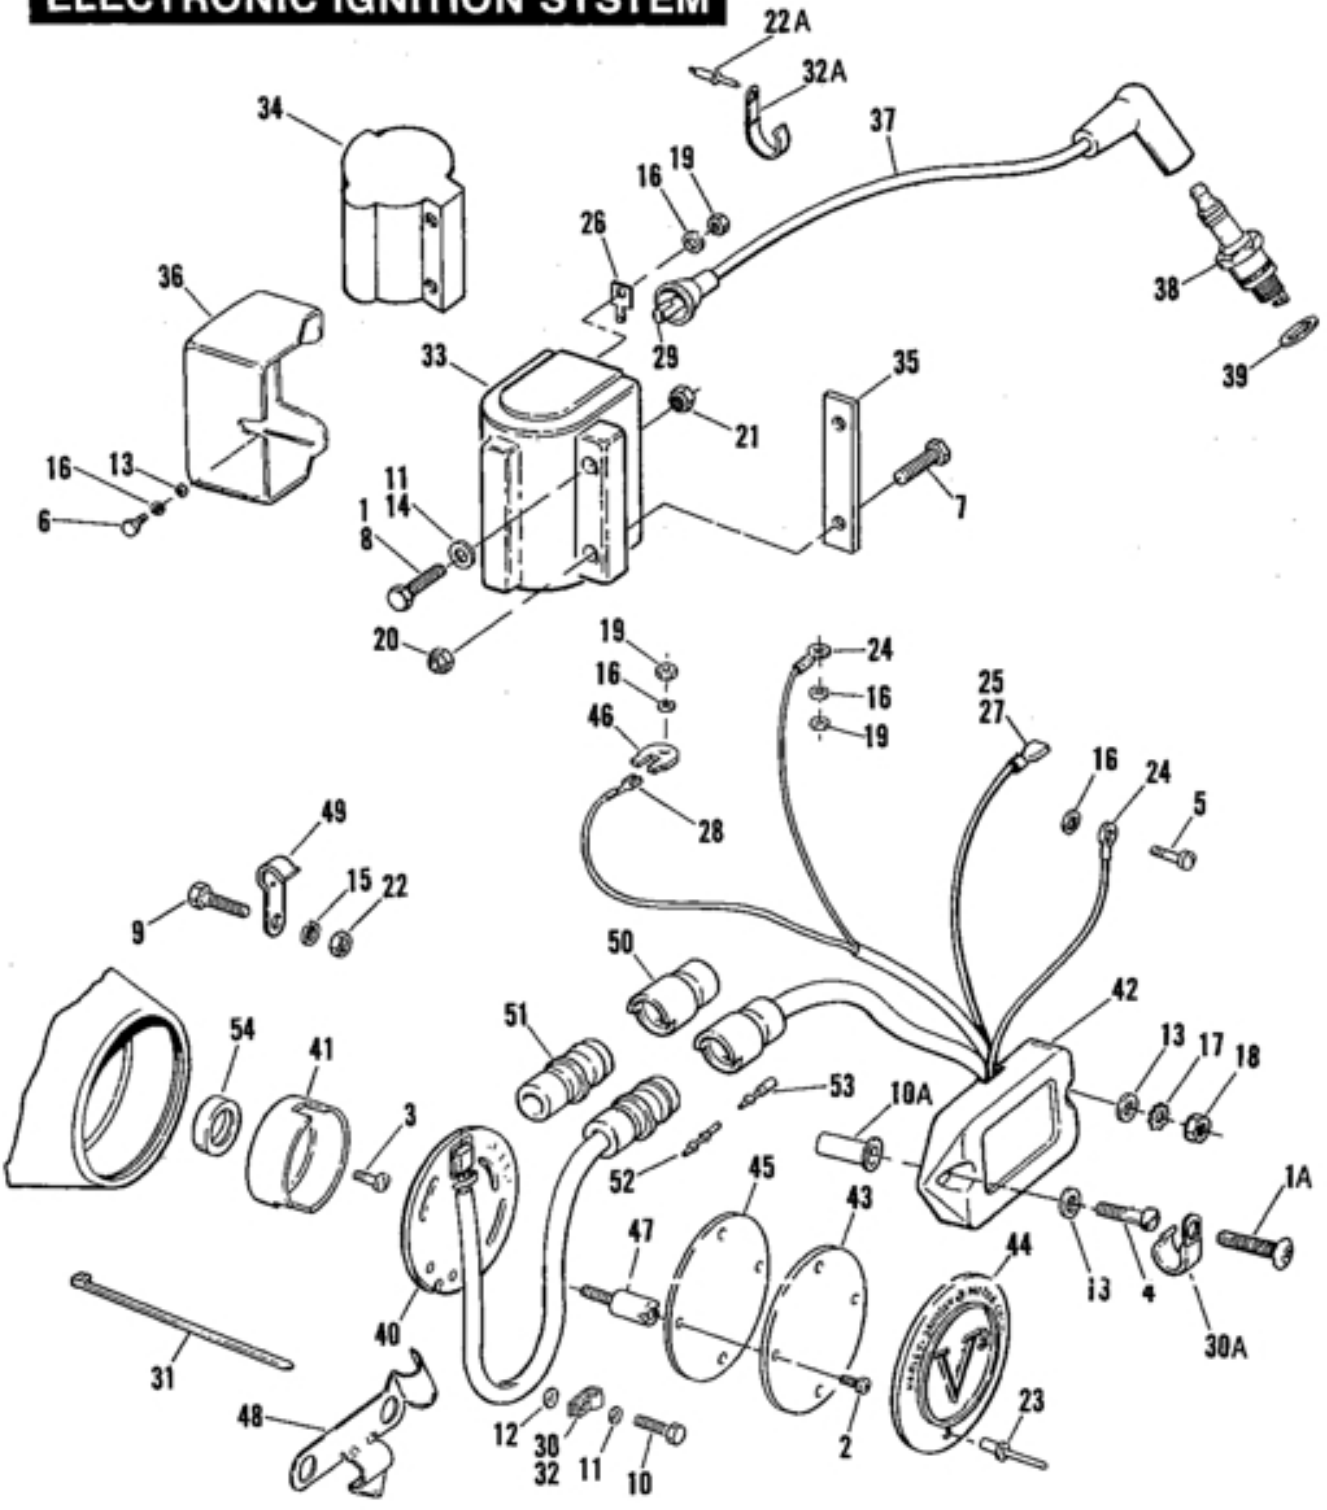


ELECTRONIC IGNITION SYSTEM (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	31981-65B	SPARK PLUG CABLE, fr. cyl. (1)	Softail: 87 to 90-ALL
37	31983-71A	SPARK PLUG CABLE, rr. cyl. (1)	Softail: 87 to 90-ALL
37	31992-85	SPARK PLUG CABLE, rr. cyl. (1)	Touring: 87 to 90-ALL
37	31994-85	SPARK PLUG CABLE, fr. cyl. (1)	Touring: 87 to 90-ALL
37	70187-82	SPARK PLUG CABLE (2)	FXR: 87 to 90-ALL
38	32311-83	SPARK PLUG, No. 5R6A-0.040 gap (2)	ALL
39	32342-58	GASKET, spark plug, N/A (2)	ALL
40	32400-80A	SENSOR ASSEMBLY, w/o receptacle (1)	ALL
41	32402-83	ROTOR (1)	ALL
42	32405-88A	IGNITION MODULE (1)	ALL
43	32504-80	TIMER COVER, inner (1)	ALL
44	32524-83	TIMER COVER (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/L Touring: 87 to 90-ALL
44	32525-89	TIMER COVER (1)	Softail: 90 to 90-BM
45	32591-80	GASKET, timer cover (1)	ALL
46	32604-78	TERMINAL ADAPTOR (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
47	32606-82	SCREW, timer plate (2)	ALL
48	38713-87A	BRACKET, ignition wire (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
49	42327-70	BRACKET, ignition wire (1)	Touring: 89 to 90-ALL
49	67075-57A	BRACKET, spark plug cable (1)	Softail: 87 to 90-ALL
50	72051-77	PLUG, female-module (1)	ALL
51	74521-77	PLUG, male-sensor (1)	ALL
52	74536-77A	PIN, single socket (3)	ALL
53	74539-77A	SOCKET, single pin (3)	ALL
54	83162-51	OIL SEAL (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

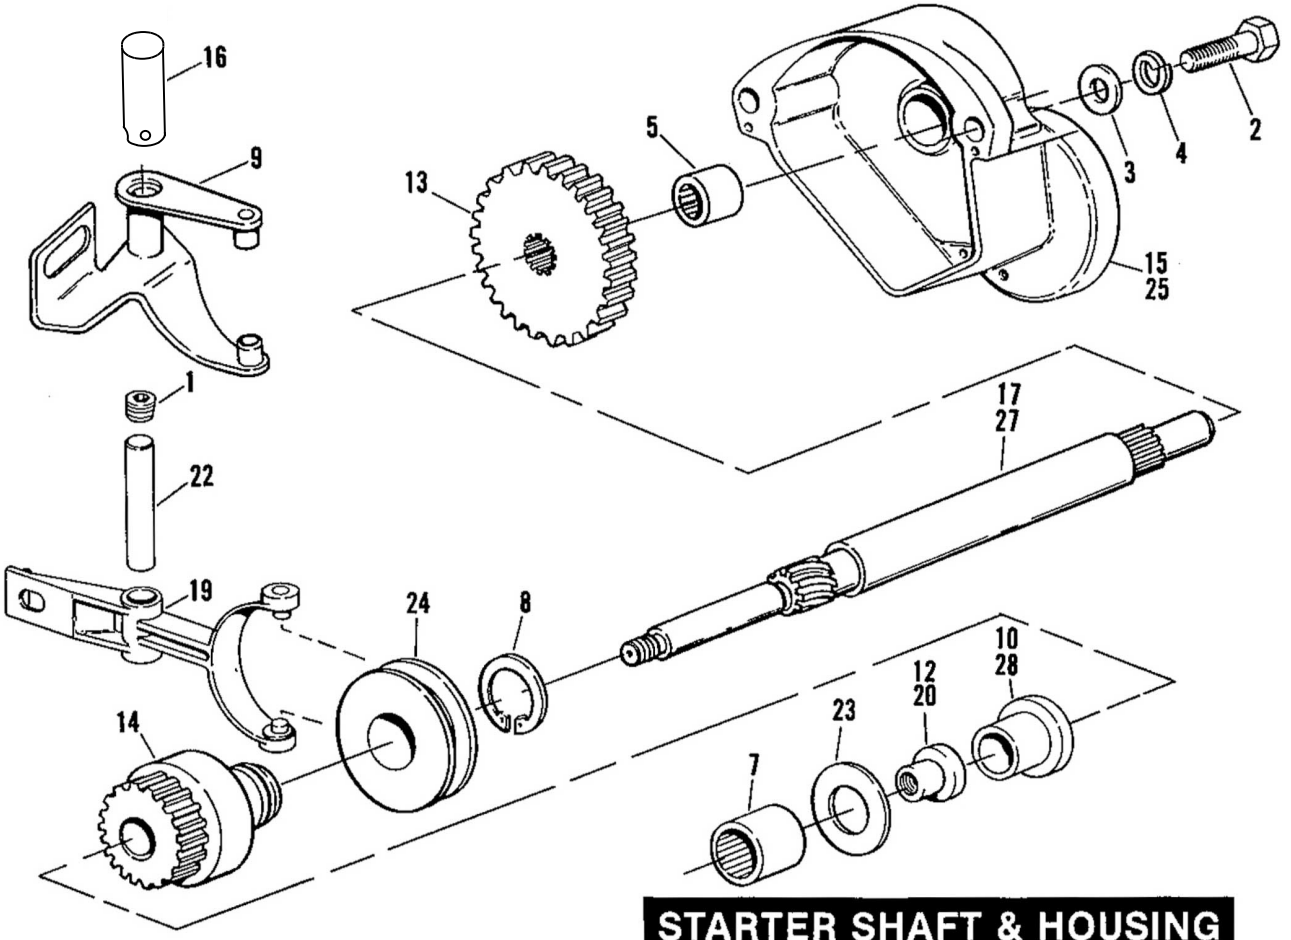

STARTER SHAFT & HOUSING
1987 & 1988


STARTER SHAFT AND HOUSING - 1987 AND 1988

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	721	PLUG, pivot pin (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
1	727	PLUG, pivot pin (1)	Softail: 87 and 88-ALL
2	2887W	BOLT (2)	Softail: 87 and 88-ALL Touring: 87 and 88-ALL
2	3485	SCREW (2)	FXR: 87 and 88-ALL
3	6016	WASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
4	7041	LOCKWASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL
5	9062	NEEDLE BEARING, housing (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
7	9063	NEEDLE BEARING, primary cov. (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
8	11039	RETAINING RING, shifter collar (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
9	31300-84	SHIFTER LEVER, starter gear (1)	Softail: 87 and 88-ALL
10	31311-80	SPACER, starter shaft (1)	Softail: 87 and 88-ALL
12	31312-80	NUT, starter shaft (1)	Softail: 87 and 88-ALL
13	31340-80	GEAR, starter shaft (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
14	31443-65A	STARTER DRIVE GEAR UNIT (1)	FXR: 87 and 88-EA/B/C/G Softail: 87 and 88-ALL Touring: 87 and 88-ALL
15	31447-86	STARTER SHAFT HOUSING, w/#5 (blk. wrkl.) (1)	FXR: 87-EJ/L; 88-EB/L Touring: 87 and 88-ALL
16	31473-86	PIVOT PIN, shift lever (1)	Softail: 87 and 88-ALL
17	31482-86	STARTER SHAFT (1)	Softail: 87 and 88-ALL
19	31491-79	SHIFTER LEVER, starter gear (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
20	31493-67	NUT, starter shaft (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
22	31495-79	PIVOT PIN, shift lever (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
23	31502-65	THRUST WASHER, primary cov. (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
24	31503-65	SHIFTER COLLAR (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
25	31572-86	STARTER SHAFT HOUSING, w/#5 (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
27	33120-85	STARTER SHAFT (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
28	33121-79	SPACER, starter shaft (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

STARTER MOTOR
1987 & 1988

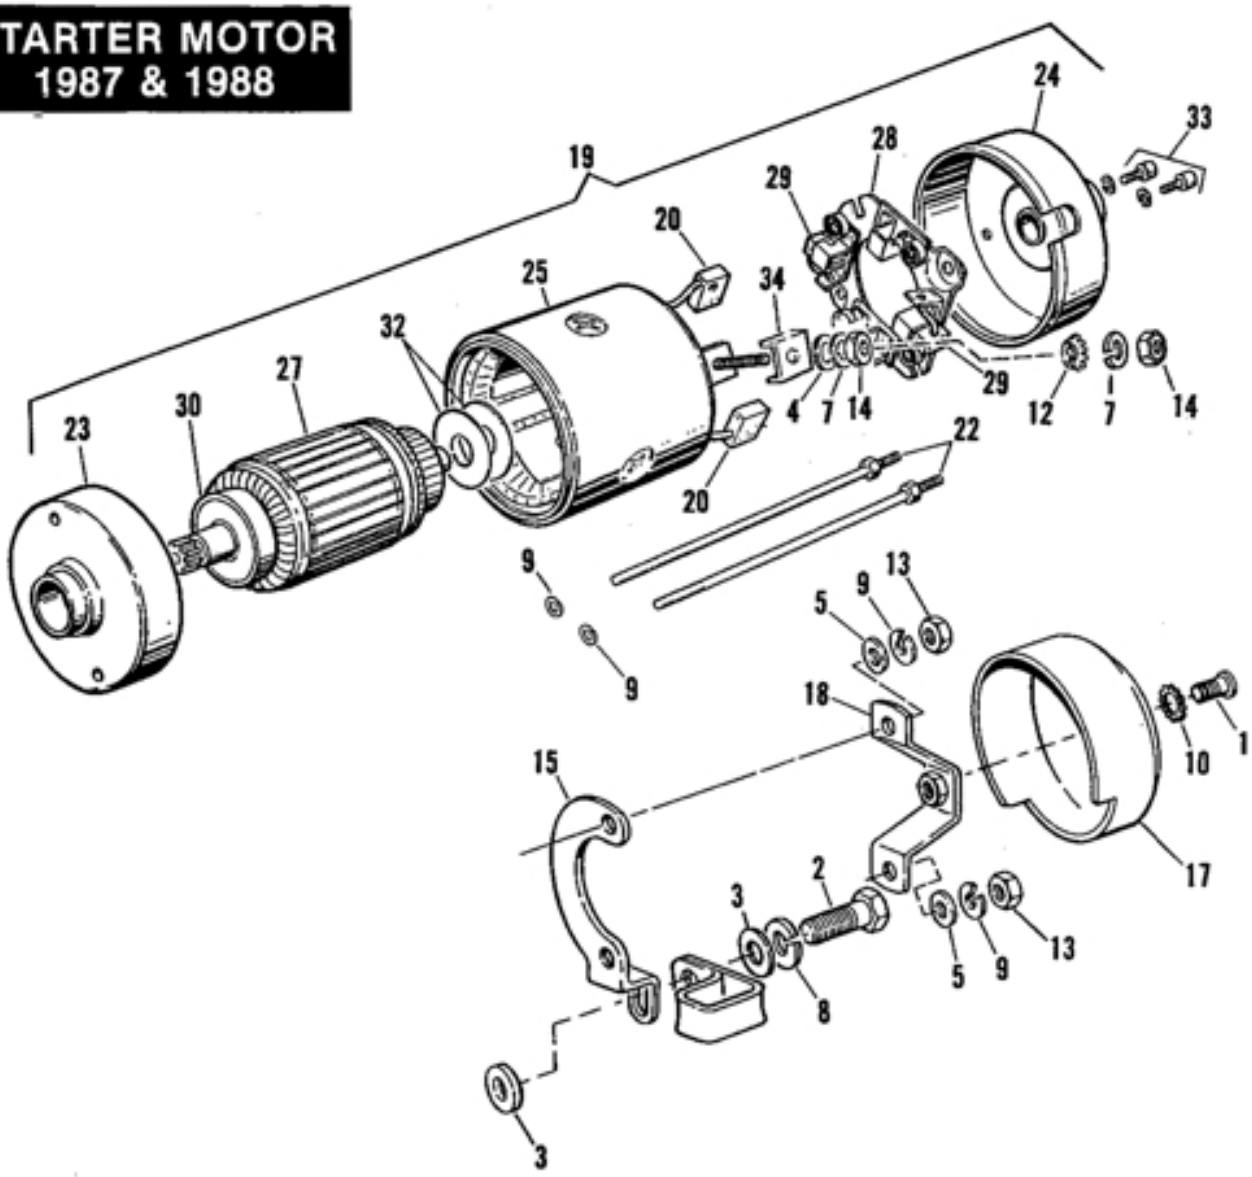


STARTER MOTOR - 1987 AND 1988 (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2682	SCREW (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
2	4017	BOLT (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
3	6016	WASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
4	6703	WASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
5	6716	WASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
7	7036	WASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
8	7041	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
9	7069	LOCKWASHER (4)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
10	7220	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
12	7230	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
13	7620W	NUT (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
14	7688	NUT (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
15	31479-83	BRACKET, starter mtg. (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
17	31524-80	COVER, starter motor (chrome) (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
18	31564-83	BRACKET, end cover (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

STARTER MOTOR
1987 & 1988

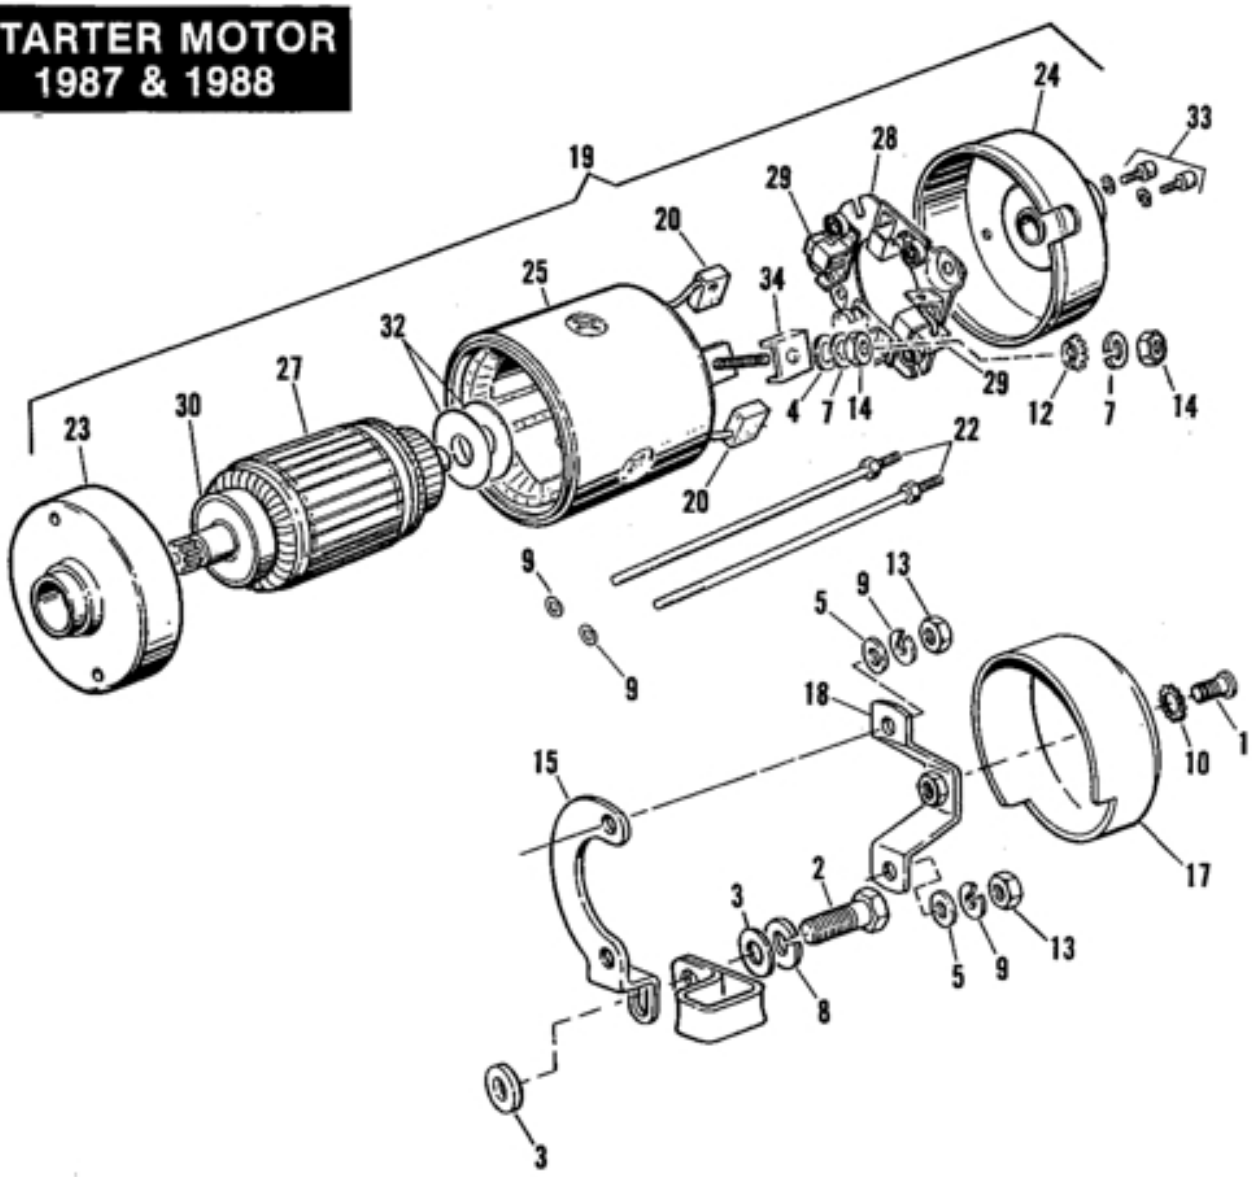


STARTER MOTOR - 1987 AND 1988 (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	31570-73	STARTER MOTOR (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
20	31575-73	BRUSH, field coil mtd. (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
22	31576-73	SET OF THRU-BOLTS (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
23	31577-73	COVER, drive end, N/A (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
24	31578-73	COVER, commutator end w/bushing (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
25	31579-73	FRAME AND FIELD COILS, w/2 brushes (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
27	31580-73	ARMATURE, w/ball bearing (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
28	31581-73	BRUSH HOLDER, w/4 springs and 2 brushes (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
29	31582-73	BRUSH (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
30	31583-73	BALL BEARING, armature drive end (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
32	31584-73	SET OF THRUST WASHERS, comm. end (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
33	31585-73	SCREW, w/ lockwasher (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
34	31586-73	INSULATOR, terminal (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

STARTER MOTOR AND SHAFT
1989 & LATER

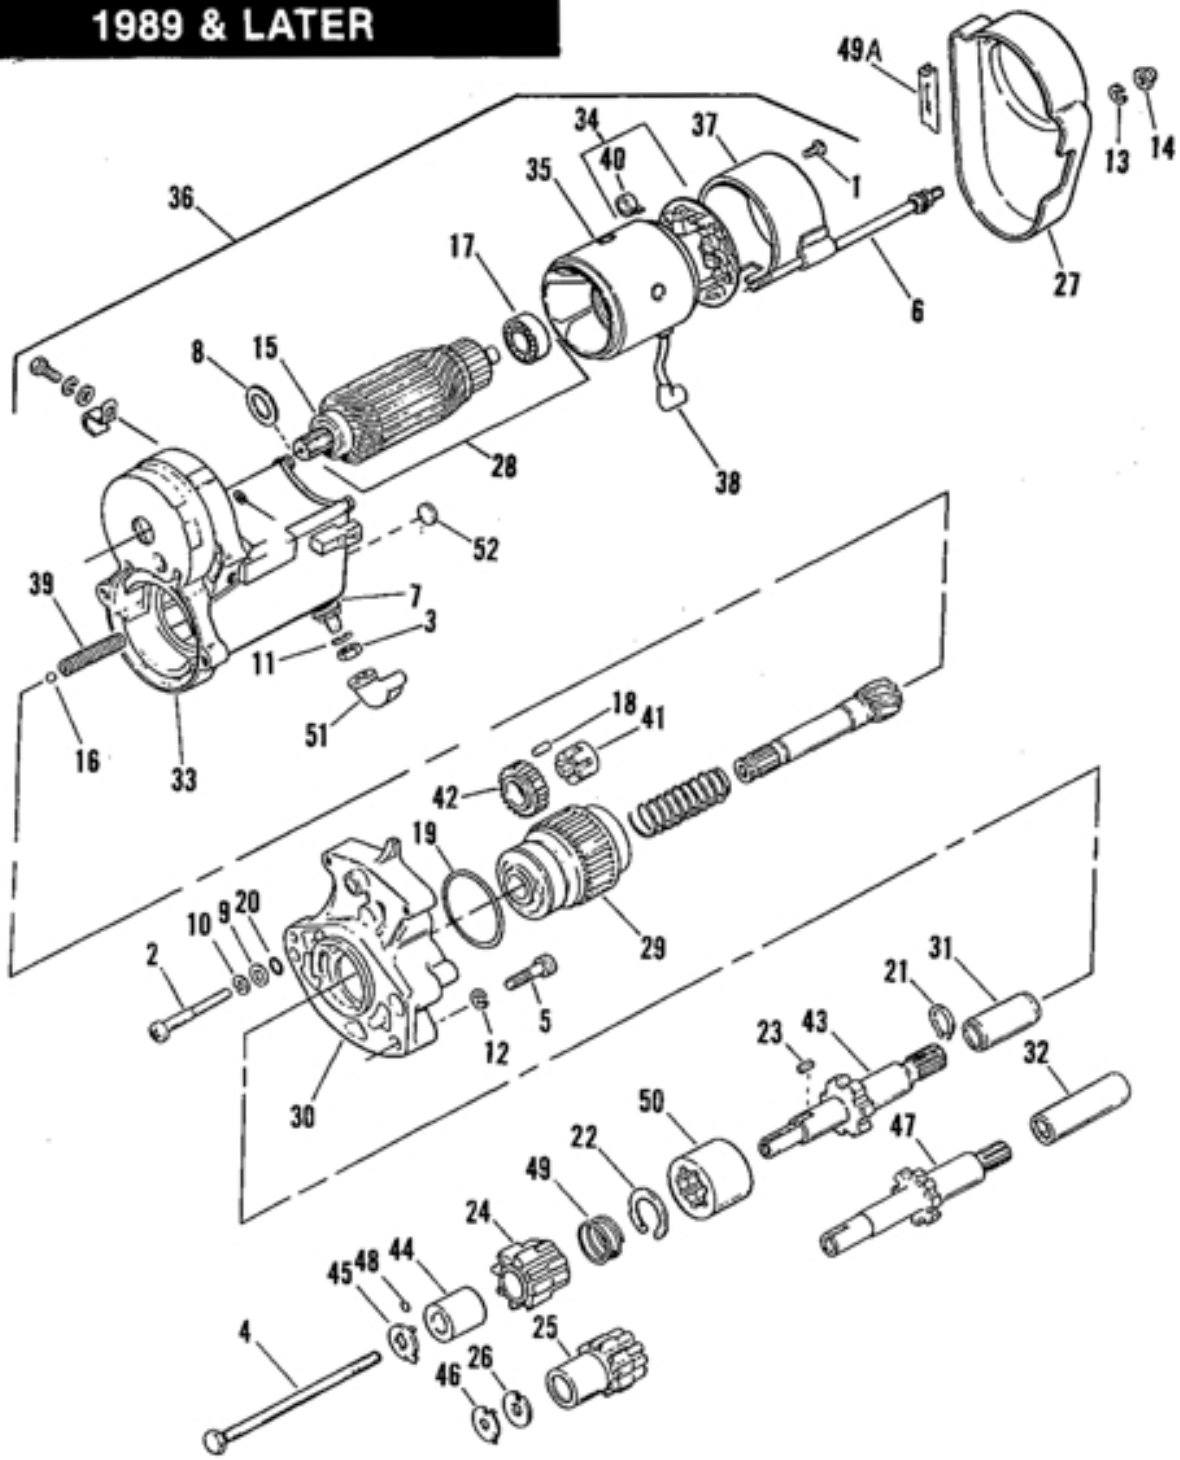


STARTER MOTOR AND SHAFT - 1989 AND LATER (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	910	SCREW (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
2	917	SCREW (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
3	3402	NUT (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
4	4325	BOLT (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
5	4326A	SCREW (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
6	3555	SCREW W/WASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
7	3557	NUT W/WASHER (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
8	6005	WASHER, felt (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
9	6236B	WASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
10	7036	WASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
11	7041	LOCKWASHER (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
12	7045	LOCKWASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
13	7124	LOCKWASHER (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
14	7737W	ACORN NUT (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
15	8877	BALL BEARING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
16	8879	BALL (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
17	8882	BALL BEARING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
18	9077	ROLLER, bearing (5)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
19	11116	O-RING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

STARTER MOTOR AND SHAFT
1989 & LATER

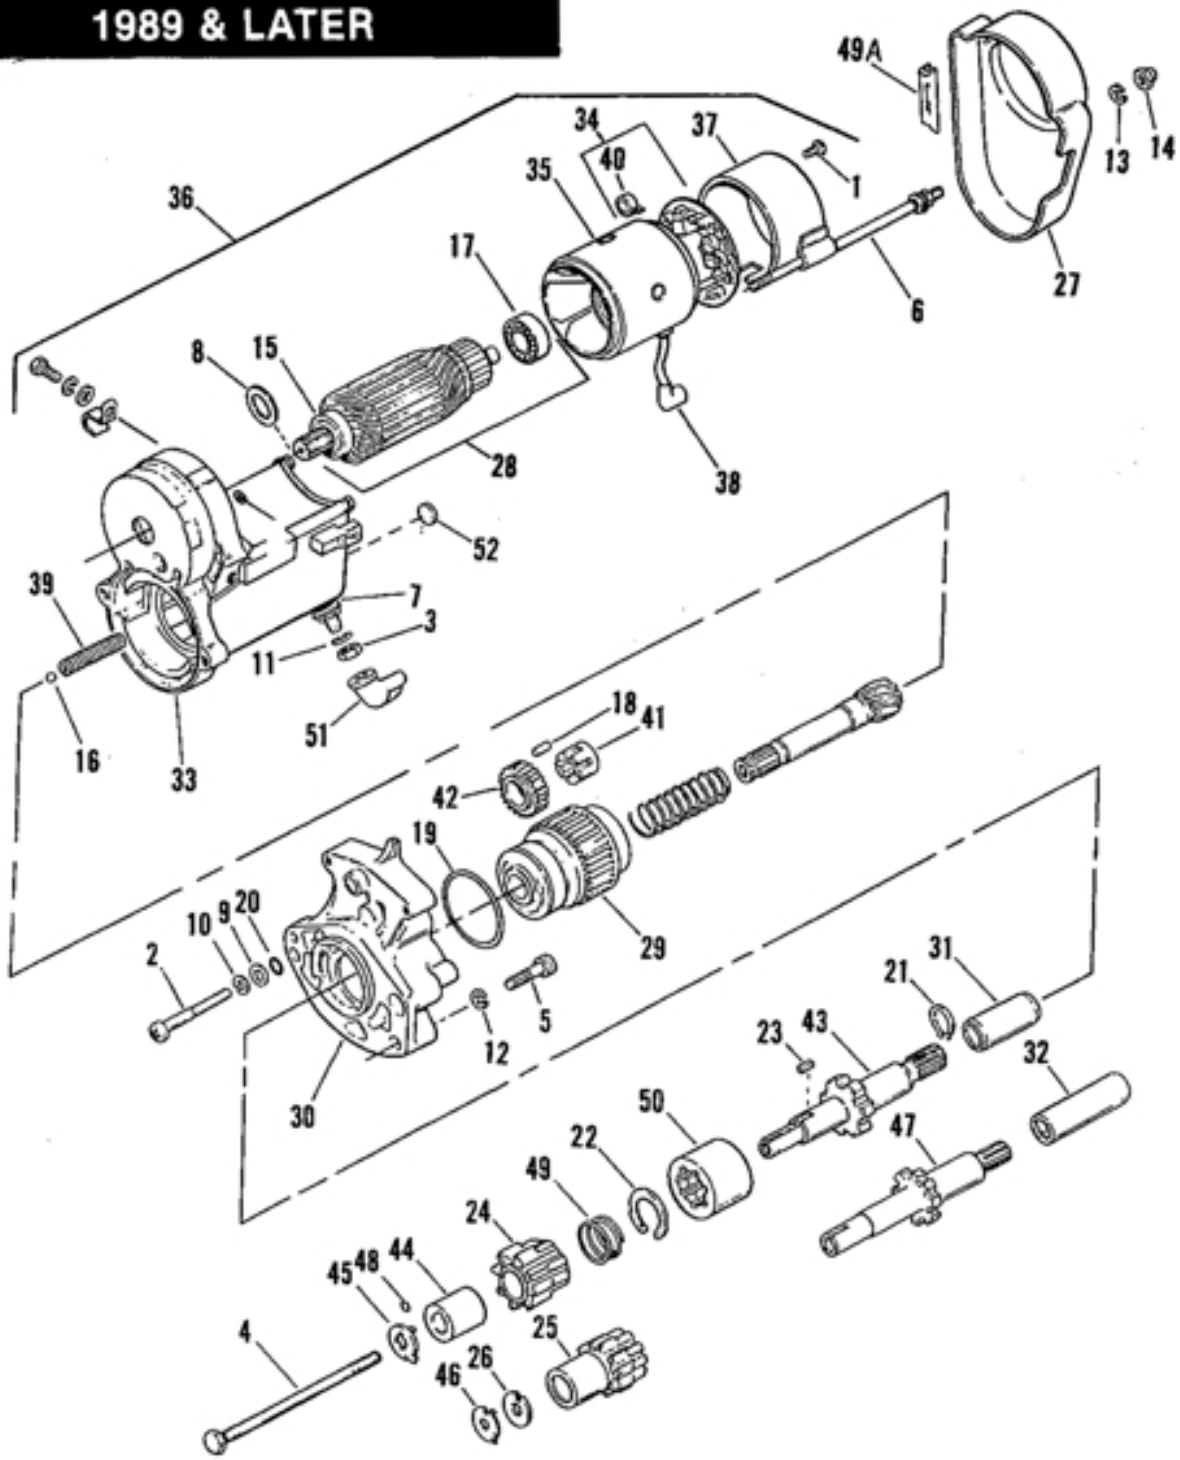


STARTER MOTOR AND SHAFT - 1989 AND LATER (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	11171	O-RING (2)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
21	11182	RETAINING RING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
22	11183	RETAINING RING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
23	11220	KEY (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
24	31340-89	PINION GEAR (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
25	31342-90	PINION GEAR (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
26	31430-90	THRUST WASHER (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
26	31487-90	JACKSHAFT ASM. KIT W/ OIL SEAL (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
27	31535-89	COVER, starter (1)	FXR: 89 to 90-ALL Touring: 89 to 90-ALL
27	31536-89	COVER, starter (1)	Softail: 89 to 90-ALL
28	31543-90	ARMATURE ASSEMBLY (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
29	31544-90	CLUTCH ASSEMBLY, clutch (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
30	31545-90	HOUSING, starter (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
31	31547-89	COUPLING (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
32	31548-90	COUPLING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
33	31549-90	SWITCH ASSEMBLY, magnetic (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
34	31550-90	BRUSH HOLDER ASSEMBLY (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
35	31551-90	YOKE ASSEMBLY, starter (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
36	31552-89A	STARTER MOTOR, complete (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
37	31554-90	FRAME, starter end (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
38	31555-90	CAP, starter terminal (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

STARTER MOTOR AND SHAFT
1989 & LATER

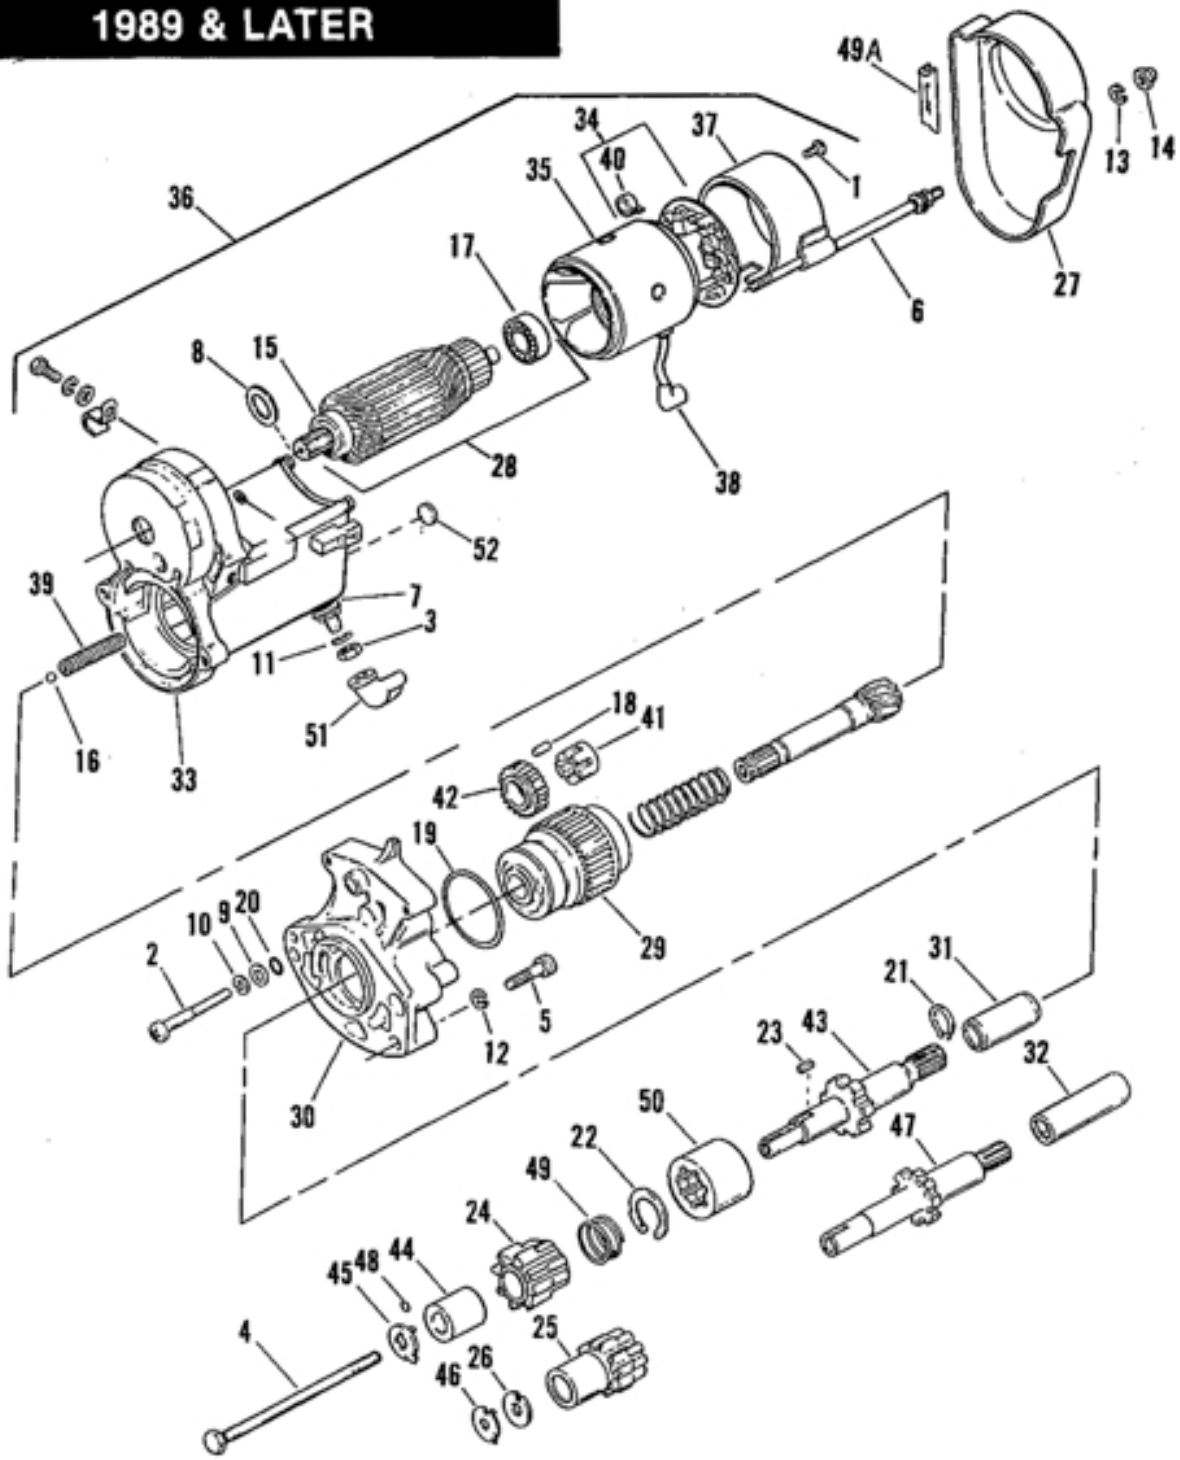


STARTER MOTOR AND SHAFT - 1989 AND LATER (3 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	31557-81	SPRING, compression (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
40	31593-81	SPRING, brush (4)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
41	31597-81	RETAINER, roller (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
42	31598-89	IDLER GEAR (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
43	33120-89	SHAFT (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
44	33121-89	SLEEVE (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
45	33125-89	LOCKPLATE (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
46	33126-90	LOCKPLATE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
47	33127-90	SHAFT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
48	33340-90	O-RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
48	33345-89	O-RING (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
49	33447-89	SPRING, pinion gear (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
49	33449-90	SPRING, pinion gear (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
49A	58704-86	MOLDING (1)	FXR: 90 to 90-ALL
50	60646-89	COUPLING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
50	60647-90	COUPLING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
51	70578-89	BOOT (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
52	75101-82	SPACER, rubber (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

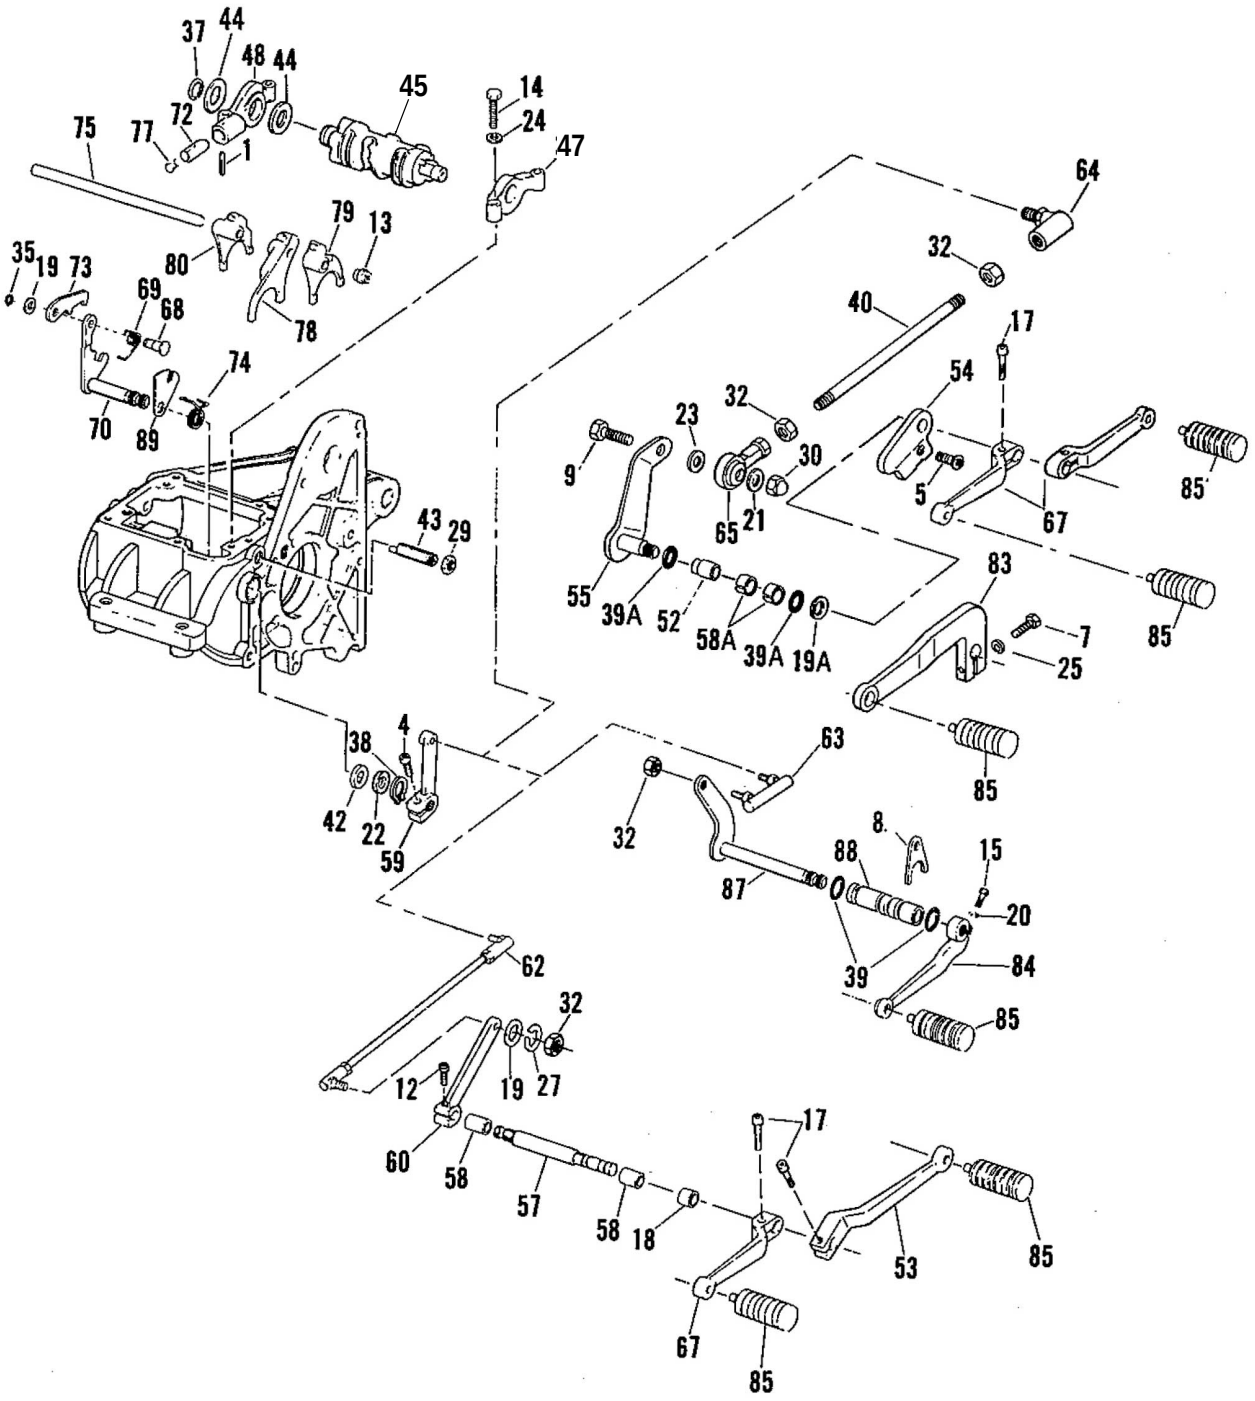


GEAR SHIFTER

GEAR SHIFTER (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN (1)	ALL
4	856A	SCREW (1)	ALL
5	1719W	SCREW (1)	Softail: 87 to 90-BJ/M
7	2551W	BOLT (1)	Softail: 87 to 89-BH/K/L
7	4017	BOLT (1)	Softail: 90 to 90-BH/J/K
8	2773	SCREW (1)	Softail: 87 to 90-BJ/M
9	3415	BOLT (1)	Softail: 87 to 90-ALL
12	3444A	SCREW (1)	Touring: 87 to 90-ALL
13	3784	SET SCREW, shf. fork shaft-left (1)	ALL
14	3993	BOLT (4)	ALL
15	4016	SCREW (1)	FXR: 87 to 90-ALL
17	4069A	SCREW (2)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
18	5702	SPACER (1)	ALL
19	6016	WASHER, as req'd (1)	ALL
19A	6057	WASHER (1)	Softail: 90 to 90-ALL
20	6314W	WASHER (1)	FXR: 87 to 90-ALL
21	6316HW	WASHER (1)	Softail: 89 to 90-ALL
22	6497HW	WASHER (1)	ALL
23	6702	WASHER (1)	Softail: 87 and 88-ALL
24	6736	WASHER (4)	ALL
25	7036	WASHER (1)	Softail: 87 to 89-BH/K/L
27	7041	LOCKWASHER (1)	Softail: 90 to 90-BH/K/L Touring: 87 to 90-ALL
28	7230	LOCKWASHER (1)	Softail: 87 to 90-BJ/M
29	7515	JAMNUT (1)	ALL
30	7736	ACORN NUT (2)	Softail: 87 to 90-ALL
32	7744	JAMNUT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
33	7753	NUT (1)	Touring: 87 to 90-ALL
35	11016	RETAINING RING (1)	ALL
37	11083	RETAINING RING (1)	ALL
38	11150	RETAINING RING (1)	ALL
39	11117	O-RING, sleeve (2)	FXR: 87 to 90-ALL
39A	11191	O-RING (2)	Softail: 90 to 90-ALL
40	11729	STUD (1)	Softail: 87 to 90-ALL
42	12045	SEAL (1)	ALL
43	33119-79A	ADJUSTING SCREW, shifter. arm (1)	ALL
44	33205-80	THRUST WASHER, 0.017 thk. (as req'd) (1)	ALL
44	33206-80	THRUST WASHER, 0.020 thk. (as req'd) (1)	ALL
44	33207-80	THRUST WASHER, 0.022 thk. (as req'd) (1)	ALL
44	33208-80	THRUST WASHER, 0.025 thk. (as req'd) (1)	ALL
44	33209-80	THRUST WASHER, 0.028 thk. (as req'd) (1)	ALL
44	33210-80	THRUST WASHER, 0.031 thk. (as req'd) (1)	ALL
44	33211-80	THRUST WASHER, 0.035 thk. (as req'd) (1)	ALL
44	33212-80	THRUST WASHER, 0.039 thk. (as req'd) (1)	ALL
45	33320-79C	SHIFTER CAM (1)	ALL
47	33326-79	SUPPORT, shifter cam-left (1)	ALL
48	33332-79	SUPPORT, shifter cam-right (1)	ALL
52	33638-70	BUSHING, shift lever (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

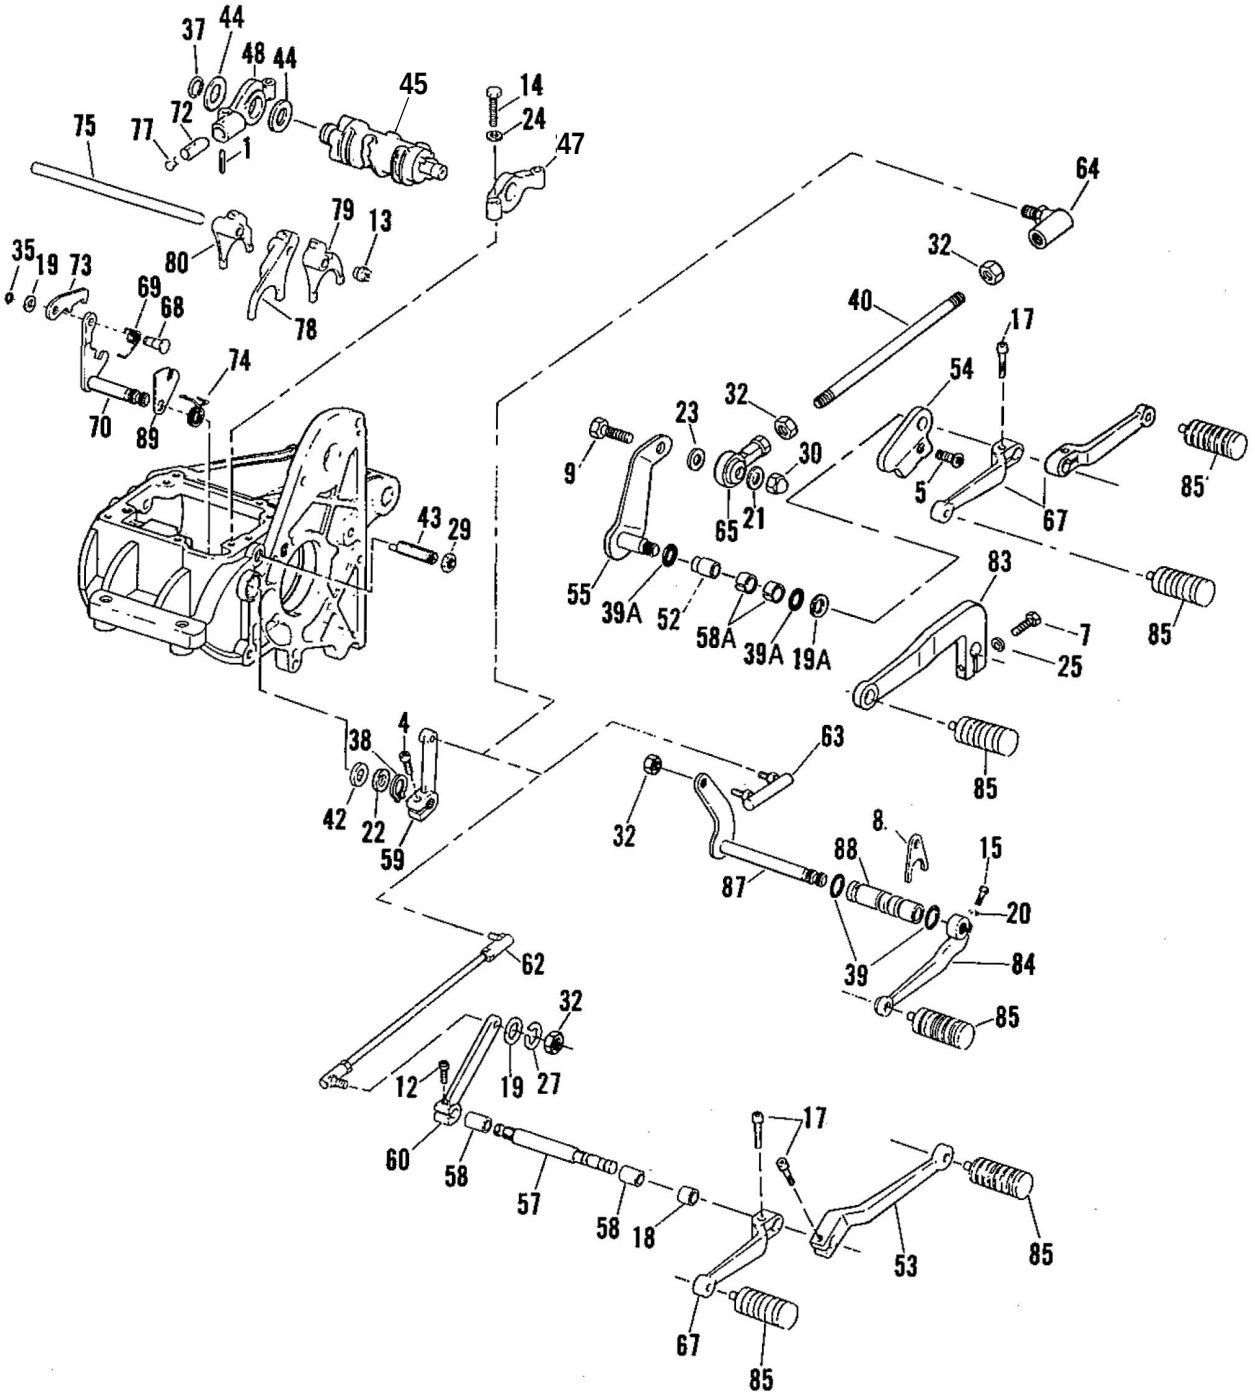

GEAR SHIFTER


GEAR SHIFTER (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
53	33640-83	SHIFT LEVER, heel (1)	Touring: 87 to 90-ALL
54	33642-86	COVER ASSY., shifter (chrome), N/A (1)	Softail: 87 and 88-BJ
54	33642-89	COVER ASSY., shifter (chrome) (1)	Softail: 89 to 90-BJ/M
55	33660-85	SHIFT LEVER, chrome (1)	Softail: 87 to 89-BH/K/L
55	33660-90	SHIFT LEVER, chrome (1)	Softail: 90 to 90-BH/K/L
55	33668-86	SHIFT LEVER, chrome (1)	Softail: 87 to 89-BJ
55	33668-90	SHIFT LEVER, chrome (1)	Softail: 90 to 90-BJ
57	33709-82	SHAFT (1)	Touring: 87 to 90-ALL
58	33713-85	BUSHING, shifter brkt. (2)	Touring: 87 to 90-ALL
58A	33714-90	BUSHING (2)	Softail: 90 to 90-ALL
59	33715-85	LEVER, shifter rod (1)	ALL
60	33718-82	LEVER (1)	Touring: 87 to 90-ALL
62	33719-79A	SHIFTER ROD (1)	Touring: 87 to 90-ALL
63	33728-82A	BALL JOINT (1)	FXR: 87 to 90-ALL
64	33729-82	BALL JOINT (1)	Softail: 87 to 90-ALL
65	33871-85	END, shifter rod (1)	Softail: 87 to 90-ALL
67	33895-82	SHIFT LEVER, chrome (2-BJ/M) (1)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
68	34082-79	PIN, shifter shaft lever (1)	ALL
69	34083-79	SPRING, shifter shaft lever (1)	ALL
70	34084-86	LEVER, shifter shaft w/#68 and 69 (1)	ALL
72	34085-79A	CAM FOLLOWER (1)	ALL
73	34086-79	PAWL, shifter cam (1)	ALL
74	34087-79	SPRING, shifter shaft (1)	ALL
75	34088-87	SHAFT, shifter fork (1)	ALL
77	34089-79	SPRING (1)	ALL
78	34191-79C	SHIFTER FORK (1)	ALL
79	34193-79C	SHIFTER FORK (1)	ALL
80	34195-79C	SHIFTER FORK (1)	ALL
82	34561-84	SLEEVE LOCATOR PLATE (1)	FXR: 87 to 90-ALL
83	34564-74B	SHIFT LEVER, chrome (1)	Softail: 87 to 89-BH/K/L
83	34564-90A	SHIFT LEVER, chrome (1)	Softail: 90 to 90-BH/K/L
84	34599-81	LEVER, shifter (1)	FXR: 87 to 90-ALL
85	34611-65	PEG, shift lever (2-FLT, BJ/M) (1)	ALL
87	34621-84	SHIFT LEVER (1)	FXR: 87 to 90-ALL
88	34632-84	SLEEVE, shift lever (1)	FXR: 87 to 90-ALL
89	35068-79	PLATE (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

TRANSMISSION HOUSING

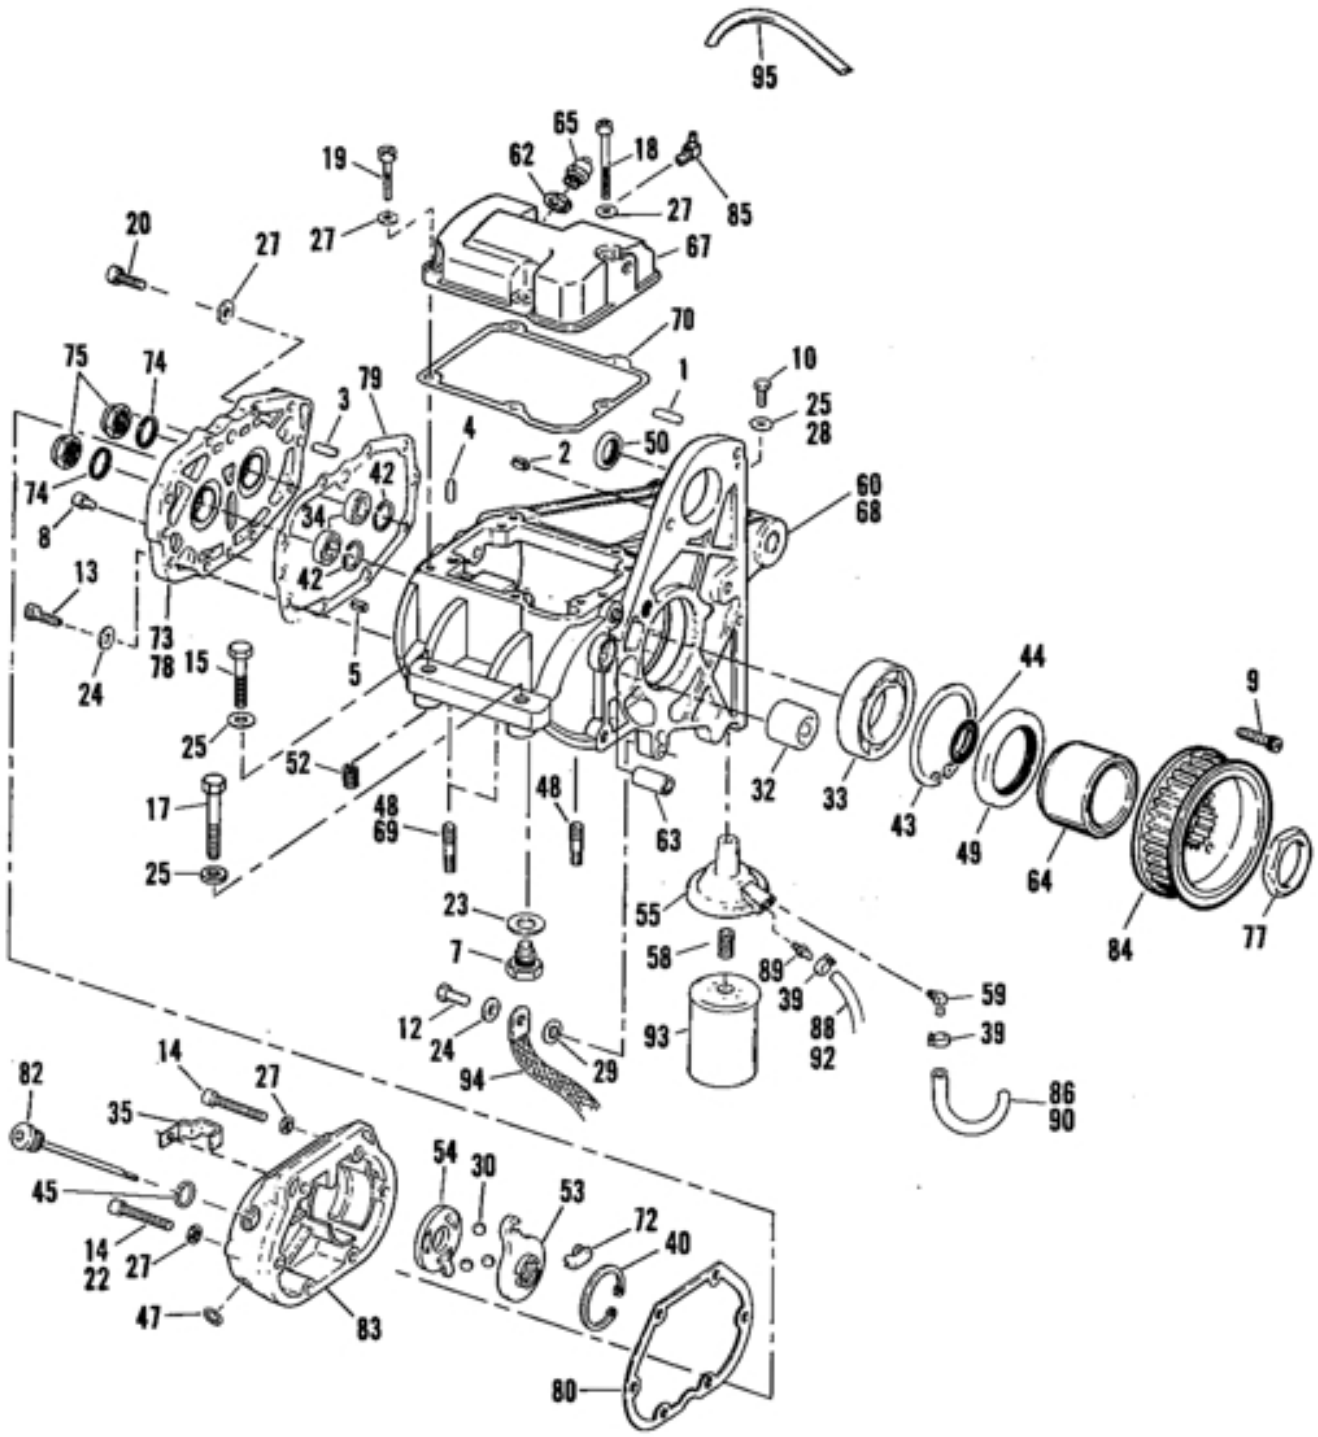


TRANSMISSION HOUSING (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	335	DOWEL PIN (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
1	337	DOWEL PIN (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
2	336	ROLL PIN (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
3	375	DOWEL PIN, 2-1987 and 1988 (1)	ALL
4	609	PIN (2)	ALL
5	634	PIN (1)	ALL
7	722	PLUG (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
8	739	PLUG (1)	Softail: 87 to 89-ALL
9	857	SCREW (1)	ALL
10	2851	BOLT (1)	Softail: 88 to 90-ALL
10	2879W	BOLT (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 to 90-ALL
12	2871W	BOLT (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
13	3210	SCREW (4)	ALL
14	3479	SCREW, 4-Softail (6)	ALL
15	3512	BOLT (2)	ALL
15	3528	BOLT (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
18	4717	SCREW (1)	ALL
19	4718A	SCREW (4)	ALL
19	4741	SCREW (4)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
20	4814	SCREW (2)	ALL
22	4825A	SCREW (2)	Softail: 87 to 90-ALL
23	6007	WASHER, nylon (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
24	6016	WASHER (4)	ALL
25	6019	WASHER (3)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
27	6099	WASHER (13)	ALL
28	6519	WASHER (1)	Softail: 87 to 90-ALL
29	7100	LOCKWASHER (1)	FXR: 89 to 90-ALL Touring: 89 to 90-ALL
29	7127	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL
30	8873	BALL (3)	ALL
32	8977	NEEDLE BEARING (1)	ALL
33	8996	BALL BEARING, mainshaft-left side (1)	ALL
34	8998	BALL BEARING (2)	ALL
35	10069	CLAMP (1)	FXR: 87 to 89-ALL
35	10084	CLAMP (1)	FXR: 90 to 90-ALL
39	10080	CLAMP, 2-Softail (4)	ALL
40	10998	RETAINING RING (1)	ALL
42	11020	RETAINING RING, brg. (2)	ALL
43	11161	RETAINING RING, ball brg. (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

TRANSMISSION HOUSING

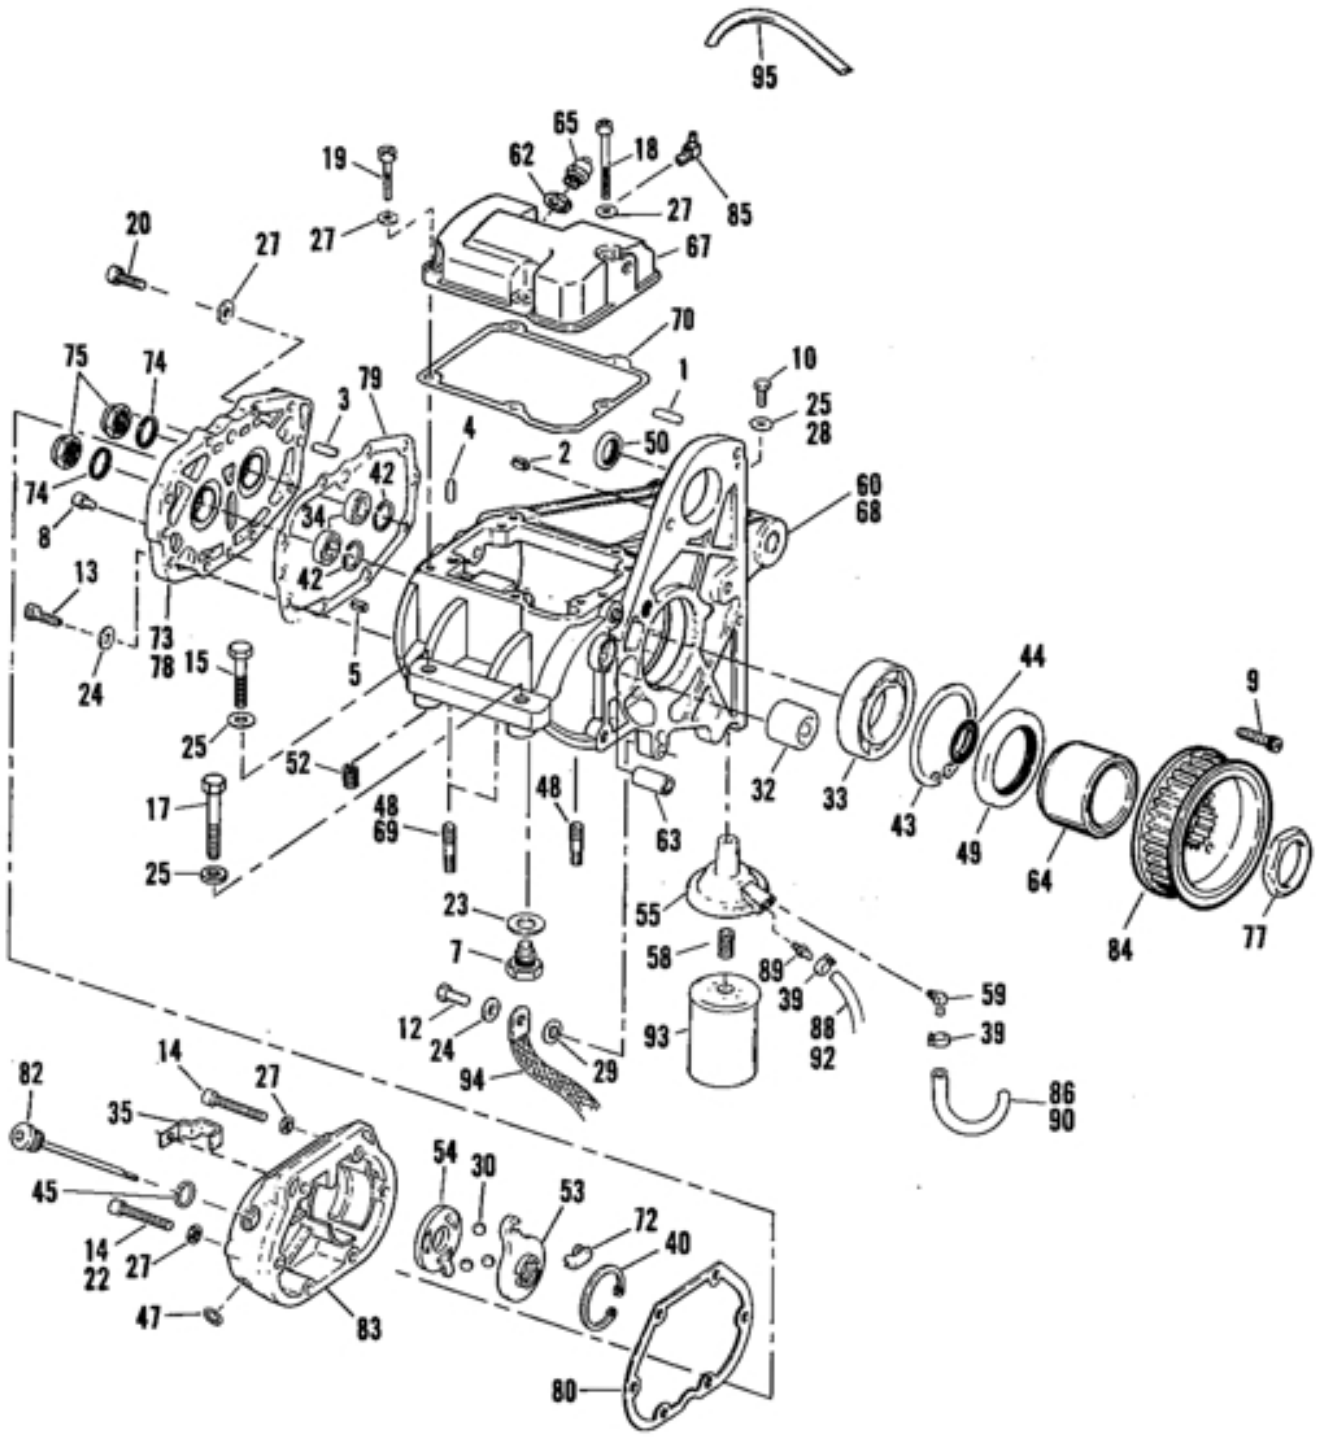


TRANSMISSION HOUSING (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
44	11165	QUAD SEAL, ball brg. (1)	ALL
45	11178	O-RING, filler plug (1)	ALL
47	11179	O-RING, clutch cable (1)	ALL
48	11733	STUD, 5-1989 and Later (1)	Softail: 87 to 90-ALL
49	12050	OIL SEAL, mainshaft-left side (1)	ALL
50	12051	OIL SEAL, transmission to starter (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
52	24557-87	INSERT, threaded (2)	FXR: 87-ALL Touring: 87-ALL
53	25452-87A	INNER RAMP (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
53	25452-90	INNER RAMP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
54	25453-87	OUTER RAMP (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
54	25453-90	OUTER RAMP (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
55	26350-85A	MOUNTING BRACKET, oil filter (1)	ALL
58	26352-85	ADAPTOR, oil filter (1)	ALL
59	26496-75	FITTING, oil filter hose (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
59	63540-62	FITTING, oil filter hose (2)	Softail: 87 to 90-ALL
60	33005-90	TRANSMISSION, N/A (1)	Softail: 90 to 90-BH/J
60	33006-90	TRANSMISSION, C and BW, N/A (1)	Softail: 90 to 90-BJ/K/L
60	33008-90	TRANSMISSION, N/A (1)	Softail: 90 to 90-BM
60	33013-90	TRANSMISSION, C and BW, N/A (1)	Touring: 90 to 90-DB/J/M/P
60	33017-90	TRANSMISSION, N/A (1)	Touring: 90 to 90-FA
60	33021-90	TRANSMISSION, C and BW, N/A (1)	FXR: 90 to 90-EB
60	33022-90	TRANSMISSION, N/A (1)	FXR: 90 to 90-EA/C/M
60	33024-90	TRANSMISSION, C and BW, N/A (1)	FXR: 90 to 90-EL
60	33036-90	TRANSMISSION, N/A (1)	FXR: 90 to 90-EG
62	33043-80	WASHER, neutral indicator switch (1)	ALL
63	33114-79	SPACER (1)	ALL
64	33334-85	SPACER, sprocket (1)	ALL
65	33900-59B	SWITCH, neutral indicator (1)	ALL
67	34464-86A	COVER, upper (polished) (1)	ALL
67	34468-86A	COVER, upper (chrome) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L Touring: 87 to 90-DB/J/M/P
68	34700-87	HOUSING, black wrinkle, N/A (1)	FXR: 87-EL Touring: 87-DB/J
68	34700-88	HOUSING, black wrinkle (1)	FXR: 88 to 90-EB/L Touring: 88-DB/J
68	34700-89A	HOUSING, black wrinkle (1)	FXR: 89 to 90-EB/L Touring: 89 to 90-DB/J/M/P
68	34730-87	HOUSING, N/A (1)	FXR: 87-ALL Touring: 87-ALL
68	34730-88	HOUSING (1)	FXR: 88-ALL Touring: 88-ALL
68	34730-89A	HOUSING (1)	FXR: 89 to 90-EA/C/G/M Touring: 89 to 90-FA
68	34731-86A	HOUSING (1)	Softail: 87 and 88-ALL
68	34731-89	HOUSING (1)	Softail: 89 to 90-ALL
68	34732-86A	HOUSING, black wrinkle (1)	Softail: 87 and 88-BJ/K/L
68	34732-89A	HOUSING, black wrinkle (1)	Softail: 89 to 90-BJ/K/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

TRANSMISSION HOUSING

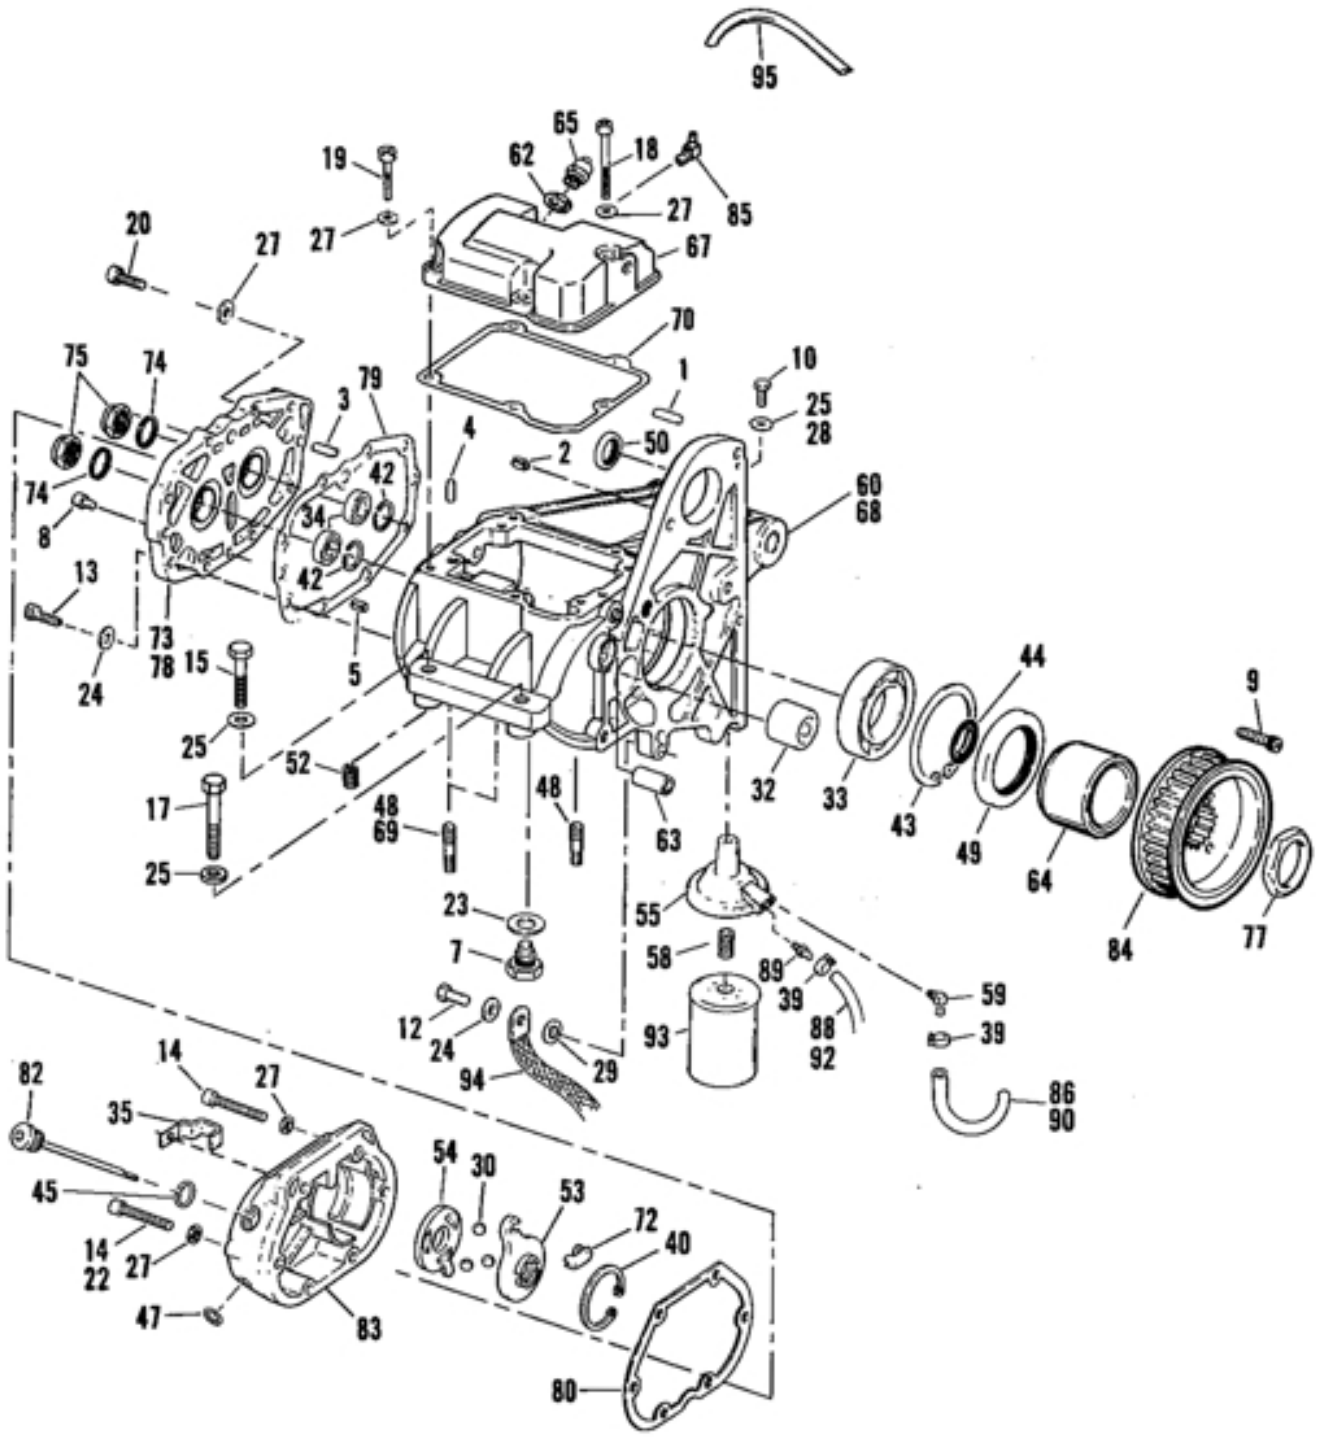

TRANSMISSION HOUSING (3 OF 3)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
69	34725-84	STUD (4)	Softail: 87 and 88-ALL
70	34904-86	GASKET, upper cover (1)	ALL
72	34920-86	COUPLING (1)	ALL
73	35074-87	BEARING HOUSING, polished (1)	FXR: 87 to 89-ALL Touring: 87 to 89-ALL
73	35074-90A	BEARING HOUSING, polished (1)	FXR: 90 to 90-EA/C/G/M Touring: 90 to 90-FA
73	35077-87	BEARING HOUSING, polished (1)	Softail: 87 to 89-ALL
73	35077-90	BEARING HOUSING, polished (1)	Softail: 90 to 90-BH/J/M
74	35076-79	SPACER (2)	ALL
75	35078-79	NUT, mainshaft and countershaft (1)	ALL
77	35211-36	NUT, sprocket (1)	ALL
78	35259-87B	BEARING HOUSING, black wrinkle (1)	Softail: 87 to 90-BJ/K/L
78	35261-87	BEARING HOUSING, black wrinkle (1)	FXR: 87 to 89-EL; 88 and 89-EB Touring: 87 to 89-DB/J/M/P
78	35261-90A	BEARING HOUSING, black wrinkle (1)	FXR: 90 to 90-EB/L Touring: 90 to 90-DB/J/M/P
78	35257-87C	BEARING HOUSING, plain (1)	Touring: 87 to 90-BH/J
79	35652-79A	GASKET, bearing housing (1)	ALL
80	36801-87A	GASKET, right side cover (1)	ALL
82	37071-87	FILLER PLUG, polished (1)	ALL
82	37075-87	FILLER PLUG, chrome (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BJ/K/L/M Touring: 87 to 90-DB/J
83	37081-87A	CLUTCH RELEASE COVER, polished (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
83	37103-87A	CLUTCH RELEASE COVER, polished (1)	FXR: 87 to 90-ALL
83	37105-87A	CLUTCH RELEASE COVER, chrome (1)	Softail: 87 to 90-BJ/K/L/M Touring: 87 to 90-DB/J/M/P
83	37109-87A	CLUTCH RELEASE COVER, chrome (1)	FXR: 87 to 90-EL; 88 to 90-EB
84	40210-85C	SPROCKET, 32T. (1)	ALL
85	62375-57	FITTING, upper cover (1)	ALL
86	62665-85	HOSE, filter to tank (1)	Touring: 87 and 88-ALL
86	62665-89	HOSE, filter to tank (1)	Touring: 89 to 90-ALL
88	63531-87	HOSE, pump to filter inlet (1)	Softail: 87 to 90-ALL
89	63533-41	FITTING, oil filter mtg. bracket (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
90	63556-87	HOSE, filter to tank (1)	Softail: 87 to 90-ALL
92	63558-85	HOSE, oil pump to filter (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
93	63796-77A	OIL FILTER, chrome (1)	Softail: 87 to 90-BJ/K/L/M
93	63805-80A	OIL FILTER, std. (black) (1)	ALL
94	70186-82	GROUND STRAP (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL

NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.

95	63501-68	HOSE, 1/4 I.D. (rubber) (25 ft. lg.) (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

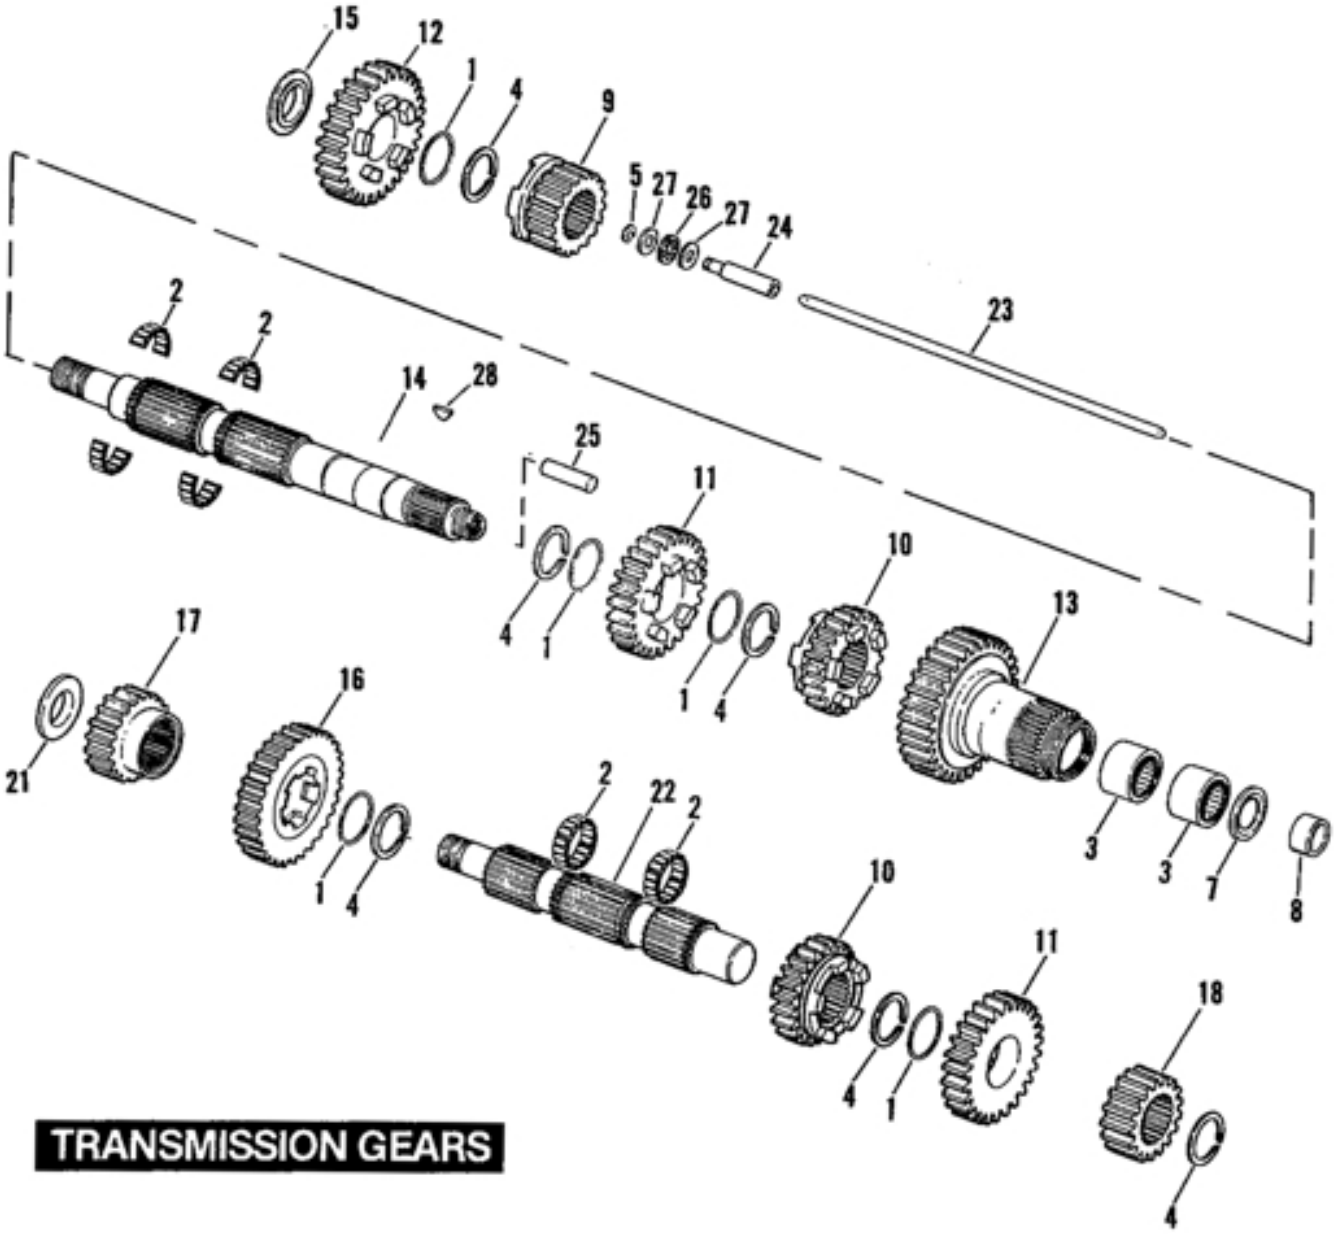


TRANSMISSION GEARS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6003	WASHER (5)	ALL
2	8876A	BEARING (4)	ALL
3	8904	NEEDLE BEARING, mainshaft fifth gear (2)	ALL
4	11067	RETAINING RING (6)	ALL
5	11096	RETAINING RING (1)	ALL
7	12013A	OIL SEAL, mainshaft fifth gear (1)	ALL
8	34091-85	BEARING, inner race (1)	ALL
9	35025-79	FIRST GEAR, mainshaft (1)	ALL
10	35026-79A	GEAR, mainsft. second and ctshft. third (2)	ALL
11	35027-79A	GEAR, mainsft. third and ctshft. second (2)	ALL
12	35028-79	FOURTH GEAR, mainshaft (1)	ALL
13	35029-85A	FIFTH GEAR, mainshaft (1)	ALL
14	35042-85	MAINSHAFT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
14	35042-90	MAINSHAFT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
15	35064-79	SPACER, mainshaft (1)	ALL
16	35622-79B	FIRST GEAR, countershaft (1)	ALL
17	35625-79A	FOURTH GEAR, countershaft (1)	ALL
18	35626-79A	FIFTH GEAR, countershaft (1)	ALL
21	35629-79	SPACER (1)	ALL
22	35632-79	COUNTERSHAFT (1)	ALL
23	37088-87	PUSH ROD, clutch release (thru mainsft.) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
23	37088-90	PUSH ROD, clutch release (thru mainsft.) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
24	37089-84	END, clutch push rod-right side (1)	ALL
25	37090-84A	END, clutch push rod-left side (1)	ALL
26	37312-75	BEARING (1)	ALL
27	37313-80	THRUST WASHER (2)	ALL
28	37523-85	KEY, clutch (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
		INTERNATIONAL MODELS ONLY	
9	35023-86	GEAR, ctshft. second (87 and 88 HDI only and 89 Swiss only) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
10	35024-86	GEAR, mainsft. second (87 and 88 HDI only and 89 Swiss only) (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

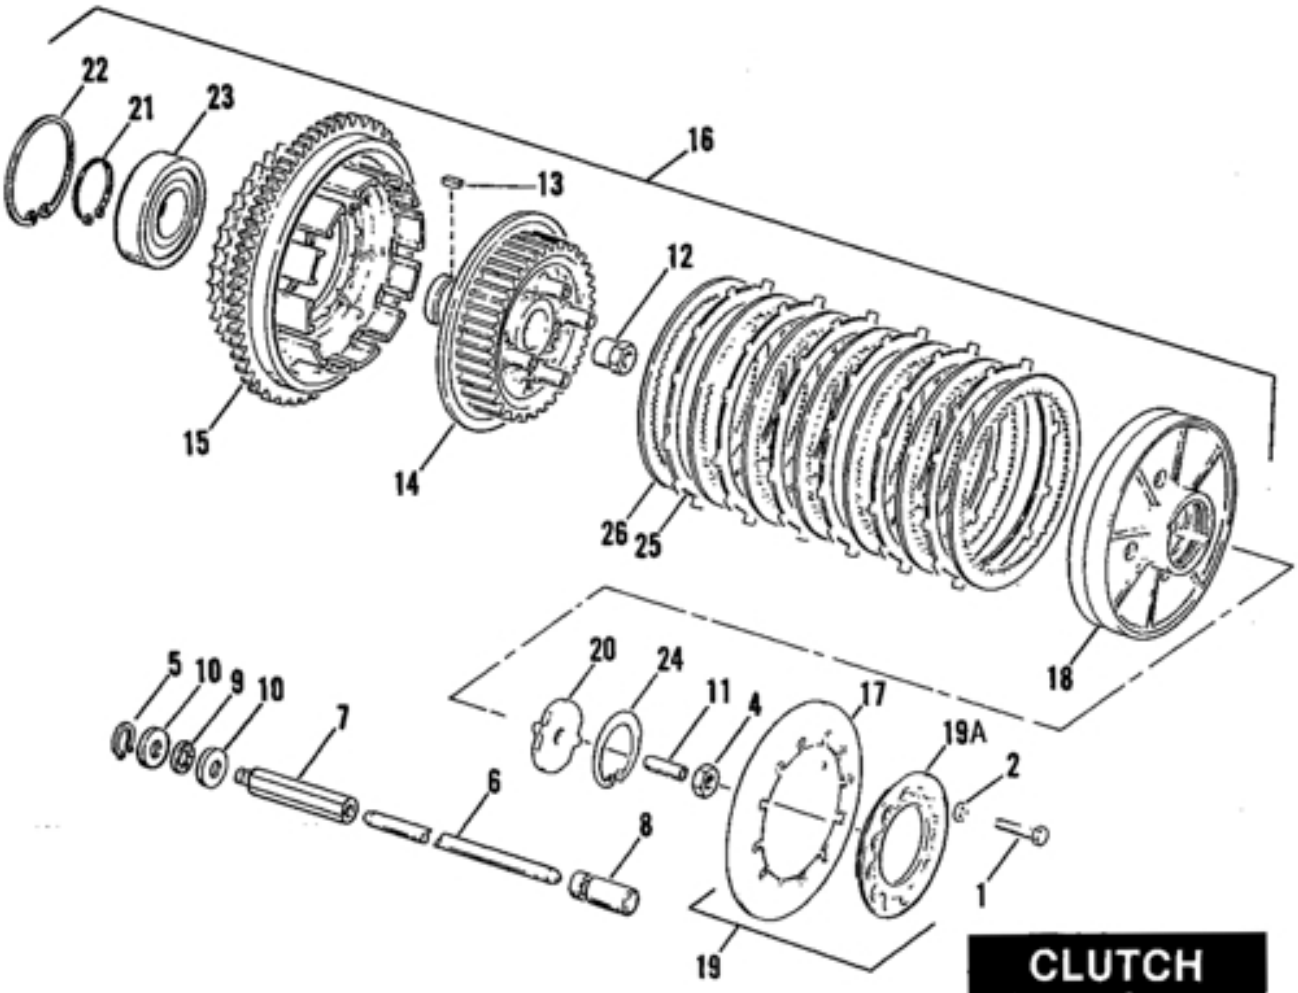


CLUTCH
1987 TO 1989

CLUTCH - 1987 TO 1989 (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2881W	SCREW (4)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
2	6242W	WASHER (4)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
4	7848W	JAMNUT (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
5	11096	RETAINING RING (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
6	37088-87	PUSH ROD, clutch release (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
7	37089-84	END, push rod-right side (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
8	37090-84A	END, push rod-left side (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
9	37312-75	BEARING, push rod (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
10	37313-80	THRUST WASHER (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
11	37357-84	ADJUSTING STUD, push rod (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
12	37496-84	NUT, mainshaft-clutch side (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
13	37523-85	KEY, clutch (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
14	37550-84A	CLUTCH HUB, inner (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
15	37707-84	CLUTCH SHELL AND SPROCKET, w/ring gear (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
16	37800-84	CLUTCH ASSY., N/A (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
17	37871-84A	DIAPHRAGM SPRING PLATE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

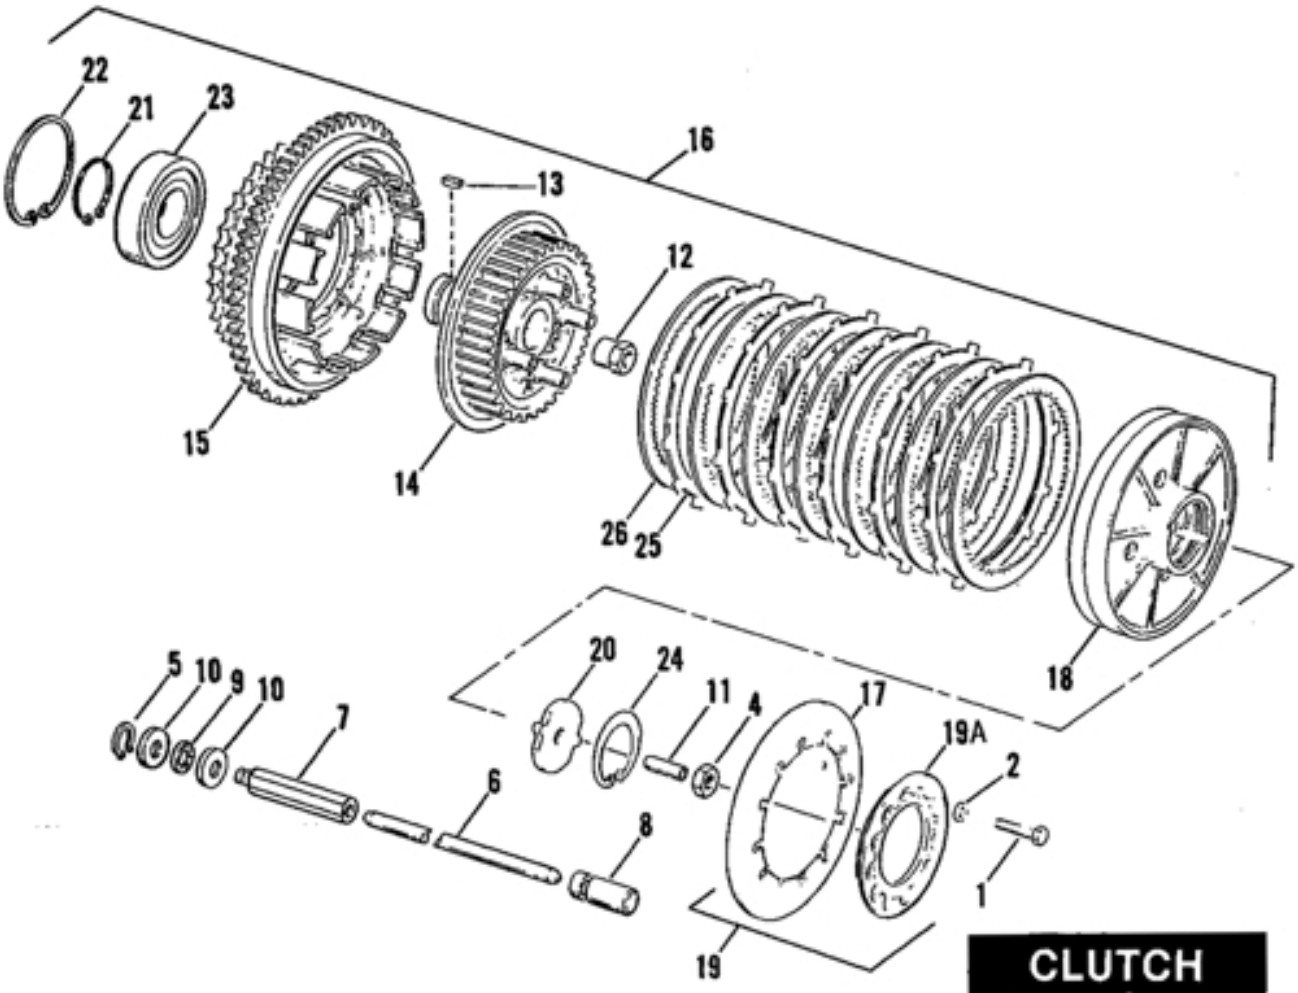

CLUTCH
1987 TO 1989


CLUTCH - 1987 TO 1989 (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	37901-84	PRESSURE PLATE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19	37902-84A	ADJUSTER PLATE, w/# 17 and 19A, N/A (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
19A	37902-82	ADJUSTER PLATE (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
20	37903-84	RELEASE PLATE, center (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
21	37904-84	RETAINING RING, external-bearing (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
22	37905-84	RETAINING RING, internal-bearing, N/A (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
23	37906-84	BEARING, clutch assy., N/A (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
24	37907-84	RETAINING RING, pressure plate (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
25	37931-84	FRICTION DISC (6)	FXR: 87 to E89-ALL Softail: 87 to E89-ALL Touring: 87 to E89-ALL
25	37930-84A	FRICTION DISC (6)	FXR: L89-ALL Softail: L89-ALL Touring: L89-ALL
26	37975-84A	DRIVE DISC (7)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CLUTCH
1990 & LATER

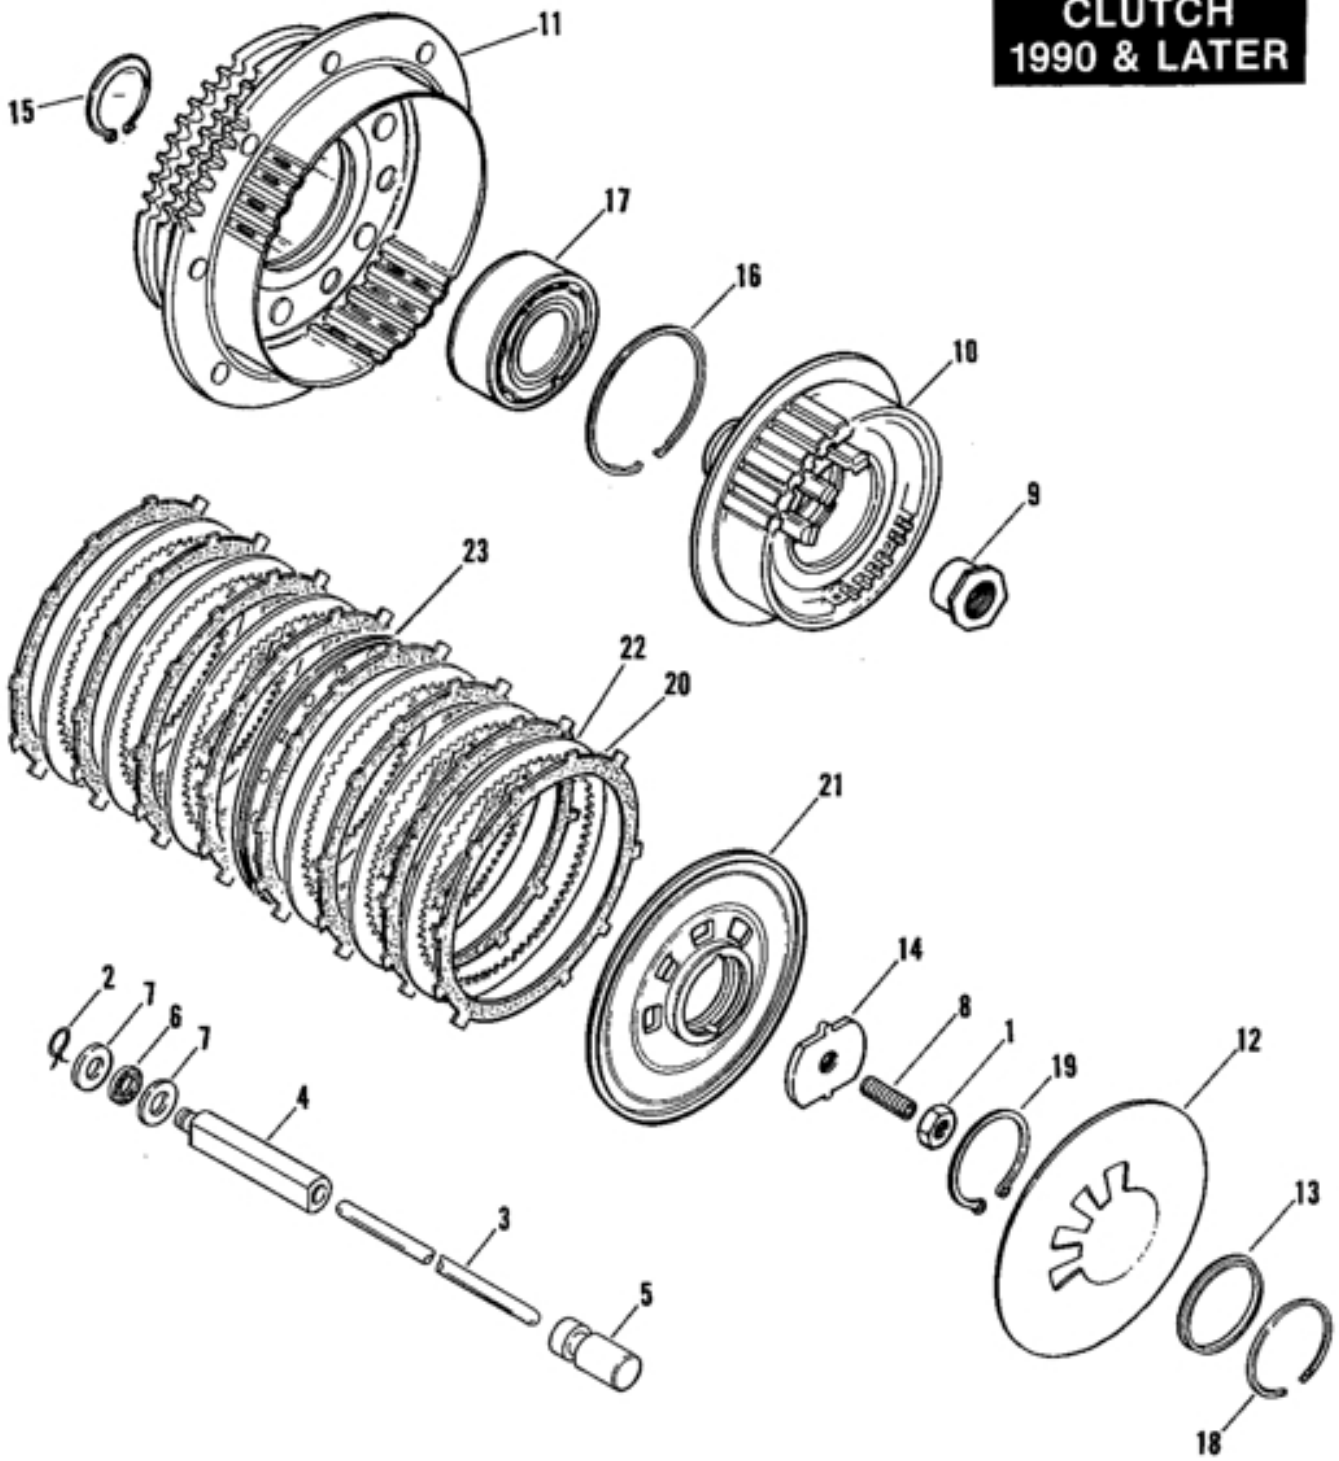


CLUTCH - 1990 AND LATER (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7848W	JAMNUT (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
2	11096	RETAINING RING (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
3	37088-90	PUSH ROD, clutch release (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
4	37089-84	END, push rod-right (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
5	37090-84A	END, push rod-left (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
6	37312-75	BEARING, push rod (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
7	37313-80	THRUST WASHER (2)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
8	37357-84	ADJUSTING SCREW, push rod (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
9	37496-90	NUT, mainshaft (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
10	37550-90A	CLUTCH HUB (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
11	37707-90	SHELL AND SPROCKET W/RING GEAR (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
12	37871-90	SPRING, diaphragm (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
13	37872-90	SEAT, clutch spring (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
14	37903-90	RELEASE PLATE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
15	37904-90	RETAINING RING, external (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

CLUTCH
1990 & LATER

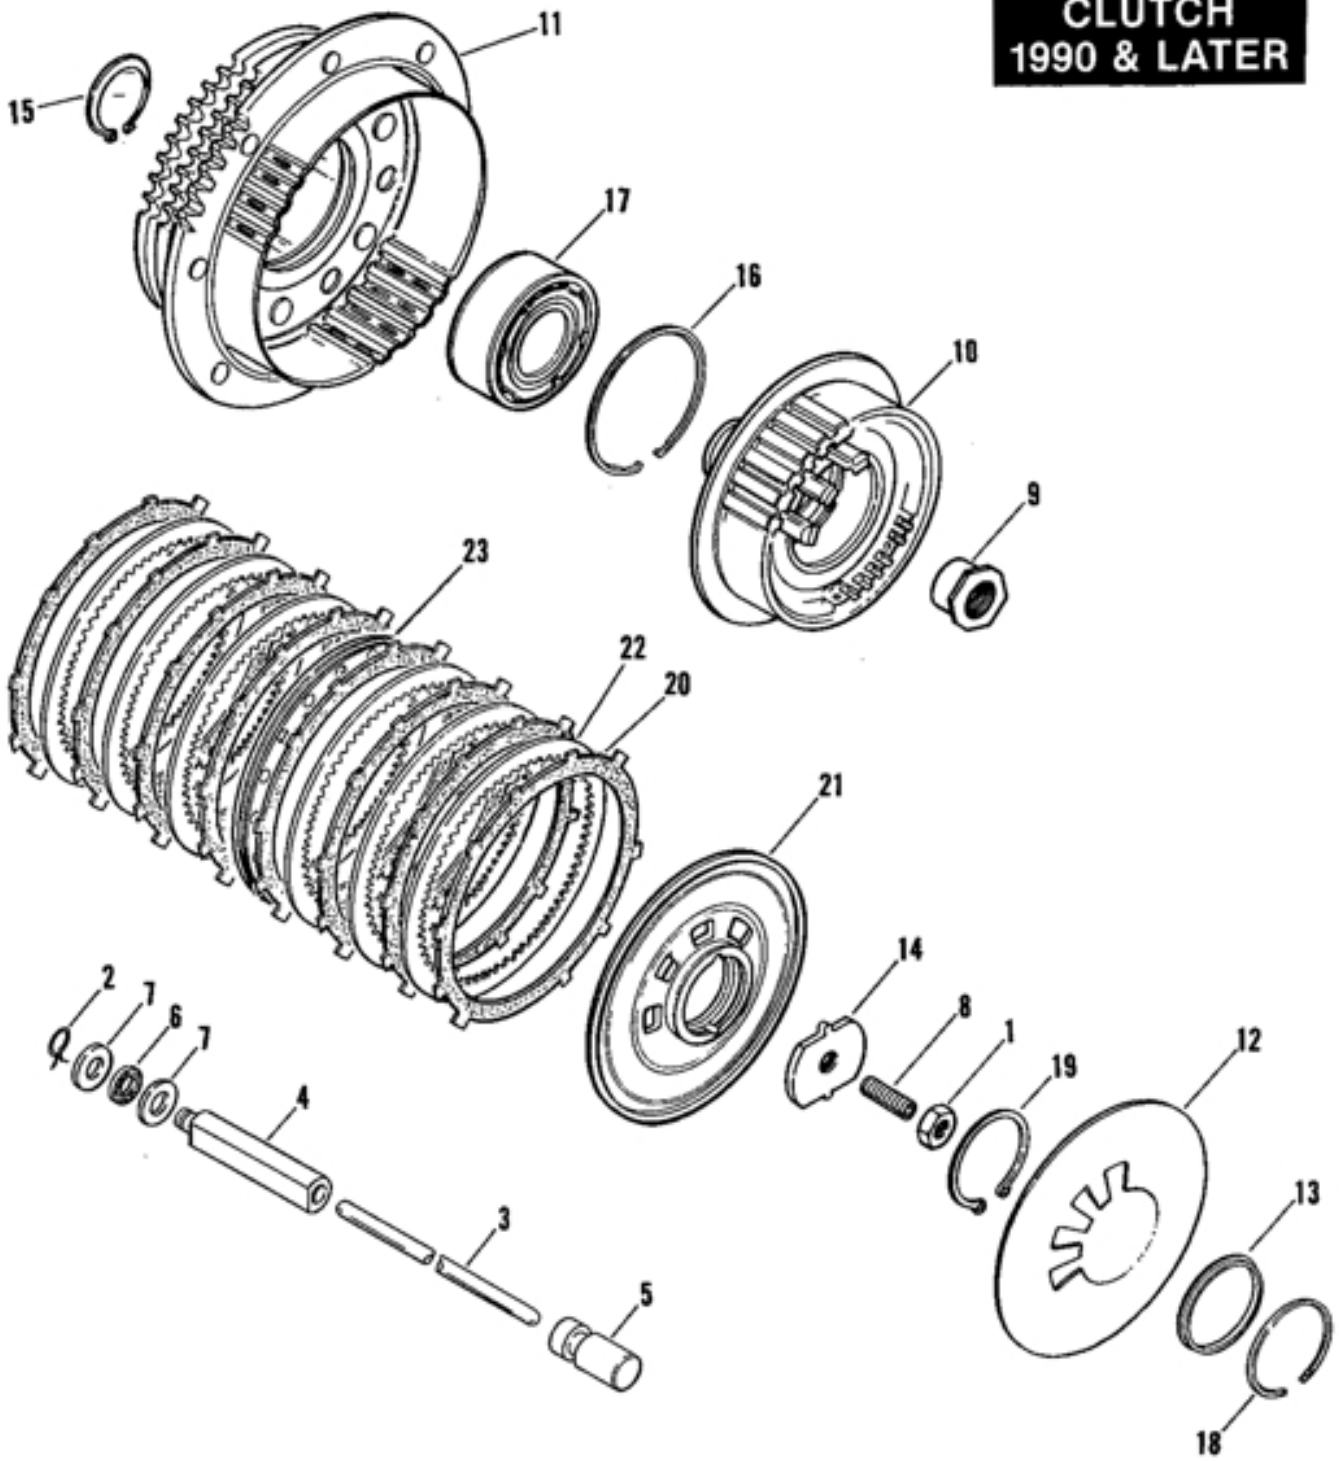


CLUTCH - 1990 AND LATER (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	37905-90	RETAINING RING, internal (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
17	37906-90	BEARING, ball-double row (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
18	37908-90	RETAINING RING, internal (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
19	37909-90	RETAINING RING, internal (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
20	37910-90	FRICTION PLATE, cork (Set of 8) (Std.) (Use w/ 37975-90 and 37976-90), N/A (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
20	37911-90	FRICTION PLATE, paper (Set of 8) (Use w/ 37913-90 and 37977-90) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
21	37912-90	PRESSURE PLATE (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
22	37913-90	STEEL PLATE, smooth (Use w/ 37911-90 and 37977-90) (6)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
22	37975-90	STEEL PLATE, textured (Std.) (Use w/ 37910-90 and 37976-90), N/A (6)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
23	37976-90	SPRING PLATE, textured (Std.) (Use w/ 37910-90 and 37975-90) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
23	37977-90	SPRING PLATE, smooth (Use w/ 37911-90 and 37913-90) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


CLUTCH CONTROL

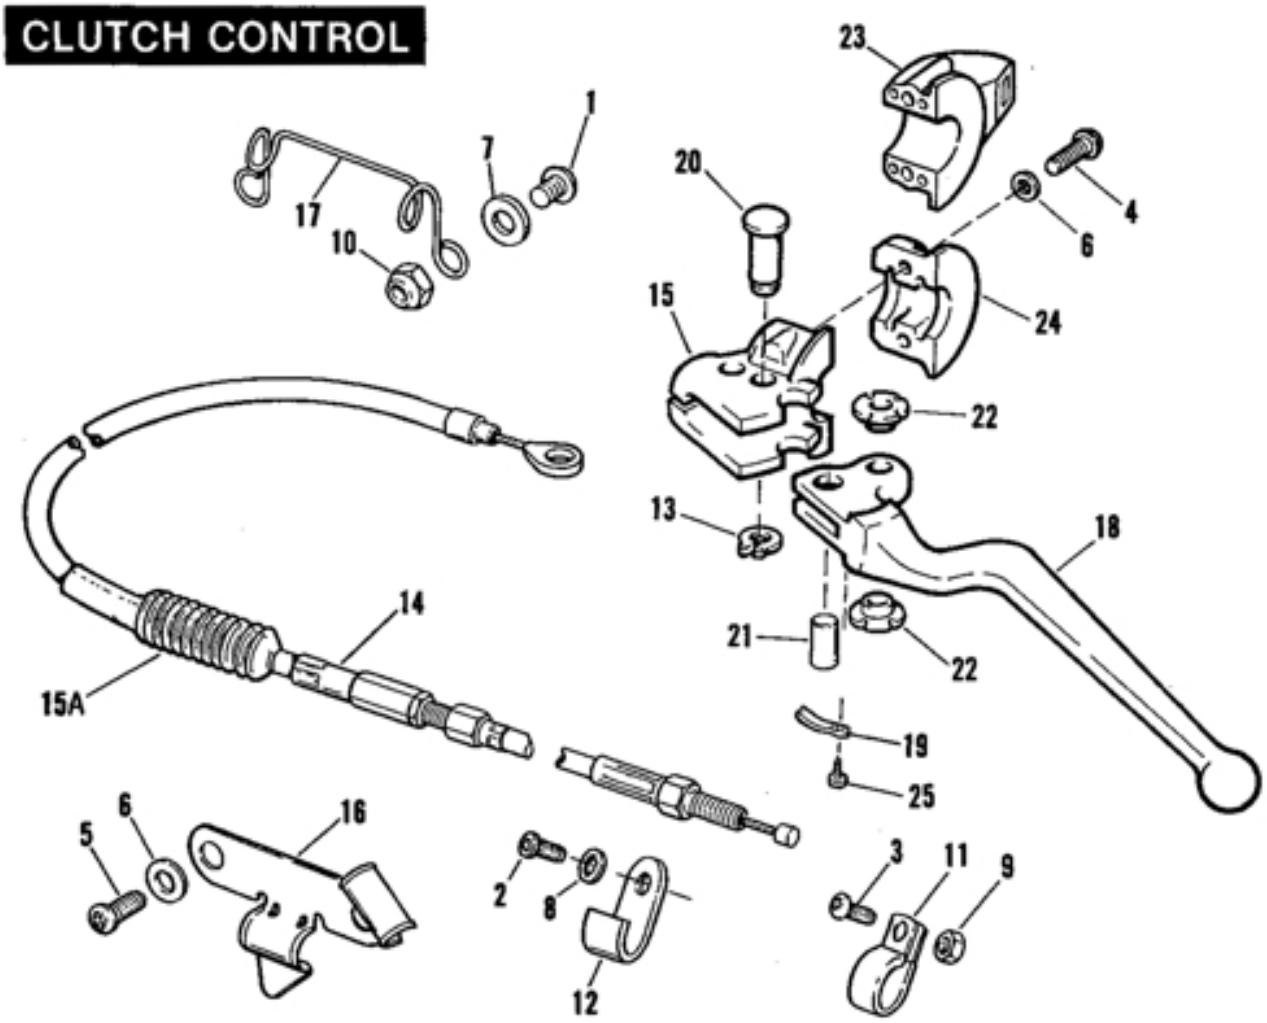

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2417	SCREW (2)	Touring: 87 to 90-DB
2	2585	SCREW (1)	Softail: 87 to 90-ALL
3	2665	SCREW (1)	FXR: 87 to 90-ALL
4	4015	SCREW (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88 ALL; 89 to 90-DB/J, FA
4	4033	SCREW (2)	Touring: 89 to 90-DM/P
5	4740A	SCREW (2)	Touring: 87 to 90-ALL
6	6099	WASHER, 4-DB (2)	ALL
7	6703	WASHER (2)	Touring: 87 to 90-DB/M
8	7115	LOCKWASHER (1)	Softail: 87 to 90-ALL
9	7624	LOCKNUT (1)	FXR: 87 to 90-ALL
10	7682	LOCKNUT (2)	Touring: 87 to 90-DB/M
11	9990W	CLAMP (1)	Touring: 87 to 90-FA
11	10059A	CLAMP (1)	FXR: 87 to 90-ALL
12	10088	CLAMP (1)	Softail: 87 to 90-ALL
13	11143	RETAINING RING (1)	ALL
14	36753-87A	CABLE, clutch control (1)	FXR: 87 to 90-EL
14	36755-87A	CABLE, clutch control (1)	FXR: 87 to 90-EG
14	38601-89	CABLE, clutch control (1)	Touring: 89 to 90-ALL
14	38606-87A	CABLE, clutch control (1)	FXR: 87 to 90-EA/B/C/M
14	38607-87A	CABLE, clutch control (1)	Softail: 87 to 90-ALL Touring: 87 and 88-ALL
15	38608-82B	BRACKET, hand lever (1)	ALL
15A	38630-88	BOOT, clutch cable (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL
16	38713-87A	CLAMP, clutch cable (1)	Touring: 87 to 90-ALL
17	38715-85	CLIP (1)	Touring: 87 to 90-DB/M
18	45017-82A	HAND LEVER, only (1)	ALL
18	45017-88A	HAND LEVER, only (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
19	45021-86	SPRING, anti-rattle (1)	ALL
20	45032-82	PIN, hand lever pivot (1)	ALL
21	45036-82	ANCHOR PIN (1)	ALL
21	45036-88	ANCHOR PIN (1)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL Touring: 88 to 90-ALL
22	45039-68	BUSHING, anchor pin (plastic) (2)	ALL
23	45043-89	CLAMP, w/switch housing (1)	Touring: 89 to 90-DM/P
24	45044-82	CLAMP, lever bracket (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89 to 90-DB/J, FA
25	90770-79	SCREW (1)	ALL

MODEL IDENTIFICATION CODES


DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

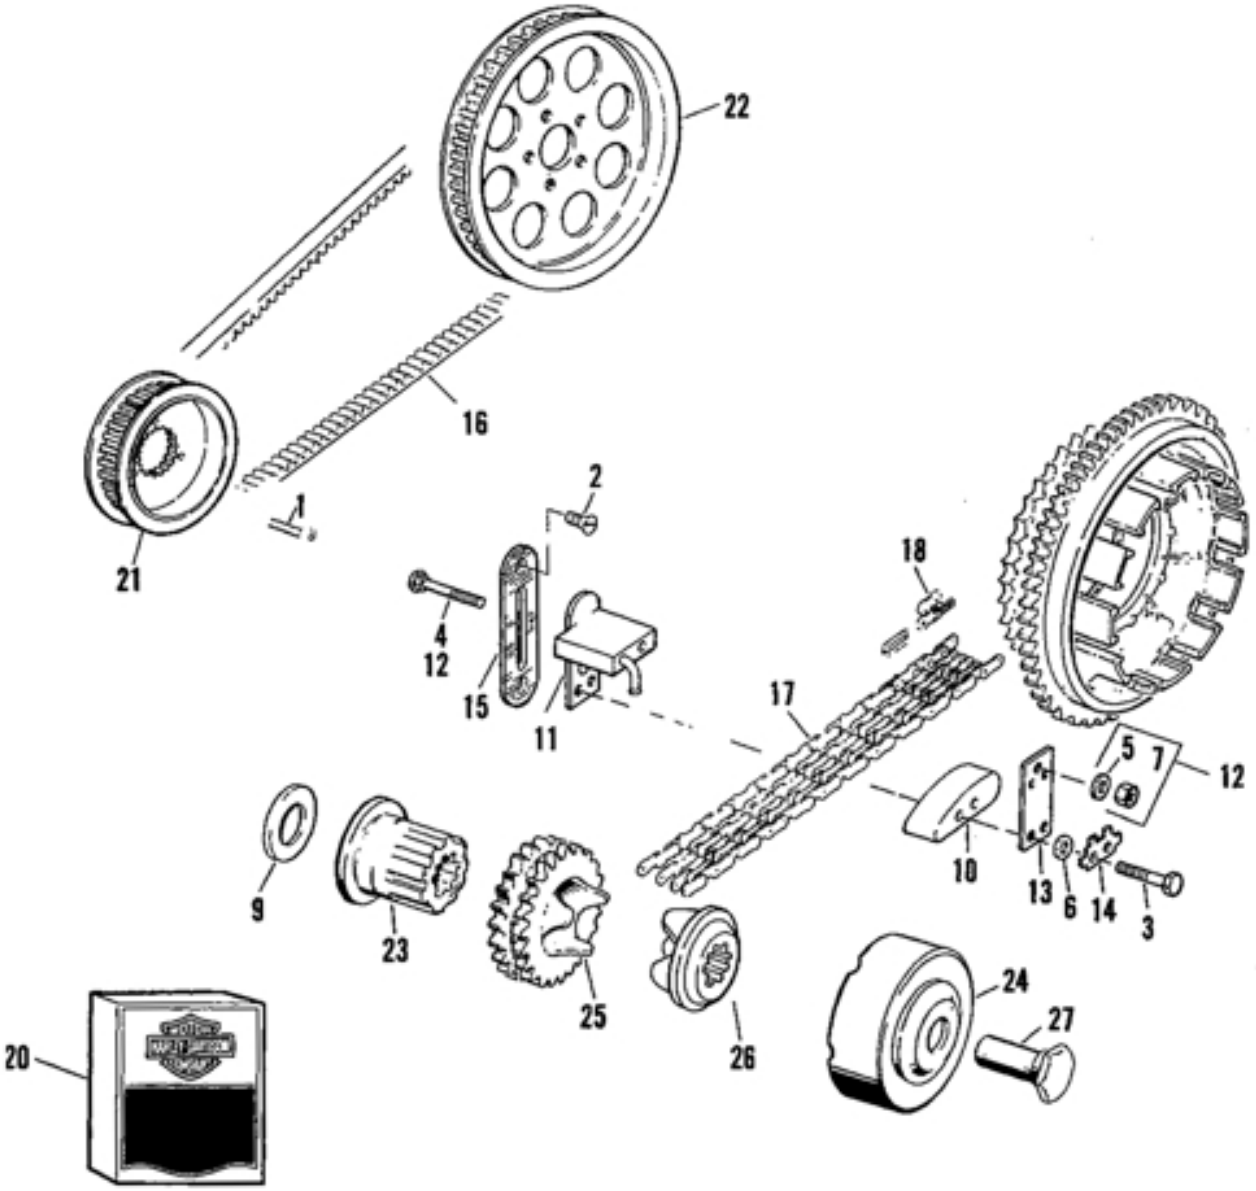
22
16
21
1
2
4
12
15
11
18
17
5
7
12
10
13
6
14
3
9
23
25
26
24
27
20

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	857A	SCREW (1)	ALL
2	1783	SCREW (2)	ALL
3	2614	BOLT (2)	ALL
4	5444	BOLT (1)	ALL
5	6400HB	WASHER (1)	ALL
6	6703	WASHER (2)	ALL
7	7778	LOCKNUT (1)	ALL
9	24032-70	SPACER, sprkt. sft.-0.06 thk. (1)	ALL
9	24033-70	SPACER, sprkt. sft.-0.09 thk. (1)	ALL
9	24034-70	SPACER, sprkt. sft.-0.12 thk. (1)	ALL
9	24035-70	SPACER, sprkt. sft.-0.15 thk. (1)	ALL
9	24036-70	SPACER, sprkt. sft.-0.18 thk. (1)	ALL
9	24037-70	SPACER, sprkt. sft.-0.21 thk. (1)	ALL
9	35850-84	SPACER, sprkt. sft.-0.01 thk. (as req'd) (1)	ALL
9	35851-84	SPACER, sprkt. sft.-0.02 thk. (as req'd) (1)	ALL
9	35852-84	SPACER, sprkt. sft.-0.03 thk. (as req'd) (1)	ALL
10	39976-65B	PAD, chain tensioner (1)	ALL
11	39990-65	CHAIN TENSIONER SHOE (1)	ALL
12	39992-65C	CHAIN TENSIONER MTG. KIT, w/#4, 5 and 7 (1)	ALL
13	39993-65	PLATE, chain tensioner (1)	ALL
14	39996-65	LOCKWASHER, chain tensioner plate (1)	ALL
15	39998-65	ANCHOR PLATE, chain tensioner (1)	ALL
16	40001-85	REAR BELT, 136 T (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
16	40023-86	REAR BELT, 132 T (1)	Softail: 87 to 90-ALL
17	40007-36A	FRONT CHAIN (1)	Softail: 87 to 90-ALL
17	40037-79	FRONT CHAIN (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
18	40055-39	CONNECTING LINK, fr. chain, N/A (1)	ALL
20	40100-85	REPAIR KIT, belt drive-136 T (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
20	40109-86	REPAIR KIT, belt drive-132 T (1)	Softail: 87 to 90-ALL
21	40210-85C	SPROCKET, 32 T-belt (1)	ALL
22	40221-85A	SPROCKET, rear, 70 T-belt (silver) (1)	ALL
23	40266-85	SHAFT EXTENSION (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
23	40375-70	SHAFT EXTENSION (1)	Softail: 87 to 90-ALL
24	40267-85	COVER ASSEMBLY, w/springs (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
24	40384-83A	COVER ASSEMBLY, w/springs (1)	Softail: 87 to 90-ALL
25	40269-85	COMPENSATING SPROCKET (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
25	40275-83	COMPENSATING SPROCKET (1)	Softail: 87 to 90-ALL
26	40299-83	SLIDING CAM (1)	ALL
27	40392-70	NUT (1)	ALL
		INTERNATIONAL MODELS ONLY	
16	40010-89	REAR BELT, 127T. (HDI only) (1)	Softail: 89 to 90-ALL
16	40023-86	REAR BELT, 132T. (HDI only) (1)	FXR: 89 to 90-ALL Touring: 89 to 90-ALL
22	40236-88A	SPROCKET, Rear, 61T. (silver) (HDI only) (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

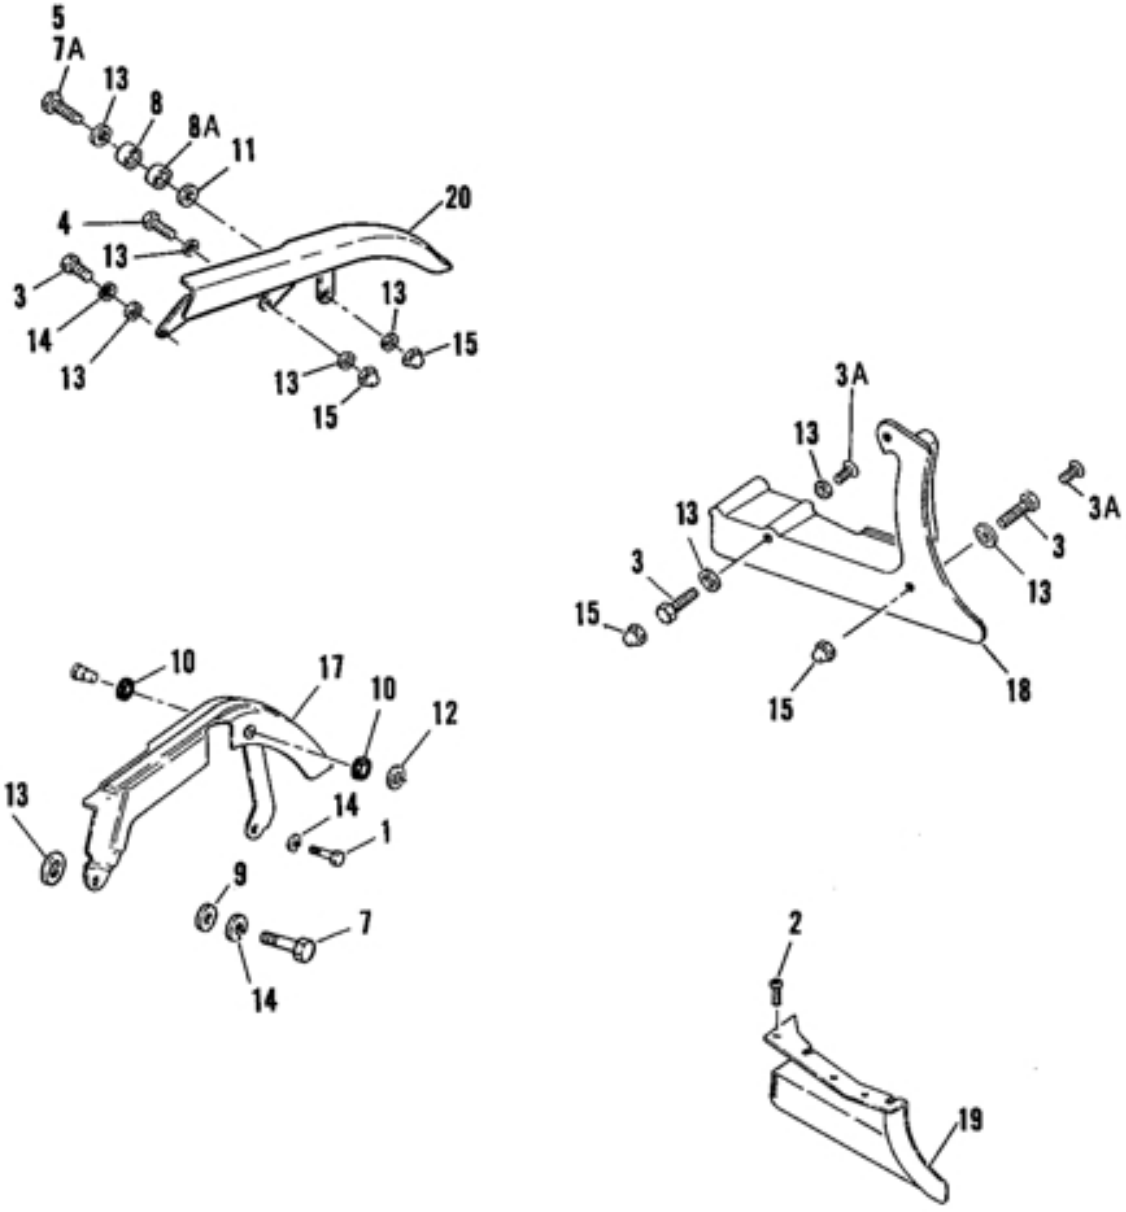


REAR
BELT GUARD

REAR BELT GUARD

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2698	SCREW (1)	FXR: 87 to 90-ALL
2	2757W	SCREW (3)	ALL
2	3537	SCREW (3)	FXR: 88 to 90-ALL Touring: 88 to 90-ALL
3	2882W	SCREW, 3-1987 and 1988 Softail (1)	Softail: 87 to 90-ALL
3A	3540	SCREW (2)	Softail: 88 to 90-ALL
4	3987	BOLT (1)	Softail: 87 to 90-ALL
5	3991	BOLT (1)	Softail: 87 to 90-ALL
7	4014W	BOLT (1)	FXR: 87 to 90-ALL
7A	4017	BOLT (1)	Softail: 88 to 90-ALL
8	5926B	SPACER (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
8A	11411	GROMMET (1)	Softail: 88 to 90-ALL
9	6107B	WASHER (1)	FXR: 87 to 90-ALL
10	6398	WASHER, rubber (2)	FXR: 87 to 90-ALL
11	6109	WASHER (1)	Softail: L88 to 90-ALL
12	6701	WASHER (1)	FXR: 87 to 90-ALL
13	6702	WASHER, 6-1988 Softail (5)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
14	7041	LOCKWASHER, 2-1987 and 1988 (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
15	7507	ACORN NUT, 2-87 (4)	Softail: 87 to 90-ALL
17	60297-87A	BELT GUARD (1)	FXR: 87 to 90-EA/B/G/L/M
17	60299-85	BELT GUARD (1)	FXR: 87 to 90-EC
18	60362-86A	DEBRIS DEFLECTOR, lower (1)	Softail: 87 to 90-ALL
19	60397-85A	DEBRIS DEFLECTOR (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
20	60533-86	BELT GUARD, chrome (1)	Softail: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
7A	3787	BOLT, HDI only (1)	Softail: L88 to 90-ALL
	6109	WASHER, HDI only (1)	FXR: 89 to 90-ALL Touring: 89 to 90-ALL
	6235	WASHER, HDI only (1)	FXR: 89 to 90-ALL
13	6703	WASHER, HDI only (1)	Softail: L88 to 90-ALL
	7669	NUT, HDI only (1)	Softail: L88 to 90-ALL
17	60296-88	BELT GUARD, HDI only (1)	FXR: L88 to 90-EC
17	60298-88A	BELT GUARD, HDI only (1)	FXR: L88 to 90-EA/B/G/L/M
18	60415-89	DEBRIS DEFLECTOR, HDI only (1)	Softail: L88 to 90-ALL
20	60537-89	BELT GUARD KIT, HDI only (1)	Softail: L88 to 90-ALL
	64511-63	WELL NUT, HDI only (1)	Softail: L88 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

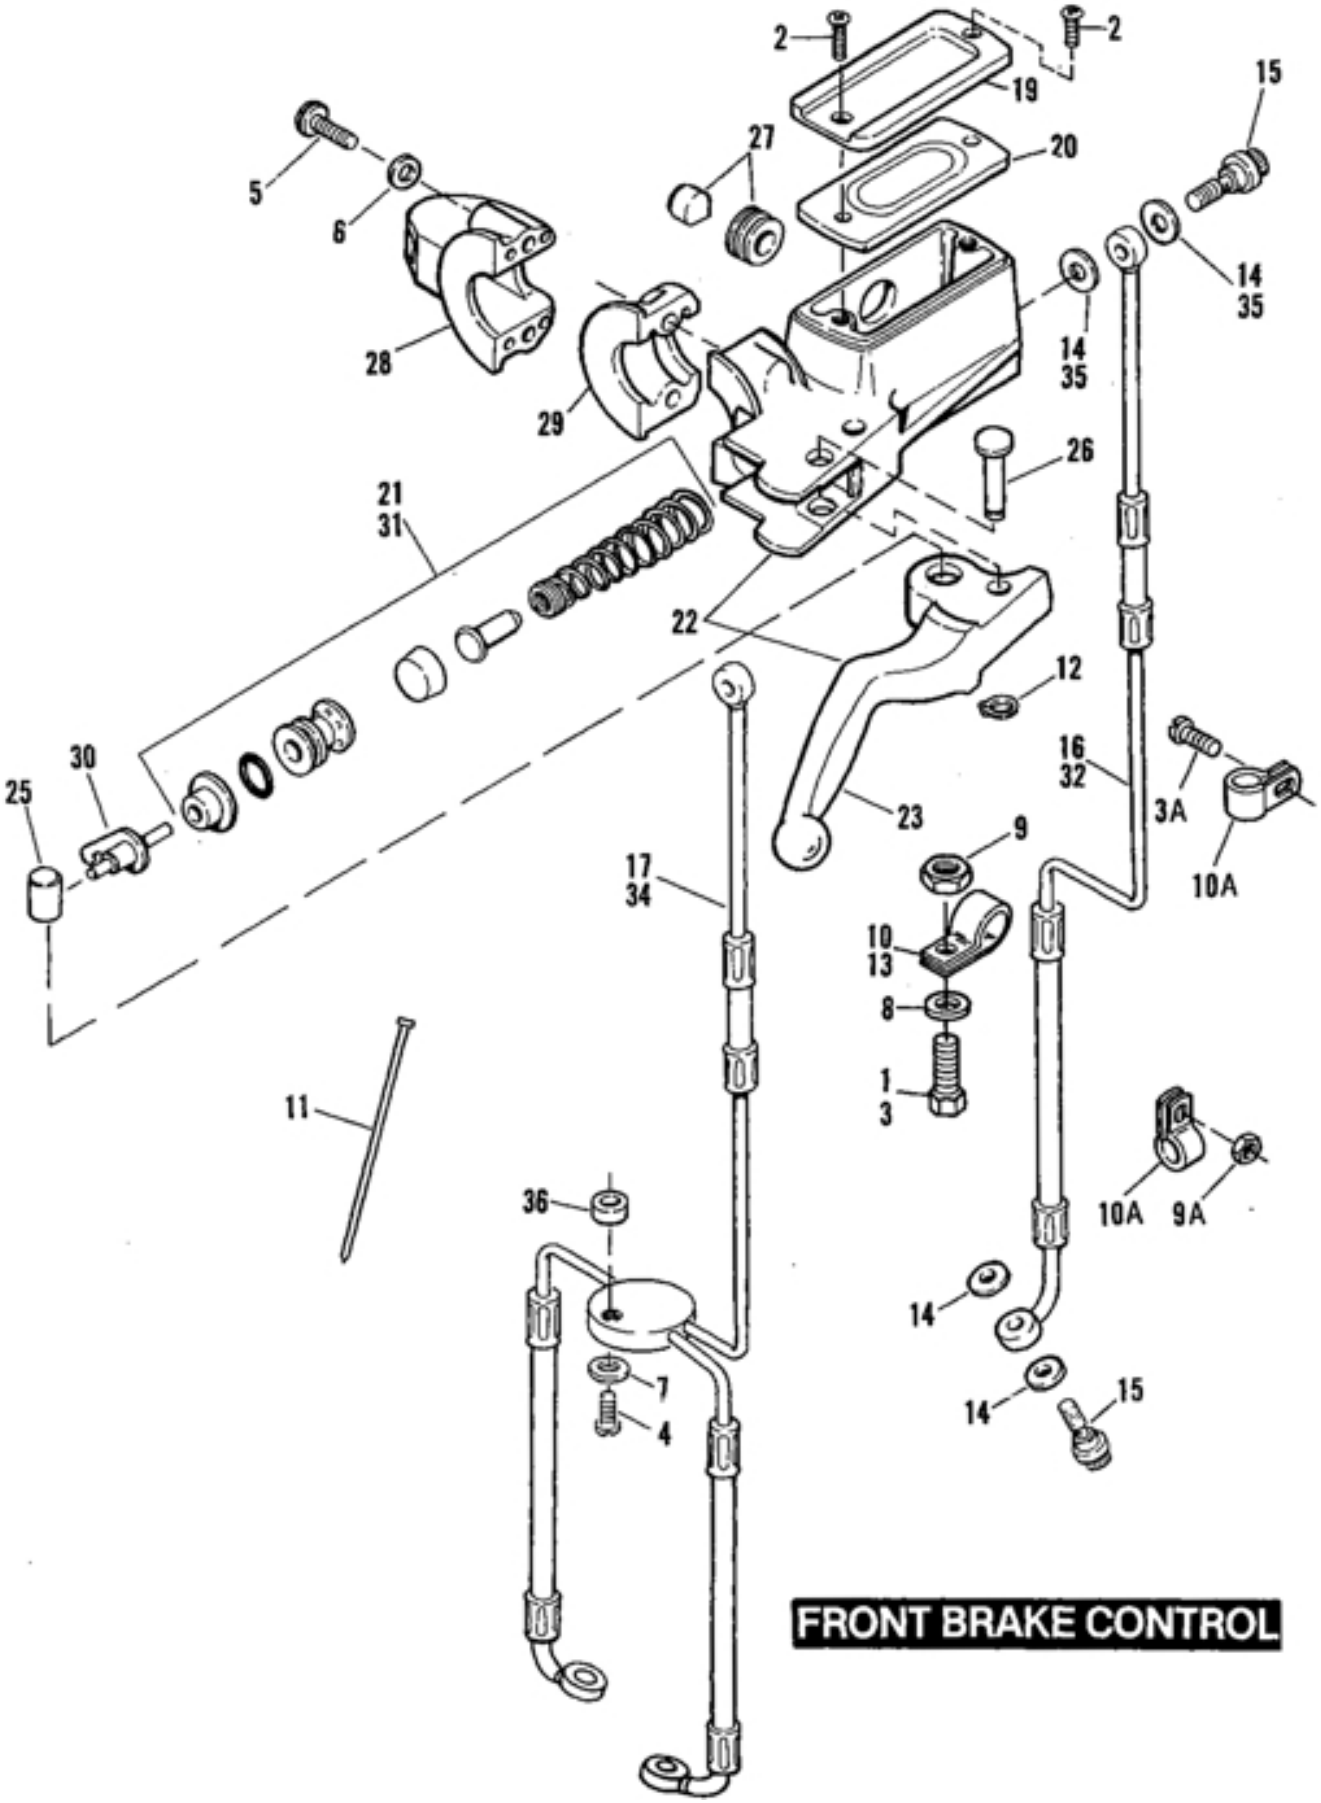

2
2
19
15
27
20
5
6
14
35
28
29
14
35
26
21
31
22
12
16
32
3A
30
25
23
9
10A
17
34
10
13
8
1
3
11
10A
9A
36
14
7
4
14
15
FRONT BRAKE CONTROL

FRONT BRAKE CONTROL (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW (1)	Softail: 87 to 90-BJ/M
2	2579	SCREW (2)	ALL
3	2662W	SCREW (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/K
3	3444	SCREW (1)	FXR: 87 to 90-EA/B/L Softail: 87 to 90-BJ/L/M
3A	3538	SCREW (1)	Softail: L88 to 90-BL
4	3589	SCREW (1)	Touring: 87 to 90-ALL
4	4741	SCREW, w/lockpatch (1)	FXR: 87 to 90-EC/M
5	4015	SCREW (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89 to 90-DB/J,FA
5	4033	SCREW (2)	Touring: 89 to 90-DM/P
6	6099	WASHER (2)	ALL
7	6336B	WASHER (1)	FXR: 87 to 90-EC
8	6703	WASHER (1)	FXR: 87 to 90-EC Softail: 87 to 90-ALL
8	7041	LOCKWASHER (1)	Touring: 87 to 90-ALL
8	7220	LOCKWASHER (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
9	7686	LOCKNUT (1)	Softail: 87 to 90-BJ/M
9A	7739	LOCKNUT (1)	Softail: L88 to 90-BL
10	10031	CLAMP, brake line (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/K
10	10053	CLAMP, brake line (1)	FXR: 87 to 90-EA
10A	10076	CLAMP (2)	Softail: L88 to 90-BL
11	10081	CABLE STRAP, double loop (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
12	11143	RETAINING RING (1)	ALL
13	41713-86	CLAMP, brake line (3-BJ) (1)	Softail: 87 to 90-BJ/L
14	41731-82	GASKET, 6-dual calipers (2)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
14	41731-88	GASKET, 6-dual calipers (2)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
14	41733-88	GASKET, master cylinder-single disc (2)	FXR: 90 to 90-EA/B/L Softail: 90 to 90-ALL
15	41739-84A	FITTING, brake line (1)	FXR: 87 to 89-EA/B/L Softail: 87 to 89-ALL
15	41739-84A	FITTING, master cylinder-single disc (2)	FXR: 90 to 90-EA/B/L Softail: 90 to 90-ALL
15	41747-82A	FITTING, 3-dual calipers (1)	ALL
16	42303-89A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	Softail: 90 to 90-BM
16	42305-86	BRAKE LINE, N/A (1)	Softail: 87 to 89-BJ
16	42305-86A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	Softail: 90 to 90-BJ
17	43349-87	BRAKE LINE, N/A (1)	Touring: 87 to 90-ALL
19	45004-85	COVER, master cylinder (1)	ALL
20	45005-85	GASKET, master cylinder cover (1)	ALL
21	45006-87A	REPAIR KIT, master cylinder (1)	FXR: 87 to 90-EC/G/M Touring: 87 to 90-ALL
22	45013-85A	MASTER CYLINDER, w/hand lever (1)	FXR: 87 to 90-EC/G/M Touring: 87 to 90-ALL
22	45019-85A	MASTER CYLINDER, w/hand lever (1)	FXR: 87 to 90-EA/B/L Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

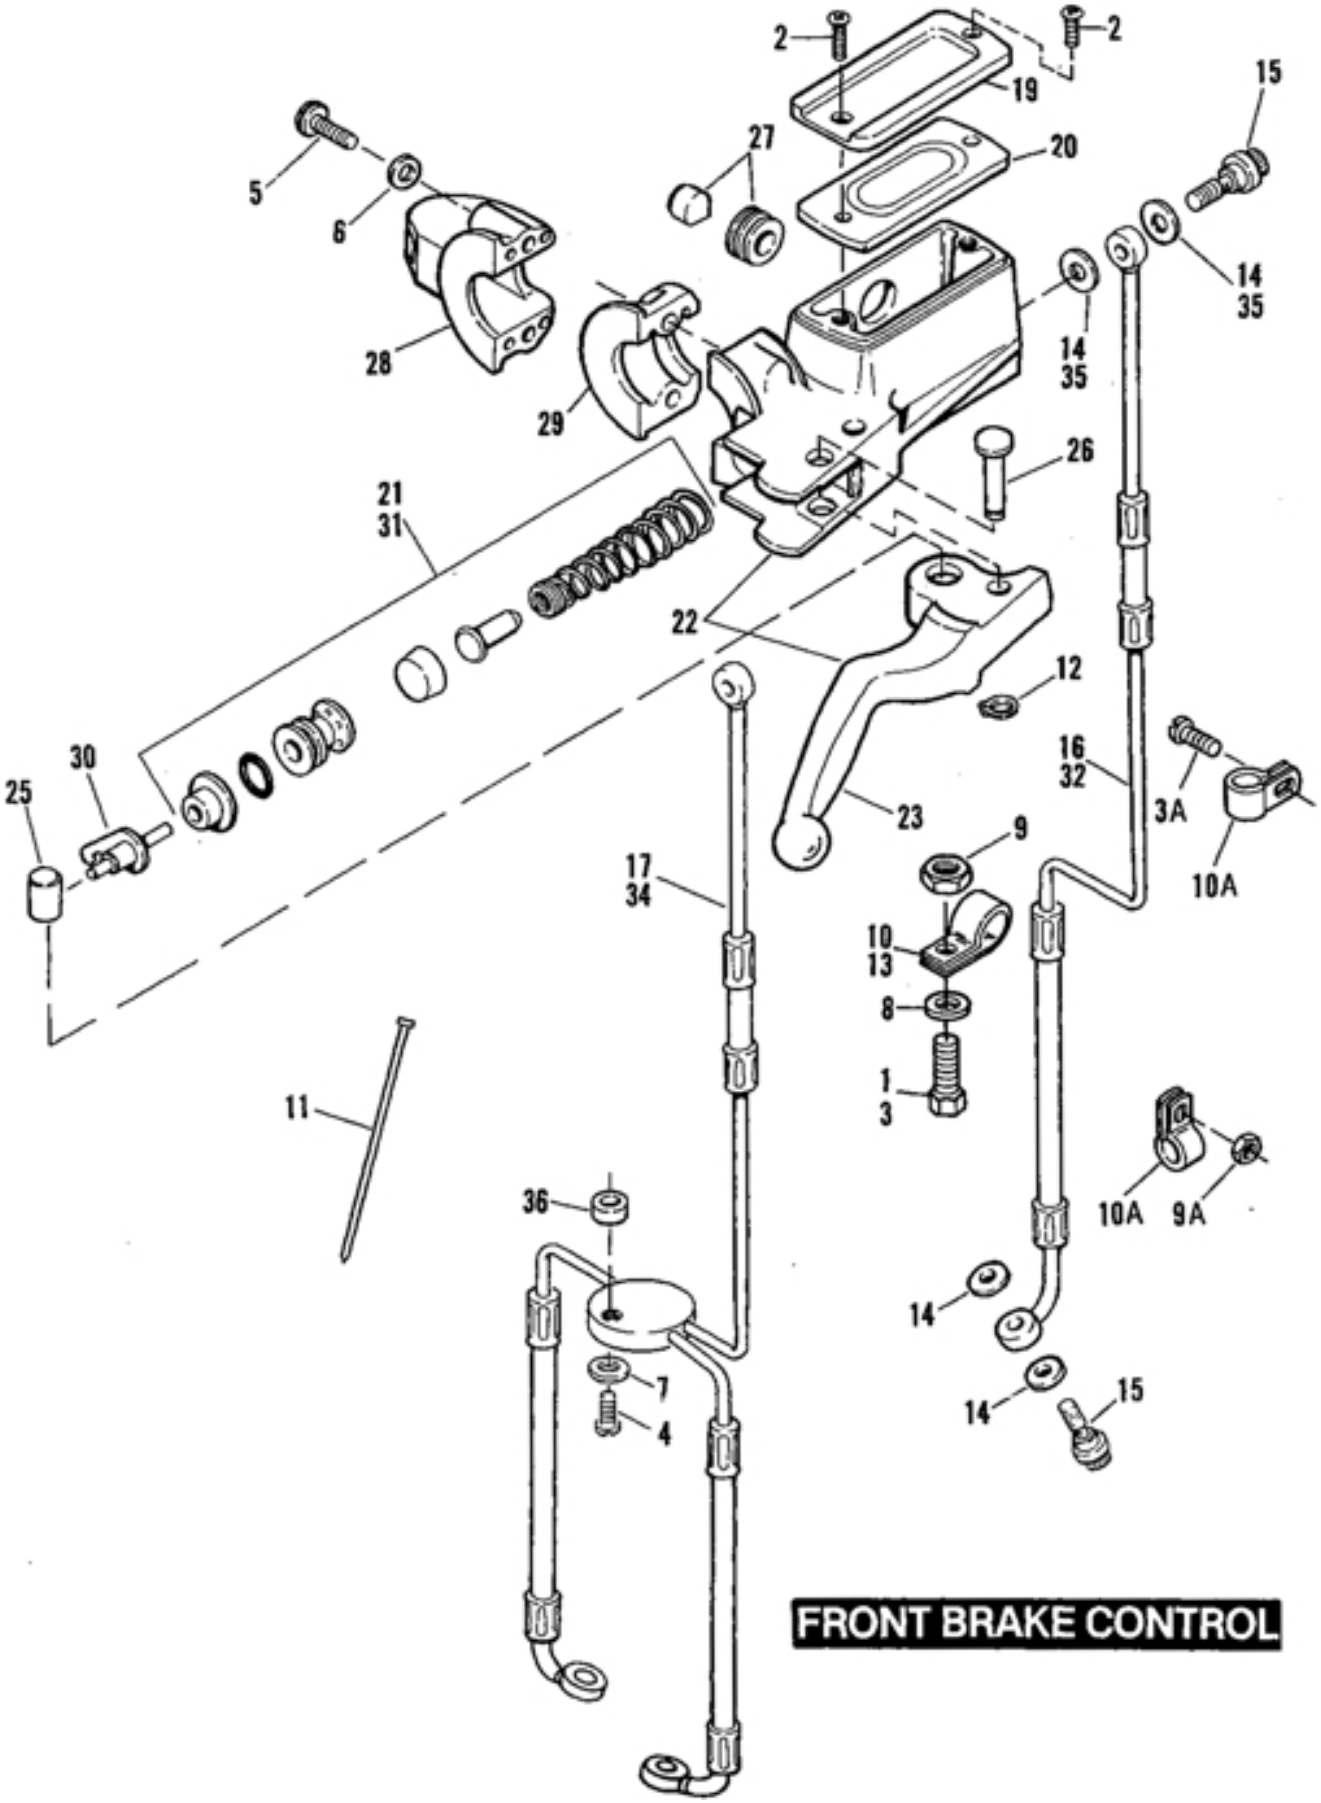


FRONT BRAKE CONTROL

FRONT BRAKE CONTROL (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	45016-82A	HAND LEVER (1)	ALL
25	45031-82	PIN, stoplamp switch and pushrod (1)	ALL
26	45032-82	PIN, hand lever pivot (1)	ALL
27	45042-82	SIGHT GLASS REPAIR KIT (1)	ALL
28	45043-89	CLAMP, w/switch housing (1)	Touring: 89 to 90-DM/P
29	45044-82	CLAMP, master cylinder (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89 to 90-DB/J,FA
30	45051-82	PUSHROD, stoplamp switch (1)	ALL
31	45072-87	REPAIR KIT, master cylinder (1)	FXR: 87 to 90-EA/B/L Softail: 87 to 90-ALL
32	45110-88	BRAKE LINE, N/A (1)	Softail: L88 and 89-BL
32	45110-88A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	Softail: 90 to 90-BL
32	45111-89	BRAKE LINE (1)	FXR: L89 to 90-EM
32	45112-84	BRAKE LINE, N/A (1)	Softail: 87 to 89-BH/K
32	45112-84A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	Softail: 90 to 90-BH/K
32	45121-84	BRAKE LINE, N/A (1)	FXR: 87-EA/B
32	45121-88	BRAKE LINE, N/A (1)	FXR: 88 and 89-EA/B
32	45121-88A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	FXR: 90 to 90-EA/B
32	45141-87	BRAKE LINE, N/A (1)	FXR: 87 to 89-EL
32	45141-87A	BRAKE LINE, use with 41733-88 gaskets and 41739-84A fitting at front master cylinder. (1)	FXR: 90 to 90-EL
34	45128-86	BRAKE LINE, N/A (1)	FXR: 87-EC
34	45128-88	BRAKE LINE (1)	FXR: 88 to 90-EC
34	45140-87	BRAKE LINE (1)	FXR: 87 to 90-EG
35	45583-83	GASKET, master cylinder-single disc (2)	FXR: 87 to 89-EA/B/L Softail: 87 to 89-ALL
36	91089-58	SPACER (1)	Touring: 88 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

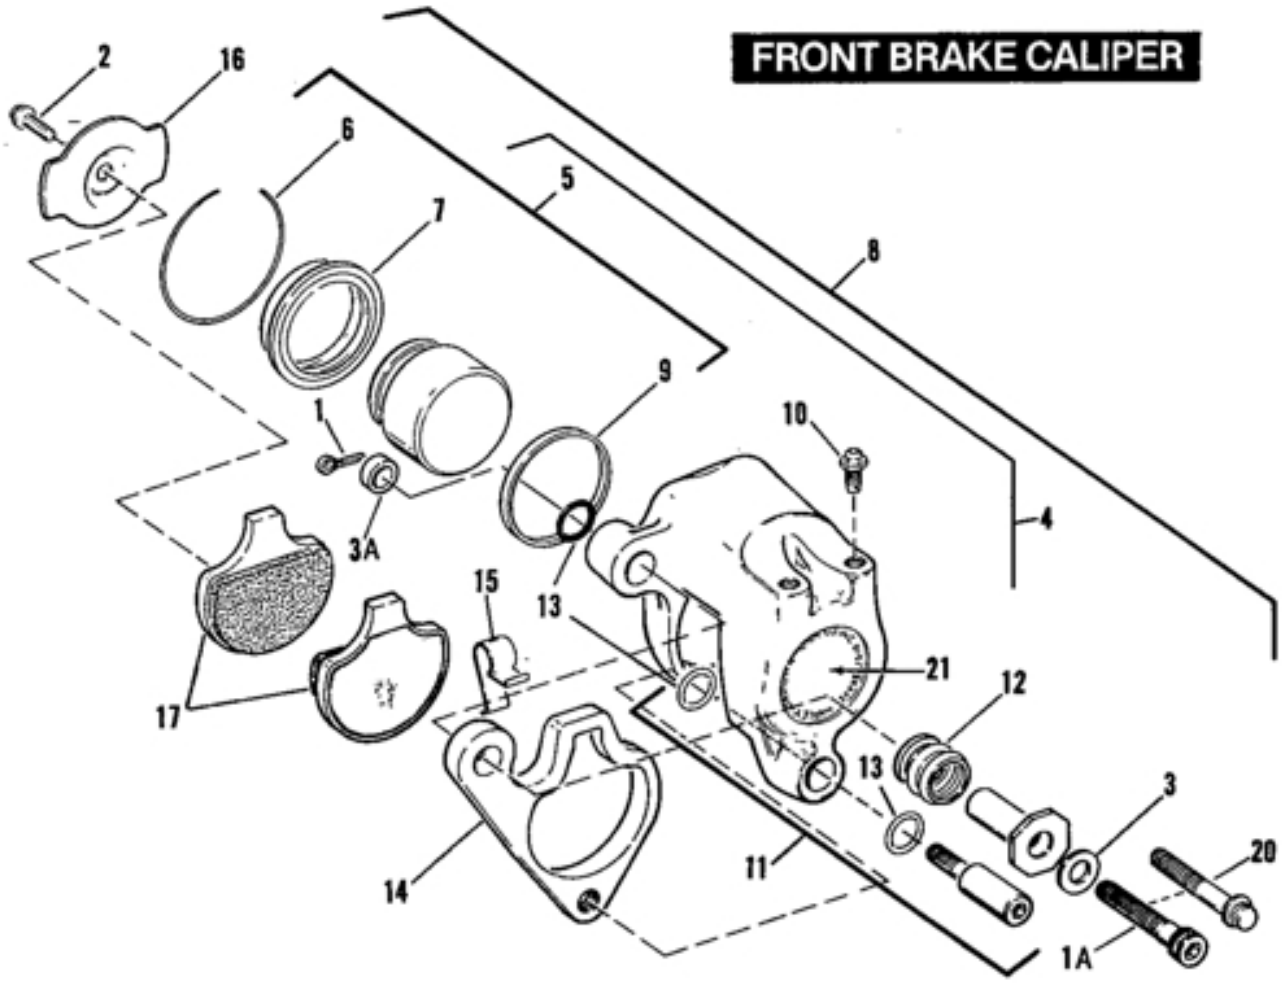

FRONT BRAKE CALIPER
2
16
6
5
7
8
9
1
10
3A
4
15
13
21
12
17
13
3
20
14
11
1A

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	534	COTTER PIN (1)	Softail: L88 to 90-BL
1A	855A	SCREW, 2-dual calipers (1)	ALL
2	3652	SCREW, 2-dual calipers (1)	ALL
3	6019	WASHER, 2-dual calipers (1)	ALL
3A	6758	WASHER (1)	Softail: L88 to 90-BL
4	44019-83	CALIPER REBUILD KIT, right w/#6, 10 and clpr. body, N/A (1)	FXR: 87 to 90-EC/G/M Touring: 87 to 90-ALL
5	44020-83	PISTON REBUILD KIT, w/7, 8 and 9 (2-dual calipers) (1)	ALL
6	44021-83	RETAINING RING, piston (2-dual calipers) (1)	ALL
7	44022-83	DUST BOOT, piston (2-dual calipers) (1)	ALL
8	44023-83A	CALIPER ASSEMBLY, right (1)	FXR: 87 to 90-EC/G/M Touring: 87 to 90-ALL
8	44046-84C	CALIPER ASSEMBLY, left (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/M Touring: 87 to 90-ALL
8	44077-88B	CALIPER ASSEMBLY, right (1)	Softail: L88 to 90-BL
9	44047-83	SEAL, piston (2-dual calipers) (1)	ALL
10	44048-83	BLEEDER FITTING, 2-dual calipers (1)	ALL
11	44053-83A	GUIDE PIN KIT, w/#12, 13 and mtg. pins (2-dual calipers) (1)	ALL
12	44054-83	PIN BOOT, 2-dual calipers (1)	ALL
13	44059-83	O-RING, 6-dual calipers (3)	ALL
14	44060-83	BRACKET, caliper mtg. (2-dual calipers) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/M Touring: 87 to 90-ALL
14	44074-88	BRACKET, caliper mtg. (1)	Softail: L88 to 90-BL
15	44061-83	SPRING CLIP, 2-dual calipers (1)	ALL
16	44062-83	RETAINING PAD, 2-dual calipers (1)	ALL
17	44063-83C	PAD SET, includes item 2 (2-dual clprs) (1)	ALL
19	44065-83	CALIPER REBUILD KIT, left w/#6, 10 and clpr. body, N/A (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/M Touring: 87 to 90-ALL
20	44190-88	BOLT (1)	Softail: L88 to 90-BL
21	44197-77	LABEL, 2-dual calipers (1)	ALL

FOR FXSTS CALIPER MOUNTING SEE SEE SECTION F26G

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

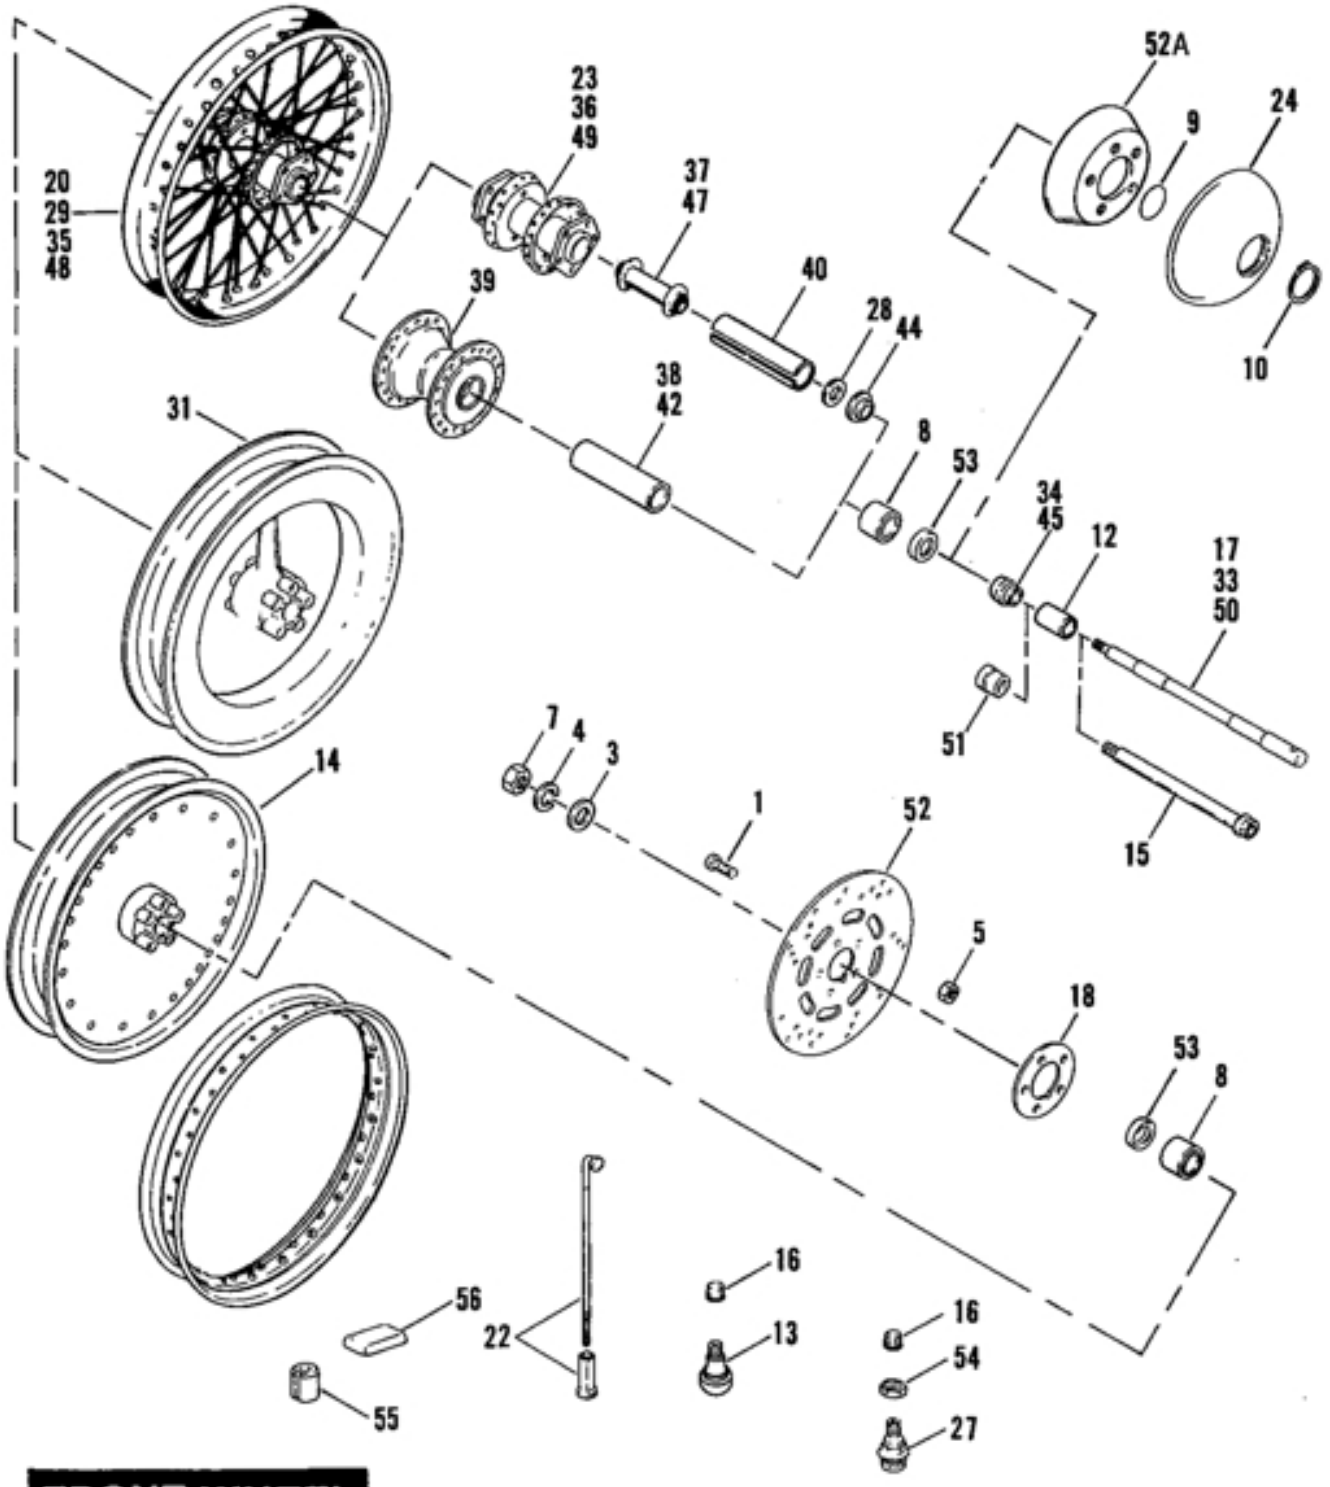
52A
9
24
23
36
49
37
47
20
29
35
48
40
39
28
44
10
38
42
31
8
53
34
45
12
17
33
50
51
7
4
3
1
52
14
15
5
18
53
8
16
56
22
13
16
54
55
27


FRONT WHEEL

FRONT WHEEL (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3655	SCREW, 10-FLT, EC/G (5)	ALL
3	6590HW	WASHER (1)	FXR: 87-EG/L; 88 to 90-ALL Softail: 87 to 90-BH/J/K/M
3	6639	WASHER, left (1)	Softail: L88 to 90-BL
3	6653	WASHER (1)	FXR: 87-ALL
4	7022	LOCKWASHER (1)	FXR: 87-ALL
4	7068	LOCKWASHER (1)	FXR: 88 to 90-ALL Softail: 87 to 90-BH/J/K/M Touring: 87 to 90-ALL
5	7739	LOCKNUT, 5-SOFTAIL (10)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
7	7813	NUT (1)	FXR: 87-EA/B/C
7	7845	NUT (1)	FXR: 87-EG/L; 88 to 90ALL Softail: 87 to 90-BH/J/K/M Touring: 87 to 90-ALL
7	7994	LOCKNUT (1)	Softail: L88 to 90-BL
8	9052	ROLLER BEARING (2)	ALL
9	11173	O-RING (1)	Softail: 87 to 90-BJ
10	11175	SNAP RING (1)	Softail: 87 to 90-BJ
12	40910-84A	SPACER, right bearing (1)	Softail: 87 to 90-BH/K Touring: 87 to 90-ALL
12	43657-89	SPACER, right bearing (1)	Softail: 90 to 90-BM
13	40999-87	VALVE STEM (1)	Touring: L87 to 90-ALL
14	41043-89	DISC WHEEL ASM., 16 inches (1)	Softail: 90 to 90-BM
15	41109-88	AXLE (1)	Softail: L88 to 90-BL
16	41123-79	VALVE CAP (1)	ALL
17	41584-86	AXLE (1)	Softail: 87 to 90-BJ/M
18	41814-76A	HUB PLATE (1)	FXR: 87 to 90-EA/B/L
19	43001-79	RIM, 19 inches (chrome) (1)	FXR: 87 to 90-EA/B/G
20	43005-86	WHEEL ASSY., 16 inches laced (1)	Softail: 87 to 90-BJ
22	43020-87	SPOKE AND NIPPLE SET, 21 inches short (20)	FXR: 87 to 90-EL
22	43024-73B	SPOKE AND NIPPLE SET, 19 inches short (20)	FXR: 87 to 90-EA/B/G/M
22	43025-73B	SPOKE AND NIPPLE SET, 19 inches long (20)	FXR: 87 to 90-EA/B/G/M
22	43032-40B	SPOKE AND NIPPLE SET, 16 inches (40)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
22	43035-87	SPOKE AND NIPPLE SET, 21 inches long (20)	FXR: 87 to 90-EL
22	43057-80A	SPOKE AND NIPPLE SET, 21 inches (40)	Softail: 87 to 90-BH/K/L
23	43053-86	HUB, w/bearings, seals and spacers (1)	Softail: 87 to 90-BJ
24	43067-86	CAP, hub (chrome) (1)	Softail: 87 to 90-BJ
25	43085-81	RIM, 16 inches (chrome) (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
27	43150-83	VALVE STEM (1)	FXR: 87 to 90-EA/B/C/G/M
27	43157-83A	VALVE STEM (1)	Touring: E87-ALL
28	43290-82	SPACER, 0.032 thk. (1)	Touring: 87 to 90-ALL
28	43291-82	SPACER, 0.016 thk. (1)	Touring: 87 to 90-ALL
28	43292-82	SPACER, 0.008 thk. (1)	Touring: 87 to 90-ALL
28	43293-82	SPACER, 0.004 thk. (1)	Touring: 87 to 90-ALL
28	43294-82	SPACER, 0.002 thk. (1)	Touring: 87 to 90-ALL
29	43312-84	WHEEL ASSY., 19 inches laced (1)	FXR: 87 to 90-EA/B99
31	43338-83	WHEEL ASSY., 19 inches-9 spoke (silver) (1)	FXR: 87 to 90-EB/G
31	43345-84A	WHEEL ASSY., 16 inches-16 spoke (black), N/A (1)	Touring: E87-ALL
31	43345-87	WHEEL ASSY., 16 inches-10 spoke (black) (1)	Touring: L87 to 90-ALL
31	43626-84	WHEEL ASSY., 19 inches-9 spoke (black) (1)	FXR: 87 to 90-EA/C

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

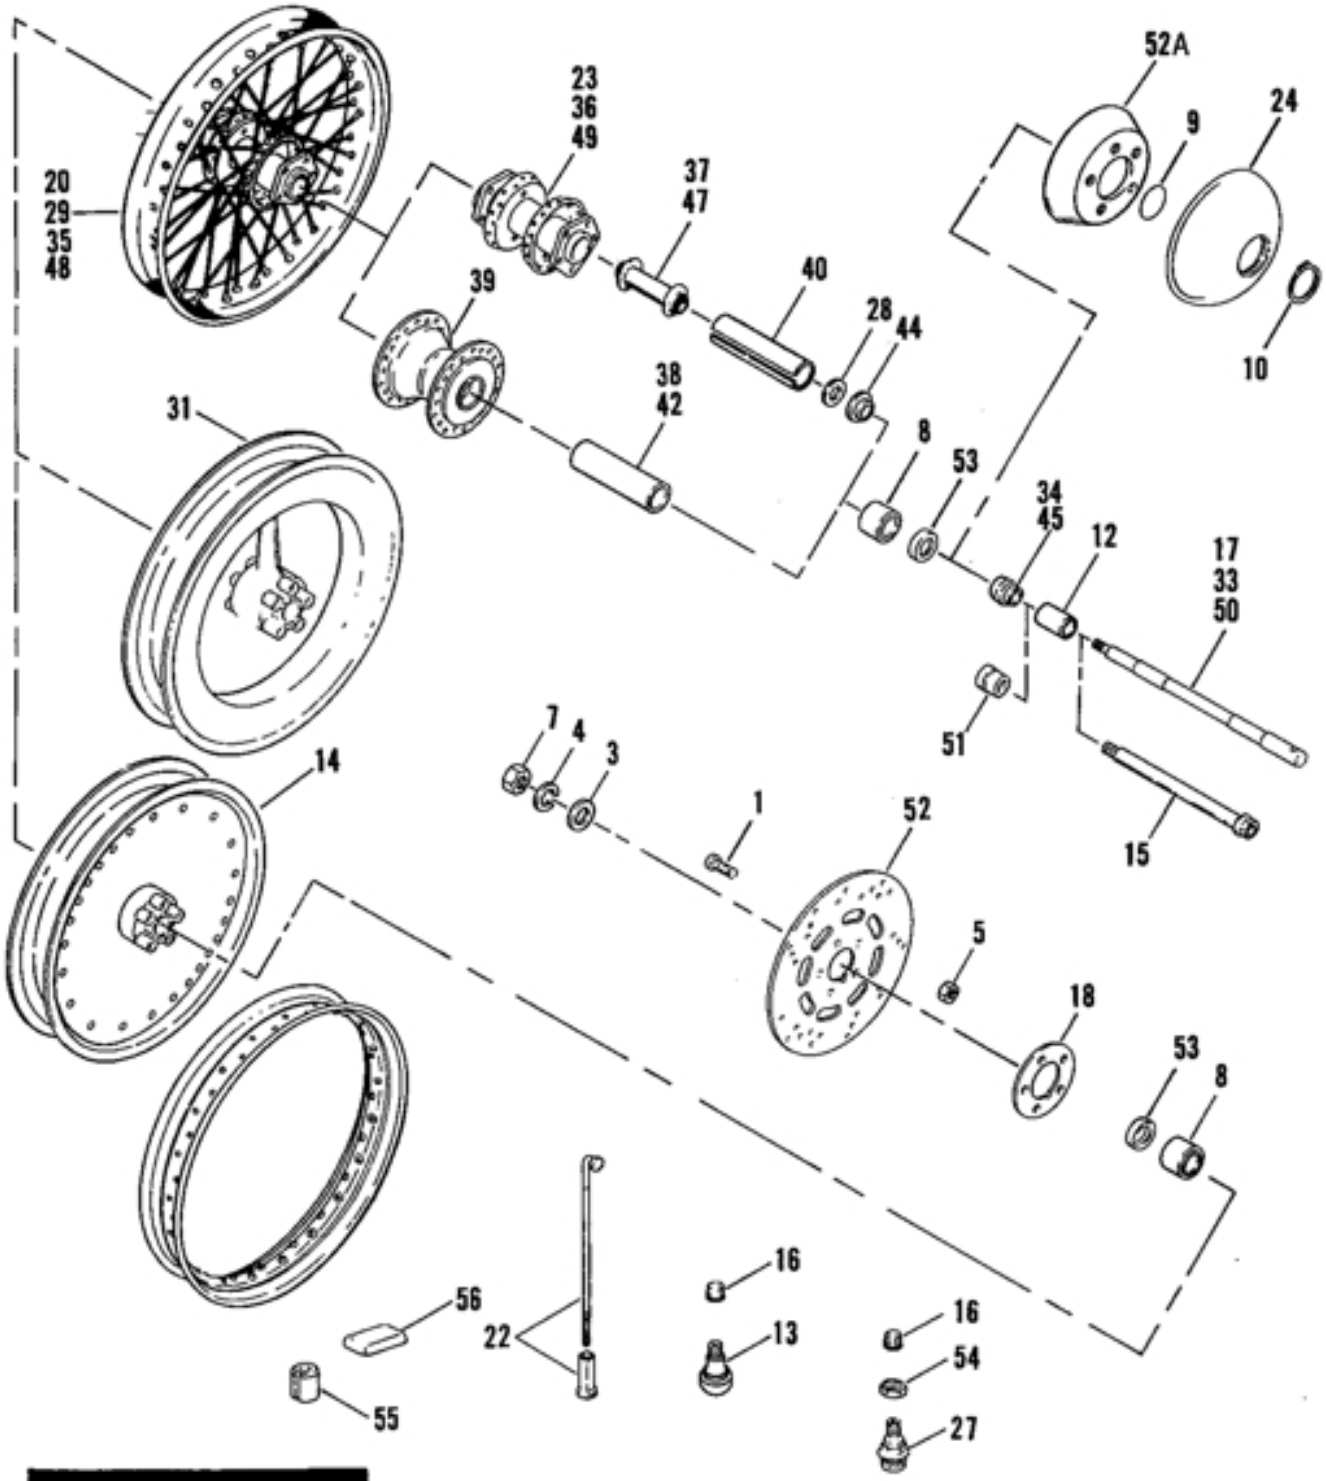

52A
9
24
23
36
49
37
47
20
29
35
48
40
39
28
44
10
38
42
31
8
53
34
45
12
17
33
50
51
7
4
3
14
1
52
15
5
18
53
8
16
56
22
13
16
54
55
27

FRONT WHEEL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	43346-83	AXLE (1)	Softail: 87 to 90-BH/K Touring: 87 to 90-ALL
34	43358-83A	SPACER, brg. (1)	FXR: 87 to 90-ALL
35	43403-87	WHEEL ASSY., 16 inches laced (1)	Touring: 87 to 90-ALL
35	43557-87	WHEEL ASSY., 21 inches laced (1)	FXR: 87 to 90-EL
35	43676-88	WHEEL ASSY., 21 inches laced (1)	Softail: L88 to 90-BL
36	43404-87	HUB ASSY., w/38 (1)	Touring: 87 to 90-ALL
37	43601-78A	SPACER, w/flanges-4.420 (orange) (1)	Softail: 87 to 90-BH/J/K/L
37	43602-78A	SPACER, w/flanges-4.434 (yellow) (1)	Softail: 87 to 90-BH/J/K/L
37	43603-78A	SPACER, w/flanges-4.448 (white), N/A (1)	Softail: 87 to 90-BH/J/K/L
38	43608-82	BEARING SPACER, sleeve (1)	Touring: 87 to 90-ALL
39	43610-87	HUB, w/bearings and seals (1)	FXR: 87 to 90-EL
39	43619-84	HUB, w/bearings and seals (1)	FXR: 87 to 90-EA/B
40	43615-82	SLEEVE, plastic (1)	Touring: 87 to 90-ALL
42	43623-78	SLEEVE, between brgs.-2.564 (violet) (1)	FXR: 87 to 90-ALL
42	43624-78	SLEEVE, between brgs.-2.550 (pink), N/A (1)	FXR: 87 to 90-ALL
42	43625-78	SLEEVE, between brgs.-2.536 (gold) (1)	FXR: 87 to 90-ALL
42	43637-89	SLEEVE, between brgs.-4.248 (yellow/blue) (1)	Softail: 90 to 90-BM
42	43638-89	SLEEVE, between brgs.-4.234 (red/blue) (1)	Softail: 90 to 90-BM
42	43658-89	SLEEVE, between brgs.-4.262 (white/blue) (1)	Softail: 90 to 90-BM
44	43650-82	SPACER WASHER (1)	Touring: 87 to 90-ALL
45	43654-86A	SPACER (1)	Softail: 87 to 90-BJ
46	43662-80B	RIM, 21 inches (chrome) (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K/L
47	43668-82	SLEEVE, between brgs. (1)	Touring: 87 to 90-ALL
48	43671-84	WHEEL ASSY, 21; laced (1)	Softail: 87 to 90-BH/K
49	43672-84	HUB, w/bearings and seals (1)	Softail: 87 to 90-BH/K
49	43677-88	HUB, w/bearings and seals (1)	Softail: L88 to 90-BL
50	43883-84	AXLE (1)	FXR: 87-EA/B/C
50	43895-87	AXLE (1)	FXR: 87-EG/L; 88 to 90-ALL
51	44029-88	SPACER, hub-right (1)	Softail: L88 to 90-BL
52	44136-92	BRAKE DISC, 2-dual calipers (1)	ALL
52A	44447-89	COVER, disc wheel (1)	Softail: 90 to 90-BM
53	47519-83A	OIL SEAL (2)	ALL
54	54321-85	NUT, valve stern (1)	FXR: 87 to 90-EL Touring: 87 to 90-ALL
55	95578-41	WEIGHT, 1/2 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L Touring: 87 to 90-ALL
55	95581-47	WEIGHT, 3/4 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L Touring: 87 to 90-ALL
55	95582-47	WEIGHT, 1 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L Touring: 87 to 90-ALL
56	95594-84	WEIGHT, 1/4 oz. for cast whl. (black) (1)	FXR: 87 to 90-EA/C Touring: 87 to 90-ALL
56	95595-84	WEIGHT, 1/4 oz. for cast whl. (silver) (1)	FXR: 87 to 90-EB/G/L Softail: 87 to 90-BJ/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

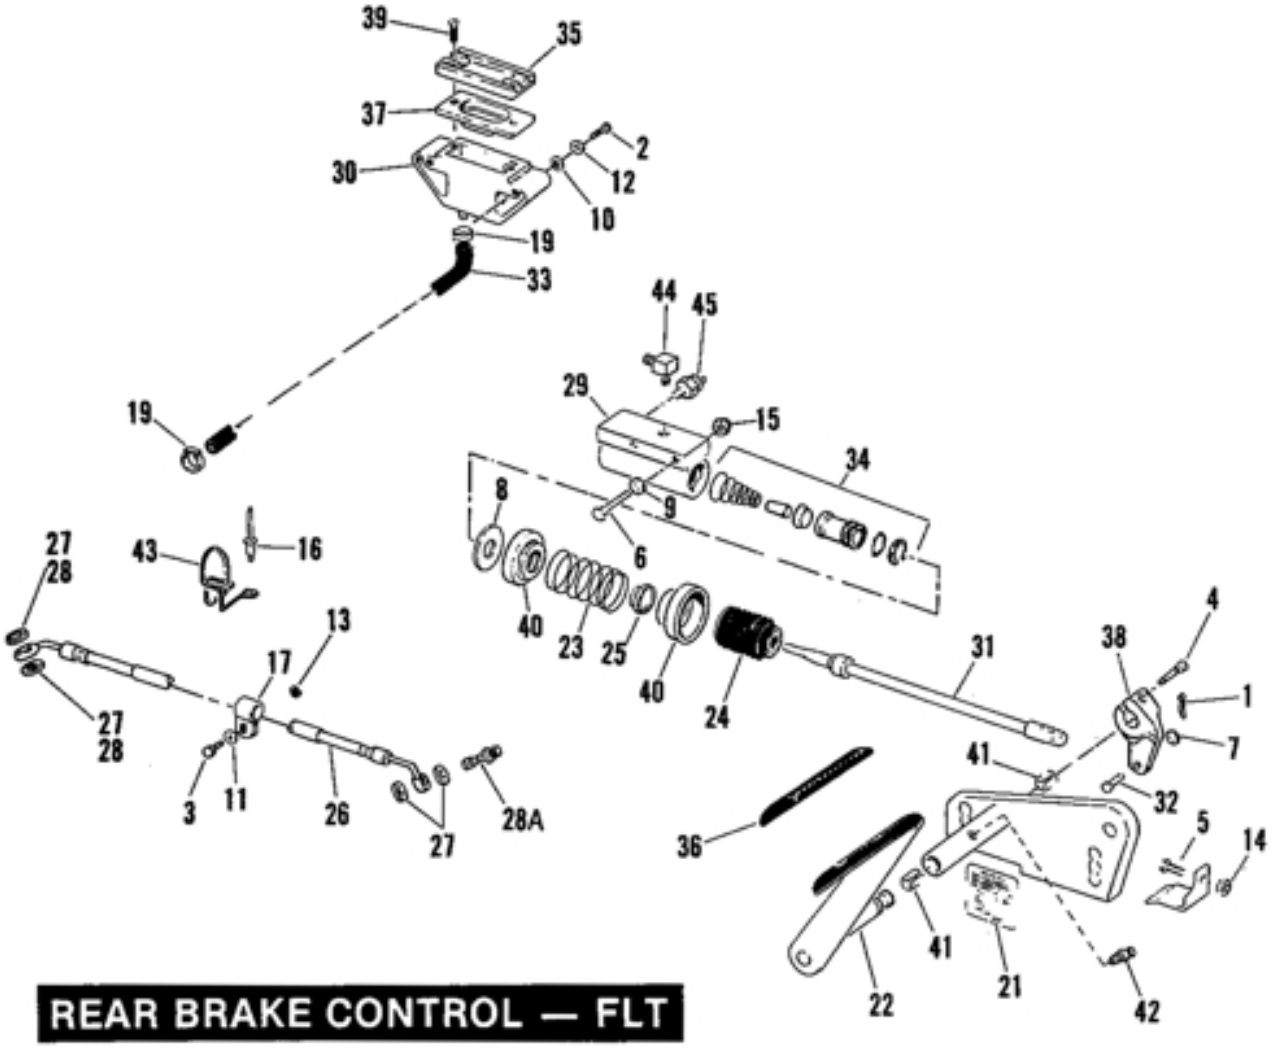


REAR BRAKE CONTROL — FLT

REAR BRAKE CONTROL - FLT MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN (1)	Touring: 87 to 90-ALL
2	2604	SCREW (2)	Touring: 87 to 90-ALL
3	2664	SCREW (1)	Touring: 87 and 88-ALL
4	2708	SCREW (1)	Touring: 87 to 90-ALL
5	3825	BOLT (1)	Touring: 87 to 90-ALL
6	4053W	BOLT (2)	Touring: 87 to 90-ALL
7	6220W	WASHER (1)	Touring: 87 to 90-ALL
8	6317	WASHER, nylon (1)	Touring: 87 to 90-ALL
9	6702	WASHER (2)	Touring: 87 to 90-ALL
10	6716	WASHER (2)	Touring: 87 to 90-ALL
11	7069	LOCKWASHER (1)	Touring: 87 and 88-ALL
12	7118	LOCKWASHER (2)	Touring: 87 to 90-ALL
13	7220	LOCKWASHER (1)	Touring: 87 and 88-ALL
14	7676	NUT (1)	Touring: 87 to 90-ALL
15	7725	LOCKNUT (2)	Touring: 87 to 90-ALL
16	8469	RIVET (2)	Touring: 87 to 90-ALL
17	10031	CLIP, brake hose to swing arm (1)	Touring: 87 and 88-ALL
19	10038	CLAMP, brake hose (2)	Touring: 87 to 90-ALL
21	14027-83	LABEL, pedal adjustment (1)	Touring: 87 to 90-ALL
22	33882-83B	FOOT BRAKE LEVER (1)	Touring: 87 to 90-ALL
23	40920-79	SPRING, brake rod return (1)	Touring: 87 to 90-ALL
24	40922-79	BOOT, master cylinder (1)	Touring: 87 to 90-ALL
25	40924-86	WASHER, brake rod spring (1)	Touring: 87 to 90-ALL
26	40971-86A	BRAKE HOSE, rear (1)	Touring: 87 to 90-ALL
27	41731-82	GASKET (4)	Touring: 87 and 88-ALL
28	41731-88	GASKET, 2-89 (4)	Touring: 89 to 90-ALL
28A	41747-82A	BOLT (2)	Touring: 87 to 90-ALL
29	41755-86	MASTER CYLINDER (1)	Touring: 87 to 90-ALL
30	41800-81A	RESERVOIR, master cylinder (1)	Touring: 87 to 90-ALL
31	41957-86	ROD, master cylinder (1)	Touring: 87 to 90-ALL
32	42269-70	CLEVIS PIN (1)	Touring: 87 to 90-ALL
33	42315-85	HOSE, reservoir to master cylinder (1)	Touring: 87 to 90-ALL
34	42374-86	REBUILD KIT, master cylinder (1)	Touring: 87 to 90-ALL
35	42376-77A	COVER, master cylinder reservoir, N/A (1)	Touring: 87 to 89-ALL
35	45057-82	COVER, master cylinder reservoir (1)	Touring: 90 to 90-ALL
36	42416-83	PAD, brake pedal (1)	Touring: 87 to 90-ALL
37	42455-80	GASKET, master cylinder reservoir (1)	Touring: 87 to 90-ALL
38	42510-83	CLEVIS ASSEMBLY (1)	Touring: 87 to 90-ALL
39	42534-82	SCREW (2)	Touring: 87 to 90-ALL
40	44126-82	WASHER, brake return spring (2)	Touring: 87 to 90-ALL
41	47247-83	BUSHING, hub foot brake (2)	Touring: 87 to 90-ALL
42	50972-75	FITTING, lubrication (1)	Touring: 87 to 90-ALL
43	62670-84	GUIDE, brake lines to frame (1)	Touring: 87 to 90-ALL
44	63551-82	FITTING (1)	Touring: 87 to 90-ALL
45	72023-51A	SWITCH, stoplamp (1)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
30	41804-84A	RESERVOIR, master cylinder (HDI Only) (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

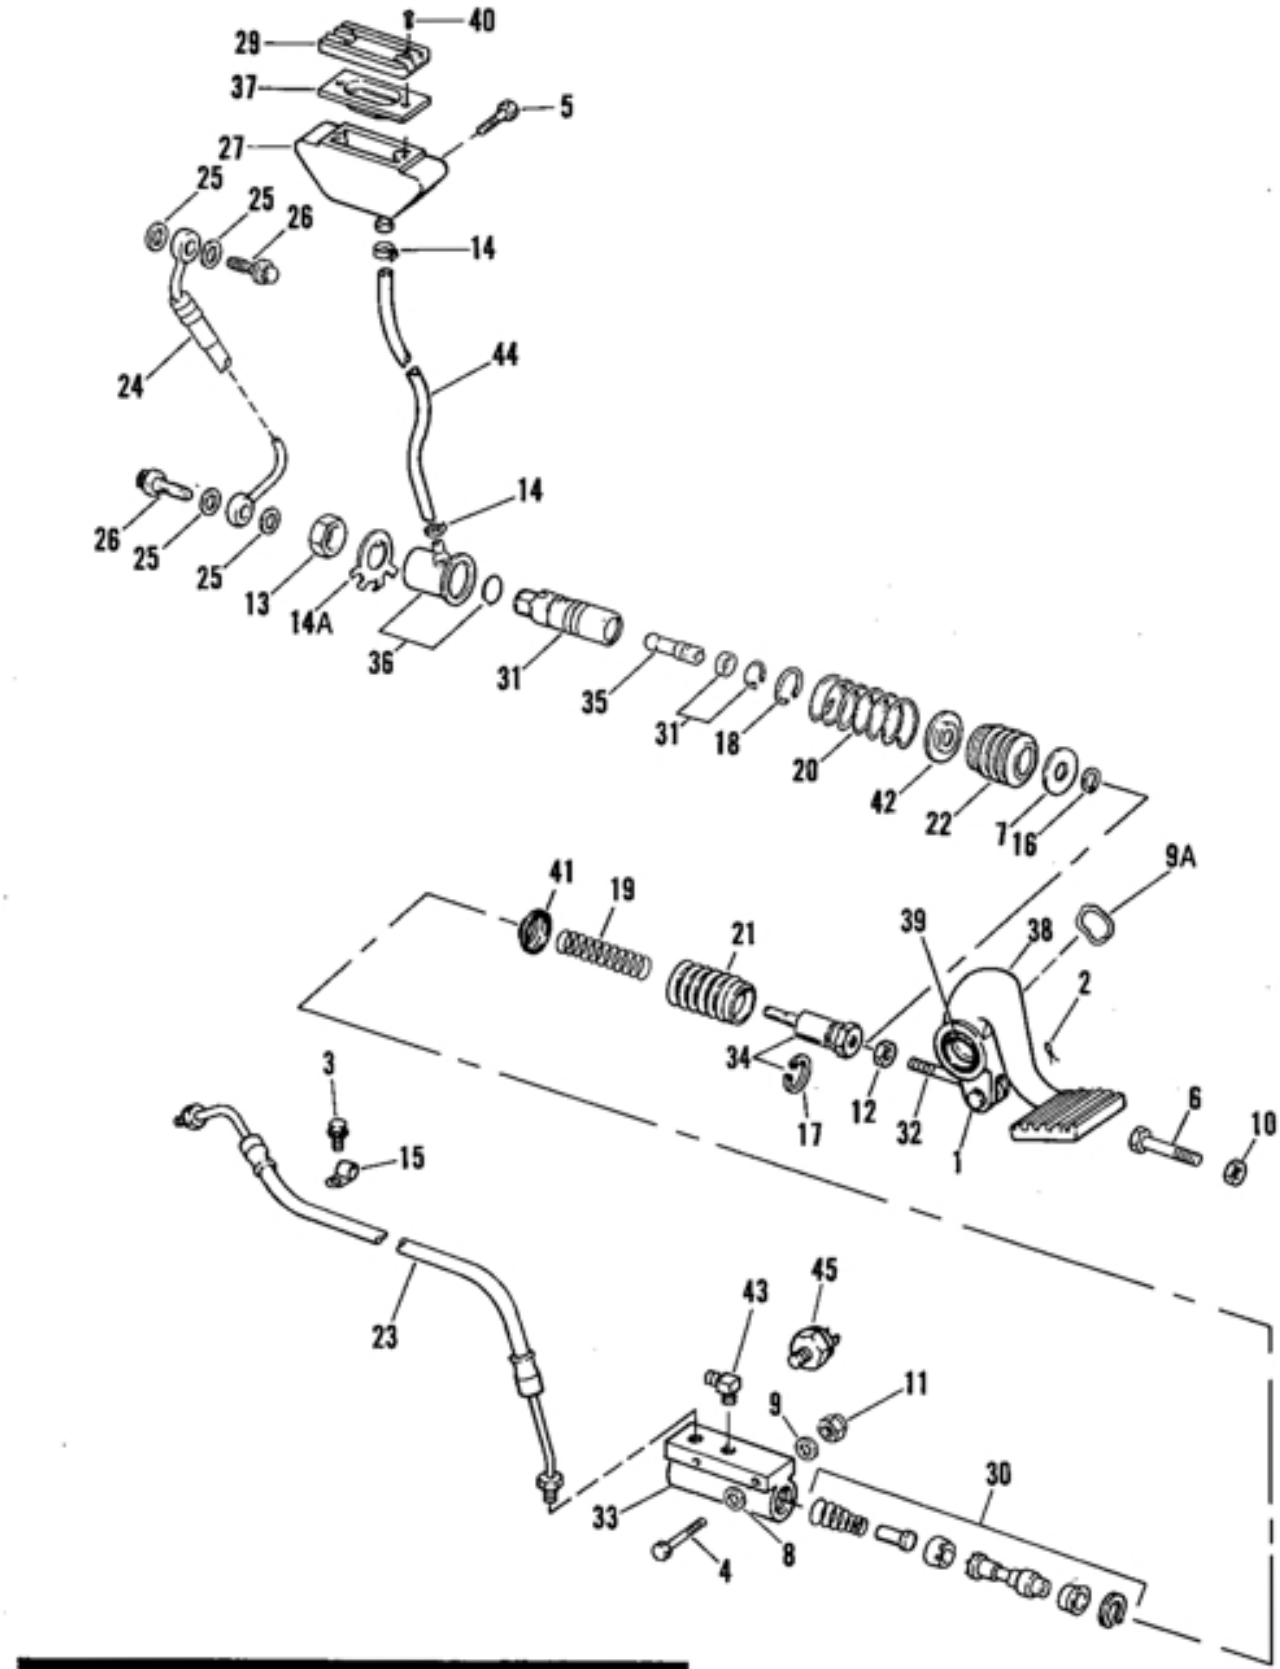


REAR BRAKE CONTROL — FXR

REAR BRAKE CONTROL - FXR MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	222	CLEVIS PIN (1)	FXR: 87 to 90-ALL
2	515	COTTER PIN (1)	FXR: 87 to 90-ALL
3	2501	SCREW (1)	FXR: L87 to 90-ALL
3	2652	SCREW (1)	FXR: E87-ALL
4	2887W	BOLT (2)	FXR: E87-ALL
5	3473	BOLT (2)	FXR: 87 to 90-ALL
6	3802W	BOLT, lever stop (1)	FXR: E87-ALL
7	6366	WASHER (1)	FXR: L87 to 90-ALL
8	6702	WASHER (1)	FXR: E87-ALL
9	6716	WASHER (2)	FXR: E87-ALL
9A	7012	WASHER (1)	FXR: 90 to 90-ALL
10	7689W	JAMNUT (1)	FXR: E87-ALL
11	7740	LOCKNUT (2)	FXR: E87-ALL
12	7744	JAMNUT (1)	FXR: 87 to 90-ALL
13	7855W	JAMNUT (1)	FXR: L87 to 90-ALL
14	10038	CLAMP (2)	FXR: 87 to 90-ALL
14A	37503-41	LOCKWASHER (1)	FXR: L87 to 90-ALL
15	38712-68	CLAMP (1)	FXR: 87 to 90-ALL
16	40903-87	RETAINING RING (1)	FXR: L87 to 90-ALL
17	40918-82	RETAINING RING (1)	FXR: E87-ALL
18	40918-87	RETAINING RING (1)	FXR: L87 to 90-ALL
19	40920-82	SPRING, brake return (1)	FXR: E87-ALL
20	40920-87	SPRING, brake return (1)	FXR: L87 to 90-ALL
21	40922-79	BOOT, master cylinder (1)	FXR: E87-ALL
22	40922-87	BOOT, master cylinder (1)	FXR: L87 to 90-ALL
23	40956-82	HOSE, rear brake (1)	FXR: E87-ALL
24	40956-87	BRAKE LINE, rear (1)	FXR: L87 to 90-ALL
25	41731-82	GASKET (4)	FXR: L87 and 88-ALL
25	41731-88	GASKET (4)	FXR: 89 to 90-ALL
26	41747-82A	BOLT (2)	FXR: L87 to 90-ALL
27	41800-81A	RESERVOIR, master cylinder (1)	FXR: 87 to 90-ALL
29	42376-77A	COVER, reservoir, N/A (1)	FXR: 87 to 89-ALL
29	45057-82	COVER, reservoir (1)	FXR: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

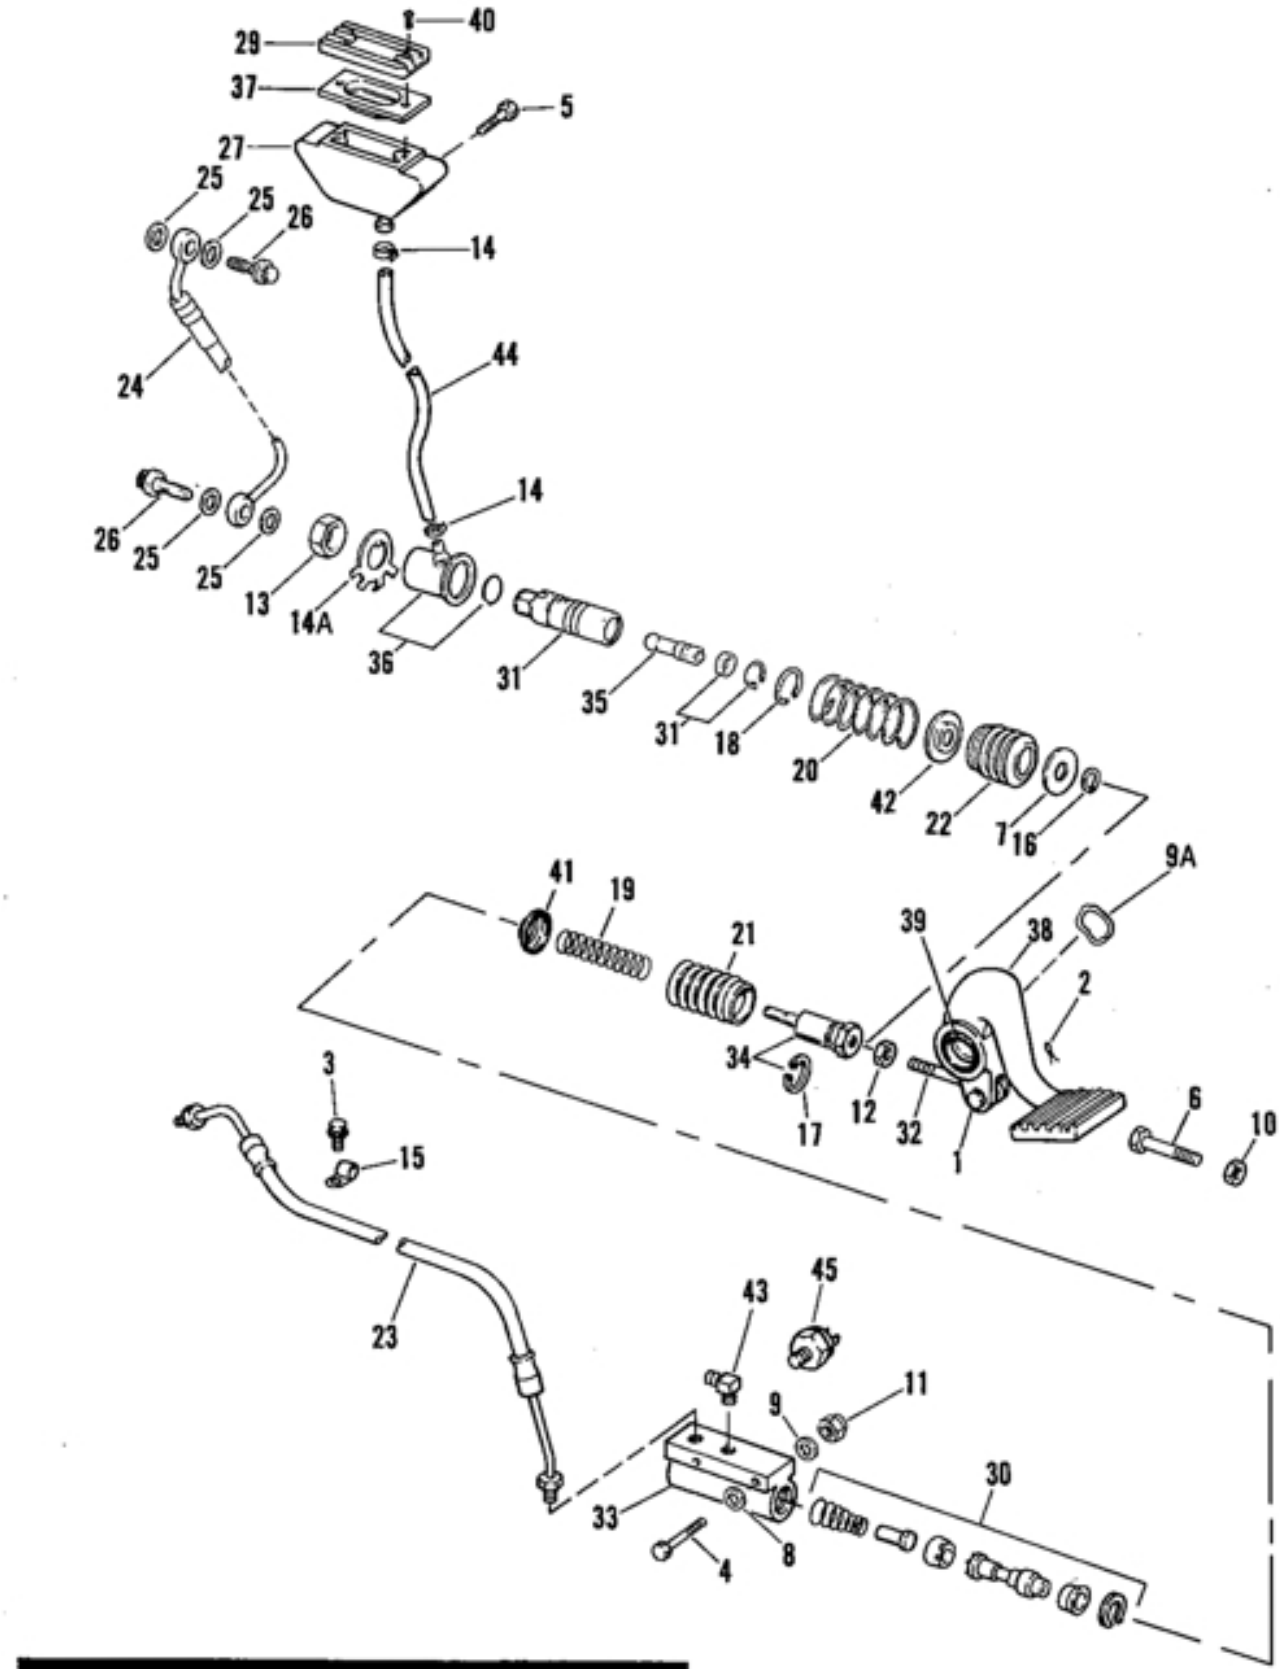


REAR BRAKE CONTROL — FXR

REAR BRAKE CONTROL - FXR MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	42382-82A	REPAIR KIT, master cylinder (1)	FXR: F87-ALL
31	42382-87A	REPAIR KIT, master cylinder (1)	FXR: L87 to 90-ALL
32	42437-81	ROD END (1)	FXR: E87-ALL
32	42437-87	ROD END (1)	FXR: L87 to 90-ALL
33	42446-82A	MASTER CYLINDER, rear (1)	FXR: E87-ALL
33	42446-87A	MASTER CYLINDER, rear (1)	FXR: L87 to 90-ALL
34	42448-82A	PLUNGER, brake w/retaining ring (1)	FXR: E87-ALL
35	42448-87	PUSH ROD (1)	FXR: L87 to 90-ALL
36	42452-87	REPAIR KIT, master cylinder body (1)	FXR: L87 to 90-ALL
37	42455-80	GASKET, reservoir (1)	FXR: 87 to 90-ALL
38	42523-82	BRAKE PEDAL ASSY., w/#1, 2, 32, and 39 (1)	FXR: E87-ALL
38	42523-87	BRAKE PEDAL ASSY., w/#1, 2, 32, and 39 (1)	FXR: L87 to 90-ALL
39	42524-82	BUSHING (2)	FXR: 87 to 90-ALL
40	42534-82	SCREW (2)	FXR: 87 to 90-ALL
41	44126-82	WASHER, brake return spring (1)	FXR: E87-ALL
42	44126-87	RETAINER, brake return spring (1)	FXR: L87 to 90-ALL
43	63551-82	FITTING, reservoir hose (1)	FXR: E87-ALL
44	63561-84	HOSE, reservoir to master cylinder (1)	FXR: E87-ALL
44	63561-87	HOSE, reservoir to master cylinder (1)	FXR: L87 to 90-ALL
45	72023-51A	STOPLAMP SWITCH (1)	FXR: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
27	41804-84A	RESERVOIR, master cylinder (HDI only) (1)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

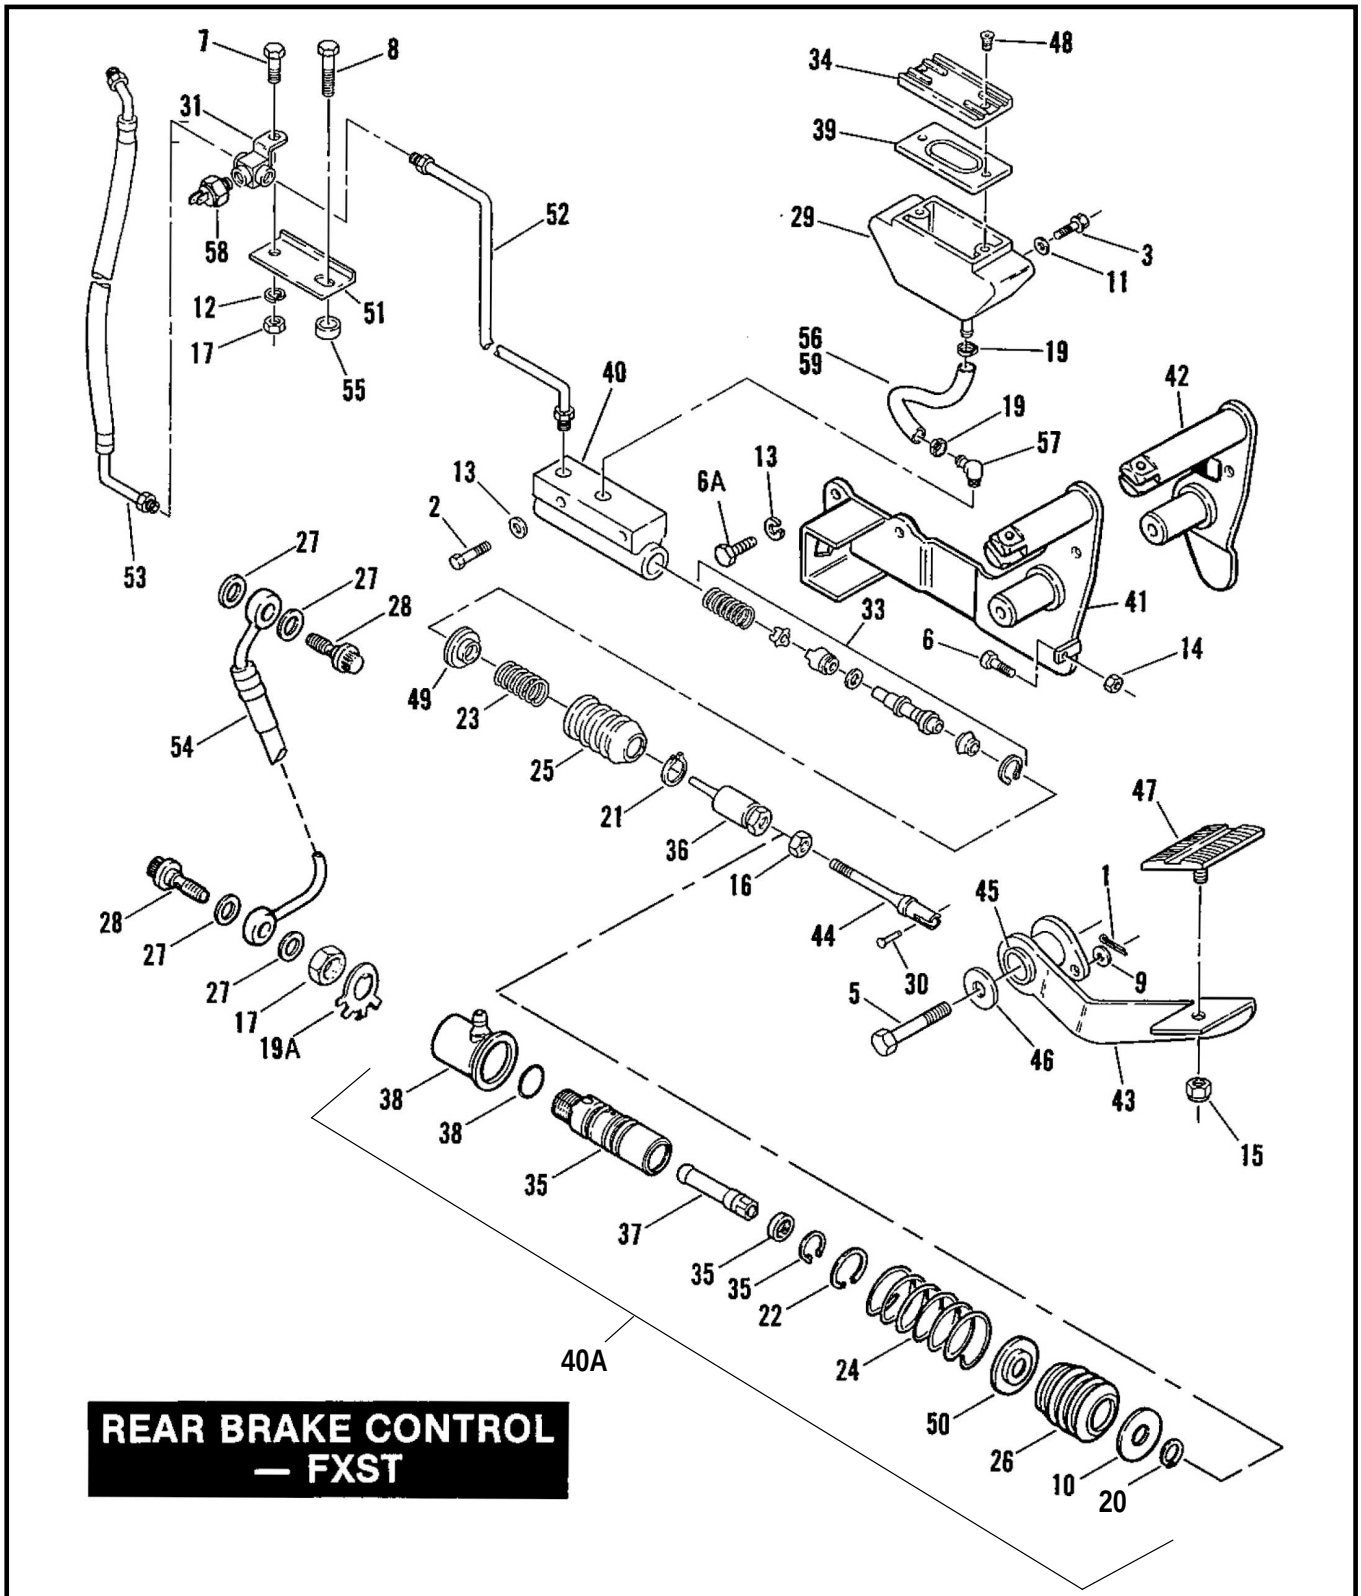


REAR BRAKE CONTROL — FXST

REAR BRAKE CONTROL - FXST MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN (1)	Softail: 87 to 90-BH/K/L
2	2667	BOLT (2)	Softail: E87-BH/K
3	3473	BOLT (2)	Softail: 87 to 90-BH/K/L
5	3509	BOLT (1)	Softail: E87-BH/K; 89 to 90-BH/K/L
5	3526	SCREW (1)	Softail: L87 and 88-BH/K
6	3825	BOLT (1)	Softail: E87-BH/K
6A	3987	BOLT (2)	Softail: L87 and 88-BH/K/L
7	4713W	BOLT (1)	Softail: E87-BH/K
8	4724	BOLT (1)	Softail: E87-BH/K
9	6220W	WASHER (1)	Softail: 87 to 90-BH/K/L
10	6366	WASHER (1)	Softail: L87 to 90-BH/K/L
11	6716	WASHER (2)	Softail: 87 to 90-BH/K/L
12	7038	LOCKWASHER (1)	Softail: E87-BH/K
13	7127	LOCKWASHER (4)	Softail: 87 and 88-BH/K/L
14	7683	LOCKNUT (1)	Softail: E87-BH/K
15	7742	LOCKNUT (1)	Softail: 87 to 90-BH/K/L
16	7744	JAMNUT (1)	Softail: 87 to 90-BH/K/L
17	7783	NUT (1)	Softail: E87-BH/K
18	7855W	JAMNUT (1)	Softail: L87 to 90-BH/K/L
18	9990W	CLAMP, rear brake line (1)	Softail: 89 to 90-BH/K/L
19	10038	CLAMP, reservoir hose (2)	Softail: 87 to 90-BH/K/L
19A	37503-41	LOCKWASHER (1)	Softail: L87 to 90-BH/K/L
20	40903-87	RETAINING RING (1)	Softail: L87 to 90-BH/K/L
21	40918-82	RETAINING RING, boot (1)	Softail: E87-BH/K
22	40918-87	RETAINING RING (1)	Softail: L87 to 90-BH/K/L
23	40920-82	SPRING, brake return (1)	Softail: E87-BH/K
24	40920-87	SPRING, brake return (1)	Softail: L87 to 90-BH/K/L
25	40922-79	BOOT, push rod (1)	Softail: E87-BH/K
26	40922-87	BOOT, push rod (1)	Softail: L87 to 90-BH/K/L
27	41731-82	GASKET (4)	Softail: L87 to 90-BH/K/L
27	41731-88	GASKET (4)	Softail: 88 to 90-BH/K/L
28	41747-82A	BOLT (2)	Softail: L87 to 90-BH/K/L
29	41800-81A	RESERVOIR, master cylinder (1)	Softail: 87 to 90-BH/K/L
30	42268-90	PIN, rear brake rod clevis (1)	Softail: 90 to 90-BH/K/L
30	42269-30	PIN, rear brake rod clevis (1)	Softail: 87 to 89-BH/K/L
31	42309-70	BRAKE LINE TEE (1)	Softail: E87-BH/K/L
32	42331-87	LOCKPLATE (1)	Softail: L87-BH/K/L
33	42374-82B	REPAIR KIT, master cylinder (1)	Softail: E87-BH/K
34	42376-77A	COVER, reservoir, N/A (1)	Softail: 87 to 89-BH/K/L
34	45057-82	COVER, reservoir (1)	Softail: 90 to 90-BH/K/L
35	42382-87	REPAIR KIT, master cylinder (1)	Softail: L87 to 90-BH/K/L
36	42448-82A	PLUNGER, master cylinder (1)	Softail: E87-BH/K
37	42448-87	PUSH ROD, master cylinder (1)	Softail: L87 to 90-BH/K/L
38	42452-87A	REPAIR KIT, master cylinder body (1)	Softail: L87 to 90-BH/K/L
39	42455-80	GASKET, reservoir (1)	Softail: 87 to 90-BH/K/L
40	42470-82B	MASTER CYLINDER (1)	Softail: E87-BH/K
40A	42444-87B	MASTER CYLINDER (1)	Softail: L87-BH/K
41	42507-86	BRACKET, brake lever and footrest (1)	Softail: E87-BH/K
41	42507-87A	BRACKET, brake lever and footrest (1)	Softail: L87 and 88-BH/K/L
42	42507-89A	BRACKET, brake lever and footrest (1)	Softail: 89 to 90-BH/K/L
43	42515-82	LEVER, foot brake (chrome) (1)	Softail: 87 to 90-BH/K/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

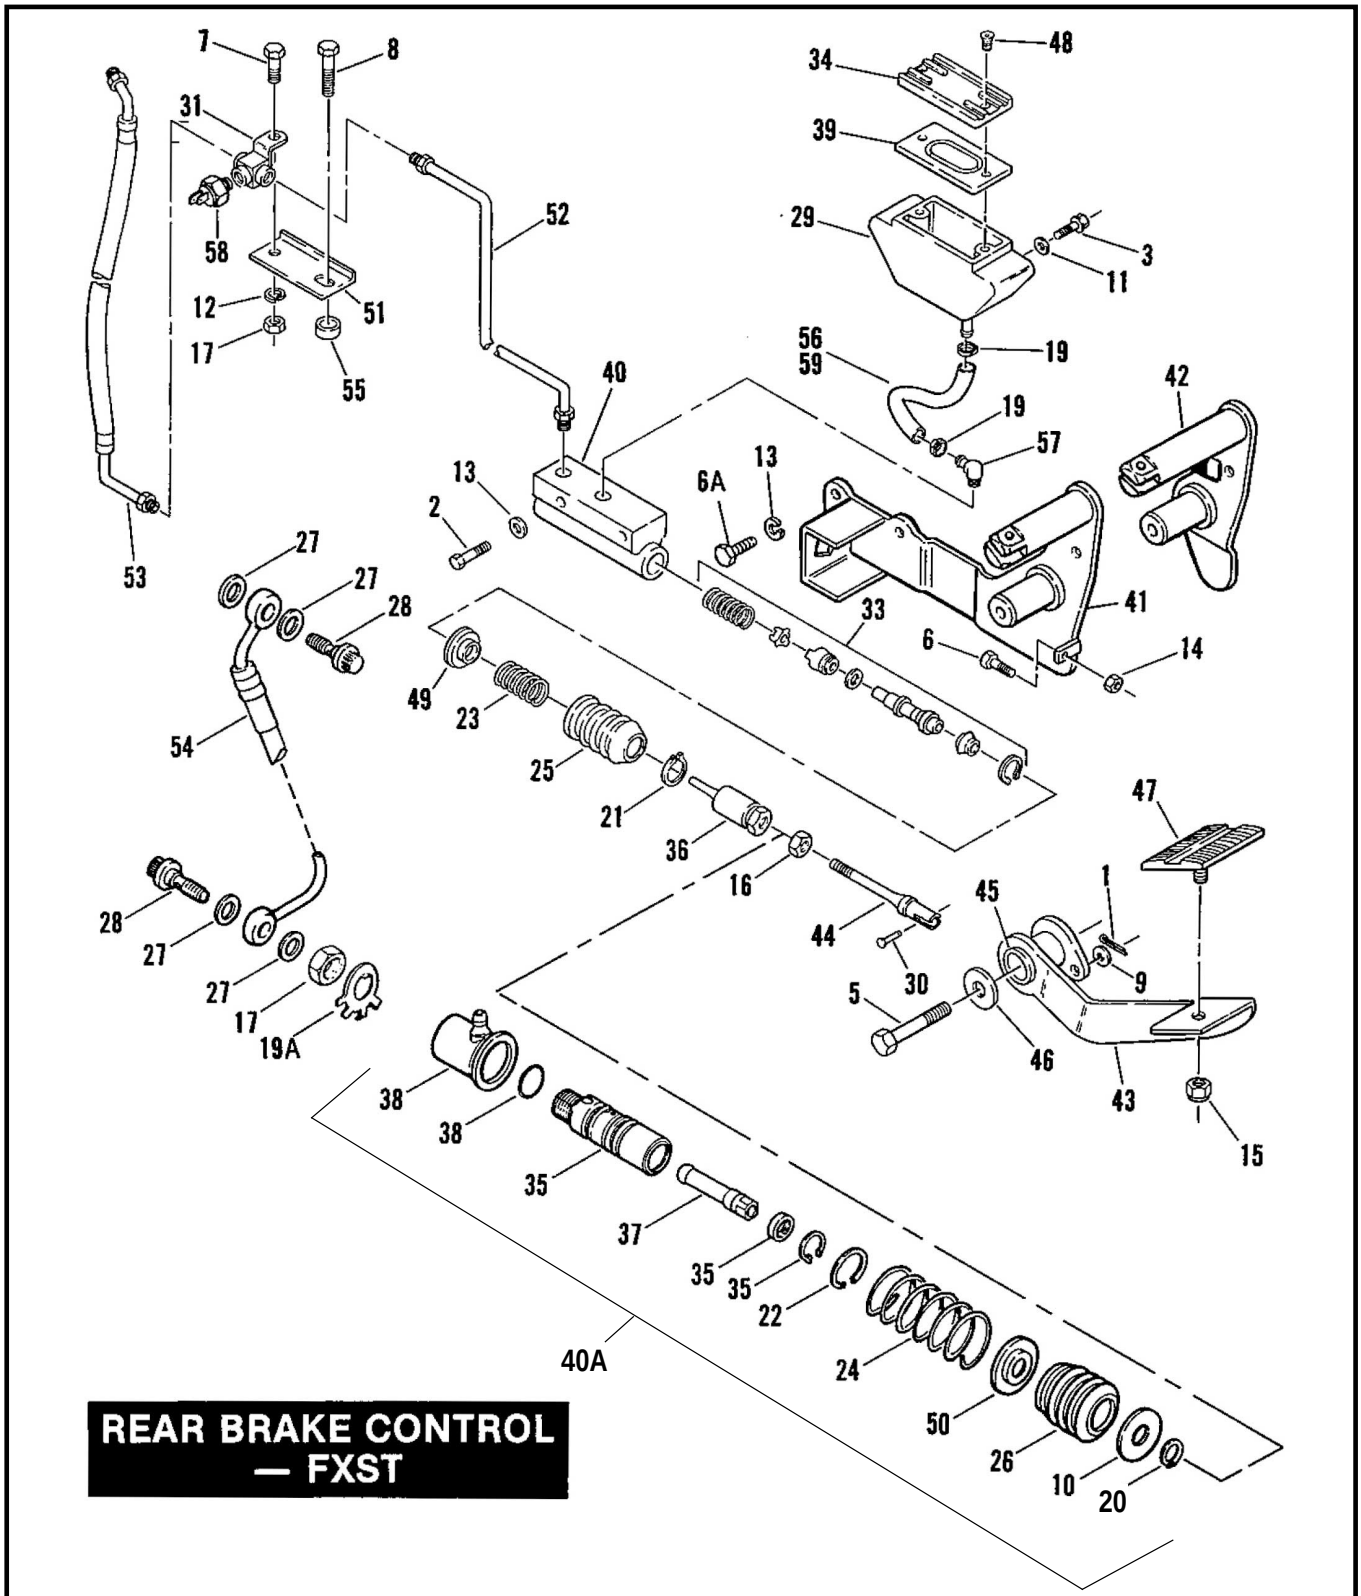


REAR BRAKE CONTROL — FXST

REAR BRAKE CONTROL - FXST MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
44	42522-82	CLEVIS, brake rod (1)	Softail: E87-BH/K
44	42522-87	CLEVIS, brake rod (1)	Softail: L87 to 90-BH/K/L
45	42524-82	BUSHING (2)	Softail: E87-BH/K
46	42531-87	WASHER (1)	Softail: L87 to 90-BH/K
47	42532-82	PAD, brake lever (1)	Softail: 87 to 90-BH/K/L
48	42534-82	SCREW (2)	Softail: 87 to 90-BH/K/L
49	44126-82	WASHER, brake return spring (1)	Softail: E87-BH/K
50	44126-87	RETAINER, return spring (1)	Softail: L87 to 90-BH/K/L
51	45152-78A	BRACKET, brake line tee (1)	Softail: E87-BH/K
52	45154-84	REAR BRAKE TUBE (1)	Softail: E87-BH/K
53	45156-84	REAR BRAKE HOSE (1)	Softail: E87-BH/K
54	45156-87A	REAR BRAKE LINE (1)	Softail: L87 and 88-BH/K/L
54	45156-89B	REAR BRAKE HOSE (1)	Softail: 89 to 90-BH/K/L
55	47716-86	SPACER, brake tee (1)	Softail: E87-BH/K
56	63546-87	HOSE, reservoir (1)	Softail: L87 to 90-BH/K/L
57	63551-82	FITTING, reservoir hose (brass) (1)	Softail: E87-BH/K
58	72023-51A	STOPLAMP SWITCH, rear (1)	Softail: 87 to 90-BH/K/L
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
59	63573-82	HOSE, 5/16 in. I.D. (rubber) (25 ft. lg.) (1)	Softail: L87 to 90-BH/K/L
		INTERNATIONAL MODELS ONLY	
29	41804-84A	RESERVOIR, master cylinder (HDI only) (1)	Softail: 87 to 90-BH/K/L
40	42476-87	MASTER CYLINDER, HDI only, N/A (1)	Softail: E87-BH/K

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

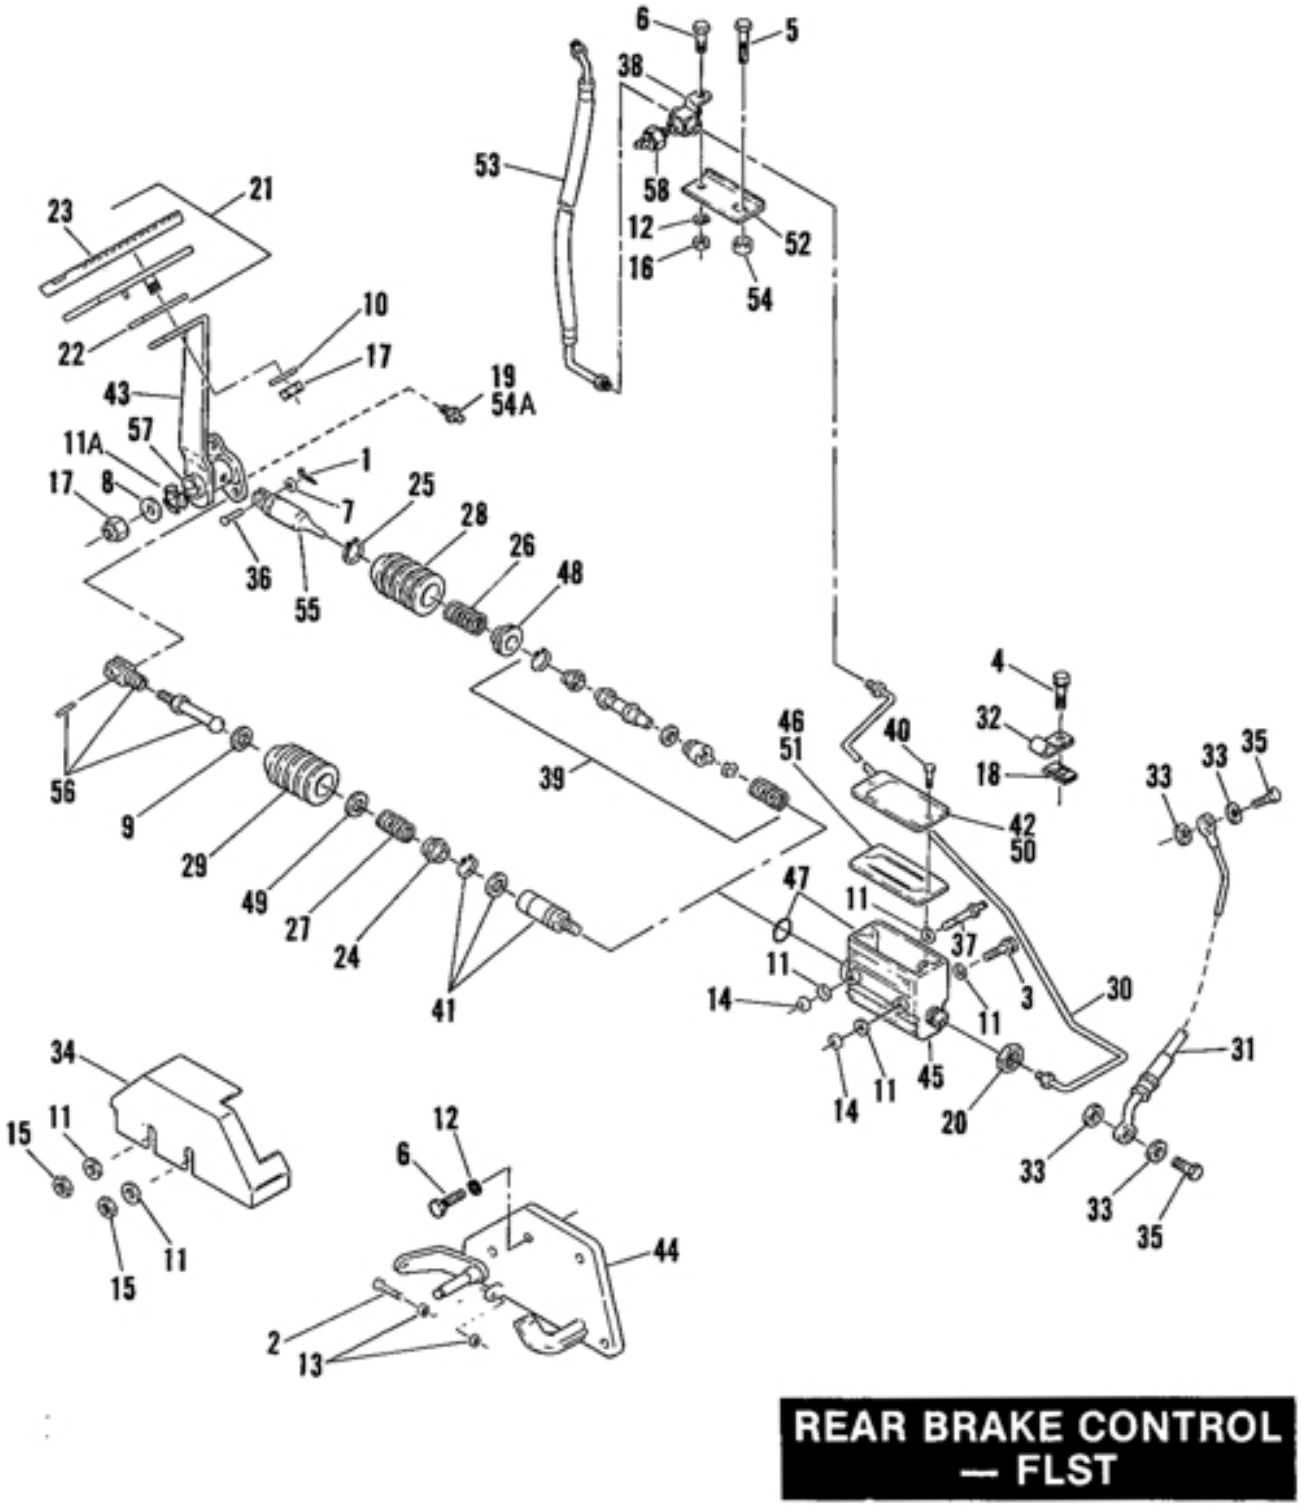


REAR BRAKE CONTROL — FLST

REAR BRAKE CONTROL - FLST MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN (1)	Softail: 87 to 90-BJ/M
2	2718	BOLT (1)	Softail: E87-BJ
3	3419	BOLT (1)	Softail: E87-BJ
3	4068	BOLT (1)	Softail: L87 to 90-BJ/M
4	3787	BOLT (1)	Softail: 87 to 90-BJ/M
5	4411	BOLT (1)	Softail: E87-BJ
6	4713W	BOLT (1)	Softail: E87-BJ; 90 to 90-BJ/M
7	6220W	WASHER (1)	Softail: 87 to 90-BJ/M
8	6334	WASHER (1)	Softail: 87 to 90-BJ/M
9	6366	WASHER (1)	Softail: L87 to 90-BJ/M
10	6516HW	WASHER (1)	Softail: E87-BJ
11	6702	WASHER, 4-Early 1987 (3)	Softail: 87 to 90-BJ/M
11A	7007	SPRING WASHER (1)	Softail: 89 to 90-BJ
12	7038	LOCKWASHER (1)	Softail: E87-BJ; 90 to 90-BJ/M
13	7688	NUT (2)	Softail: E87-BJ
14	7740	LOCKNUT (2)	Softail: 87 to 90-BJ/M
15	7748W	NUT (2)	Softail: L87 to 90-BJ/M
16	7783	NUT (1)	Softail: E87-BJ
17	7825	LOCKNUT, 2-Early 1987 (1)	Softail: 87 to 90-BJ/M
18	8108	SPEEDNUT (1)	Softail: 87 to 90-BJ/M
19	9851A	FITTING, lubrication (1)	Softail: E87-BJ
20	35078-79	NUT (1)	Softail: L87 to 90-BJ/M
21	36956-65A	BRAKE PEDAL KIT (1)	Softail: E87-BJ
22	36962-67	SPACER (1)	Softail: E87-BJ
23	36964-67	PAD, brake lever (1)	Softail: E87-BJ
23	42416-83	PAD, brake lever (1)	Softail: L87 to 90-BJ/M
24	40902-87	ADAPTOR, spring, N/A (1)	Softail: L87 to 89-BJ
24	42479-90	SPRING (1)	Softail: 90 to 90-BJ/M
25	40918-82	RETAINING RING, boot (1)	Softail: E87-BJ
26	40920-82	SPRING, brake return (1)	Softail: E87-BJ
27	40920-87	SPRING, brake return (1)	Softail: L87 to 89-BJ
28	40922-79	BOOT, push rod (1)	Softail: E87-BJ
29	40922-87	BOOT, push rod (1)	Softail: L87 to 90-BJ/M
30	40957-86	BRAKE LINE (1)	Softail: E87-BJ
31	40957-87A	BRAKE LINE (1)	Softail: L87 to 90-BJ/M
32	41713-86	CLAMP, rear brake line (1)	Softail: 87 to 90-BJ
33	41731-82	GASKET (4)	Softail: L87 and 88-BJ
33	41731-88	GASKET (4)	Softail: 89 to 90-BJ/M
34	41745-79	COVER, master cylinder (chrome) (1)	Softail: 87 to 90-BJ/M
35	41747-82A	BOLT (2)	Softail: L87 to 90-BJ/M
36	42269-70	PIN, rear brake rod clevis (1)	Softail: 87 to 90-BJ/M
37	42301-79A	STUD, master cylinder (1)	Softail: E87-BJ
37	42301-87	STUD, master cylinder (1)	Softail: L87 to 90-BJ/M
38	42309-70	BRAKE LINE TEE (1)	Softail: E87-BJ
39	42374-82B	REPAIR KIT, master cylinder (1)	Softail: E87-BJ
40	42375-82	BOLT, master cylinder cover (2)	Softail: E87-BJ
40	42375-87	SCREW, master cylinder cover (2)	Softail: L87 to 90-BJ/M
41	42382-87A	REPAIR KIT, master cylinder (1)	Softail: L87 to 90-BJ/M
42	42381-82	COVER, master cylinder (polished) (1)	Softail: E87-BJ

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

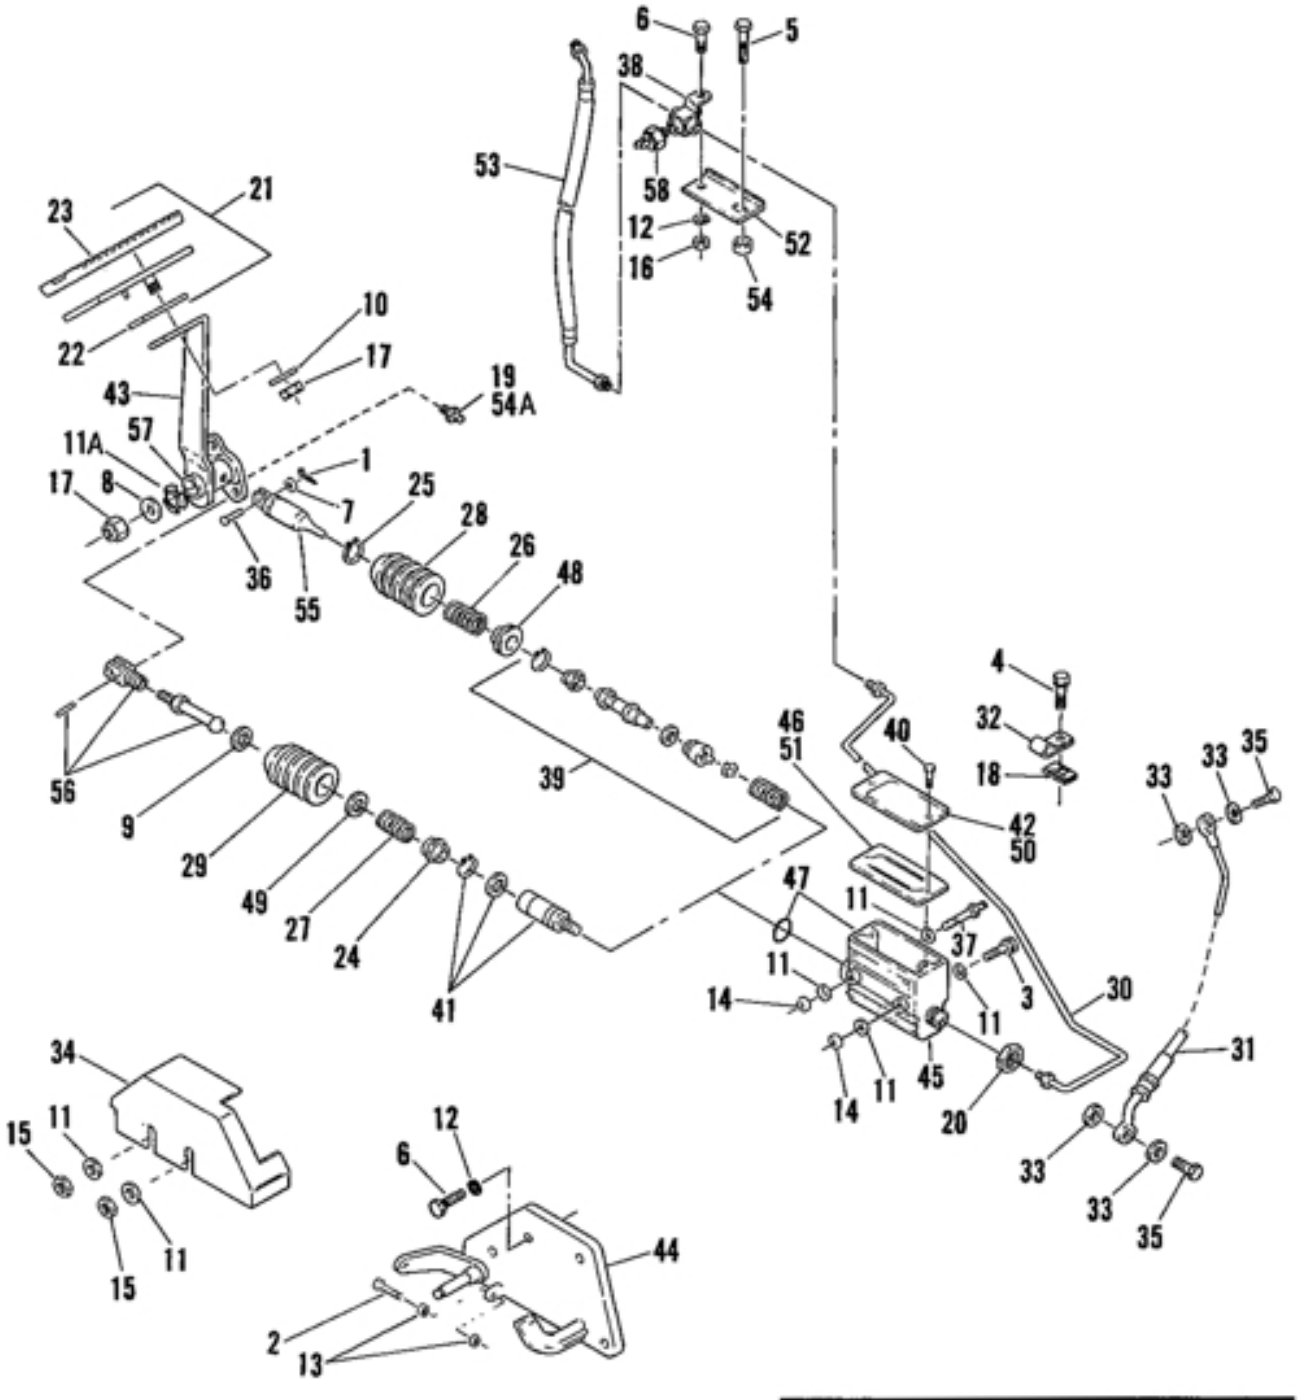


REAR BRAKE CONTROL — FLST

REAR BRAKE CONTROL - FLST MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
43	42407-88	LEVER, foot brake (chrome) (1)	Softail: E87-BJ
43	42407-87B	LEVER, foot brake (chrome) (1)	Softail: L87 to 90-BJ/M
44	42431-86	SUPPORT, foot brake lever (1)	Softail: E87-BJ
44	42431-87	SUPPORT, foot brake lever (1)	Softail: L87 to 90-BJ/M
45	42453-82A	MASTER CYLINDER ASSY. (1)	Softail: E87-BJ
45	42467-87C	MASTER CYLINDER ASSY. (1)	Softail: L87 to 90-BJ/M
46	42455-82	GASKET, master cylinder (1)	Softail: E87-BJ
47	42471-87	REPAIR KIT, master cylinder body (1)	Softail: L87 to 90-BJ/M
48	44126-82	WASHER, brake return spring (1)	Softail: E87-BJ
49	44126-87	RETAINER, spring (1)	Softail: L87 to 90-BJ/M
50	45004-85	COVER, master cylinder (black) (1)	Softail: L87 to 90-BJ/M
51	45005-85	GASKET, cover (1)	Softail: L87 to 90-BJ/M
52	45152-78A	BRACKET, brake line tee (1)	Softail: E87-BJ
53	45156-84	REAR BRAKE HOSE (1)	Softail: E87-BJ
54	47716-86	SPACER, brake tee (1)	Softail: E87-BJ
54A	50972-75	FITTING, lubrication (1)	Softail: L87 to 90-BJ/M
55	50992-86	ROD END, master cylinder (1)	Softail: E87-BJ
56	50992-87	ROD END, master cylinder (1)	Softail: L87 to 90-BJ/M
57	57215-75	BUSHING, foot brake lever (2)	Softail: 87 to 90-BJ/M
58	72023-51A	STOPLAMP SWITCH, rear (1)	Softail: 87 to 90-BJ/M
		INTERNATIONAL MODELS ONLY	
47	42473-87	REPAIR KIT, master cylinder body (HDI only) (1)	Softail: L87 to 90-BJ/M
47	45042-82	REPAIR KIT, sight glass (HDI only) (1)	Softail: L87 to 90-BJ/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

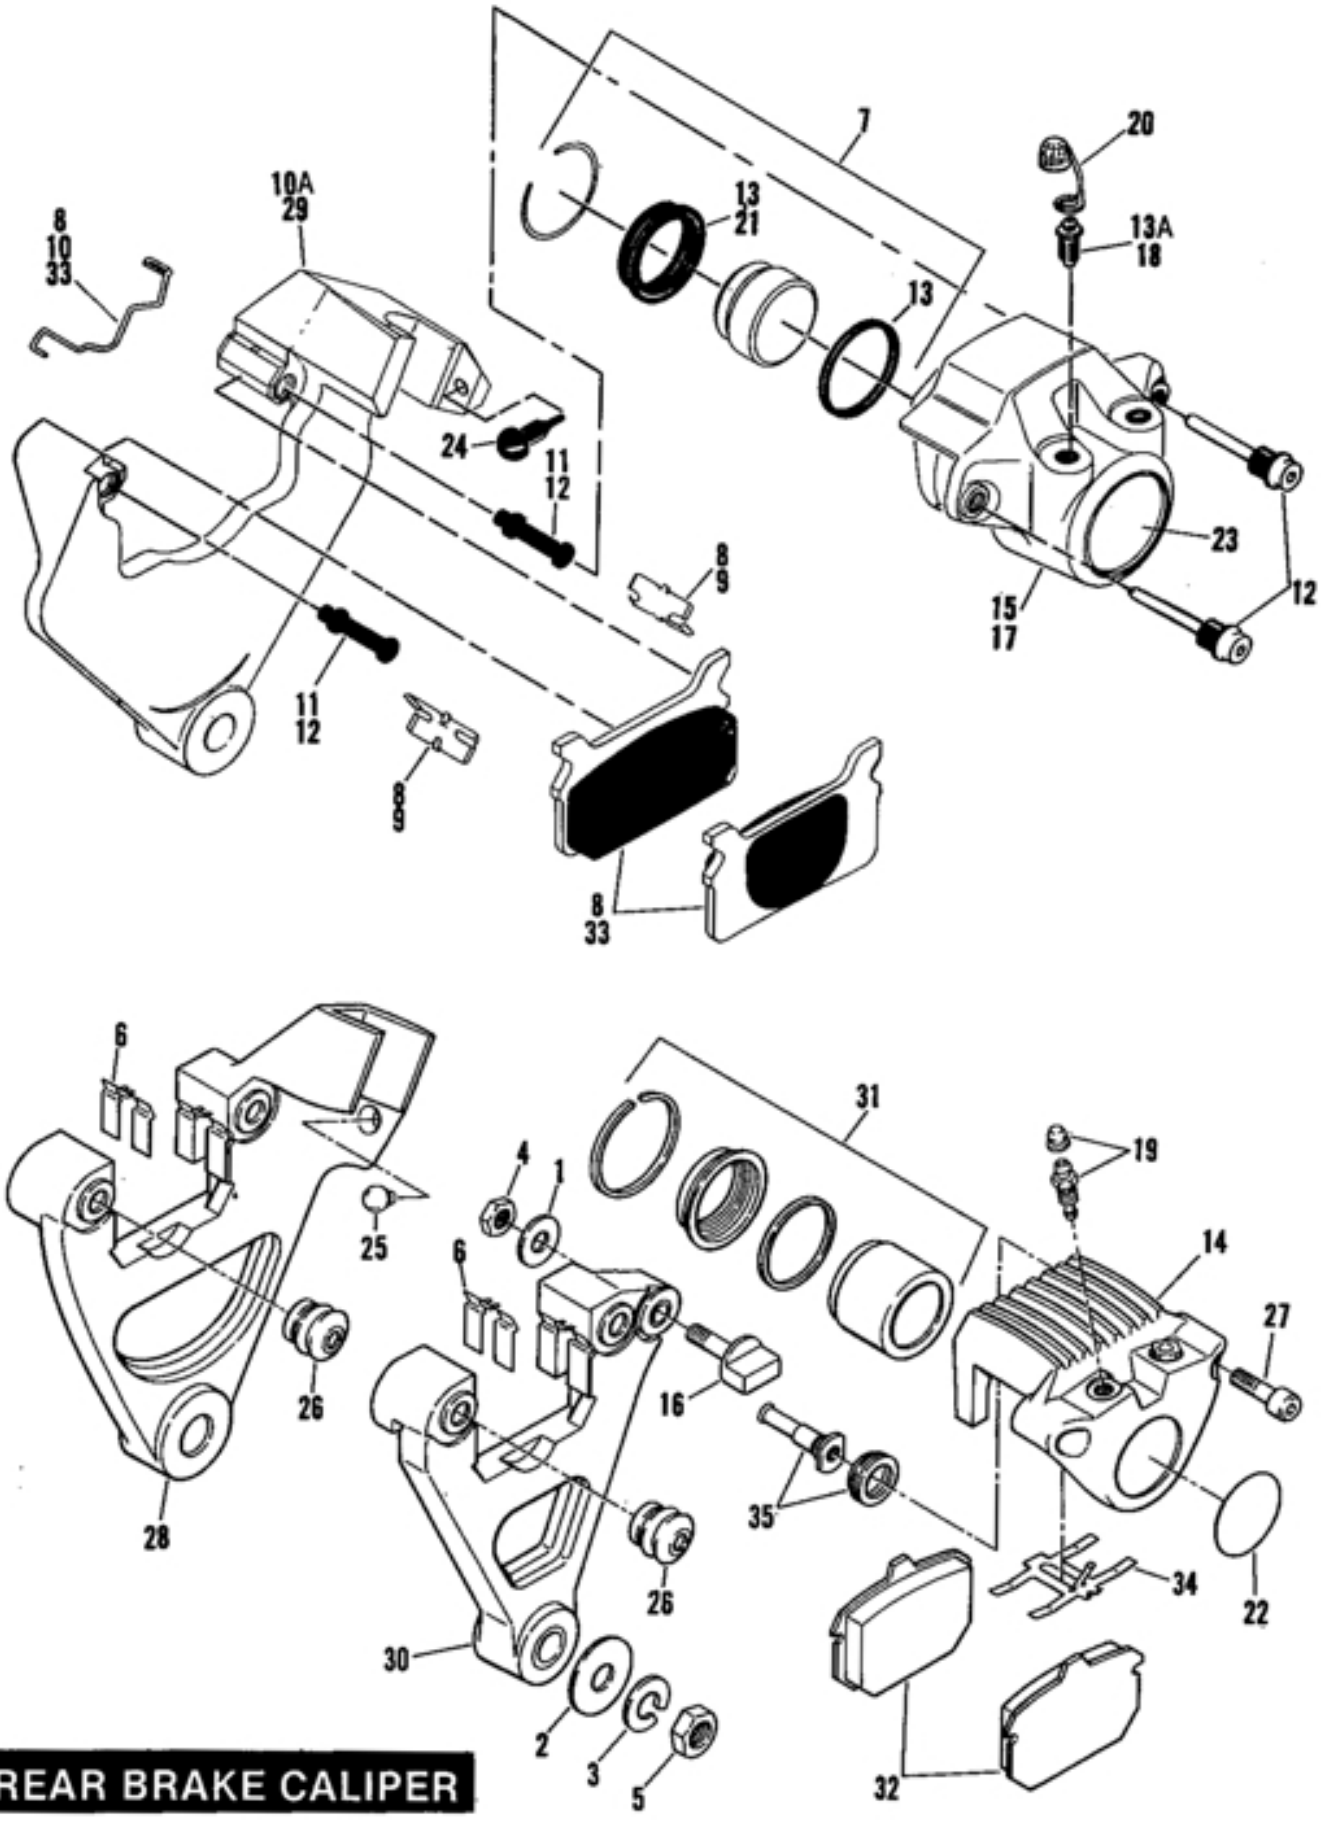


REAR BRAKE CALIPER

REAR BRAKE CALIPER (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6115	WASHER (1)	Softail: E87-ALL
2	6655	WASHER (1)	Softail: E87-ALL
3	7022	LOCKWASHER (1)	Softail: E87-ALL
4	7776W	LOCKNUT (1)	Softail: E87-ALL
5	7986	NUT (1)	Softail: E87-ALL
6	41665-82	ABUTMENT SHIM (2)	FXR: E87-ALL Softail: E87-ALL
7	43946-86	PISTON KIT, w/#21 (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
8	43957-86E	PAD SET (1)	Touring: 87 to 90-ALL
9	43959-86	ABUTMENT SHIM, N/A (2)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
10	43960-86	RETAINER (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
10A	44034-86	BRACKET, w/#24 (1)	Touring: 87 to 90-ALL
11	44035-86A	BUSHING (2)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
12	44039-86	MOUNTING KIT, w/guide pins and bushings (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
13	44045-87	SEAL AND BOOT KIT (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
13A	44048-83	BLEEDER FITTING (1)	Touring: 87 to 90-ALL
14	44050-82A	BODY ASSY., w/#19, 31 and 34 (1)	FXR: E87-ALL Softail: E87-ALL
15	44050-87	CALIPER ASSY., w/o bracket (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL
16	44069-84	PIN, mounting (1)	Softail: E87-ALL
17	44076-86A	CALIPER ASSY., w/o bracket (1)	Touring: 87 to 90-ALL
18	44146-77	BLEEDER FITTING (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL
19	44146-82	BLEEDER FITTING AND COVER (1)	FXR: E87-ALL Softail: E87-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

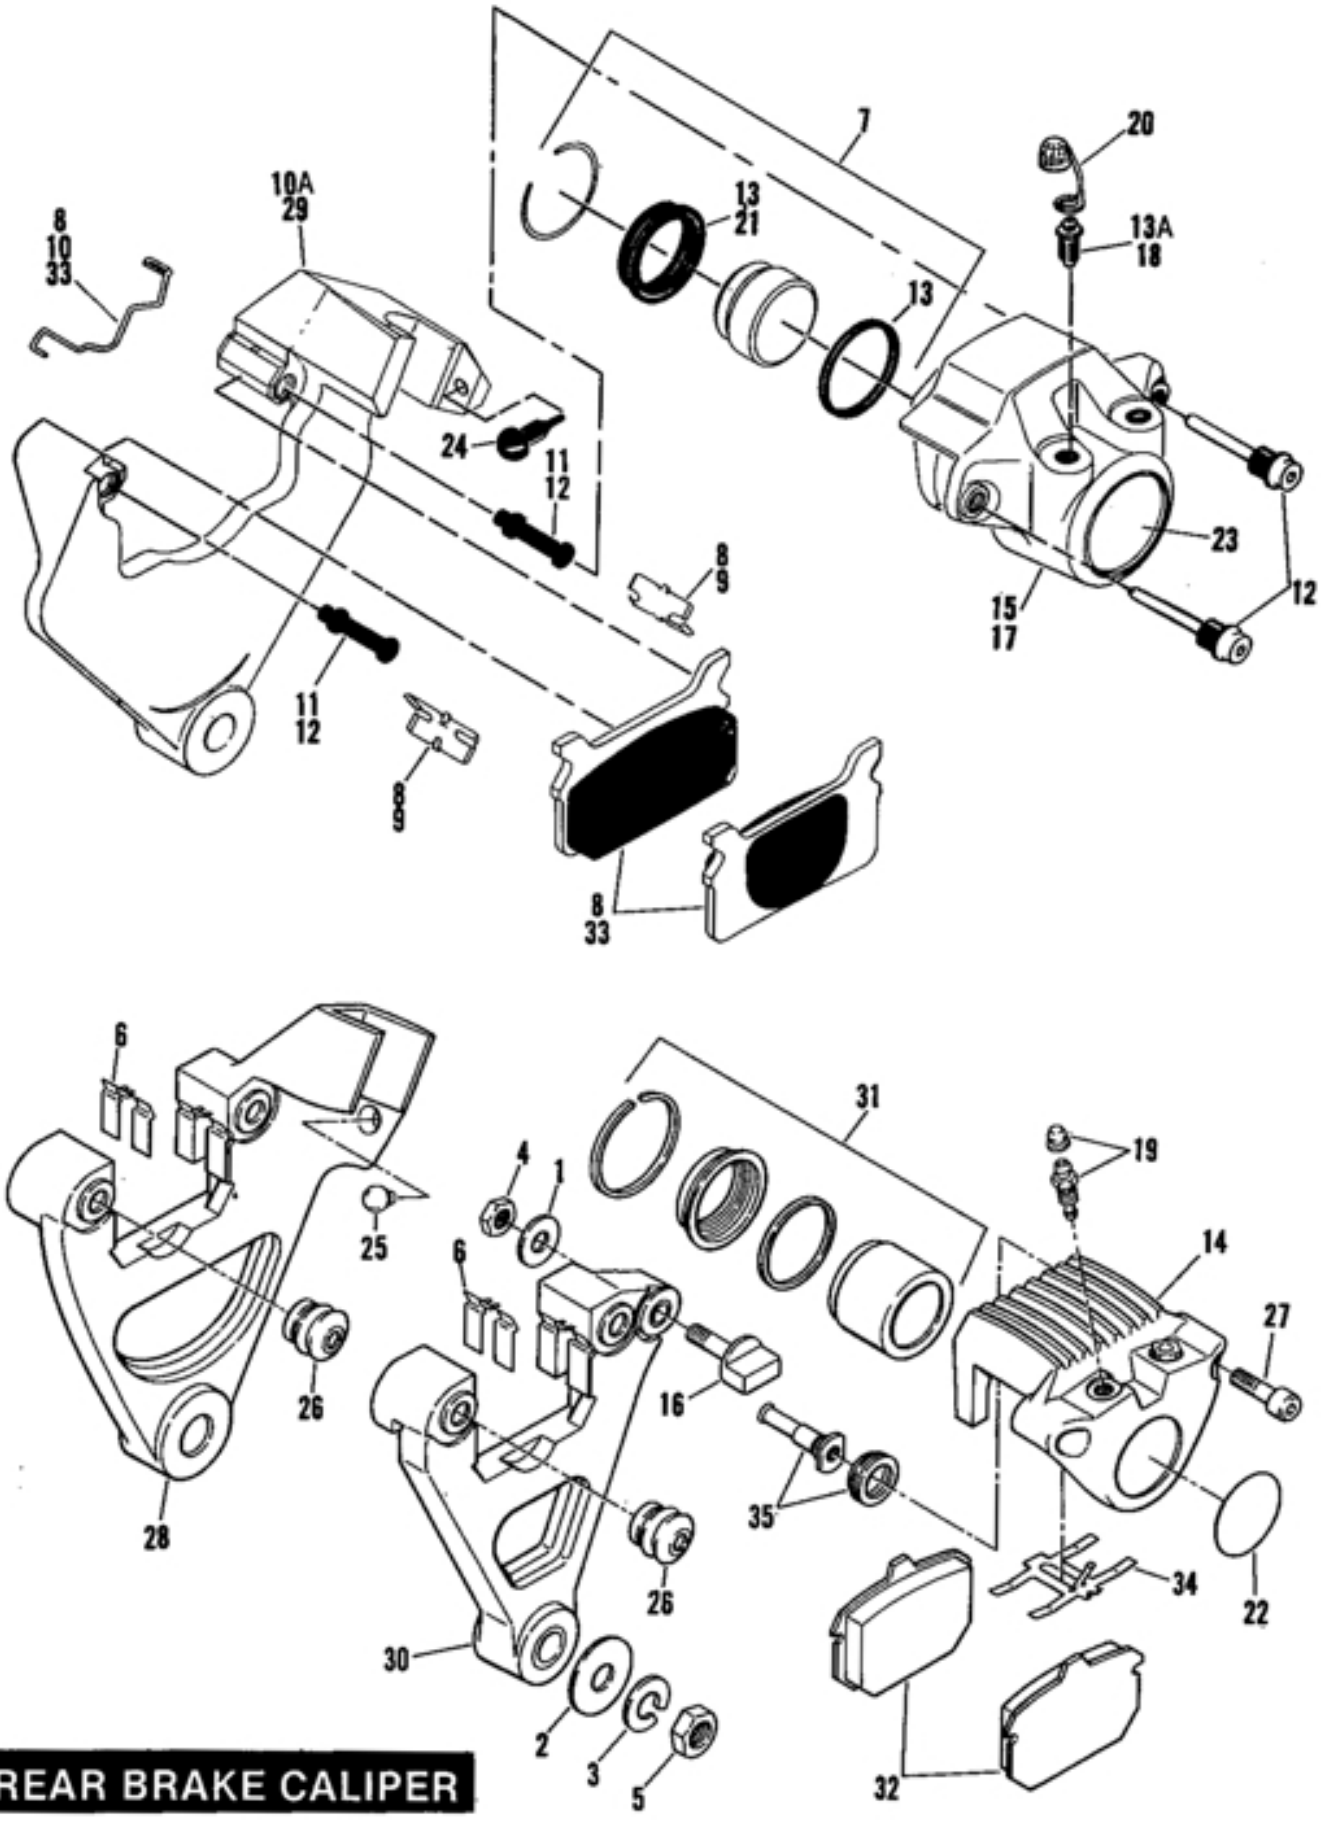


REAR BRAKE CALIPER

REAR BRAKE CALIPER (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	44147-87	CAP, bleeder screw (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
21	44152-77	BOOT (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
22	44197-77	LABEL (1)	FXR: E87-ALL Softail: E87-ALL Touring: 87 to 90-ALL
23	44198-87	LABEL (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL
24	44199-79	BUMPER (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL Touring: 87 to 90-ALL
25	44199-82	BUMPER, rubber (1)	FXR: E87-ALL
26	44200-82	PIN BOOT (2)	FXR: E87-ALL Softail: E87-ALL
27	44201-82	BOLT, mounting (2)	FXR: E87-ALL Softail: E87-ALL
28	44205-82	BRACKET, mounting-w/#6, 25 and 35 (1)	FXR: E87-ALL
29	44205-87	BRACKET, mounting-w/#11, 24 and shims (1)	FXR: L87 to 90-ALL
29	44207-87	BRACKET, mounting-w/#11, 24 and shims (1)	Softail: L87 to 90-ALL
30	44207-82	BRACKET, mounting-w/#6 and 35 (1)	Softail: E87-ALL
31	44208-82	REPAIR KIT (1)	FXR: E87-ALL Softail: E87-ALL
32	44209-82A	PAD SET (1)	FXR: E87-ALL Softail: E87-ALL
33	44209-87C	PAD SET, w/retainer (1)	FXR: L87 to 90-ALL Softail: L87 to 90-ALL
34	44211-82	PAD SPRING (1)	FXR: E87-ALL Softail: E87-ALL
35	44212-82	GUIDE PIN KIT, w/#26 and 27 (1)	FXR: E87-ALL Softail: E87-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

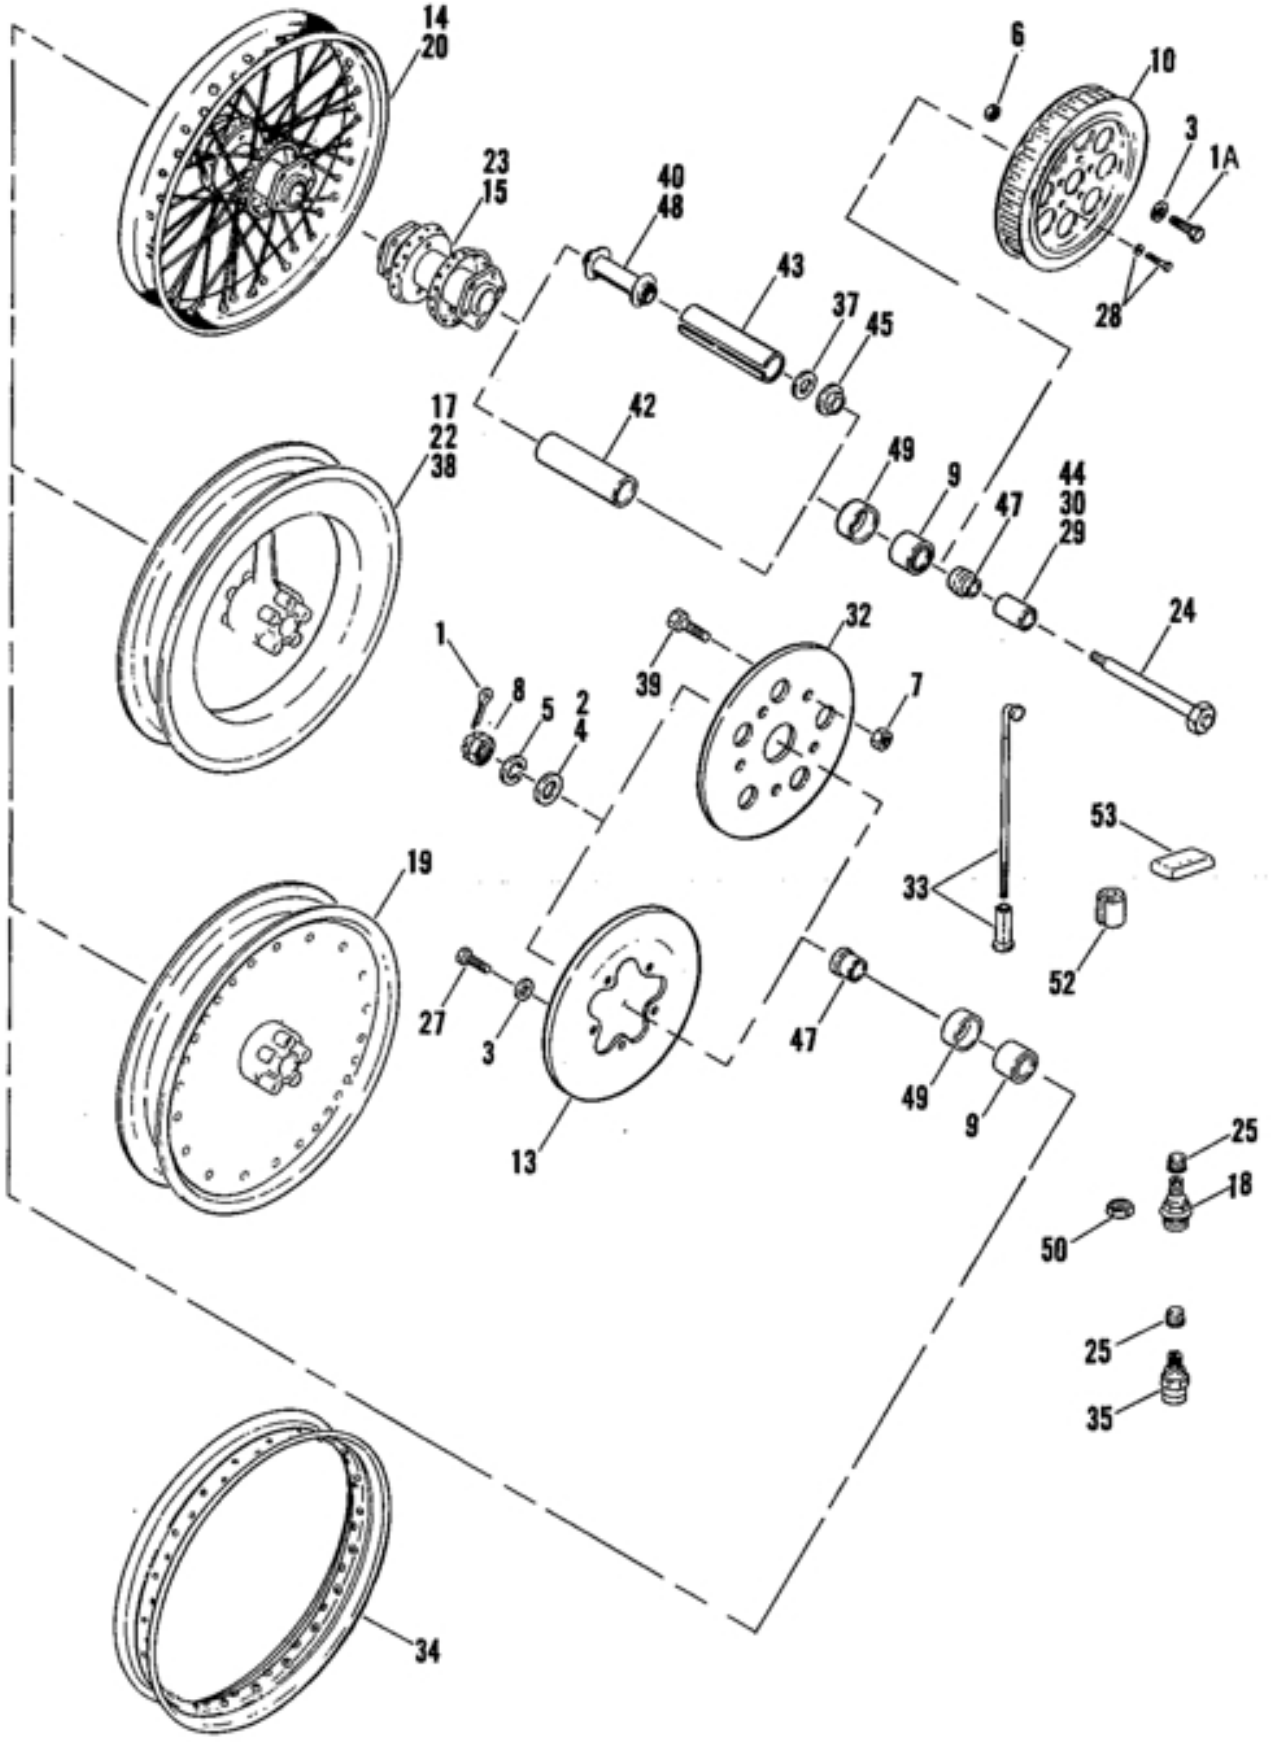
14
20
23
15
40
48
43
37
45
6
10
3
1A
28
17
22
38
42
49
9
47
44
30
29
24
1
8
5
2
4
39
32
7
53
33
52
19
27
3
13
47
49
9
25
18
50
25
35
34


REAR WHEEL

REAR WHEEL (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	511	COTTER PIN (1)	FXR: 89 to 90ALL Softail: 89 to 90ALL Touring: 89 to 90ALL
1A	4726	BOLT (5)	FXR: 87 to 90-EB Softail: 87 to 90-ALL Touring: 87 to 90-ALL
2	5756	WASHER (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
3	6127	WASHER (5)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
4	6655	WASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
5	7022	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
6	7561	NUT (5)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-ALL Touring: 87 to 90-ALL
7	7778	LOCKNUT (5)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
8	7986	NUT (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
8	7987	NUT (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
9	9052	ROLLER BEARING (2)	ALL
10	40221-85A	SPROCKET, 70T (silver) (1)	ALL
13	40939-86A	BRAKE DISC (1)	Touring: 87 to 90-ALL
14	40975-86	WHEEL ASSY., 16 inches-laced (chrome) (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
15	40976-86	HUB ASSY., w/spacer (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
17	41015-86	WHEEL ASSY., cast-9 spoke (black) (1)	FXR: 87 to 90-EB/G
18	40999-87	VALVE STEM (1)	Touring: L87 to 90-ALL
19	41008-87A	DISC WHEEL (1)	FXR: 87 to 90-EL Softail: 87 to 90-BK/M
20	41010-86	WHEEL ASSY., 16 inches-laced (1)	Touring: 87 to 90-ALL
22	41015-86	WHEEL ASSY., cast-9 spoke (black) (1)	FXR: 87 to 90-EA/C
23	41020-86	HUB ASSY., laced wheel, w/spacer (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
24	41110-79A	AXLE ASSY (1)	ALL
25	41123-79	VALVE CAP (1)	ALL
27	41198-73	BOLT (5)	Touring: 87 to 90-ALL
28	41465-86	SPROCKET FASTENER KIT, For cast wheels only (1)	ALL
29	41591-81	SPACER, rear axle-left (1)	FXR: 87 to 90-ALL
30	41595-86	SPACER, rear axle-left (1)	Softail: 87 to 90-ALL
32	41791-79A	DISC, brake (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
33	43032-40B	SPOKE AND NIPPLE SET, 16 inches rim (40)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L Touring: 87 to 90-ALL
34	43085-81	RIM, 16 inches (chrome) (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-ALL Touring: 87 to 90-ALL
35	43157-83A	VALVE STEM ASSY. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BK/M Touring: E87-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

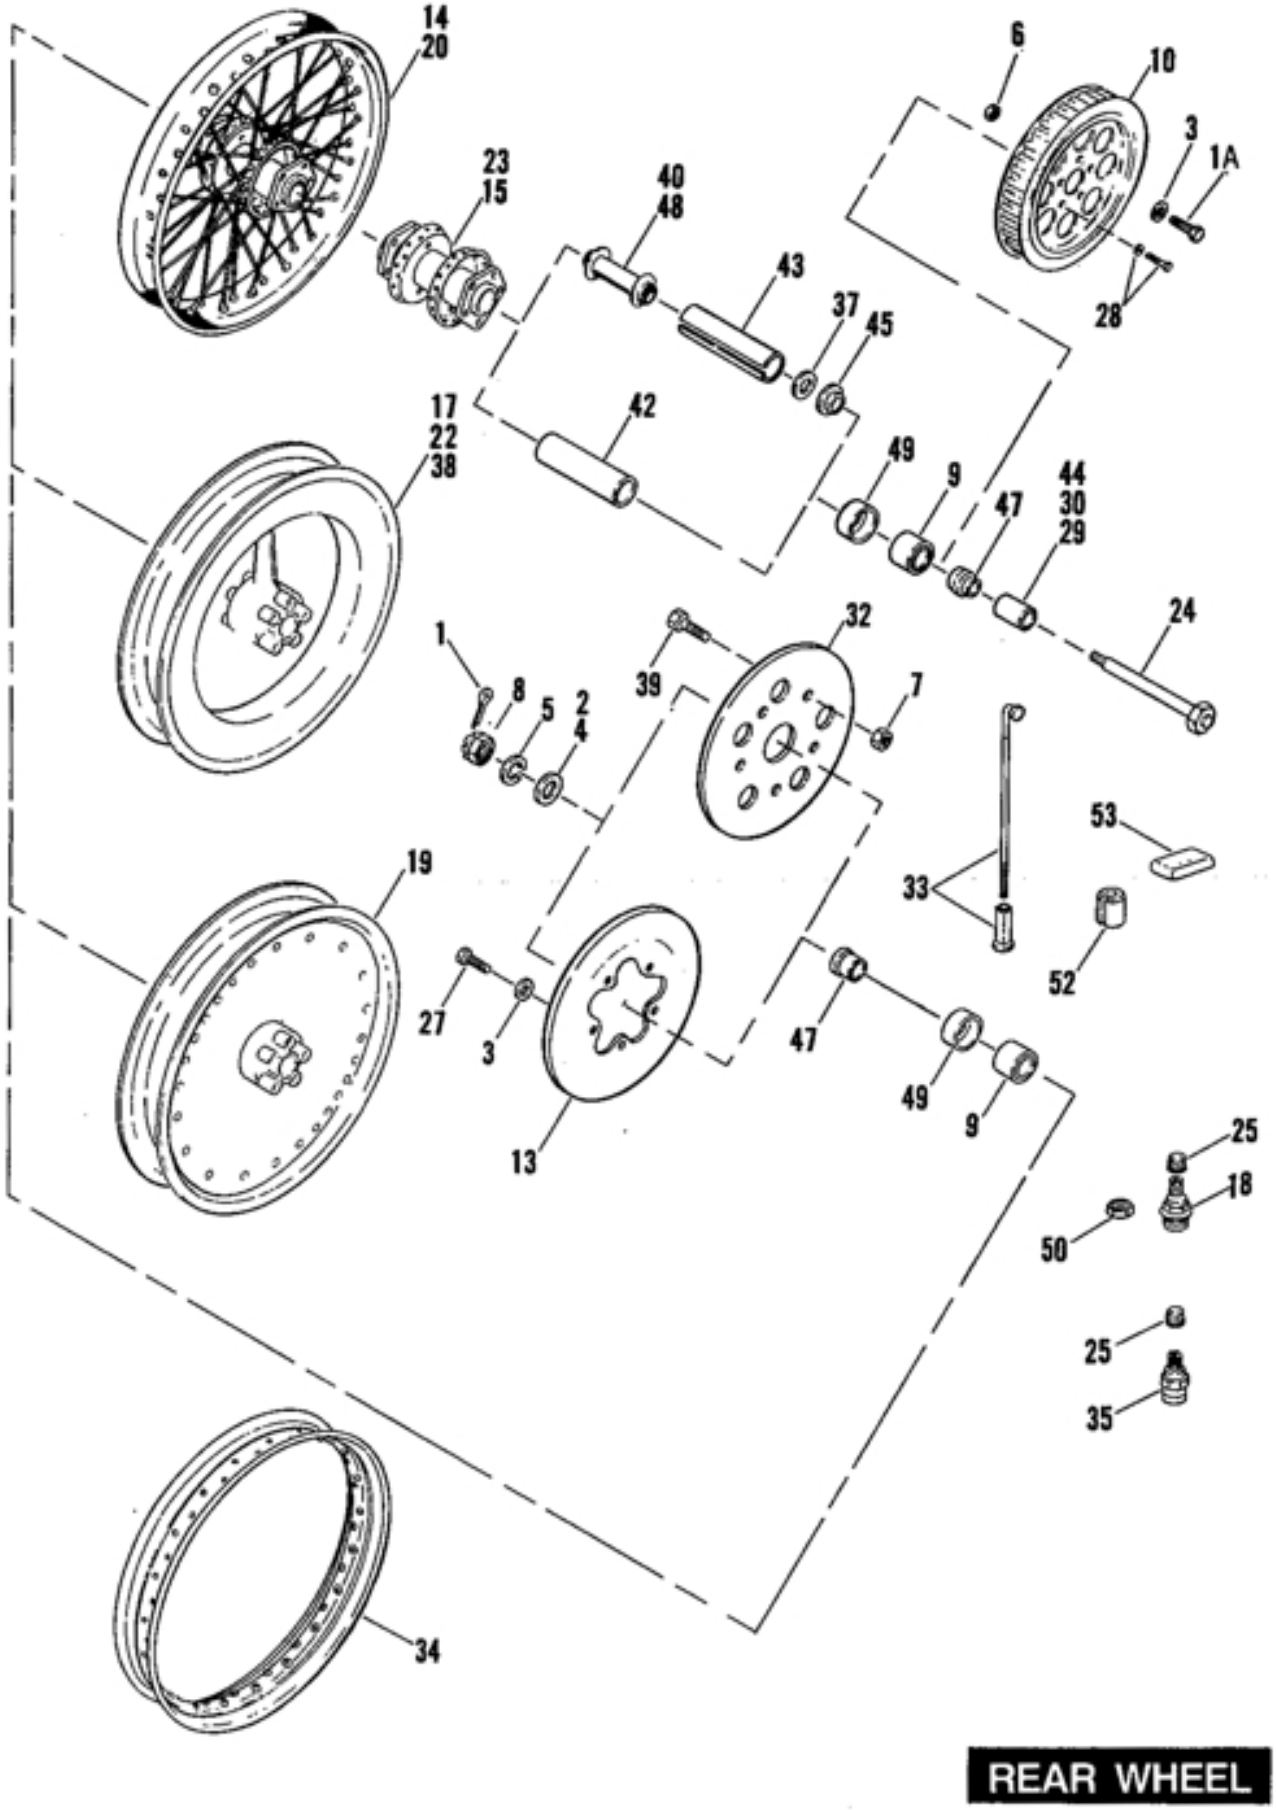

14
20
23
15
40
48
43
37
45
6
10
3
1A
28
17
22
38
42
49
9
47
44
30
29
24
1
8
5
2
4
39
32
7
53
33
52
19
27
3
13
47
49
9
25
18
50
25
35
34

REAR WHEEL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	43290-82	SPACER, 0.032 inch thk. (1)	Touring: 87 to 90-ALL
37	43291-82	SPACER, 0.016 inch thk. (1)	Touring: 87 to 90-ALL
37	43292-82	SPACER, 0.008 inch thk. (1)	Touring: 87 to 90-ALL
37	43293-82	SPACER, 0.004 inch thk. (1)	Touring: 87 to 90-ALL
37	43294-82	SPACER, 0.002 inch thk. (1)	Touring: 87 to 90-ALL
38	43299-87	WHEEL ASSY., 16 inches-10 spoke (black) (1)	Touring: 87 to 90-ALL
39	43567-79	SCREW (5)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
40	43601-78A	SPACER, w/flanges-4.420 (orange) (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
40	43602-78A	SPACER, w/flanges-4.434 (yellow) (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
40	43603-78A	SPACER, w/flanges-4.448 (white), N/A (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L
42	43604-78	SPACER, w/o flanges-4.420 (orange), N/A (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BK/M
42	43605-78	SPACER, w/o flanges-4.434 (yellow) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BK/M
42	43606-78	SPACER, w/o flanges-4.448 (white) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BK/M
42	43608-82	SPACER, sleeve (1)	Touring: 87 to 90-ALL
43	43615-82	SLEEVE, plastic (1)	Touring: 87 to 90-ALL
44	43648-86	SPACER, left (1)	Touring: 87 to 90-ALL
45	43650-82	SPACER WASHER (1)	Touring: 87 to 90-ALL
47	43654-86A	SPACER (2)	ALL
48	43668-82	SPACER, between brgs. (1)	Touring: 87 to 90-ALL
49	47519-83A	OIL SEAL (2)	ALL
50	54321-85	NUT, valve stem (1)	FXR: 87 to 90-EL Softail: 87 to 90-BK/M Touring: 87 to 90-ALL
52	95578-41	WEIGHT, 1/2 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L Touring: 87 to 90-ALL
52	95581-47	WEIGHT, 3/4 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L Touring: 87 to 90-ALL
52	95582-47	WEIGHT, 1 oz.-0.275 inch I.D.-round (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BH/J/L Touring: 87 to 90-ALL
53	95594-84	WEIGHT, 1/4 oz. (black) (1)	FXR: 87 to 90-EA/C Touring: 87 to 90-ALL
53	95595-84	WEIGHT, 1/4 oz. (silver) (1)	FXR: 87 to 90-EB/G/L Softail: 87 to 90-BK/M
		INTERNATIONAL MODELS ONLY	
10	40236-88A	SPROCKET, 61T. (silver) (HDI Only) (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL

MODEL IDENTIFICATION CODES


DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

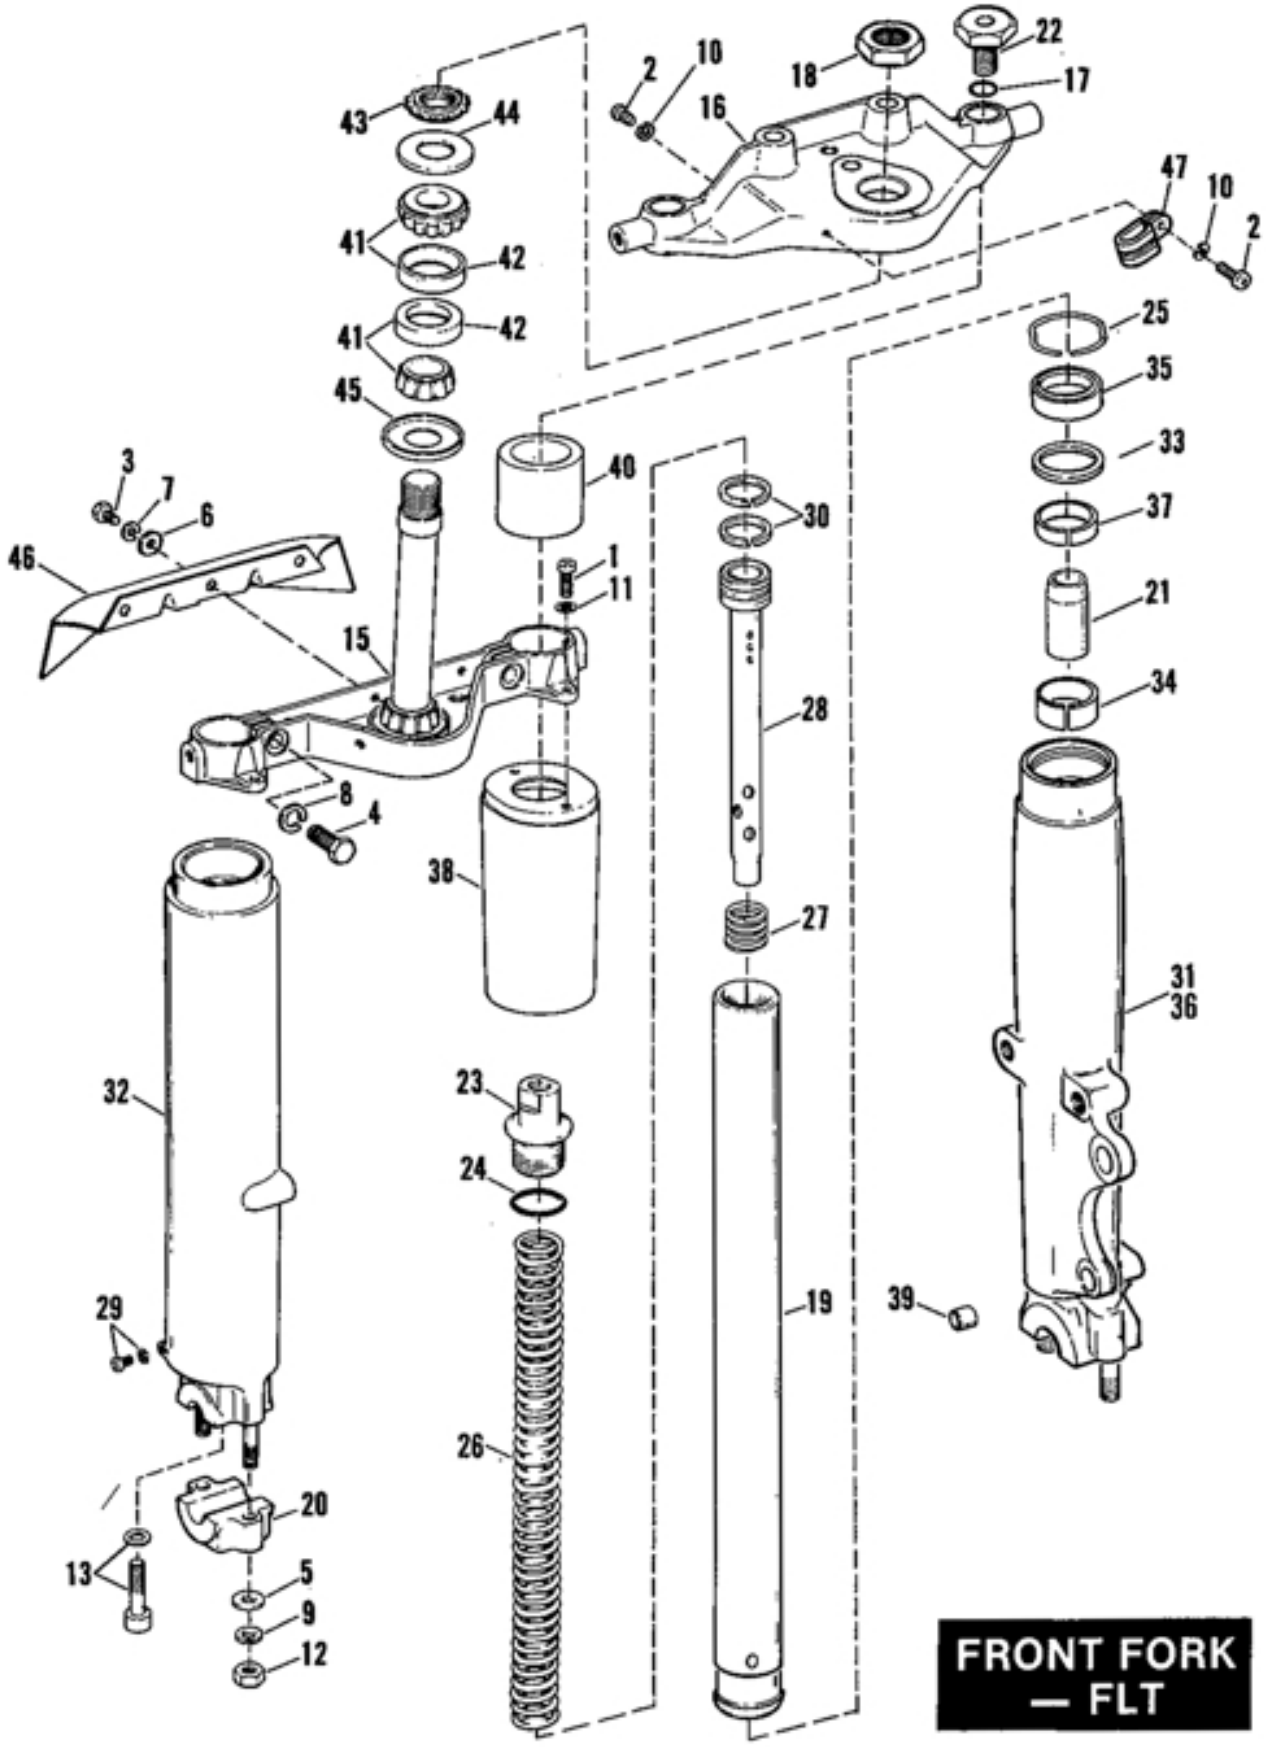
43
44
41
42
41
42
45
40
3
7
6
46
1
11
15
30
25
35
33
37
21
34
28
8
4
38
27
31
36
32
23
24
19
39
29
26
20
13
5
9
12
2
10
18
22
17
16
47
10
2
FRONT FORK
— FLT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2417	SCREW (4)	Touring: 87 to 90-ALL
2	2592	SCREW, 2-1987 and 1988 (1)	Touring: 87 to 90-ALL
2	2661W	SCREW (1)	Touring: 89 to 90-ALL
3	3738	BOLT (2)	Touring: 87 to 90-ALL
4	4729	BOLT (2)	Touring: 87 to 90-ALL
5	6702	WASHER (2)	Touring: 87 to 90-ALL
6	6703	WASHER (2)	Touring: 87 to 90-ALL
7	7036	WASHER (2)	Touring: 87 to 90-ALL
8	7039	LOCKWASHER (2)	Touring: 87 to 90-ALL
9	7041	LOCKWASHER (2)	Touring: 87 to 90-ALL
10	7069	LOCKWASHER (2)	Touring: 87 to 90-ALL
11	7124	LOCKWASHER (4)	Touring: 87 to 90-ALL
12	7748W	NUT (2)	Touring: 87 to 90-ALL
13	45405-75A	SCREW, damper tube, w/ washer (2)	Touring: 87 to 90-ALL
15	45431-85	FORK STEM AND BRACKET (1)	Touring: 87 to 90-DB/M
15	45449-86	FORK STEM AND BRACKET (1)	Touring: 87 to 90-DD/J/P, FA
16	45435-83A	BRACKET (1)	Touring: 87 to 90-ALL
17	45443-86	O-RING (2)	Touring: 87 to 90-ALL
18	45718-60	NUT, fork stem (1)	Touring: 87 to 90-ALL
19	45827-84	SLIDER TUBE (2)	Touring: 87 to 90-ALL
20	45832-77A	AXLE CAP, right slider (1)	Touring: 87 to 90-ALL
21	45834-77	LOWER STOP (2)	Touring: 87 to 90-ALL
22	45839-84	CAP, upper bracket (2)	Touring: 87 to 90-ALL
23	45841-84	PLUG, fork tube (2)	Touring: 87 to 90-ALL
24	45845-77	O-RING, slider tube plug (2)	Touring: 87 to 90-ALL
25	45847-84	RETAINING RING, oil seal (2)	Touring: 87 to 90-ALL
26	45853-83	SPRING (2)	Touring: 87 to 90-ALL
27	45855-77	SPRING, slider tube (2)	Touring: 87 to 90-ALL
28	45857-83	DAMPER TUBE (2)	Touring: 87 to 90-ALL
29	45858-77	DRAIN SCREW, damper tube (2)	Touring: 87 to 90-ALL
30	45859-77	RING, damper tube (4)	Touring: 87 to 90-ALL
31	45860-84	SLIDER ASSEMBLY, left (1)	Touring: 87 to 90-ALL
32	45863-84	FORK SLIDER, right (polished) (1)	Touring: 87 to 90-ALL
32	45864-84	FORK SLIDER, left (polished) (1)	Touring: 87 to 90-ALL
33	45865-84	SPACER, slider (2)	Touring: 87 to 90-ALL
34	45866-84	BUSHING, slider (2)	Touring: 87 to 90-ALL
35	45875-84	OIL SEAL, 2 (1)	Touring: 87 to 90-ALL
36	45870-84	SLIDER ASSEMBLY, right (1)	Touring: 87 to 90-ALL
37	45940-84	BUSHING, slider (2)	Touring: 87 to 90-ALL
38	45964-49	COVER, slider (stainless steel) (2)	Touring: 87 and 88-ALL
38	45964-89	COVER, slider (stainless steel) (2)	Touring: 89 to 90-ALL
39	46020-84	BUSHING, brake caliper (2)	Touring: 87 to 90-ALL
40	47530-79A	FORK STOP, rubber (2)	Touring: 87 to 90-ALL
41	48300-60	ROLLER BEARING, with cup (1)	Touring: 87 to 90-ALL
42	48315-60	CUP, bearing (1)	Touring: 87 to 90-ALL
43	48333-80	BEARING ADJUSTER (1)	Touring: 87 to 90-ALL
44	48361-80	DUST SHIELD, bearing-upper (1)	Touring: 87 to 90-ALL
45	48365-48A	DUST SHIELD, bearing-lower (1)	Touring: 87 to 90-ALL
46	58520-79A	BAFFLE (1)	Touring: 87 to 90-ALL
47	68659-86	CLAMP (1)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
	45446-87	FORK STEM AND BRACKET, HDI only (1)	Touring: 87 to 90-DD/J/P, FA
15	45534-87	FORK STEM AND BRACKET, HDI only (1)	Touring: 87 to 90-DB/M
	48140-84	STEERING HEAD LOCK ASSY, HDI only (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

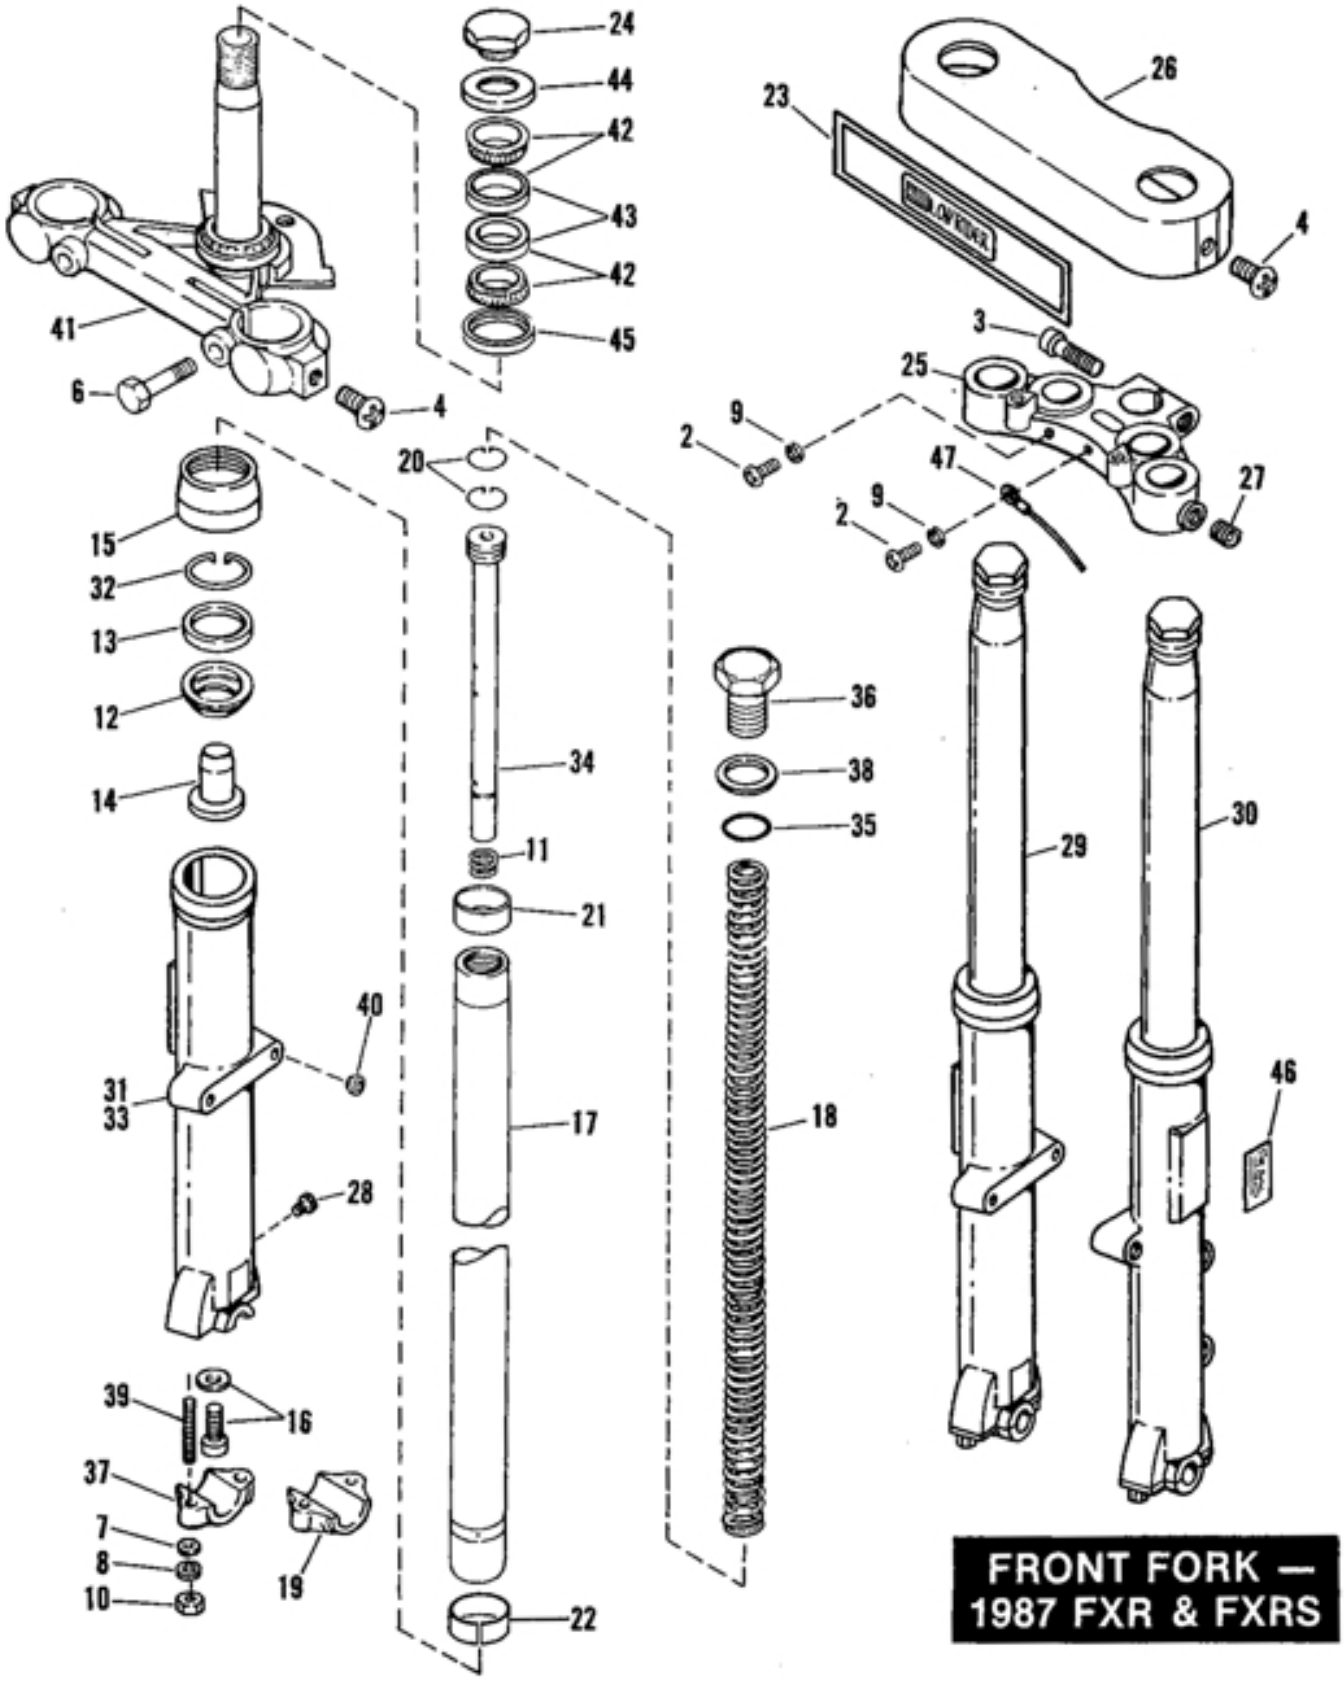


FRONT FORK — 1987 FXR & FXRS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	854	SCREW (2)	FXR: 87-EA
2	2661W	SCREW (1)	FXR: 87-EA/B
3	2662W	SCREW (1)	FXR: 87-EA/B
4	2823	SCREW (4)	FXR: 87-EB
5	4371WA	SCREW (1)	FXR: 87-EA/B
6	4411	BOLT (2)	FXR: 87-EB
7	6702	WASHER (4)	FXR: 87-EA/B
8	7041	LOCKWASHER (4)	FXR: 87-EA/B
9	7220	LOCKWASHER (2)	FXR: 87-EA/B
10	7748W	NUT (4)	FXR: 87-EA/B
11	45382-83	SPRING, slider (2)	FXR: 87-EA/B
12	45386-83	SPACER, seal (2)	FXR: 87-EA/B
13	45387-83	OIL SEAL, slider (2)	FXR: 87-EA/B
14	45403-84	LOWER STOP (2)	FXR: 87-EA/B
15	45404-75	DUST COVER (2)	FXR: 87-EA/B
16	45405-75A	SCREW, damper tube, w/ washer (2)	FXR: 87-EA/B
17	45407-86	SLIDER TUBE (2)	FXR: 87-EA/B
18	45408-84	SPRING (2)	FXR: 87-EA/B
19	45410-84	AXLE CAP, left slider (1)	FXR: 87-EA/B
20	45412-75	RING, damper tube (4)	FXR: 87-EA/B
21	45413-84	BUSHING, upper-fork slider (2)	FXR: 87-EA/B
22	45416-84	BUSHING, lower-fork slider (2)	FXR: 87-EA/B
23	45429-86	NAMEPLATE, "Low Rider" (1)	FXR: 87-EB
24	45718-71	NUT, fork stem (1)	FXR: 87-EA/B
25	45736-78B	BRACKET, upper (1)	FXR: 87-EA/B
26	45751-71A	COVER, fork (1)	FXR: 87-EB
27	45782-72A	SCREW INSERT (2)	FXR: 87-EB
28	45790-80	DRAIN SCREW, slider (2)	FXR: 87-EA/B
29	45903-84A	FORK SLIDER AND TUBE ASSY., right (1)	FXR: 87-EA/B
30	45904-84A	FORK SLIDER AND TUBE ASSY., left (1)	FXR: 87-EA/B
31	45906-84	SLIDER, right (1)	FXR: 87-EA/B
32	45908-80	RETAINING RING, oil seal (2)	FXR: 87-EA/B
33	45912-84	SLIDER, left (1)	FXR: 87-EA/B
34	45914-84	DAMPER TUBE, complete (2)	FXR: 87-EA/B
35	45982-73	O-RING, slider tube cap (2)	FXR: 87-EA/B
36	45993-86	CAP, slider tube (2)	FXR: 87-EA/B
37	45994-84	AXLE CAP, right slider (1)	FXR: 87-EA/B
38	45997-73	WASHER, slider tube cap (2)	FXR: 87-EA/B
39	45998-73	STUD (4)	FXR: 87-EA/B
40	46020-84	BUSHING, brake caliper-left slider (1)	FXR: 87-EA/B
41	47693-84	BRACKET, lower-w/shield (1)	FXR: 87-EB
41	47694-84	BRACKET, lower-w/shield (1)	FXR: 87-EA
42	48300-60	ROLLER BEARING, w/cup (2)	FXR: 87-EA/B
43	48315-60	BEARING CUP (2)	FXR: 87-EA/B
44	48361-80	DUST SHIELD, bearing-upper (1)	FXR: 87-EA/B
45	48365-48A	DUST SHIELD, bearing-lower (1)	FXR: 87-EA/B
46	59254-72	REFLECTOR, amber (2)	FXR: 87-EA/B
47	70191-73A	CABLE (1)	FXR: 87-EA/B
		INTERNATIONAL MODELS ONLY	
25	45743-84	BRACKET, lower (HDI only) (1)	FXR: 87-EA
25	45746-84	BRACKET, lower (HDI only) (1)	FXR: 87-EB
	48140-84	STEERING HEAD LOCK ASSY, HDI only (1)	FXR: 87-EA/B

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FRONT FORK - 1987 FXLR & FXRS-SP; 1988 & LATER FXR MODELS

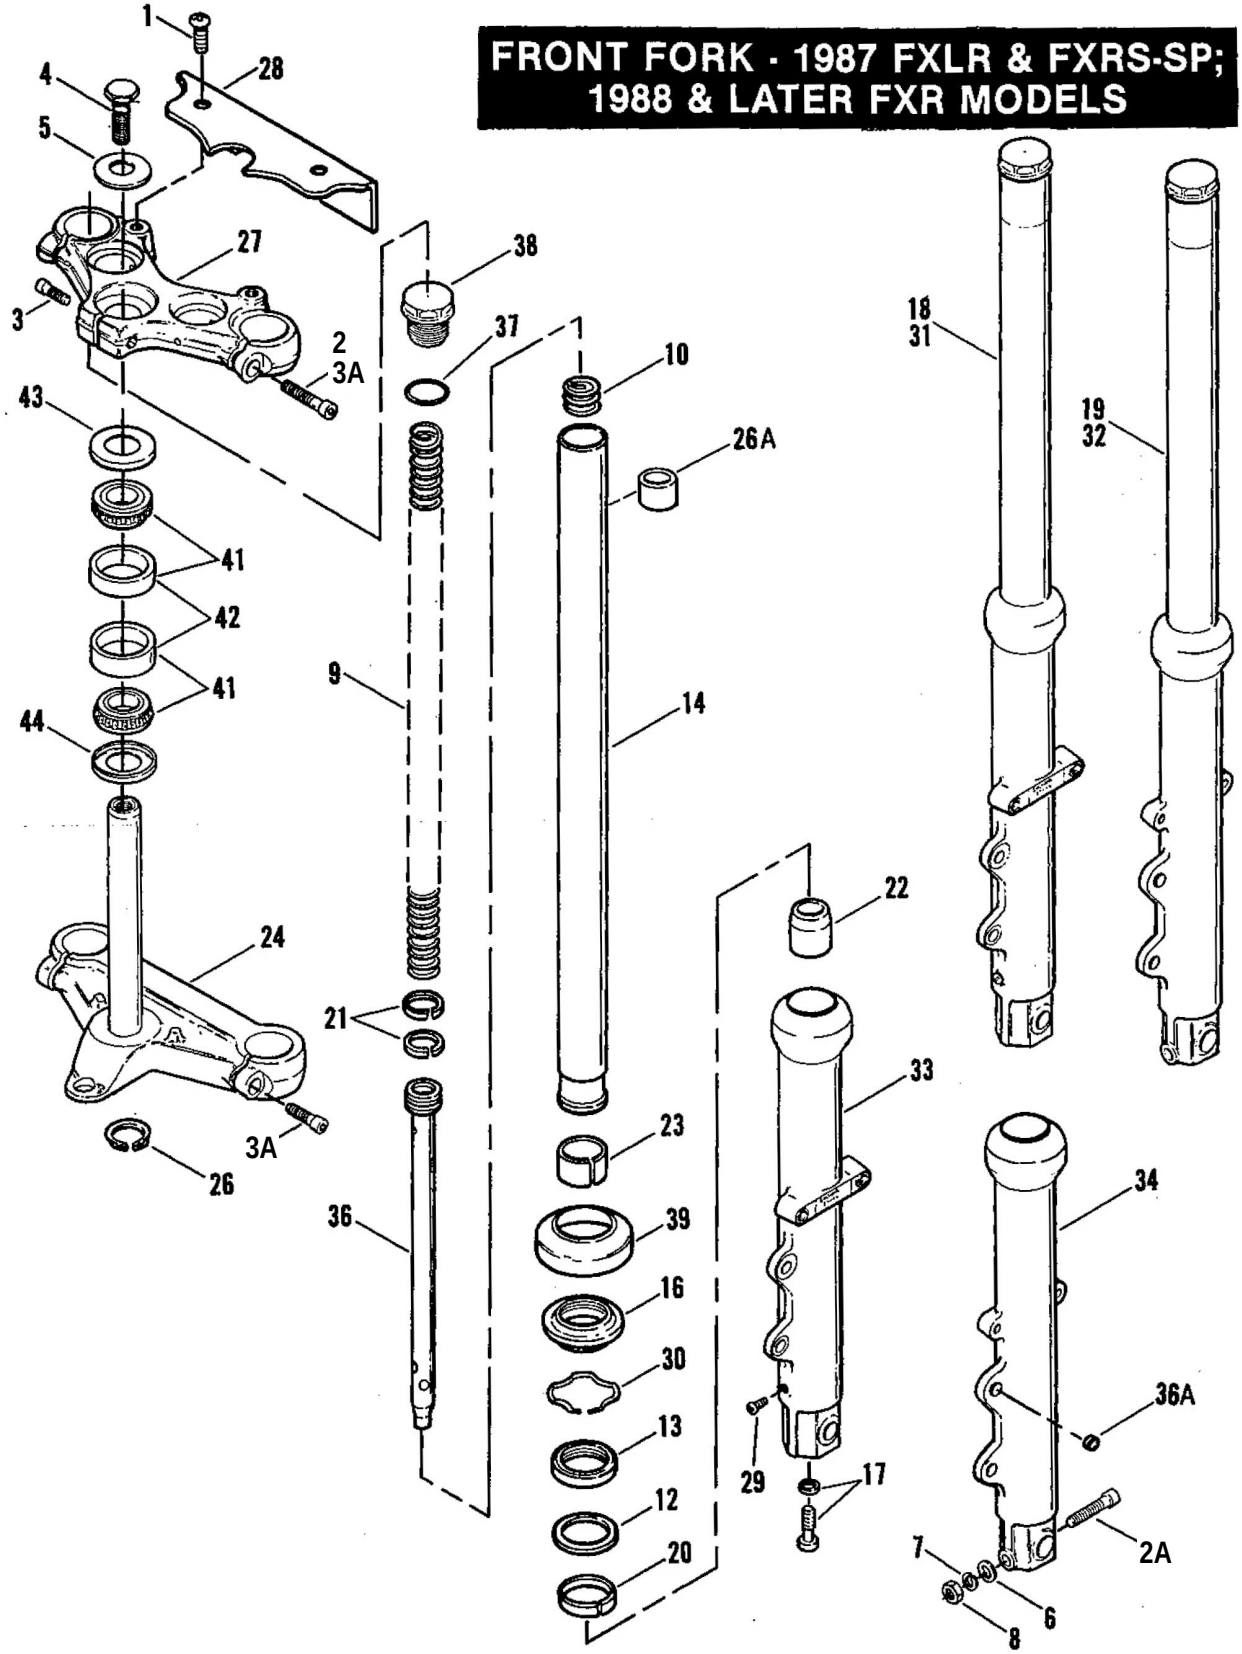


FRONT FORK - 1987 FXLR AND FXRS-SP; 1988 AND LATER FXR MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2582	SCREW (1)	FXR: 87 to 90-EL
2	4047	SCREW (2)	FXR: 87-EG/L; L88 to 90-ALL
2A	4029	SCREW (1)	FXR: 87-EG/L; 88 to 90-ALL
3	4350A	SCREW (3)	FXR: 87-EG/L; 88 to 90-ALL
3A	4351	SCREW, 2; 4 EA/B/C/L (3)	FXR: 87-EG/L; L88 to 90-ALL
4	4460	BOLT (1)	FXR: 87-EG/L; 88 to 90-ALL
5	6655	WASHER (1)	FXR: 87-EG/L; 88 to 90-ALL
6	6701	WASHER (1)	FXR: 87-EG/L; 88 to 90-ALL
7	7038	LOCKWASHER (1)	FXR: 87-EG/L; 88 to 90-ALL
8	7783	NUT (1)	FXR: 87-EG/L; 88 to 90-ALL
9	45373-88	SPRING (1)	FXR: 88 to 90-EC/G/M
9	45375-87	SPRING (2)	FXR: 87-EG
9	45376-87	SPRING (2)	FXR: 87-EL; 88 to 90-EA/B
10	45374-87	SPRING, slider (2)	FXR: 87-EG/L; 88 to 90-ALL
12	45377-87	SPACER, oil seal (2)	FXR: 87-EG/L; 88 to 90-ALL
13	45378-87	OIL SEAL (2)	FXR: 87-EG/L; 88 to 90-ALL
14	45381-87	SLIDER TUBE (2)	FXR: 87 to 90-EL; 88 to 90-EA/B
14	45393-87	SLIDER TUBE (2)	FXR: 87 to 90-EG; 88 to 90-EC/M
16	45401-87	SEAL, dust (2)	FXR: 87-EG/L; 88 to 90-ALL
17	45405-75A	SCREW, w/ washer (2)	FXR: 87-EG/L; 88 to 90-ALL
18	45424-87	FORK SLIDER AND TUBE ASSY., right (1)	FXR: 87-EG
18	45793-88	FORK SLIDER AND TUBE ASSY., right (1)	FXR: 88 to 90-EC/G/M
19	45425-87	FORK SLIDER AND TUBE ASSY., left (1)	FXR: 87-EG
19	45791-88	FORK SLIDER AND TUBE ASSY., left (1)	FXR: 88 to 90-EC/G/M
20	45461-87	BUSHING, upper (2)	FXR: 87-EG/L; 88 to 90-ALL
21	45462-87	RING, damper tube (4)	FXR: 87-EG/L; 88 to 90-ALL
22	45463-87	LOWER STOP (2)	FXR: 87-EG/L; 88 to 90-ALL
23	45465-87	BUSHING, slider tube (2)	FXR: 87-EG/L; 88 to 90-ALL
24	45550-88	BRACKET, lower w/stem (1)	FXR: 88 to 90-EA/C
24	45559-87	BRACKET, lower w/stem (1)	FXR: 87 to 90-EL; L89 to 90-EM
24	45562-87	BRACKET, lower w/stem (1)	FXR: 87 to 90-EG; 88 to 90-EB
26	45611-86	RETAINING RING (1)	FXR: 87 to 90-EG/L
26A	47530-79A	FORK STOP, rubber (2)	FXR: 88 to 90-EC
27	45739-87	BRACKET, upper (1)	FXR: 87-EG/L; 88 to 90-ALL
28	45750-87	COVER, upper bracket (1)	FXR: 87 to 90-EL
29	45790-80	DRAIN SCREW, w/washer (2)	FXR: 87-EG/L; 88 to 90-ALL
30	45905-87	RETAINING RING, oil seal (1)	FXR: 87-EG/L; 88 to 90-ALL
31	45919-87	FORK SLIDER AND TUBE ASSY., right (1)	FXR: 87 to 90-EL; 88 to 90-EA/B
32	45920-87	FORK SLIDER AND TUBE ASSY., left (1)	FXR: 87 to 90-EL; 88 to 90-EA/B
33	45921-87	SLIDER ASSY., left (1)	FXR: 87-EG/L; 88 to 90-ALL
34	45922-87	SLIDER ASSY., right (1)	FXR: 87 to 90-EG; 88 to 90-EC
34	45923-87	SLIDER ASSY., right (1)	FXR: 87 to 90-EL; 88 to 90-EA/B

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

FRONT FORK - 1987 FXLR & FXRS-SP; 1988 & LATER FXR MODELS

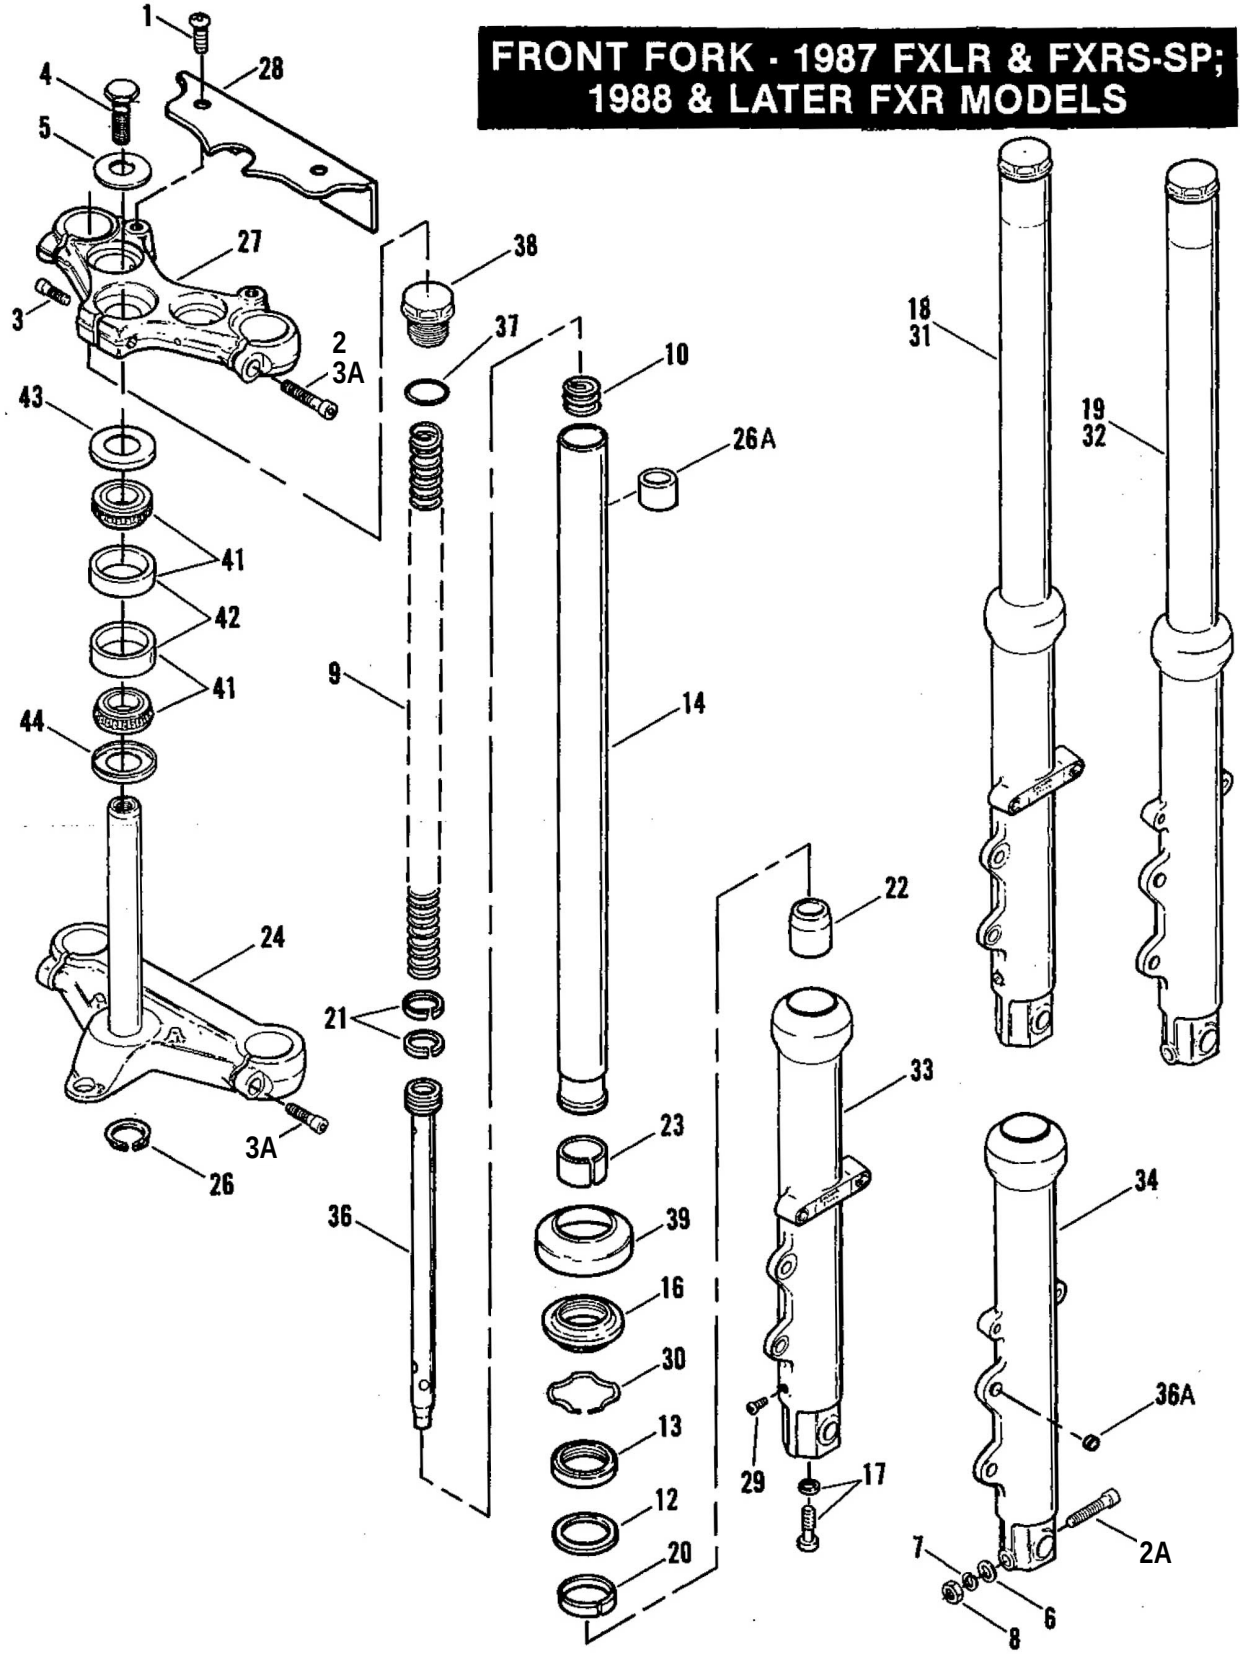


FRONT FORK - 1987 FXLR AND FXRS-SP; 1988 AND LATER FXR MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	45924-87	DAMPER TUBE (2)	FXR: 87-EG/L; 88 to 90-EA/B/L
36	45925-88	DAMPER TUBE (2)	FXR: 88 to 90-EC/G/M
36A	45934-86	BUSHING, 2-EC/G (1)	FXR: 87-EG/L; 88 to 90-ALL
37	45984-87	O-RING (2)	FXR: 87-EG/L; 88 to 90-ALL
38	45990-88	CAP, slider tube (2)	FXR: 88 to 90-EC/G/M
38	45996-87	CAP, slider tube (2)	FXR: 87-EG/L; 88 to 90-EA/B/L
39	46002-87	COVER, slider (2)	FXR: 87-EG/L; 88 to 90-ALL
41	48300-60	ROLLER BEARING, w/cup (2)	FXR: 87-EG/L; 88 to 90-ALL
42	48315-60	BEARING CUP (2)	FXR: 87-EG/L; 88 to 90-ALL
43	48361-80	DUST SHIELD, upper (1)	FXR: 87-EG/L; 88 to 90-ALL
44	48365-48A	DUST SHIELD, lower (1)	FXR: 87-EG/L; 88 to 90-ALL
		INTERNATIONAL MODELS ONLY	
24	45549-88	BRACKET, lower w/ stem (1)	FXR: 88 to 90-EA/C
24	45563-87	BRACKET, lower w/ stem (1)	FXR: 87 to 90-EB/G
24	45561-87	BRACKET, lower w/ stem (1)	FXR: 87 to 90-EL/M
	48140-84	STEERING HEAD LOCK ASSY (1)	FXR: 87-EG/L; 88 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

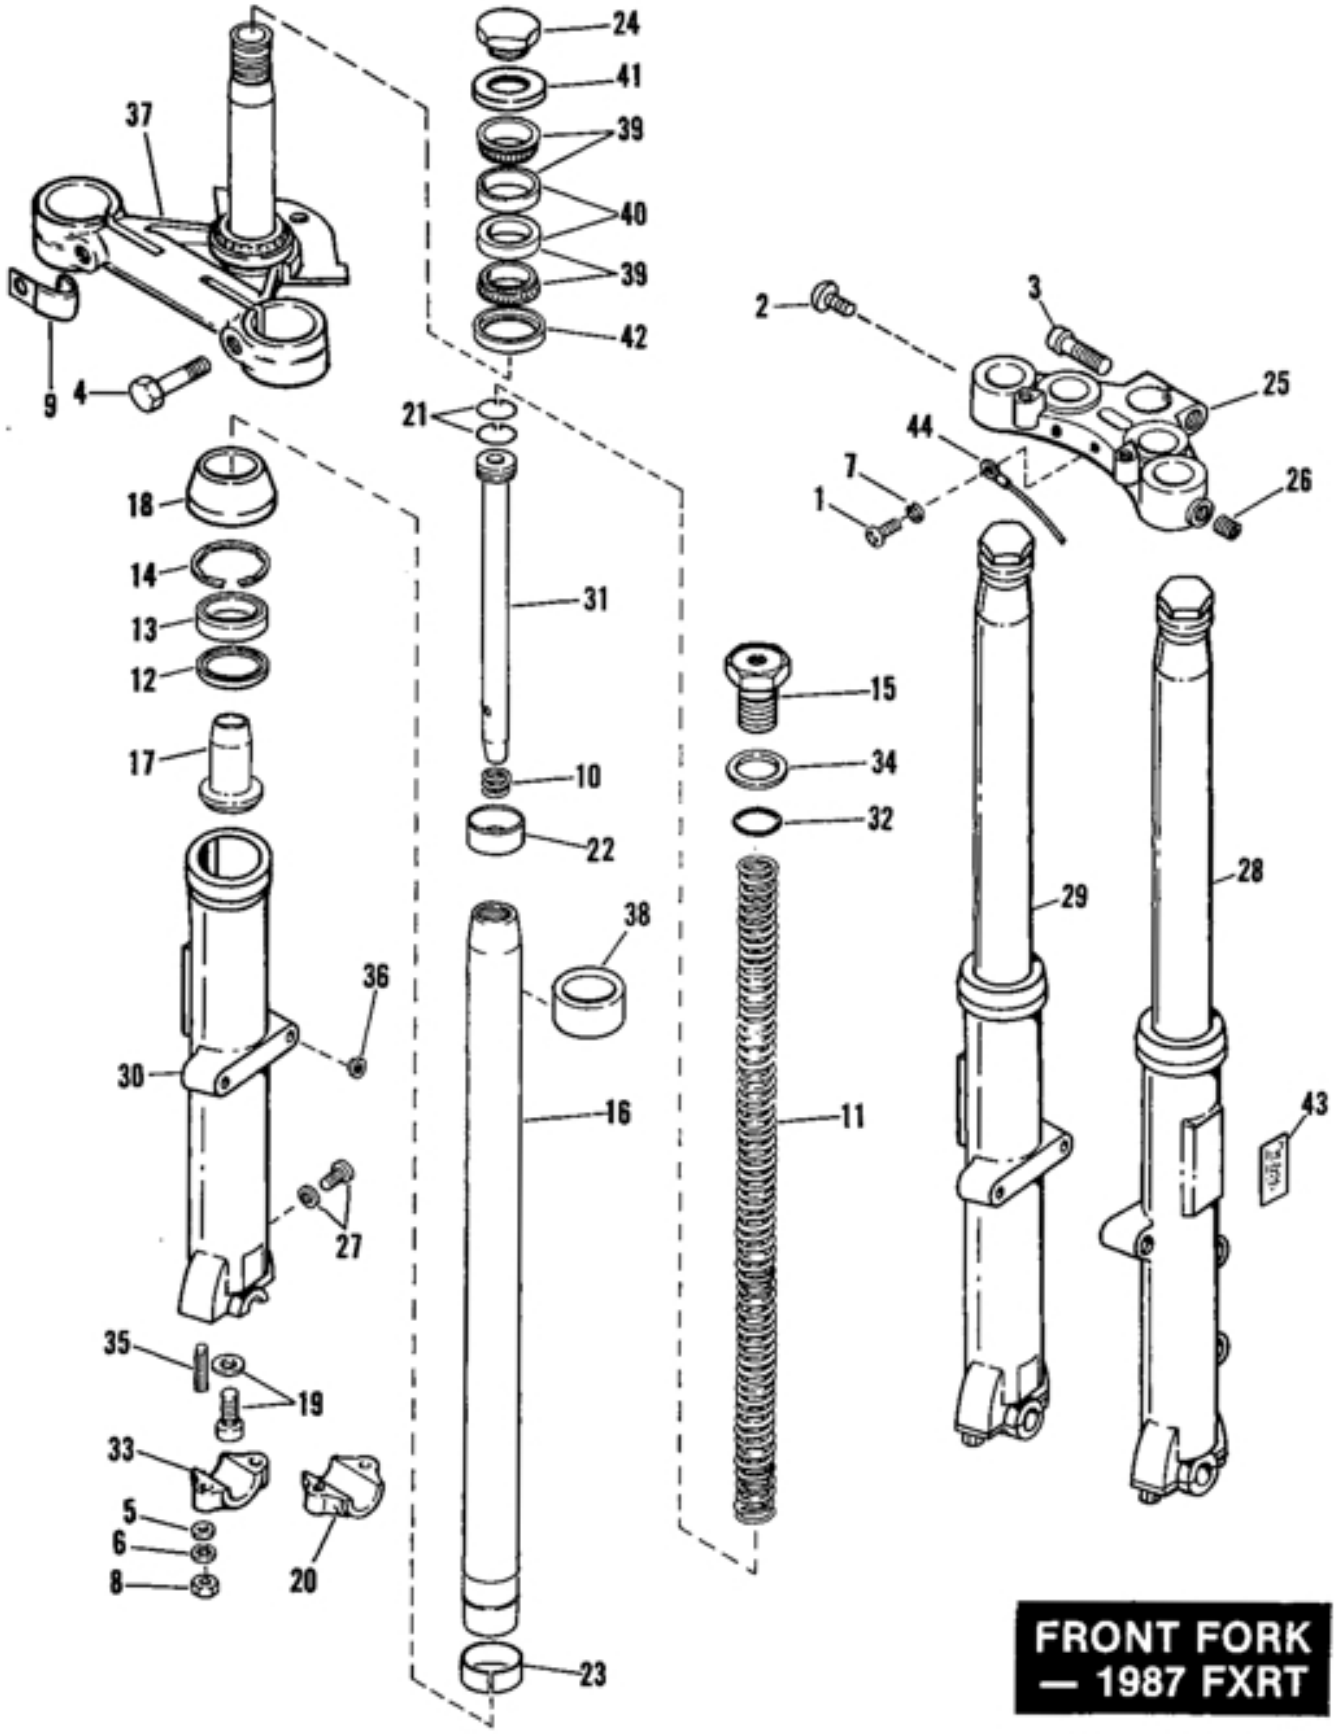


FRONT FORK — 1987 FXRT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2661W	SCREW (2)	FXR: 87-EC
3	4371W	SCREW (1)	FXR: 87-EC
4	4411	BOLT (2)	FXR: 87-EC
5	6702	WASHER (4)	FXR: 87-EC
6	7041	LOCKWASHER (4)	FXR: 87-EC
7	7220	LOCKWASHER (4)	FXR: 87-EC
8	7748W	NUT (4)	FXR: 87-EC
9	10003	CLAMP (1)	FXR: 87-EC
10	45382-83	SPRING, slider (2)	FXR: 87-EC
11	45384-83	SPRING, N/A (2)	FXR: 87-EC
12	45386-83	SPACER, seal (2)	FXR: 87-EC
13	45387-83	OIL SEAL, slider (2)	FXR: 87-EC
14	45388-83	RETAINING RING, oil seal (2)	FXR: 87-EC
15	45389-86	CAP, slider tube (2)	FXR: 87-EC
16	45392-86	SLIDER TUBE (2)	FXR: 87-EC
17	45403-84	LOWER STOP (2)	FXR: 87-EC
18	45404-75	DUST COVER (2)	FXR: 87-EC
19	45405-75A	SCREW, damper tube, w/ washer (2)	FXR: 87-EC
20	45410-84	AXLE CAP, left slider (1)	FXR: 87-EC
21	45412-75	RING, damper tube (4)	FXR: 87-EC
22	45413-84	BUSHING, upper-fork slider (2)	FXR: 87-EC
23	45416-84	BUSHING, lower-fork slider (2)	FXR: 87-EC
24	45718-71	NUT, fork stem (1)	FXR: 87-EC
25	45736-78B	BRACKET, upper (1)	FXR: 87-EC
26	45782-72A	SCREW INSERT (2)	FXR: 87-EC
27	45790-80	DRAIN SCREW, slider (2)	FXR: 87-EC
28	45791-84A	FORK SLIDER AND TUBE ASSY, left, N/A (1)	FXR: 87-EC
29	45793-85A	FORK SLIDER AND TUBE ASSY, right (1)	FXR: 87-EC
30	45909-83	SLIDER, right (1)	FXR: 87-EC
30	45912-84	SLIDER, left (1)	FXR: 87-EC
31	45913-84	DAMPER TUBE, w/#21 (2)	FXR: 87-EC
32	45982-73	O-RING, slider tube cap (2)	FXR: 87-EC
33	45994-84	AXLE CAP, right slider (1)	FXR: 87-EC
34	45997-73	WASHER, slider tube cap (2)	FXR: 87-EC
35	45998-73	STUD (4)	FXR: 87-EC
36	46020-84	BUSHING, brake caliper (1)	FXR: 87-EC
37	47692-84	BRACKET, lower-w/shield (1)	FXR: 87-EC
38	47830-86	FORK STOP, N/A (2)	FXR: 87-EC
39	48300-60	ROLLER BEARING, w/cup (2)	FXR: 87-EC
40	48315-60	BEARING CUP (2)	FXR: 87-EC
41	48361-80	DUST SHIELD, bearing-upper (1)	FXR: 87-EC
42	48365-48A	DUST SHIELD, bearing-lower (1)	FXR: 87-EC
43	59254-72	REFLECTOR, amber (2)	FXR: 87-EC
44	70191-73A	CABLE (1)	FXR: 87-EC
		INTERNATIONAL MODELS ONLY	
37	45589-84	BRACKET, lower (HDI only), N/A (1)	FXR: 87-EC
	48140-84	STEERING HEAD LOCK ASSY (1)	FXR: 87-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


FRONT FORK — FXST/C

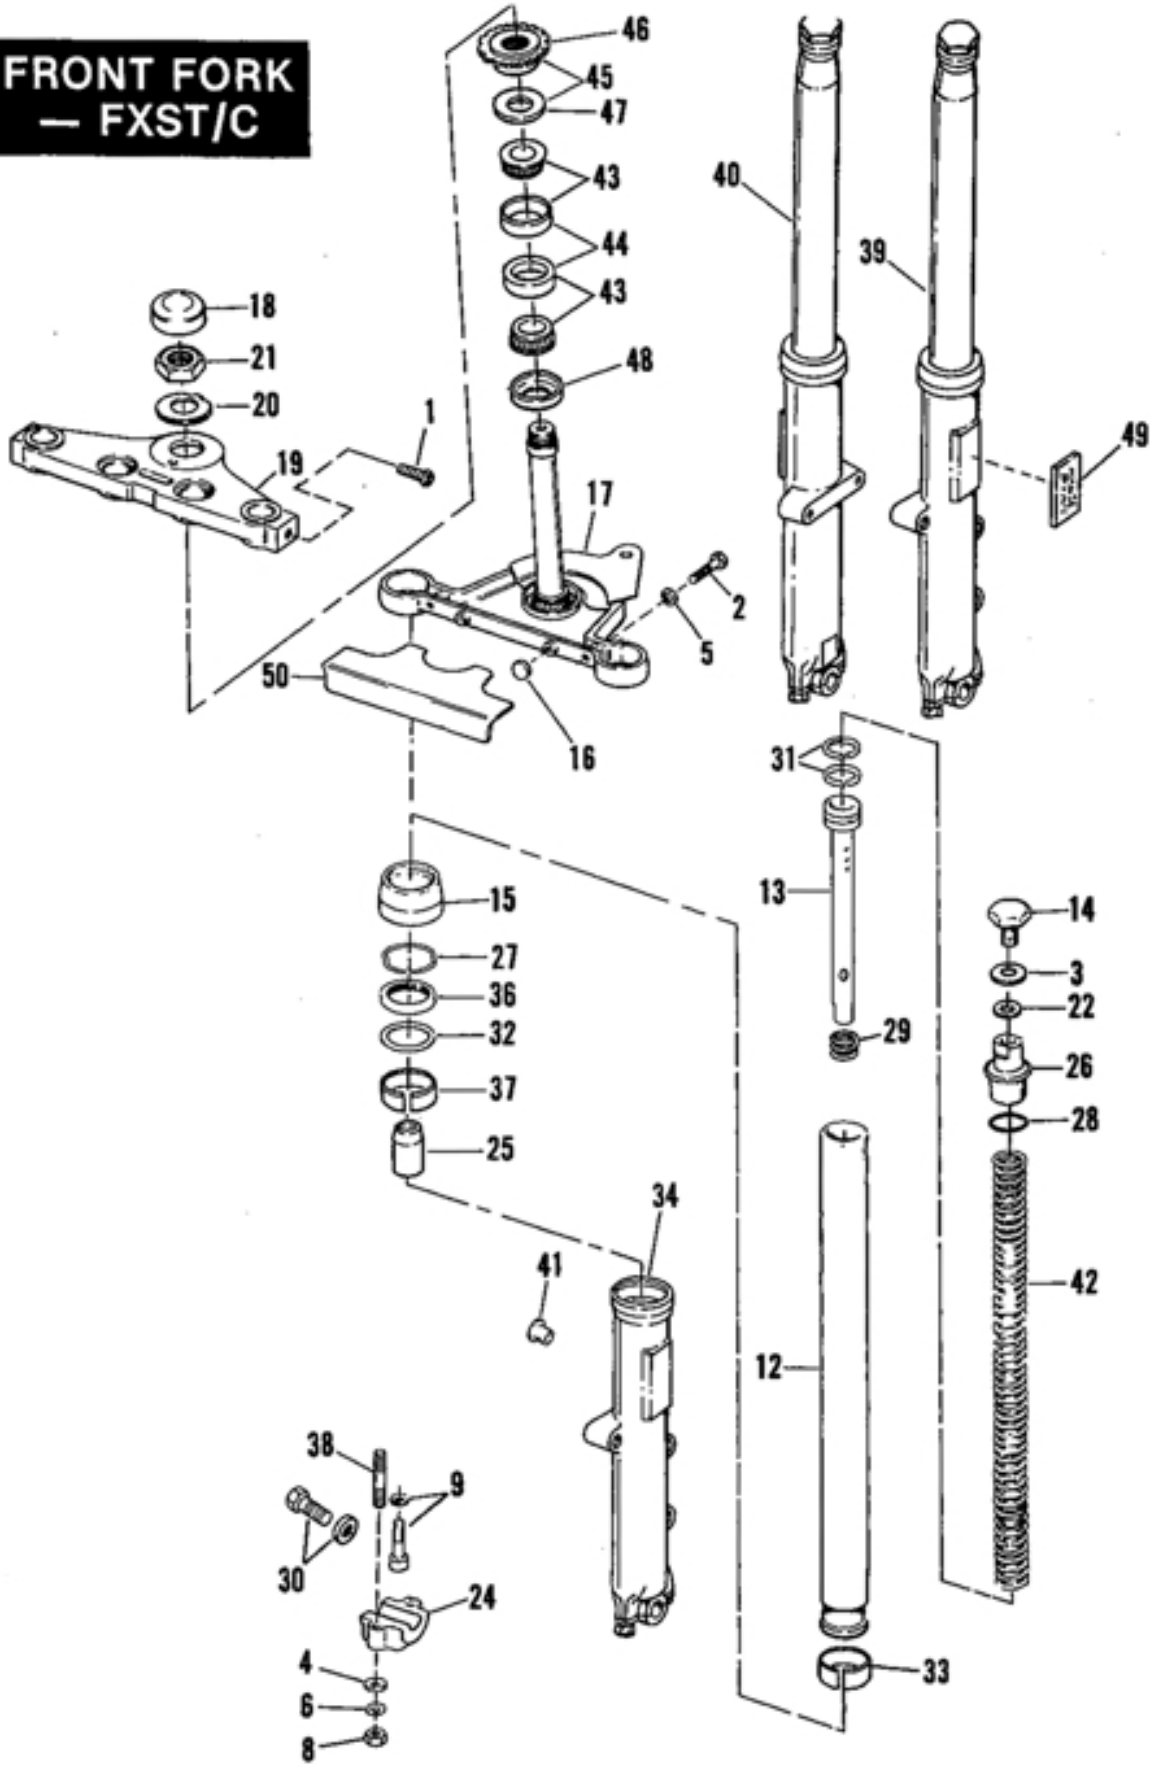

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2823	SCREW (2)	Softail: 87 to 90-BH/K
2	4729	BOLT (2)	Softail: 87 to 90-BH/K
3	5710	WASHER (2)	Softail: 87 to 90-BH/K
4	6702	WASHER, right slider (2)	Softail: 87 to 90-BH/K
5	7039	LOCKWASHER (2)	Softail: 87 to 90-BH/K
6	7041	LOCKWASHER, right slider (2)	Softail: 87 to 90-BH/K
8	7748W	NUT, right slider (2)	Softail: 87 to 90-BH/K
9	45405-75A	SCREW, damper tube, w/ washer (2)	Softail: 87 to 90-BH/K
12	45417-84	SLIDER TUBE (2)	Softail: 87 to 90-BH/K
13	45418-84	DAMPER TUBE, complete (2)	Softail: 87 to 90-BH/K
14	45419-80	CAP, slider tube (2)	Softail: 87 to 90-BH/K
15	45420-80	DUST COVER (2)	Softail: 87 to 90-BH/K
16	45648-85	PAD, felt (2)	Softail: 87 to 90-BH/K
17	45665-84B	STEM AND BRACKET, w/bearing and shield (1)	Softail: 87 to 90-BH/K
18	45670-80	CAP, fork stem (1)	Softail: 87 to 90-BH/K
19	45672-80	BRACKET, upper (chrome) (1)	Softail: 87 to 90-BH/K
20	45717-63	LOCKWASHER, fork stem nut (1)	Softail: 87 to 90-BH/K
21	45718-60	NUT, fork stem (1)	Softail: 87 to 90-BH/K
22	45733-48	OIL SEAL, fork tube plug (2)	Softail: 87 to 90-BH/K
24	45832-77A	AXLE CAP, right slider (1)	Softail: 87 to 90-BH/K
25	45834-77	LOWER STOP (2)	Softail: 87 to 90-BH/K
26	45838-77	PLUG, fork tube (2)	Softail: 87 to 90-BH/K
27	45842-77	RETAINING RING, oil seal (2)	Softail: 87 to 90-BH/K
28	45845-77	O-RING, slider tube plug (2)	Softail: 87 to 90-BH/K
29	45855-77	SPRING, damper tube (2)	Softail: 87 to 90-BH/K
30	45858-77	DRAIN SCREW W/WASHER, slider (2)	Softail: 87 to 90-BH/K
31	45859-77	RING, damper tube (4)	Softail: 87 to 90-BH/K
32	45865-84	WASHER, slider (2)	Softail: 87 to 90-BH/K
33	45866-84	BUSHING, slider tube (2)	Softail: 87 to 90-BH/K
34	45873-84	SLIDER, left (1)	Softail: 87 to 90-BH/K
34	45874-84	SLIDER, right (1)	Softail: 87 to 90-BH/K
36	45875-84	OIL SEAL, slider (2)	Softail: 87 to 90-BH/K
37	45940-84	BUSHING, slider (2)	Softail: 87 to 90-BH/K
38	45998-73	STUD (4)	Softail: 87 to 90-BH/K
39	46004-84	FORK SLIDER AND TUBE ASSY., left (1)	Softail: 87 to 90-BH/K
40	46006-84	FORK SLIDER AND TUBE ASSY., right (1)	Softail: 87 to 90-BH/K
41	46020-84	BUSHING, upper-left slider-brake caliper (1)	Softail: 87 to 90-BH/K
42	46048-84	SPRING (2)	Softail: 87 to 90-BH/K
43	48300-60	ROLLER BEARING W/ CUP (2)	Softail: 87 to 90-BH/K
44	48315-60	BEARING CUP (2)	Softail: 87 to 90-BH/K
45	48330-48A	ADJUSTING NUT, upper-w/shield (1)	Softail: 87 to 90-BH/K
46	48332-48B	ADJUSTING NUT, upper (1)	Softail: 87 to 90-BH/K
47	48361-80	DUST SHIELD, bearing-upper (1)	Softail: 87 to 90-BH/K
48	48365-48A	DUST SHIELD, bearing-lower (1)	Softail: 87 to 90-BH/K
49	59254-72	REFLECTOR, amber (2)	Softail: 87 to 89-BH/K
49	59256-84A	REFLECTOR, amber (2)	Softail: 90 to 90-BH/K
50	67773-80A	MOUNTING PLATE, headlamp (chrome) (1)	Softail: 87 to 90-BH/K
		INTERNATIONAL MODELS ONLY	
17	45640-84B	FORK STEM BRACKET, HDI only (1)	Softail: 87-BH/K
17	45640-88	FORK STEM BRACKET, HDI only (1)	Softail: 88 to 90-BH/K
	48140-84	STEERING HEAD LOCK ASSY, HDI only (1)	Softail: 87 to 90-BH/K

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

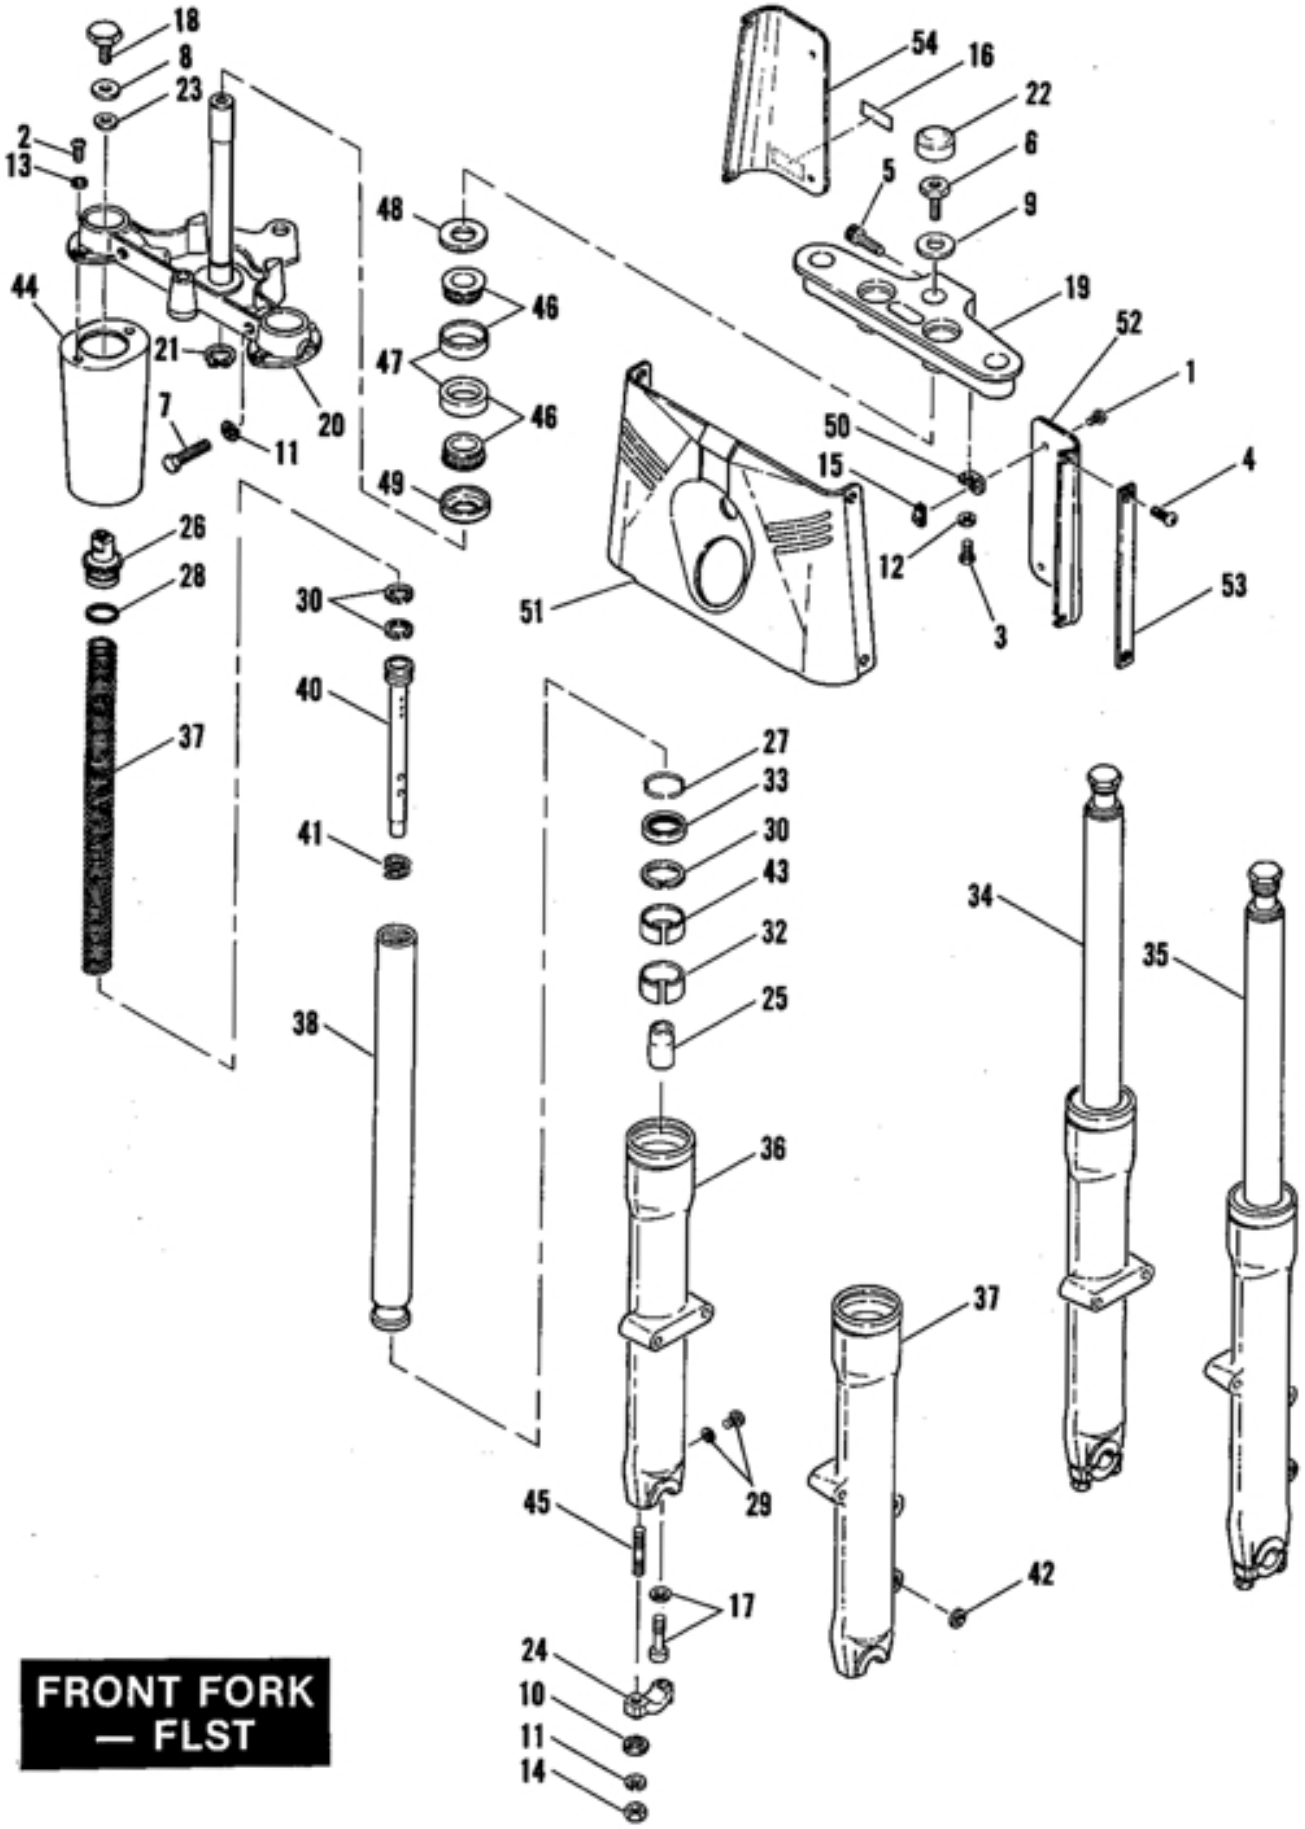


FRONT FORK — FLST

FRONT FORK - FLST (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW (4)	Softail: 87 to 90-BJ/M
2	2417	SCREW (4)	Softail: 87 to 90-BJ/M
3	3953W	BOLT (2)	Softail: 87 to 90-BJ/M
4	4095	SCREW (4)	Softail: 87 to 90-BJ/M
5	4371WA	SCREW (1)	Softail: 87 to 90-BJ/M
6	4453	BOLT (1)	Softail: 87 to 90-BJ/M
7	4729	BOLT (2)	Softail: 87 to 90-BJ/M
8	5710	WASHER (2)	Softail: 87 to 90-BJ/M
9	6655	WASHER (1)	Softail: 87 to 90-BJ/M
10	6702	WASHER (2)	Softail: 87 to 90-BJ/M
11	7039	LOCKWASHER (2)	Softail: 87 to 90-BJ/M
12	7041	LOCKWASHER (2)	Softail: 87 to 90-BJ/M
13	7124	LOCKWASHER (4)	Softail: 87 to 90-BJ/M
14	7748W	NUT (2)	Softail: 87 to 90-BJ/M
15	8108	SPEEDNUT (1)	Softail: 87 to 90-BJ/M
16	14150-86	WARNING LABEL (1)	Softail: 87 to 90-BJ/M
17	45405-75A	SCREW, w/ washer (2)	Softail: 87 to 90-BJ/M
18	45419-80	CAP, slider tube (2)	Softail: 87 to 90-BJ/M
19	45456-86	BRACKET, upper (1)	Softail: 87 to 90-BJ/M
20	45603-86	STEM AND BRACKET (1)	Softail: 87 to 90-BJ/M
21	45611-86	RETAINING RING, fork stem (1)	Softail: 87 to 90-BJ/M
22	45670-80	CAP, fork stem (1)	Softail: 87 to 90-BJ/M
23	45733-48	OIL SEAL, fork tube plug (2)	Softail: 87 to 90-BJ/M
23	45762-86	FRONT FORK ASSEMBLY (1)	Softail: 87 to 90-BJ/M
24	45832-77A	AXLE CAP, right slider (1)	Softail: 87 to 90-BJ/M
25	45834-77	LOWER STOP (2)	Softail: 87 to 90-BJ/M
26	45838-77	PLUG, fork tube (2)	Softail: 87 to 90-BJ/M
27	45842-77	RETAINING RING, oil seal (2)	Softail: 87 to 90-BJ/M
28	45845-77	O-RING, slider tube plug (2)	Softail: 87 to 90-BJ/M
29	45858-77	DRAIN SCREW W/WASHER, slider (2)	Softail: 87 to 90-BJ/M
30	45859-77	RING, damper tube (4)	Softail: 87 to 90-BJ/M
31	45865-84	WASHER, slider (2)	Softail: 87 to 90-BJ/M
32	45866-84	BUSHING, slider tube (2)	Softail: 87 to 90-BJ/M
33	45875-84	OIL SEAL (2)	Softail: 87 to 90-BJ/M
34	45915-86	FORK SLIDER AND TUBE ASSY., right (1)	Softail: 87 to 90-BJ/M
35	45916-86	FORK SLIDER AND TUBE ASSY., left (1)	Softail: 87 to 90-BJ/M
36	45917-86	SLIDER, right (1)	Softail: 87 to 90-BJ/M
37	45918-86	SLIDER, left (1)	Softail: 87 to 90-BJ/M
38	45930-86	SLIDER TUBE (2)	Softail: 87 to 90-BJ/M
39	45931-86	SPRING (2)	Softail: 87 to 90-BJ/M
40	45932-86	DAMPER TUBE (2)	Softail: 87 to 90-BJ/M
41	45933-86	SPRING, damper tube (2)	Softail: 87 to 90-BJ/M
42	45934-86	BUSHING, brake caliper (1)	Softail: 87 to 90-BJ/M
43	45940-84	BUSHING, slider (2)	Softail: 87 to 90-BJ/M
44	45964-86	COVER, slider (2)	Softail: 87 to 90-BJ/M
45	45998-73	STUD (2)	Softail: 87 to 90-BJ/M
46	48300-60	ROLLER BEARING, w/cup (2)	Softail: 87 to 90-BJ/M
47	48315-60	BEARING CUP (2)	Softail: 87 to 90-BJ/M
48	48361-80	DUST SHIELD, brg.-upper (1)	Softail: 87 to 90-BJ/M
49	48365-48A	DUST SHIELD, brg.-lower (1)	Softail: 87 to 90-BJ/M
50	50991-86	BRACKET, front panel (2)	Softail: 87 to 90-BJ/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

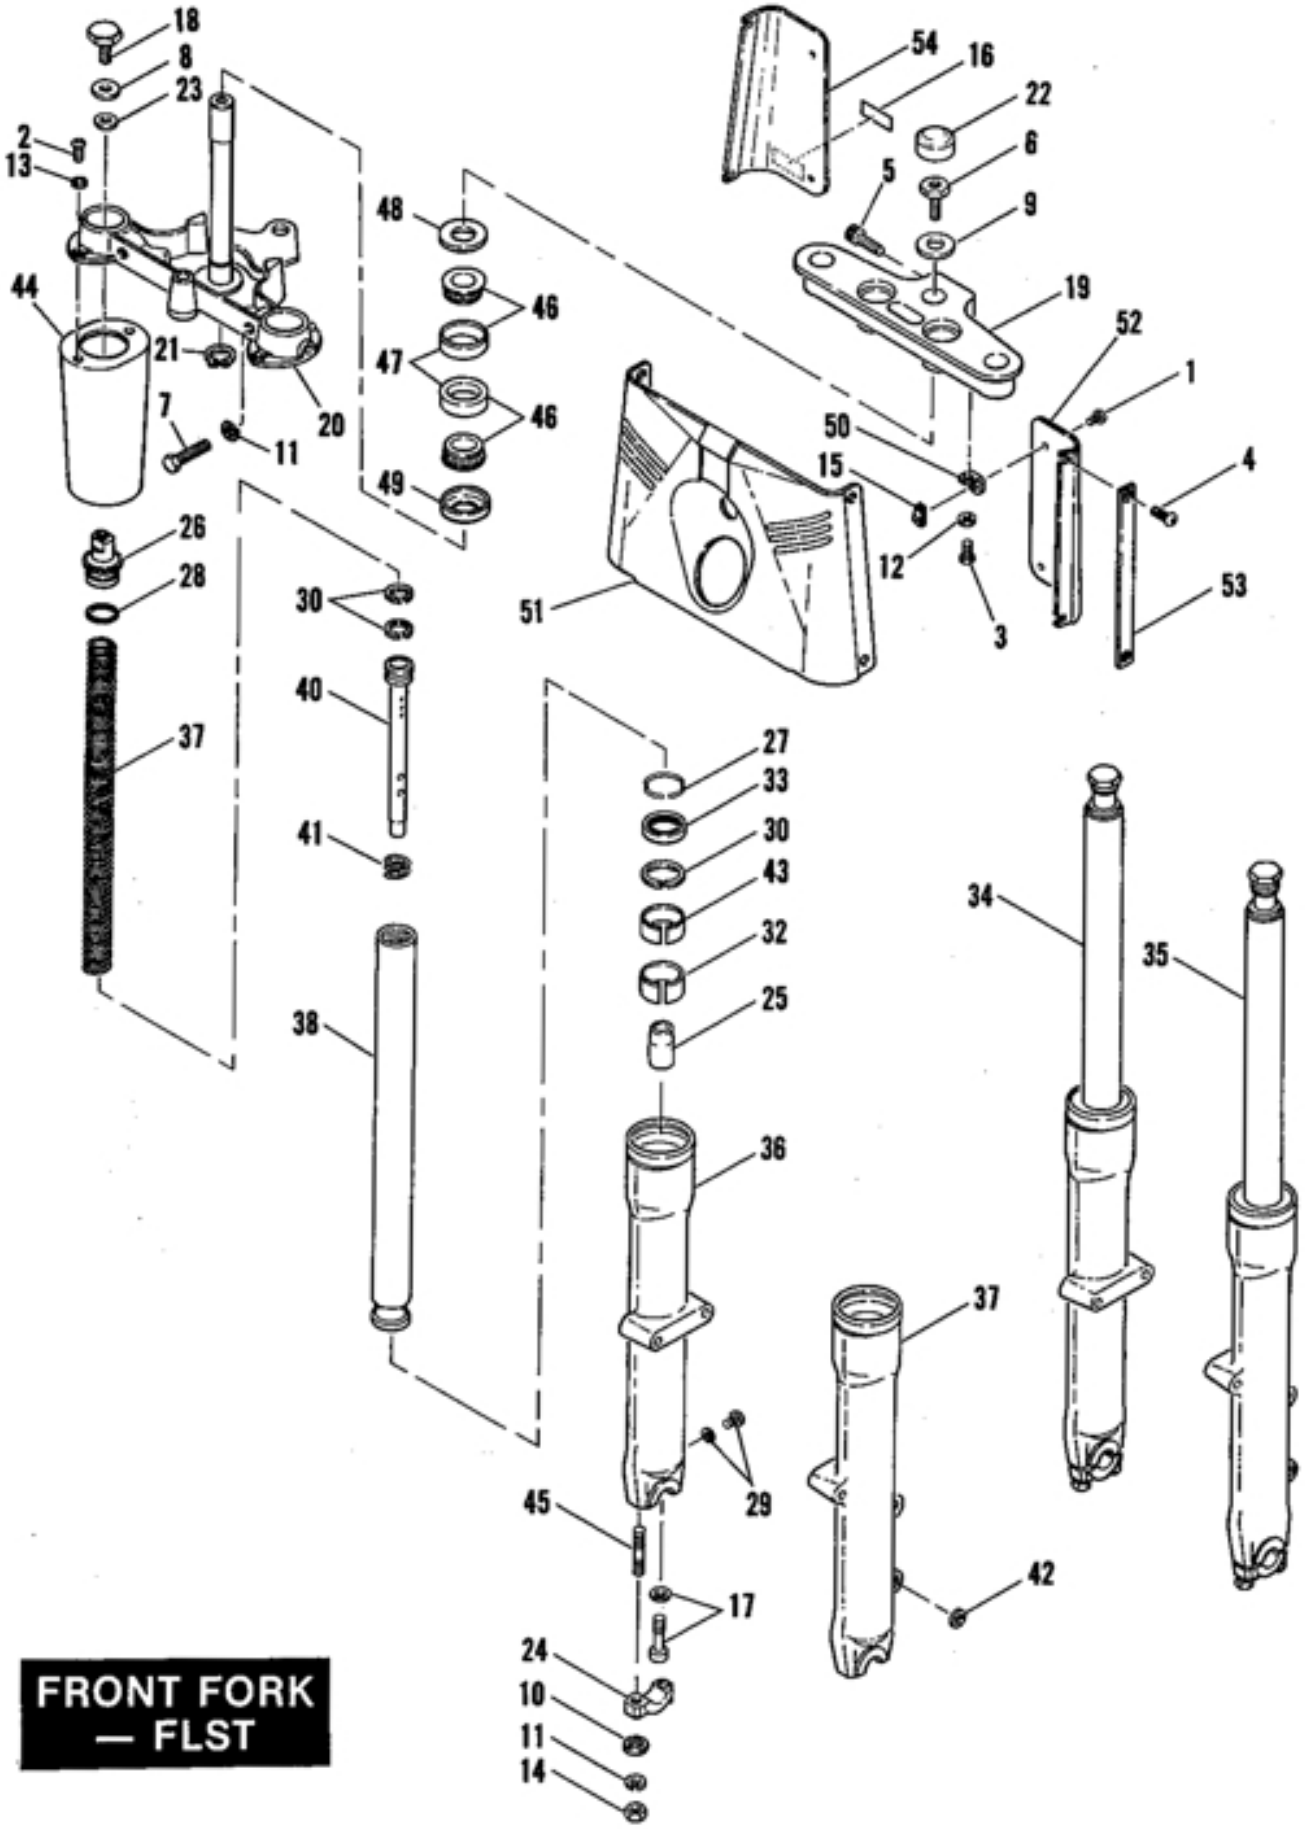

18
8
23
2
13
44
21
20
7
11
48
46
47
46
49
54
16
22
6
5
9
19
52
1
50
15
4
12
3
53
51
26
28
30
40
37
41
38
27
33
30
43
32
25
36
45
29
17
24
10
11
14
34
35
37
42
FRONT FORK
— FLST

FRONT FORK - FLST (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
51	67808-86	FRONT PANEL, buffed stainless steel (1)	Softail: 87 to 90-BJ/M
52	67816-86	BACK PANEL, left-rear (1)	Softail: 87 to 90-BJ/M
52	67821-87	BACK PANEL, left-rear w/ switch hole (1)	Softail: 87 to 90-BJ/M
53	67819-86	TRIM STRIP, front panel (2)	Softail: 87 to 90-BJ/M
54	67820-86	BACK PANEL, right-rear (1)	Softail: 87 to 90-BJ/M
		INTERNATIONAL MODELS ONLY	
	45605-88	STEM AND BRACKET, HDI only (1)	Softail: 88 to 90-BJ/M
	45640-88	FORK STEM AND BRACKET ASSY, HDI only (1)	Softail: 88 to 90-BJ/M
	48140-84	STEERING HEAD LOCK ASSY, HDI only (1)	Softail: 87 to 90-BJ/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

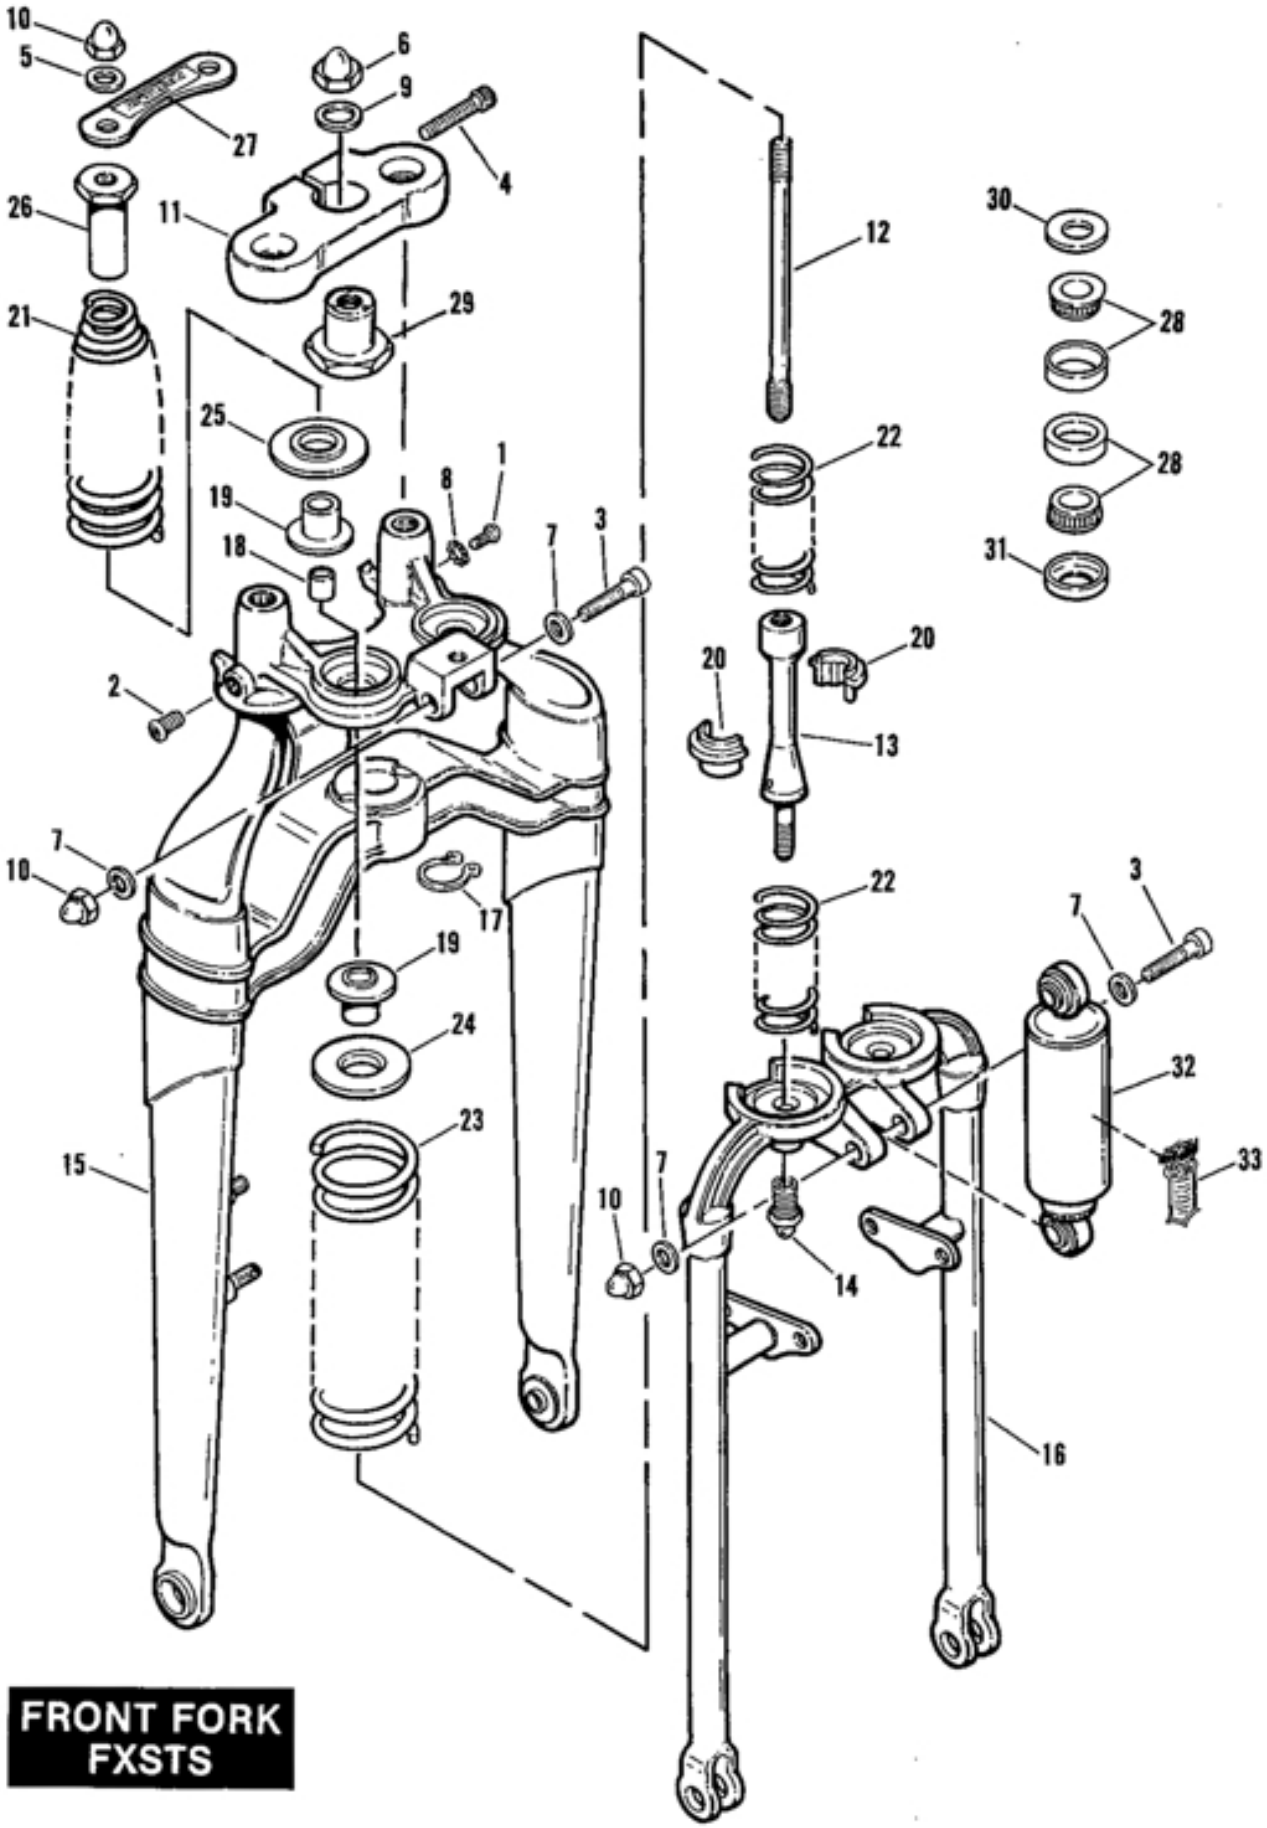


FRONT FORK
FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3533	SCREW, spring reaction bracket-right (1)	Softail: L88 to 90-BL
2	3538	SCREW, spring reaction bracket-left (1)	Softail: L88 to 90-BL
3	4029	SCREW, shock absorber mounting (2)	Softail: L88 to 90-BL
4	4350A	SCREW, upper triple clamp (1)	Softail: L88 to 90-BL
5	6353	WASHER, spring rod (2)	Softail: L88 to 90-BL
6	6756	WASHER, steering stem (1)	Softail: L88 to 90-BL
7	6812	WASHER, shock absorber mounting (4)	Softail: L88 to 90-BL
8	7232	LOCKWASHER, spring reaction bracket (1)	Softail: L88 to 90-BL
9	7627	ACORN NUT, steering stem (1)	Softail: L88 to 90-BL
10	7680W	ACORN NUT (4)	Softail: L88 to 90-BL
11	45473-88	UPPER TRIPLE CLAMP (1)	Softail: L88 to 90-BL
12	45543-88	SPRING ROD, upper (2)	Softail: L88 to 90-BL
13	45566-88	SPRING ROD, lower (2)	Softail: L88 to 90-BL
14	45567-88	ACORN NUT, lower spring rod (2)	Softail: L88 to 90-BL
15	45568-88	RIGID FORK ASSEMBLY, w/stem (1)	Softail: L88 to 90-BL
16	45607-88	SPRING FORK (1)	Softail: L88 to 90-BL
16	46008-88	FORK ASSEMBLY, complete (1)	Softail: L88 to 90-BL
17	45611-86	RETAINING RING, fork stem (1)	Softail: L88 to 90-BL
18	45935-88	BUSHING, spring rod (2)	Softail: L88 to 90-BL
19	45936-88	TRAVEL BUMPER (4)	Softail: L88 to 90-BL
20	45937-88	SPRING SEAT (4)	Softail: L88 to 90-BL
21	46053-88	SPRING, rebound-top (2)	Softail: L88 to 90-BL
22	46054-88	SPRING, compression-inner (4)	Softail: L88 to 90-BL
23	46055-88	SPRING, compression-outer (2)	Softail: L88 to 90-BL
24	46056-88	SPRING CUP, compression spring (2)	Softail: L88 to 90-BL
25	46057-88	SPRING CUP, rebound spring (2)	Softail: L88 to 90-BL
26	46060-88	SPRING RESTRAINT, upper (2)	Softail: L88 to 90-BL
27	46065-88	SPRING BRIDGE (1)	Softail: L88 to 90-BL
28	48300-60	ROLLER BEARING W/ CUP (2)	Softail: L88 to 90-BL
29	48306-88	BEARING RETAINER, steering head (1)	Softail: L88 to 90-BL
30	48361-80	DUST SHIELD, bearing-upper (1)	Softail: L88 to 90-BL
31	48365-48A	DUST SHIELD, bearing-lower (1)	Softail: L88 to 90-BL
32	54483-88	FRONT SHOCK ABSORBER (1)	Softail: L88 to 90-BL
33	66030-88	DECAL, shock absorber (1)	Softail: L88 to 90-BL
		INTERNATIONAL MODELS ONLY	
15	45569-88	RIGID FORK ASSEMBLY, w/stem (1)	Softail: L88 to 90-BL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

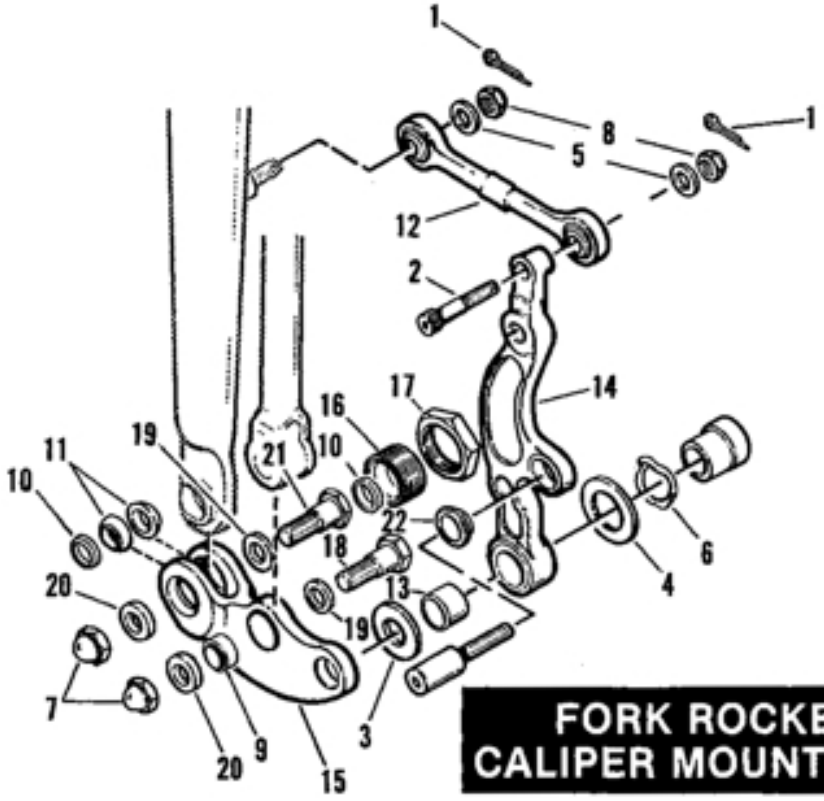


FORK ROCKERS AND CALIPER MOUNTING - FXSTS

FORK ROCKERS AND CALIPER MOUNTING - FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	534	COTTER PIN, brake reaction link (2)	Softail: L88 to 90-BL
2	4736	SCREW, brake link to bracket (1)	Softail: L88 to 90-BL
3	6040	WASHER, front axle-outside right (1)	Softail: L88 to 90-BL
4	6042	WASHER, front axle-inside right (1)	Softail: L88 to 90-BL
5	6812	WASHER, brake reaction link (2)	Softail: L88 to 90-BL
6	7012	WAVE WASHER, front axle-right (1)	Softail: L88 to 90-BL
7	7627	ACORN NUT, rockers to forks (4)	Softail: L88 to 90-BL
8	7667	NUT, brake reaction link (2)	Softail: L88 to 90-BL
9	9139	BEARING, spherical-fork to rocker (2)	Softail: L88 to 90-BL
10	9140	RACE, spherical brg.-fork to rocker (4)	Softail: L88 to 90-BL
11	9141	BALL, spherical brg.-fork to rocker (4)	Softail: L88 to 90-BL
12	41040-88	BRAKE REACTION LINK (1)	Softail: L88 to 90-BL
13	44030-88	BUSHING, caliper mtg. (1)	Softail: L88 to 90-BL
14	44044-88	BRACKET, caliper mtg. (1)	Softail: L88 to 90-BL
15	45649-88	ROCKER, left (1)	Softail: L88 to 90-BL
15	45651-88	ROCKER, right (1)	Softail: L88 to 90-BL
16	45655-88	BEARING RETAINER, rigid fork (2)	Softail: L88 to 90-BL
17	45659-88	JAM NUT, bearing retainer (2)	Softail: L88 to 90-BL
18	45660-88A	PIVOT STUD, spring fork to rocker (2)	Softail: L88 to 90-BL
19	45661-88	WASHER, rocker to fork leg (4)	Softail: L88-BL
20	45662-88	WASHER, rocker to fork leg (4)	Softail: L88 to 90-BL
21	45663-88A	PIVOT STUD, rigid frork to rocker (2)	Softail: L88 to 90-BL
22	46020-84	BUSHING, caliper mtg. bolt (1)	Softail: L88 to 90-BL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

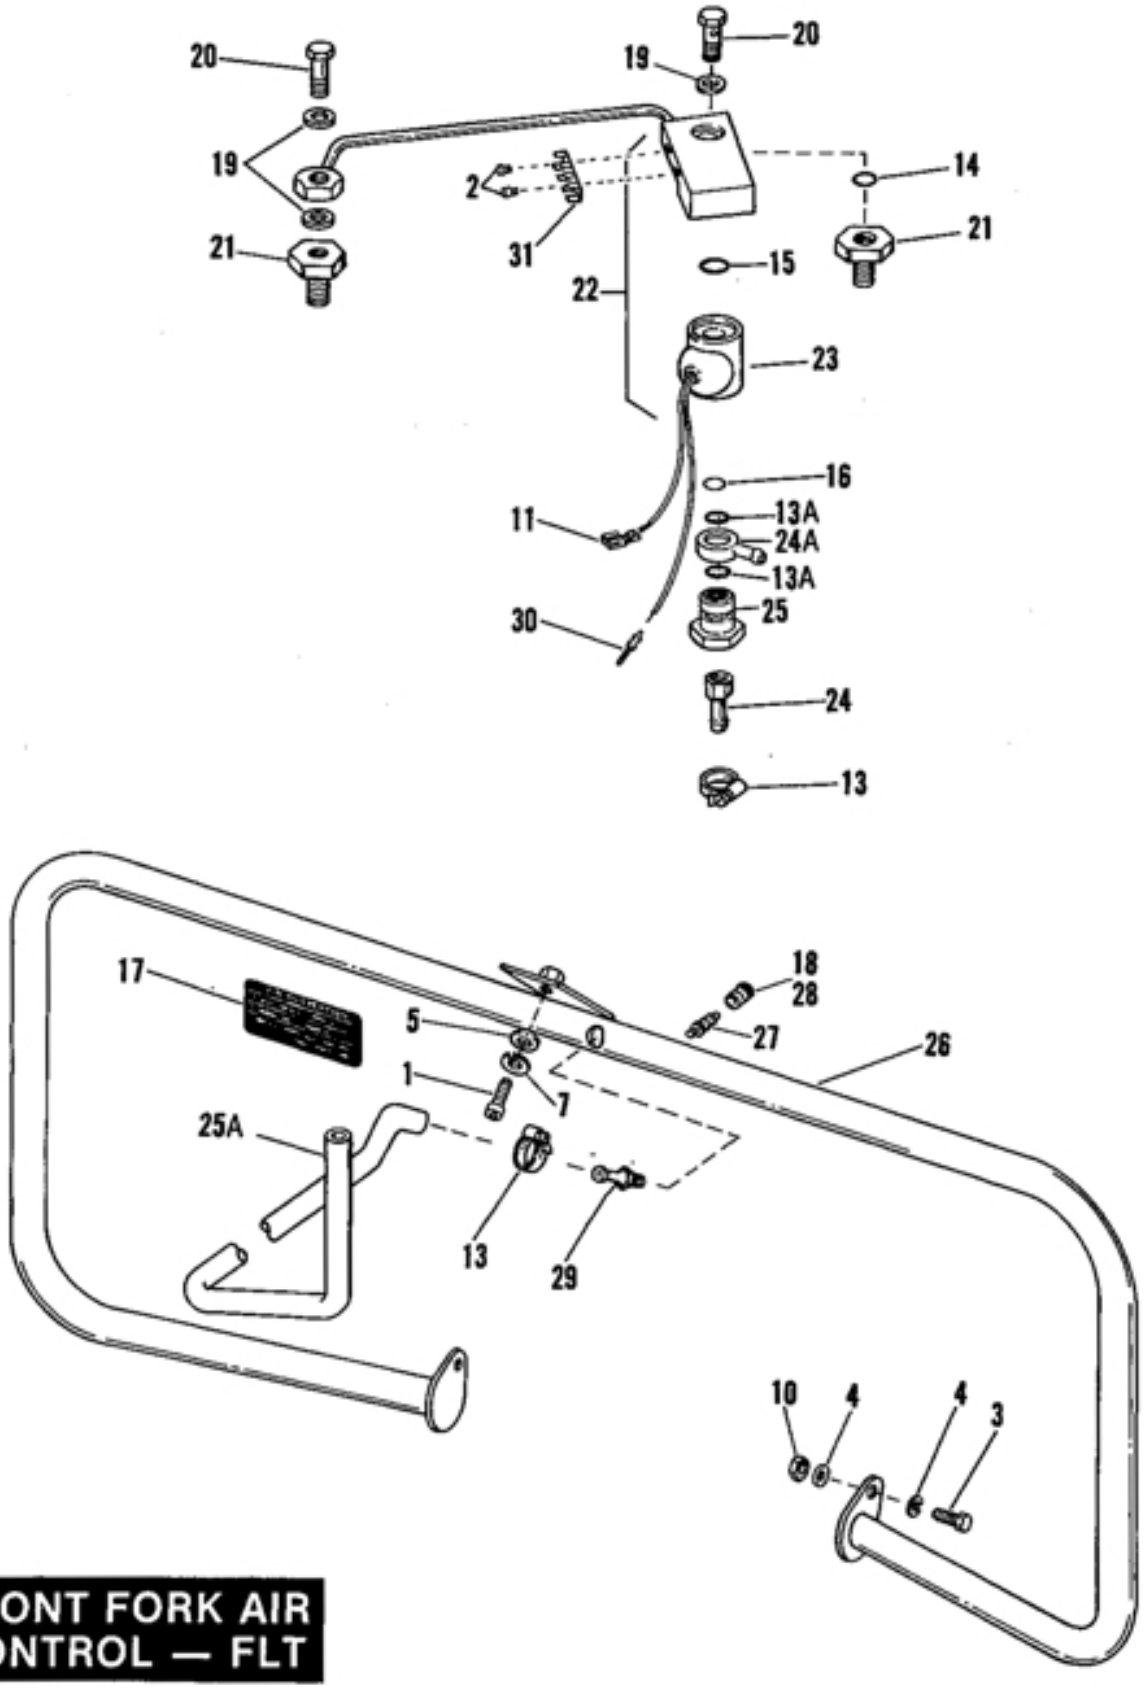


FRONT FORK AIR CONTROL — FLT

FRONT FORK AIR CONTROL - FLT MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	856A	SCREW (1)	Touring: 87-ALL
2	1040	SCREW (2)	Touring: 87 to 90-ALL
3	4337W	SCREW (2)	Touring: 87-ALL
4	6701	WASHER (4)	Touring: 87-ALL
5	6702	WASHER (1)	Touring: 87-ALL
7	7041	LOCKWASHER (1)	Touring: 87-ALL
10	7775	LOCKNUT (2)	Touring: 87-ALL
11	9914	TERMINAL, female spade (1)	Touring: 87-ALL
13	9946	CLAMP (2)	Touring: 87 to 90-ALL
13A	11132	O-RING (2)	Touring: 88 to 90-ALL
14	11140	O-RING (1)	Touring: 87 to 90-ALL
15	11170	O-RING (1)	Touring: 87 to 90-ALL
16	11171	O-RING (1)	Touring: 87 to 90-ALL
17	14082-84	DECAL, air suspension (1)	Touring: 87-ALL
18	41123-79	VALVE CAP (1)	Touring: 87-ALL
19	45583-83	GASKET (3)	Touring: 87 to 90-ALL
20	45585-83	BOLT, drilled (2)	Touring: 87 to 90-ALL
21	45839-84	CAP, upper bracket (2)	Touring: 87 to 90-ALL
22	46440-84B	VALVE ASSEMBLY, N/A (1)	Touring: 87-ALL
23	46452-85	VALVE OPERATOR ASSEMBLY (1)	Touring: 87 to 90-ALL
24	46455-85	FITTING, solenoid (1)	Touring: 87-ALL
24A	46459-86	FITTING, banjo (1)	Touring: 88 to 90-ALL
25	46461-86	BOLT, fitting (1)	Touring: 88 to 90-ALL
25A	49059-84	HOSE (1)	Touring: 87-ALL
25A	49059-88A	HOSE (1)	Touring: 88 to 90-ALL
26	49184-84A	ENGINE GUARD, pressurized accumulator (1)	Touring: 87-ALL
27	54316-83A	VALVE ASSEMBLY (1)	Touring: 87-ALL
28	54323-85	VALVE CAP (1)	Touring: 87-ALL
29	63533-41	FITTING (1)	Touring: 87-ALL
30	72038-71	SOCKET, single pin (1)	Touring: 87 to 90-ALL
31	72314-86	TERMINAL CONNECTOR, spade (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

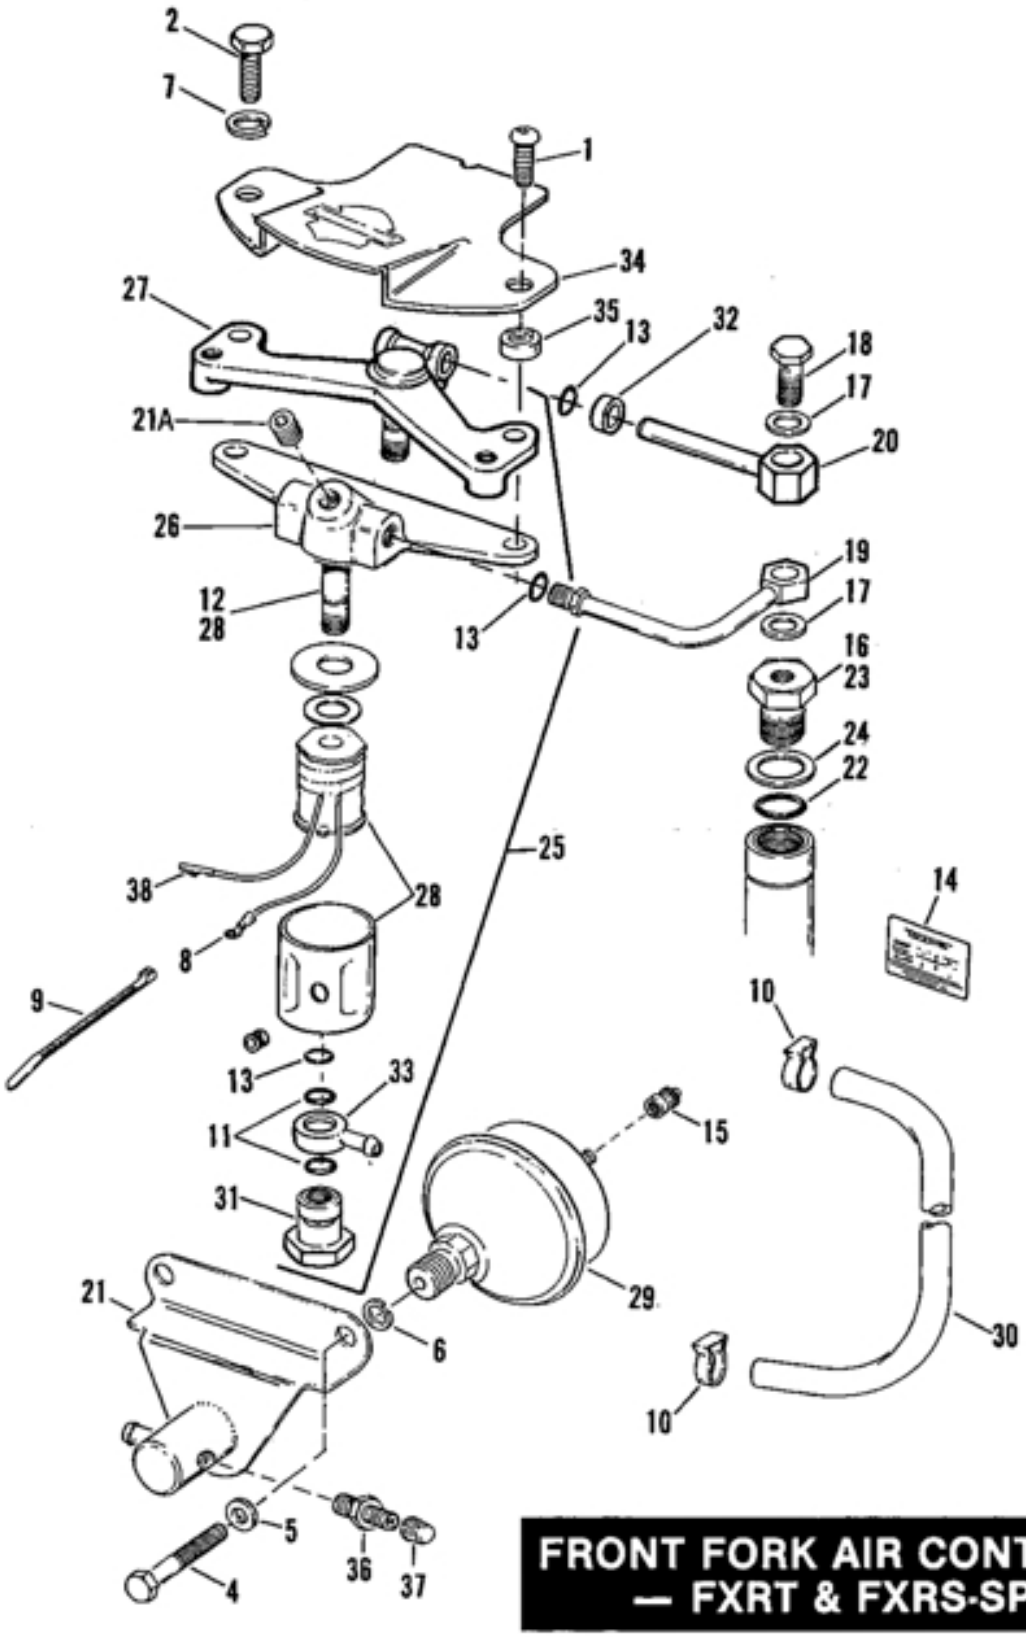

FRONT FORK AIR CONTROL — FXRT & FXRS-SP


FRONT FORK AIR CONTROL - FXRT AND FXRS-SP

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4011	SCREW (2)	FXR: 87 to 90-EC; 88 to 90-EG/M
2	4017	BOLT (2)	FXR: 88 to 90-EG/M
4	4724	BOLT (2)	FXR: 87 to 90-EC
5	6701	WASHER (2)	FXR: 87 to 90-EC
6	7038	LOCKWASHER (2)	FXR: 87 to 90-EC
7	7041	LOCKWASHER (2)	FXR: 88 to 90-EG/M
8	9857	TERMINAL, ring type, No. 10 hole (1)	FXR: 87 to 90-EC; 88 to 90-EG/M
9	10006	CABLE STRAP (1)	FXR: 87 to 90-EC
10	10080	CLAMP (2)	FXR: 87 to 90-EC; 88 to 90-EG/M
11	11132	O-RING (2)	FXR: 87 to 90-EC; 88 to 90-EG/M
12	11170	O-RING (1)	FXR: 87 to 90-EC; 88 to 90-EG/M
13	11171	O-RING (3)	FXR: 87 to 90-EC; 88 to 90-EG/M
14	14052-85	LABEL, air suspension (1)	FXR: 87-EC
15	41123-79	VALVE CAP (1)	FXR: 87-EC
16	45389-86	CAP, fork slider tube (2)	FXR: 87-EC
17	45583-83	GASKET (4)	FXR: 87 to 90-EC; 88 to 90-EG/M
18	45585-83	BOLT, drilled (2)	FXR: 87 to 90-EC; 88 to 90-EG/M
19	45587-83A	TUBE (2)	FXR: 87-EC
20	45587-88	TUBE (2)	FXR: 88 to 90-EC/G/M
21	45621-83A	BRACKET (1)	FXR: 87-EC
21A	45830-48	PLUG (1)	FXR: 87-EC
22	45982-73	O-RING, fork slider tube cap (2)	FXR: 87-EC
22	45984-87	O-RING, fork slider tube cap (2)	FXR: 88 to 90-EC/G/M
23	45990-88	CAP, fork slider tube (2)	FXR: 88 to 90-EC/G/M
24	45997-73	WASHER, fork slider tube cap (2)	FXR: 87-EC
25	46450-86	VALVE ASSEMBLY, complete, N/A (1)	FXR: 87-EC
25	46450-88	VALVE ASSEMBLY, complete, N/A (1)	FXR: 88 to 90-EC/G/M
26	46451-85	VALVE BODY (1)	FXR: 87-EC
27	46451-88A	VALVE BODY (1)	FXR: 88 to 90-EC/G/M
28	46452-85	VALVE OPERATOR ASSY. (1)	FXR: 87 to 90-EC; 88 to 90-EG/M
29	46454-83	ACCUMULATOR (1)	FXR: 87-EC
30	46457-86	HOSE, fitting to valve, N/A (1)	FXR: 87 to 90-EC
31	46461-86	BOLT, fitting (1)	FXR: 87 to 90-EC; 88 to 90-EG/M
32	46462-88	SPACER (2)	FXR: 88 to 90-EC/G/M
33	46459-86	FITTING (1)	FXR: 87 to 90-EC; 88 to 90-EG/M
34	46501-86	COVER, solenoid (1)	FXR: 87 to 90-EC
35	46503-86	SPACER (2)	FXR: 87 to 90-EC
36	54316-83A	VALVE STEM ASSY. (1)	FXR: 87-EC
37	54323-85	VALVE CAP (1)	FXR: 87-EC
38	72038-71	SOCKET, single pin (1)	FXR: 88 to 90-EC/G/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FRAME, REAR FORK & JIFFY STAND — FLT

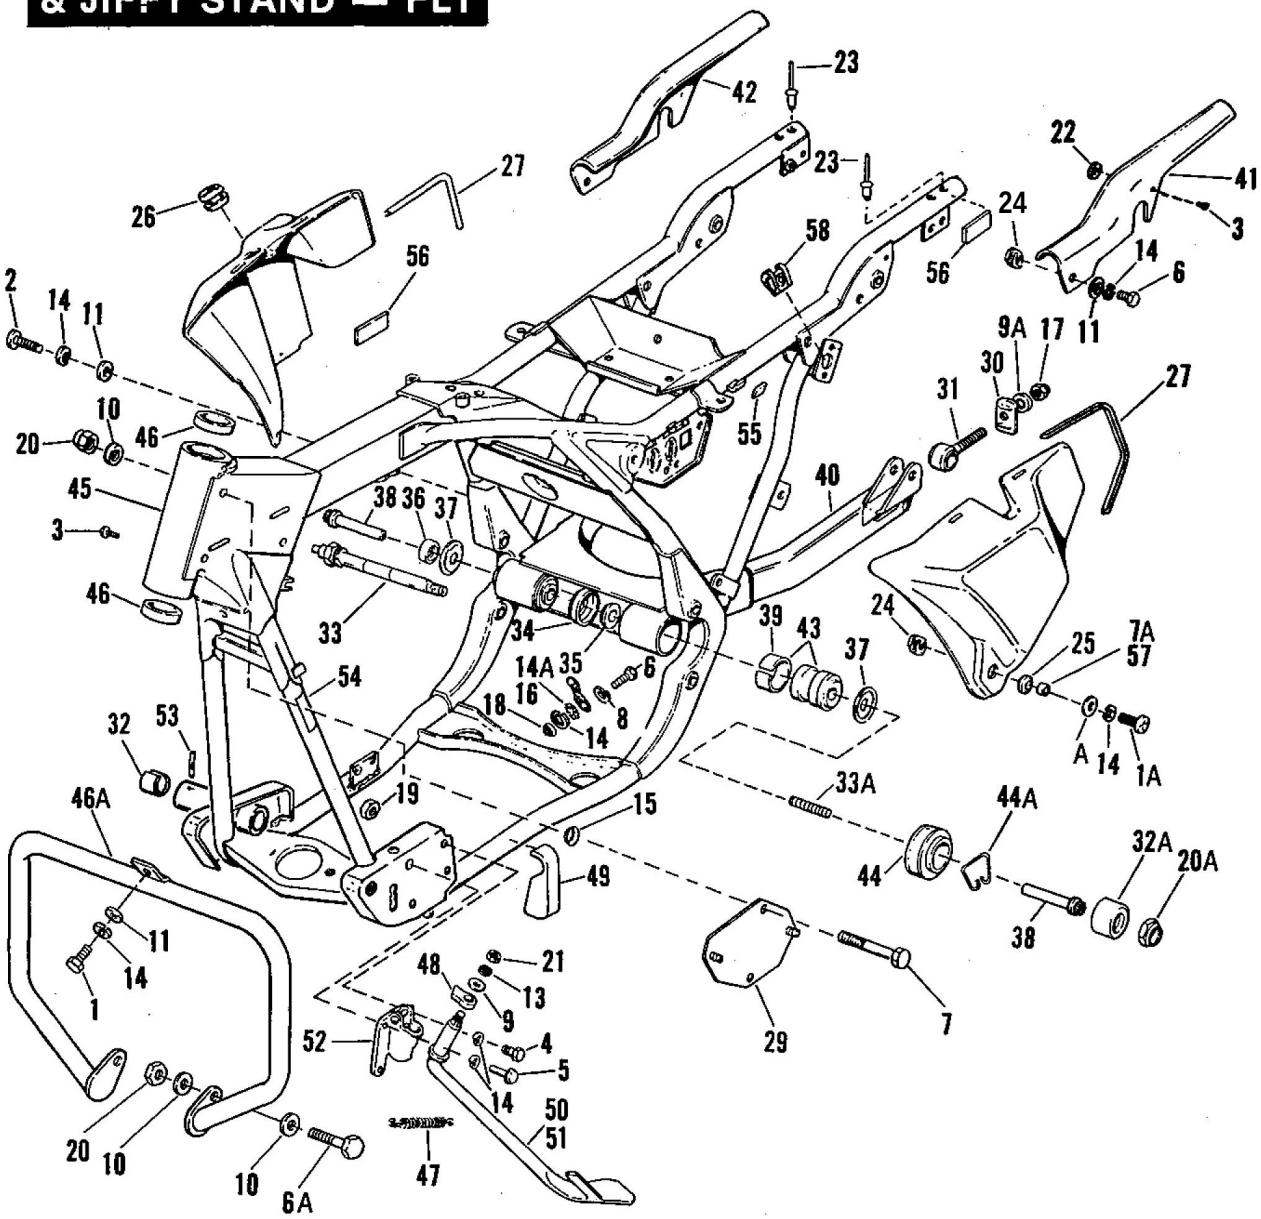


FRAME, REAR FORK AND JIFFY STAND - FLT MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	856A	SCREW (1)	Touring: 87 to 90-ALL
1A	2003	SCREW (1)	Touring: 87 to 90-ALL
2	2582	SCREW (1)	Touring: 87 to 90-ALL
3	2661W	SCREW (2)	Touring: 87 to 90-ALL
4	3960W	BOLT (2)	Touring: 87 to 90-ALL
5	3974HW	BOLT (2)	Touring: 87 to 90-ALL
6	3987	BOLT (3)	Touring: 87 to 90-ALL
6A	4337W	SCREW (2)	Touring: 87 to 90-ALL
7	4435W	BOLT (2)	Touring: 87 to 90-ALL
7A	5965B	SPACER, N/A (2)	Touring: 87 and 88-ALL
8	6016	WASHER (1)	Touring: 89 to 90-ALL
8A	6333	WASHER (1)	Touring: 87 to 90-ALL
9	6334	WASHER (1)	Touring: 87 to 90-ALL
9A	6645	WASHER (2)	Touring: 90 to 90-ALL
10	6701	WASHER (6)	Touring: 87 to 90-ALL
11	6702	WASHER (4)	Touring: 87 to 90-ALL
13	7039	LOCKWASHER (1)	Touring: 87 to 90-ALL
14	7041	LOCKWASHER (10)	Touring: 87 to 90-ALL
14A	7100	LOCKWASHER (1)	Touring: 89 to 90-ALL
15	7101	LOCKWASHER (1)	Touring: 89 to 90-ALL
15	7130W	LOCKWASHER (1)	Touring: 87 and 88-ALL
16	7232	LOCKWASHER (1)	Touring: 87 and 88-ALL
17	7725	LOCKNUT (2)	Touring: 87 to 90-ALL
18	7748W	NUT (1)	Touring: 87 to 90-ALL
19	7753	NUT (1)	Touring: 87 to 90-ALL
20	7775	LOCKNUT (4)	Touring: 87 to 90-ALL
20A	7824	LOCKNUT (1)	Touring: 89 to 90-ALL
21	7837W	NUT (1)	Touring: 87 to 89-ALL
22	8155	CLIP NUT (2)	Touring: 87 to 90-ALL
23	8307	RIVET (4)	Touring: 87 to 90-ALL
24	9959	CLIP NUT (3)	Touring: 87 to 90-ALL
25	11412	GROMMET, side cover (2)	Touring: 87 to 90-ALL
26	11436	GROMMET (1)	Touring: 87 to 90-ALL
27	29276-81	MOLDING, side cover (2)	Touring: 87 to 90-ALL
29	32451-83	BRACKET, ignition module (1)	Touring: 87 to 90-ALL
30	41112-79	END COVER, rear fork (2)	Touring: 87 to 90-ALL
31	41573-84	ADJUSTER, rear axle (2)	Touring: 87 to 90-ALL
32	47247-83	BUSHING, foot brake hub (2)	Touring: 87 to 90-ALL
32A	47491-89	CUP WASHER (1)	Touring: 89 to 90-ALL
33	47492-89A	PIVOT SHAFT KIT, w/# 20A and 32A (1)	Touring: 89 to 90-ALL
33A	47505-86	STUD, pivot, N/A (1)	Touring: 87 and 88-ALL
34	47510-80	RETAINING RING, plastic (2)	Touring: 87 to 90-ALL
35	47511-80	SPACER (2)	Touring: 87 to 90-ALL
36	47512-82	SPACER, pivot shaft-right (1)	Touring: 89 to 90-ALL
37	47513-80	WASHER, nylon (2)	Touring: 87 to 90-ALL
38	47515-86	BOLT, pivot, N/A (2)	Touring: 87 and 88-ALL
39	47538-79	TOLERANCE RING, bushing (2)	Touring: 87 to 90-ALL
40	47544-85	REAR FORK (1)	Touring: 87 to 90-ALL
41	47551-79A	COVER, left (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FRAME, REAR FORK & JIFFY STAND — FLT

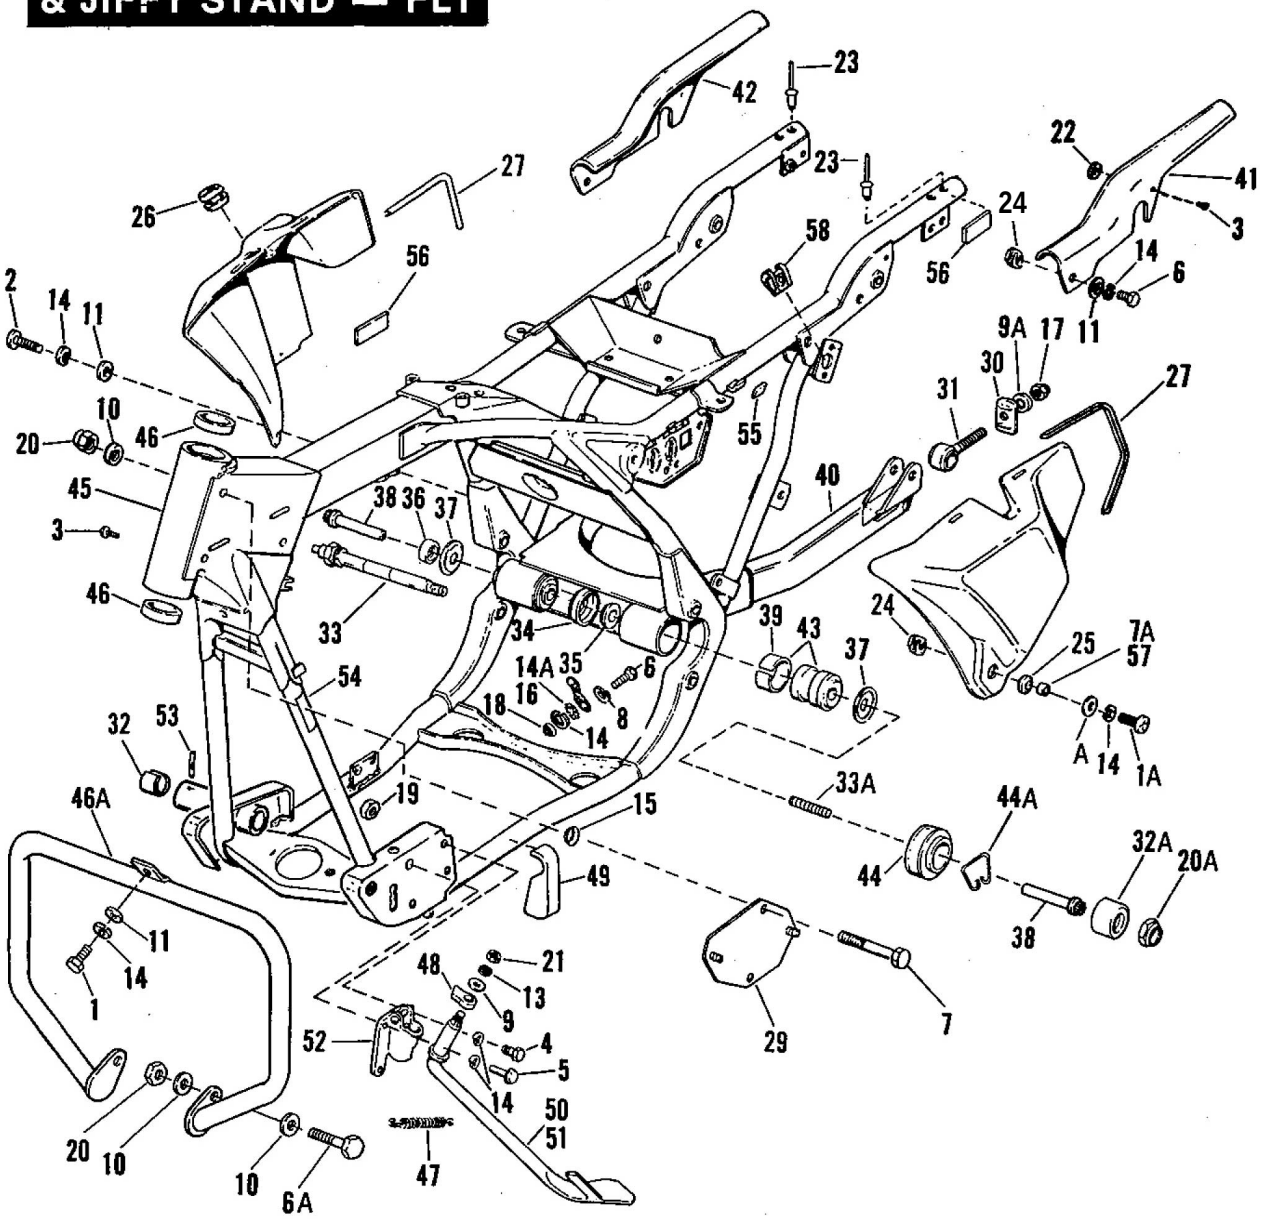


FRAME, REAR FORK AND JIFFY STAND - FLT MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
42	47552-79A	COVER, right (1)	Touring: 87 to 90-ALL
43	47556-81	BUSHING ASSY., w/#39 (2)	Touring: 87 to 90-ALL
44	47564-86	RUBBER MOUNT (2)	Touring: 87 to 90-ALL
44A	47819-87	RETAINING RING (2)	Touring: 87 and 88-ALL
45	47900-83D	FRAME, w/sidecar mount (1)	Touring: 87 and 88-ALL
45	47900-89A	FRAME, w/sidecar mount (1)	Touring: 89 to 90-ALL
46	48315-60	BEARING CUP (2)	Touring: 87 to 90-ALL
46A	49184-88	ENGINE GUARD (1)	Touring: 88 to 90-ALL
47	50011-30A	SPRING, jiffy stand (1)	Touring: 87 to 90-ALL
48	50015-74	LEG STOP (1)	Touring: 87 to 90-ALL
49	50059-85	BUMPER, jiffy stand (1)	Touring: 87 to 90-ALL
50	50074-83	JIFFY STAND ASSY., N/A (1)	Touring: 87 to 90-ALL
51	50075-83A	LEG, jiffy stand (1)	Touring: 87 to 90-ALL
52	50078-81	BRACKET, jiffy stand leg (1)	Touring: 87 to 90-ALL
53	50972-75	FITTING, lubrication (1)	Touring: 87 to 90-ALL
54	53487-87	PAD, protective (1)	Touring: 87 to 90-ALL
55	66029-80	RUBBER MOUNT, side cover (2)	Touring: 87 to 90-ALL
56	66600-84	PAD (3)	Touring: 87 to 90-ALL
57	67009-72	SPACER (2)	Touring: 89 to 90-ALL
58	70908-82	CLIP NUT (2)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
	48165-87	FRAME, w/sidecar mount (1)	Touring: 87 and 88-ALL
	48165-89A	FRAME, w/sidecar mount (1)	Touring: 89 to 90-ALL
	50025-84	SPRING, jiffy stand-inner (HDI only) (1)	Touring: 87 to 90-ALL
	50027-84	SPRING, jiffy stand-outer (HDI only) (1)	Touring: 87 to 90-ALL
	50050-84	BRACKET, jiffy stand (HDI only) (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

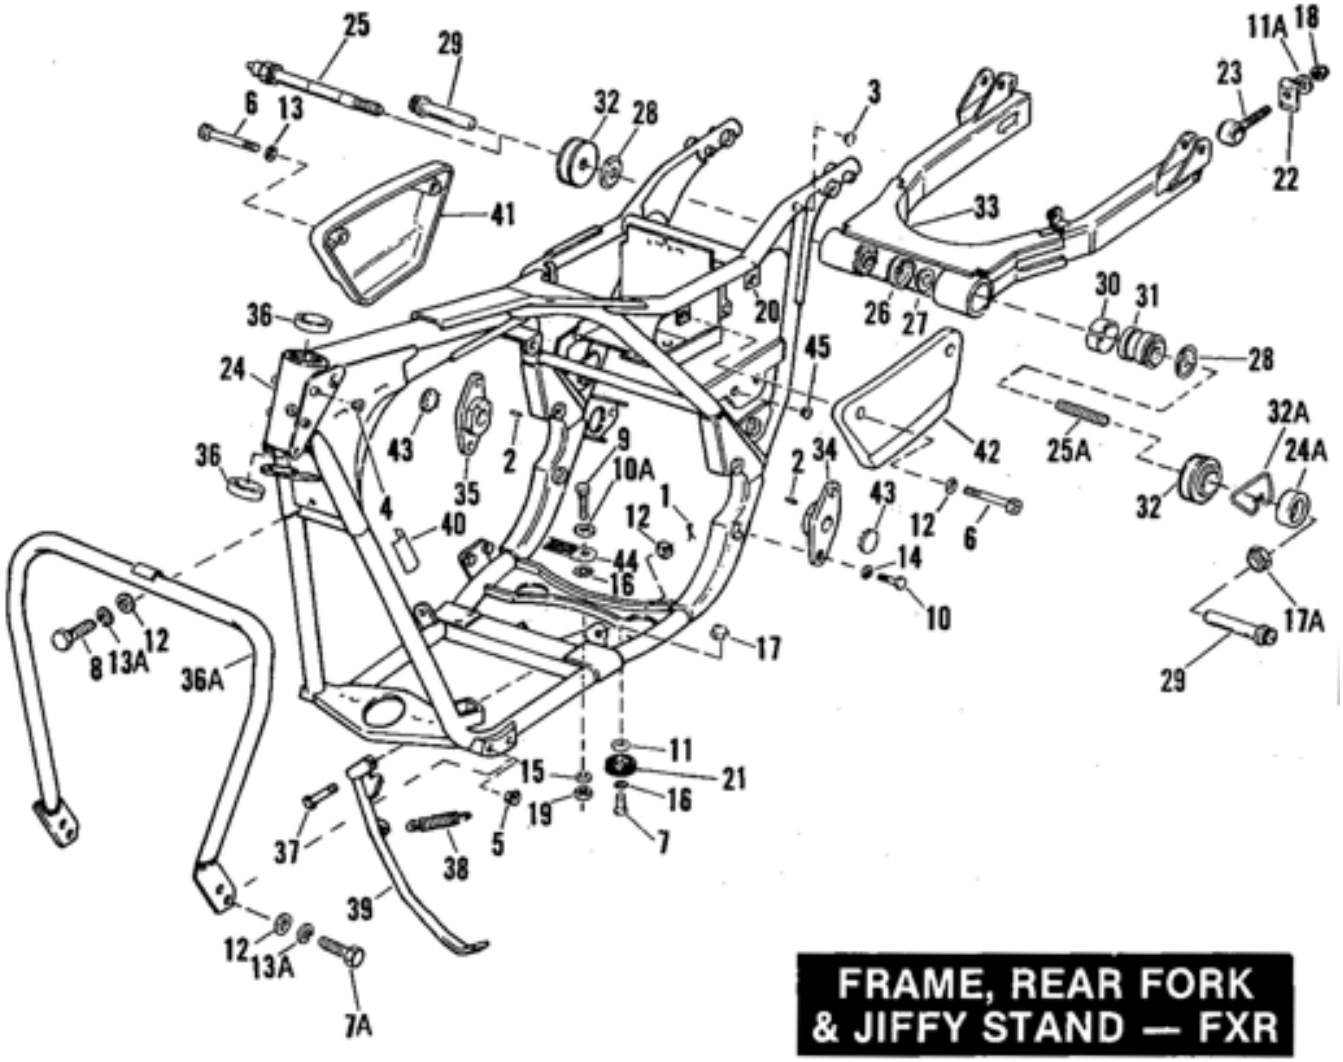


FRAME, REAR FORK & JIFFY STAND — FXR

FRAME, REAR FORK AND JIFFY STAND - FXR MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	520W	COTTER PIN (1)	FXR: 87 to 90-ALL
2	604	ROLL PIN (2)	FXR: 87 to 90-ALL
3	728	PLUG (2)	FXR: 87 to 90-EA/B/C/G/L
4	735	PLUG, fairing mtg. holes (4)	FXR: 87 to 90-EA/B/G/L/M
5	740	PLUG (4)	FXR: 87 to 90-EA/B
6	813	SCREW (4)	FXR: 87 to 90-ALL
7	2538	SCREW (1)	FXR: 87 to 90-ALL
7A	2851	BOLT (4)	FXR: 89 to 90-EC
8	2879W	BOLT (1)	FXR: 89 to 90-EC
9	3987	BOLT (1)	FXR: 87 to 90-ALL
10	3782	BOLT (4)	FXR: 87 to 90-ALL
10A	6016	WASHER (1)	FXR: 89 to 90-ALL
11	6257W	WASHER (1)	FXR: 87 to 90-ALL
11A	6645	WASHER (2)	FXR: 90 to 90-ALL
12	6701	WASHER, 6-1989 and Later-EC (1)	FXR: 87 to 90-ALL
13	6703	WASHER (4)	FXR: 87 to 90-ALL
13A	7038	LOCKWASHER (5)	FXR: 89 to 90-EC
14	7039	LOCKWASHER (4)	FXR: 87 to 90-ALL
15	7041	LOCKWASHER (1)	FXR: 87 to 90-ALL
16	7100	LOCKWASHER (1)	FXR: 89 to 90-ALL
16	7232	LOCKWASHER (1)	FXR: 87 and 88-ALL
17	7686	LOCKNUT (1)	FXR: 87 to 90-ALL
17A	7824	LOCKNUT (1)	FXR: 89 to 90-ALL
18	7725	LOCKNUT (2)	FXR: 87 to 90-ALL
19	7748W	NUT (1)	FXR: 87 to 90-ALL
20	8099	WELL NUT (4)	FXR: 87 to 90-ALL
21	11451	BUMPER, jiffy stand (1)	FXR: 87 to 90-ALL
22	41112-79	END COVER, rear fork (2)	FXR: 87 to 90-ALL
23	41570-77	ADJUSTER, rear fork (1)	FXR: 87 to 90-ALL
24	47005-87	FRAME (1)	FXR: E87-EA/B/C
24	47201-87	FRAME (1)	FXR: E87-EG/L
24	47203-87	FRAME (1)	FXR: L87-EA/B/C
24	47205-87B	FRAME (1)	FXR: L87 to 90-EG/L; 88 to 90-EA/B/C/M
24A	47491-89	CUP WASHER (1)	FXR: 89 to 90-ALL
25	47492-89A	PIVOT SHAFT KIT, w/# 17A and 24A (1)	FXR: 89 to 90-ALL
25A	47505-86	STUD, pivot, N/A (1)	FXR: 87 and 88-ALL
26	47510-80	RETAINING RING, plastic (2)	FXR: 87 to 90-ALL
27	47511-80	SPACER (2)	FXR: 87 to 90-ALL
28	47513-80	WASHER, nylon (2)	FXR: 87 to 90-ALL
29	47515-86	BOLT, pivot, N/A (2)	FXR: 87 and 88-ALL
30	47538-79	TOLERANCE RING, bushing (2)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

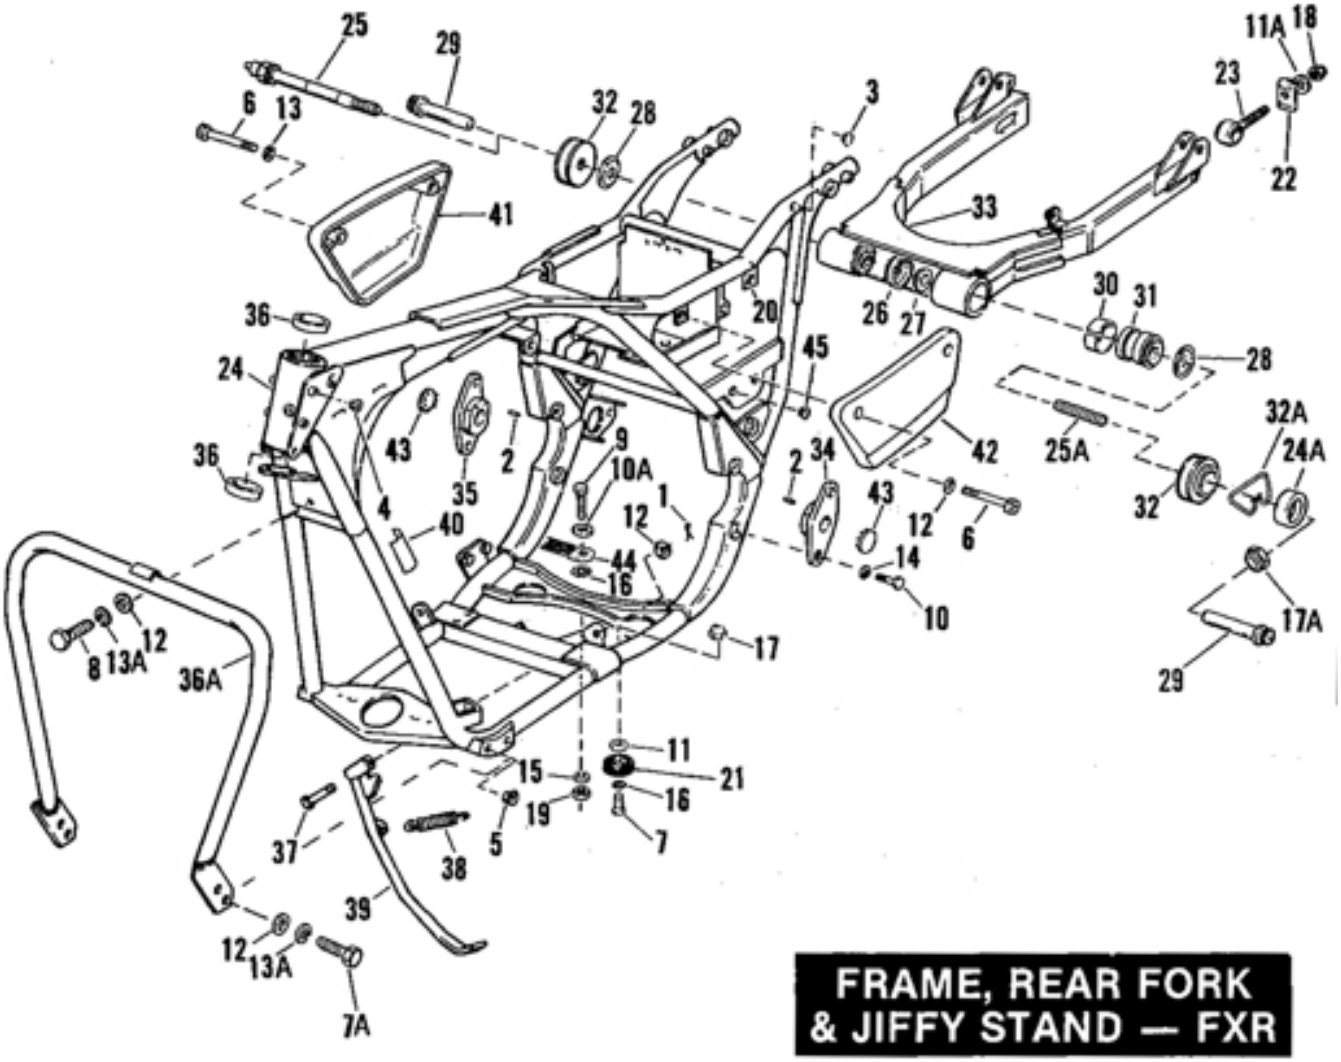


FRAME, REAR FORK & JIFFY STAND — FXR

FRAME, REAR FORK AND JIFFY STAND - FXR MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	47556-81	BUSHING ASSY., w/#30 (2)	FXR: 87 to 90-ALL
32	47564-86	MOUNT, rear fork (2)	FXR: 87 to 90-ALL
32A	47819-87	RETAINING RING (2)	FXR: 87 and 88-ALL
33	47820-81A	REAR FORK (1)	FXR: 87 to 90-ALL
34	47825-81	END CAP, left (1)	FXR: 87 to 90-ALL
35	47826-81	END CAP, right (1)	FXR: 87 to 90-ALL
36	48315-60	BEARING CUP (2)	FXR: 87 to 90-ALL
36A	49017-82A	ENGINE GUARD KIT, w/7A, 12 and 13A (1)	FXR: 89 to 90-EC
37	50009-82	PIN (1)	FXR: 87 to 90-ALL
38	50011-30A	SPRING (1)	FXR: 87 to 90-ALL
39	50031-84A	JIFFY STAND (1)	FXR: 87-EA/B/L
39	50069-86	JIFFY STAND (1)	FXR: 87 to 90-EC/G/M
40	53487-87	PAD, protective (1)	FXR: 87 to 90-ALL
41	66349-84	SIDE COVER, right (1)	FXR: 87 to 90-ALL
42	66350-84	SIDE COVER, left (1)	FXR: 87 to 90-ALL
43	67865-89	PLUG (2)	FXR: 87 to 90-ALL
44	70186-82	GROUND STRAP (1)	FXR: 87 to 90-ALL
45	90493-83	PLUG (2)	FXR: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
24	47202-87	FRAME, HDI only (1)	FXR: E87-EG/L
24	47204-87	FRAME, HDI only (1)	FXR: L87-EA/B/C
24	47206-87B	FRAME, HDI only (1)	FXR: L87-EG/L; 88 to 90-ALL
24	48036-87	FRAME, HDI only (1)	FXR: E87-EA/B/C
	50010-84	SPRING, jiffy stand (HDI only) (2)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

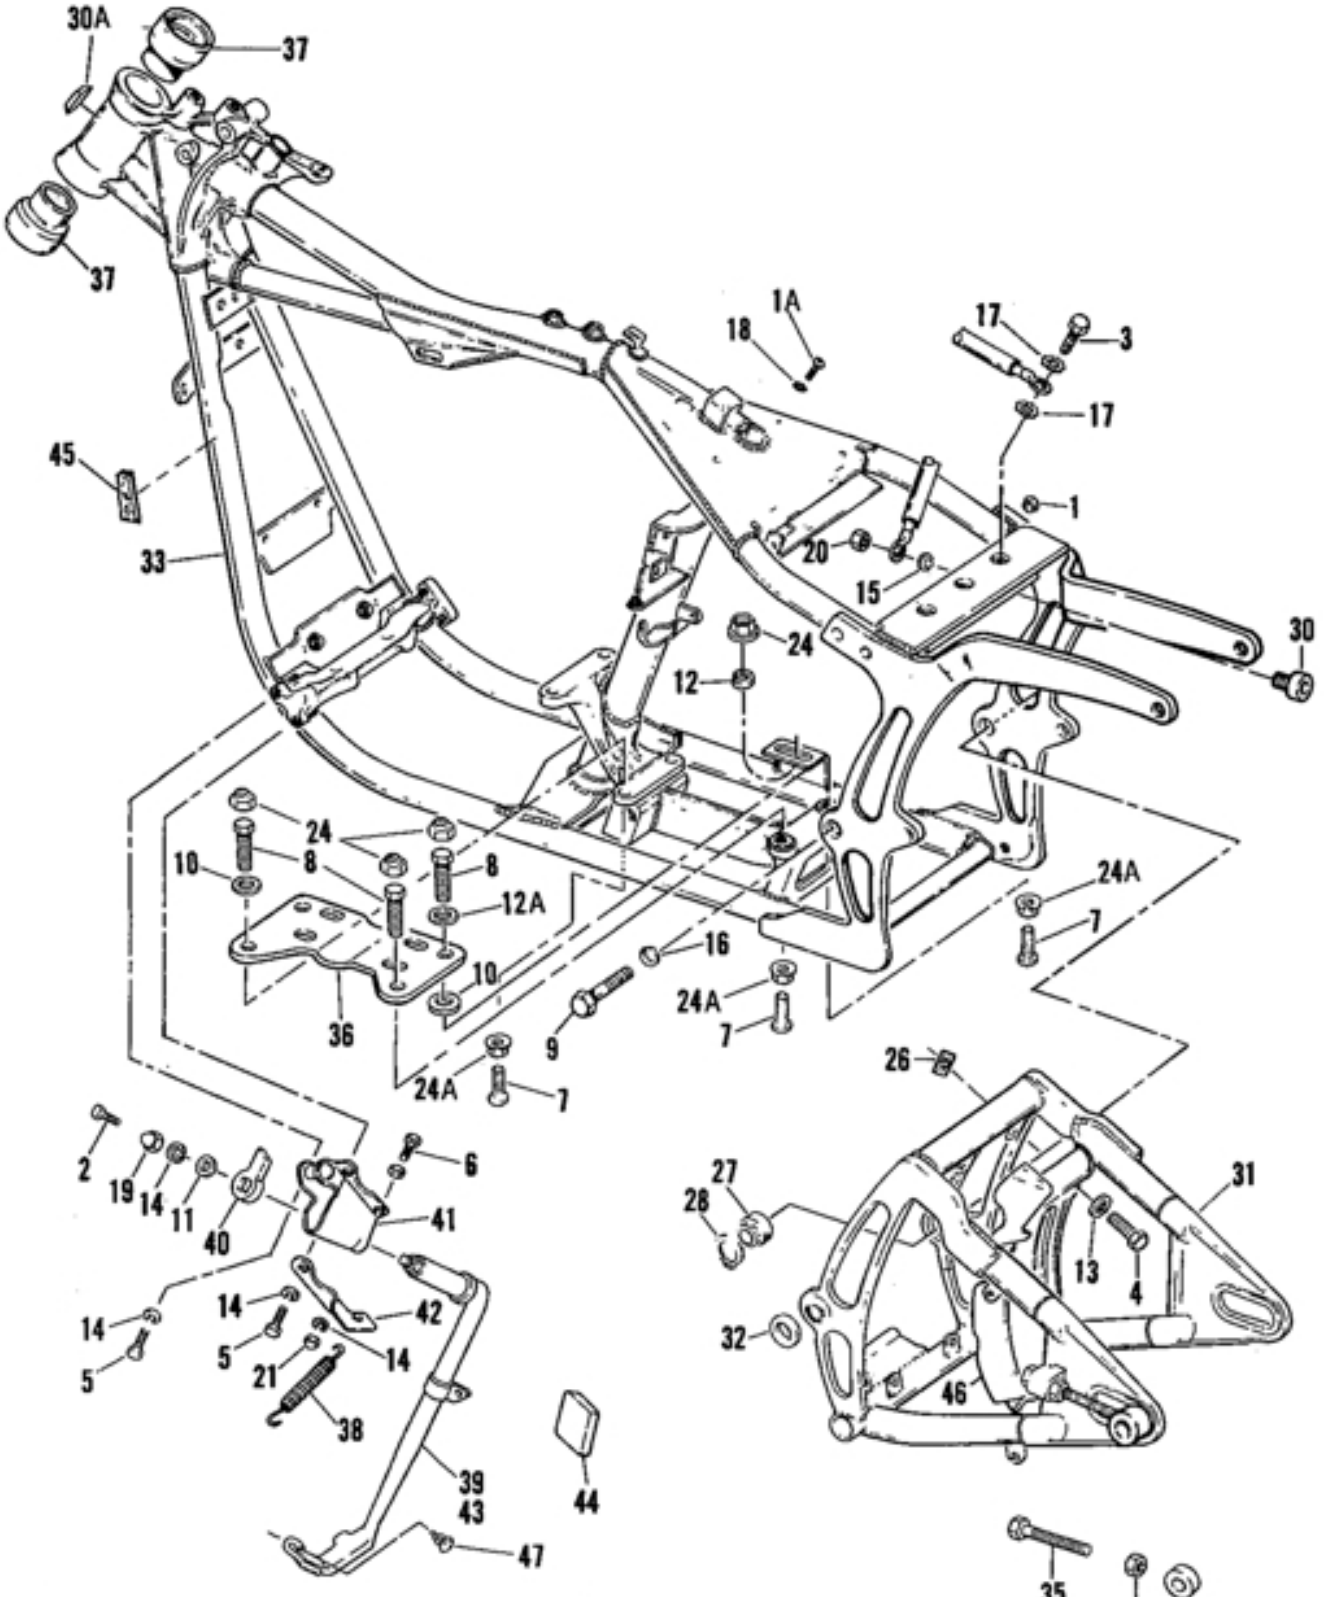


FRAME, REAR FORK & JIFFY STAND — SOFTAIL

FRAME, REAR FORK AND JIFFY STAND - SOFTAIL MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	728	PLUG, frame side (2)	Softail: 87 to 89-ALL; 90 to 90-BH/K/L
1A	2770W	SCREW, ground wire (1)	Softail: 89 to 90-ALL
2	2882W	SCREW (1)	Softail: 87 and 88-BJ; 89 to 90-ALL
3	3440	BOLT (1)	Softail: 87 and 88-BJ
4	3767B	BOLT (4)	Softail: 87 to 90-BJ
5	3960W	BOLT (3)	Softail: 87 to 90-ALL
6	3974HW	BOLT (2)	Softail: 87 to 90-ALL
7	4013	SCREW (4)	Softail: 89 to 90-ALL
8	4337W	SCREW (4)	Softail: 87 and 88 to 90-ALL
9	4961	BOLT (2)	Softail: 87 to 90-ALL
10	6019	WASHER (1)	Softail: 87 and 88-ALL
11	6334	WASHER (1)	Softail: 87 and 88-BH/K
11	6702	WASHER (1)	Softail: 87 and 88-BJ/L; 89 to 90-ALL
12	6474	WASHER (1)	Softail: 87 to 90-BH/K
12A	6701	WASHER (1)	Softail: 87 to 90-ALL
13	6703	WASHER (4)	Softail: 87 to 90-BH/K/L
14	7039	LOCKWASHER (1)	Softail: 87 and 88-BH/K
14	7041	LOCKWASHER, 5-BJ/L (4)	Softail: 87 to 90-ALL
15	7124	LOCKWASHER (1)	Softail: 87 to 90-ALL
16	7142	LOCKWASHER (2)	Softail: 87 to 90-ALL
17	7145W	LOCKWASHER (2)	Softail: 87 and 88-ALL
18	7230	LOCKWASHER (1)	Softail: 89 to 90-ALL
19	7513	ACORN NUT (1)	Softail: 87 and 88-BH/K
20	7689W	JAMNUT (2)	Softail: 87 to 90-ALL
21	7736	ACORN NUT, chrome (3)	Softail: 87 to 90-BH/K/L
21	7753	NUT, jiffy stand (3)	Softail: 87 to 90-BJ
24	7778	LOCKNUT (4)	Softail: 89 to 90-ALL
24A	7782	LOCKNUT (5-1987 and 1988) (1)	Softail: 87 to 90-ALL
25	7783	NUT, rear axle adj. (2)	Softail: 87 to 90-ALL
26	8108	SPEEDNUT (4)	Softail: 87 to 90-ALL
27	9076	BEARING, rear fork pivot (2)	Softail: 87 to 90-ALL
28	11158	RETAINING RING, fork bearing (2)	Softail: 87 to 90-ALL
30	11451	CUSHION (2)	Softail: 87 to 90-ALL
30A	11456	BUMPER (1)	Softail: 89 to 90-BL
31	41549-87A	REAR FORK, w/#27 and 28 (red) (1)	Softail: L87 and 88-BK
31	41549-89	REAR FORK, w/#27 and 28 (red), N/A (1)	Softail: 89 to 90-BK
31	41556-87	REAR FORK, w/#27 and 28 (blue) (1)	Softail: E87-BK
31	41559-87	REAR FORK, w/# 27 and 28 (red), N/A (1)	Softail: E87-BK
31	47573-86	REAR FORK, w/# 27 and 28 (black) (1)	Softail: E87-ALL
31	47573-87A	REAR FORK, w/# 27 and 28 (black) (1)	Softail: L87 and 88-BK/L
31	47573-89A	REAR FORK, w/# 27 and 28 (black) (1)	Softail: 89 to 90-ALL
31	47813-89	REAR FORK, w/#27 and 28 (silver) (1)	Softail: 90 to 90-BM
31	47815-87A	REAR FORK, w/#27 and 28 (blue), N/A (1)	Softail: L87 and 88-BK
31	47815-89	REAR FORK, w/#27 and 28 (blue) (1)	Softail: 89 to 90-BK
32	43283-86	SPACER, rear fork pivot (2)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

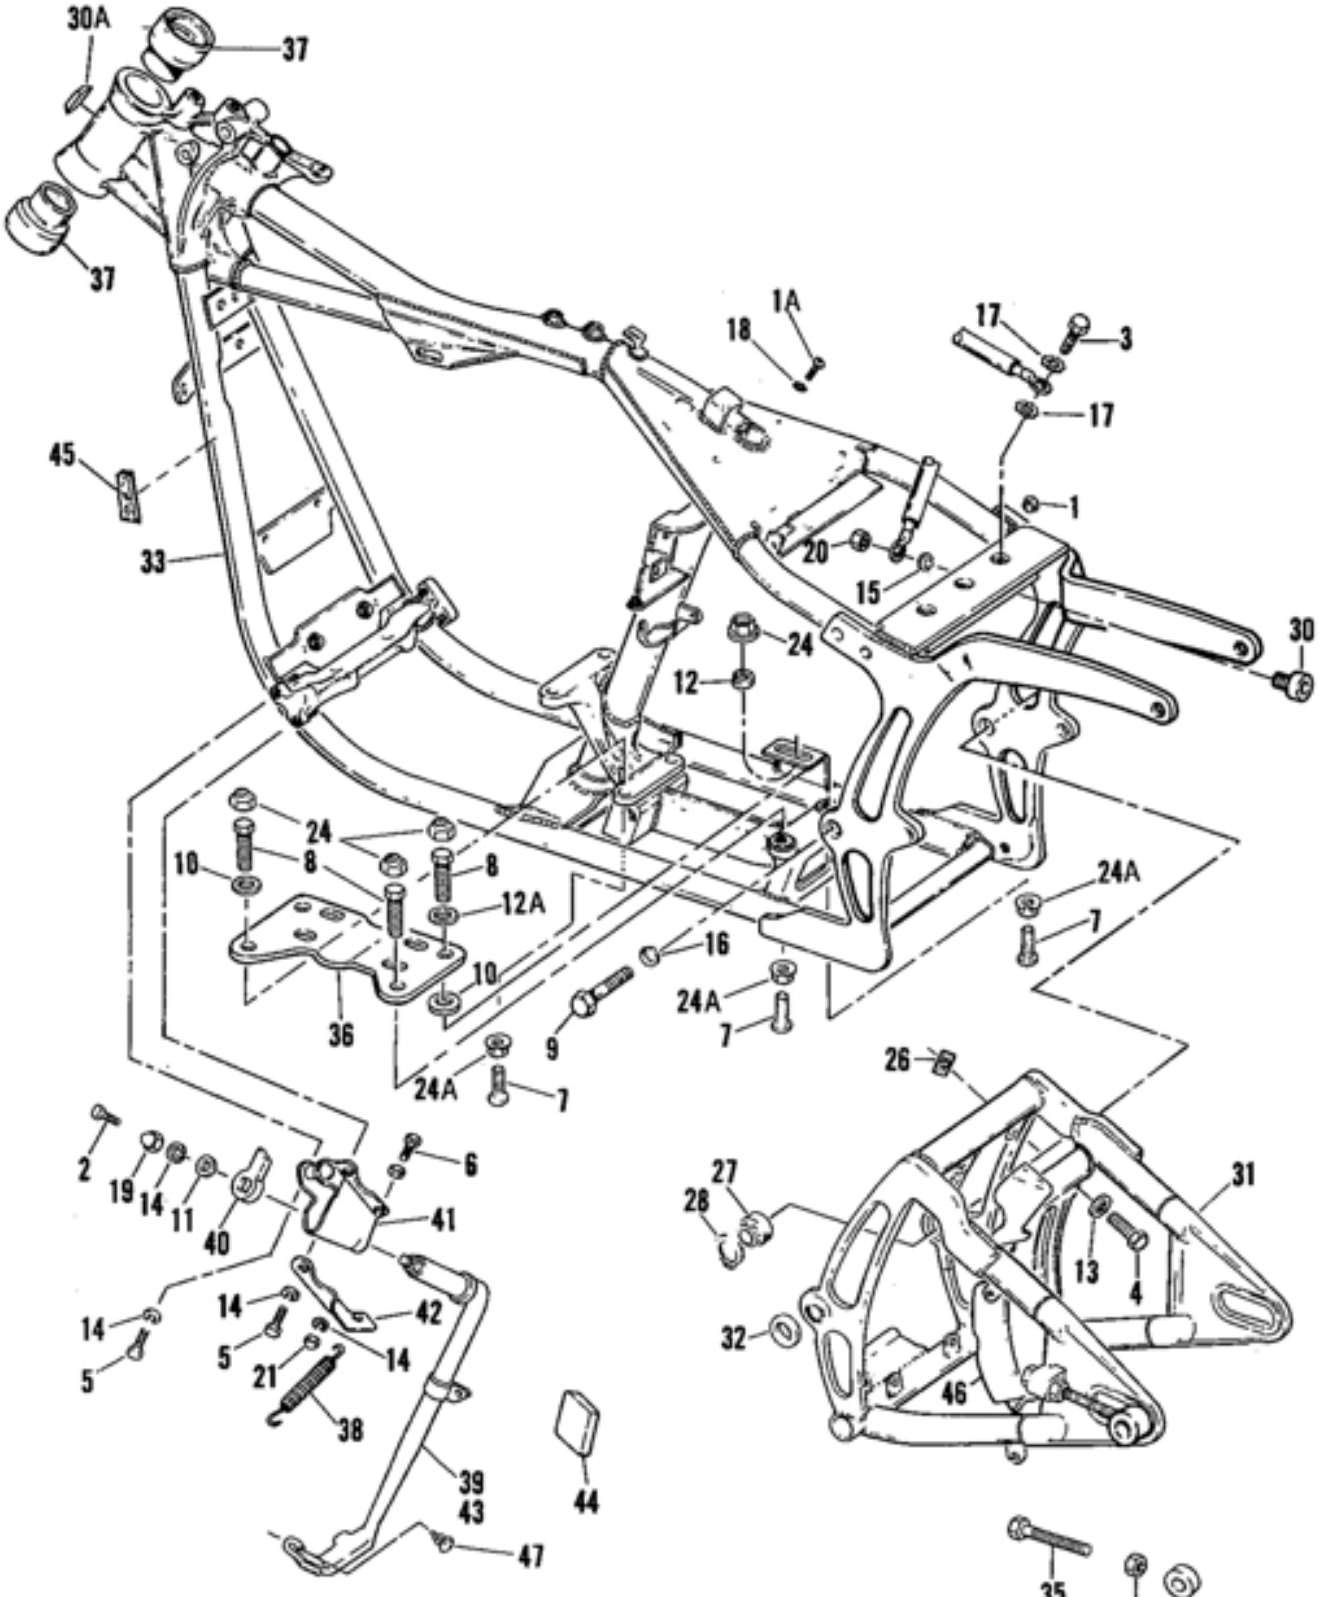


FRAME, REAR FORK & JIFFY STAND — SOFTAIL

FRAME, REAR FORK AND JIFFY STAND - SOFTAIL MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	47008-87A	FRAME, black (1)	Softail: 87 and 88-ALL
33	47008-89A	FRAME, black (1)	Softail: 89 to 90-ALL
33	47175-87A	FRAME, red (1)	Softail: 87 and 88-BK
33	47175-89A	FRAME, red (1)	Softail: 89 to 90-BK
33	47176-87A	FRAME, blue (1)	Softail: 87 and 88-BK
33	47176-89A	FRAME, blue (1)	Softail: 89 to 90-BK
33	47279-89	FRAME, silver (1)	Softail: 90 to 90-BM
34	47577-86	SPACER, rear axle adj. (2)	Softail: 87 to 90-ALL
35	47579-86	ADJUSTING SCREW, rear axle (2)	Softail: 87 to 90-ALL
36	47698-86B	TRANSMISSION MOUNTING PLATE (1)	Softail: 87 to 90-ALL
37	48311-60	BEARING CUP, frame (2)	Softail: 87 and 88-ALL
37	48315-60	BEARING CUP (2)	Softail: 87 to 90-ALL
38	50005-85A	SPRING, jiffy stand leg (1)	Softail: 87 to 90-ALL
39	50007-86	JIFFY STAND ASSY., chrome, N/A (1)	Softail: 87 and 88-BJ/L
40	50015-74	LEG STOP (1)	Softail: 87 to 90-ALL
41	50018-85	LEG BRACKET, chrome (1)	Softail: 87 and 88-BJ/L; 89 to 90-ALL
41	50041-85	LEG BRACKET, chrome (1)	Softail: 87 and 88-BH/K
42	50028-74A	BRACKET, spring (chrome) (1)	Softail: 87 to 90-ALL
43	50061-85	LEG, jiffy stand (chrome) (1)	Softail: 87 and 88-BH/K
43	50087-86	LEG, jiffy stand (chrome) (1)	Softail: 87 and 88-BJ/L
43	50087-89A	LEG, jiffy stand (chrome) (1)	Softail: 89 to 90-ALL
44	50100-70	BUMPER, jiffy stand (1)	Softail: 87 and 88-ALL
45	59258-88	REFLECTOR, amber (2)	Softail: L88 to 90-BL
45	59265-90	REFLECTOR, amber (2)	Softail: 90 to 90-BL/M
46	60363-86A	DEBRIS DEFLECTOR (1)	Softail: 87 and 88-ALL
46	60363-86B	DEBRIS DEFLECTOR (1)	Softail: 89 to 90-ALL
47	62123-66	BUMPER (1)	Softail: 89 to 90-ALL
		INTERNATIONAL MODELS ONLY	
33	47173-87A	FRAME KIT W/LWR FORK BKT, red (HDI only), N/A (1)	Softail: 87-BK
	47173-88A	FRAME, red (HDI only), N/A (1)	Softail: 88-BK
	47173-89A	FRAME, red (HDI only) (1)	Softail: 89 to 90-BK
	47174-87A	FRAME KIT W/LWR FORK BKT, blue (HDI only), N/A (1)	Softail: 87-BK
	47174-88A	FRAME, blue (HDI only) (1)	Softail: 88-BK
	47174-89A	FRAME, blue (HDI only), N/A (1)	Softail: 89 to 90-BK
	47280-89	FRAME, silver (HDI only) (1)	Softail: 90 to 90-BM
	48130-87A	FRAME KIT W/LWR FORK BKT, black (HDI only) (1)	Softail: 87-BH/K
	48130-88A	FRAME, black (HDI only), N/A (1)	Softail: 88-ALL
	48130-89A	FRAME, black (HDI only) (1)	Softail: 89 to 90-BH/J/K/L
	48131-87	FRAME KIT W/LWR FORK BKT, HDI, N/A (1)	Softail: 87-BJ
	50025-84	SPRING, jiffy stand-inner (HDI only) (1)	Softail: 87 to 90-ALL
	50027-84	SPRING, jiffy stand-outer (HDI only) (1)	Softail: 87 to 90-ALL
	50034-84	BRACKET, jiffy stand (HDI only) (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

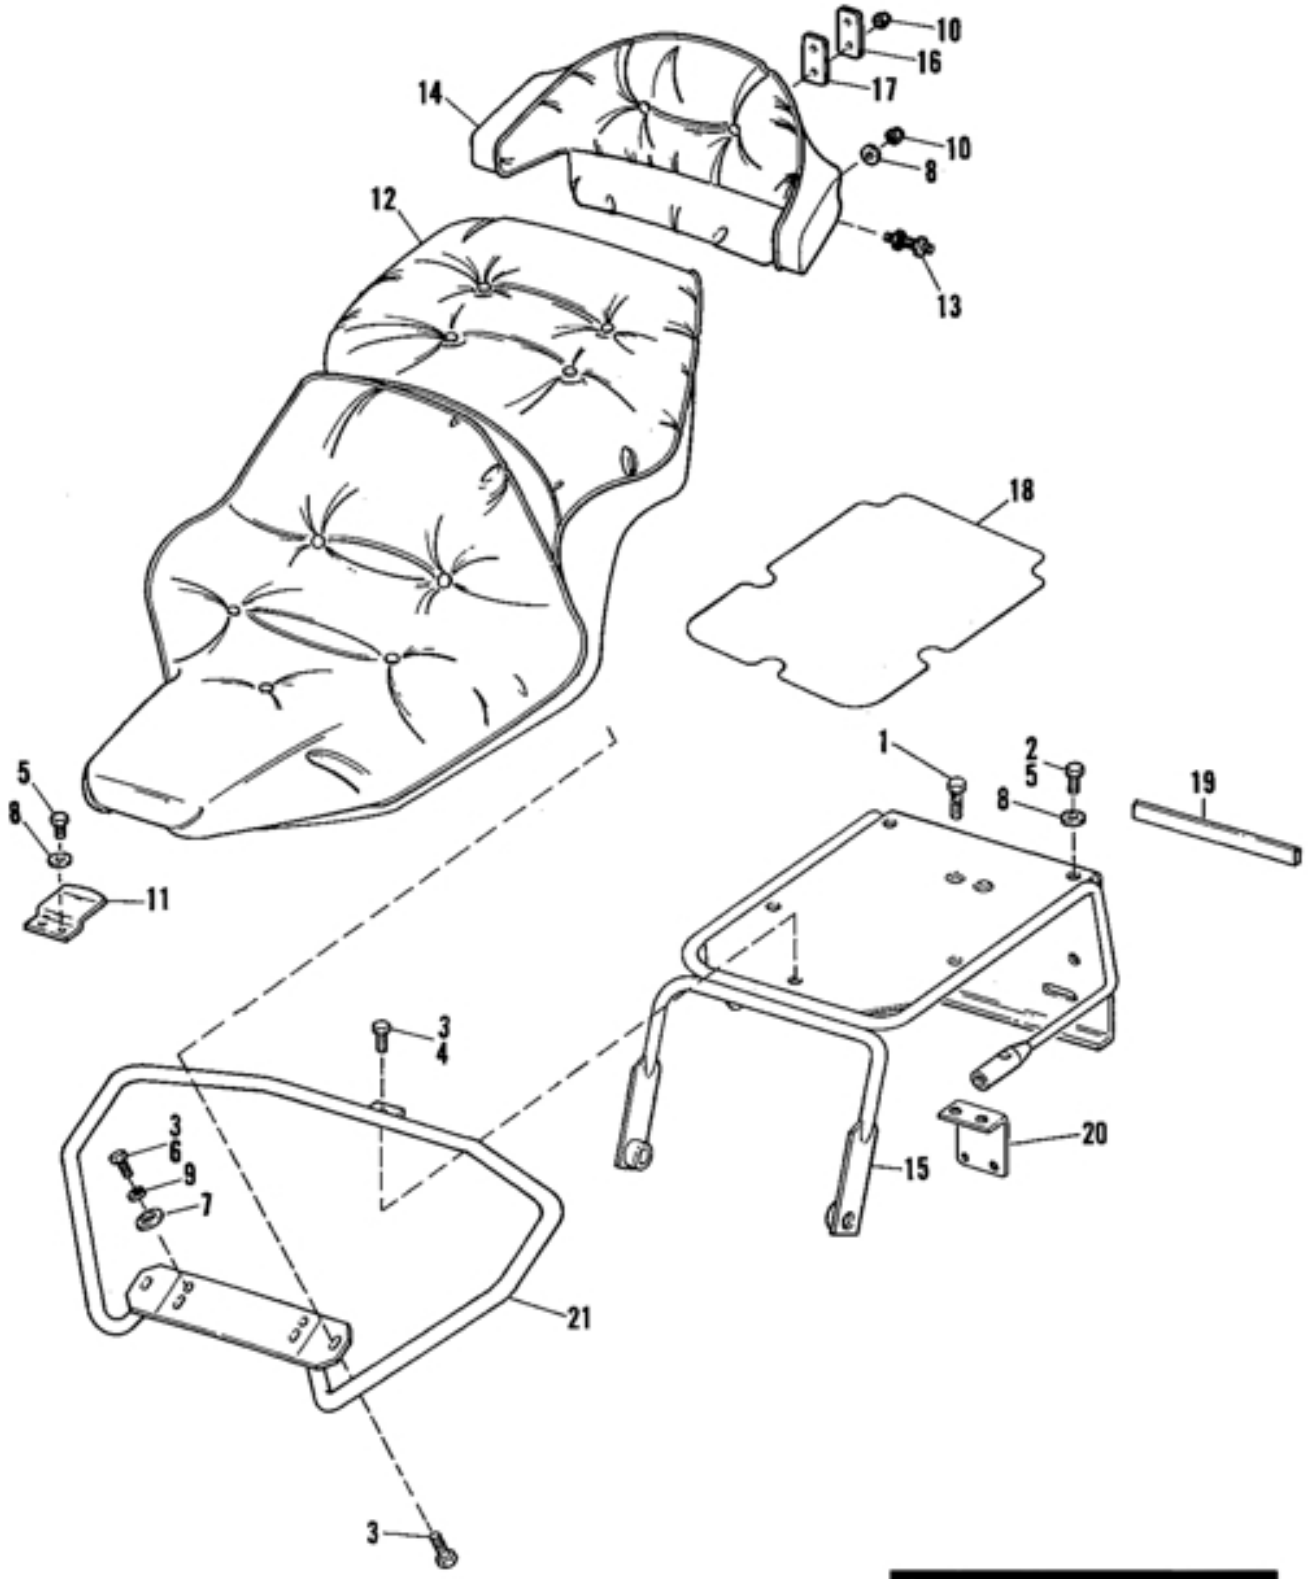


SEAT & LUGGAGE RACK — FLT

SEAT AND LUGGAGE RACK - FLT MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2401	SCREW (2)	Touring: 89 to 90-DM/P
2	2773	SCREW (4)	Touring: 87 to 90-FA
3	3487	BOLT, flange (2-87) (5)	Touring: 87 to 90-ALL
4	2882W	SCREW (1)	Touring: 87 to 90-ALL
5	3787	BOLT, 6-87 (4)	Touring: 87 to 90-ALL
6	4391	BOLT (2)	Touring: 87 to 90-ALL
7	6702	WASHER (2)	Touring: 87 to 90-ALL
8	6703	WASHER, 2-FA (10)	Touring: 87 and 88-ALL
9	7232	LOCKWASHER (4)	Touring: 87 and 88-ALL
10	7686	LOCKNUT (6)	Touring: 87 to 90-DB/D/J
11	47374-83A	BRACKET, seat mtg.-front (1)	Touring: 87 to 90-ALL
12	52151-86A	SEAT, black (1)	Touring: 87 and 88-DB
12	52151-89	SEAT, black (1)	Touring: 89 to 90-DB/M
12	52164-86A	SEAT, black (1)	Touring: 87 and 88-DD/J, FA
12	52164-89	SEAT, black (1)	Touring: 89 to 90-DJ/P, FA
12	52177-86A	SEAT, brown (1)	Touring: 87 and 88-DB
12	52177-89	SEAT, brown (1)	Touring: 89 to 90-DB
12	52231-86A	SEAT, brown (1)	Touring: 87 and 88-DJ
12	52231-89	SEAT, brown (1)	Touring: 89-DJ
13	52192-86A	ISOLATOR, backrest (set of 3) (1)	Touring: 87 to 90-DB/D/J/M/P
14	52201-86B	BACKREST KIT, black (1)	Touring: 87 to 90-DB/D/J/M/P
14	52219-86B	BACKREST KIT, brown (1)	Touring: 87 to 90-DB/J
15	53411-86A	LUGGAGE CARRIER (1)	Touring: 87 to 90-ALL
16	53515-86	BACKING PLATE (1)	Touring: 87 to 90-DB/D/J/M/P
17	53517-86	CUSHION PLATE (1)	Touring: 87 to 90-DB/D/J/M/P
18	53521-87A	COVER, luggage rack (1)	Touring: 87 to 90-FA
19	59988-72	REFLECTOR, red (1)	Touring: 87 to 90-ALL
20	76284-89	BRACKET, transceiver (1)	Touring: 89 to 90-DM/P
21	91583-86	HANDRAIL, passenger (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

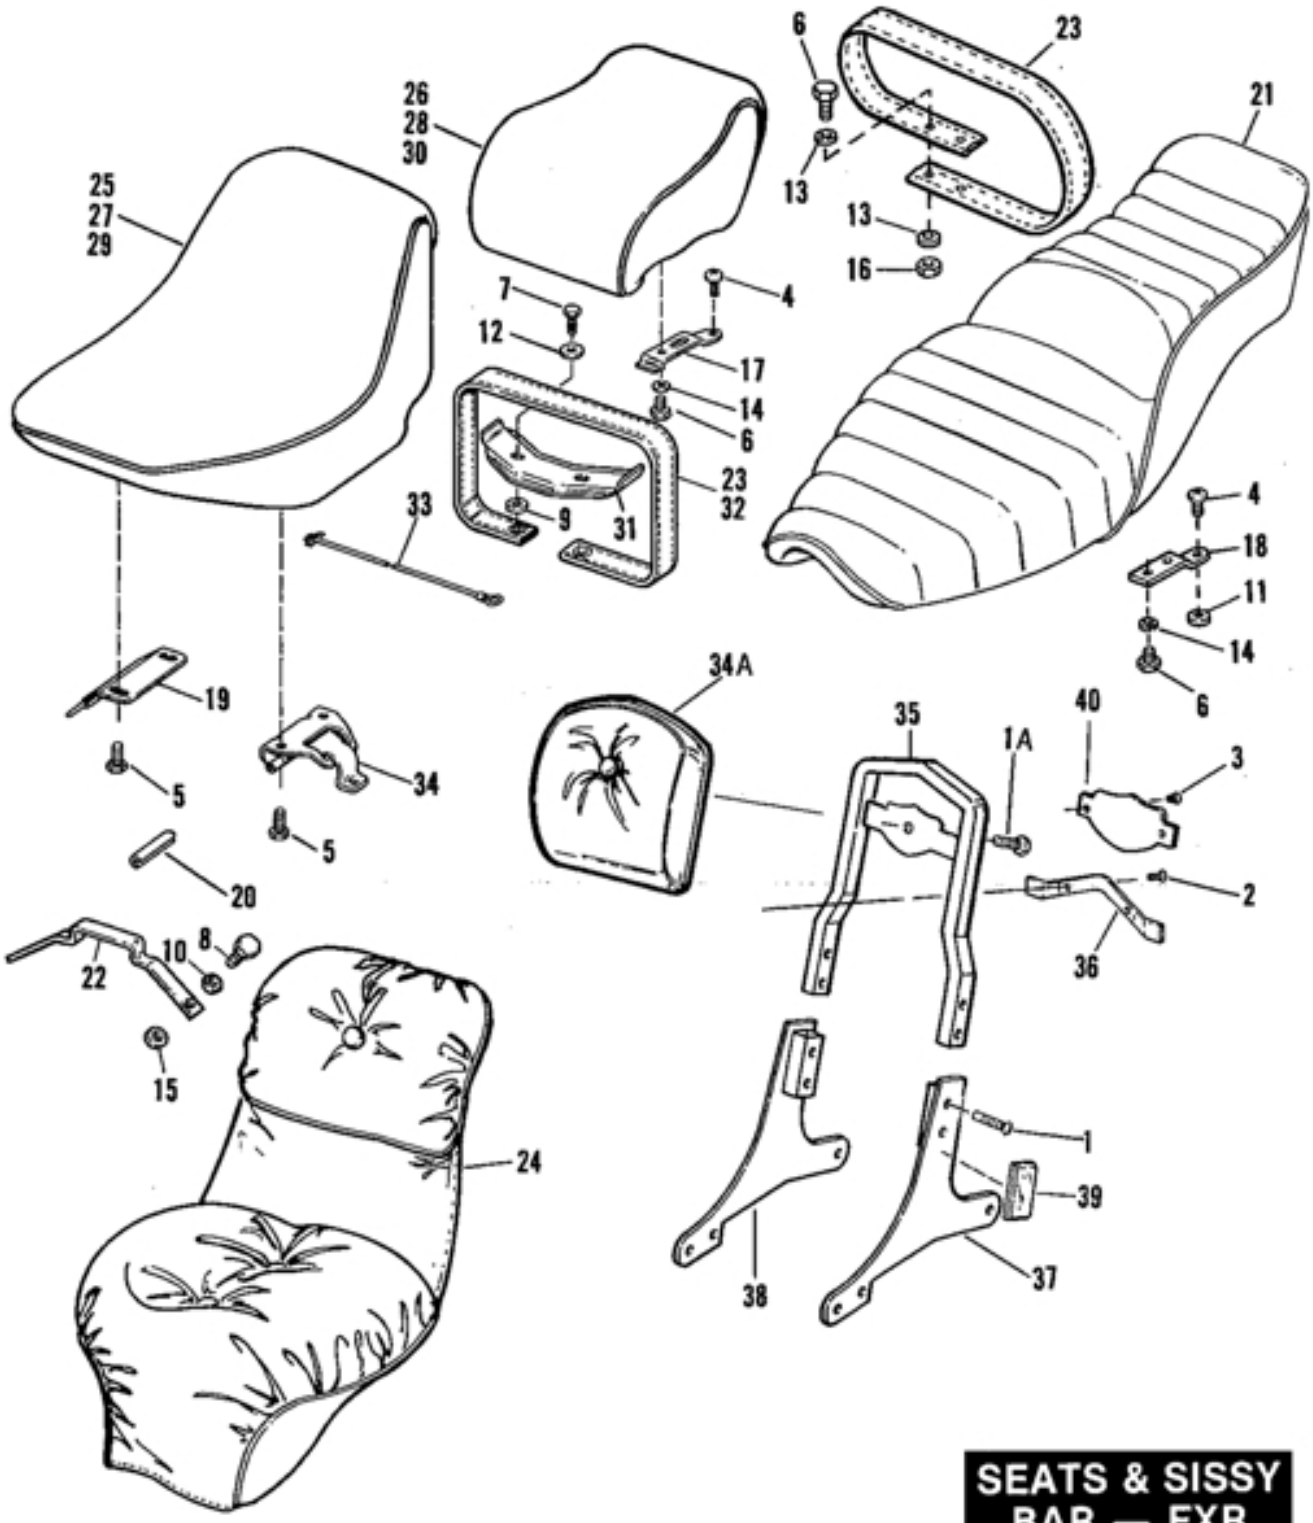


SEATS & SISSY BAR — FXR

SEATS AND SISSY BAR - FXR MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	919	SCREW (4)	FXR: 87 to 90-EC/M
1A	1602	SCREW (1)	FXR: L89 to 90-EM
2	2607	SCREW (2)	FXR: 87 to 90-EC/M
3	2711	SCREW (2)	FXR: 87 to 90-EC/M
4	2733	SCREW (1)	FXR: 87 to 90-EA
4	2739	SCREW (1)	FXR: 90 to 90-EB/C/G/L/M
4	2757W	SCREW (1)	FXR: 87 to 89-EB/C/G/L/M
5	3487	BOLT (4)	FXR: 87 to 90-ALL
6	3767B	BOLT (2)	FXR: 87 to 90-EA/B/G/L/M
7	3960W	BOLT (2)	FXR: 87 to 90-EB/G/L/M
7	3996	BOLT (2)	FXR: 87 to 90-EC
8	3991	BOLT (2)	FXR: 87 to 90-EA
9	5724	SPACER (2)	FXR: 87 to 90-EB/G/L/M
10	6109	WASHER (2)	FXR: 87 to 90-EA
11	6410	WASHER (1)	FXR: 87 to 90-EC
12	6645	WASHER (2)	FXR: 87 to 90-EB/G/L/M
13	6703	WASHER (2)	FXR: 87 to 90-EA
14	7036	WASHER (2)	FXR: 87 to 90-EA/B/G/L/M
15	7232	LOCKWASHER (2)	FXR: 87 to 90-EA
16	7686	LOCKNUT (1)	FXR: 87 to 90-EA
17	51651-79	BRACKET, rear seat (1)	FXR: 87 to 90-EB/G/L/M
18	51652-83	BRACKET, rear seat (1)	FXR: 87 to 90-EA/C
19	52020-82	BRACKET ASSY. (1)	FXR: 87 to 90-EB/C/G/L/M
20	52041-82	PIN, seat hinge (1)	FXR: 87 to 90-EB/C/G/L/M
21	52106-86	SEAT, ribbed (black vinyl) (1)	FXR: 87 to 90-EA
22	52107-86	BRACKET, seat (1)	FXR: 87 to 90-EA
23	52108-86	PASSENGER STRAP (1)	FXR: 87 to 90-EA
24	52111-85A	SEAT, pillow-look-rear (black vinyl) (1)	FXR: 87 to 90-EC
25	52128-87	SEAT, plain-front (black vinyl) (1)	FXR: 87 to 90-EG
26	52133-87	SEAT, embossed-rear (black vinyl) (1)	FXR: 87 to 90-EL
27	52134-87	SEAT, embossed-front (black vinyl) (1)	FXR: 87 to 90-EL
28	52135-87	SEAT, plain-rear (black vinyl) (1)	FXR: 87 to 90-EG
29	52138-82A	SEAT, pillow-look-front (black vinyl) (1)	FXR: 87 to 90-EB/C/M
30	52139-82	SEAT, pillow-look-rear (black vinyl) (1)	FXR: 87 to 90-EB/M
31	52141-82	BRACKET, passenger strap (1)	FXR: 87 to 90-EB/G/L/M
32	52142-82A	PASSENGER STRAP (1)	FXR: 87 to 90-EB/G/L
33	52213-82	CORD, seat stop (1)	FXR: 87 to 90-EB/C/G/L
34	52355-82	LATCH, seat (1)	FXR: 87 to 90-EB/C/G/L
34A	52545-84	BACKREST KIT, w/#1A and 36 (1)	FXR: L89 to 90-EM
35	52739-83	SISSY BAR KIT, w/#1 (1)	FXR: L89 to 90-EM
35	52766-85	SISSY BAR (1)	FXR: 87 to 90-EC
36	52765-85	BRACKET, backrest (1)	FXR: 87 to 90-EC
36	52771-82	BRACKET, backrest (1)	FXR: L89 to 90-EM
37	52797-87	SIDE PLATE, left (1)	FXR: 87 to 90-EC/M
38	52798-87	SIDE PLATE, right (1)	FXR: 87 to 90-EC/M
39	59267-83A	REFLECTOR, red (2)	FXR: 87 to 90-EC/M
40	99013-82	MEDALLION (1)	FXR: 87 to 90-EC/M
		INTERNATIONAL MODELS ONLY	
39	59270-84A	REFLECTOR, amber (HDI only) (2)	FXR: 87 to 90-EC/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

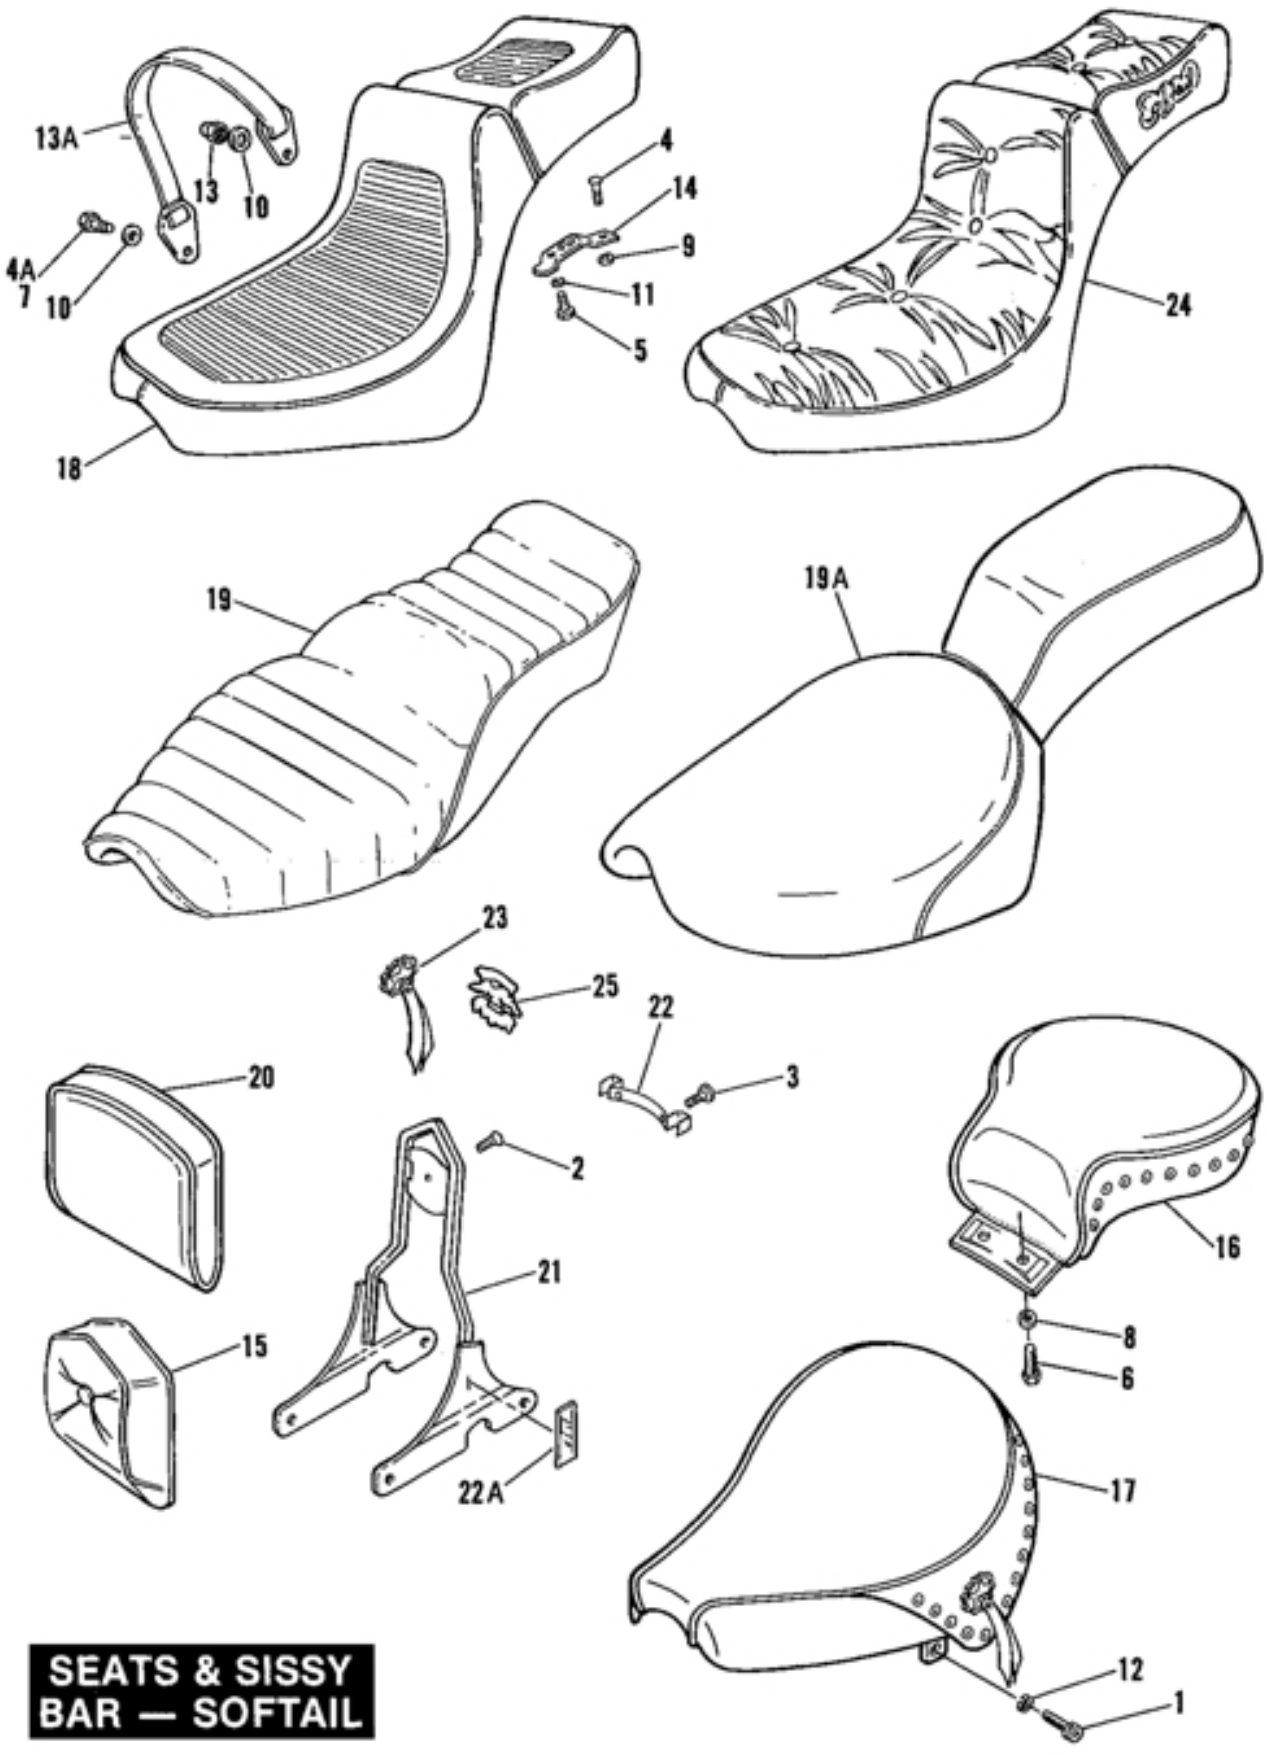

SEATS & SISSY BAR — SOFTAIL


SEATS AND SISSY BAR - SOFTAIL MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	868	SCREW (2)	Softail: 87 to 90-BJ/M
2	1357W	SCREW (1)	Softail: 87 to 90-BJ
2	1602	SCREW (1)	Softail: 87 to 90-BK
3	2538	SCREW (2)	Softail: 90 to 90-BJ
3	2607	SCREW (2)	Softail: 87 to 89-BJ; 87 to 90-BK
4	2739	SCREW (1)	Softail: 90 to 90-ALL
4	2757W	SCREW (1)	Softail: 87 to 89-ALL
4A	2879W	BOLT (2)	Softail: 90 to 90-BH/J/K
5	3767B	BOLT (2)	Softail: 87 to 90-ALL
6	3974HW	BOLT (2)	Softail: 87 to 90-BJ
7	4319	BOLT (2)	Softail: 87 to 89-ALL
8	6333	WASHER (2)	Softail: 87 to 90-BJ
9	6410	WASHER, nylon (1)	Softail: 87 to 90-ALL
10	6516HW	WASHER (2)	Softail: 87 to 89-BJ
10	6701	WASHER (2)	Softail: 90 to 90-BJ/M
11	7036	WASHER (2)	Softail: 87 to 90-ALL
12	7068	LOCKWASHER (2)	Softail: 87 to 90-BJ/M
13	7680W	ACORN NUT (2)	Softail: 90 to 90-BJ/M
13A	51184-88	PASSENGER STRAP, black (1)	Softail: L88 to 90-BL
13A	51185-87	PASSENGER STRAP, black (1)	Softail: 87 to 89-BJ
13A	51185-90	PASSENGER STRAP, black (Classic) (1)	Softail: 90 to 90-BJ
13A	51186-89	PASSENGER STRAP, black (1)	Softail: 90 to 90-BM
13A	51188-86	PASSENGER STRAP, black (1)	Softail: 87 to 90-BH/J/K
14	51652-83	BRACKET, seat (1)	Softail: 87 to 90-ALL
15	52191-86	BACKREST (1)	Softail: 87 to 90-BK
16	52208-86	SEAT KIT, passenger (black) (Classic) (1)	Softail: 87 to 90-BJ
17	52236-86	SEAT KIT, solo (black) (Classic) (1)	Softail: 87 to 90-BJ
18	52501-84	SEAT, 2-piece (black) (1)	Softail: 87 to 90-BH
19	52502-86	SEAT, black (1)	Softail: 87 to 90-BJ
19A	52503-88	SEAT (1)	Softail: L88 to 89-BL
19A	52503-88B	SEAT (1)	Softail: 90 to 90-BL
19A	52504-89	SEAT W/ TEXTURED PANEL, black, N/A (1)	Softail: 90 to 90-BM
20	52541-87	BACKREST KIT, w/concho (black) (1)	Softail: 87 to 90-BJ
21	52658-86	SISSY BAR ASSY (1)	Softail: 87 to 90-BJ/K
22	52771-82	BRACKET, backrest (1)	Softail: 87 to 90-BJ/K
22A	59255-72	REFLECTOR, red (2)	Softail: 90 to 90-BJ
23	91850-87	CONCHO (1)	Softail: 87 to 90-BJ
24	91768-85	SEAT, black (1)	Softail: 87 to 90-BK
25	99000-77	MEDALLION (1)	Softail: 87 to 90-BK

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FOOTRESTS

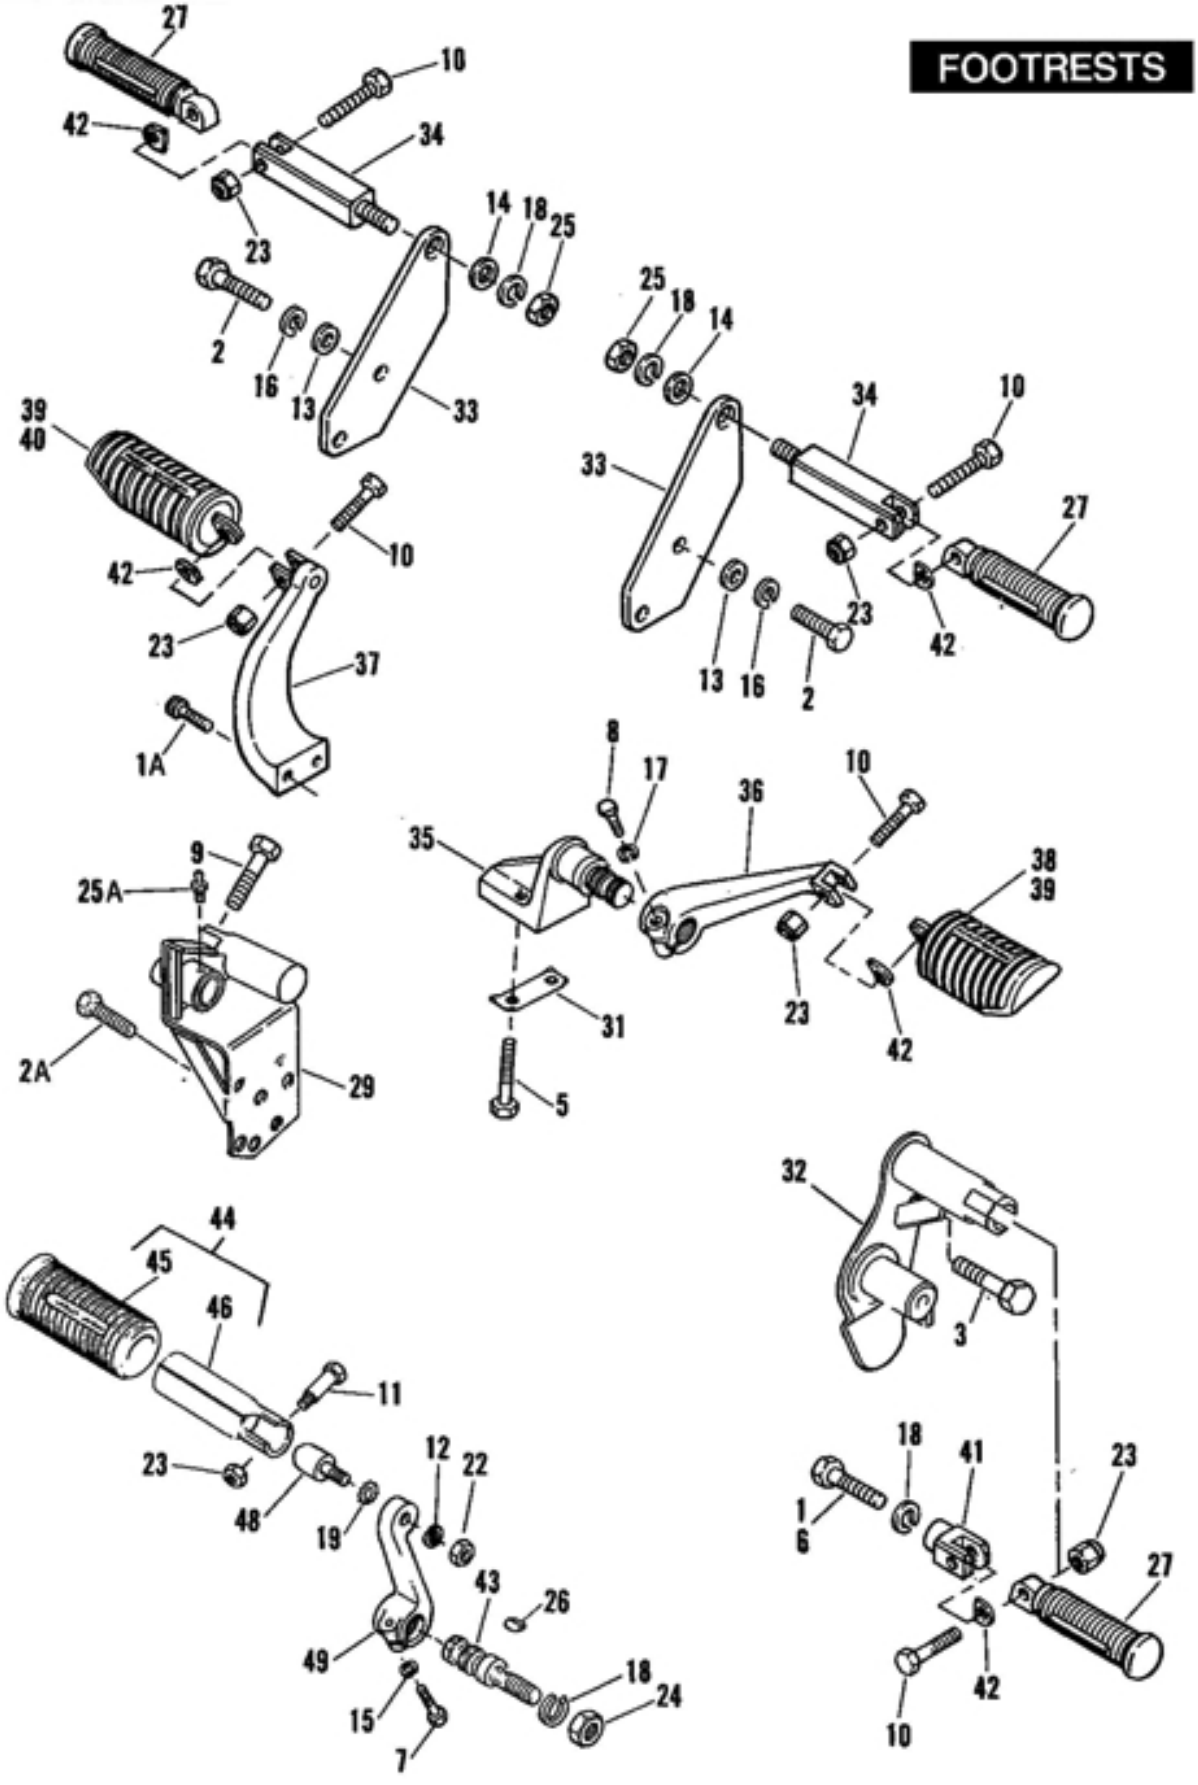
27
10
42
34
14
18
25
23
2
16
13
33
39
40
42
10
23
37
1A
25
18
14
34
10
33
27
23
42
13
16
2
8
17
36
10
35
38
39
9
25A
31
23
42
2A
29
5
32
44
45
46
3
11
23
12
22
48
19
18
41
23
1
6
27
43
26
49
42
18
24
15
10
7


FOOTRESTS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	872	SCREW, right (1)	Softail: 90 to 90-BM
1A	920	SCREW (2)	FXR: 87 to 90-ALL
2	2851	BOLT (4)	FXR: 87 to 90-EB/C/L/M
2A	3440	BOLT (1)	Softail: 88 to 90-ALL
3	3464	BOLT (1)	Softail: 87 to 90-ALL
4	3486	BOLT (2)	FXR: 87 to 90-ALL
5	3503	BOLT (2)	FXR: 87 to 90-ALL
6	3516A	SCREW (2)	Softail: 87 to 90-ALL
6	3549A	SCREW, Classic (2)	Softail: 90 to 90-BJ
7	3825	BOLT (2)	FXR: 87 to 90-EC
8	4014W	BOLT (2)	FXR: 87 to 90-ALL
9	4337W	SCREW (1)	Softail: 87 to 90-BH/K/L
10	4721	BOLT, as req'd (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
11	4724	BOLT (2)	FXR: 87 to 90-EC
12	6379W	WASHER (2)	FXR: 87 to 90-EC
13	6701	WASHER (4)	FXR: 87 to 90-EB/C/L/M
14	6718	WASHER (2)	FXR: 87 to 90-EB/C/L/M
15	7036	WASHER (2)	FXR: 87 to 90-EC
16	7038	LOCKWASHER (4)	FXR: 87 to 90-EB/C/L/M Softail: 87 to 90-BJ/M
17	7041	LOCKWASHER (1)	FXR: 87 to 90-ALL
18	7068	LOCKWASHER, as req'd (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
19	7145W	LOCKWASHER (1)	FXR: 87 to 90-EC
22	7776W	LOCKNUT (2)	FXR: 87 to 90-EC Softail: 87 to 90-BH/K/L
23	7778	LOCKNUT, 6-EB/C/L/M (4)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ/M
24	7845	NUT (2)	FXR: 87 to 90-EC
25	7880	NUT (2)	FXR: 87 to 90-EB/C/G/M
25A	9851A	FITTING, lubrication (1)	Softail: 90 to 90-BH/K/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FOOTRESTS

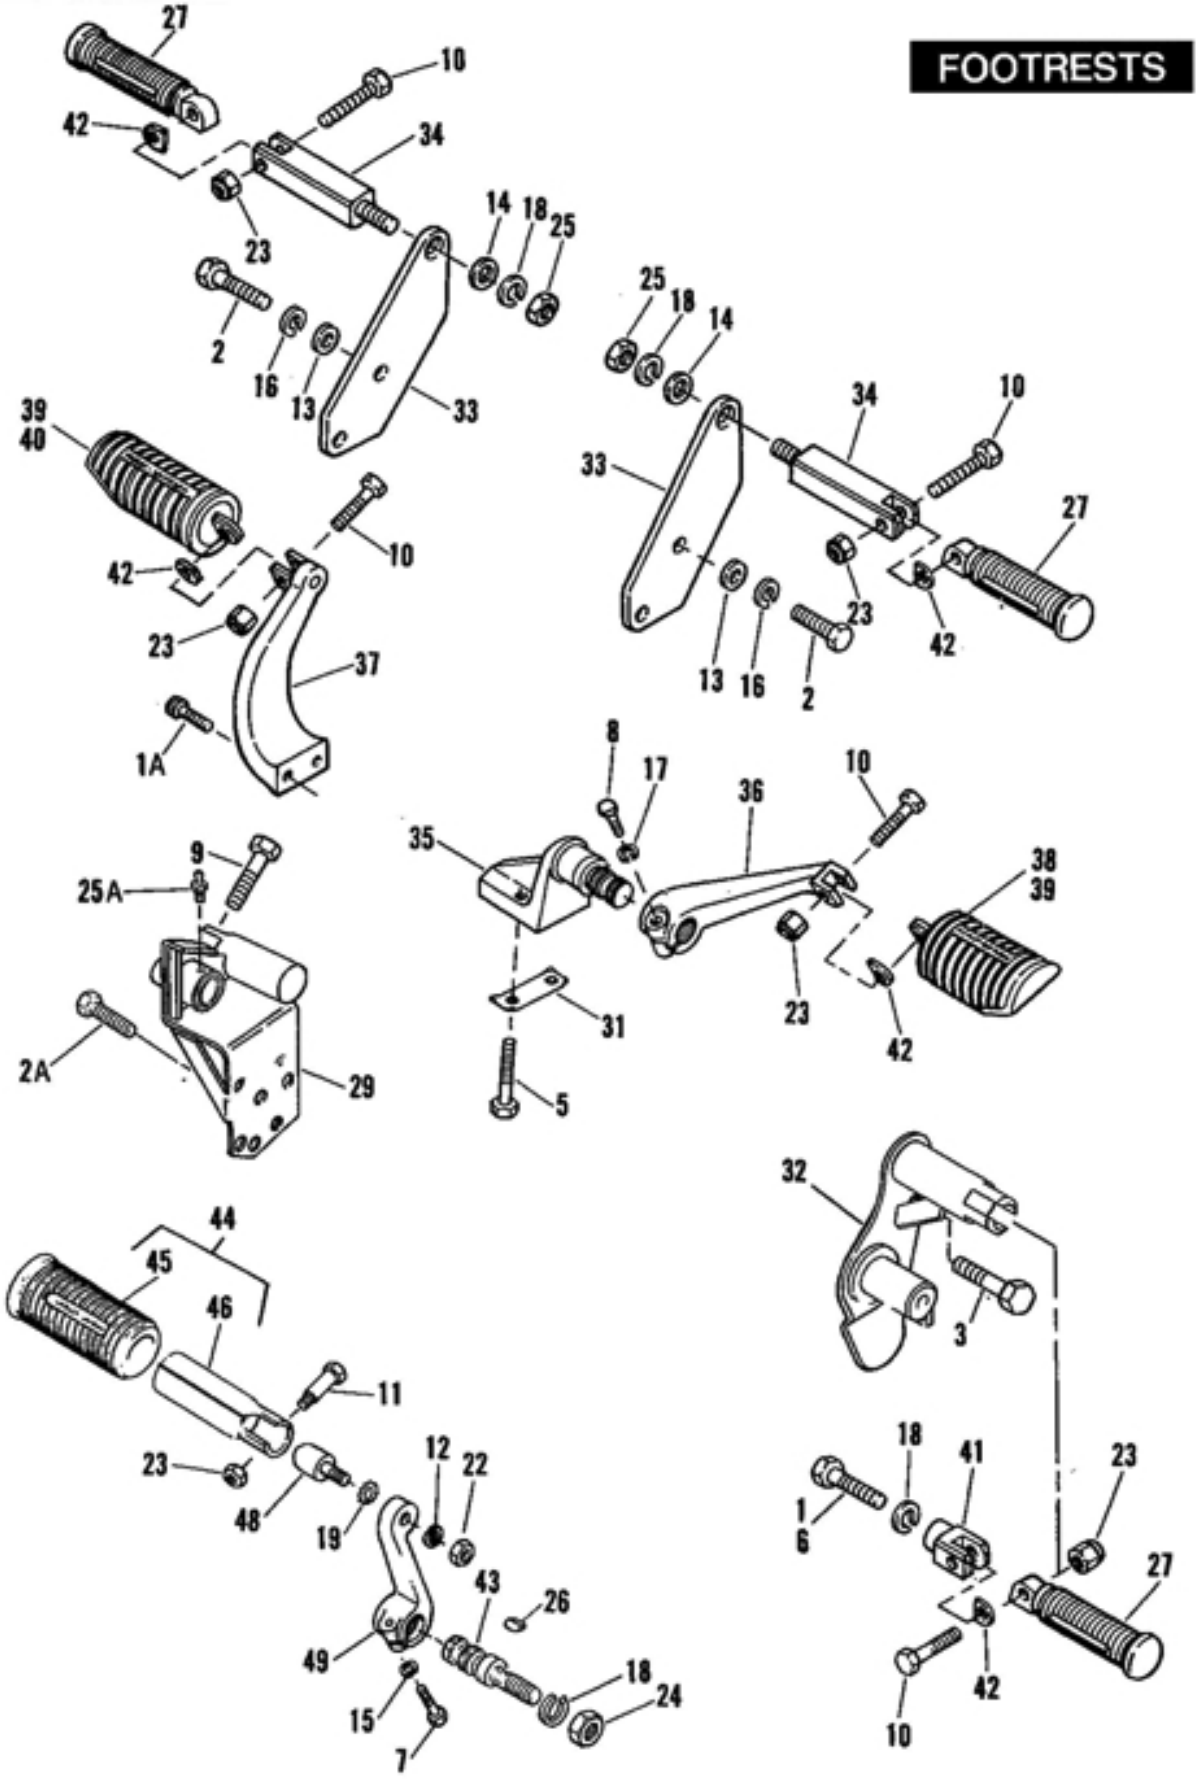
27
10
42
34
14
18
25
23
2
16
13
33
39
40
42
10
23
37
1A
25
18
14
34
10
33
27
23
42
13
16
2
8
17
36
10
35
38
39
9
25A
31
23
42
2A
29
5
32
44
45
46
3
11
23
12
22
48
19
18
41
23
1
6
27
43
26
49
18
24
42
15
7
10


FOOTRESTS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	23985-18	KEY, footrest stud (2)	FXR: 87 to 90-EC
27	33048-72	FOOTREST W/ CVR., 4-BH/K, EB/C/L/M (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	33189-63	COVER, black (4-BH/K, EB/C/L/M) (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
29	33683-87A	BRACKET, shifter (1)	Softail: 87 to 89-BH/K/L
29	33683-90	BRACKET, shifter (1)	Softail: 90 to 90-BH/K/L
31	42334-82	LOCKPLATE, front (1)	FXR: 87 to 90-ALL
32	42507-86	BRACKET, brake lever and footrest (1)	Softail: E87-BH/K
32	42507-87A	BRACKET, brake lever and footrest (1)	Softail: L87 and 88-BH/K/L
32	42507-89A	BRACKET, brake lever and footrest (1)	Softail: 89 to 90-BH/K/L
33	49126-77B	MOUNTING PLATE (2)	FXR: 87 and 88-EB/C/L; 89 to 90-EB/L/M
34	49127-77A	FOOTREST SUPPORT (2)	FXR: 87 to 90-EB/C/L/M
35	50531-81	BRACKET, footrest-front (1)	FXR: 87 to 90-ALL
36	50636-81A	BRACKET, right footrest-front (1)	FXR: 87 to 90-ALL
37	50639-81	BRACKET, left footrest-front (1)	FXR: 87 to 90-ALL
38	50643-82	FOOTREST, w/cover-right (1)	FXR: 87 to 90-ALL
39	50646-82	COVER, only (black) (2)	FXR: 87 to 90-ALL
40	50647-82	FOOTREST, w/cover-left (1)	FXR: 87 to 90-ALL
41	50900-72	SUPPORT, pass. footrest (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
42	50912-72	SPRING WASHER, as req'd (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
43	50921-83	STUD (2)	FXR: 87 to 90-EC
44	50939-52	FOOTREST, w/cover (2)	FXR: 87 to 90-EC
45	50940-52	COVER, only (black) (2)	FXR: 87 to 90-EC
48	50973-65	STUD (2)	FXR: 87 to 90-EC
49	52700-81	SUPPORT (2)	FXR: 87 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FOOTBOARDS

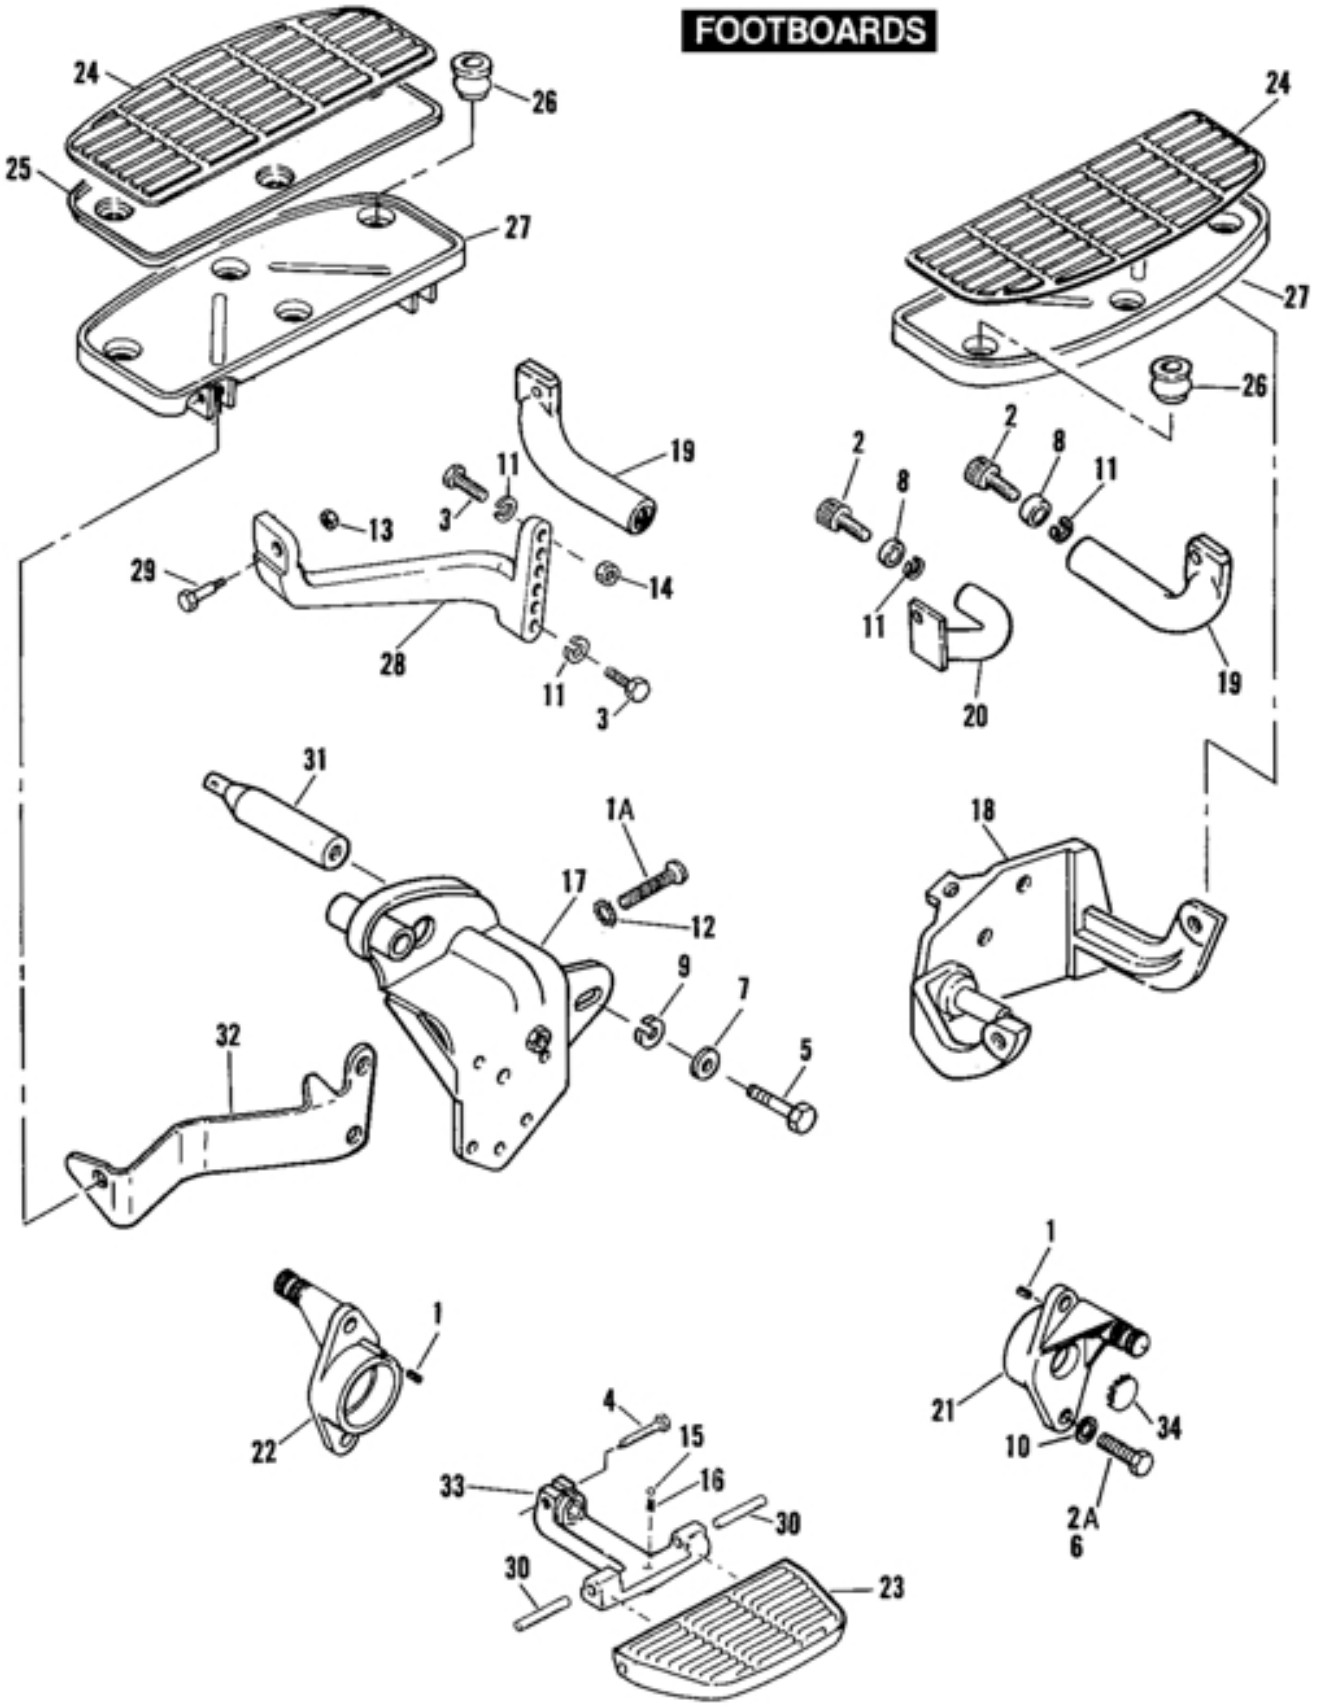

24
26
25
27
19
11
3
13
29
14
28
11
3
24
27
26
2
8
11
2
8
11
19
20
31
1A
17
12
9
7
5
32
18
1
22
4
15
16
33
30
30
23
1
21
34
10
2A
6

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	604	ROLL PIN (2)	Touring: 87 to 90-ALL
1A	2773	SCREW (1)	Softail: 90 to 90-BJ/M
2	3516A	SCREW (2)	Touring: 87 to 90-ALL
2A	3782	BOLT (4)	Touring: 89 to 90-ALL
3	3960W	BOLT (2)	Touring: 87 to 90-ALL
4	3993	BOLT (2)	Touring: 87 to 90-ALL
5	4721	BOLT (1)	Softail: 87 to 90-BJ/M
6	4729	BOLT (4)	Touring: 87 to 89-ALL
7	6400HB	WASHER (1)	Softail: 87 to 90-BJ/M
8	6738	WASHER (3)	Touring: 87 to 90-ALL
9	7038	LOCKWASHER (1)	Softail: 87 to 90-BJ/M
10	7039	LOCKWASHER (4)	Touring: 87 to 90-ALL
11	7041	LOCKWASHER (3)	Touring: 87 to 90-ALL
12	7230	LOCKWASHER (1)	Softail: 90 to 90-BJ/M
13	7742	LOCKNUT (4)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
14	7753	NUT (1)	Touring: 87 to 90-ALL
15	8860	BALL (2)	Touring: 87 to 90-ALL
16	33085-74	SPRING (2)	Touring: 87 to 90-ALL
17	33630-87	BRACKET, left (1)	Softail: 87 to 87-BJ/M
17	33630-90	BRACKET, left (1)	Softail: 90 to 90-BJ/M
18	42431-86	BRACKET, right (1)	Softail: 87 to 90-BJ/M
19	47365-83A	BRACKET, front (2)	Touring: 87 to 90-ALL
20	50518-83A	BRACKET, right rear (1)	Touring: 87 to 90-ALL
21	50584-87	BRACKET, right (1)	Touring: 87 to 90-ALL
22	50585-87	BRACKET, left (1)	Touring: 87 to 90-ALL
23	50606-86A	PAD (2)	Touring: 87 to 90-ALL
23	50613-86	FOOTBOARD, passenger (2)	Touring: 87 to 90-ALL
24	50614-66	PAD (2)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
25	50619-74A	PLATE, w/o pad, N/A (2)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
26	50620-74	RUBBER MOUNT (8)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
27	50621-79A	FOOTBOARD, w/#24, 25 and 26 (1)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
28	50622-83A	BRACKET, left rear (1)	Touring: 87 to 90-ALL
29	50635-82	BOLT, footboard hinge (4)	Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
30	50933-86	PIN, pivot (4)	Touring: 87 to 90-ALL
31	50989-86	STUD, left front (chrome) (1)	Softail: 87 to 90-BJ/M
32	50990-86B	SUPPORT BRACKET, left rear (1)	Softail: 87 to 90-BJ/M
33	52713-87	SUPPORT, footboard (black wrinkle) (1)	Touring: 87-ALL
33	52713-91	SUPPORT, footboard (black wrinkle) (1)	Touring: 88 to 90-ALL
34	67865-89	PLUG (2)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

LUGGAGE BOX (KING TOUR-PAK)

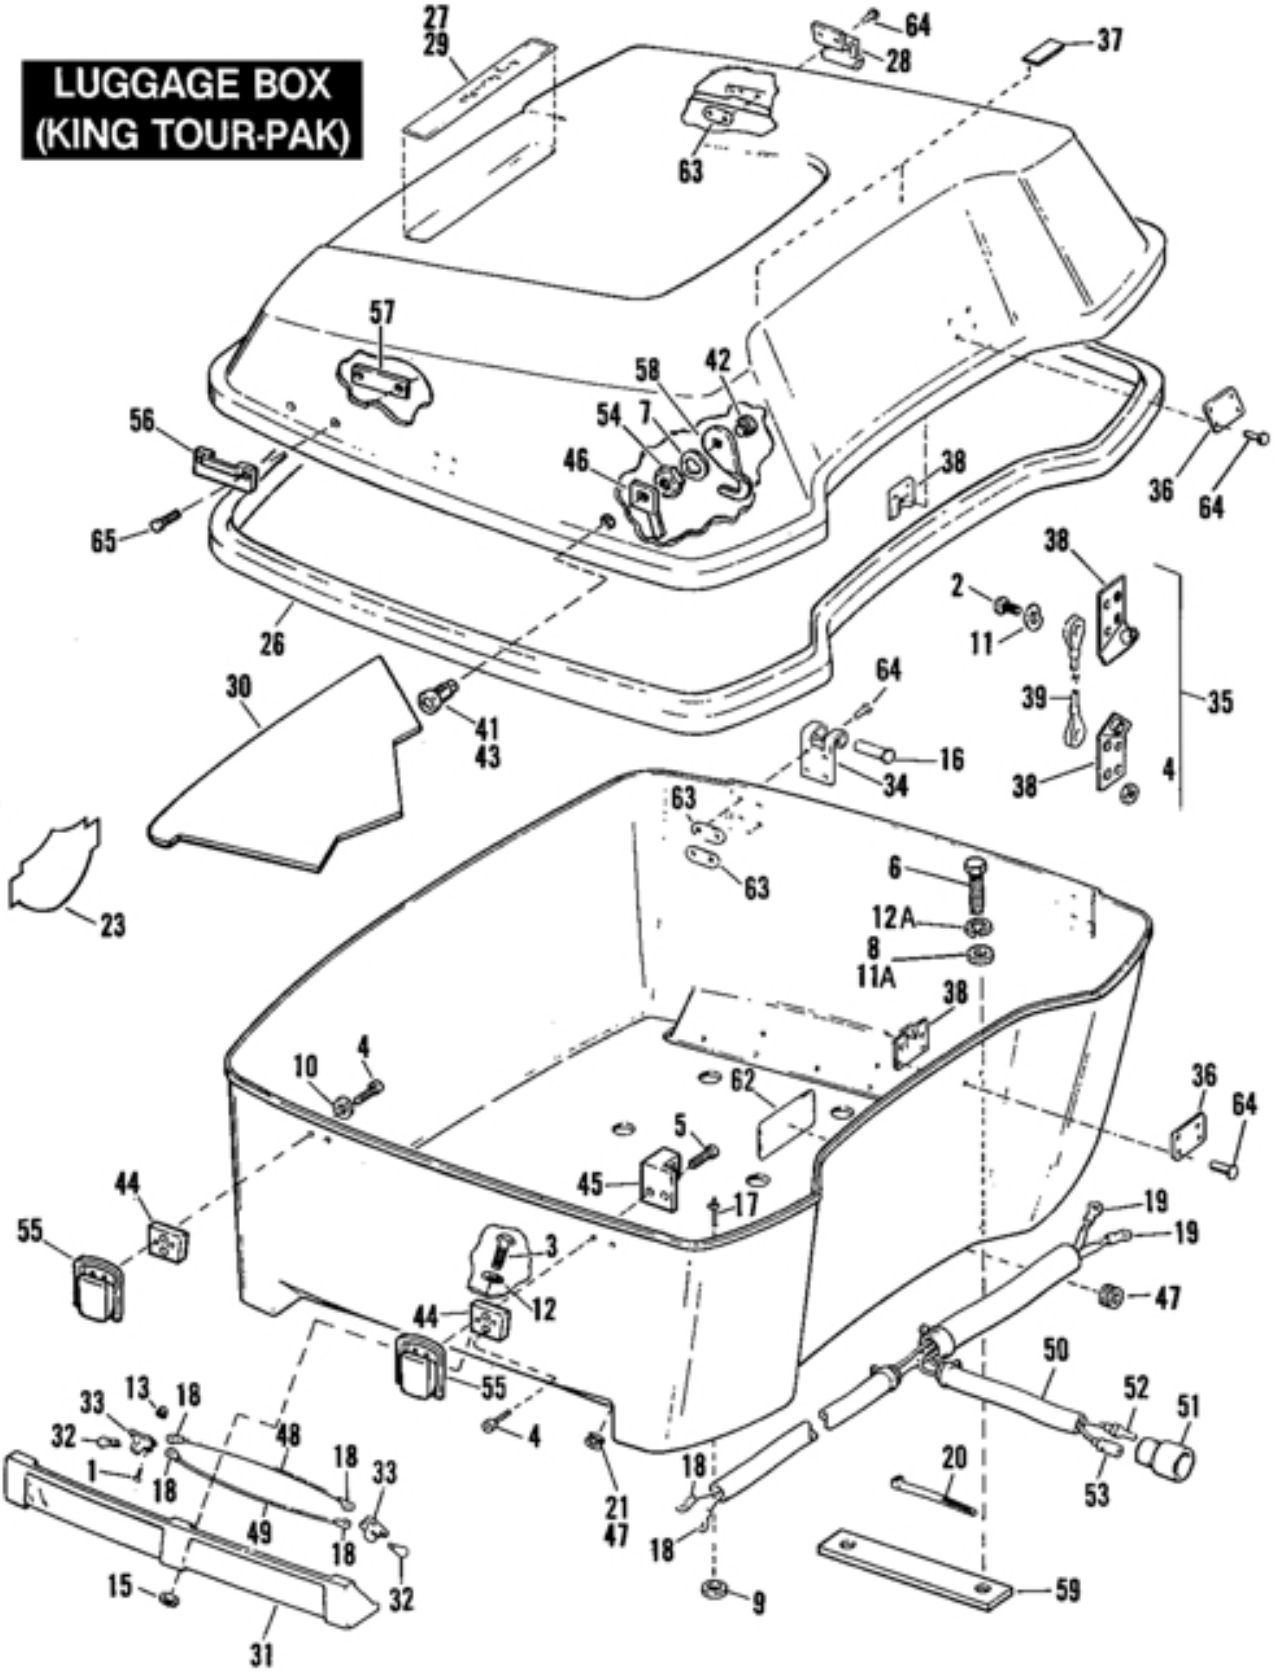


LUGGAGE BOX (KING TOUR-PAK) (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2804W	SCREW (8)	Touring: 87 to 90-DB/D/J/M/P
2	2831	SCREW (2)	Touring: 87 to 90-DB/D/J/M/P
3	2888	SCREW (6)	Touring: 87 to 90-DB/D/J/M/P
4	3597	SCREW (4)	Touring: 87 to 90-DB/D/J/M/P
5	3598	SCREW (2)	Touring: 87 to 90-DB/D/J/M/P
6	3787	BOLT (4)	Touring: 87 to 90-DB/D/J
7	6055	WASHER (4)	Touring: 87 to 90-DB/D/J/M/P
8	6703	WASHER (4)	Touring: 87 to 90-DB/D/J
9	6716	WASHER (10)	Touring: 87 to 90-DB/D/J/M/P
10	6717	WASHER (4)	Touring: 87 to 90-DB/D/J/M/P
11	6970	WASHER (2)	Touring: 87 to 90-DB/D/J/M/P
11A	7036	WASHER (4)	Touring: 88 to 90-DB/J
12	7115	LOCKWASHER (6)	Touring: 87 to 90-DB/D/J/M/P
12A	7124	LOCKWASHER (1)	Touring: 89 to 90-DB/J/M/P
13	7520	ACORN NUT, nylon (8)	Touring: 87 to 90-DB/D/J/M/P
14	7590	NUT (8)	Touring: 87 to 90-DB/D/J
15	7608	NUT (6)	Touring: 87 to 90-DB/D/J/M/P
16	8500	RIVET (2)	Touring: 88 to 90-DB/D/J/M/P
16	8502	RIVET (2)	Touring: 87-DB/D/J
17	8688	RIVET (10)	Touring: 87 to 90-DB/D/J/M/P
18	9856	TERMINAL, ring type-No. 6 hole (10)	Touring: 87 to 90-DB/D/J
19	9871	TERMINAL, ring type-No. 6 hole (2)	Touring: 87 to 90-DB/D/J
20	10065	CABLE STRAP (3)	Touring: 87 to 90-DB/D/J
21	11410	GROMMET, side light wiring (2)	Touring: 87 and 88-DB/D/J
22	48152-82	KEY, specify key no. 1 to 100 (1)	Touring: 87 to 90-DB/D/J
23	52756-79	NAMEPLATE, gold and black (1)	Touring: 87-DB/D/J
23	90971-79	NAMEPLATE, silver and black (1)	Touring: 87-DB/D/J
26	53415-83	GASKET, cover (1)	Touring: 87 to 90-DB/D/J/M/P
27	53424-79	NAMEPLATE, "KING TOUR-PAK" (brown) (1)	Touring: 87 to 90-DB/D/J
28	53426-80	HINGE, cover-upper (2)	Touring: 87-DB/D/J
28	53426-87	HINGE, cover-upper (2)	Touring: 88 to 90-DB/J/M/P
29	53434-80	NAMEPLATE, "KING TOUR-PAK" (black) (1)	Touring: 87 to 90-DB/D/J
30	53435-88	MAT, luggage box (1)	Touring: 87 to 90-DB/D/J
31	53437-79	LENS, side light (2)	Touring: 87 to 90-DB/D/J/M/P
32	53439-79	BULB, side light (4)	Touring: 87 to 90-DB/D/J/M/P
33	53440-79	SOCKET, side light (4)	Touring: 87 to 90-DB/D/J/M/P
34	53447-83A	HINGE, lower (2)	Touring: 87-DB/D/J
34	53447-87	HINGE, lower (2)	Touring: 88 to 90-DB/J/M/P
35	53477-80A	BRACE ASSY., luggage box (1)	Touring: 87 to 90-DB/D/J
36	53478-80	BACKING PLATE, brace (2)	Touring: 87 to 90-DB/D/J/M/P
37	53486-85	PAD (2)	Touring: 87 to 90-DB/D/J/M/P
38	53563-82	BRACKET, cable mtg. (2-1987 to 1989) (1)	Touring: 87 to 90-DB/D/J/M/P
38	53570-89	BRACKET, cable mtg. (1)	Touring: 90 to 90-DB/J/M/P
39	53564-82	CABLE BRACE, cover (1)	Touring: 87 to 89-DB/J/M/P
39	53564-89	CABLE BRACE, cover (1)	Touring: 90 to 90-DB/J/M/P
41	53580-82	CAM LOCK (1)	Touring: 87 to 90-DB/D/J/M/P
42	53582-82	SCREW W/WASHER (1)	Touring: 87 to 90-DB/D/J
43	53587-85	LOCK SET, W/#22, 41, 42 and 54 (1)	Touring: 87 to 90-DB/M
43	53588-85	LOCK SET, W/#22, 41, 42 and 54 (1)	Touring: 87 to 90-DD/J/P

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

LUGGAGE BOX (KING TOUR-PAK)

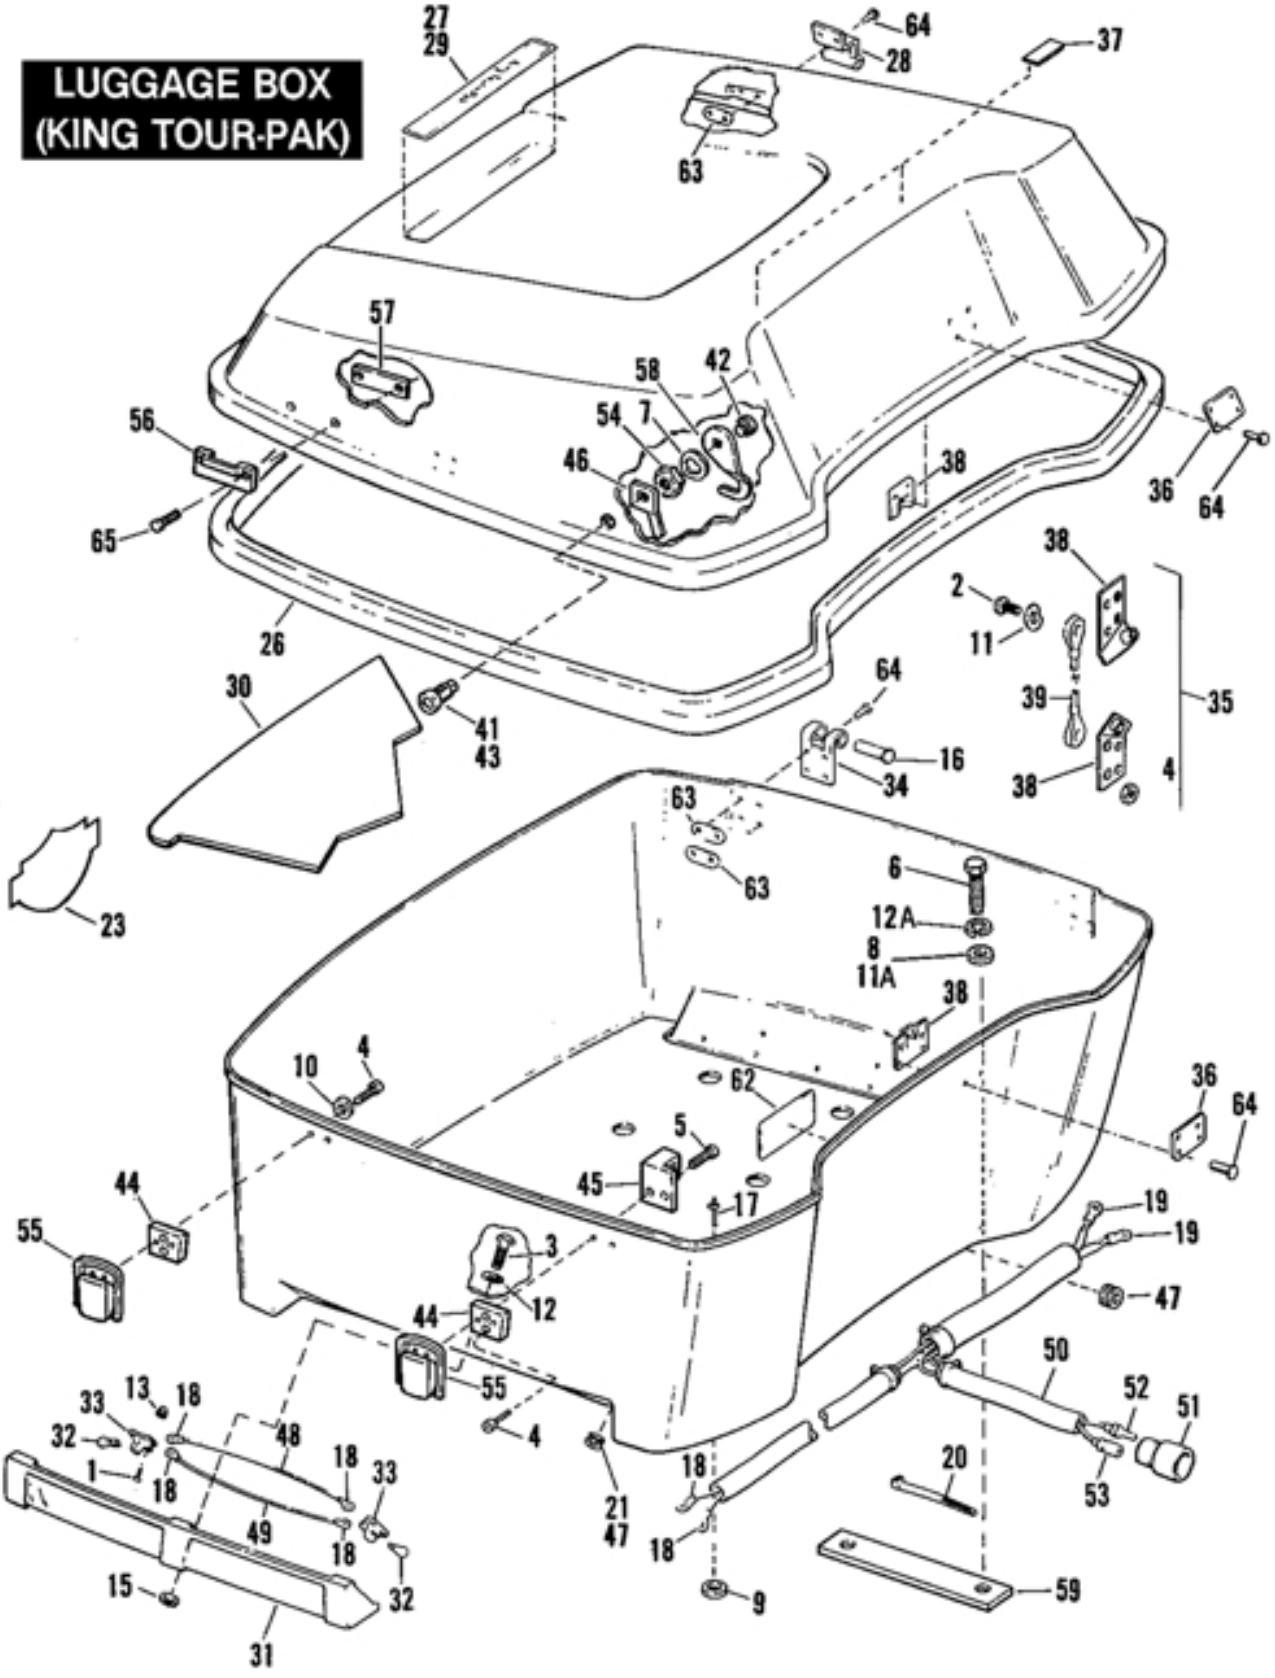


LUGGAGE BOX (KING TOUR-PAK) (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
44	53615-85	SPACER (2)	Touring: 87 to 90-DB/D/J/M/P
45	53616-85	CATCH, lower (1)	Touring: 87 to 90-DB/D/J/M/P
46	53617-85	GUIDE, lock (1)	Touring: 87 to 90-DB/D/J/M/P
47	57978-63	GROMMET, 3-1989 and Later (1)	Touring: 87 to 90-DB/D/J/M/P
48	70643-79A	WIRE, side light (green) (2)	Touring: 87 to 90-DB/D/J/M/P
49	70644-79A	WIRE, side light (black) (2)	Touring: 87 to 90-DB/D/J/M/P
50	70646-79	WIRING HARNESS, side light (1)	Touring: 87 to 90-DB/D/J
50	70646-88	WIRING HARNESS, side light (1)	Touring: 88 to 90-DB/J
50	70648-89	WIRING HARNESS, luggage box (1)	Touring: 89 to 90-DM/P
51	72052-79	RECEPTACLE, side light wire (1)	Touring: 87 to 90-DB/D/J
51	74521-77	RECEPTACLE, luggage box (1)	Touring: 89 to 90-DM/P
52	74536-77A	PIN, wiring harness (1)	Touring: 87 to 90-DB/D/J/M/P
53	74539-77A	SOCKET, wiring harness (2-DM/P) (1)	Touring: 87 to 90-DB/D/J/M/P
54	84850-67	NUT, lock (1)	Touring: 87 to 90-DB/D/J
55	90649-85	BODY, catch (2)	Touring: 87 to 90-DB/D/J/M/P
56	90663-85	CATCH, upper (2)	Touring: 87 to 90-DB/D/J/M/P
57	90688-85	BACKING PLATE (2)	Touring: 87 to 90-DB/D/J/M/P
58	90689-84	CAM HOOK (1)	Touring: 87 to 90-DB/D/J/M/P
59	90743-88	GASKET (2)	Touring: 87 to 90-DB/D/J/M/P
62	90821-74A	LABEL, load limit (1)	Touring: 87 to 90-DB/D/J/M/P
63	90964-63	BACKING PLATE (8)	Touring: 87 to 90-DB/D/J/M/P
64	90965-63	RIVET (20)	Touring: 87 to 90-DB/D/J/M/P
65	90967-64	RIVET (4)	Touring: 87 to 90-DB/D/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

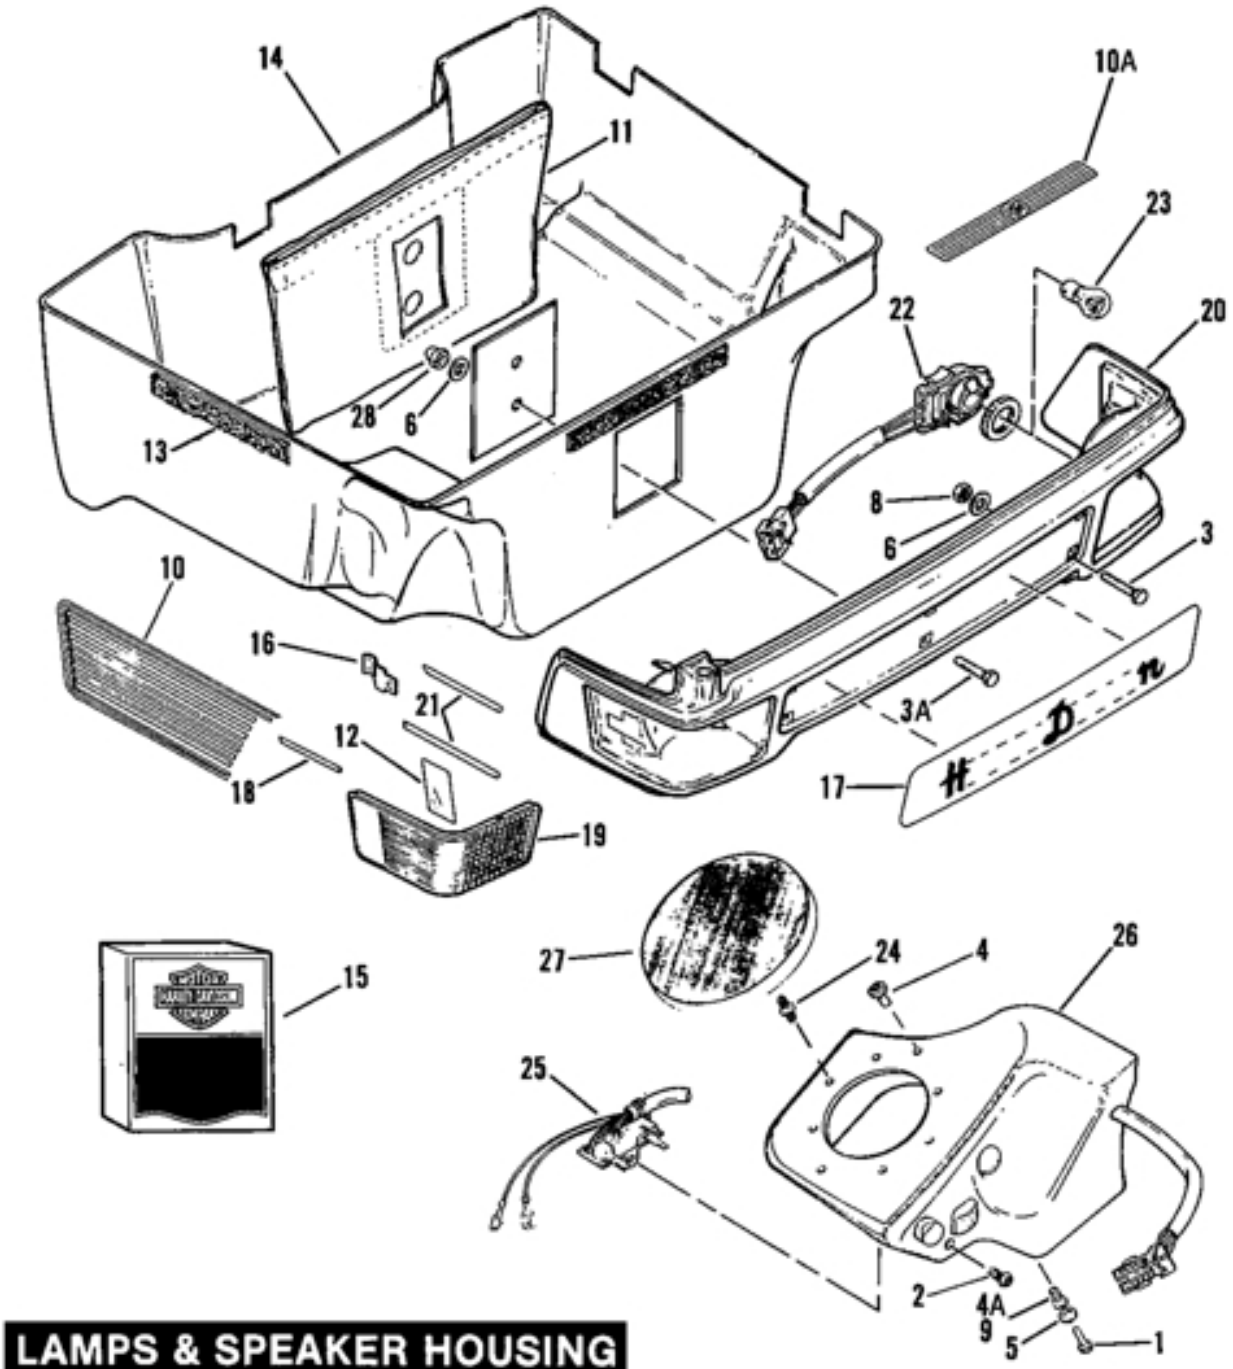


LAMPS & SPEAKER HOUSING
ULTRA TOUR-PAK

LAMPS AND SPEAKER HOUSINGS - ULTRA TOUR-PAK

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2551W	BOLT (6)	Touring: 89 to 90-DM/P
2	2625	SCREW (1)	Touring: 89 to 90-DM/P
3	3541	BOLT (4)	Touring: 89 to 90-DM/P
3A	3545	BOLT (2)	Touring: 89 to 90-DM/P
4	5210	WELL NUT (8)	Touring: L89 to 90-DM/P
4A	5211	NUT, crimp (6)	Touring: L89 to 90-DM/P
5	6036	WASHER (6)	Touring: 89 to 90-DM/P
6	6716	WASHER (6)	Touring: 89 to 90-DM/P
7	7036	WASHER (16)	Touring: 89 to 90-DM/P
7A	7118	LOCKWASHER (6)	Touring: 89 to 90-DM/P
8	7620W	NUT (4)	Touring: 89 to 90-DM/P
9	8099	WELL NUT (6)	Touring: E89-DM/P
9A	10205	STAPLE, N/A (20)	Touring: 89 and E90-DM/P
10	14178-89	DECAL, right (silver and red) (1)	Touring: 89-DM/P
10	14178-90	DECAL, right (silver and blue) (1)	Touring: 90 to 90-DM/P
10	14179-89	DECAL, left (silver and red) (1)	Touring: 89-DM/P
10	14179-90	DECAL, left (silver and blue) (1)	Touring: 90 to 90-DM/P
10	14246-90	DECAL, right (gold and red) (1)	Touring: 90 to 90-DM/P
10	14248-90	DECAL, left (gold and red) (1)	Touring: 90 to 90-DM/P
10A	14218-89	DECAL, "USA" (red) (1)	Touring: 89 to 90-DM/P
10A	14251-90	DECAL, "USA" (black) (1)	Touring: 90 to 90-DM/P
11	53165-89	POUCH, owners manual (1)	Touring: 89 to 90-DM/P
12	53166-89	REFLECTOR (2)	Touring: 89 to 90-DM/P
13	53170-89	FASTENER, velcro (cut to suit) (5)	Touring: 89-DM/P
14	53266-88	LINER, molded (1)	Touring: 89 and E90-DM/P
14	53278-89	LINER, molded (1)	Touring: L90 to 90-DM/P
15	53598-88	LINER, removable (1)	Touring: 89 to 90-DM/P
16	58380-89	CLIP, housing (2)	Touring: 89 to 90-DM/P
17	58381-89	NAMEPLATE (1)	Touring: 89 to 90-DM/P
18	58382-89	SEAL, lamp lens (2)	Touring: 89 to 90-DM/P
19	58383-89	LENS, left (1)	Touring: 89 to 90-DM/P
19	58384-89	LENS, right (1)	Touring: 89 to 90-DM/P
20	58385-89	HOUSING, lamp (1)	Touring: 89 to 90-DM/P
21	58386-89	SEAL, lamp (as req'd), N/A (1)	Touring: 89 to 90-DM/P
22	58388-89	SOCKET ASSEMBLY (2)	Touring: 89 to 90-DM/P
23	68168-89	BULB, taillamps (1)	Touring: 89 to 90-DM/P
24	76175-86	CLIP, double end (8)	Touring: 89 to 90-DM/P
25	76290-89	SWITCH, function control and volume/P.T.T. (1)	Touring: 89 to 90-DM/P
26	76303-89	SPEAKER HOUSING, rear-left (1)	Touring: 89 to 90-DM/P
26	76304-89	SPEAKER HOUSING, rear-right (1)	Touring: 89 to 90-DM/P
27	76307-89	SPEAKER GRILLE, rear (2)	Touring: 89 to 90-DM/P
28	90844-80	ACORN NUT (2)	Touring: 89 to 90-DM/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

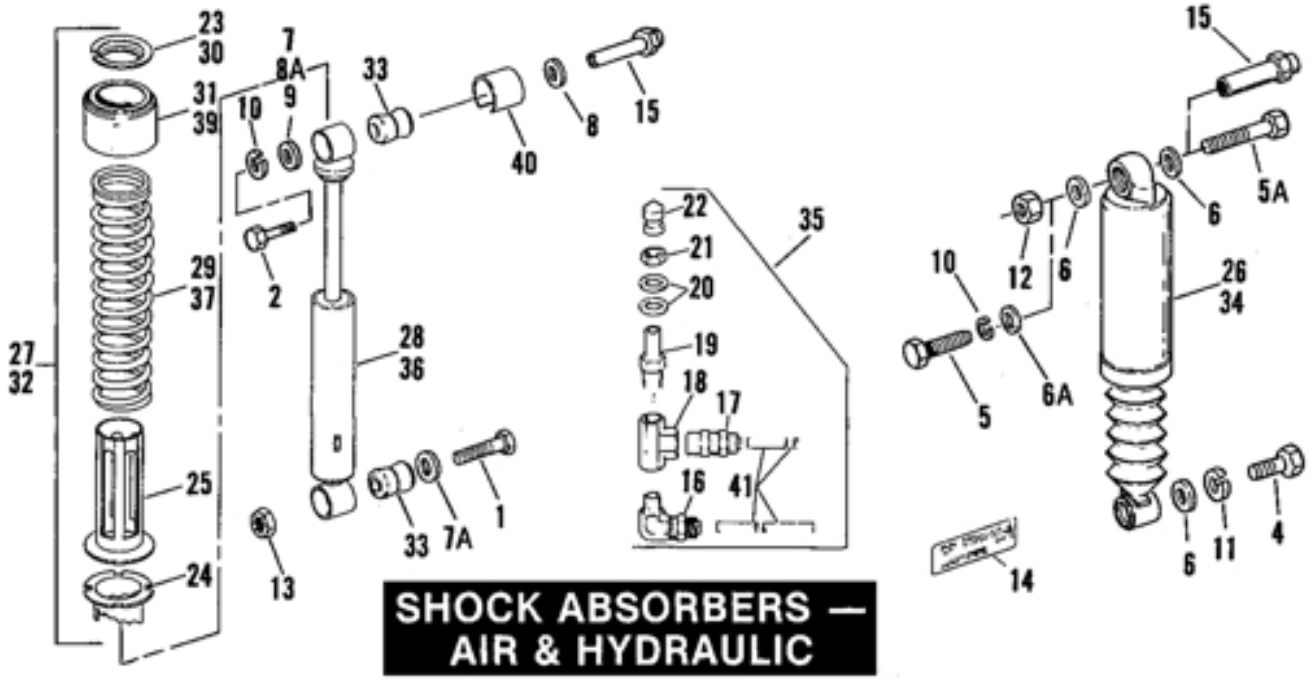

SHOCK ABSORBERS — AIR & HYDRAULIC


SHOCK ABSORBERS - AIR AND HYDRAULIC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1614	BOLT (2)	FXR: 87 and 88-ALL
1	4081	BOLT (2)	FXR: 89 to 90-ALL
2	2879W	BOLT (2)	FXR: 87 to 90-EA/B/C/G/M
2	2906	BOLT (2)	FXR: 87 to 90-EL
4	3535	BOLT (2)	Touring: 87 to 90-ALL
5	3536	BOLT (2)	Touring: 88 to 90-ALL
5A	3950	BOLT (2)	Touring: 87-ALL
6	6012	WASHER (6)	Touring: 87 to 90-ALL
6A	6019	WASHER (2)	Touring: 88 to 90-ALL
7	6530	WASHER (2)	FXR: 87 to 90-EA/B/G/L/M
7A	6718	WASHER (2)	FXR: 89 to 90-ALL
8	6738	WASHER (2)	FXR: 87 to 90-ALL
9	6962	WASHER (2)	FXR: 87 and 88-EC
10	7038	LOCKWASHER (2)	FXR: 87 to 90-ALL
11	7068	LOCKWASHER (2)	FXR: 87 to 90-ALL
12	7741	LOCKNUT (2)	Touring: 87-ALL
13	7824	LOCKNUT (2)	FXR: 87 to 90-ALL
14	14112-85	DECAL, air suspension (1)	Touring: 87-ALL
14	14112-88	DECAL, air suspension (1)	Touring: 88 to 90-ALL
14	14052-85	DECAL, air suspension (1)	FXR: 87-EC
14	14052-88	DECAL, air suspension, N/A (1)	FXR: 88 to 90-EC
15	54309-87	SCREW, int. thd. (1)	FXR: 87 to 90-ALL Touring: 88 to 90-ALL
16	54310-83	ELBOW, male (1)	Touring: 87 to 90-ALL
17	54314-83	CONNECTOR, male (1)	Touring: 87 to 90-ALL
18	54315-83	FITTING (1)	Touring: 87 to 90-ALL
19	54317-85	VALVE, w/# 22 (1)	Touring: 87 to 90-ALL
20	54319-85	WASHER (2)	Touring: 87 to 90-ALL
21	54321-85	NUT (1)	Touring: 87 to 90-ALL
22	54323-85	VALVE CAP (1)	Touring: 87 to 90-ALL
23	54473-79	SPRING SEAT (2)	FXR: 87 to 90-EA/B/G/L/M
24	54474-79	ADJUSTER, spring (2)	FXR: 87 to 90-EA/B/G/L/M
25	54475-79	GUIDE, spring (2-EA/B/G/L) (1)	FXR: 87 to 90-ALL
26	54491-85	SHOCK ABSORBER, right-complete (1)	FXR: 87 to 90-EC
27	54492-85	SHOCK ABSORBER, left-complete (1)	FXR: 87 to 90-EC
28	54493-85	SHOCK ABSORBER, only, N/A (1)	FXR: 87 to 90-EC
29	54494-85	SPRING, black, N/A (1)	FXR: 87 to 90-EC
30	54495-85	SPRING SEAT, upper (black), N/A (1)	FXR: 87 to 90-EC
31	54496-85	COVER, upper (black) (1)	FXR: 87 to 90-EC
32	54502-87	SHOCK ABSORBER, complete (2)	FXR: 87 to 90-EA/B/L
32	54506-87	SHOCK ABSORBER, complete (2)	FXR: 87 to 90-EG/M
33	54523-82	BUSHING, 2-EC (4)	FXR: 87 to 90-ALL
34	54532-85	SHOCK ABSORBER, complete (2)	Touring: 87 to 90-ALL
35	54536-85	VALVE ASSEMBLY, complete, N/A (1)	Touring: 87 to 90-ALL
36	54547-87	SHOCK ABSORBER, only, N/A (2)	FXR: 87 to 90-EA/B/L
36	54548-87	SHOCK ABSORBER, only, N/A (2)	FXR: 87 to 90-EG/M
37	54585-87	SPRING, chrome (2)	FXR: 87 to 90/EA/B/L
37	54586-87	SPRING, chrome (2)	FXR: 87 to 90-EG/M
39	54701-82	COVER, upper (chrome) (1)	FXR: 87 to 90-EA/B/G/L/M
40	54705-81	COVER, stud (chrome) (1)	FXR: 87 to 90-EA/B/G/L/M
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
41	54324-85	HOSE, 5/64 I.D. x 1/8 O.D. (25 ft. lg.) (black) (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

SHOCK ABSORBERS — SOFTAIL

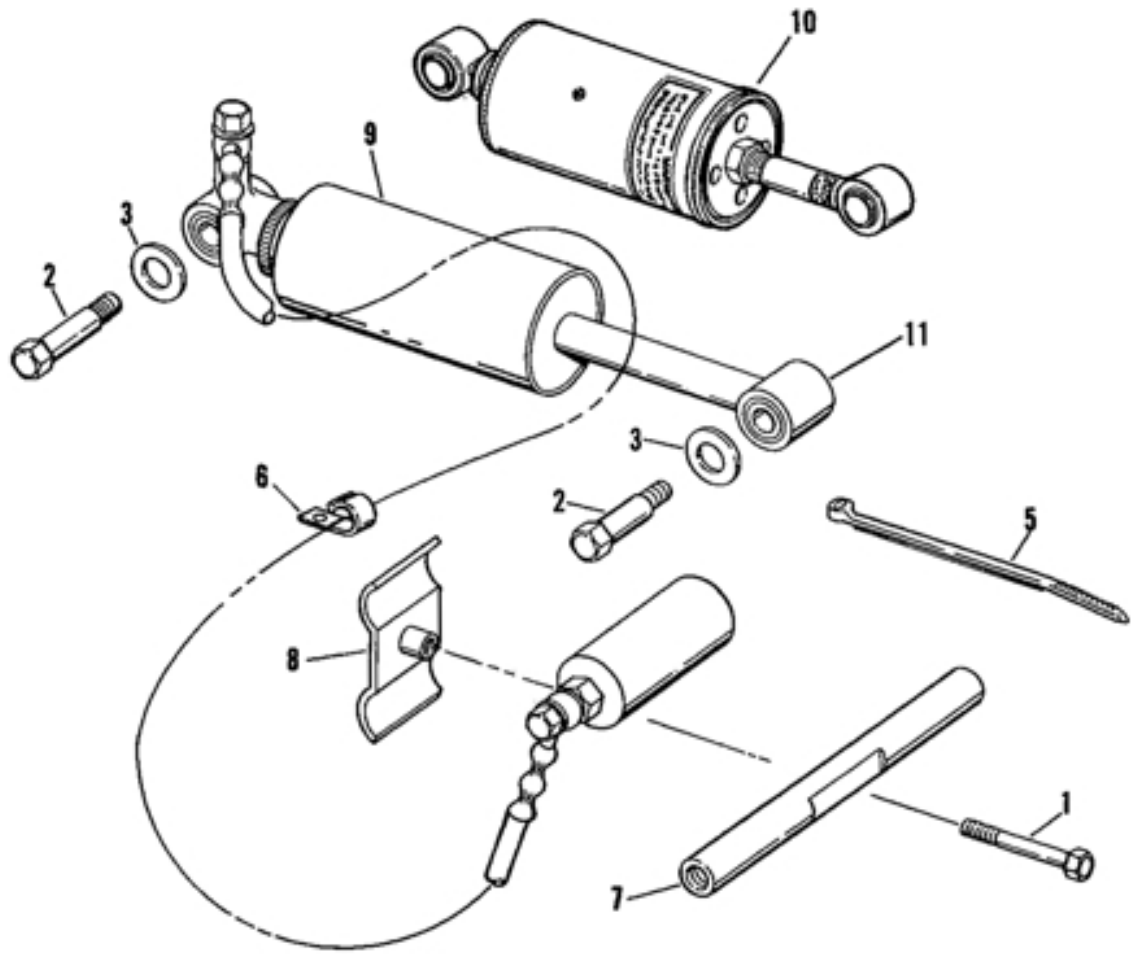


SHOCK ABSORBERS - SOFTAIL MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2887W	BOLT (1)	Softail: 87 and 88-ALL
2	4074	BOLT (4)	Softail: 87 to 90-ALL
3	6724	WASHER (4)	Softail: 87 to 90-ALL
5	10006	CABLE STRAP, hose-left shock absorber (1)	Softail: 87 and 88-ALL
6	10072	CLAMP, left shock hose (1)	Softail: 87 and 88-ALL
7	48030-86	BRACKET, cannister mounting-rear (1)	Softail: 87 and 88-ALL
7	48031-89A	SWING AXIS TUBE (1)	Softail: 89 to 90-ALL
8	48033-84	BRACKET, cannister mounting-front (1)	Softail: 87 and 88-ALL
9	54508-86A	SHOCK ABSORBER, complete-left (1)	Softail: 87 and 88-ALL
9	54520-86	SHOCK ABSORBER, complete-right (1)	Softail: 87 and 88-ALL
10	54508-89	SHOCK ABSORBER, complete (2)	Softail: 89 to 90-ALL
11	54551-86	ROD EYE (2)	Softail: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

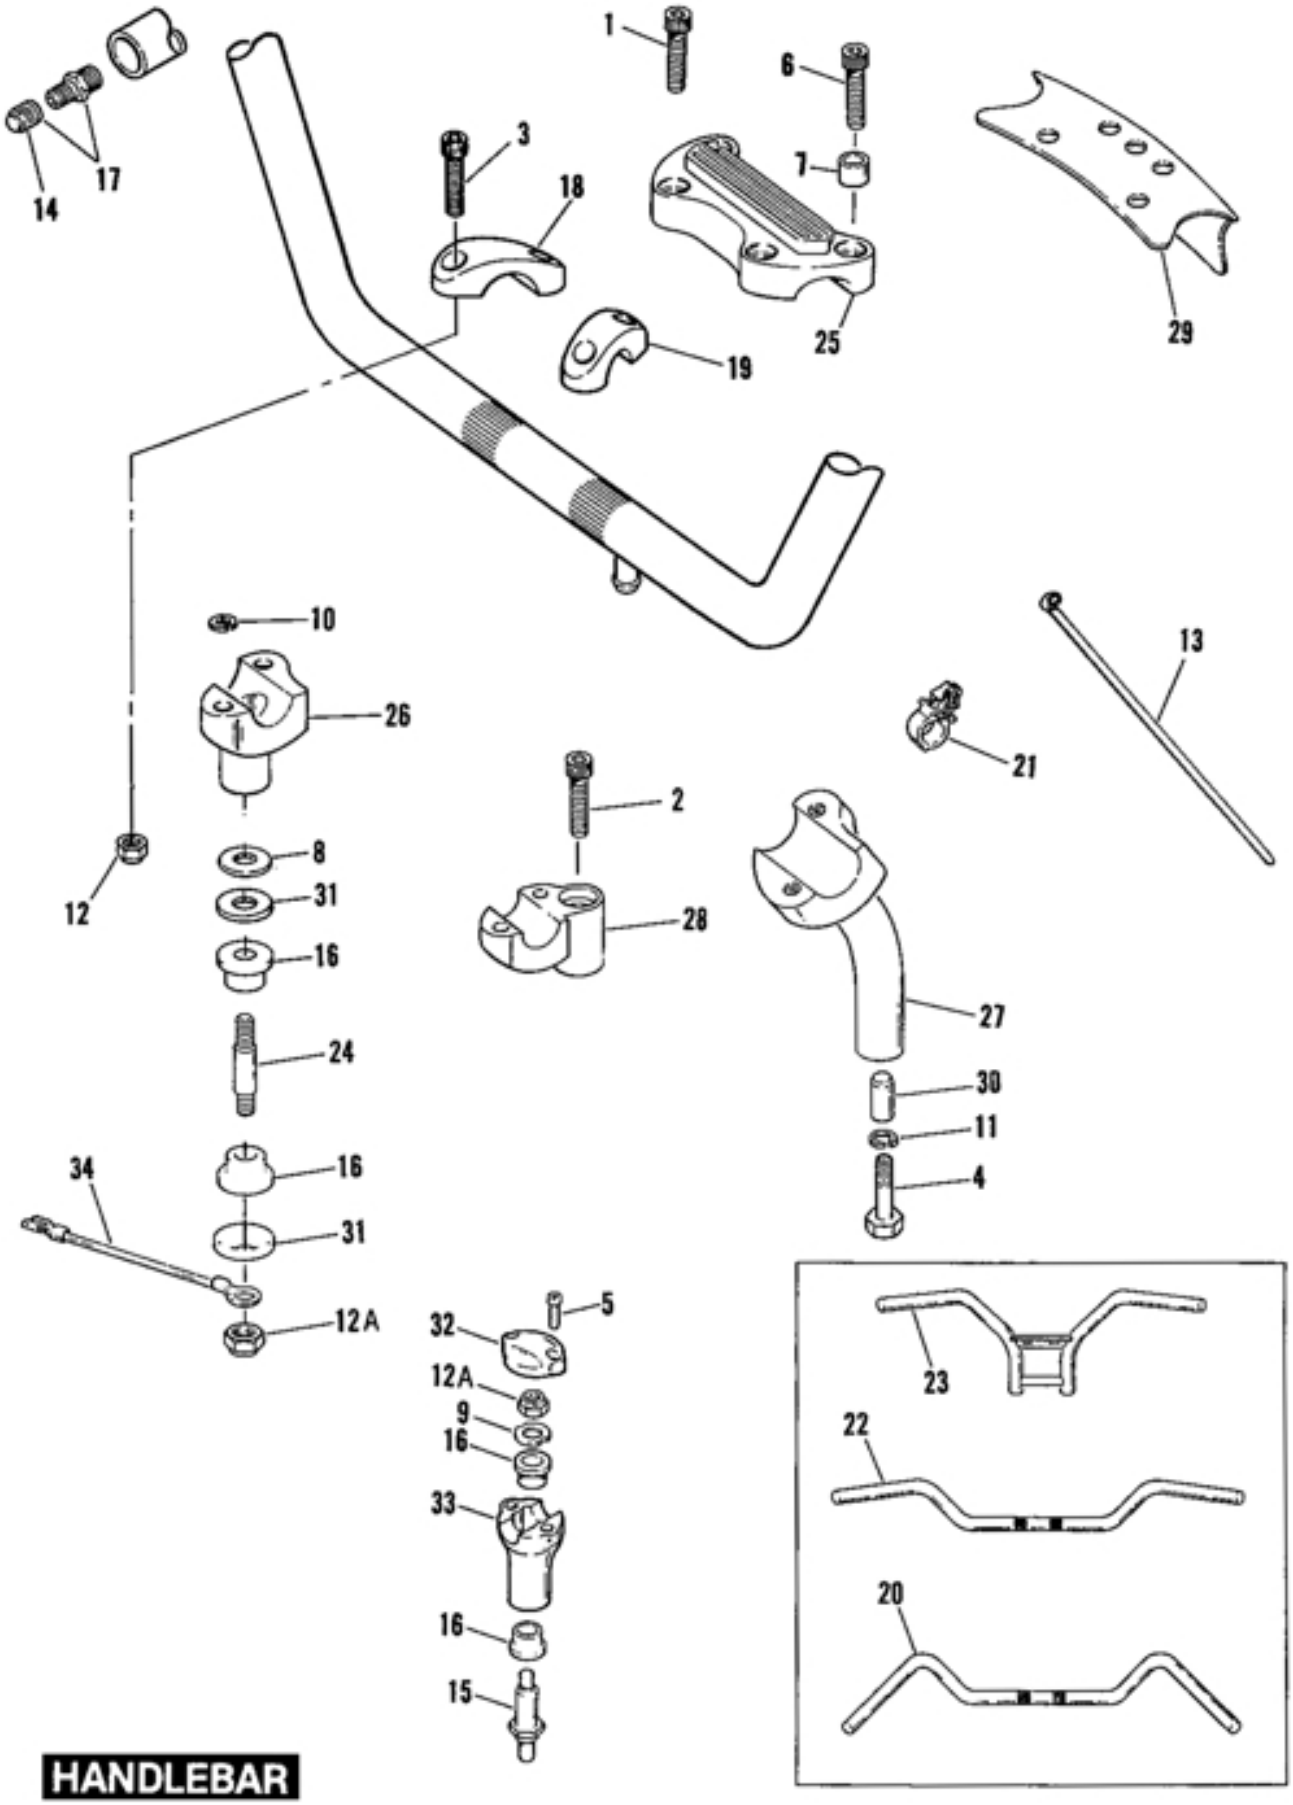
1
6
3
7
18
14
17
25
29
19
10
26
13
21
12
2
8
31
28
16
24
27
30
11
34
16
4
31
12A
5
32
12A
9
16
33
16
15
23
22
20


HANDLEBAR

HANDLEBAR (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	853A	SCREW (2)	FXR: 87-EB; 87 to 90-EG/M
1	4809	SCREW (4)	FXR: 87 to 90-EC
2	867A	SCREW (2)	FXR: 87 to 90-EC
3	3210	SCREW (4)	Touring: 87 to 90-ALL
4	3450	BOLT (2)	Softail: 87 to 90-BH/K
4	3471	BOLT (2)	FXR: 87 to 90-EL
5	3494	BOLT (4)	Softail: L88 to 90-BL
6	4816A	SCREW (4)	FXR: 87 to 90-EA/B/G/M
7	5736	SPACER (2)	FXR: 87-EB/J; 87 to 90-EG/M
8	6113	WASHER (1)	Touring: 87 to 90-ALL
9	6753	WASHER (2)	Softail: L88 to 90-BL
10	7042	LOCKWASHER (2)	FXR: 87 to 90-EA/B/G/M
11	7068	LOCKWASHER (2)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K
12	7739	LOCKNUT (4)	FXR: 87 to 90-EA/B/C/G/M Touring: 87 to 90-ALL
12A	7768W	LOCKNUT (2)	FXR: 87 to 90-EA/B/C/G/M Softail: 87 to 90-BJ/L/M
12A	7844	LOCKNUT (2)	FXR: 87 to 90-EC Touring: 87 to 90-ALL
13	10065	CABLE STRAP (2)	Softail: 87 to 90-ALL
14	41123-79	VALVE CAP (1)	FXR: 88 to 90-EC/G/M Touring: 88 to 90-ALL
15	45544-88	STUD, rigid fork leg (2)	Softail: L88 to 90-BL
16	53156-86	BUSHING, rubber (4)	Softail: 87 to 90-ALL
16	56158-73	BUSHING, rubber (4)	FXR: 87 to 90-ALL
16	56161-83	BUSHING, rubber (4)	Touring: 87 to 90-ALL
17	54316-83A	VALVE STEM ASSY. (1)	FXR: 87 to 90-EC/G/M Touring: 88 to 90-ALL
18	55917-79	CLAMP, upper-right (1)	Touring: 87 to 90-ALL
19	55918-79	CLAMP, upper-left (1)	Touring: 87 to 90-ALL
20	55919-82	HANDLEBAR (1)	Softail: 90 to 90-BM
20	55920-83A	HANDLEBAR, N/A (1)	Touring: 87-ALL
20	55934-89	HANDLEBAR (1)	FXR: L89 to 90-EM
20	55920-83B	HANDLEBAR (1)	Touring: 88 to 90-ALL
20	55936-88	HANDLEBAR (1)	FXR: 88 to 90-EC
20	55937-88	HANDLEBAR (1)	FXR: 88 to 90-EG
20	56081-82	HANDLEBAR (1)	FXR: 87 to 90-EA/B Softail: 87 to 90-BH/K
20	56087-86	HANDLEBAR (1)	FXR: 87-EC
20	56093-88	HANDLEBAR (1)	Softail: L88 to 90-BL
20	56569-86	HANDLEBAR (1)	Softail: 87 to 90-BJ
21	56073-83	RETAINER (4)	FXR: 87-ALL; 88 to 90-EA/C Softail: 87 to 90-ALL
21	70345-84	RETAINER (4)	Touring: 87-ALL
22	56082-83	HANDLEBAR (1)	FXR: 87-EG
23	56084-87A	HANDLEBAR (1)	FXR: 87 to 90-EL
24	56105-84	STUD (2)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BJ/M
24	56137-84A	STUD (2)	Touring: 87 to 90-ALL
25	56115-79B	CLAMP, upper (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
25	56119-77A	CLAMP, upper (1)	FXR: 88 to 90-EB Softail: 87 to 90-BH/K
25	56567-86A	CLAMP, upper (chrome) (1)	Softail: 87 to 90-BJ/M

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

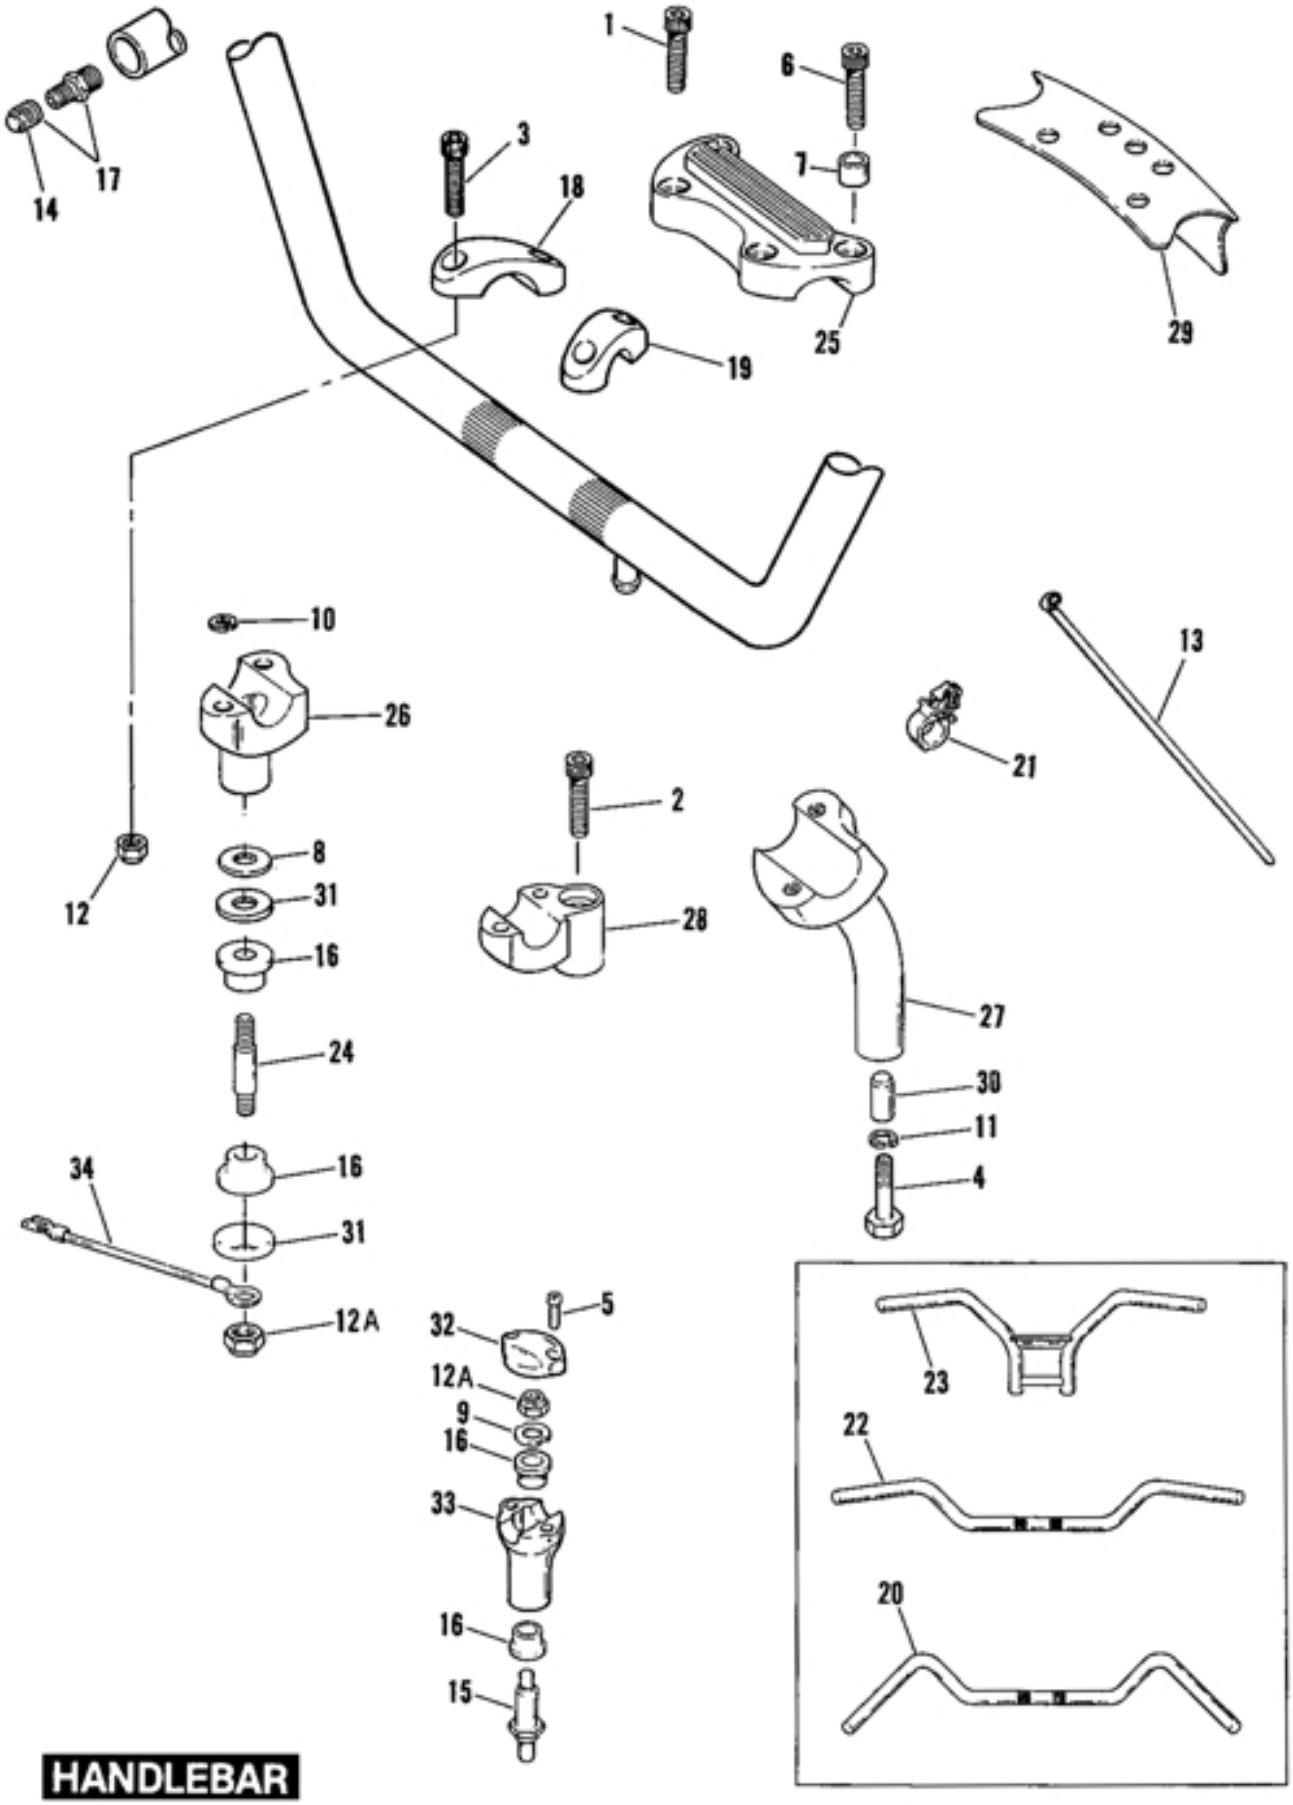
1
6
3
7
18
25
29
19
14
17
10
26
13
21
12
8
31
16
2
28
24
27
30
11
4
34
16
31
12A
5
32
12A
9
16
33
16
15
23
22
20

HANDLEBAR


HANDLEBAR (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	56116-82A	CLAMP, lower-right (left-EA) (1)	FXR: 87 to 90-EA/B/G/M
26	56117-82A	CLAMP, lower-left (right-EA) (1)	FXR: 87 to 90-EA/B/G/M
26	56140-84A	CLAMP, lower-left (1)	Touring: 87-ALL; 88 to 90-DB/M, FA
26	56141-84A	CLAMP, lower-right (1)	Touring: 87-ALL; 88 to 90-DB/M, FA
26	56149-88	CLAMP, lower-left (1)	Touring: 88 to 90-DJ/P
26	56151-88A	CLAMP, lower-right (1)	Touring: 88 to 90-DJ/P
26	56541-86A	CLAMP, lower-left (chrome) (1)	Softail: 87 to 90-BJ/M
26	56542-86A	CLAMP, lower-right (chrome) (1)	Softail: 87 to 90-BJ/M
27	56122-77	CLAMP, lower-left (1)	Softail: 87 to 90-BH/K
27	56124-77	CLAMP, lower-right (1)	Softail: 87 to 90-BH/K
28	56144-86	CLAMP, lower-right (1)	FXR: 87 to 90-EC
28	56146-86	CLAMP, lower-left (1)	FXR: 87 to 90-EC
29	56148-87	COVER (1)	FXR: 87 to 90-EL
30	56153-73	SPACER (2)	FXR: 87 to 90-EC/L Softail: 87 to 90-BH/K
31	56159-73	CUP WASHER (4)	ALL
32	56538-88	CLAMP (2)	Softail: L88 to 90-BL
33	56540-88	RISER (2)	Softail: L88 to 90-BL
34	70142-86	CABLE, ground (1)	Touring: 87 to 90-ALL
34	70191-73A	CABLE, ground (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/K
34	70197-86	CABLE, ground (1)	Softail: 87 to 90-BJ/M
		INTERNATIONAL MODELS ONLY	
5	3531	SCREW, HDI only (4)	Softail: L88 to 90-BL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


THROTTLE CONTROL

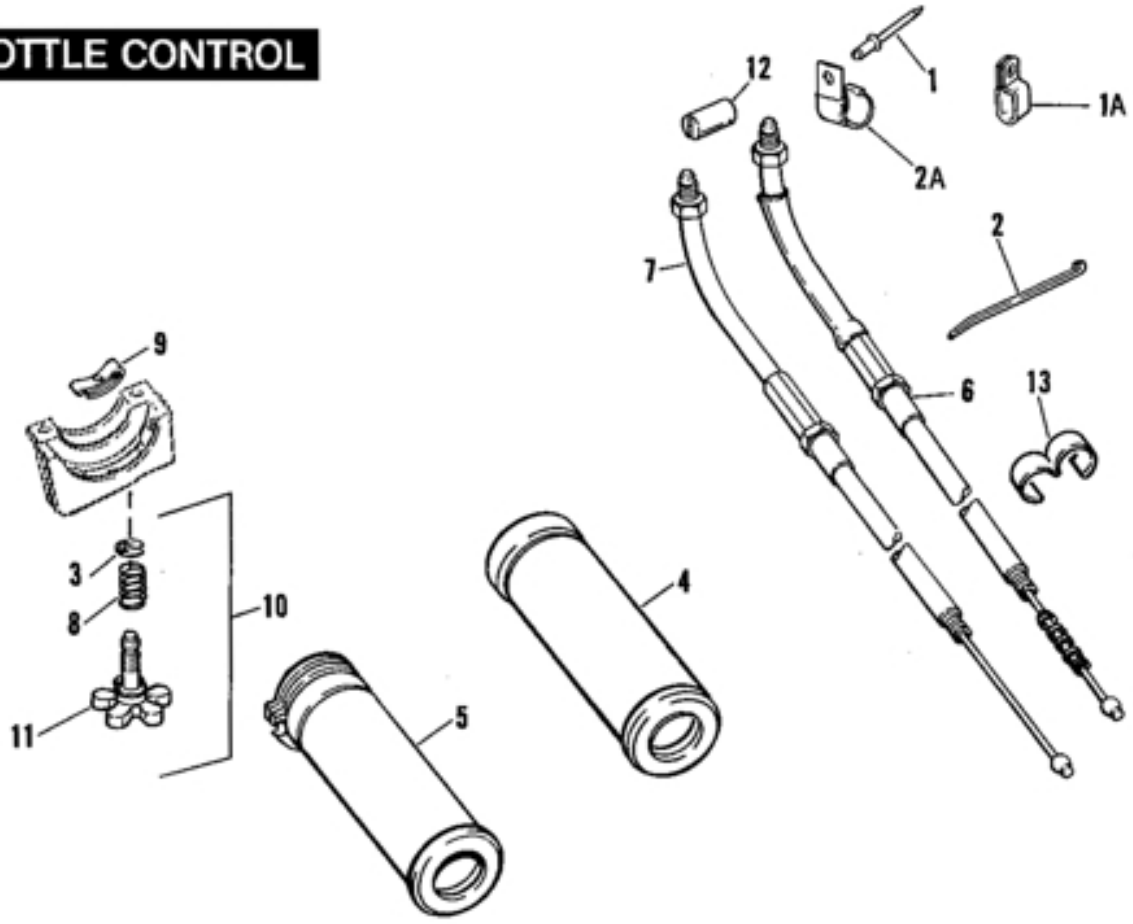

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	8483	RIVET (1)	Touring: 90 to 90-ALL
1A	9988	CLAMP, throttle cable (1)	FXR: 87 to 90-ALL Softail: L88 to 90-BL
1A	10003	CLAMP (1)	Touring: 87 to 90-ALL
2	10006	CABLE STRAP (1)	Softail: 87 to 90-ALL
2	10007	CABLE STRAP (1)	Touring: 87 to 90-ALL
2A	10092	CLAMP (1)	Touring: 90 to 90-ALL
3	11155	RETAINING RING (1)	ALL
4	55915-88	GRIP, left (1)	FXR: 88 to 90-EC/G Touring: 88 to 90-ALL
4	56206-81A	GRIP, left (1)	FXR: 87 to 90-ALL; 88 to 90-EA/B/L Softail: 87 to 90-ALL Touring: 87 to 90-ALL
5	56220-81B	GRIP AND SLEEVE, throttle-right (1)	ALL
6	56305-88	IDLE CONTROL (1)	Softail: L88 and 89-BL
6	56305-90	IDLE CONTROL (1)	Softail: 90 to 90-BL
6	56323-81C	IDLE CONTROL (1)	FXR: 87 to 90-EA/B Softail: 87 to 89-BH/J/K
6	56328-81B	IDLE CONTROL (1)	Touring: 87 and 88 ALL; 89-DB/J, FA
6	56328-90	IDLE CONTROL (1)	Touring: 90 to 90-DB/J, FA
6	56337-83	IDLE CONTROL (1)	FXR: 87-EL; 87 to 90-EC/G
6	56342-88	IDLE CONTROL (1)	FXR: 88 to 90-EL
6	56342-90	IDLE CONTROL (1)	FXR: 90 to 90-ALL Softail: 90 to 90-BH/J/K/M
7	56306-88	THROTTLE CONTROL (1)	Softail: L88 and 89-BL
7	56306-90	THROTTLE CONTROL (1)	Softail: 90 to 90-BL
7	56324-81C	THROTTLE CONTROL (1)	FXR: 87 to 90-EA/B Softail: 87 to 89-BH/J/K
7	56327-81B	THROTTLE CONTROL (1)	Touring: 87 and 88 ALL; 89-DB/J, FA
7	56327-90	THROTTLE CONTROL (1)	Touring: 90 to 90-DB/J, FA
7	56336-83	THROTTLE CONTROL (1)	FXR: 87-EL; 87 to 90-EC/G
7	56343-88	THROTTLE CONTROL (1)	FXR: 88 to 90-EL
7	56343-90	THROTTLE CONTROL (1)	FXR: 90 to 90-ALL Softail: 90 to 90-BH/J/K/M
8	56394-74	SPRING, adjusting screw (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89-DB/J, FA
9	56396-74A	FRICTION SPRING, throttle (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89-DB/J, FA
10	56397-74C	ADJUSTING SCREW KIT, w/3, 8 and 11 (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89-DB/J, FA
11	56402-83A	ADJUSTING SCREW (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL; 89-DB/J, FA
12	56508-76	FERRULE, control wire (2)	ALL
13	70504-81	CLIP, throttle cables (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

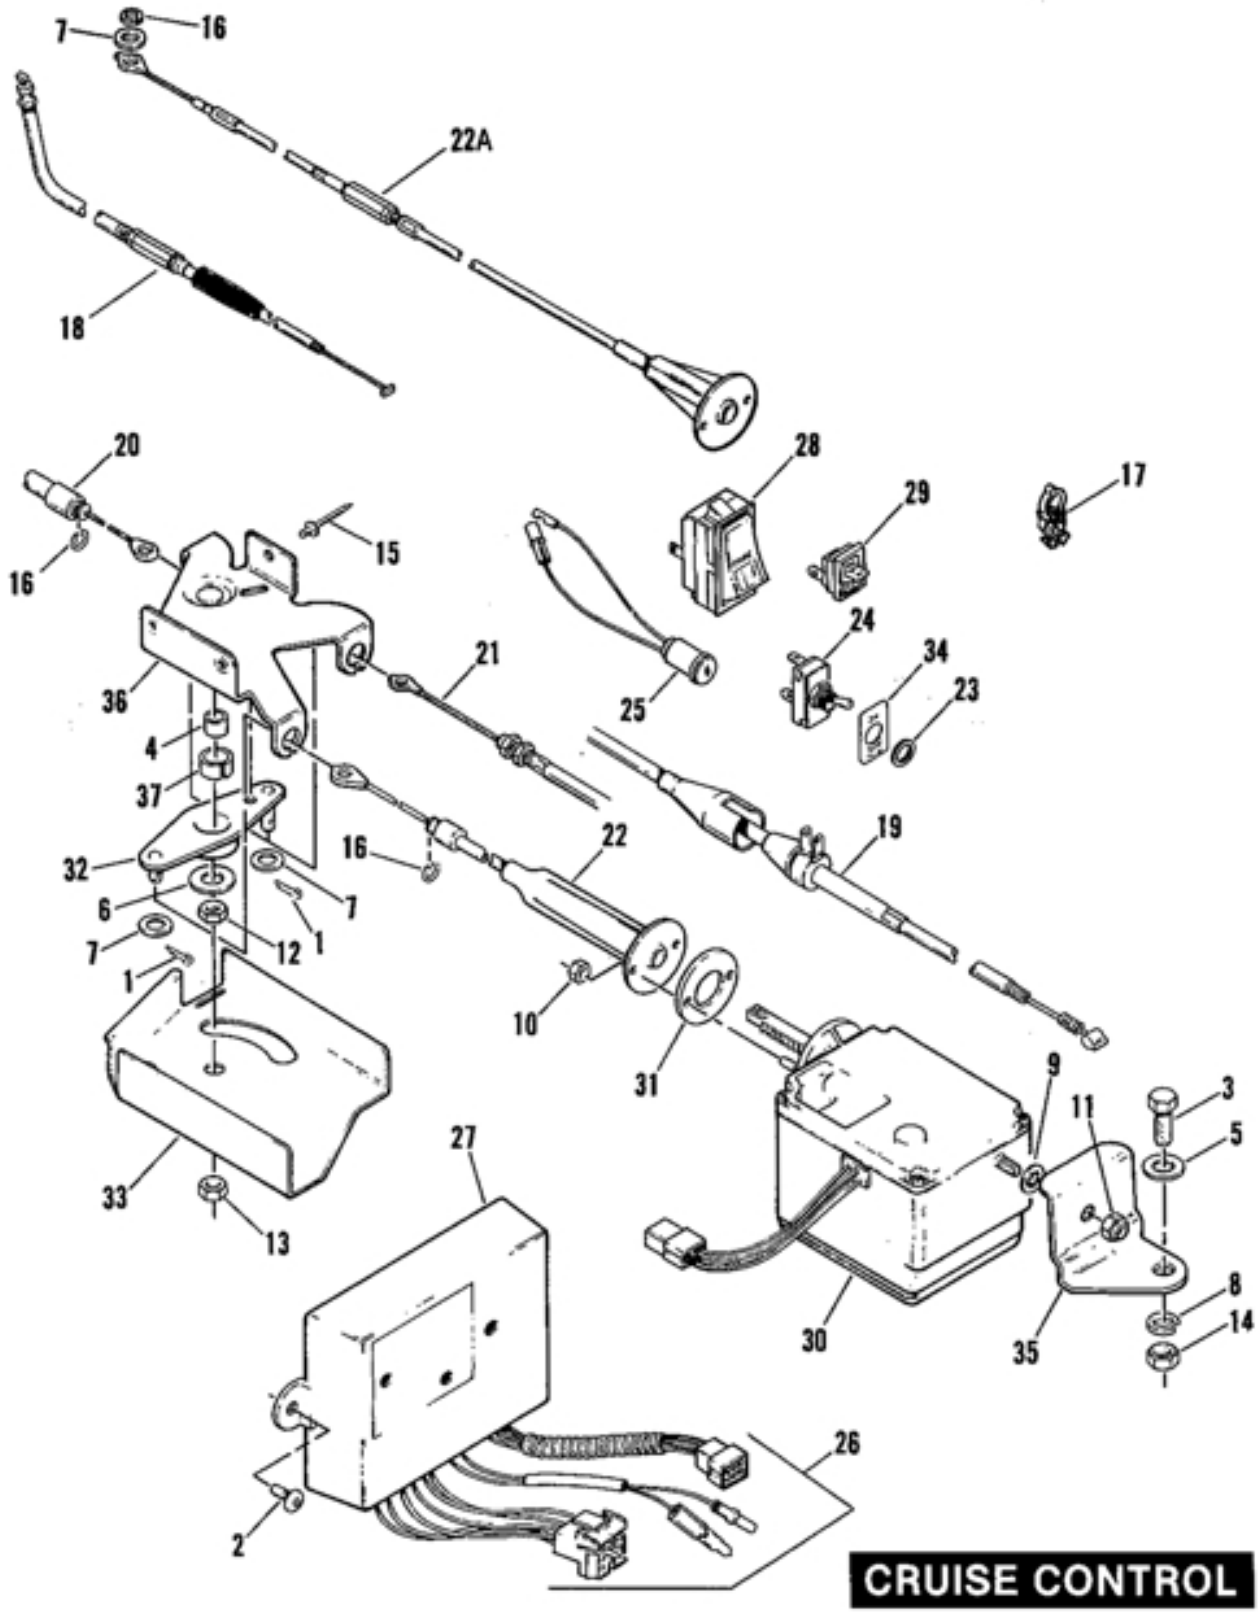

7
16
22A
18
20
16
15
28
29
17
25
24
34
23
21
36
4
37
32
6
7
12
1
7
1
16
22
19
10
31
9
11
3
5
8
14
35
30
27
33
13
26
2
CRUISE CONTROL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	551	COTTER PIN (2)	Touring: 89-DM/P
2	2501	SCREW (2)	Touring: 89 to 90-DM/P
3	3987	BOLT (1)	Touring: 89 to 90-DM/P
4	5758	SPACER (1)	Touring: 89-DM/P
5	6702	WASHER (1)	Touring: 89 to 90-DM/P
6	6703	WASHER (1)	Touring: 89-DM/P
7	6716	WASHER, 2-1989 (1)	Touring: 89 to 90-DM/P
8	7041	LOCKWASHER (1)	Touring: 89 to 90-DM/P
9	7230	LOCKWASHER (1)	Touring: 89 to 90-DM/P
10	7609W	LOCKNUT (2)	Touring: 89 to 90-DM/P
11	7686	LOCKNUT (1)	Touring: 89-DM/P
12	7689W	JAMNUT (1)	Touring: 89-DM/P
13	7742	LOCKNUT (1)	Touring: 89-DM/P
14	7748W	NUT (1)	Touring: 89 to 90-DM/P
15	8325	RIVET (3)	Touring: 89-DM/P
16	11013	RETAINING RING (2)	Touring: 89-DM/P
16	11193	RETAINING RING (2)	Touring: 90 to 90-DM/P
17	56073-83	RETAINER (2)	Touring: 90 to 90-DM/P
18	56327-90	THROTTLE CONTROL (1)	Touring: 90 to 90-DM/P
19	56351-89A	IDLE CONTROL (1)	Touring: 89-DM/P
19	56351-90	IDLE CONTROL (1)	Touring: 90 to 90-DM/P
20	56352-89	THROTTLE CONTROL, long (1)	Touring: 89-DM/P
21	56353-89	THROTTLE CONTROL, short (1)	Touring: 89-DM/P
22	56354-89	SERVO CONTROL (1)	Touring: 89-DM/P
22A	56354-90	SERVO CONTROL (1)	Touring: 90 to 90-DM/P
23	67846-70	NUT, toggle switch (1)	Touring: 89 to 90-DM
24	67858-89	SWITCH, cruise control (1)	Touring: 89 to 90-DM
25	68536-75	INDICATOR LAMP (1)	Touring: 89 to 90-DM
25	68688-89	LAMP ASSEMBLY, cruise indicator (1)	Touring: 89 to 90-DM
	70141-89	HARNESS, cruise control (not illus.) (1)	Touring: 89-DM/P
	70141-90	HARNESS, cruise control (not illus.) (1)	Touring: 90 to 90-DM/P
26	70312-89	WIRING HARNESS (1)	Touring: 89-DM/P
26	70316-90	WIRING HARNESS (1)	Touring: 90 to 90-DM/P
27	70955-89	MODULE, w/harness-cruise control, N/A (1)	Touring: 89-DM/P
27	70956-90	MODULE, w/harness-cruise control, N/A (1)	Touring: 90 to 90-DM/P
27	70958-89A	MODULE, cruise control (1)	Touring: 89-DM/P
27	70958-90A	MODULE, cruise control (1)	Touring: 90 to 90-DM/P
28	71513-89	SWITCH, cruise control (1)	Touring: 89 to 90-DP
	71585-89	CABLE ASY., cruise set switch (not illus.) (1)	Touring: 89-DM/P
	71585-90	CABLE ASY., cruise set switch (not illus.) (1)	Touring: 90 to 90-DM/P
29	77101-89	HANDLEBAR SWITCH, cruise set (1)	Touring: 89-DM/P
29	77101-90A	HANDLEBAR SWITCH, cruise set/resume (1)	Touring: 90 to 90-DM/P
30	77106-89	SERVO MOTOR (1)	Touring: 89 to 90-DM/P
31	77109-89	GASKET (1)	Touring: 89 to 90-DM/P
32	77111-89	LEVER (1)	Touring: 89-DM/P
33	77112-89	COVER, lever assembly (1)	Touring: 89-DM/P
34	77113-89	LABEL, cruise (1)	Touring: 89 to 90-DM
35	77500-89	MOUNTING BRACKET, servo motor (1)	Touring: 89 to 90-DM/P
36	77503-89	BRACKET (1)	Touring: 89-DM/P
37	77508-89	BUSHING (1)	Touring: 89-DM/P
		INTERNATIONAL MODELS ONLY	
	77135-89	CRUISE CONTROL CUT-OUT, HDI only (1)	Touring: 89-DM/P

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

WINDSHIELD, FAIRING & LAMPS — FLTC

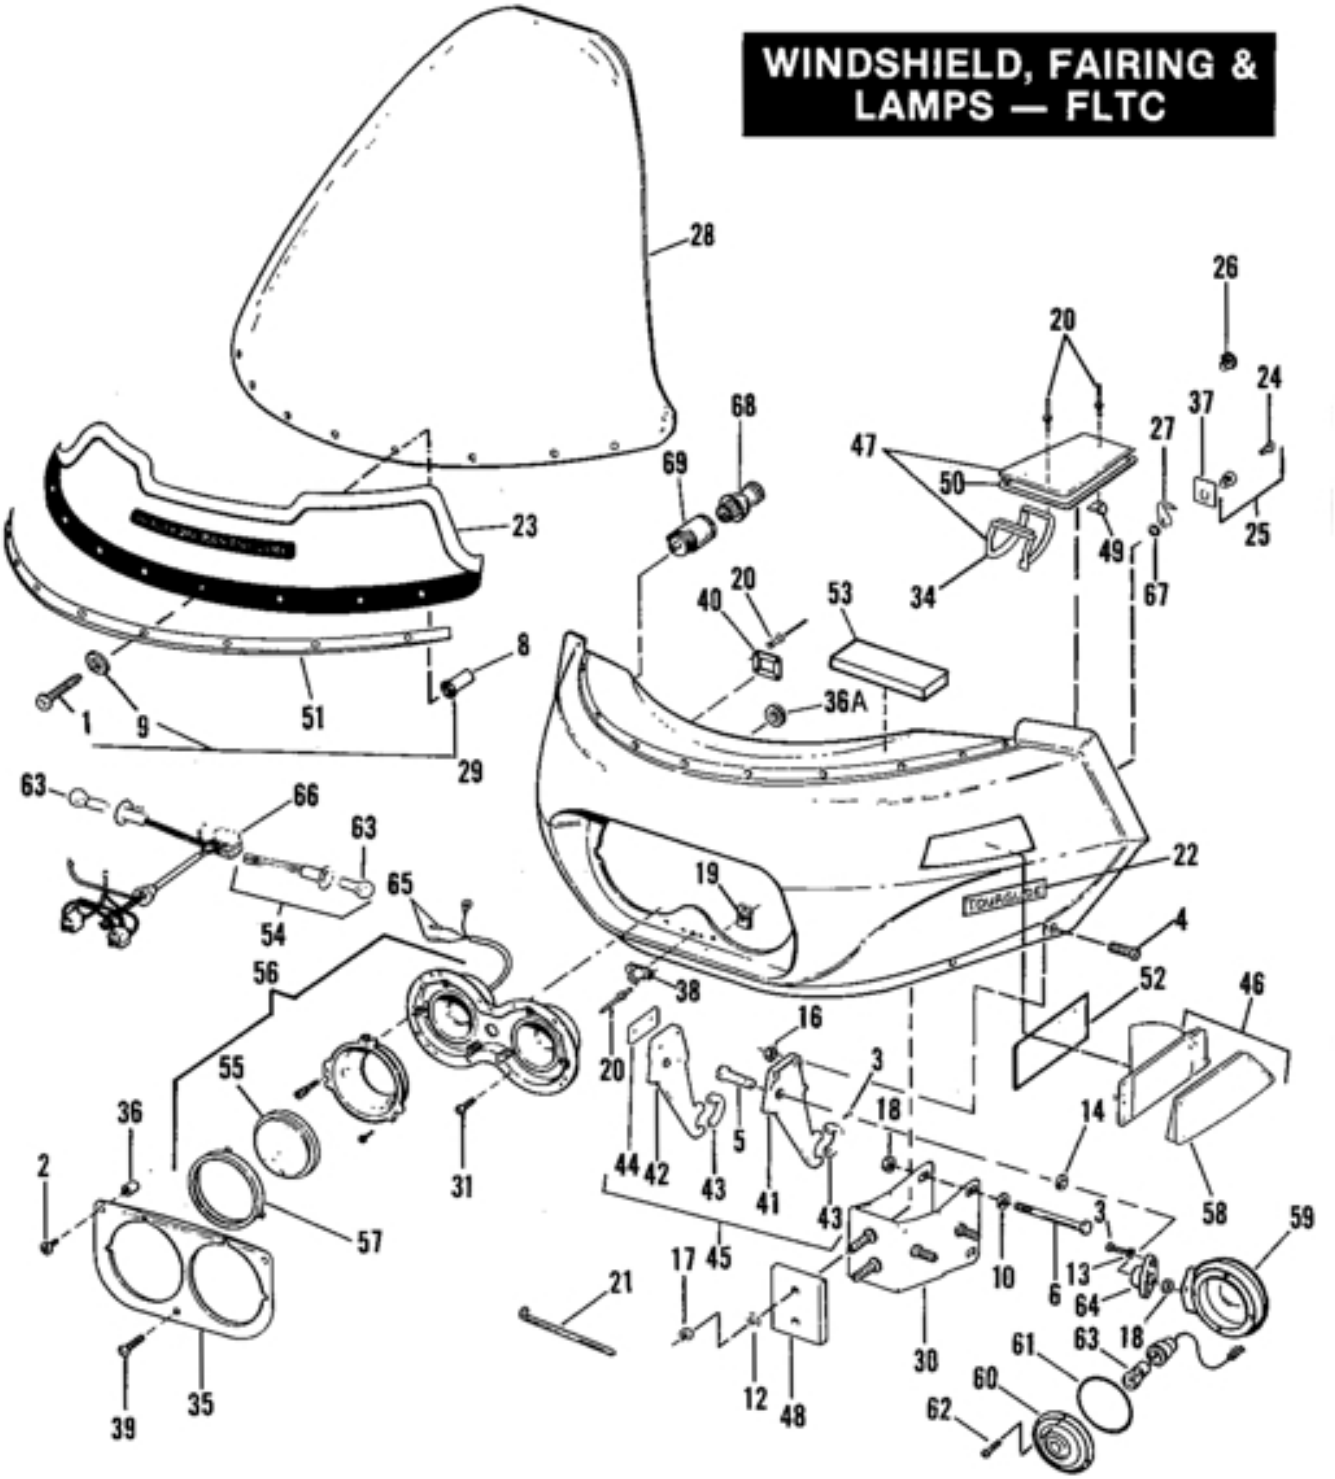


WINDSHIELD, FAIRING AND LAMPS - FLTC (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	933	SCREW (7)	Touring: 87 to 90-DB/M
2	2504	SCREW (2)	Touring: 87 to 90-DB/M
3	2647A	SCREW, 4-87 (8)	Touring: 87 to 90-DB/M
4	2648	SCREW (4)	Touring: 87 to 90-DB/M
5	4411	BOLT (2)	Touring: 88 to 90-DB/M
6	4435W	BOLT (2)	Touring: 87 to 90-DB/M
8	5207	WELL NUT (7)	Touring: 87 to 90-DB/M
9	6053	WASHER (7)	Touring: 87 to 90-DB/M
10	6701	WASHER (4)	Touring: 87 to 90-DB/M
12	6702	WASHER (2)	Touring: 87 to 90-DB/M
13	7069	LOCKWASHER (4)	Touring: 88 to 90-DB/M
14	7130W	LOCKWASHER (4)	Touring: 88 to 90-DB/M
16	7686	LOCKNUT (4)	Touring: 87 to 90-DB/M
17	7725	LOCKNUT (2)	Touring: 87 to 90-DB/M
18	7775	LOCKNUT, 2-87 (4)	Touring: 87 to 90-DB/M
19	8107	CLIP NUT, headlamp mtg. (4)	Touring: 87 to 90-DB/M
20	8692	POP RIVET, black aluminum (22)	Touring: 87 to 90-DB/M
21	10006	CABLE STRAP (2)	Touring: 88 to 90-DB/M
21	10065	CABLE STRAP (2)	Touring: 90 to 90-DB/M
22	14010-82	DECAL, "Tour Glide" (cream) (2)	Touring: 87 to 90-DB
22	14011-82	DECAL, "Tour Glide" (silver) (2)	Touring: 87 to 90-DB
22	14012-82A	DECAL, "Tour Glide" (gold) (2)	Touring: 87 to 90-DB
22	14158-87	DECAL, "Tour Glide" (red), N/A (2)	Touring: 87 and 88-DB
23	14048-86	DECAL, "Tour Glide" (grey), N/A (1)	Touring: 87 and 88-DB
23	14224-89	DECAL, "Harley-Davidson" (silver) (1)	Touring: 89 to 90-DM
24	48152-82	KEY, specify key no. 1 to 100 (1)	Touring: 87 to 90-DB
25	53580-82	CAM LOCK, fairing (2)	Touring: 87 to 90-DB/M
26	53582-82	SCREW, w/washer (2)	Touring: 87 to 90-DB/M
27	53583-82	CAM HOOK (2)	Touring: 87 to 90-DB/M
27	53587-85	LOCK SET, w/#24-27 and 67 (1)	Touring: 87 to 90-DB/M
28	58009-83B	WINDSHIELD ASSEMBLY, 2 inches over std. w/#1, 8, 9, 23 and 51, N/A (1)	Touring: 87 and 88-DB
28	58009-89A	WINDSHIELD ASSEMBLY, 2 inches over std. w/#1, 8, 9, 23 and 51 (1)	Touring: 89 to 90-D/M
28	58016-83B	WINDSHIELD ASSEMBLY, std. w/#1, 8, 9, 23 and 51, N/A (1)	Touring: 87 and 88-DB
28	58016-89A	WINDSHIELD ASSEMBLY, std. w/#1, 8, 9, 23 and 51 (1)	Touring: 89 to 90-D/M
28	58453-83B	WINDSHIELD ASSEMBLY, 3 inches under std. w/#1, 8, 9, 23 and 51, N/A (1)	Touring: 87 and 88-DB
28	58453-89A	WINDSHIELD ASSEMBLY, 3 inches under std. w/#1, 8, 9, 23 and 51 (1)	Touring: 89 to 90-D/M
29	58031-80	WINDSHIELD MTG. KIT, w/and 1, 8 and 9 (1)	Touring: 87 to 90-DB/M
30	58400-80	BRACKET, mtg.-upper (1)	Touring: 87 to 90-DB/M
31	58402-80	SCREW, headlamp mtg. (4)	Touring: 87 to 90-DB/M
34	58459-80	HINGE, cover (2)	Touring: 87 to 90-DB/M
35	58460-80	TRIM PLATE, headlamp (1)	Touring: 87 to 90-DB/M
36	58461-80	SPACER (2)	Touring: 87 to 90-DB/M
36A	58462-89	GROMMET, slit (1)	Touring: 89 to 90-DM
37	58466-80	WASHER PLATE (2)	Touring: 87 to 90-DB/M
38	58473-80	MOUNTING BRACKET (3)	Touring: 87 to 90-DB/M
39	58477-80	SCREW, headlamp trim plate (1)	Touring: 87 to 90-DB/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

WINDSHIELD, FAIRING & LAMPS — FLTC

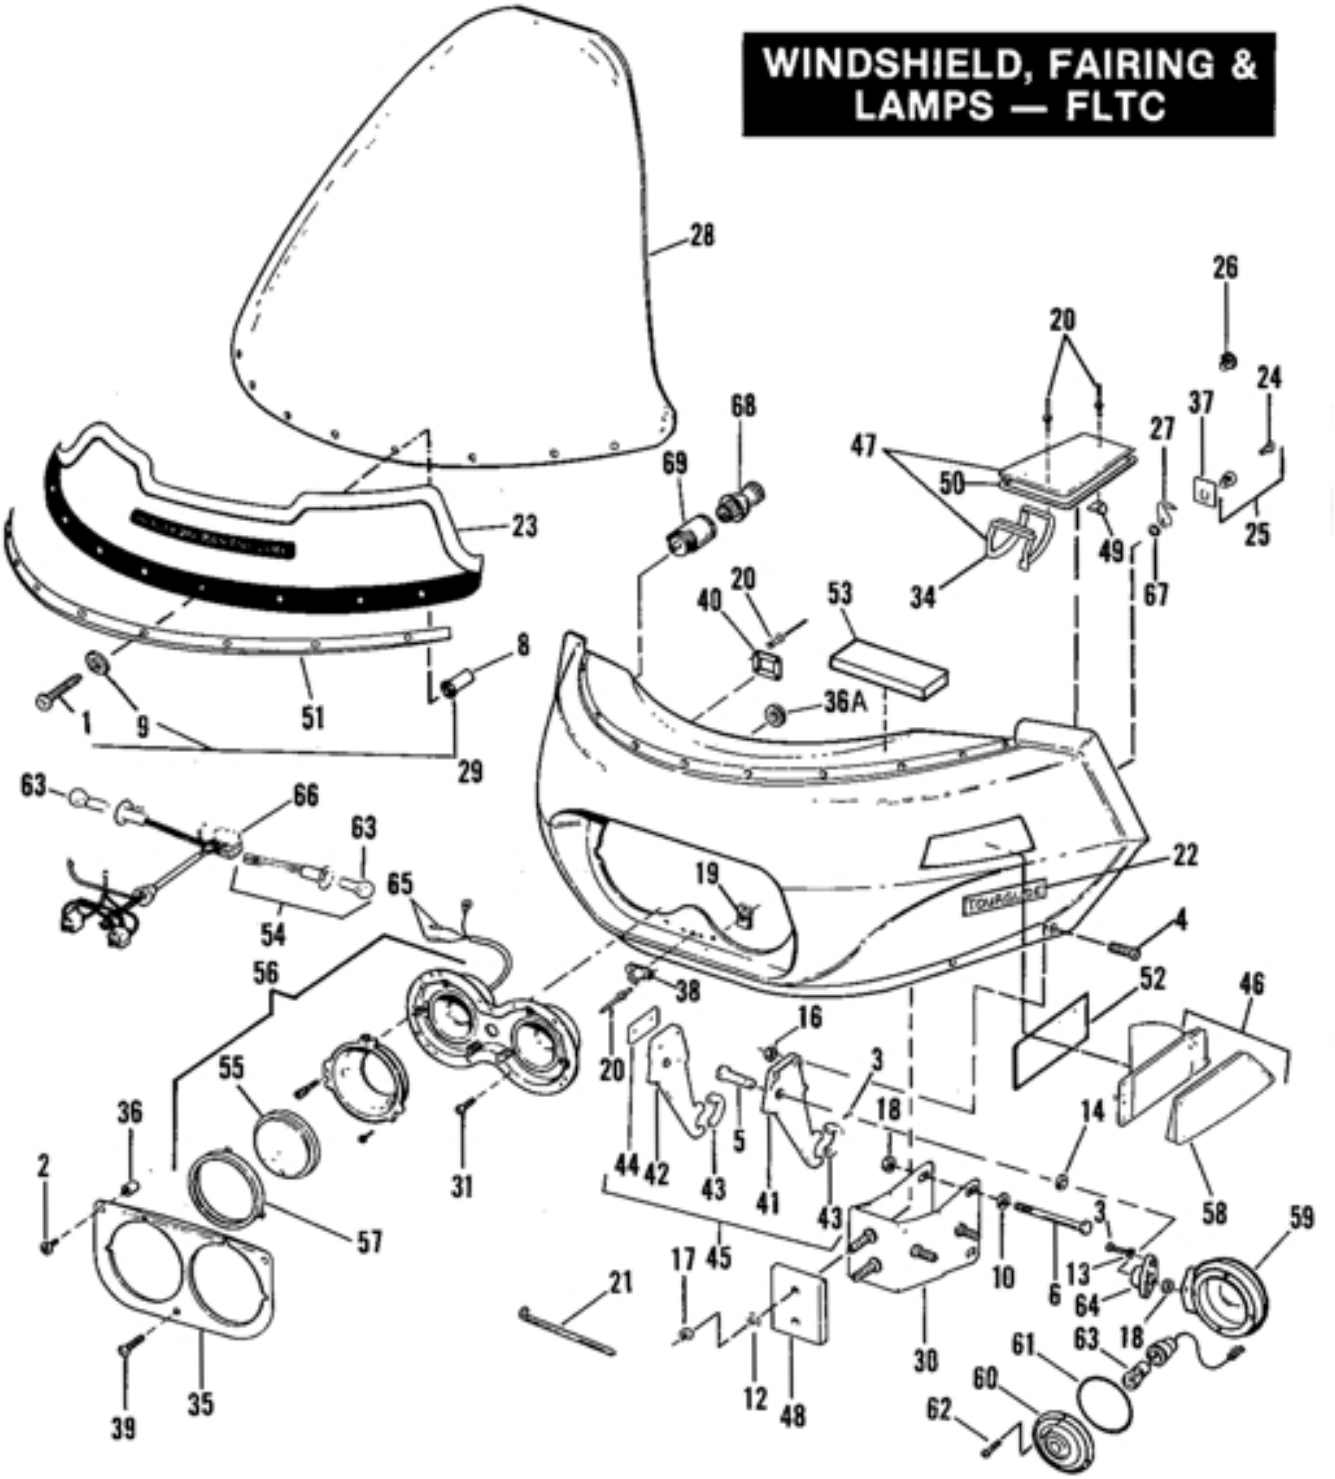


WINDSHIELD, FAIRING AND LAMPS - FLTC (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
40	58482-86	MOUNTING PLATE (1)	Touring: 87 to 90-DB/M
41	58484-84	SUPPORT BRACKET, left, N/A (1)	Touring: 87-DB
41	58484-84A	SUPPORT BRACKET, left, N/A (1)	Touring: 88-DB
41	58484-89	SUPPORT BRACKET, left (1)	Touring: 89 to 90-DB/M
42	58486-84	SUPPORT BRACKET, right, N/A (1)	Touring: 87-DB
42	58486-84A	SUPPORT BRACKET, right, N/A (1)	Touring: 88-DB
42	58486-89	SUPPORT BRACKET, right (1)	Touring: 89 to 90-DB/M
43	58487-79	CLAMP, mounting bracket (2)	Touring: 87 to 90-DB
43	58826-89	CLAMP, mounting bracket (2)	Touring: 89 to 90-DM
44	58488-84	GASKET (2)	Touring: 87 to 90-DB/M
45	58489-84	SUPPORT BRACKET KIT (1)	Touring: 87-DB
46	58498-86	TURN SIGNAL, right (amber) (1)	Touring: 87-DB
46	58499-86	TURN SIGNAL, left (amber) (1)	Touring: 87-DB
47	58712-79A	COVER, right (black) (1)	Touring: 87 to 90-DB/M
47	58713-79A	COVER, left (black) (1)	Touring: 87 to 90-DB/M
47	58729-82	COVER, left (brown) (1)	Touring: 87 to 90-DB
47	58730-82	COVER, right (brown) (1)	Touring: 87 to 90-DB
48	58714-79	PAD, rubber (1)	Touring: 87 to 90-DB/M
49	58715-79	LATCH, cover (2)	Touring: 87 to 90-DB/M
50	58716-79	GASKET, cover (2)	Touring: 87 to 90-DB/M
51	58717-79	FOAM TAPE, windshield (1)	Touring: 87 to 90-DB/M
52	58718-82	GASKET, turn signal-left (1)	Touring: 87-DB
52	58719-82	GASKET, turn signal-right (1)	Touring: 87-DB
53	66104-84	PAD (3)	Touring: 87 to 90-DB/M
54	67636-86	SOCKET ASSEMBLY (2)	Touring: 87-DB
55	67717-65A	SEALED BEAM (2)	Touring: 87 to 90-DB/M
56	67775-81A	HEADLAMP ASSEMBLY (1)	Touring: 87 to 90-DB/M
57	67746-85	RETAINING RING (2)	Touring: 87 to 90-DB/M
58	68089-80	LENS, left turn signal (amber) (1)	Touring: 87-DB
58	68092-80	LENS, right turn signal (amber) (1)	Touring: 87-DB
59	68398-88	LAMP W/WIRE (2)	Touring: 88 to 90-DB/M
60	68440-86	LENS, turn signals (amber) (2)	Touring: 88 to 90-DB/M
61	68451-86	O-RING (2)	Touring: 88 to 90-DB/M
62	68452-86	SCREW W/O-RING (4)	Touring: 88 to 90-DB/M
63	68168-89	BULB, turn signal (2)	Touring: 87 to 90-DB/M
64	68519-68	MOUNTING BRACKET (2)	Touring: 88 to 90-DB/M
65	72039-71	PIN, single socket (2)	Touring: 87 to 90-DB/M
66	72276-74	HOUSING, 12 pin (1)	Touring: 87 to 90-DB/M
67	84850-67	NUT, locks (2)	Touring: 87 to 90-DB/M
68	91808-89	ELEMENT, cigarette lighter (1)	Touring: 89 to 90-DM
69	91812-89	SOCKET, cigarette lighter (1)	Touring: 89 to 90-DM
		INTERNATIONAL MODELS ONLY	
30	58398-84	BRACKET, mtg. upper (1)	Touring: 87-DB/M
58	68505-90	LENS, turn signals (amber) (HDI only) (2)	Touring: 90 to 90-DB/M
	68399-88A	LAMP W/WIRE, HDI only (2)	Touring: 88 to 90-DB/M
63	68163-84	BULB, turn signal (HDI only) (2)	Touring: 88 to 90-DB/M

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

WINDSHIELD, FAIRING, HEADLAMP & NACELLE — FLHT/C & FLHS

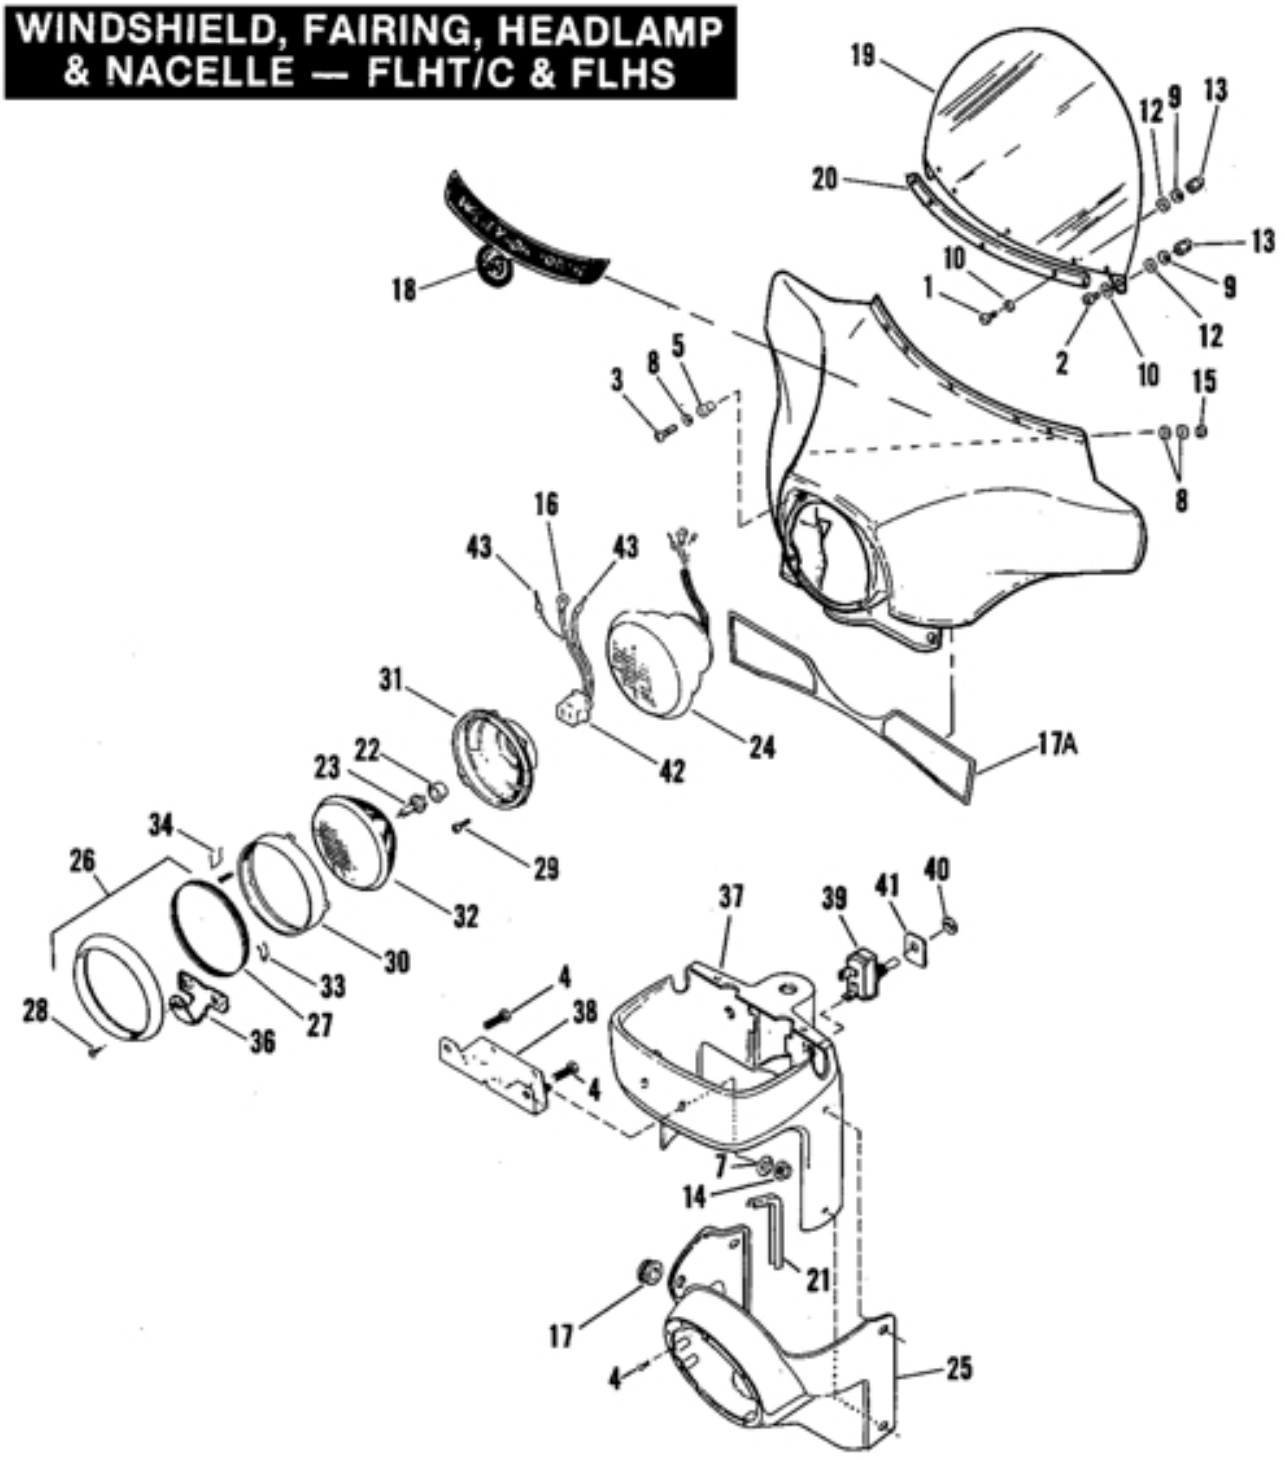


WINDSHIELD, FAIRING, HEADLAMP AND NACELLE - FLHT/C AND FLHS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2432	SCREW (5)	Touring: 87 to 90-DD/J/P
2	2726	SCREW (2)	Touring: 87 to 90-DD/J/P
3	2806	SCREW (5)	Touring: 87 to 90-DD/J/P
4	5209	SCREW, hi-lo (9)	Touring: 87 to 90-FA
5	5210	WELL NUT (5)	Touring: 87 to 90-DD/J/P
6	6036	WASHER (8)	Touring: 87 to 90-DD/J/P
7	6703	WASHER (2)	Touring: 87 to 90-FA
8	6717	WASHER (5)	Touring: 87 to 90-DD/J/P
9	7005	LOCKWASHER (7)	Touring: 87 to 90-DD/J/P
10	7017	WASHER, nylon (5)	Touring: 87 to 90-DD/J/P
12	7018	WASHER (7)	Touring: 87 to 90-DD/J/P
13	7653	ACORN NUT (7)	Touring: 87 to 90-DD/J/P
14	7682	LOCKNUT (2)	Touring: 87 to 90-FA
15	7686	LOCKNUT (4)	Touring: 87 to 90-DD/J/P
16	9857	TERMINAL, ring type (1)	Touring: 87 to 90-DD/J/P, FA
17	11412	GROMMET, cable routing (1)	Touring: 87 to 90-FA
17A	14128-86A	TRIM, lower fairing (1)	Touring: 87 to 90-DD/J/P
18	14217-89	DECAL, "U.S.A." (silver) (1)	Touring: 89 to 90-DP
18	14250-90	DECAL, "U.S.A." (gold) (1)	Touring: 90 to 90-DP
19	58187-86	WINDOW, fairing (1)	Touring: 87 to 90-DD/J/P
20	58247-86	CUSHION TAPE, outer fairing (1)	Touring: 87 to 90-DD/J/P
21	61117-86	TRIM, rubber (1)	Touring: 87 to 90-FA
22	67696-81	BOOT, halogen headlamp (1)	Touring: 87 to 90-DD/J/P, FA
23	67697-81	BULB, 12V. (halogen) (1)	Touring: 87 to 90-DD/J/P, FA
24	67702-81A	HEADLAMP, complete-12V. (halogen) (1)	Touring: 87 to 90-DD/J/P, FA
25	67704-83	NACELLE, headlamp (1)	Touring: 87 to 90-FA
26	67712-83	DOOR ASSY., w/spring (chrome) (1)	Touring: 87 to 90-DD/J/P, FA
27	67716-60A	GASKET, headlamp door (1)	Touring: 87 to 90-DD/J/P, FA
28	67718-60A	SCREW, headlamp door (1)	Touring: 87 to 90-DD/J/P, FA
29	67724-71	ADJUSTING SCREW, headlamp (2)	Touring: 87 to 90-DD/J/P, FA
30	67726-71	RETAINING RING, headlamp (1)	Touring: 87 to 90-DD/J/P, FA
31	67732-71A	MOUNTING RING, headlamp (1)	Touring: 87 to 90-DD/J/P, FA
32	67755-81A	HEADLAMP, less bulb-w/boot (1)	Touring: 87 to 90-DD/J/P, FA
33	67778-60	TOP SPRING, headlamp door (1)	Touring: 87 to 90-DD/J/P, FA
34	67780-60	BOTTOM SPRING, headlamp door (2)	Touring: 87 to 90-DD/J/P, FA
36	67782-60A	BRACKET, headlamp door (2)	Touring: 87 to 90-DD/J/P, FA
37	67795-85A	DASH PANEL SUPPORT KIT (1)	Touring: 87 to 90-FA
38	67817-83	BRACKET, headlamp door (1)	Touring: 87 to 90-FA
39	67843-70	TOGGLE SWITCH, hazard warning lamps (1)	Touring: 87 and 88-FA
39	67844-70	TOGGLE SWITCH, passing lamps (1)	Touring: 87 and 88-FA
39	67858-89	TOGGLE SWITCH, passing lamps (1)	Touring: 89 to 90-FA
40	67846-70	NUT, toggle switch (2)	Touring: 87 to 90-FA
41	68602-79	LABEL, hazard warning lamps (1)	Touring: 87 and 88-FA
41	68619-83	LABEL, passing lamps (1)	Touring: 87 to 90-FA
42	68634-86	LAMP WIRING AND CONNECTOR, headlamp (1)	Touring: 87 to 90-DD/J/P, FA
43	72039-71	PIN, single socket (1)	Touring: 87 to 90-DD/J/P, FA
		INTERNATIONAL MODELS ONLY	
	14019-83	LABEL, pass. and park. lamps (HDI only) (1)	Touring: 89 to 90-FA
39	67858-89	TOGGLE SWITCH, parking lamps (HDI only) (1)	Touring: 89 to 90-FA

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

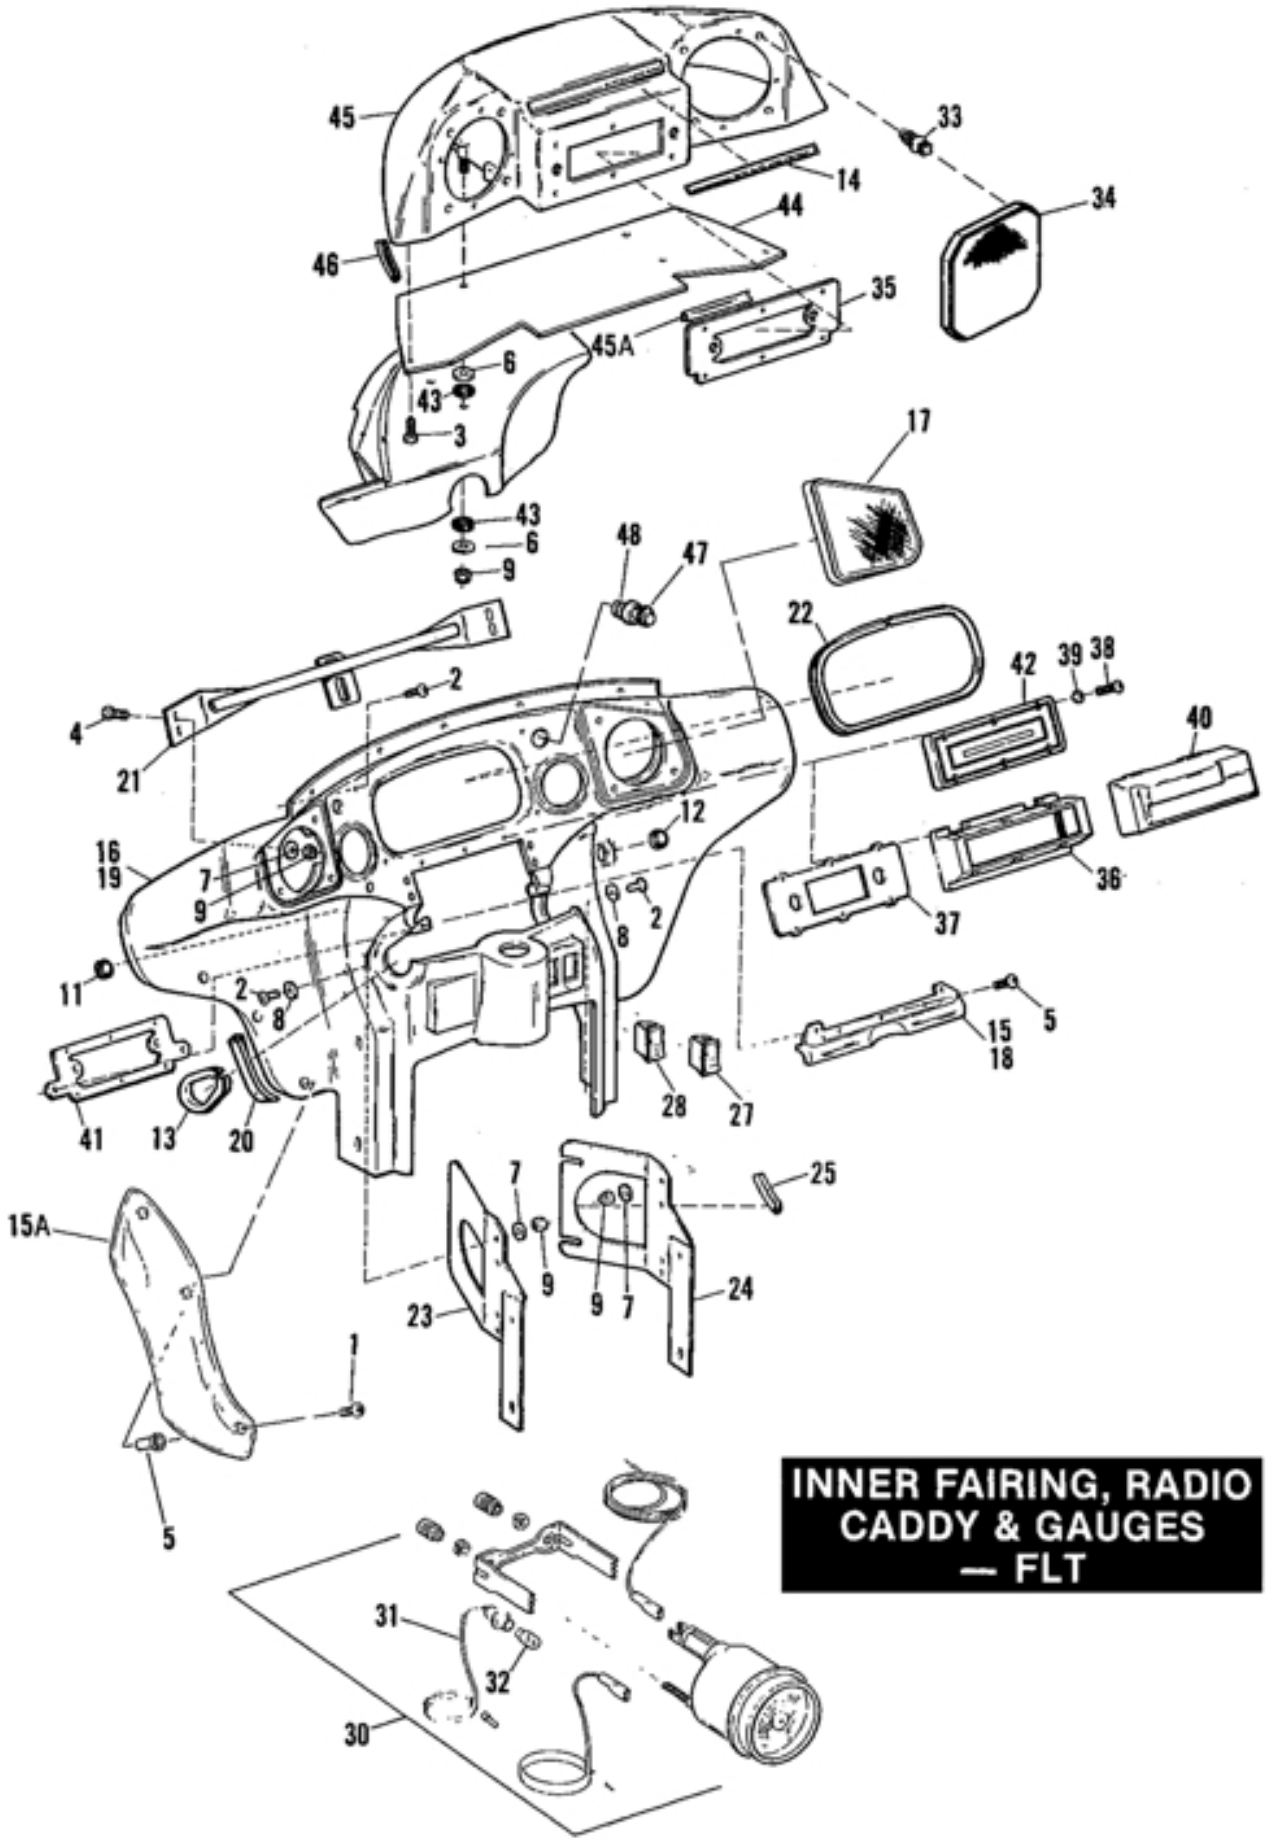


INNER FAIRING, RADIO CADDY & GAUGES — FLT

INNER FAIRING, RADIO CADDY AND GAUGES - FLT MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	922	SCREW (6)	Touring: 89 to 90-DP
2	2513	SCREW (8)	Touring: 87 to 90-DD/J/P
3	2623W	SCREW (4)	Touring: 87 to 90-DB/M
4	3787	BOLT (4)	Touring: 87 and 88-DD/J/P
4	4015	SCREW (4)	Touring: 89 to 90-DJ/P
5	5210	WELL NUT (6)	Touring: 89 to 90-DP
6	6253W	WASHER (8)	Touring: 87 to 90-DB/M
7	6703	WASHER (16)	Touring: 87 to 90-DD/J/P
8	7018	WASHER (4)	Touring: 87 to 90-DD/J/P
9	7686	LOCKNUT, 4-DB/M (12)	Touring: 87 to 90-ALL
11	11411	GROMMET, clutch cable (1)	Touring: 87-DD/J/P
11	11445	GROMMET, clutch cable (1)	Touring: 88 to 90-DJ/P
12	11422	GROMMET, throttle cables (1)	Touring: 87 to 90-DD/J/P
13	11453	GROMMET (2)	Touring: 87 to 90-ALL
14	14120-86	DECAL, radio caddy (1)	Touring: 87 to 90-DB
14	14223-89	DECAL, radio caddy (1)	Touring: 89 to 90-DM
15	56107-88	HANDLEBAR COVER, brown (1)	Touring: 88 to 90-DJ
15	56109-88	HANDLEBAR COVER, black (1)	Touring: 88 to 90-DJ/P
15	56114-86	HANDLEBAR COVER, black (1)	Touring: 87-DD/J
15A	58128-89	AIR DEFLECTOR, right (1)	Touring: 89 to 90-DP
15A	58129-89	AIR DEFLECTOR, left (1)	Touring: 89 to 90-DP
16	58196-86	INNER FAIRING, black (1)	Touring: 87-DD/J
16	58196-88	INNER FAIRING, black (1)	Touring: 88-DJ
17	58184-86	SPEAKER GRILLE, left (1)	Touring: 87 to 90-DD/J/P
17	58186-86	SPEAKER GRILLE, right (1)	Touring: 87 to 90-DD/J/P
18	58207-86	HANDLEBAR COVER, brown, N/A (1)	Touring: 87 to 90-DJ
19	58210-86	INNER FAIRING, brown (1)	Touring: 87-DJ
19	58210-88	INNER FAIRING, brown (1)	Touring: 88-DJ
20	58311-86	MOLDING, inner fairing (2)	Touring: 87 to 90-DD/J/P
21	58322-88	CROSS BRACE (1)	Touring: 88 to 90-DJ/P
21	58323-86	CROSS BRACE (1)	Touring: 87-DD/J
22	58415-86A	SEAL, instrument panel (1)	Touring: 87 to 90-DD/J/P
23	58478-86	BRACKET, left (1)	Touring: 87 to 90-DD/J/P
24	58479-86	BRACKET, right (1)	Touring: 87 to 90-DD/J/P
	58480-86	WIRING HARNESS, gauges (not illus.), N/A (1)	Touring: 87-DD/J
	58480-88	WIRING HARNESS, gauges (not illus.) (1)	Touring: 88 to 90-DJ/P
25	61648-85	MOLDING (1)	Touring: 87 to 90-DD/J/P
27	67838-85	SWITCH, hazard warning (1)	Touring: 87 and 88-DD/J
	70158-89	HARNESS, lighter (not illus.) (1)	Touring: 89 to 90-DP
	70349-89	HARNESS, speakers (not illus.) (1)	Touring: 89 to 90-DP
28	71502-86	SWITCH, passing lamps (1)	Touring: 87 and 88-DD/J
28	71505-89	SWITCH, passing lamps (1)	Touring: 89 to 90-DJ/P
30	74526-86	VOLTMETER (1)	Touring: 87 to 90-DD/J/P
30	74527-86	VOLTMETER (1)	Touring: 87 to 90-DB/M
30	75013-86	CLOCK, quartz (1)	Touring: 87-DB/D/J
30	75031-86	GAUGE, oil temperature (1)	Touring: 87-DB/D/J
30	75032-87	GAUGE, oil pressure (1)	Touring: 87 to 90-DB/D/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

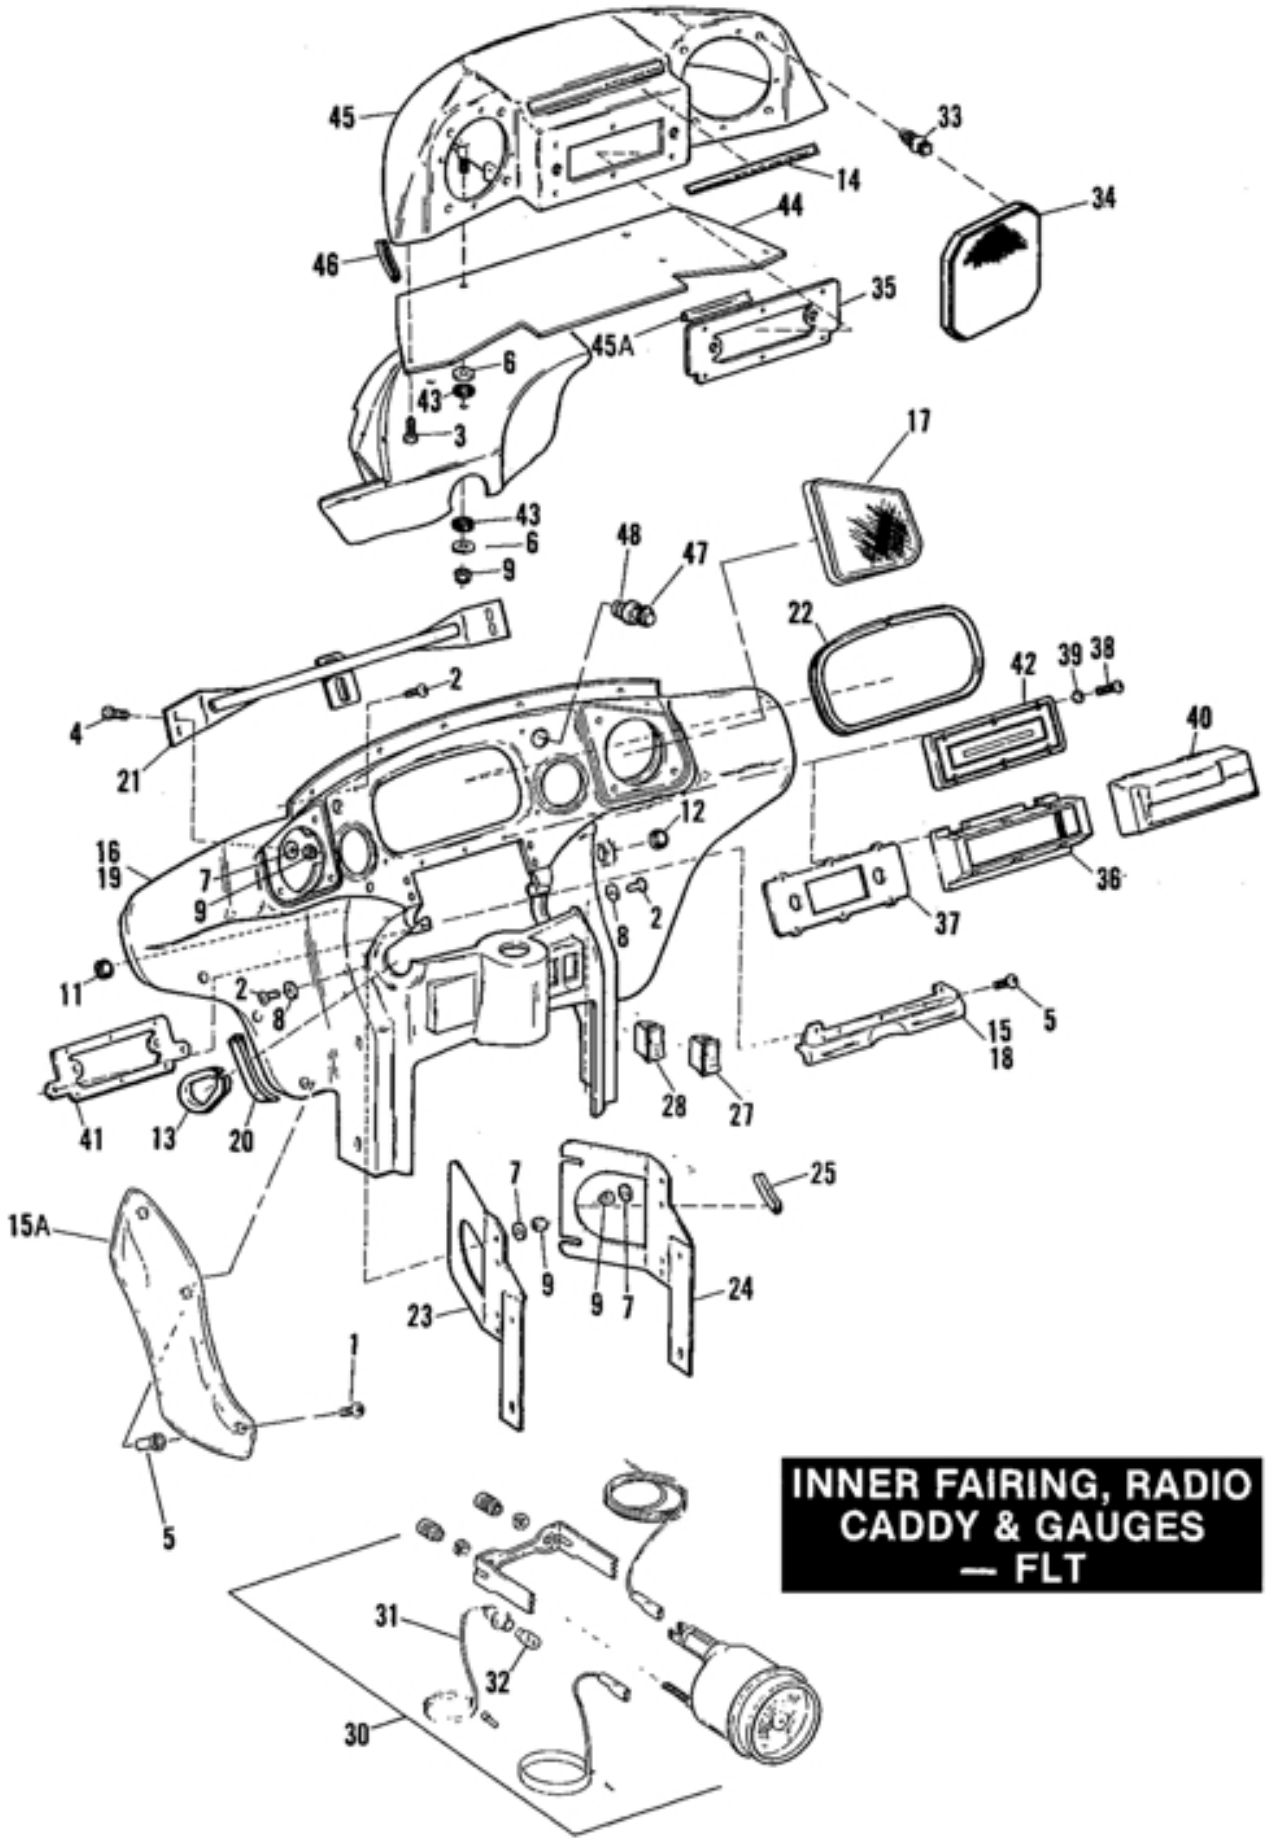

INNER FAIRING, RADIO CADDY & GAUGES — FLT

INNER FAIRING, RADIO CADDY AND GAUGES - FLT MODELS (2 OF 2)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	75044-84	SOCKET, w/wires (4-87) (2)	Touring: 87 to 90-DB/D/J/P
32	75045-84	BULB, 12V. (4-87) (2)	Touring: 87 to 90-DB/D/J/P
33	76175-86	CLIP, double end (8)	Touring: 87 to 90-DB/M
34	76176-86	SPEAKER GRILLE (2)	Touring: 87 to 90-DB/M
35	76238-86	BRACKET, radio-front (1)	Touring: 87 to 90-DB/M
36	76241-86	HOOD, radio (1)	Touring: 87-DB/J/M/P
37	76242-86	BRACKET, hood (1)	Touring: 87-DB/J
38	76243-86	SCREW (6)	Touring: 87-DB/D/J
39	76244-86	WASHER (6)	Touring: 87-DB/D/J
40	76245-86	COVER, radio (1)	Touring: 87-DB/J
41	76246-86	BRACKET, radio-front (1)	Touring: 87-DD/J
42	76247-86	COVER, radio opening, N/A (1)	Touring: 87-DD
43	77004-80	WASHER, rubber (8)	Touring: 87 to 90-DB/M
44	77036-86	BOTTOM, radio caddy (1)	Touring: 87 to 90-DB/M
45	77042-86	RADIO CADDY, black (1)	Touring: 87-DB
45	77043-86	RADIO CADDY, brown, N/A (1)	Touring: 87-DB
45	77070-88A	RADIO CADDY, black (1)	Touring: 88 to 90-DB/M
45	77071-88A	RADIO CADDY, brown (1)	Touring: 88 to 90-DB
45A	77060-86	MOLDING, radio caddy (1)	Touring: 87 to 90-DB/M
46	91721-82	MOLDING, radio caddy (1)	Touring: 87 to 90-DB/M
47	91808-89	ELEMENT, cigarette lighter (1)	Touring: 89 to 90-DM/P
48	91812-89	SOCKET, cigarette lighter (1)	Touring: 89 to 90-DM/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

NOTE: PATENT PENDING

WINDSHIELD AND FAIRING – FXRT

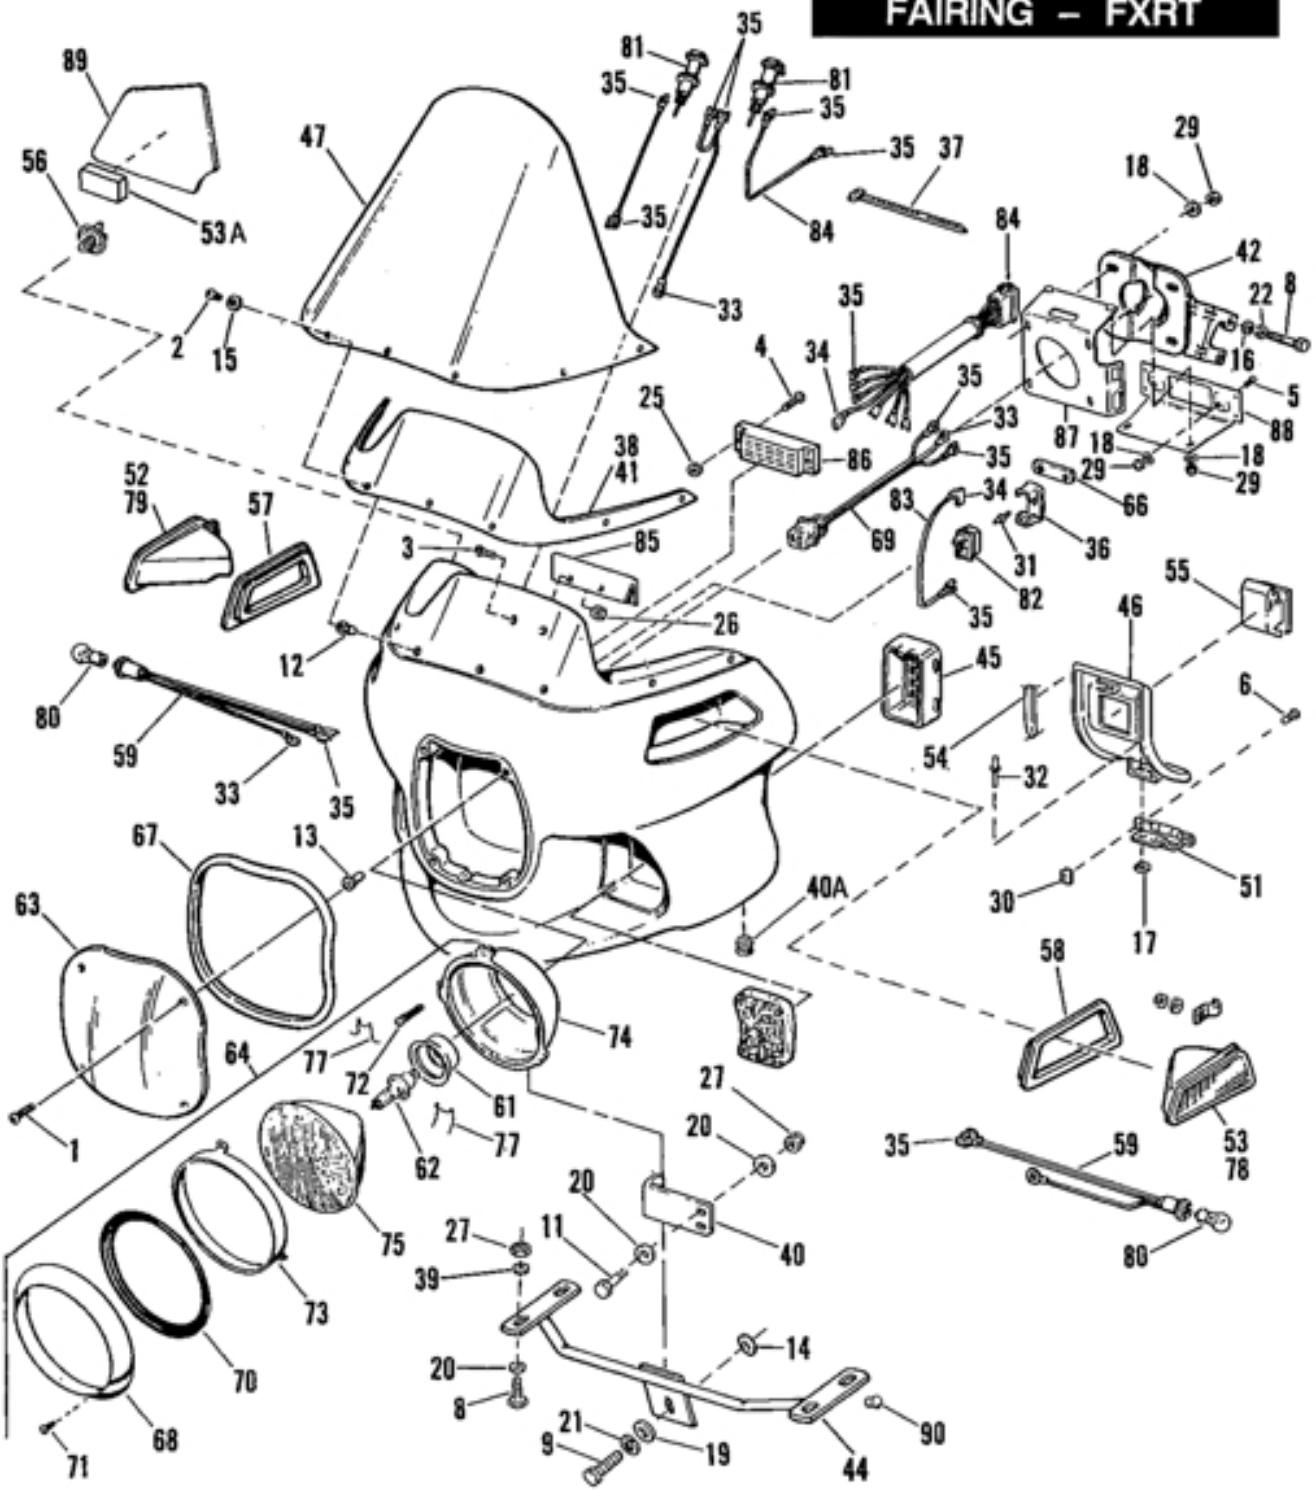

WINDSHIELD AND FAIRING - FXRT (1 OF 2)


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	922	SCREW (4)	FXR: 87 to 90-EC
2	933	SCREW (7)	FXR: 87 to 90-EC
3	1611	SCREW (2)	FXR: 87 to 90-EC
4	2779	SCREW (4)	FXR: 87 to 90-EC
5	2784	SCREW (2)	FXR: 87-EC
6	2508	SCREW (4)	FXR: 87 to 90-EC
7	2648	SCREW (4)	FXR: 87 to 90-EC
8	3987	BOLT (4)	FXR: 87 to 90-EC
9	4371W	SCREW (1)	FXR: 87 to 90-EC
11	3802W	BOLT (4)	FXR: 87 to 90-EC
12	5207	WELL NUT (7)	FXR: 87 to 90-EC
13	5210	WELL NUT (4)	FXR: 87 to 90-EC
14	6019	WASHER (1)	FXR: 87 to 90-EC
15	6053	WASHER (7)	FXR: 87 to 90-EC
16	6109	WASHER (4)	FXR: 87 to 90-EC
17	6182W	WASHER (4)	FXR: 87 to 90-EC
18	6333	WASHER, 8-87 (6)	FXR: 87 to 90-EC
19	6701	WASHER (1)	FXR: 87 to 90-EC
20	6703	WASHER (12)	FXR: 87 to 90-EC
21	7038	LOCKWASHER (1)	FXR: 87 to 90-EC
22	7041	LOCKWASHER (4)	FXR: 87 to 90-EC
26	7626W	LOCKNUT (2)	FXR: 87 to 90-EC
27	7686	LOCKNUT (8)	FXR: 87 to 90-EC
29	7739	LOCKNUT, 8-87 (6)	FXR: 87 to 90-EC
30	8151	SPEED NUT (4)	FXR: 87 to 90-EC
31	8483	POP RIVET, flasher clip (1)	FXR: 87 to 90-EC
32	8687	RIVET (4)	FXR: 87 to 90-EC
33	9859	TERMINAL, ring type-5/16 inches dia. hole (1)	FXR: 87 to 90-EC
34	9898	TERMINAL, flag type-#14-16 wire (1)	FXR: 87 to 90-EC
35	9930	TERMINAL, female spade (4)	FXR: 87 to 90-EC
36	9952	CLIP, flasher (1)	FXR: 87 to 90-EC
37	10006	CABLE STRAP, as req'd (1)	FXR: 87 to 90-EC
38	14114-86	DECAL, windshield (1)	FXR: 87 to 90-EC
39	53433-80	WASHER, nylon (8)	FXR: 87 to 90-EC
40	57807-86	BRACKET, fairing support-right (1)	FXR: 87 to 90-EC
40	57808-86	BRACKET, fairing support-left (1)	FXR: 87 to 90-EC
40A	57980-87	GROMMET (1)	FXR: 87 to 90-EC
41	58223-86	SEAL, windshield (1)	FXR: 87 to 90-EC
42	58042-86	BRACKET, fairing mounting (1)	FXR: 87 to 90-EC
43	58147-86	FILTER, vent (2)	FXR: 87 to 90-EC
44	57809-86	SUPPORT ASSY. (1)	FXR: 87 to 90-EC
45	58190-86	VENT LOUVER (2)	FXR: 87 to 90-EC
46	58212-86	DOOR, fairing (2)	FXR: 87 to 90-EC
47	58218-86A	WINDSHIELD, 17 inches high (1)	FXR: 87 to 90-EC
47	58219-86A	WINDSHIELD, 22 inches high (1)	FXR: 87 to 90-EC
47	58220-86A	WINDSHIELD, 19.5 inches high (1)	FXR: 87 to 90-EC
51	58454-86	HINGE, fairing door (2)	FXR: 87 to 90-EC
52	58498-86	TURN SIGNAL, right (amber) (1)	FXR: 87 to 90-EC
53	58499-86	TURN SIGNAL, left (amber) (1)	FXR: 87 to 90-EC
53A	58702-86	CUSHION (8)	FXR: 87 to 90-EC
54	58703-86	GASKET, fairing door (2)	FXR: 87 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

NOTE: PATENT PENDING

WINDSHIELD AND FAIRING – FXRT

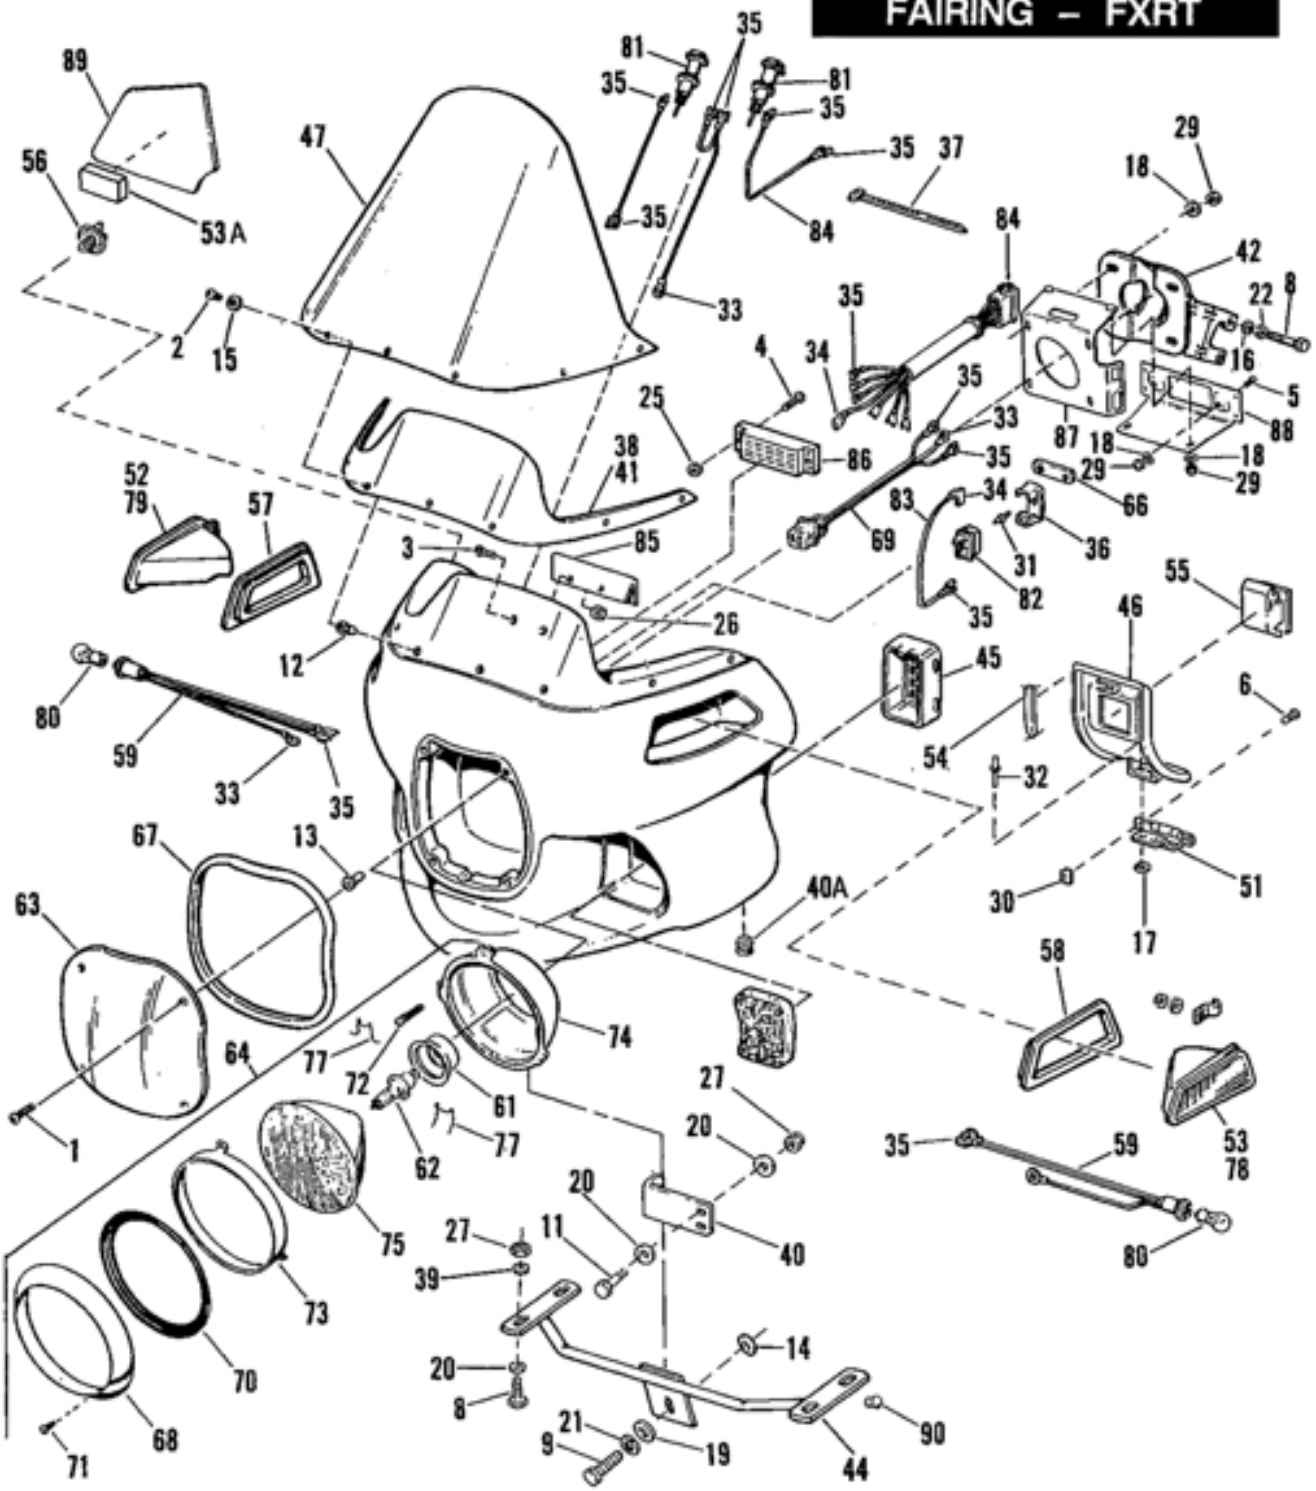


WINDSHIELD AND FAIRING - FXRT (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
55	58706-86	LATCH, door (2)	FXR: 87 to 90-EC
56	58708-86	CLIP, speaker grille (4)	FXR: 87 to 90-EC
57	58722-84	GASKET, right turn signal (1)	FXR: 87 to 90-EC
58	58723-84	GASKET, left turn signal (1)	FXR: 87 to 90-EC
59	67636-86	SOCKET ASSY. (2)	FXR: 87 to 90-EC
61	67696-81	BOOT, headlamp (1)	FXR: 87 to 90-EC
62	67697-81	BULB, halogen-12V (1)	FXR: 87 to 90-EC
63	67700-83	COVER, headlamp (1)	FXR: 87 to 90-EC
64	67701-83B	HEADLAMP ASSY., complete (halogen) (1)	FXR: 87 to 90-EC
66	67709-83	BRACKET, flasher mounting (1)	FXR: 87 to 90-EC
67	67710-83	SEAL, headlamp cover (1)	FXR: 87 to 90-EC
68	67712-83	TRIM RING (1)	FXR: 87 to 90-EC
69	67715-86	WIRING HARNESS, headlamp (1)	FXR: 87 to 90-EC
70	67716-60A	GASKET, headlamp door (1)	FXR: 87 to 90-EC
71	67718-60A	SCREW, headlamp door (1)	FXR: 87 to 90-EC
72	67724-71	ADJUSTING SCREW (2)	FXR: 87 to 90-EC
73	67726-71	RETAINING RING (1)	FXR: 87 to 90-EC
74	67732-71A	MOUNTING DISC (1)	FXR: 87 to 90-EC
75	67755-81A	HEADLAMP, less bulb-w/boot (1)	FXR: 87 to 90-EC
76	67778-60	TOP SPRING, headlamp door (1)	FXR: 87 to 90-EC
77	67780-60	BOTTOM SPRING, headlamp door (1)	FXR: 87 to 90-EC
78	68089-80	LENS, left turn signal (amber) (1)	FXR: 87 to 90-EC
79	68092-80	LENS, right turn signal (amber) (1)	FXR: 87 to 90-EC
80	68168-89	BULB, turn signal (2)	FXR: 87 to 90-EC
81	68465-83	INDICATOR LAMP, turn signal (2)	FXR: 87 to 90-EC
82	68543-64B	FLASHER, turn signal (1)	FXR: 87 to 90-EC
83	69512-83	WIRE, term. blk. to flasher (orange) (1)	FXR: 87 to 90-EC
83	70147-86	WIRING HARNESS, instr. to term. board (1)	FXR: 87 to 90-EC
83	70150-86	WIRING HARNESS, term. board to radio (1)	FXR: 87 to 90-EC
84	72278-74	HOUSING, socket terminal (1)	FXR: 87 to 90-EC
85	72310-70	BRACKET, terminal block (1)	FXR: 87 to 90-EC
86	72312-73	TERMINAL BLOCK (1)	FXR: 87 to 90-EC
87	76170-86	BRACKET, radio support (1)	FXR: 87-EC
88	76173-86	BRACKET, radio mounting (1)	FXR: 87-EC
89	76234-86	SPEAKER GRILLE, right (1)	FXR: 87 to 90-EC
89	76236-86	SPEAKER GRILLE, left (1)	FXR: 87 to 90-EC
90	90493-83	PLUG (2)	FXR: 87 to 90-EC
		INTERNATIONAL MODELS ONLY	
82	68550-83	FLASHER, turn signal (HDI only) (1)	FXR: 87 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

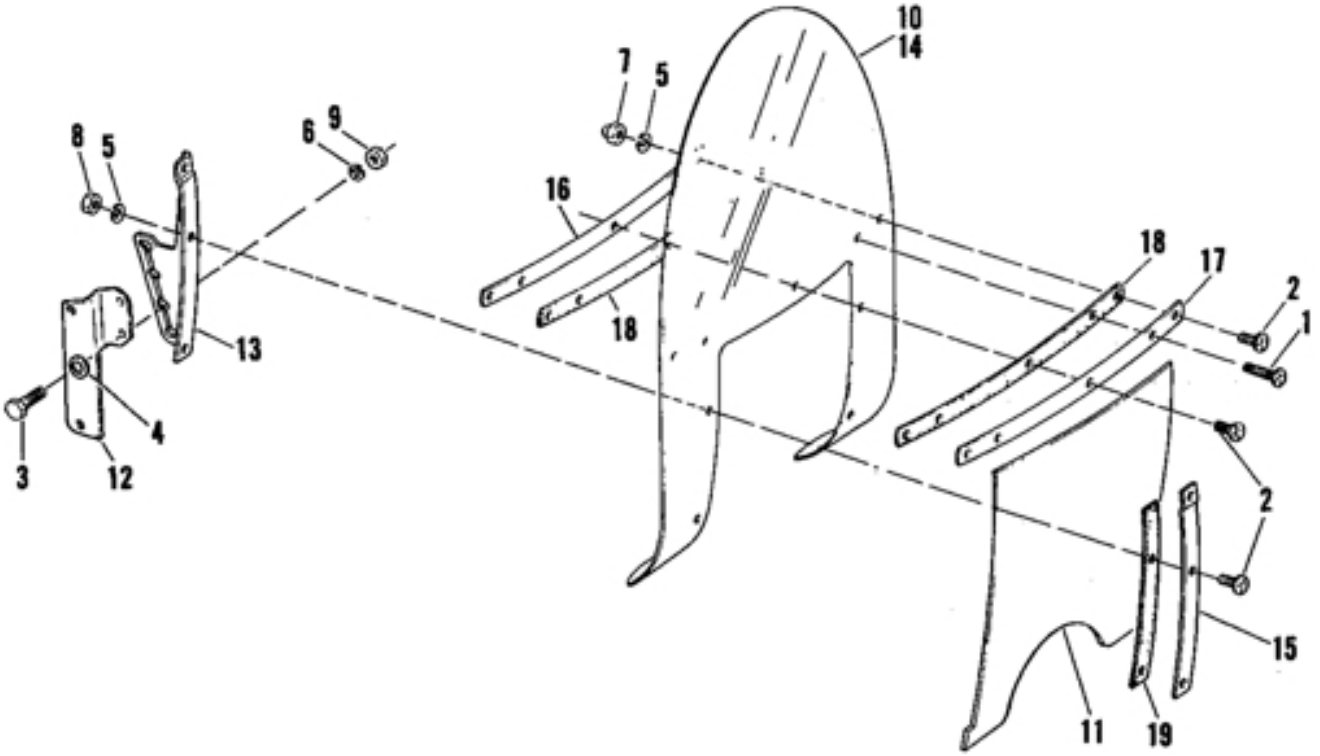


WINDSHIELD — FLHS & FLSTC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2430	SCREW (2)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
2	2725	SCREW (7)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
3	3974HW	BOLT (4)	Touring: L87 to 90-FA
4	6333	WASHER (4)	Touring: L87 to 90-FA
5	7030W	LOCKWASHER (9)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
6	7041	LOCKWASHER (4)	Touring: L87 to 90-FA
7	7651	ACORN NUT (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
8	7654W	NUT (4)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
9	7744	JAMNUT (4)	Touring: L87 to 90-FA
10	57997-83	WINDSHIELD ASSEMBLY, complete (1)	Touring: L87 to 90-FA
10	58018-86	WINDSHIELD ASSEMBLY, complete (1)	Softail: L87 to 90-BJ
11	58036-83	WINDOW, adjustable (1)	Touring: L87 to 90-FA
11	58075-86	WINDOW, adjustable (1)	Softail: L87 to 90-BJ
12	58067-83	WINDSHIELD BRACKET, left (1)	Touring: L87 to 90-FA
12	58068-83	WINDSHIELD BRACKET, right (1)	Touring: L87 to 90-FA
13	58078-49	ADJUSTING BRACKET, right (1)	Softail: L87 to 90-BJ
13	58079-49	ADJUSTING BRACKET, left (1)	Softail: L87 to 90-BJ
13	58080-83	ADJUSTING BRACKET, right (1)	Touring: L87 to 90-FA
13	58081-83	ADJUSTING BRACKET, left (1)	Touring: L87 to 90-FA
14	58183-78	WINDOW REPLACEMENT KIT (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
15	58406-75	BRACE, right (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
15	58408-75	BRACE, left (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
16	58411-76	BRACE, outer (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
17	58412-76	BRACE, inner (1)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
18	58416-77	TAPE (2)	Softail: L87 to 90-BJ Touring: L87 to 90-FA
19	58417-77	TAPE (2)	Softail: L87 to 90-BJ Touring: L87 to 90-FA

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

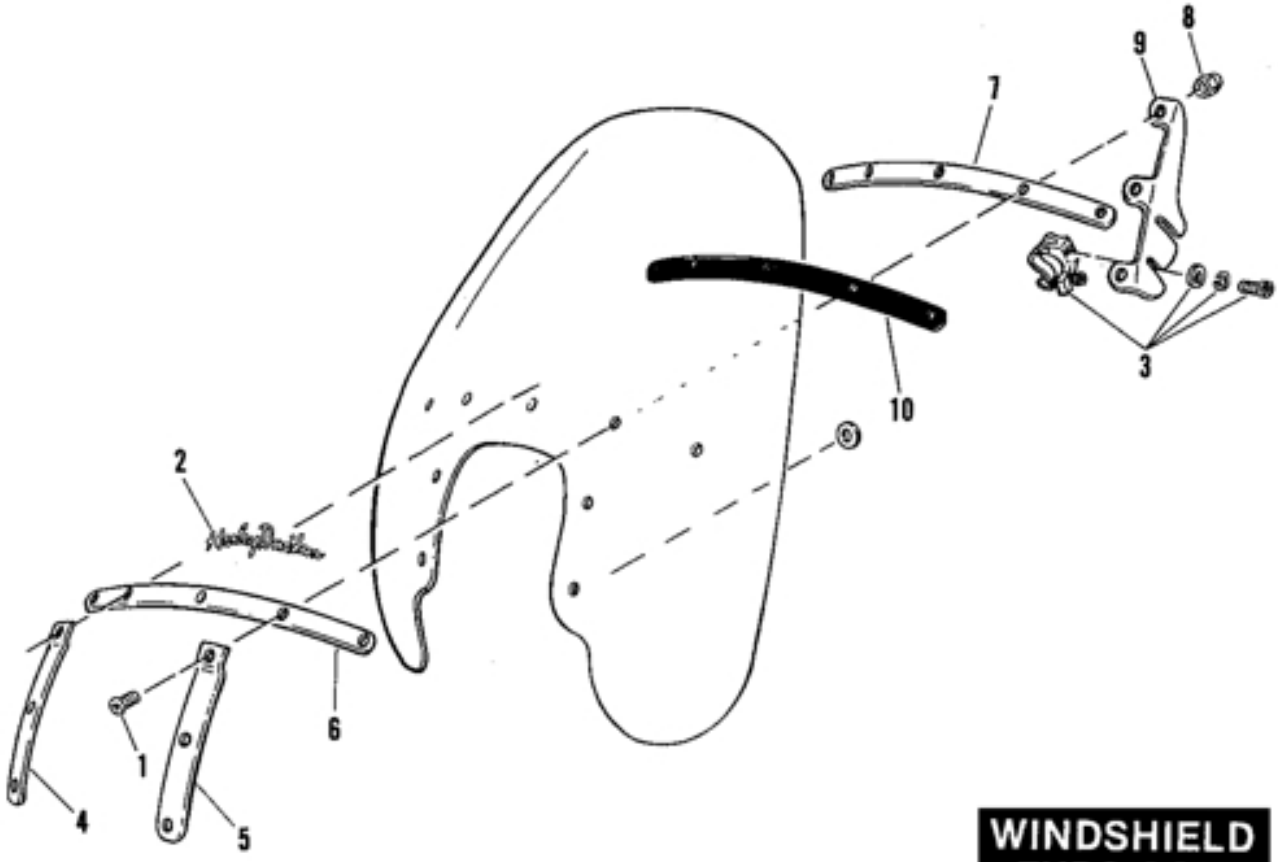


WINDSHIELD
FXRS-CON

WINDSHIELD FXRS-CON

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	932	SCREW (9)	FXR: L89 to 90-EM
2	14227-88	DECAL, "Harley-Davidson" (1)	FXR: L89 to 90-EM
3	58109-88A	WINDSHIELD CLAMP (4)	FXR: L89 to 90-EM
4	58419-88	BRACE, right (chrome) (1)	FXR: L89 to 90-EM
5	58420-88	BRACE, left (chrome) (1)	FXR: L89 to 90-EM
6	58421-88	BRACE, outer (chrome) (1)	FXR: L89 to 90-EM
7	58422-88	BRACE, inner (1)	FXR: L89 to 90-EM
8	58423-88	ACORN NUT (9)	FXR: L89 to 90-EM
9	58424-88	MOUNTING BRACKET, right (1)	FXR: L89 to 90-EM
9	58425-88	MOUNTING BRACKET, left (1)	FXR: L89 to 90-EM
10	58426-88	CUSHION TAPE, 2-cut to suit (1)	FXR: L89 to 90-EM
10	91849-85A	WINDSHIELD, complete (1)	FXR: L89 to 90-EM

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

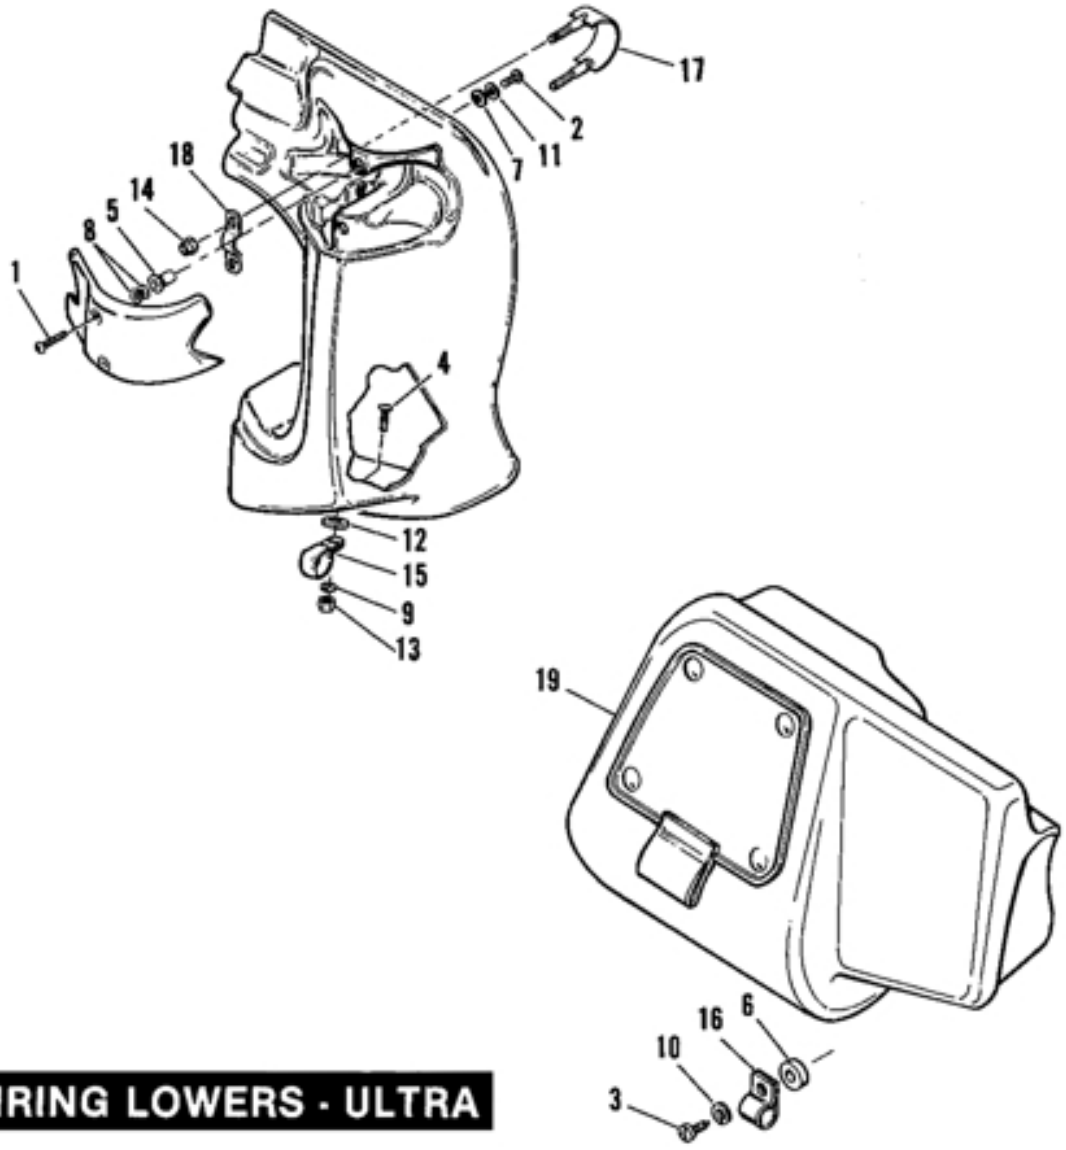


FAIRING LOWERS - ULTRA

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	922	SCREW (4)	Touring: 89 to 90-DM/P
2	2420	SCREW (2)	Touring: 89 to 90-DM
3	2592	SCREW (1)	Touring: 89 to 90-DM
4	2784	SCREW (2)	Touring: 89 to 90-DM/P
5	5210	WELL NUT (4)	Touring: 89-DM/P
5	5212	NUT, crimp (4)	Touring: 90 to 90-DM/P
6	5989	SPACER (1)	Touring: 89 to 90-DM
7	6235	WASHER (2)	Touring: 89 to 90-DM
9	6717	WASHER (8)	Touring: 89 to 90-DP
10	7220	LOCKWASHER (1)	Touring: 89 to 90-DM
11	7230	LOCKWASHER (2)	Touring: 89 to 90-DM
12	7415A	WASHER, rubber (2)	Touring: 89 to 90-DM/P
13	7531	LOCKNUT, flange (4)	Touring: 89 to 90-DM/P
14	7716	LOCKNUT, flange (4)	Touring: 89 to 90-DP
15	27048-84	CLAMP (2)	Touring: 89 to 90-DM/P
16	38712-68	CLAMP (1)	Touring: 89 to 90-DM
17	58493-89	U-BOLT (2)	Touring: 89 to 90-DP
18	58494-89	RETAINER, U-bolt (2)	Touring: 89 to 90-DP
19	58683-89	STORAGE BOX, left (1)	Touring: 89 to 90-DP
19	58687-89	STORAGE BOX, left (1)	Touring: 89 to 90-DM
19	58684-89	STORAGE BOX, right (1)	Touring: 89 to 90-DP
19	58688-89	STORAGE BOX, right (1)	Touring: 89 to 90-DM
		FAIRING LOWER FOR SIDECAR UNIT	
	922	SCREW (4)	Touring: 89 to 90-DM/P
	5210	WELL NUT (4)	Touring: 89-DM/P
	5212	NUT, crimp (4)	Touring: 90 to 90-DM/P
	6717	WASHER (6)	Touring: 89 to 90-DM/P
	7716	LOCKNUT, flange (2)	Touring: 89 to 90-DM/P
	58493-89	U-BOLT (1)	Touring: 89 to 90-DM/P
	58494-89	RETAINER, U-bolt (1)	Touring: 89 to 90-DM/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

HEADLAMP

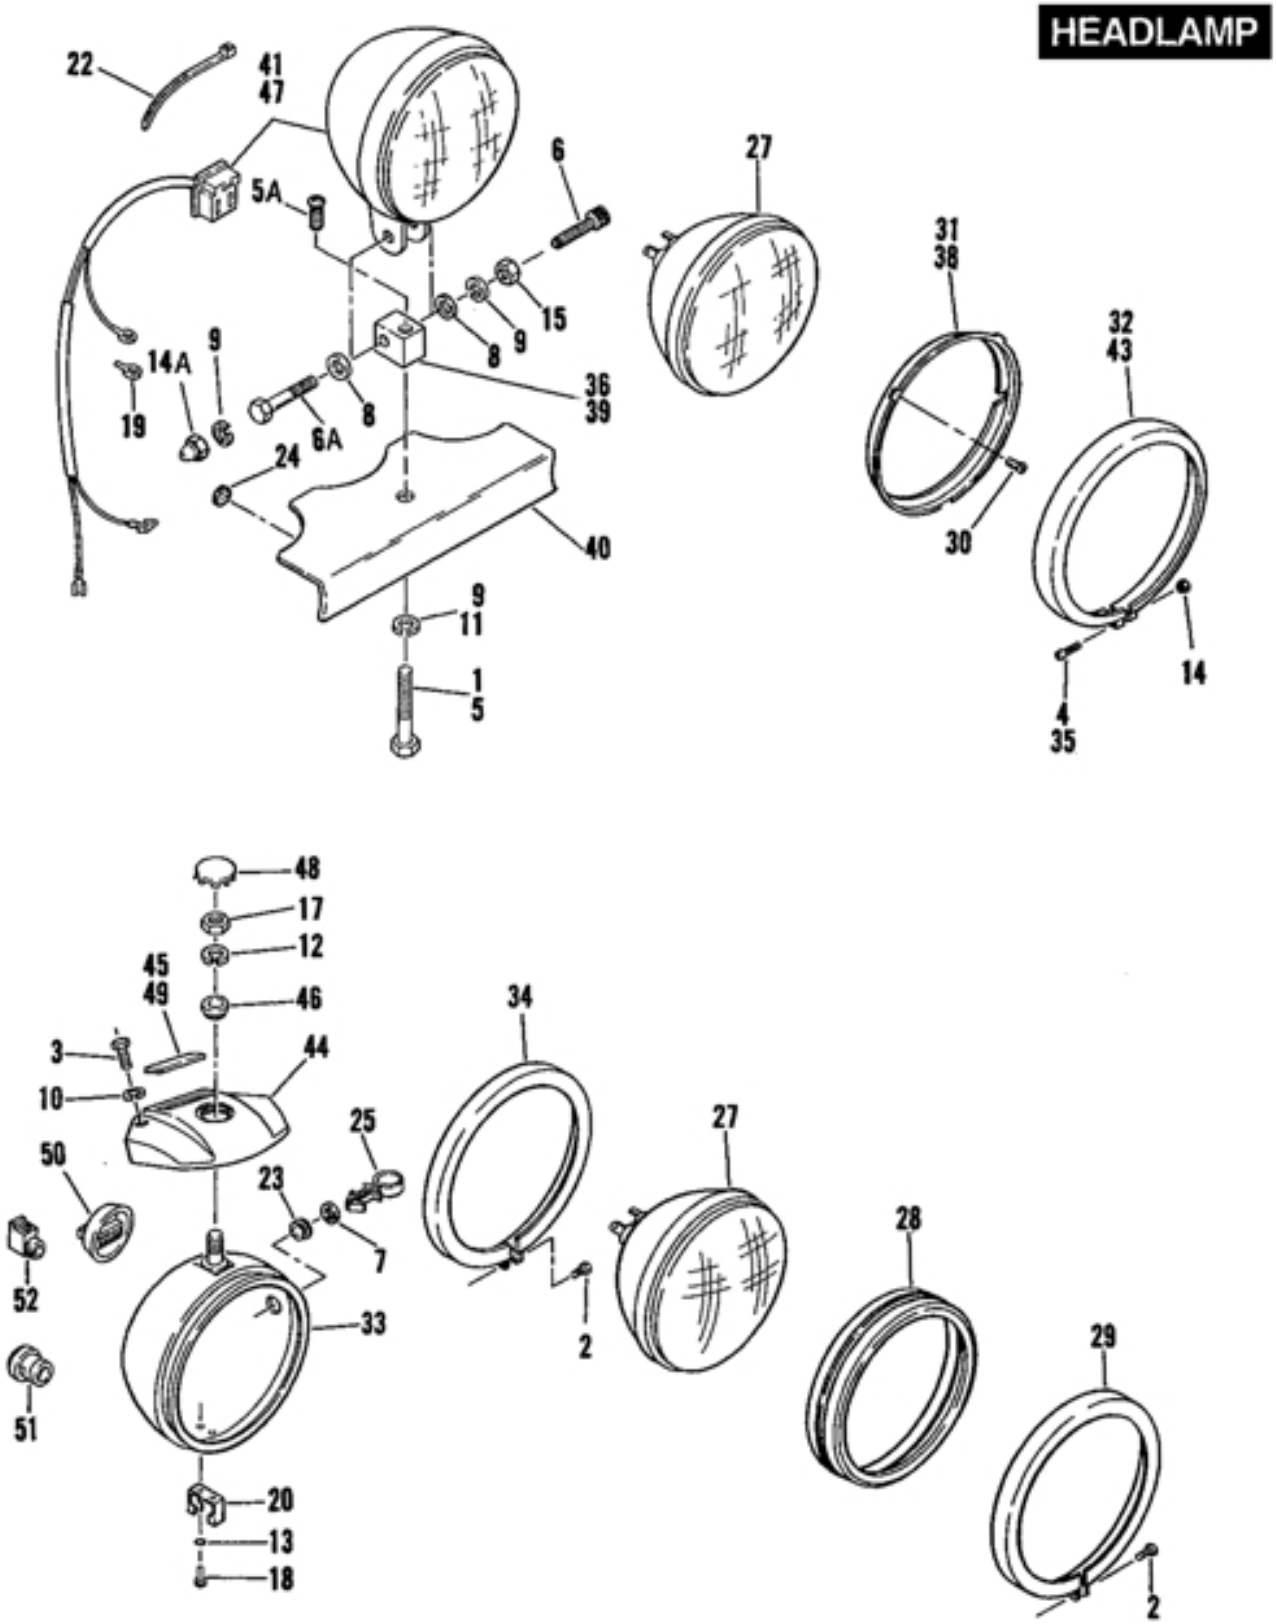
22
41
47
5A
6
27
31
38
32
43
15
9
8
14A
9
36
39
19
6A
8
24
40
30
14
9
11
4
35
1
5
48
17
12
45
49
46
34
3
44
10
25
27
50
23
28
7
52
33
2
29
51
20
13
18
2


HEADLAMP (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	854	SCREW (1)	FXR: 87 to 90-EL
2	1203	SCREW (2)	FXR: 87 to 90-EA/B/G/M
3	2871W	BOLT (2)	FXR: 87 to 90-EA/B/G/M
3	4017	BOLT (2)	FXR: 88 to 90-EA/B/G/M
4	3514	SCREW (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K
5	3945	BOLT (1)	Softail: 87 to 90-BH/K/M
5A	4013	SCREW (1)	Softail: L88 to 90-BL
6	4371WA	SCREW (1)	Softail: L88 to 90-BL
6A	4411	BOLT (1)	Softail: 90 to 90-BM
6A	4724	BOLT (1)	Softail: 87 to 90-BH/K
7	6261	WASHER (1)	FXR: 87 to 90-EB/G/M
8	6701	WASHER (2)	Softail: 87 to 90-BH/K/M
8	6812	WASHER (2)	Softail: L88 to 90-BL
9	7038	LOCKWASHER, 2-BH/K (1)	Softail: 87 to 90-ALL
10	7041	LOCKWASHER (2)	FXR: 87 to 90-EA/B/G/M
11	7045	LOCKWASHER (1)	FXR: 87 to 90-EL
11	7130W	LOCKWASHER (1)	Softail: 87 and 88-BH/K
12	7068	LOCKWASHER (1)	FXR: 87 to 90-EA/B/G/M
13	7220	LOCKWASHER (1)	FXR: 87 to 90-EA/B/G/M
14	7606	LOCKNUT (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K
14A	7680W	ACORN NUT (1)	Softail: L88 to 90-BL
15	7800W	NUT (1)	Softail: 87 to 90-BH/K/M
17	7880	NUT (1)	FXR: 87 to 90-EA/B/G/M
18	8519	RIVET (1)	FXR: 87 to 90-EA/B/G/M
19	9857	TERMINAL, headlamp harness-ring type (1)	Softail: 87 to 90-ALL
20	9952	CLIP (1)	FXR: 87 to 90-EA/B/G/M
22	10065	CABLE STRAP (1)	Softail: 87 to 90-ALL
23	11448	PLUG (1)	FXR: 87 to 90-EA; 88 to 90-EB
24	45648-85	PAD (2)	Softail: 87 to 90-BH/K
25	56073-83	RETAINER, cable (1)	FXR: 87 to 90-EB/G/M
27	67698-81B	SEALED BEAM UNIT, 5 inches (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L
27	67713-86	SEALED BEAM UNIT, 6 inches (1)	Softail: 87 to 90-BJ/M
28	67719-63	MOUNTING RING (1)	FXR: 87 to 90-EA/B/G/M
29	67725-63	MOLDING, outer (1)	FXR: 87 to 90-EA/B/G/M
30	67727-87	SCREW, headlamp retainer (4)	Softail: 87 to 90-BJ/M
31	67731-87	RETAINING RING (1)	Softail: 87 to 90-BJ/M
32	67740-87	DOOR, chrome (1)	Softail: 87 to 90-BJ/M
33	67743-84	HOUSING, headlamp (black) (1)	FXR: 87 to 90-EA/B/G/M
34	67744-75	MOLDING, inner (1)	FXR: 87 to 90-EA/B/G/M
35	67748-87	SCREW, door (chrome) (1)	Softail: 87 to 90-BJ/M
36	67762-87	MOUNTING BLOCK (1)	FXR: 87 to 90-EL
36	67768-86	MOUNTING BLOCK (1)	Softail: 87 to 90-BJ/M
36	67771-88	MOUNTING BLOCK (1)	Softail: L88 to 90-BL
38	67769-82	MOUNTING RING (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

HEADLAMP

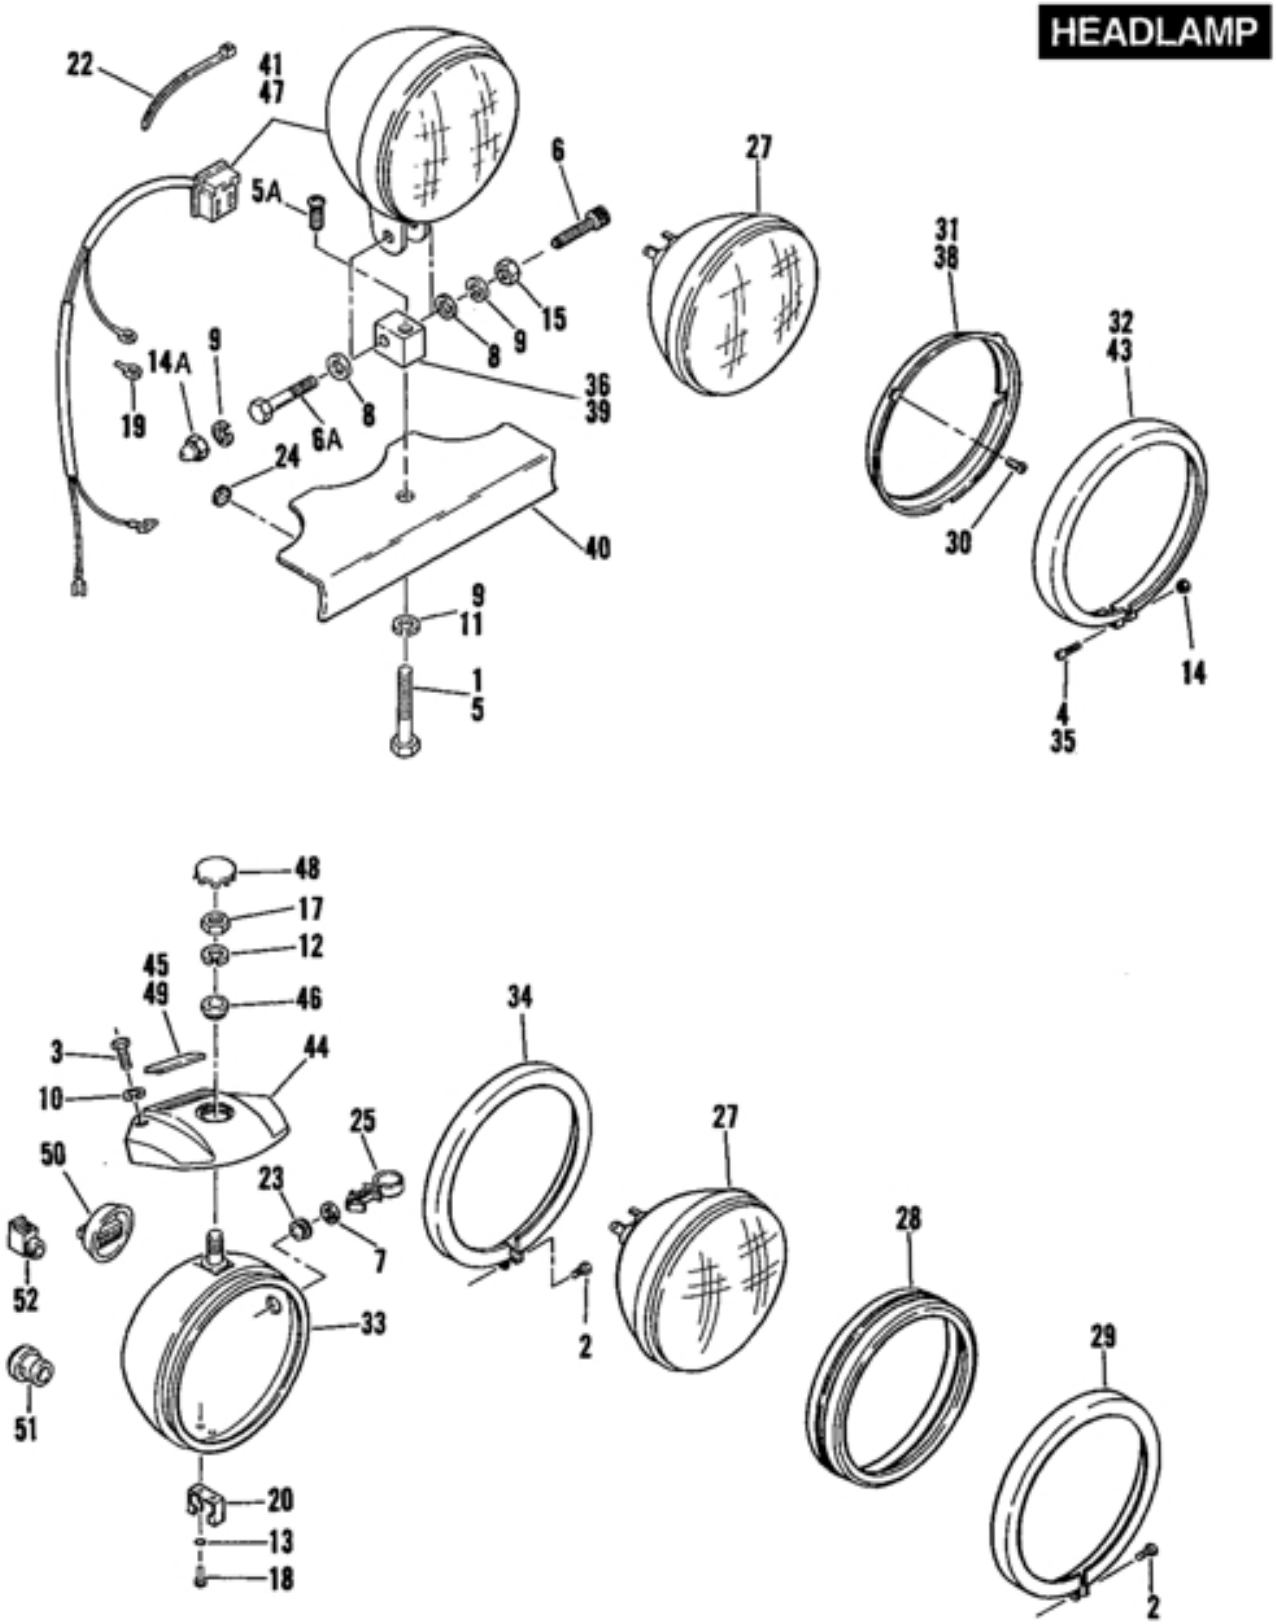
22
41
47
5A
6
27
31
38
32
43
15
9
8
14A
9
19
6A
8
36
39
24
40
9
11
1
5
30
14
4
35
48
17
12
45
49
46
3
44
10
34
27
25
50
23
7
28
52
33
2
29
51
20
13
18
2


HEADLAMP (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	67772-80	MOUNTING BLOCK (1)	Softail: 87 to 90-BH/K
40	67773-80A	MOUNTING PLATE (1)	Softail: 87 to 90-BH/K
41	67777-80A	HEADLAMP, comp. w/wiring-5 inches (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K
43	67790-82	TRIM RING, chrome (1)	FXR: 87 to 90-EL Softail: 87 to 90-BH/K
43	67790-93A	TRIM RING, chrome (1)	FXR: 87 to 90-EL Softail: 87 to 90-BL
44	67805-86A	BRACKET (1)	FXR: 87 to 90-EA/B/G/M
45	67807-86	TRIM, warning lights (1)	FXR: 87 to 90-EA; 88 to 90-EB
46	67815-59A	WASHER (1)	FXR: 87 to 90-EA/B/G/M
47	67789-91	HEADLAMP, comp. w/wiring-6 inches (1)	Softail: 87 to 90-BJ/M
48	67865-89	PLUG, headlamp bracket (1)	FXR: 87 to 90-EA/B/G/M
49	67834-83	TRIM, headlamp bracket (1)	FXR: 87 to 90-EA/G/M
50	67839-74	BOOT, headlamp connector (1)	FXR: 87 to 90-EA/B/G/M
51	72501-74	BUSHING, straight (1)	FXR: 87 to 90-EA/B/G/M
52	72502-74	BUSHING, angle (2)	FXR: 87 to 90-EA/B/G/M
		INTERNATIONAL MODELS ONLY	
41	67872-89A	HEADLAMP, comp. w/wiring-5 inches (Less bulb) (HDI only) (1)	FXR: 89 to 90-EL Softail: 87 to 90-BH/K/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

PASSING LAMPS & FRONT TURN SIGNALS — FLHT/C, FLHS & FLSTC

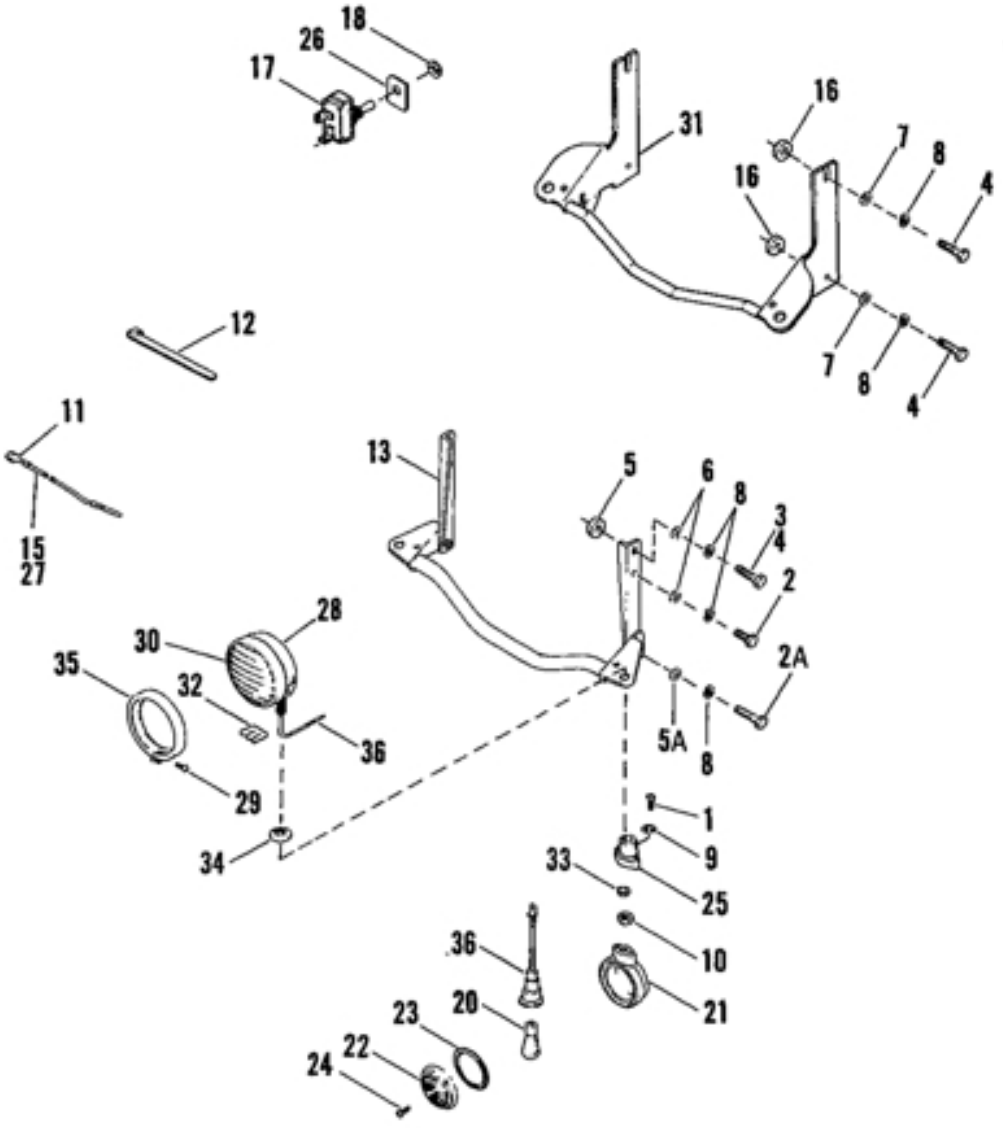


PASSING LAMPS AND FRONT TURN SIGNALS - FLHT/C, FLHS AND FLSTC (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647A	SCREW (4)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
2	3960W	BOLT (2)	Softail: 87 to 90-BJ
2A	4014W	BOLT (2)	Softail: L87 to 90-BJ
3	4020W	BOLT (2)	Softail: 87 to 89-BJ
4	4036	BOLT, 4-DD/J, FA; 2-BJ (1)	Softail: 90 to 90-BJ Touring: 87 to 90-DD/J/P, FA
5	5885	SPACER (2)	Softail: 87 to 90-BJ
5A	6109	WASHER (2)	Softail: L87 to 90-BJ
6	6645	WASHER (4)	Softail: 87 to 90-BJ
7	6702	WASHER, 4-DD/J, FA (1)	Touring: 87 to 90-DD/J/P, FA
8	7041	LOCKWASHER, 4-DD/J, FA; 6-BJ (1)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
9	7069	LOCKWASHER (4)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
10	7778	LOCKNUT (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
11	9900	CONNECTOR, passing lamp wire (2)	Softail: 87 to 90-BJ Touring: 87 and 88-FA
11	9907	CONNECTOR, passing lamp wire (2)	Touring: 89 to 90-FA
12	10006	CABLE STRAP (1)	Softail: 87 to 90-BJ Touring: 87 to 90-FA
13	58082-87	BRACKET, passing lamps (1)	Softail: 87 to 90-BJ
	67615-87	WIRING HARNESS, pass. lamps (not illus.) (1)	Softail: 87 and 88-BJ
	67615-89	WIRING HARNESS, pass. lamps (not illus.) (1)	Softail: 89 to 90-BJ
15	67668-83	CABLE ASSEMBLY, passing lamps (1)	Touring: 87 and 88-FA
15	67668-89	CABLE ASSEMBLY, passing lamps (1)	Touring: 89 to 90-FA
16	67749-77	SPACER (4)	Touring: 87 to 90-DD/J/P, FA
17	67843-70	TOGGLE SWITCH, hazard warning (1)	Touring: 87 and 88-FA
17	67844-70	TOGGLE SWITCH, passing lamps (1)	Softail: 87 and 88-BJ Touring: 87 and 88-FA
17	67858-89	TOGGLE SWITCH, passing lamps (1)	Softail: 89 to 90-BJ Touring: 89 to 90-FA
18	67846-70	NUT, toggle switch (2-1987 and 1988 FA) (1)	Softail: 87 to 90-BJ Touring: 87 to 90-FA
20	68168-89	BULB, turn sig. (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
21	68400-86	TURN SIGNAL (2)	Touring: 87 to 90-DD/J/P, FA
21	68661-87	TURN SIGNAL, left (1)	Softail: 87 to 90-BJ
21	68668-87	TURN SIGNAL, right (1)	Softail: 87 to 90-BJ
22	68440-86	LENS, turn sig. (amber) (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
23	68451-86	O-RING (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
24	68452-86	SCREW W/O-RING (4)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
25	68519-68	MOUNTING BRACKET (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

PASSING LAMPS & FRONT TURN SIGNALS — FLHT/C, FLHS & FLSTC

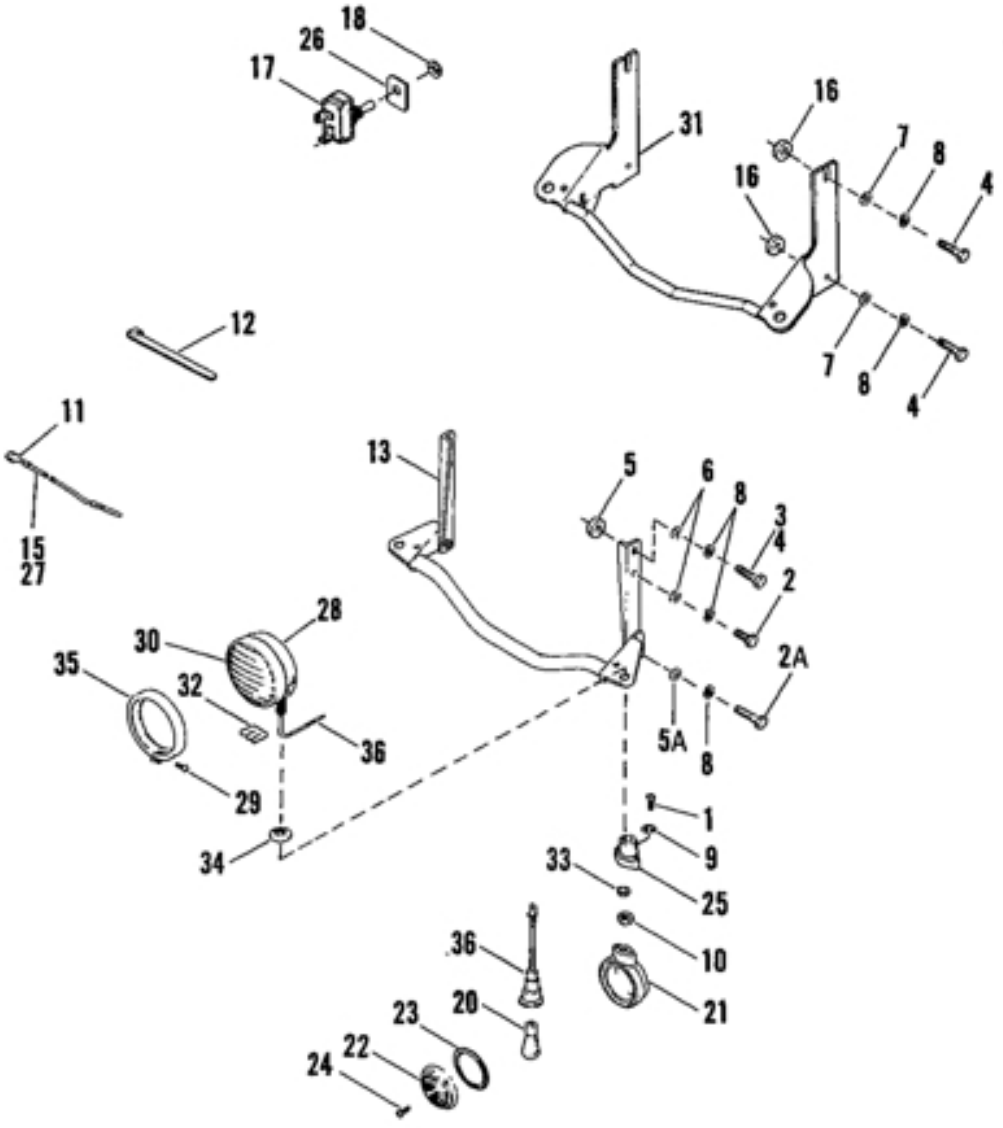


PASSING LAMPS AND FRONT TURN SIGNALS - FLHT/C, FLHS AND FLSTC (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	68602-79	LABEL, hazard warning (1)	Touring: 87 and 88-FA
26	68619-83	LABEL, passing lamp switch (1)	Softail: 87 to 90-BJ Touring: 87 to 90-FA
27	68633-83	LAMP WIRING, pass. lamp, N/A (2)	Touring: 87 to 90-FA
28	68671-69	PASSING LAMP (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
29	68672-38	SCREW, pass. lamp molding (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
30	68674-69	SEALED UNIT, pass. lamps (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
31	68684-86	BRACKET, passing lamps (1)	Touring: 87 to 90-DD/J/P, FA
32	68690-69	CLIP, wire (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
33	68720-62	CLAMP BLOCK, pass. lamps (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
34	68721-62	SWIVEL BLOCK, pass. lamps (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
35	68725-62	MOLDING, pass. lamps (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
36	72039-71	PIN, single socket (4)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
		INTERNATIONAL MODELS ONLY	
26	14019-83	LABEL, park lamp (HDI only) (1)	Touring: 89 to 90-FA
17	67858-89	TOGGLE SWITCH, park. lamp (HDI only) (1)	Touring: 89 to 90-FA
20	68163-84	BULB, turn sig. (HDI only) (2)	Softail: 87 to 89-BJ Touring: 87 to 90-DD/J/P, FA
21	68401-90	TURN SIGNAL, HDI only (2)	Softail: 87 to 90-BJ Touring: 87 to 90-DD/J/P, FA
22	68505-90	LENS, turn sig. (amber) (2)	Softail: 90 to 90-BJ Touring: 90 to 90-DJ/P, FA
27	68633-89	LAMP WIRING, pass. lamp (HDI only) (2)	Touring: 89 to 90-FA

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

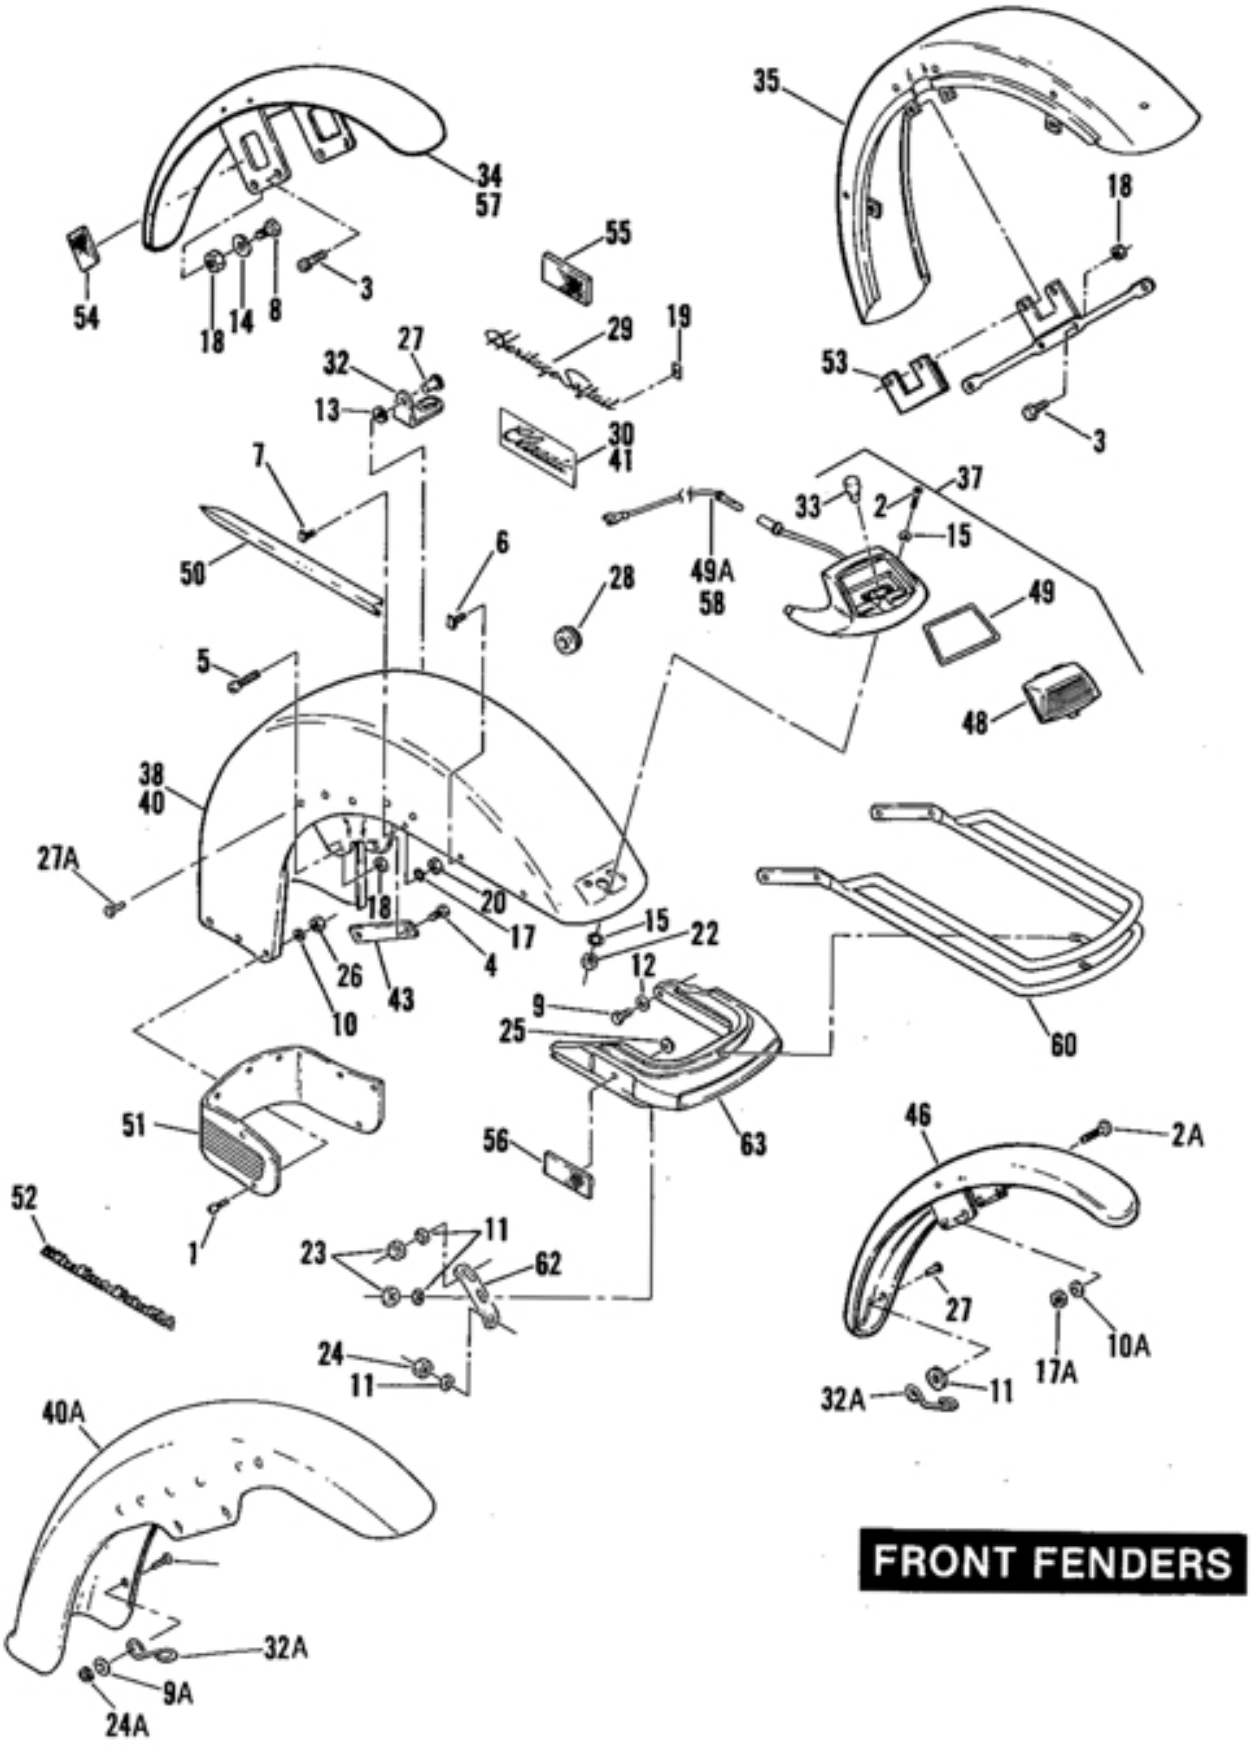

34
57
54
18
14
8
3
55
29
19
27
32
13
30
41
7
50
6
28
49A
58
35
18
53
3
33
2
37
15
49
48
5
38
40
27A
18
20
17
4
26
43
10
15
22
12
9
25
60
63
51
52
1
56
23
11
62
24
11
46
2A
27
17A
10A
32A
11
40A
32A
9A
24A
FRONT FENDERS

FRONT FENDERS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	2531	SCREW, 8-BJ (6)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
2	2604	SCREW (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
2A	2882W	SCREW (4)	Softail: L88 to 90-BL
3	3210	SCREW (4)	FXR: 87 to 90-ALL
4	3462	BOLT (4)	Touring: 87 to 90-ALL
5	3485	SCREW (4)	Softail: 87 to 90-BJ/M
6	3560W	TEE BOLT (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
7	3561WB	TEE BOLT (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
8	3991	BOLT (4)	Softail: 87 to 90-BH/K
9	4091	SCREW (2)	Touring: 87 to 90-DB/D/J/M/P
9A	6220W	WASHER (1)	Softail: 90 to 90-BM
10	6335	WASHER, 8-BJ (6)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
10A	6702	WASHER (4)	Softail: L88 to 90-BL
11	6703	WASHER, 3-FLT (1)	Softail: L88 and 89-BL Touring: 87 to 90-DB/D/J/M/P
12	6716	WASHER (2)	Touring: 87 to 90-DB/D/J/M/P
13	7036	WASHER (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
14	7041	LOCKWASHER (4)	Softail: 87 to 90-BH/K
15	7118	LOCKWASHER (4)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
17	7220	LOCKWASHER (4)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
17A	7507	ACORN NUT (4)	Softail: L88 to 90-BL
18	7531	LOCKNUT (4)	FXR: 87 to 90-EC
19	7613A	SCREW (6)	Softail: 87 to 90-BJ Touring: 89 to 90-DM/P
20	7624	LOCKNUT (4)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
22	7638	NUT (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
23	7682	LOCKNUT (2)	Touring: 87 to 90-DB/D/J/M/P
24	7683	LOCKNUT (1)	Touring: 87 to 90-DB/D/J/M/P
24A	7689W	JAMNUT (1)	Softail: 90 to 90-BM
25	8126	SPEED NUT, reflector (2)	Touring: 87 to 90-DB/D/J/M/P
26	8131W	LOCKNUT, 8-BJ (6)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
27	8505	RIVET (1)	Softail: 87 to 90-BJ/L Touring: 87 to 90-ALL
27A	8519	RIVET (10)	Touring: 87 to 90-ALL
28	11437	GROMMET, wiring harness (1)	Touring: 87 to 90-ALL
29	14142-86	TRIM, "Heritage Softail" (2)	Softail: 87 to 90-BJ
30	14159-87	DECAL, "Classic" (red) (2)	Touring: 87 to 90-DB/D/J
30	14331-90	DECAL, "Classic" (gold) (2)	Touring: 90 to 90-DM/P
32	38622-87	GUIDE, speedometer cable (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
32A	45085-88	CABLE GUIDE (1)	Softail: L88 to 90-BL/M
33	53439-79	BULB, fender tip lamp (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

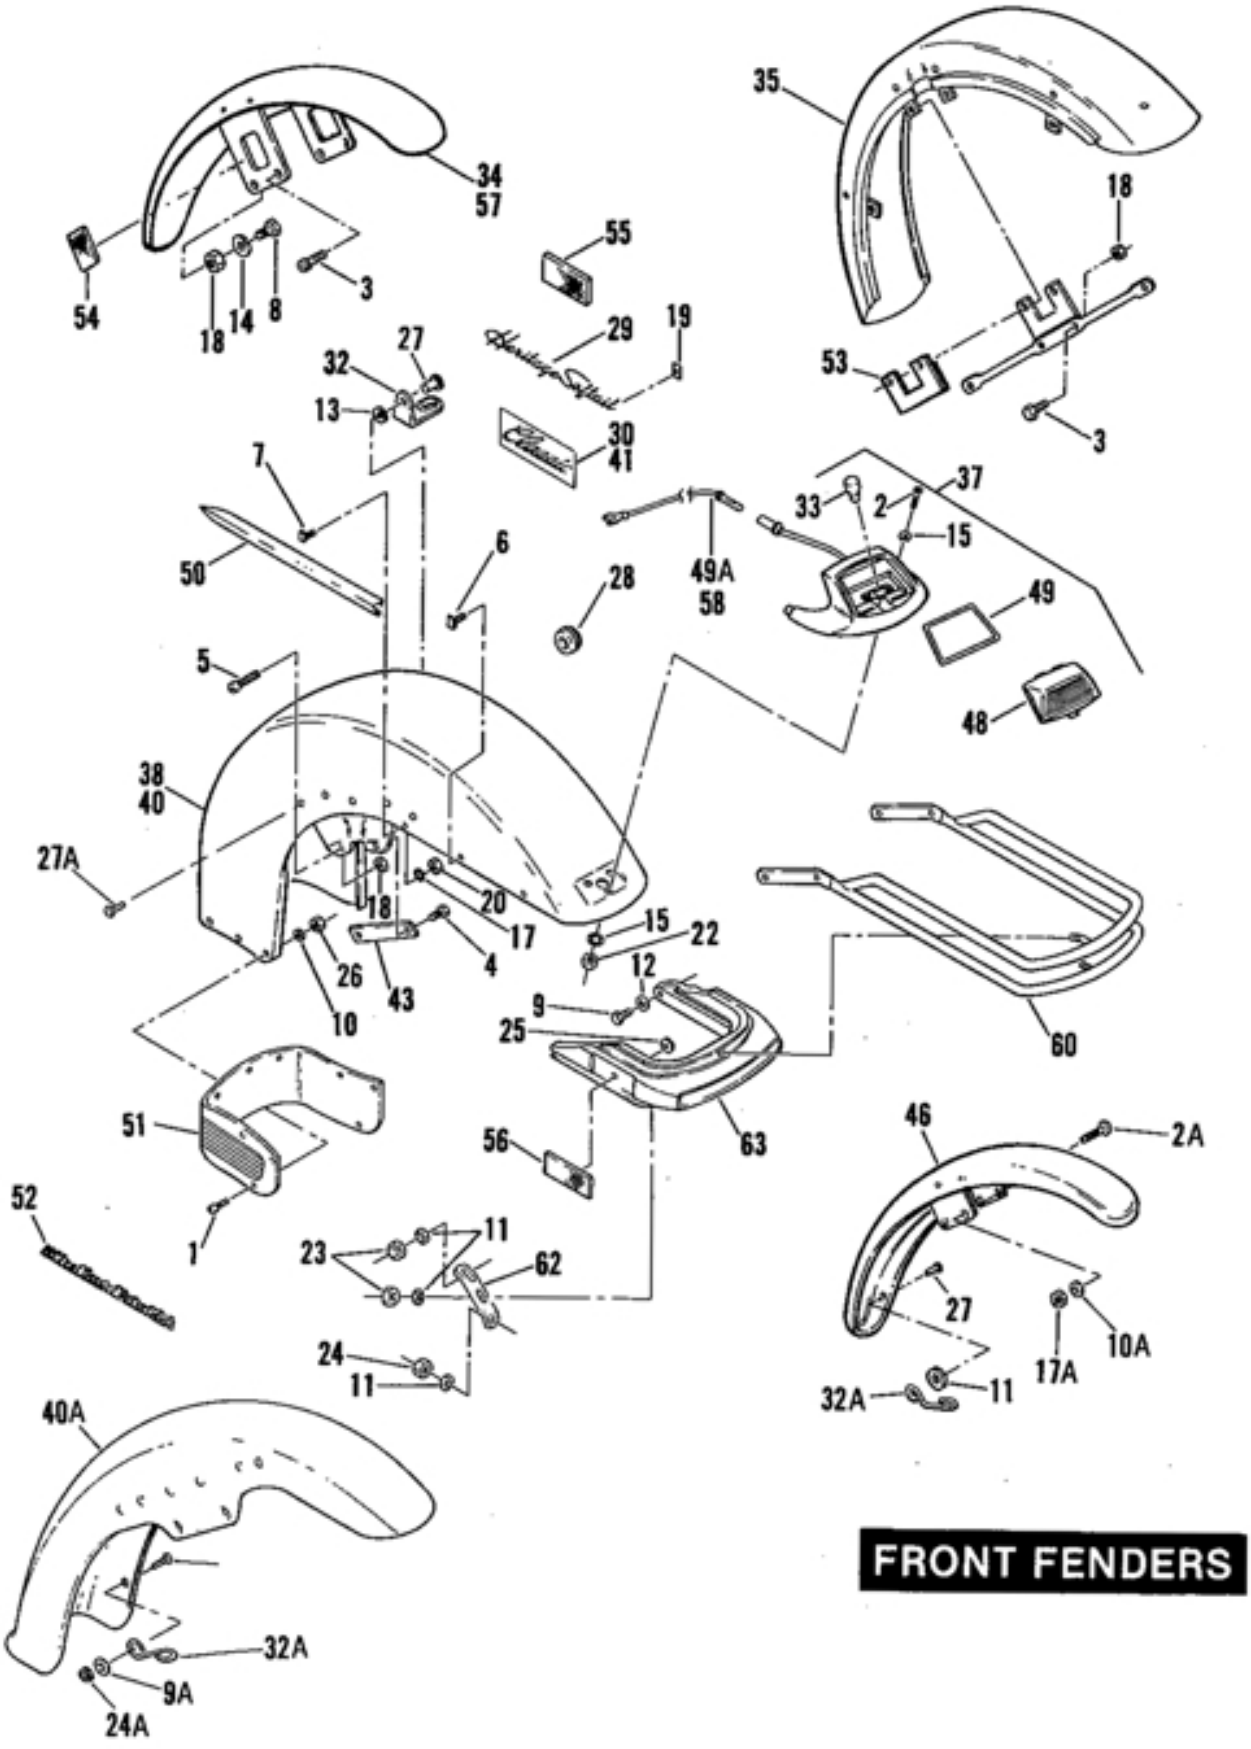
34
57
54
18
14
8
3
55
29
19
27
32
13
30
41
7
50
6
28
49A
58
35
18
53
3
33
2
37
15
49
48
5
38
40
27A
18
20
17
4
26
43
10
15
22
12
9
25
60
63
51
52
1
56
23
11
62
24
11
46
2A
27
17A
10A
32A
11
40A
32A
9A
24A
FRONT FENDERS


FRONT FENDERS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	58998-83	FENDER, prime (1)	FXR: 87 to 90-EA/B/G/L/M
35	59007-84	FENDER, prime (1)	FXR: 87 to 90-EC
37	59082-79	LAMP ASSY. (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
38	59093-87	FENDER, prime (1)	Touring: 87 to 90-ALL
39	59111-74	FENDER BRACE (1)	FXR: 87 to 90-EC
40	59129-86	FENDER, prime (1)	Softail: 87 to 90-BJ
40A	59139-89	FENDER, prime (1)	Softail: 90 to 90-BM
41	59159-80	DECAL, "Classic" (silver) (2)	Touring: 87 to 90-DB/D/J
41	59173-81A	DECAL, "Classic" (gold) (2)	Touring: 87 to 90-DB/D/J
43	59166-80	LOCKPLATE (2)	Touring: 87 to 90-ALL
46	59176-88	FENDER, prime (1)	Softail: L88 to 90-BL
48	59180-80	LENS, fender lamp (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
49	59181-80	GASKET, fender lamp lens (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
49A	59197-87	WIRE ASSY., fender lamp (1)	Softail: 87 to 90-BJ
50	59211-74	SIDE TRIM (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
51	59231-86	TRIM SKIRT, lower (1)	Touring: 87 to 90-ALL
51	59235-86	TRIM SKIRT, lower (black) (1)	Softail: 87 to 90-BJ
52	59236-89	NAMEPLATE (2)	Touring: 89 to 90-DP
52	59246-89	NAMEPLATE (2)	Touring: 89 to 90-DM
53	59250-88	MOUNT, reflector (2)	FXR: 88 to 90-EC
54	59253-87	REFLECTOR, amber (4)	FXR: 87 to 90-EG/L/M; 88 to 90-EA/B/C
55	59254-72	REFLECTOR, amber (2)	Softail: 87 to 90-BJ Touring: 87 to 90-FA
56	59261-77	REFLECTOR, amber (2)	Touring: 87 to 90-DB/D/J/M/P
57	59924-80	FENDER, prime (1)	Softail: 87 to 90-BH/K
58	69504-80	WIRE ASSY., fender lamp (1)	Touring: 87 and 88-ALL
58	69505-89	WIRE ASSY., front fender (1)	Touring: 89 to 90-ALL
58	70196-86	WIRE ASSY., fender lamp (1)	Softail: 87 to 90-BJ Touring: 89 to 90-ALL
60	91085-83B	BUMPER ASSY. (1)	Touring: 87 to 90-DB/D/J/M/P
62	91090-77A	BRACKET, bumper (1)	Touring: 87 to 90-DB/D/J/M/P
63	91107-77	CUSHION, bumper (1)	Touring: 87 to 90-DB/D/J/M/P
		INTERNATIONAL MODELS ONLY	
37	68594-84	LAMP ASSY., HDI only (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
48	59182-84	LENS, fender lamp (HDI only) (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
	59256-84A	REFLECTOR, amber (HDI only) (2)	FXR: 90 to 90-EA/B/G/L/M Softail: 90 to 90-BJ Touring: 90 to 90-ALL
60	91086-90	BUMPER ASSY., HDI only (1)	Touring: 90 to 90-DB/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

REAR FENDERS

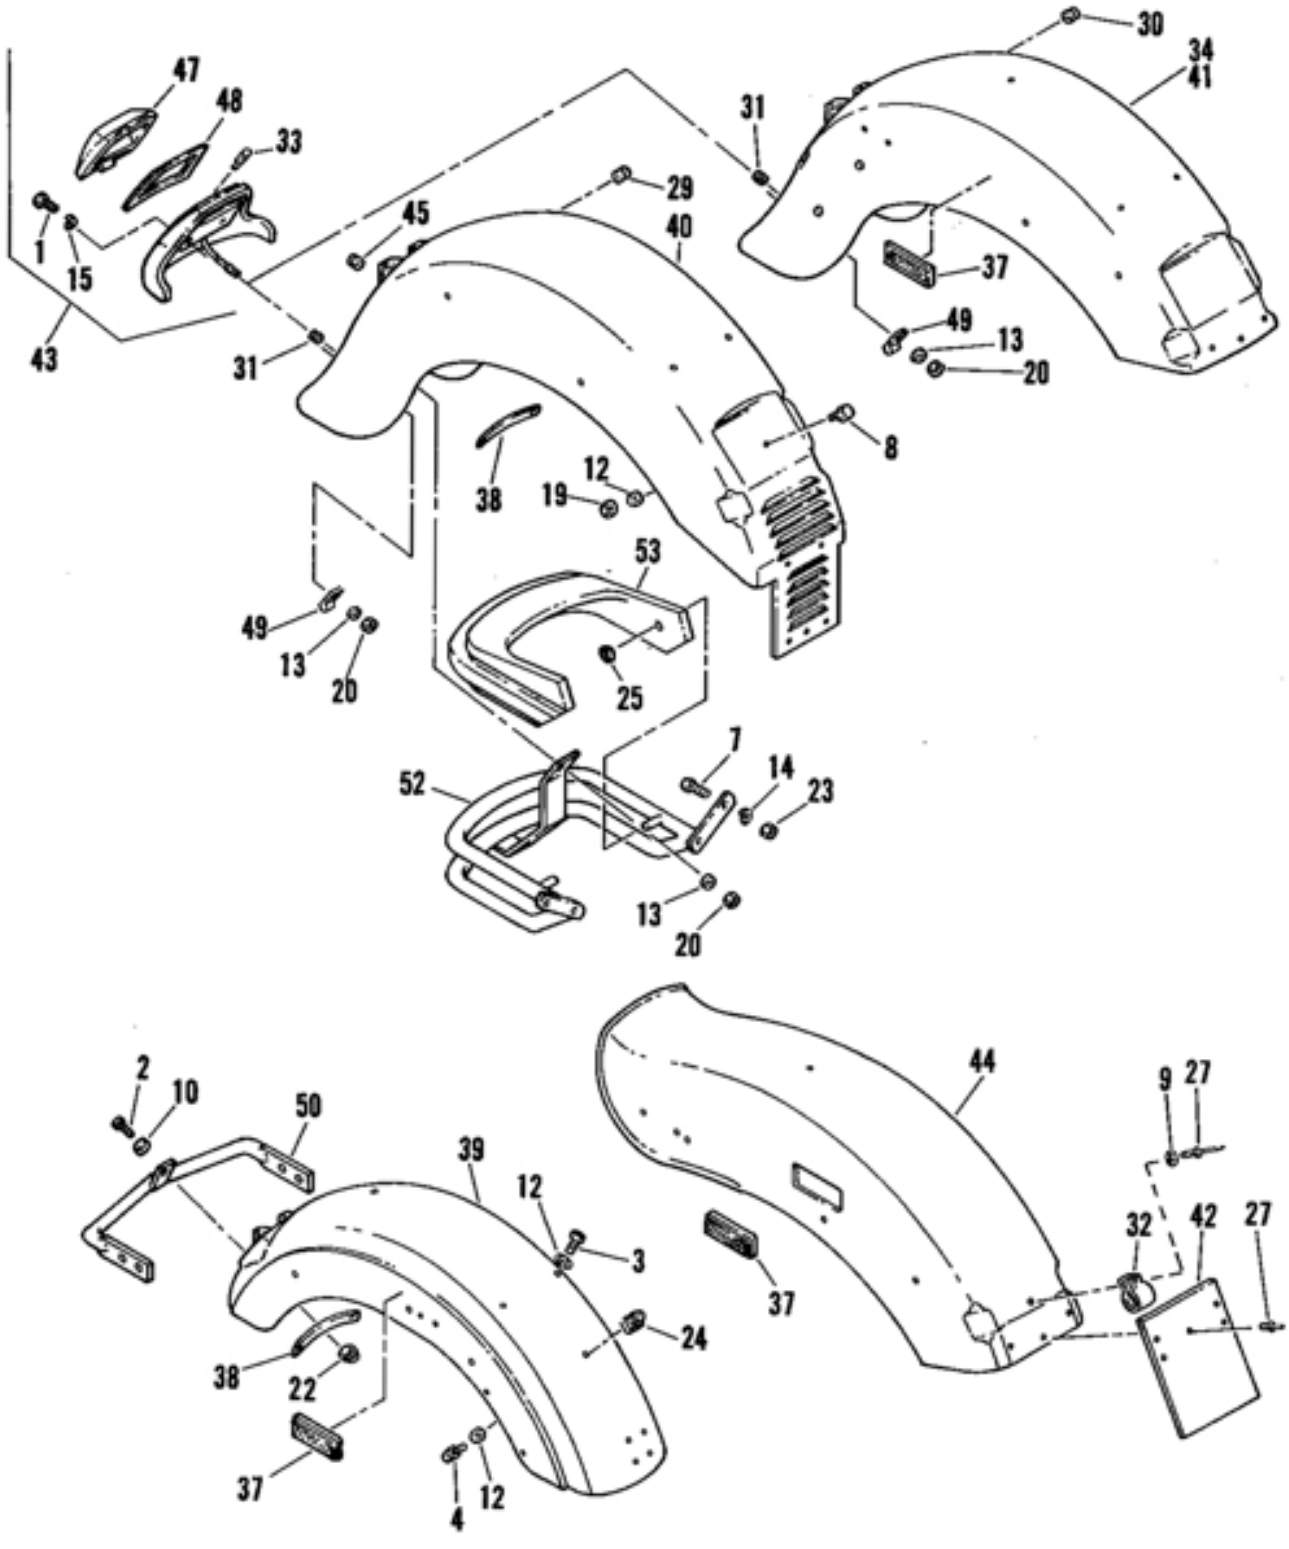


REAR FENDERS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	2604	SCREW (2)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
2	2607	SCREW (1)	FXR: 87 to 90-EC
3	2824W	SCREW (2)	FXR: 87 to 90-EA
4	3445	BOLT (1)	FXR: 87 to 90-ALL
7	3974HW	BOLT (2)	Touring: 87 to 90-ALL
8	3987	BOLT (1)	Touring: 87 to 90-ALL
9	6029	WASHER (1)	Softail: 87 and 88-BH/K
10	6410	WASHER (1)	FXR: 87 to 90-EC
12	6702	WASHER, 3-FXR (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
13	6703	WASHER (3)	Touring: 87 to 90-ALL
14	7041	LOCKWASHER (2)	Touring: 87 to 90-ALL
15	7118	LOCKWASHER (4)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
19	7531	LOCKNUT (1)	Touring: 87 to 90-ALL
20	7638	NUT (3)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
22	7686	LOCKNUT (1)	FXR: 87 to 90-EC
23	7753	NUT (2)	Touring: 87 to 90-ALL
24	8102	SPEEDNUT (1)	FXR: 87 to 90-ALL
25	8135B	SPEED NUT (2)	Touring: 87 to 90-ALL
26	8483	POP RIVET, 3-1987 (2)	Softail: 87 to 90-ALL
27	8692	POP RIVET (4)	Softail: 87 and 88-ALL
29	11400	GROMMET (1)	Touring: 87 to 90-ALL
30	11430	GROMMET (1)	Softail: 87 to 90-BJ
31	11437	GROMMET (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
32	38712-68	CLAMP (1)	Softail: 87 and 88-BH/K
33	53439-79	BULB, fender tip lamp (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
34	59126-86B	FENDER, prime (1)	Softail: 87 to 90-BJ

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


REAR FENDERS

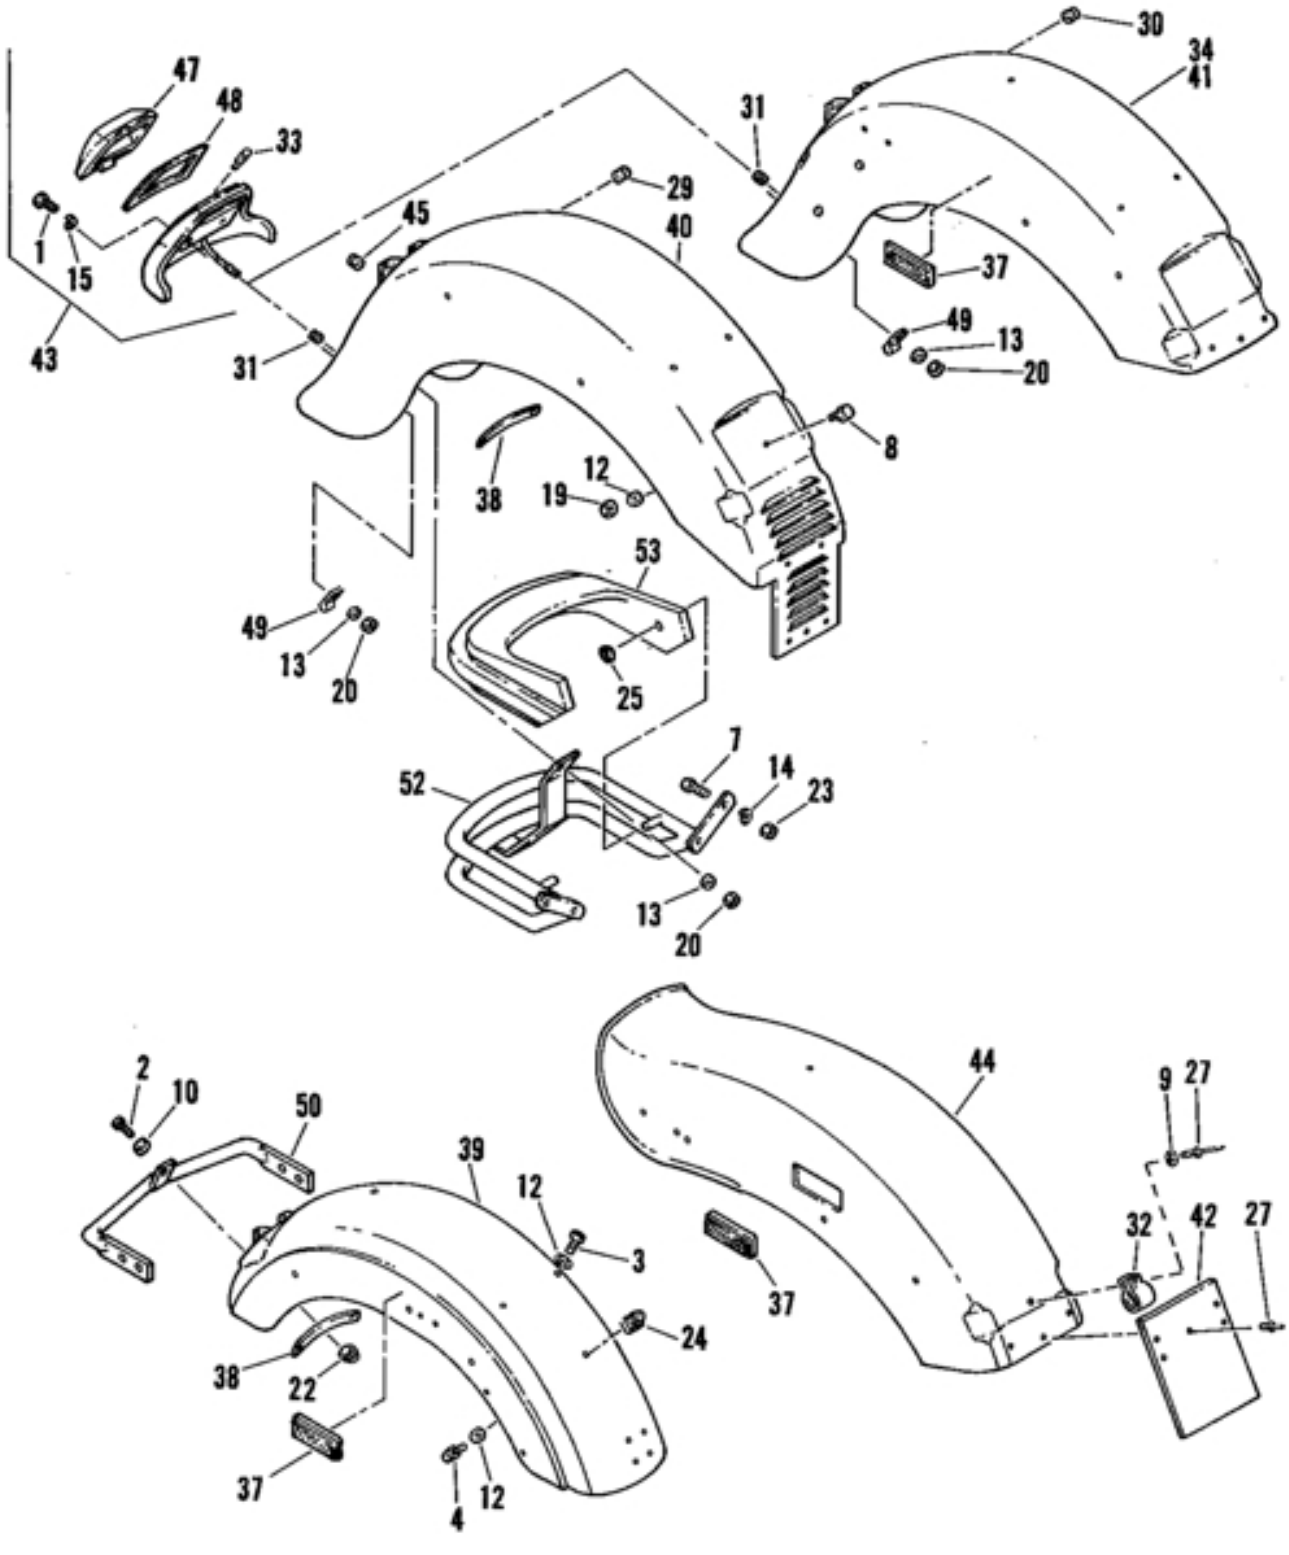

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
37	59255-72	REFLECTOR, red (2)	Softail: 87 to 90-ALL
37	59263-79	REFLECTOR, red (2)	FXR: 87 to 90-EA/B/G/L
38	59569-83	REINFORCEMENT (1)	FXR: 87 to 90-EC Touring: 87 to 90-ALL
39	59573-83	FENDER, prime (1)	FXR: 87 to 90-EC
39	59634-81A	FENDER, prime (1)	FXR: 87 to 90-EA/B/G/L/M
40	59579-85	FENDER, louvered (prime) (1)	Touring: 87 to 90-ALL
41	59596-89	FENDER, prime (1)	Softail: 90 to 90-BM
42	59648-84A	DEBRIS DEFLECTOR, upper (1)	Softail: 87 to 90-ALL
43	59658-79	LAMP ASSEMBLY (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
44	59914-86A	FENDER, prime (1)	Softail: 87 to 90-BH/K/L
45	67070-76	GROMMET (1)	Touring: 87 to 90-ALL
47	68046-79	LENS, rear fender lamp (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
48	68047-79	GASKET, rear fender lamp (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
49	71795-63A	CLAMP (1)	Softail: 87 to 90-BJ Touring: 87 to 90-ALL
50	90488-83	SUPPORT BRKT., saddlebags (1)	FXR: 87 to 90-EC
52	91013-79	REAR BUMPER ASSY. (1)	Touring: 87 to 90-ALL
52	91023-79	RAIL, rear bumper (1)	Touring: 87 to 90-ALL
53	91123-77	BUMPER CUSHION, rear (1)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
37	59254-72	REFLECTOR, amber (2)	Softail: 87 to 89-ALL
37	59256-84A	REFLECTOR, amber (2)	FXR: 87 to 89-ALL; 90 to 90-EA/B/G/L Softail: 90 to 90-ALL
37	59251-90	REFLECTOR, rear (red) (HDI only) (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

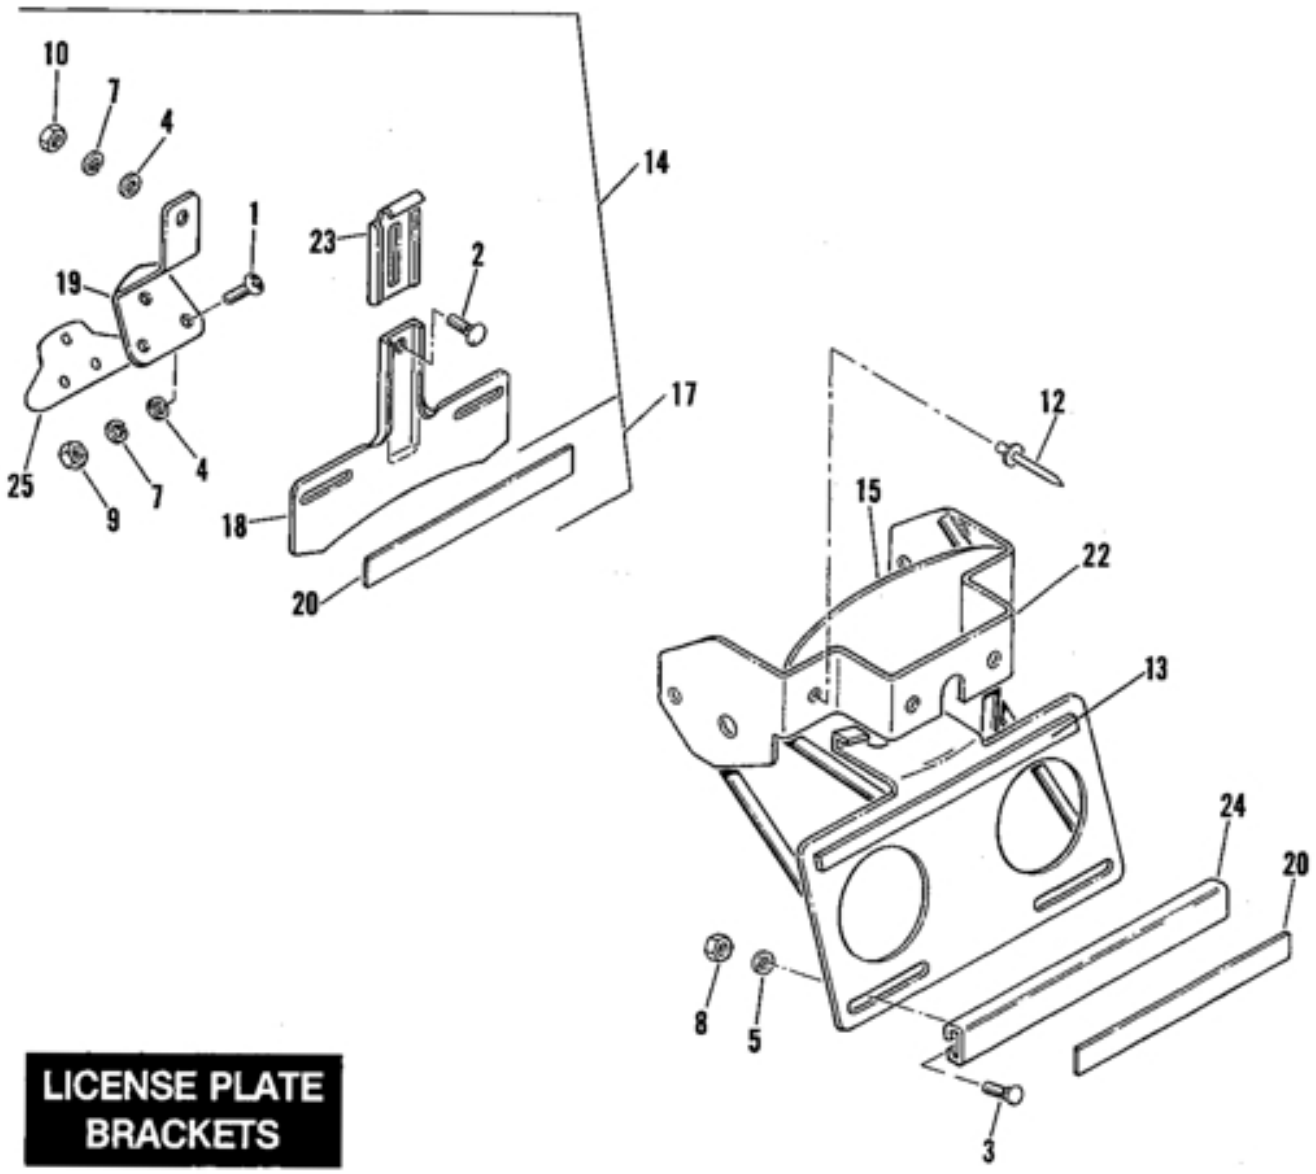

LICENSE PLATE BRACKETS


LICENSE PLATE BRACKET

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2774	SCREW (3)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ/M
2	5403B	BOLT (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ/M
3	5465	BOLT (2)	Softail: 87 to 90-BH/K/L
4	6703	WASHER (4)	FXR: 87 to 90-ALL
5	6716	WASHER (2)	Softail: 87 to 90-BH/K/L
7	7036	WASHER (4)	FXR: 87 to 90-EA/B/C/G/L Softail: 87 to 90-BJ/M
7	7230	LOCKWASHER (3)	FXR: L89 to 90-EM
8	7624	LOCKNUT (2)	Softail: 87 to 90-BH/K/L
9	7686	LOCKNUT (3)	FXR: L89 to 90-EM
9	7688	NUT (3)	FXR: 87 to 90-EA/B/C/G/L Softail: 87 to 90-BJ/M
10	7689W	JAMNUT (1)	FXR: 87 to 90-ALL
12	8483	POP RIVET (2)	Softail: 87 to 90-BH/K/L
13	52092-77	FOAM TAPE (1)	Softail: 87 to 90-BH/K/L
14	59626-84	LICENSE PLATE BKT. ASM. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ
15	59971-80	SPLASH SHIELD, rubber (1)	Softail: 87 to 90-BH/K/L
17	59983-75	LICENSE PLATE BKT. ASM., W/# 14 and 20 (1)	FXR: 87 to 90-EA/B/C/G/L Softail: 87 to 90-BJ
18	59984-73	BRACKET (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ
19	59986-75	SUPPORT (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ
20	59988-72	REFLECTOR (1)	ALL
22	59993-80A	LICENSE PLATE BKT. ASM. (1)	Softail: 87 to 90-BH/K/L
23	60001-55	CLAMP (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ
24	60005-77	CLAMP (1)	Softail: 87 to 90-BH/K/L
25	68456-89	PAD (1)	FXR: 89 to 90-EM
		INTERNATIONAL MODELS ONLY	
	59262-90	REFLECTOR, rear (red) (HDI only) (1)	Softail: 90 to 90-BH/K/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

REAR FENDER SUPPORTS

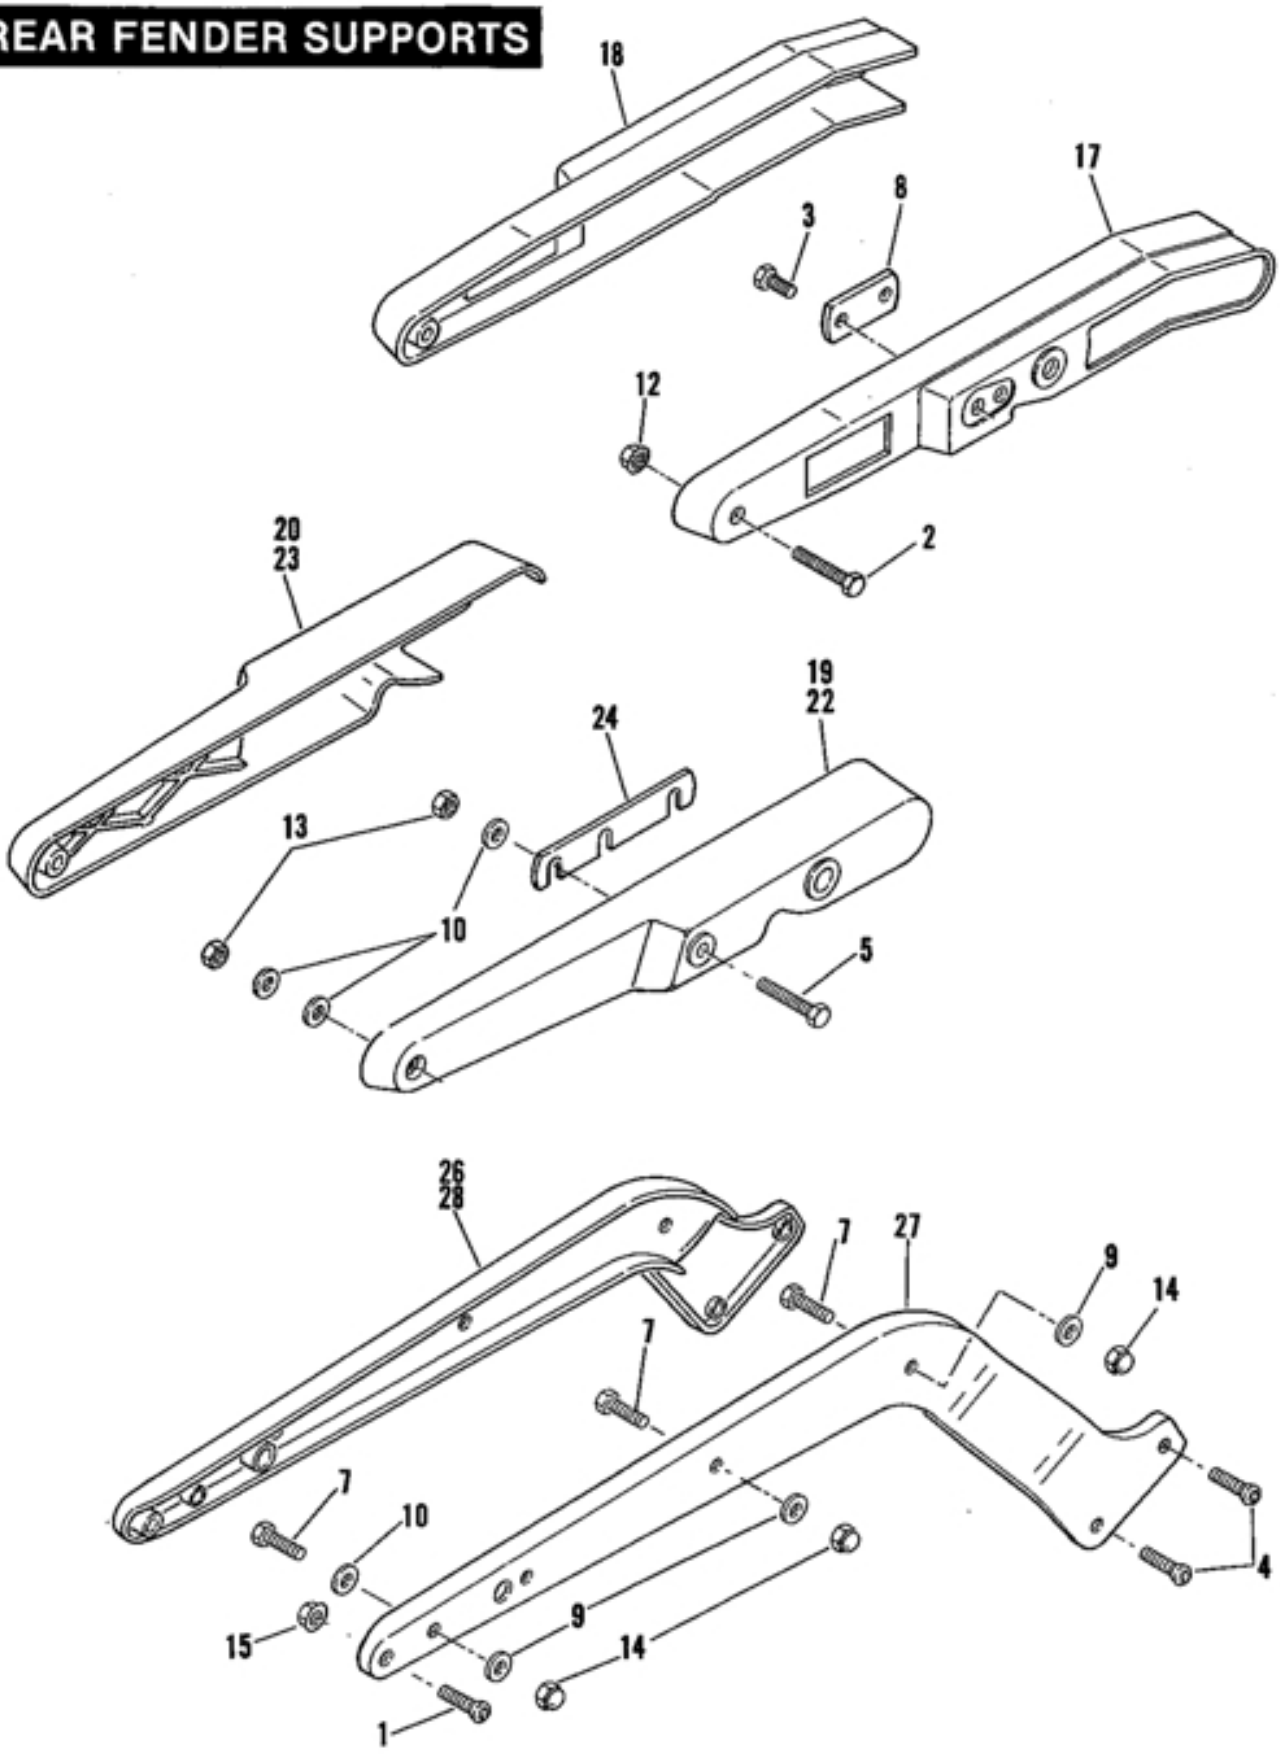


REAR FENDER SUPPORTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2005	SCREW (2)	Softail: 87 to 90-ALL
2	2887W	BOLT (2)	FXR: 87 to 90-EC
3	2906	BOLT (2)	FXR: 87 to 90-EC
4	4013	SCREW (4)	Softail: 87 to 90-ALL
5	4030	SCREW (2)	FXR: 87 to 90-EA/B/G/L/M
7	4716W	SCREW, 4-BJ/M-1990 and Later (6)	Softail: 87 to 90-ALL
7	4721	BOLT (2)	Softail: 90 to 90-BJ/M
8	5713	SPACER (2)	FXR: 87 to 90-EC
9	6379W	WASHER (6)	Softail: 87 to 90-ALL
10	6701	WASHER (6)	FXR: 87 to 90-EA/B/G/L
12	7531	LOCKNUT (2)	FXR: 87 to 90-EC
13	7667	NUT (4)	FXR: 87 to 90-EA/B/G/L/M
14	7643W	JAMNUT (2)	Softail: 90 to 90-BJ/M
14	7680W	ACORN NUT, 4-BM (6)	Softail: 87 to 89-ALL; 90 to 90-BH/J/K
15	7775	LOCKNUT (2)	Softail: 87 to 90-ALL
17	59504-84	SUPPORT, right (black) (1)	FXR: 87 to 90-EC
18	59505-84	SUPPORT, left (black) (1)	FXR: 87 to 90-EC
19	59542-87	SUPPORT, right (chrome) (1)	FXR: 87 to 90-EL; 88 to 90-EB
20	59544-87	SUPPORT, left (chrome) (1)	FXR: 87 to 90-EL; 88 to 90-EB
22	59548-87	SUPPORT, right (1)	FXR: 87 to 90-EA/B/G/M
23	59558-87	SUPPORT, left (1)	FXR: 87 to 90-EA/B/G/M
24	59591-87	SPACER (2)	FXR: 87 to 90-EA/B/G/M
26	59954-86	SUPPORT, left (chrome) (1)	Softail: 87 to 90-BH/K/L
27	59955-86	SUPPORT, right (chrome) (1)	Softail: 87 to 90-BH/K/L
27	59964-86	SUPPORT, right (chrome) (1)	Softail: 87 to 90-BJ
27	59977-89	SUPPORT, right (silver) (1)	Softail: 90 to 90-BM
28	59969-86	SUPPORT, left (chrome) (1)	Softail: 87 to 90-BJ
28	59978-89	SUPPORT, left (silver) (1)	Softail: 90 to 90-BM
		INTERNATIONAL MODELS ONLY	
27	59964-86	SUPPORT, right (chrome) (1)	Softail: 87 to 90-ALL
28	59969-86	SUPPORT, left (chrome) (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

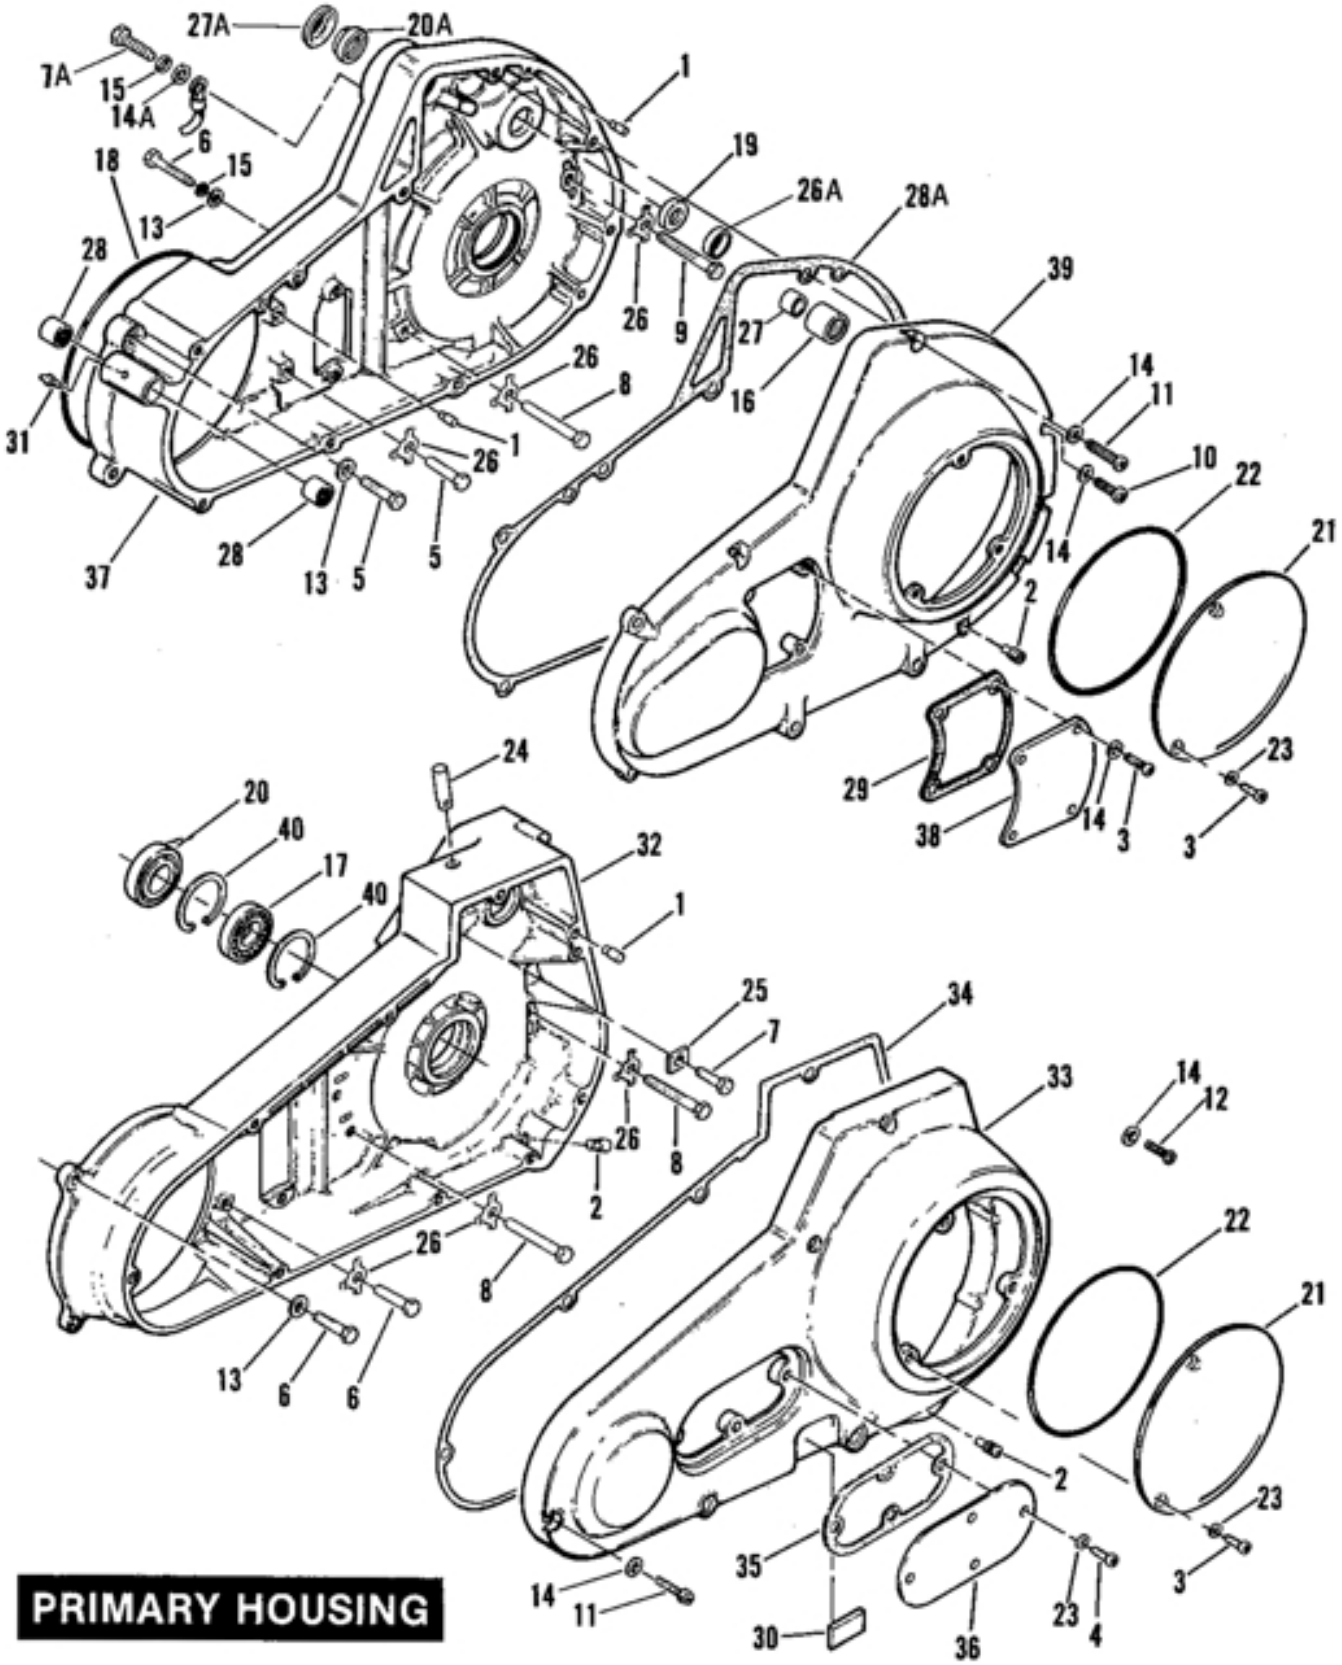


PRIMARY HOUSING

PRIMARY HOUSING (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	221	PIN (2)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
1	375	PIN (1)	Softail: 87 to 90-ALL
2	739	PLUG, magnetic (1)	Softail: 87 to 89-ALL
3	923	SCREW, 3-Softail (7)	ALL
4	924	SCREW (4)	Softail: 87 to 90-ALL
5	2818	BOLT (4)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
6	2871W	BOLT (4)	ALL
7	3545	BOLT (1)	Softail: 87 and 88-ALL
7A	3767B	BOLT (1)	FXR: 90 to 90-ALL
8	4068	BOLT, 4-Softail (1)	ALL
9	4086	BOLT (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
10	4718A	SCREW (5)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
11	4740A	SCREW, 7-89 and later Softail (5)	ALL
12	4813A	SCREW (9)	Softail: 87 and 89-ALL
12A	4820	SCREW (5)	Softail: 89 to 90-ALL
13	6016	WASHER (2)	ALL
14	6099	WASHER, 12-Softail (10)	ALL
14A	6703	WASHER (1)	FXR: 90 to 90-ALL
15	7036	WASHER (1)	FXR: 90 to 90-ALL
15A	7127	LOCKWASHER (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
16	9063	NEEDLE BEARING (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
17	9135	BEARING (1)	ALL
18	11147	O-RING, housing cover (1)	ALL
19	12051	OIL SEAL (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
20	12052	OIL SEAL (1)	ALL
20A	12053	OIL SEAL (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
21	25414-70A	COVER, clutch (1)	FXR: 87-EB; 87 to 90-EA/C/G/M Softail: 87 to 90-BH/J Touring: 87 to 90-ALL
21	25418-89	COVER, clutch (1)	Softail: 90 to 90-BM
21	60668-84B	COVER, clutch (chrome) (1)	FXR: 87 to 90-EL; 88 to 90-EB Softail: 87 to 90-BK/L/J Touring: 88 to 90-DB/J/M/P
22	25416-84	O-RING, clutch cover (1)	ALL
23	31433-84A	WASHER, nylon (7-Softail) (3)	ALL
24	31473-86	PIVOT SHAFT, actuator (1)	Softail: 87 to 90-ALL
25	31474-86	LOCKPLATE (1)	Softail: 87 to 90-ALL
26	33318-85	LOCKING TAB, 6-Softail (4)	FXR: 87 to 90-ALL Softail: 87 and 88-ALL Touring: 87 to 90-ALL
26A	33445-89	BUSHING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
27	33446-89	BUSHING (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

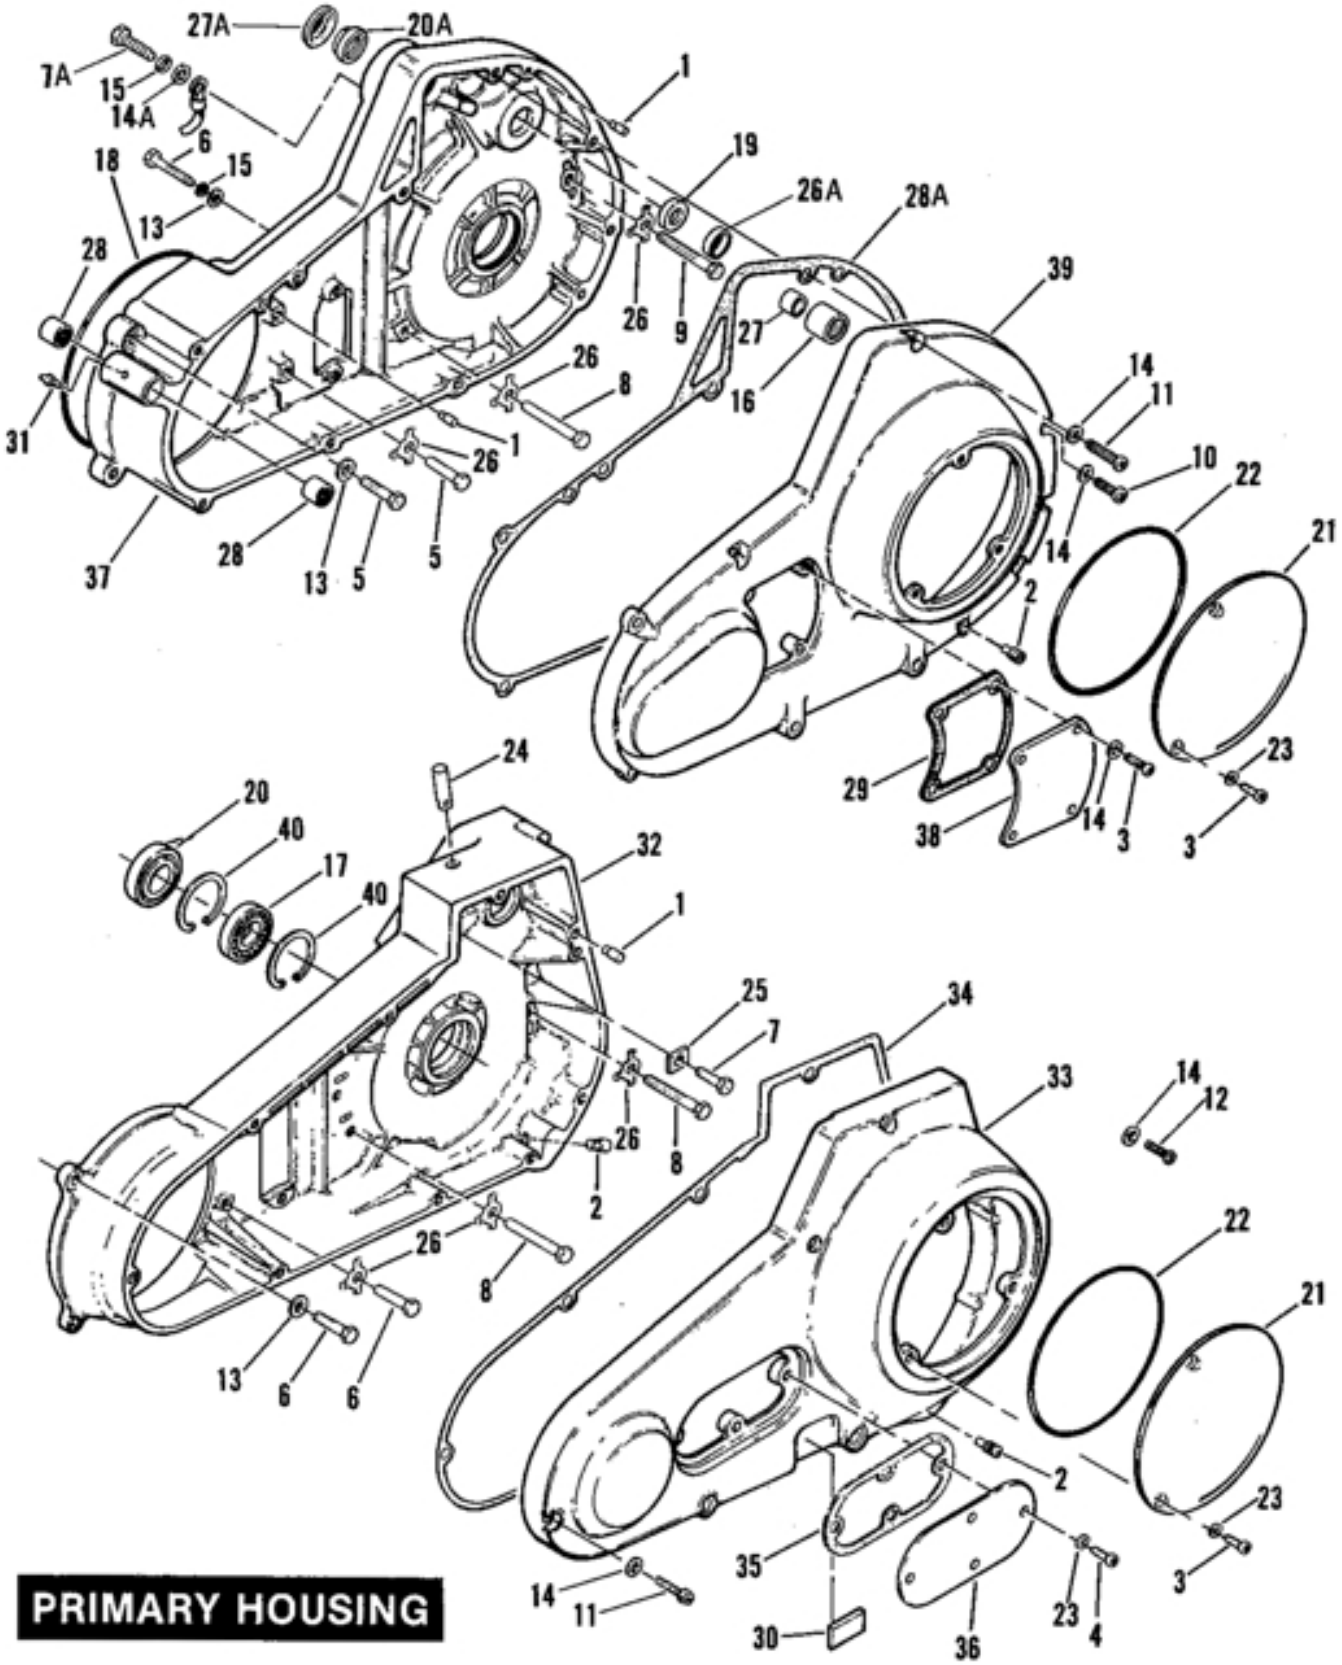


PRIMARY HOUSING

PRIMARY HOUSING (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27A	33448-89	SCRAPER, N/A (1)	FXR: 89-ALL Softail: 89-ALL Touring: 89-ALL
28	33713-85	BUSHING (2)	Touring: 87 to 90-ALL
28A	34901-85	GASKET, cover (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
29	34906-85	GASKET, inspection cover (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
30	50100-70	BUMPER, jiffy stand (1)	Softail: 87 to 90-ALL
31	50972-75	FITTING, lubrication (1)	Touring: 87 to 90-ALL
32	60432-86	PRIMARY HOUSING ASSY., black wrinkle (1)	Touring: 87 and 88-DB/J
32	60432-89	PRIMARY HOUSING ASSY., black wrinkle (1)	Touring: 89-DB/J/M/P
32	60432-90	PRIMARY HOUSING ASSY., black wrinkle (1)	Touring: 90 to 90-DB/J/M/P
32	60441-86A	PRIMARY HOUSING ASSY. (1)	Softail: 87 and 88-BH/J
32	60441-89	PRIMARY HOUSING ASSY. (1)	Softail: 89-BH/J
32	60441-90	PRIMARY HOUSING ASSY. (1)	Softail: 90 to 90-BH/J/M
32	60630-86A	PRIMARY HOUSING ASSY., black wrinkle (1)	Softail: 87 and 88-BK
32	60630-89	PRIMARY HOUSING ASSY., black wrinkle (1)	Softail: 89-BJ/K/L
32	60630-90	PRIMARY HOUSING ASSY., black wrinkle (1)	Softail: 90 to 90-BJ/K/L
33	60507-86A	COVER ASSY., primary (1)	Softail: 87 and 88-BH/J
33	60507-89	COVER ASSY., primary (1)	Softail: 89 to 90-BH/J
33	60543-86A	COVER ASSY., primary (chrome) (1)	Softail: 87 and 88-BJ/K/L
33	60543-89	COVER ASSY., primary (chrome) (1)	Softail: 89 to 90-BJ/K/L/M
34	60539-86	GASKET, primary cover (1)	Softail: 87 and 88-ALL
34	60539-89	GASKET, primary cover (1)	Softail: 89 to 90-ALL
35	60567-90	GASKET, inspection cover (1)	Softail: 87 to 90-ALL
36	60572-86	COVER, inspection (chrome) (1)	Softail: 87 to 90-ALL
37	60612-86	PRIMARY HOUSING ASSY., black wrinkle (1)	FXR: 87 and 88-EL; 88-EB
37	60612-89	PRIMARY HOUSING ASSY., black wrinkle (1)	FXR: 89-EB/L
37	60612-90	PRIMARY HOUSING ASSY., black wrinkle (1)	FXR: 90 to 90-EB/L
37	60661-86A	PRIMARY HOUSING ASSY. (1)	Touring: 87 and 88-ALL
37	60661-89	PRIMARY HOUSING ASSY (1)	Touring: 89-FA
37	60661-90	PRIMARY HOUSING ASSY (1)	Touring: 90 to 90-FA
37	60662-86A	PRIMARY HOUSING ASSY. (1)	FXR: 87-EB; 87 and 88-EA/C/G
37	60662-89	PRIMARY HOUSING ASSY (1)	FXR: 89-EA/C/G
37	60662-90	PRIMARY HOUSING ASSY (1)	FXR: 90 to 90-EA/C/G/M
38	60642-85	COVER, inspection (1)	FXR: 87-EB; 87 to 90-EA/C/G
38	60667-85	COVER, inspection (chrome) (1)	FXR: 87 to 90-EL, 88 to 90-EB
38	60670-85	COVER, inspection (chrome) (1)	Touring: 87 to 90-ALL
38	60673-85	COVER, inspection (1)	Touring: 87 to 90-ALL
39	60664-85B	COVER ASSY., primary (1)	FXR: 87-EA/B/C/G; 88-EA/C/G Touring: 87 and 88-ALL
39	60664-89	COVER ASSY., primary (1)	FXR: 89 to 90-EA/C/G Touring: 89 to 90-FA
39	60665-85B	COVER ASSY., primary (chrome) (1)	FXR: 87-EL; 88-EB/L Touring: 88-DB/J
39	60665-89	COVER ASSY., primary (chrome) (1)	FXR: 89 to 90-EB/L Touring: 89 to 90-DB/J/M/P
40	60678-85	RETAINING RING (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

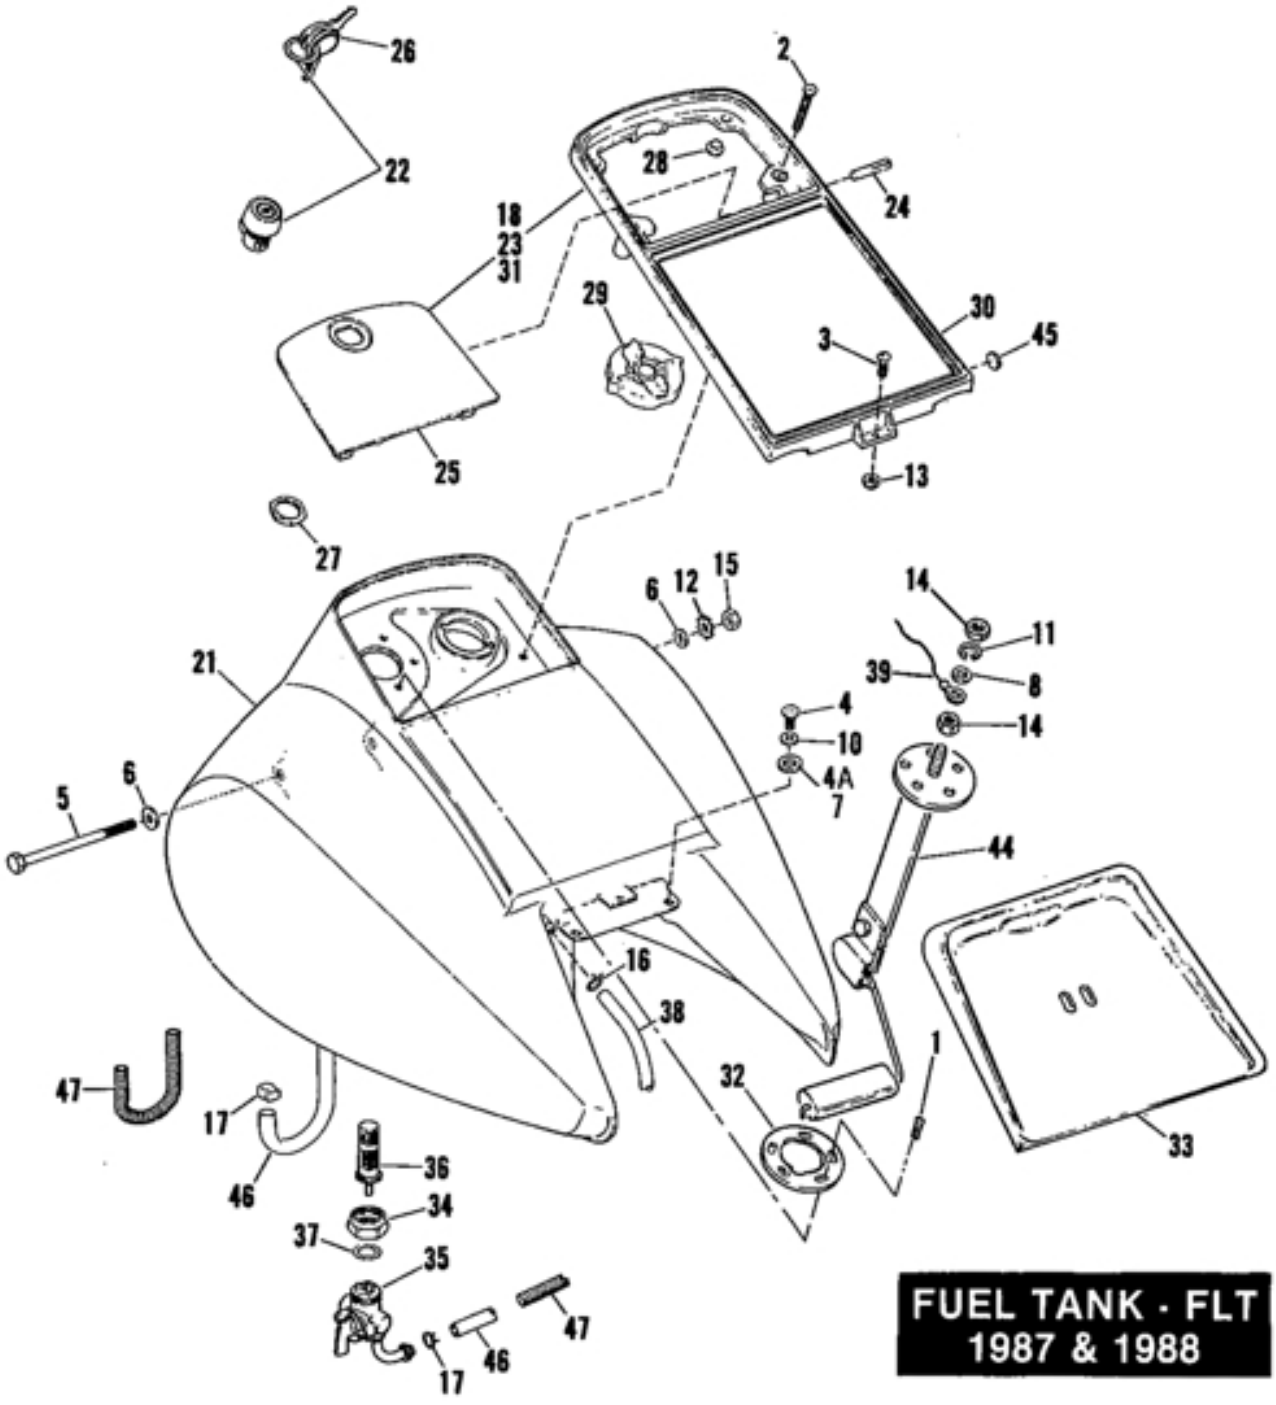


FUEL TANK - FLT
1987 & 1988

FUEL TANK - FLT MODELS - 1987 AND 1988

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	1309B	SCREW (5)	Touring: 87 and 88-ALL
2	2581	SCREW (2)	Touring: 87 and 88-ALL
3	2612	SCREW (1)	Touring: 87 and 88-ALL
4	2774	SCREW (2)	Touring: 87 and 88-ALL
4A	6235	WASHER (2)	Touring: 88-ALL
5	4067	BOLT (1)	Touring: 87 and 88-ALL
6	6702	WASHER (2)	Touring: 87 and 88-ALL
7	6703	WASHER (2)	Touring: 87 and 88-ALL
8	6716	WASHER (1)	Touring: 87 and 88-ALL
10	7036	WASHER (2)	Touring: 87 and 88-ALL
11	7069	LOCKWASHER (1)	Touring: 87 and 88-ALL
12	7232	LOCKWASHER (1)	Touring: 87 and 88-ALL
13	7609W	LOCKNUT (1)	Touring: 87 and 88-ALL
14	7638	NUT (2)	Touring: 87 and 88-ALL
15	7739	LOCKNUT (1)	Touring: 87 and 88-ALL
16	9996	CLAMP, overflow hose (1)	Touring: 87 and 88-ALL
17	10014	CLAMP (3)	Touring: 87 and 88-ALL
18	60958-81	PANEL AND DOOR ASSY., black, N/A (1)	Touring: 87 and 88-DB
18	60962-82	PANEL AND DOOR ASSY., brown, N/A (1)	Touring: 87 and 88-DB
21	61019-83A	FUEL TANK, prime (1)	Touring: 87 and 88-ALL
22	61029-82A	LOCK, tank door-w/keys (1)	Touring: 87 and 88-ALL
23	61072-79	PANEL AND DOOR ASSY., black, N/A (1)	Touring: 87-DD; 88-FA
24	61073-79	PIN, door hinge (2)	Touring: 87 and 88-ALL
25	61075-79	DOOR, fuel tank (1)	Touring: 87 and 88-ALL
26	61077-82	KEYSET, ign. sw. and door (specify key no.) (1)	Touring: 87 and 88-ALL
27	61078-80	NUT (1)	Touring: 87 and 88-ALL
28	61082-79	BUMPER, tank door (2)	Touring: 87 and 88-ALL
29	61083-79A	FILLER CAP (1)	Touring: 87 and 88-ALL
30	61084-79	PANEL, tank door (1)	Touring: 87 and 88-ALL
31	61086-83	PANEL AND DOOR ASSY., brown, N/A (1)	Touring: 87 and 88-DJ
31	61095-83	PANEL AND DOOR ASSY., black, N/A (1)	Touring: 87 and 88-DJ
32	61322-80B	GASKET (1)	Touring: 87 and 88-ALL
33	61649-83	PANEL, fuel tank (1)	Touring: 87 and 88-ALL
34	62161-75	NUT, fuel valve (1)	Touring: 87 and 88-ALL
35	62167-83	FUEL VALVE (1)	Touring: 87 and 88-ALL
36	62170-81A	FILTER, fuel valve (1)	Touring: 87 and 88-ALL
37	62172-75	GASKET, fuel valve (1)	Touring: 87 and 88-ALL
38	63592-89	HOSE, overflow (1)	Touring: 87 and 88-ALL
39	70328-84	WIRE, sending unit to fuel gauge (1)	Touring: 87 and 88-ALL
40	71518-80	SCREW, ign. sw. housing (4)	Touring: 87 and 88-ALL
44	75037-84	SENDING UNIT, fuel gauge (1)	Touring: 87 and 88-ALL
45	75101-82	SPACER (4)	Touring: 87 and 88-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
46	63501-68	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 ft. lg.) (1)	Touring: 87 and 88-ALL
47	63505-84	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. lg.) (1)	Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

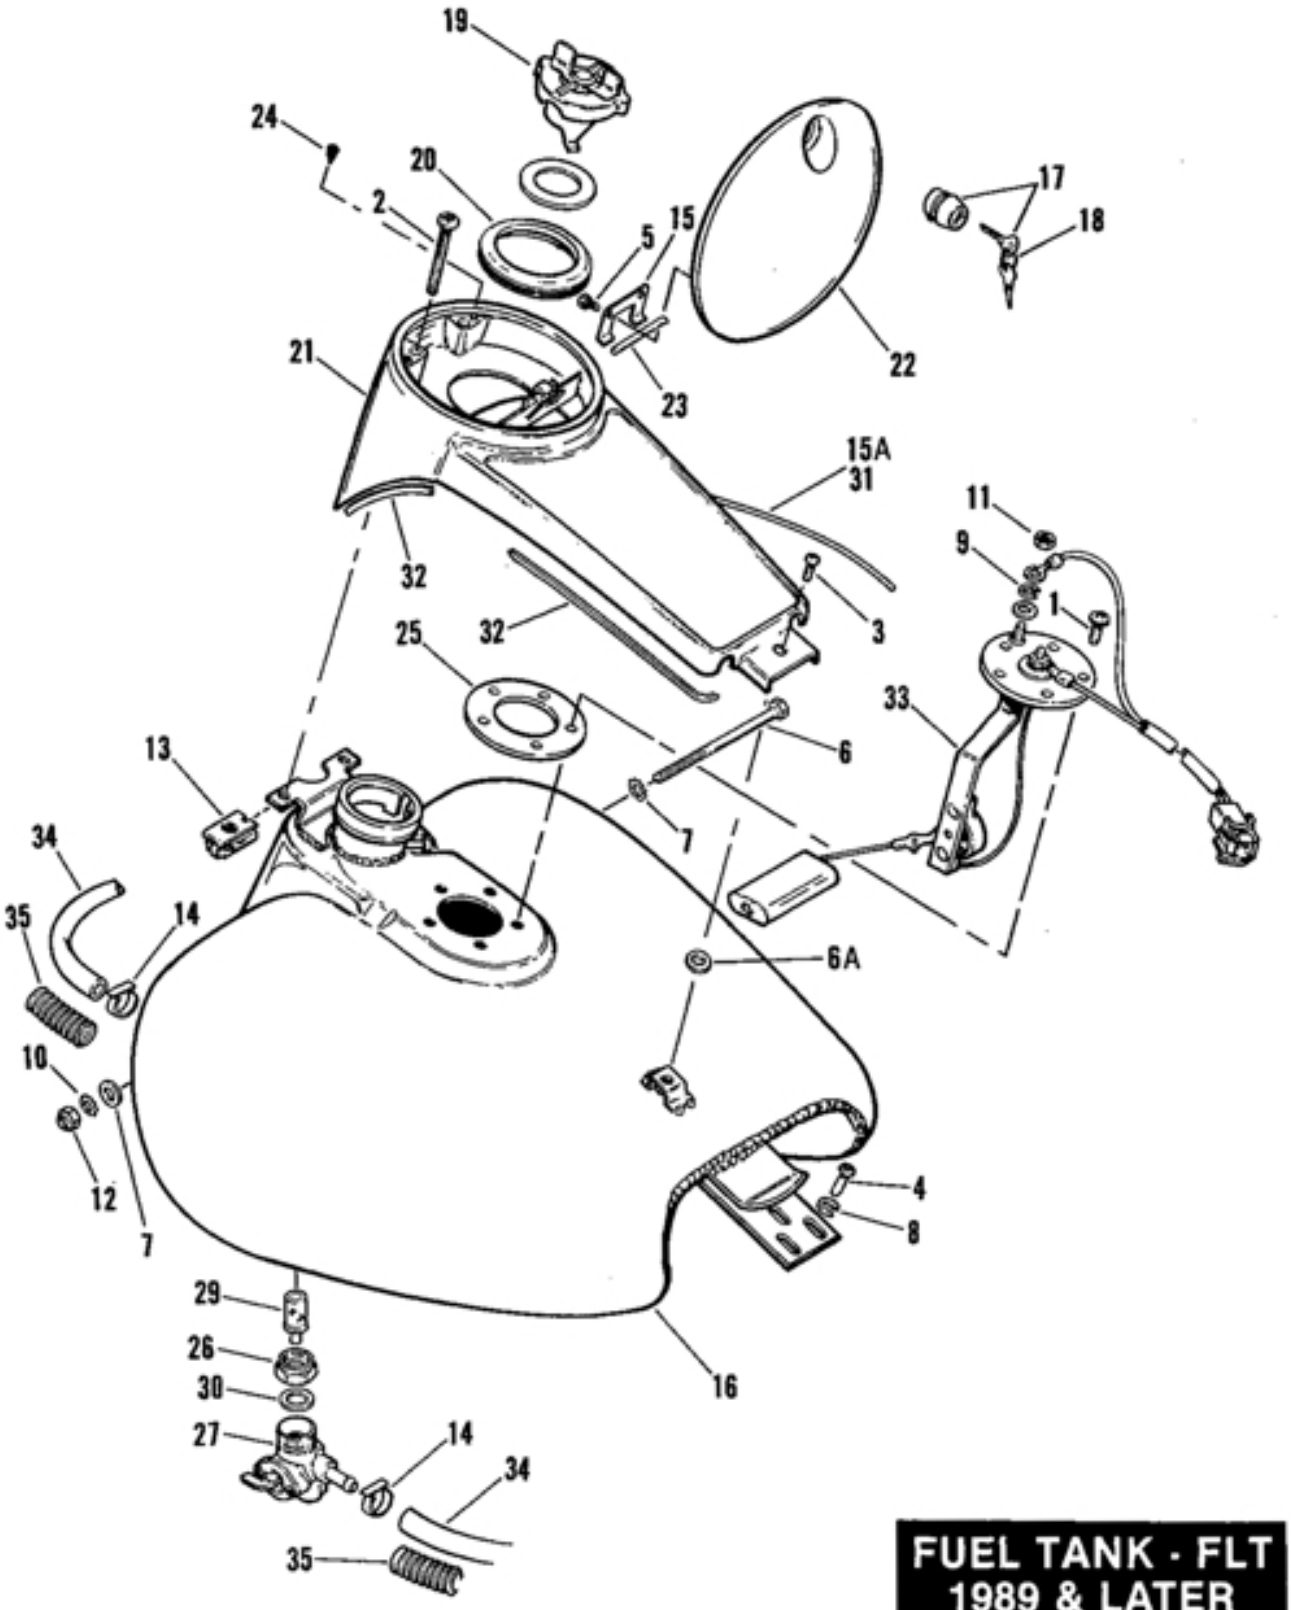


FUEL TANK - FLT
1989 & LATER

FUEL TANK - FLT MODELS - 1989 AND LATER

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	1309B	SCREW, sealing (5)	Touring: 89 to 90-ALL
2	2599	SCREW (2)	Touring: 89 to 90-ALL
3	2773	SCREW (1)	Touring: 89 to 90-ALL
4	2774	SCREW (2)	Touring: 89 to 90-ALL
5	3529	SCREW (2)	Touring: 89 to 90-ALL
6	4061	BOLT (1)	Touring: 89 to 90-ALL
6A	6109	WASHER (1)	Touring: 89 to 90-ALL
7	6702	WASHER (2)	Touring: 89 to 90-ALL
8	7036	WASHER (2)	Touring: 89 to 90-ALL
9	7069	LOCKWASHER (1)	Touring: 89 to 90-ALL
10	7232	LOCKWASHER (1)	Touring: 89 to 90-ALL
11	7638	NUT, brass (1)	Touring: 89 to 90-ALL
12	7739	LOCKNUT (1)	Touring: 89 to 90-ALL
13	7743	CLIP NUT (2)	Touring: 89 to 90-ALL
14	10014	CLAMP (4)	Touring: 89 to 90-ALL
15	10089	CLIP (1)	Touring: 89 to 90-ALL
15A	27085-90	HOSE, overflow, N/A (1)	Touring: 90 to 90-ALL
16	61019-89A	FUEL TANK, prime (1)	Touring: 89 to 90-ALL
17	61029-82A	LOCK, door w/keys (1)	Touring: 89 to 90-ALL
18	61077-82	KEYSET, door and ign. sw. (specify key no.) (1)	Touring: 89 to 90-ALL
19	61091-88	FILLER CAP (1)	Touring: 89 to 90-ALL
20	61112-82	BOOT (1)	Touring: 89 to 90-ALL
21	61270-88	CONSOLE (1)	Touring: 89 to 90-ALL
22	61278-88	DOOR, console (1)	Touring: 89 to 90-ALL
23	61279-88	PIN, door hinge (1)	Touring: 89 to 90-ALL
24	61313-88	BUMPER, cover (2)	Touring: 89 to 90-ALL
25	61322-80B	GASKET, fuel sending unit (1)	Touring: 89 to 90-ALL
26	62161-75	NUT, fuel valve (1)	Touring: 89 to 90-ALL
27	62167-81	FUEL VALVE BODY (1)	Touring: 89 to 90-ALL
29	62170-81A	FILTER, fuel valve (1)	Touring: 89 to 90-ALL
30	62172-75	GASKET, fuel valve (1)	Touring: 89 to 90-ALL
31	63592-89	HOSE, overflow (1)	Touring: 89 to 90-ALL
32	71294-89	MOLDING, rubber (1)	Touring: 89 to 90-ALL
33	75040-88	SENDING UNIT, fuel gauge (1)	Touring: 89 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
34	63501-68	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 ft. lg.) (1)	Touring: 89 to 90-ALL
35	63505-84	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. lg.) (1)	Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

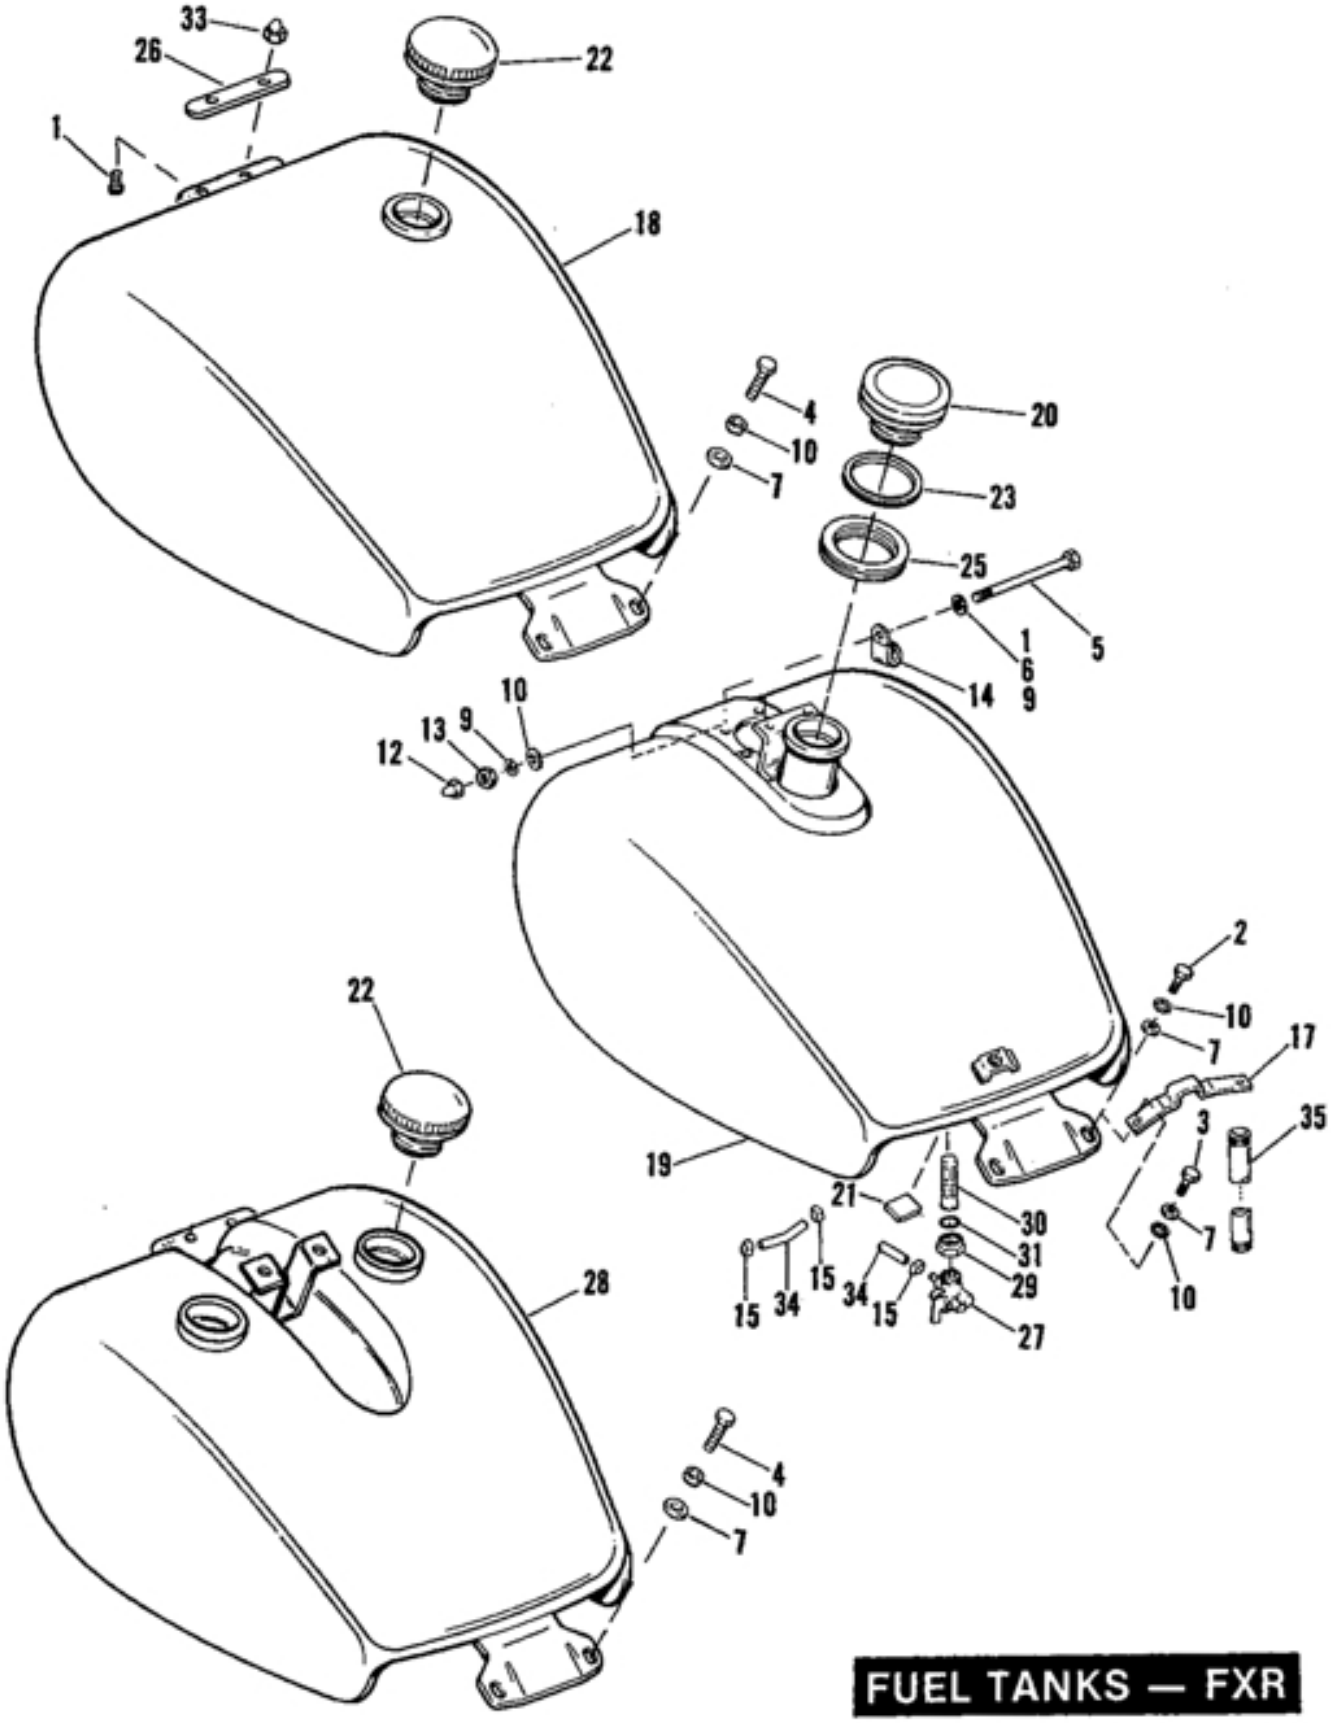


FUEL TANKS — FXR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	2665	SCREW (2)	FXR: 87 to 90-EL
2	3987	BOLT (2)	FXR: 87 to 90-EB/C/G/L/M
3	3991	BOLT (1)	FXR: 87 to 90-EA
4	4017	BOLT (2)	FXR: 87 to 90-EB/C/G/L/M
5	4067	BOLT (1)	FXR: 87 to 90-EC
5	4100HW	BOLT (1)	FXR: 87 to 90-EA/B/G/L/M
6	6019	WASHER (1)	FXR: 87 to 90-EL
7	6109	WASHER (3)	FXR: 87 to 90-EA/B/G/M
7	6237	WASHER (2)	FXR: 87 to 90-EG/L/M
9	6702	WASHER, 2-EC (1)	FXR: 87 to 90-ALL
10	7232	LOCKWASHER (2)	FXR: 87 to 90-EA/B/G/L/M
12	7507	ACORN NUT, chrome (1)	FXR: 87 to 90-ALL
13	7739	LOCKNUT (1)	FXR: 87 to 90-EC
14	9988	CLIP, throttle cables (1)	FXR: 87 to 90-ALL
15	10014	CLAMP, 3-EL (4)	FXR: 87 to 90-ALL
17	52107-86	BRACKET, seat (1)	FXR: 87 to 90-EA
18	61006-87A	FUEL TANK, prime (1)	FXR: 87 to 90-EL
19	61044-82C	FUEL TANK, prime (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
20	61060-82A	FILLER CAP (1)	FXR: 87 to 90-EB; 87 to 90-EA/C/G/M
21	61079-82	PAD (1)	FXR: 87 to 90-ALL
22	61102-83B	FILLER CAP (1)	FXR: 87 to 90-EL; 88 to 90-EB
23	61109-85A	GASKET, filler cap (1)	FXR: 87 to 90-EA/B/C/G/M
25	61112-82	BOOT (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
26	61137-87	BRACKET, trim strap (1)	FXR: 87 to 90-EL
27	61335-83	VALVE, body (1)	FXR: 87 to 90-ALL
28	61421-88A	FUEL TANK, prime (1)	FXR: 88 to 90-EB
29	62161-75	NUT (1)	FXR: 87 to 90-ALL
30	62166-81A	FILTER (1)	FXR: 87 to 90-ALL
31	62172-75	GASKET, fuel filter (1)	FXR: 87 to 90-ALL
33	90844-80	ACORN NUT (2)	FXR: 87 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
34	63501-68	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (25 ft. lg.) (1)	FXR: 87 to 90-ALL
35	63505-84	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. lg.) (1)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

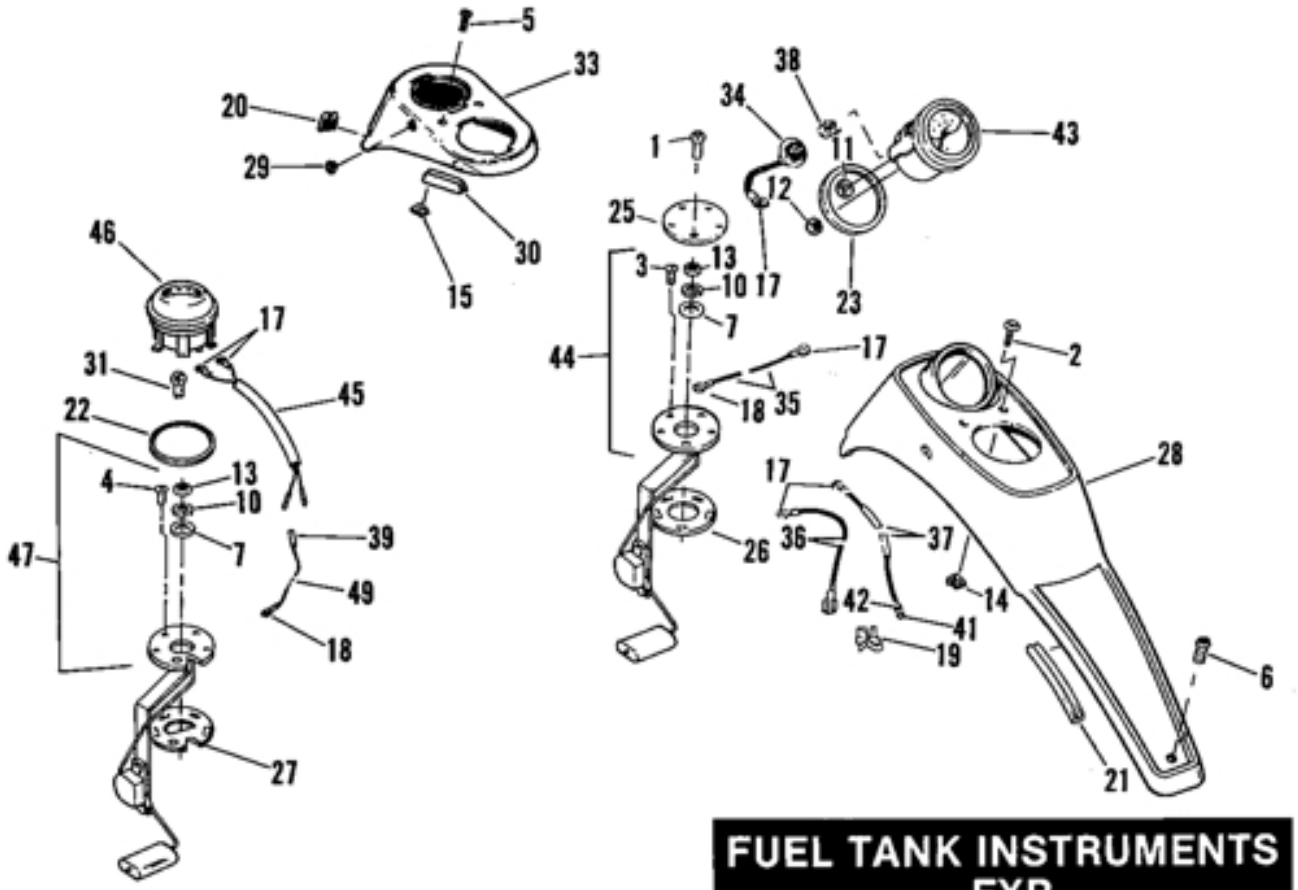

FUEL TANK INSTRUMENTS — FXR


FUEL TANK INSTRUMENTS - FXR MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	907	SCREW (5)	FXR: 87 to 90-EA
2	923	SCREW (2)	FXR: 87-EB; 87 to 90-EC/G/M
3	1309B	SCREW (5)	FXR: 87-EB; 87 to 90-EA/C/G/M
4	1311	SCREW (5)	FXR: 88 to 90-EB
5	2519	SCREW (2)	FXR: 88 to 90-EB
6	3652	SCREW (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
7	6716	WASHER (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
10	7069	LOCKWASHER (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
11	7590	NUT (3)	FXR: 87-EB; 87 to 90-EA/C/G/M
12	7608	NUT (2)	FXR: 87-EB; 87 to 90-EA/C/G/M
13	7638	NUT (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
14	7743	CLIP NUT (2)	FXR: 87-EB; 87 to 90-EA/C/G/M
15	8108	SPEEDNUT (2)	FXR: 88 to 90-EB
17	9856	TERMINAL, ring type-#6 hole (2-88 EB) (4)	FXR: 87 to 90-EA/B/C/G/M
18	9857	TERMINAL, ring type-# 10 hole (1)	FXR: 87 to 90-EA/B/C/G/M
19	9894	CLIP, ground wire (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
20	11452	GROMMET (1)	FXR: 88 to 90-EB
21	61117-86	TRIM (2)	FXR: 87 to 90-EA; 87 to 90-EA/C/G/M
22	61192-88	GASKET, cap gauge (1)	FXR: 88 to 90-EB
23	61311-82	GASKET, fuel gauge (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
25	61321-80	PLATE, cover (1)	FXR: 87 to 90-EA
26	61322-80B	GASKET, fuel sending unit (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
27	61324-88	GASKET, fuel sending unit (1)	FXR: 88 to 90-EB
28	61411-82	CONSOLE, fuel tank (chrome) (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
28	61413-86	CONSOLE, fuel tank (black wrinkle) (1)	FXR: 87 to 90-EA
29	67086-85	GROMMET (1)	FXR: 88 to 90-EB
30	67119-85	TRIM (1)	FXR: 88 to 90-EB
31	67136-85	BULB, fuel gauge (1)	FXR: 88 to 90-EB
33	67185-88	INSTRUMENT HOUSING, black wrinkle (1)	FXR: 88 to 90-EB
34	69540-78	SOCKET, w/wire (1)	FXR: 87-EB; 87 to 90-EA/C/G/M
35	69617-82	WIRE, sending unit to gauge (1)	FXR: 87-EB; 87 to 90-EC/G/M
36	69618-82A	WIRE, fuel gauge-ground (1)	FXR: 87-EB; 87 to 90-EC/G/M
37	69619-82	WIRE, fuel gauge to harness (1)	FXR: 87-EB; 87 to 90-EC/G/M
38	71099-74	BULB, fuel gauge (1)	FXR: 87-EB; 87 to 90-EC/G/M
39	72038-71	SOCKET, single pin (1)	FXR: 88 to 90-EB
41	72039-71	PIN, single socket (2-1988 EB) (1)	FXR: 87 to 90-EB/C/G/M
42	72043-71	CONNECTOR, single pin (1)	FXR: 87 to 90-EB/C/G/M
43	75039-86	FUEL GAUGE (1)	FXR: 87-EB; 87 to 90-EC/G/M
44	75034-82	SENDING UNIT (1)	FXR: 87-EB; 87 to 90-EC/G/M
45	75047-88	HARNESS, fuel gauge (1)	FXR: 88 to 90-EB
46	75049-88	FUEL GAUGE (1)	FXR: 88 to 90-EB
47	75057-88	SENDING UNIT (1)	FXR: 88 to 90-EB
49	75058-88	WIRE, fuel gauge-ground (1)	FXR: 88 to 90-EB

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FUEL TANK — SOFTAIL

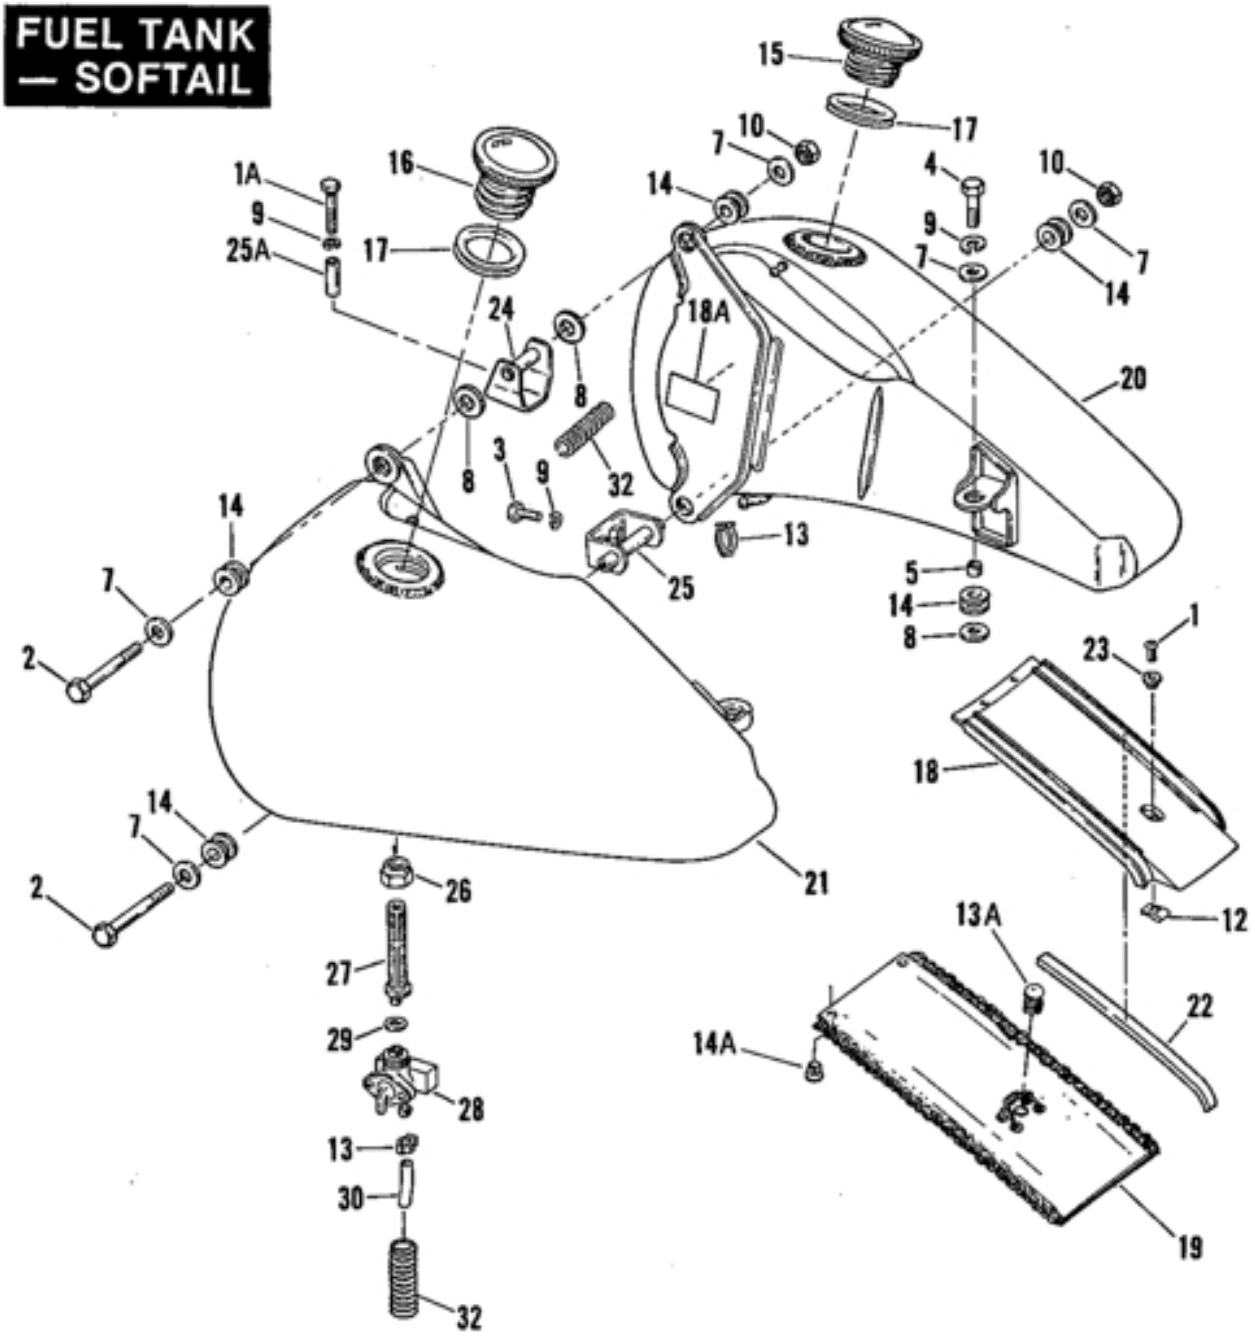


FUEL TANK - SOFTAIL MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	924	SCREW (1)	Softail: 87 to 90-BH/J/K/L
2	3409	BOLT (2)	Softail: 87 to 90-ALL
2A	3419	BOLT (1)	Softail: 87 to 90-ALL
3	3987	BOLT (2)	Softail: 87 to 90-ALL
4	4014W	BOLT (2)	Softail: 87 to 90-ALL
5	5775	WASHER (2)	Softail: 87 to 90-ALL
7	6237	WASHER (6)	Softail: 87 to 90-ALL
8	6365	WASHER (4)	Softail: 87 to 90-ALL
9	7041	LOCKWASHER (4)	Softail: 87 to 90-ALL
10	7725	LOCKNUT (2)	Softail: 87 to 90-ALL
12	8108	SPEEDNUT (1)	Softail: 87 to 90-BH/J/K/L
13	10014	CLAMP, fuel hose (3)	Softail: 87 to 90-ALL
13A	10040	CLIP (1)	Softail: 90 to 90-BM
14	11447	GROMMET, fuel tank mounting (6)	Softail: 87 to 90-ALL
14A	11717	FASTENING GROMMET (1)	Softail: 90 to 90-BM
15	61102-83B	CAP, fuel filler-right (vented) (1)	Softail: 87 to 90-ALL
16	61103-83A	CAP, fuel filler-left (1)	Softail: 87 to 90-ALL
17	61109-85A	GASKET (2)	Softail: 87 to 90-ALL
18	61155-84	TRIM, fuel tank (1)	Softail: 87 to 90-BH/J/K/L
18A	61157-87	PAD, protective (2)	Softail: 87 to 90-ALL
19	61165-89	TRIM PANEL (1)	Softail: 90 to 90-BM
20	61211-84B	FUEL TANK, right-5 gal. (prime) (1)	Softail: 87 to 90-BH/K
20	61218-85B	FUEL TANK, right-3-1/2 gal. (prime) (1)	Softail: 87 to 90-BJ/L/M
21	61237-91	FUEL TANK, left-3-1/2 gal. (prime) (1)	Softail: 87 to 90-BJ/L/M
21	61228-84C	FUEL TANK, left-5 gal. (prime) (1)	Softail: 87 to 90-BH/K
22	61640-82	FOAM STRIP (2)	Softail: 87 to 90-ALL
23	61641-84	SPACER, trim (1)	Softail: 87 to 90-BH/J/K/L
24	61661-84	BRACKET, fuel tank mounting-upper (1)	Softail: 87 to 90-ALL
25	61667-84	BRACKET, fuel tank mounting-lower (1)	Softail: 87 to 90-ALL
25A	62043-81A	SPACER (1)	Softail: 87 to 90-ALL
26	62161-75	NUT, fuel valve (1)	Softail: 87 to 90-ALL
27	62166-81A	FILTER, fuel valve (1)	Softail: 87 to 90-ALL
28	62167-81	FUEL VALVE, only (1)	Softail: 87 to 90-ALL
29	62172-75	GASKET, fuel valve (1)	Softail: 87 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
30	63501-68	HOSE, 1/4 I.D. x 1/2 O.D., rubber (25 ft. lg.) (1)	Softail: 87 to 90-ALL
32	63505-84	INSULATOR, 1/2 I.D. (nylon) (8 ft. lg.) (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

FUEL TANK TRIM

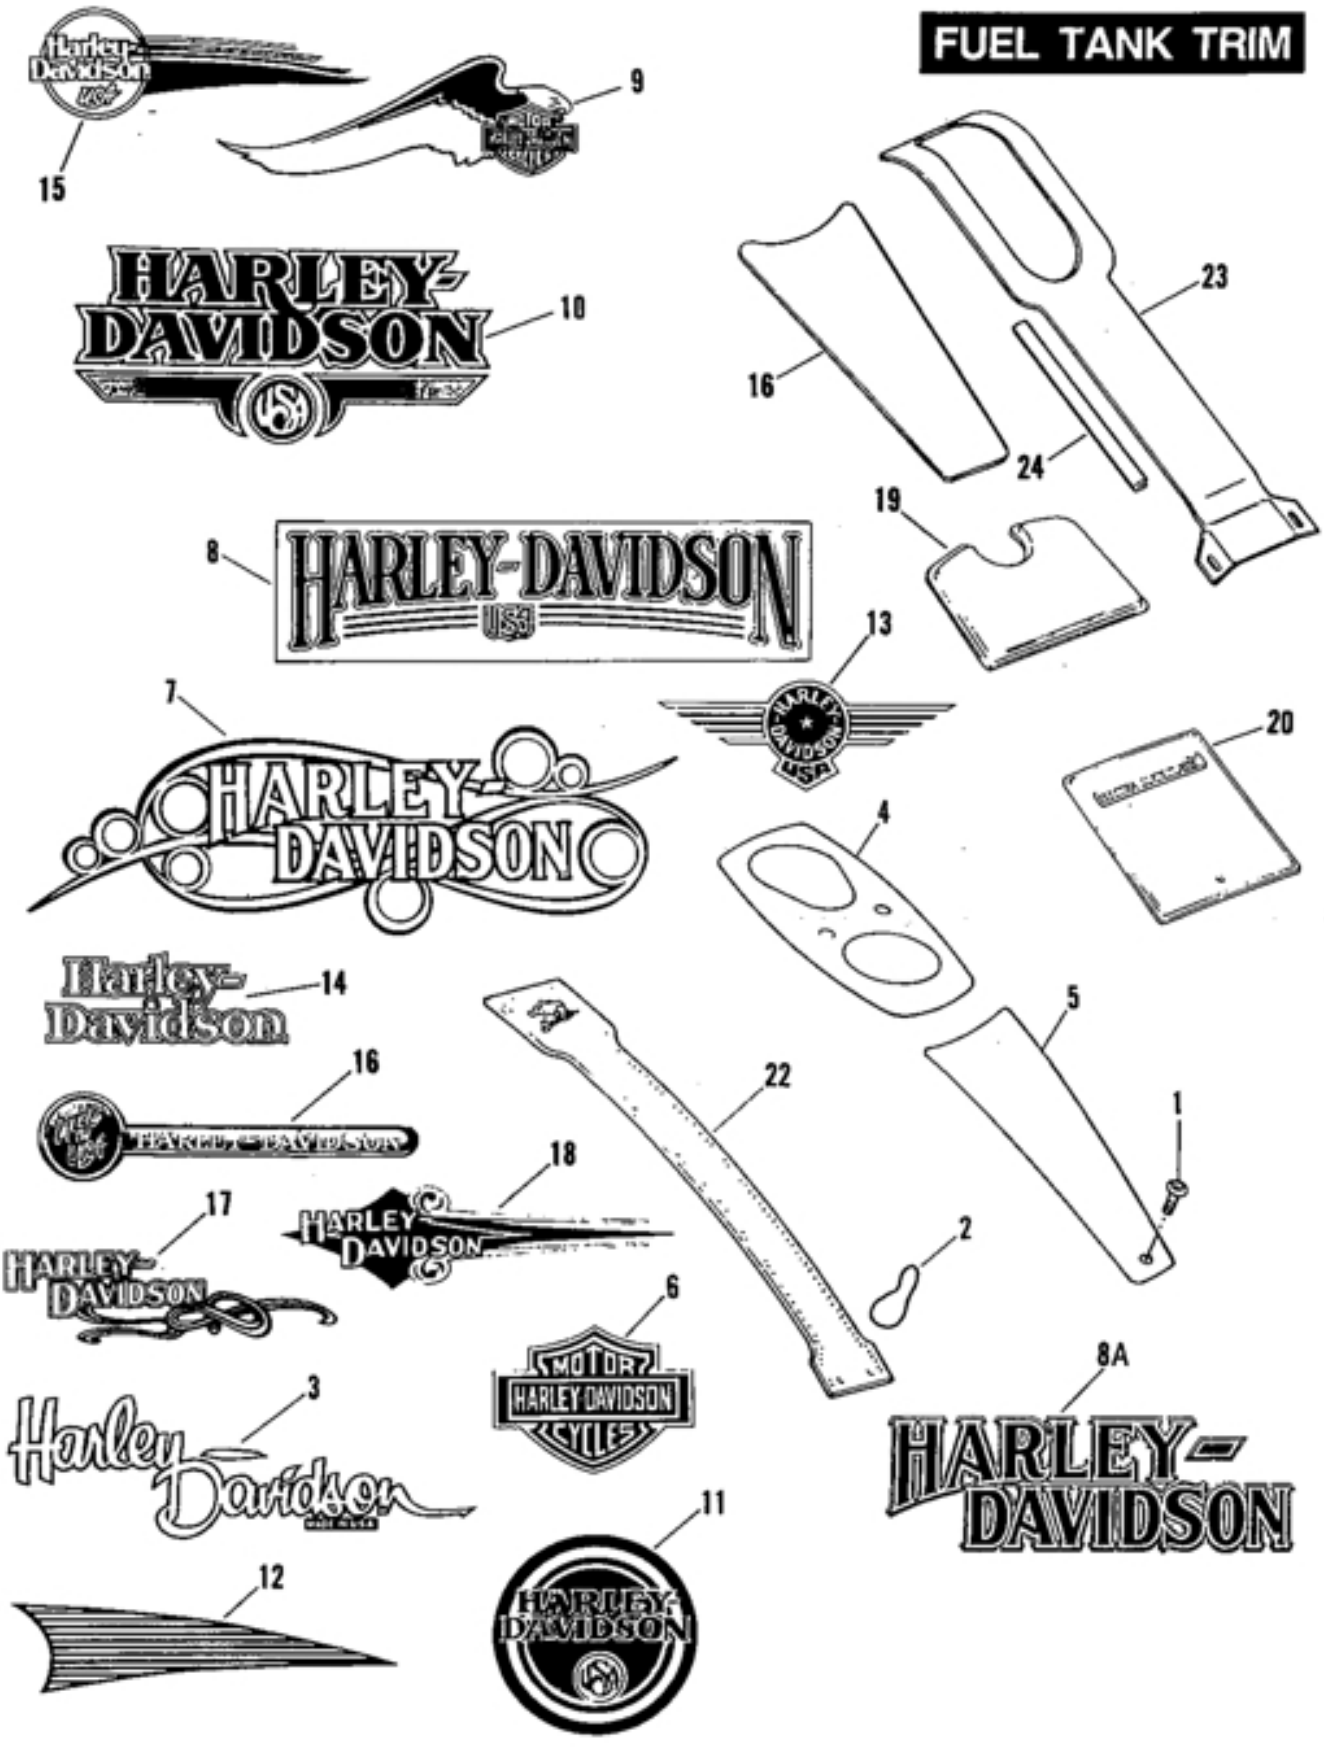


FUEL TANK TRIM (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3652	SCREW (1)	FXR: 87 to 90-ALL
2	11174	O-RING, 1 (1)	FXR: 87 to 90-EL
3	14031-87	DECAL, silver and blue (2)	FXR: 87-EB/G
3	14164-87	DECAL, brown, gold and orange (2)	FXR: 87-EB/G
3	14165-87	DECAL, brandywine, gold and orange (2)	FXR: 87-EB/G
4	14055-84	TRIM, upper console (black) (1)	FXR: 87-EB; 87 to 90-EC/G
5	14056-84	TRIM, lower console (black) (1)	FXR: 87-EB; 87 to 90-EC/G
6	14072-86	TRIM, right (gold and black) (1)	FXR: 87-EC
6	14072-88	TRIM, right (gold and orange) (1)	FXR: 88 and 89-EC
6	14073-86	TRIM, left (gold and black) (1)	FXR: 87-EC
6	14073-88	TRIM, left (gold and orange) (1)	FXR: 88 and 89-EC
6	14105-86	TRIM, left (silver and black) (1)	FXR: 87-EC
6	14105-88	TRIM, left (silver and orange) (1)	FXR: 88 and 89-EC
6	14106-86	TRIM, right (silver and black) (1)	FXR: 87-EC
6	14106-88	TRIM, right (silver and orange) (1)	FXR: 88 and 89-EC
6	14107-86	TRIM, left (gold and black) (1)	Touring: 87-ALL
6	14107-86	TRIM, left (gold and orange) (1)	Touring: 88-ALL
6	14108-86	TRIM, right (gold and black) (1)	Touring: 87-ALL
6	14108-88	TRIM, right (gold and orange) (1)	Touring: 88-ALL
6	14109-86	TRIM, left (silver and black) (1)	Touring: 87-ALL
6	14109-88	TRIM, left (silver and orange) (1)	Touring: 88-ALL
6	14110-86	TRIM, right (silver and black) (1)	Touring: 87-ALL
6	14110-88	TRIM, right (silver and orange) (1)	Touring: 88-ALL
7	14126-86	DECAL, left (burgundy, gold and red) (1)	Softail: 87 to 89-BK
7	14127-86	DECAL, right (burgundy, gold and red) (1)	Softail: 87 to 89-BK
7	14145-86	DECAL, left (blue, silver and burgundy) (1)	Softail: 87 to 89-BK
7	14146-86	DECAL, right (blue, silver and burgundy) (1)	Softail: 87 to 89-BK
7	14161-87	DECAL, left (gold, brandywine and crimson) (1)	Softail: 87 to 90-BK
7	14162-87	DECAL, right (gold, brandywine and crimson) (1)	Softail: 87 to 90-BK
8	14143-86	DECAL, silver and red (2)	Softail: 87-BJ
8	14163-87	DECAL, gold and red (2)	Softail: 87 to 90-BJ
8A	14171-87	DECAL, brandywine, gold and black (2)	FXR: 87 to 90-EL
8A	14172-87	DECAL, root beer, gold and black (2)	FXR: 87-EL
8A	14186-88	DECAL, silver, blue and dark blue (2)	FXR: 88 and 89-EL
9	14200-88	DECAL, left (silver, grey and orange) (1)	Softail: 88 and 89-BL
9	14201-88	DECAL, left (silver, white and orange) (1)	Softail: 88 and 89-BL
9	14202-88	DECAL, right (silver, grey and orange) (1)	Softail: 88 and 89-BL
9	14203-88	DECAL, right (silver, white and orange) (1)	Softail: 88 and 89-BL
10	14204-88	DECAL, burgundy and silver (2)	FXR: 88 and 89-EB/G
10	14205-88	DECAL, blue and silver (2)	FXR: 88 and 89-EB/G
11	14214-89	DECAL, red, silver and black (2)	Touring: 89-DM/P
11	14214-90	DECAL, black, gold and red (1)	Touring: 90 to 90-DM/P
11	14240-90	DECAL, silver and blue (2)	Touring: 90 to 90-DM/P
12	14215-89	DECAL, left (silver) (1)	Touring: 89 to 90-DM/P
12	14242-90	DECAL, left (red) (1)	Touring: 90 to 90-DM/P
12	14244-90	DECAL, right (red) (1)	Touring: 90 to 90-DM/P
12	14216-89	DECAL, right (silver) (1)	Touring: 89 to 90-DM/P
13	14228-89	DECAL, silver, grey and yellow (1)	Softail: 90 to 90-BM

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

FUEL TANK TRIM

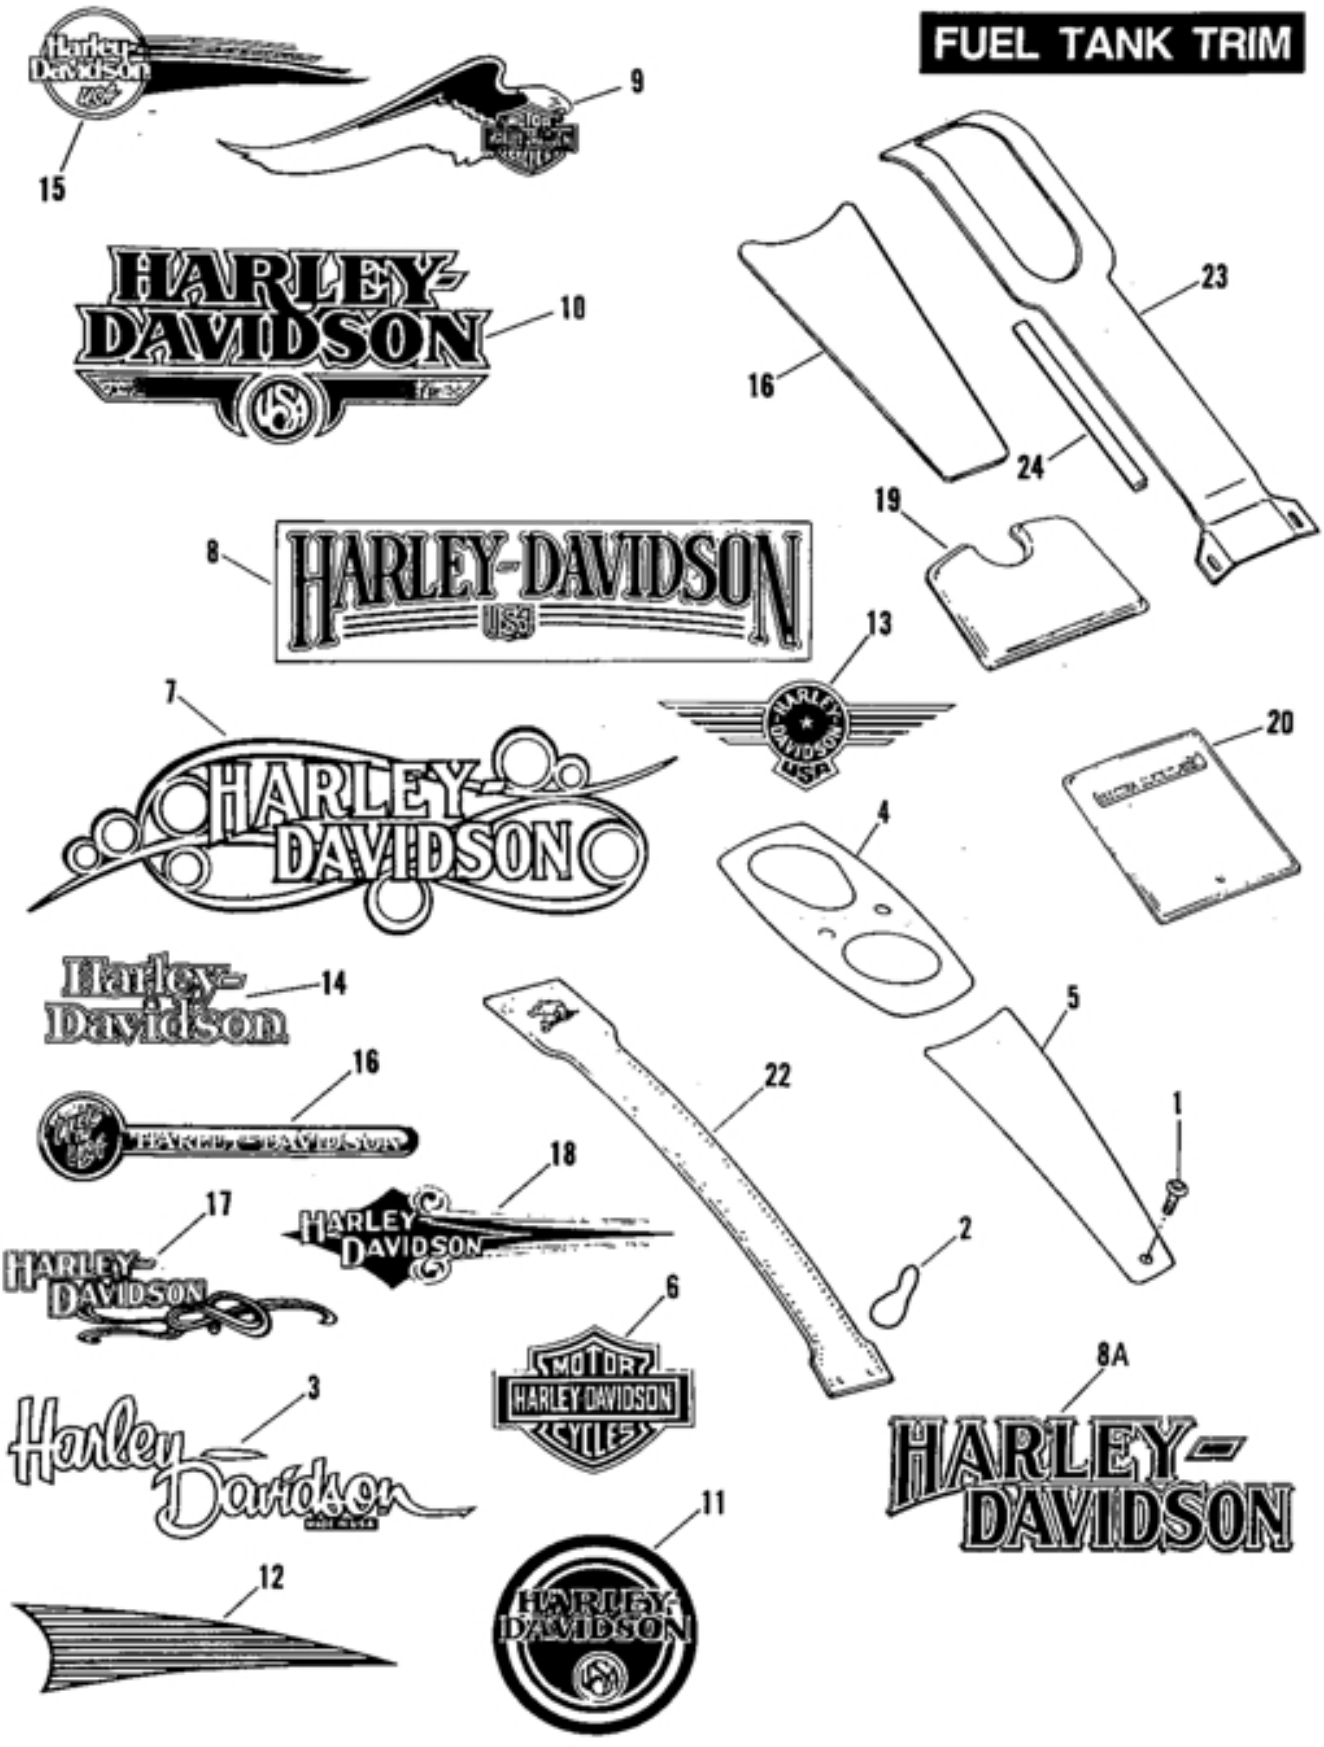


FUEL TANK TRIM (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	14328-90	DECAL, silver, grey and black (2)	Touring: 90 to 90-DB/J, FA
14	14329-90	DECAL, black, gold and red (2)	Touring: 90 to 90-DB/J, FA
15	14306-90	DECAL, left (blue and grey) (1)	FXR: 90 to 90-EB/G/L/M
15	14307-90	DECAL, left (black, gold and red) (1)	FXR: 90 to 90-EB/G/L/M
15	14311-90	DECAL, right (blue and grey) (1)	FXR: 90 to 90-EB/G/L/M
15	14312-90	DECAL, right (black, gold and red) (1)	FXR: 90 to 90-EB/G/L/M
16	14319-90	DECAL, left (black, silver and grey) (1)	FXR: 90 to 90-EA/C
16	14320-90	DECAL, left (red, silver and gold) (1)	FXR: 90 to 90-EA/C
16	14321-90	DECAL, right (red, silver and gold) (1)	FXR: 90 to 90-EA/C
16	14322-90	DECAL, right (black, silver and grey), N/A (1)	FXR: 90 to 90-EA/C
17	14323-90	DECAL, left (red) (1)	Softail: 90 to 90-BH
17	14324-90	DECAL, left (silver) (1)	Softail: 90 to 90-BH
17	14325-90	DECAL, right (red) (1)	Softail: 90 to 90-BH
17	14326-90	DECAL, right (silver) (1)	Softail: 90 to 90-BH
18	14333-90	DECAL, left (silver, burgundy and red) (1)	Softail: 90 to 90-BJ
18	14335-90	DECAL, left (gold, red and orange) (1)	Softail: 90 to 90-BJ
18	14337-90	DECAL, right (silver, burgundy and red) (1)	Softail: 90 to 90-BJ
18	14339-90	DECAL, right (gold, red and orange) (1)	Softail: 90 to 90-BJ
19	60956-81	INSERT, door (black) (1)	Touring: 87 and 88-DB/J, FA
19	60964-82	INSERT, door (brown) (1)	Touring: 87 and 88-DB/J
20	60957-81	INSERT, door panel (black) (1)	Touring: 87 and 88-DB
20	60969-82	INSERT, door panel (brown) (1)	Touring: 87 and 88-DB
20	61089-83	INSERT, door panel (brown) (1)	Touring: 87 and 88-DJ
20	61093-79	INSERT, door panel (black) (1)	Touring: 87 and 88-DD, FA
20	61120-83	INSERT, door panel (black) (1)	Touring: 87 and 88-DJ
21	60957-89	INSERT, console panel (black) (1)	Touring: 89-DB/J, 89 to 90-FA
21	60969-89	INSERT, console panel (brown) (1)	Touring: 89-DB/J
21	60971-90	INSERT, console panel (black) (1)	Touring: 90 to 90-DB
21	60972-90	INSERT, console panel (brown) (1)	Touring: 90 to 90-DB
21	60973-90	INSERT, console panel (black) (1)	Touring: 90 to 90-DJ
21	60974-90	INSERT, console panel (brown) (1)	Touring: 90 to 90-DJ
22	61134-87	STRAP, laced (leather) (1)	FXR: 87-EL
22	61134-88	STRAP, laced (leather) (1)	FXR: 88 to 90-EL
23	61643-88	TRIM PANEL (1)	FXR: 88 to 90-EB
24	61648-85	MOLDING (1)	FXR: 88 to 90-EB

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

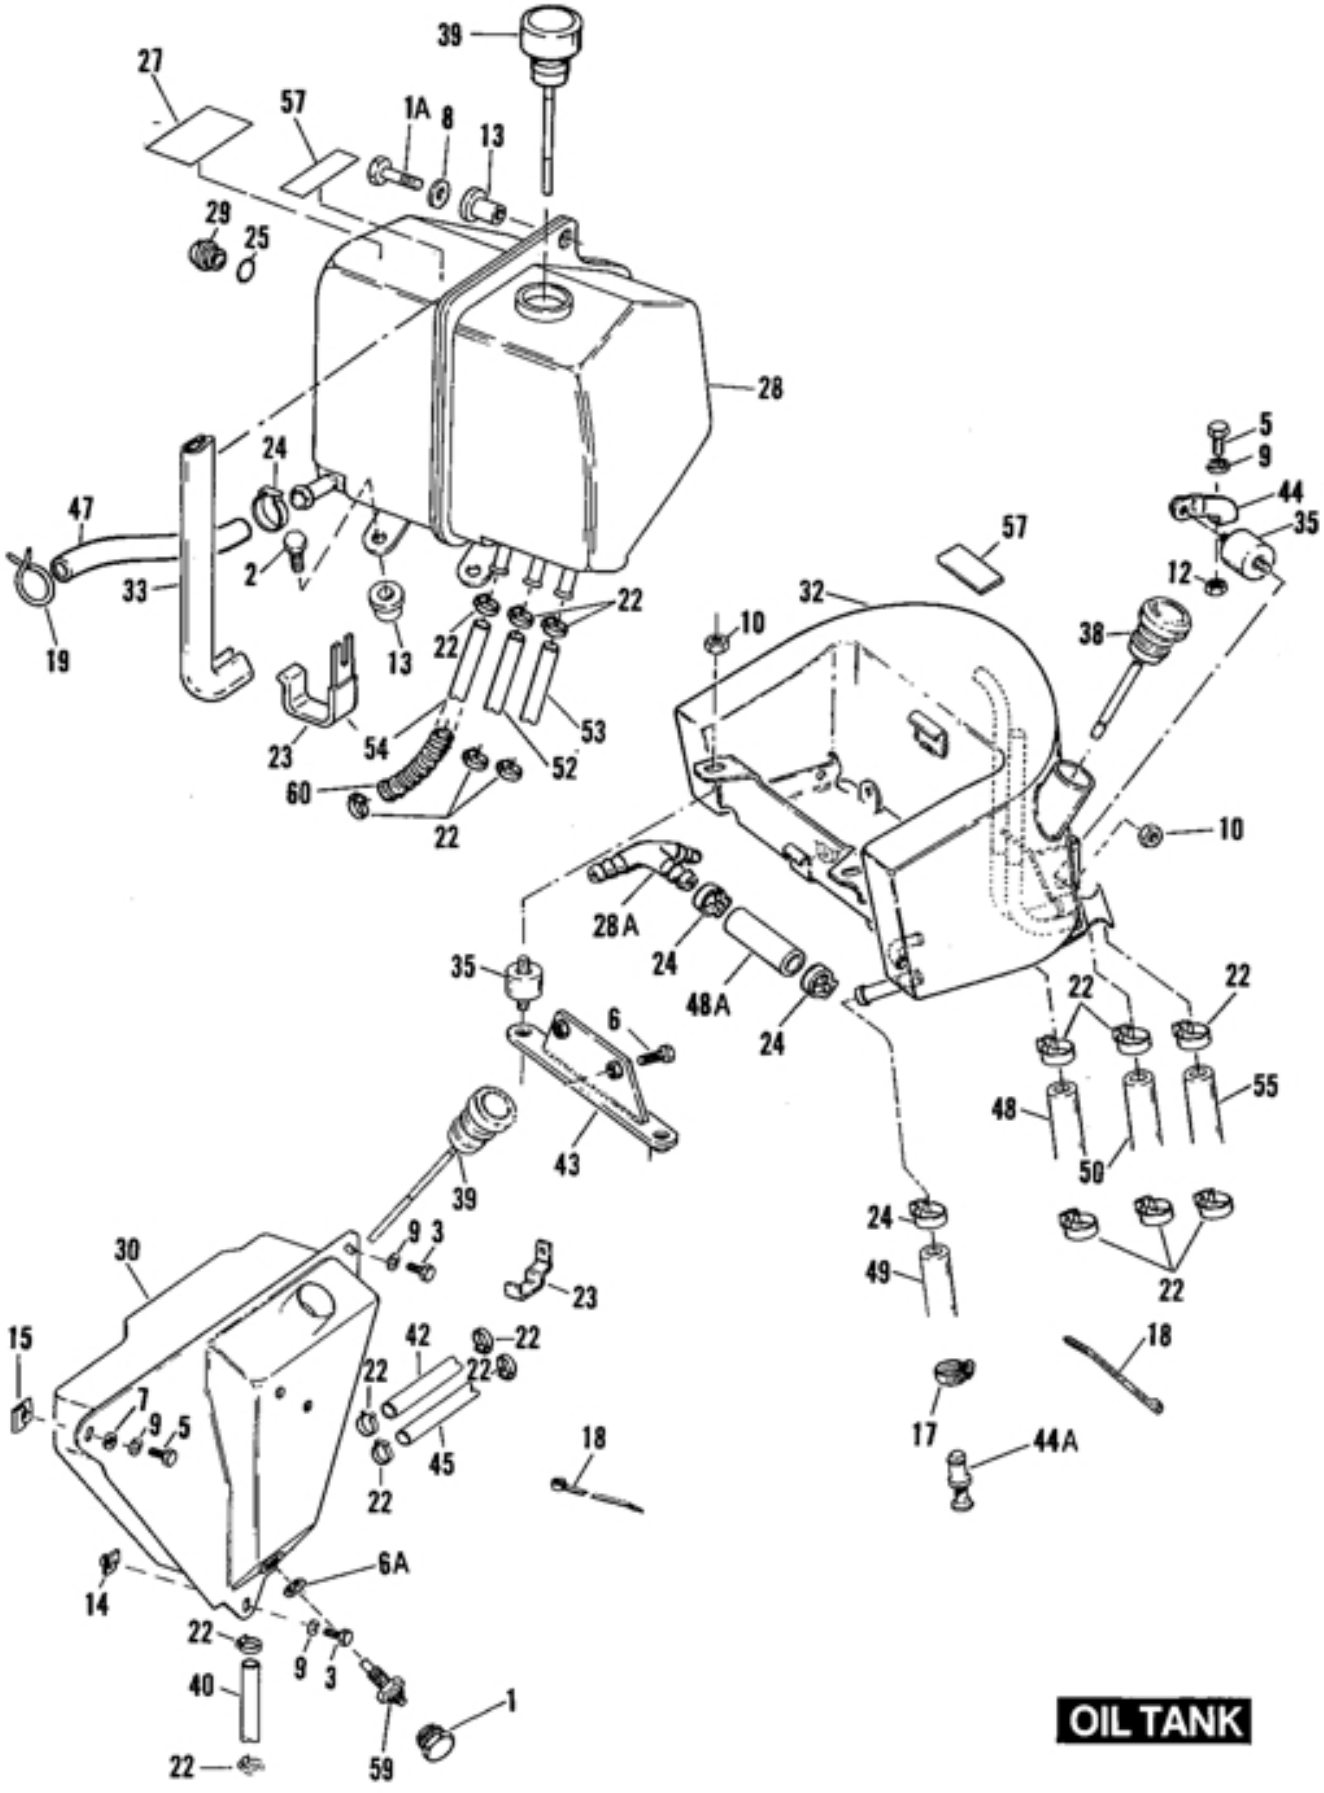

OIL TANK

OIL TANK (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	706A	DRAIN PLUG (1)	Touring: 87 to 90-FA; 88 to 90ALL
1A	2551W	BOLT (2)	FXR: 87 to 90-ALL
2	2607	SCREW (2)	FXR: 87 to 90-ALL
3	2882W	SCREW, 2-1987 (1)	Touring: 87 to 90-ALL
5	3987	BOLT, 2-1987 and Later (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
6	4391	BOLT (2)	Softail: 87 to 90-ALL
6A	6113	WASHER (1)	Touring: 87 to 90-ALL
7	6702	WASHER (1)	Touring: 87 to 90-ALL
8	6703	WASHER (1)	FXR: 87 to 90-ALL
9	7041	LOCKWASHER, 3-FLT (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
10	7686	LOCKNUT (5)	Softail: 87 to 90-ALL
12	7748W	NUT (1)	Softail: 87 to 90-ALL
13	8099	WELL NUT (3)	FXR: 87 to 90-ALL
14	8101	CLIP NUT (1)	Touring: 87 to 90-ALL
15	9959	CLIP NUT (1)	Touring: 87 to 90-ALL
17	9969	CLAMP, drain hose (1)	Softail: 87 to 90-ALL
18	10006	CABLE STRAP, oil hoses (as req'd) (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
19	10049	CLAMP, drain hose (1)	FXR: 87 to 90-ALL
22	10080	CLAMP (6)	ALL
23	10084	CLIP (2)	Touring: 87 to 90-ALL
24	10086	CLAMP, drain hose (3-Softail) (1)	FXR: 87 to 90-ALL Softail: 89 to 90-ALL
25	11132	O-RING (1)	FXR: 87 to 90-EA
27	14101-84	LABEL, instruction (1)	FXR: 87 to 90-ALL
28	62406-86	OIL TANK, black (1)	FXR: 87 to 90-EA
28	62414-86	OIL TANK, black (1)	FXR: 87 to 90-EB/C/G/L/M
28A	62493-89	TEE, oil drain (1)	Softail: 89 to 90-ALL
29	62460-86	SIGHT GLASS, oil level (1)	FXR: 87 to 90-EA
30	62489-79C	OIL TANK (1)	Touring: 87 to 90-ALL
32	62495-89A	OIL TANK, silver (1)	Softail: 90 to 90-BM
32	62498-86A	OIL TANK, chrome (1)	Softail: 87 and 88-ALL
32	62498-89A	OIL TANK, chrome (1)	Softail: 89 to 90-BH/J/K/L
33	62540-83	TRIM STRIP (1)	FXR: 87 to 90-ALL
35	62563-65	RUBBER MOUNT (4)	Softail: 87 to 90-ALL
38	62634-84	FILLER CAP, with dipstick (1)	Softail: 87 to 90-ALL
39	62637-84	FILLER CAP, with dipstick (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
40	62663-84	HOSE, tank to pump (1)	Touring: 87 to 90-ALL
42	62665-85	HOSE, filter to tank (1)	Touring: 87 to 90-ALL
42	62665-89	HOSE, filter to tank (1)	Touring: 89 to 90-ALL
43	62704-84	BRACKET, rear (1)	Softail: 87 to 90-ALL
44	62707-84	BRACKET, front-tank to frame (1)	Softail: 87 to 90-ALL
44A	62725-90	PLUG, oil drain (1)	Softail: 90 to 90-ALL
45	63502-84	HOSE, crankcase to oil tank, N/A (1)	Touring: 87 and 88-ALL
45	63502-89	HOSE, crankcase to oil tank (1)	Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

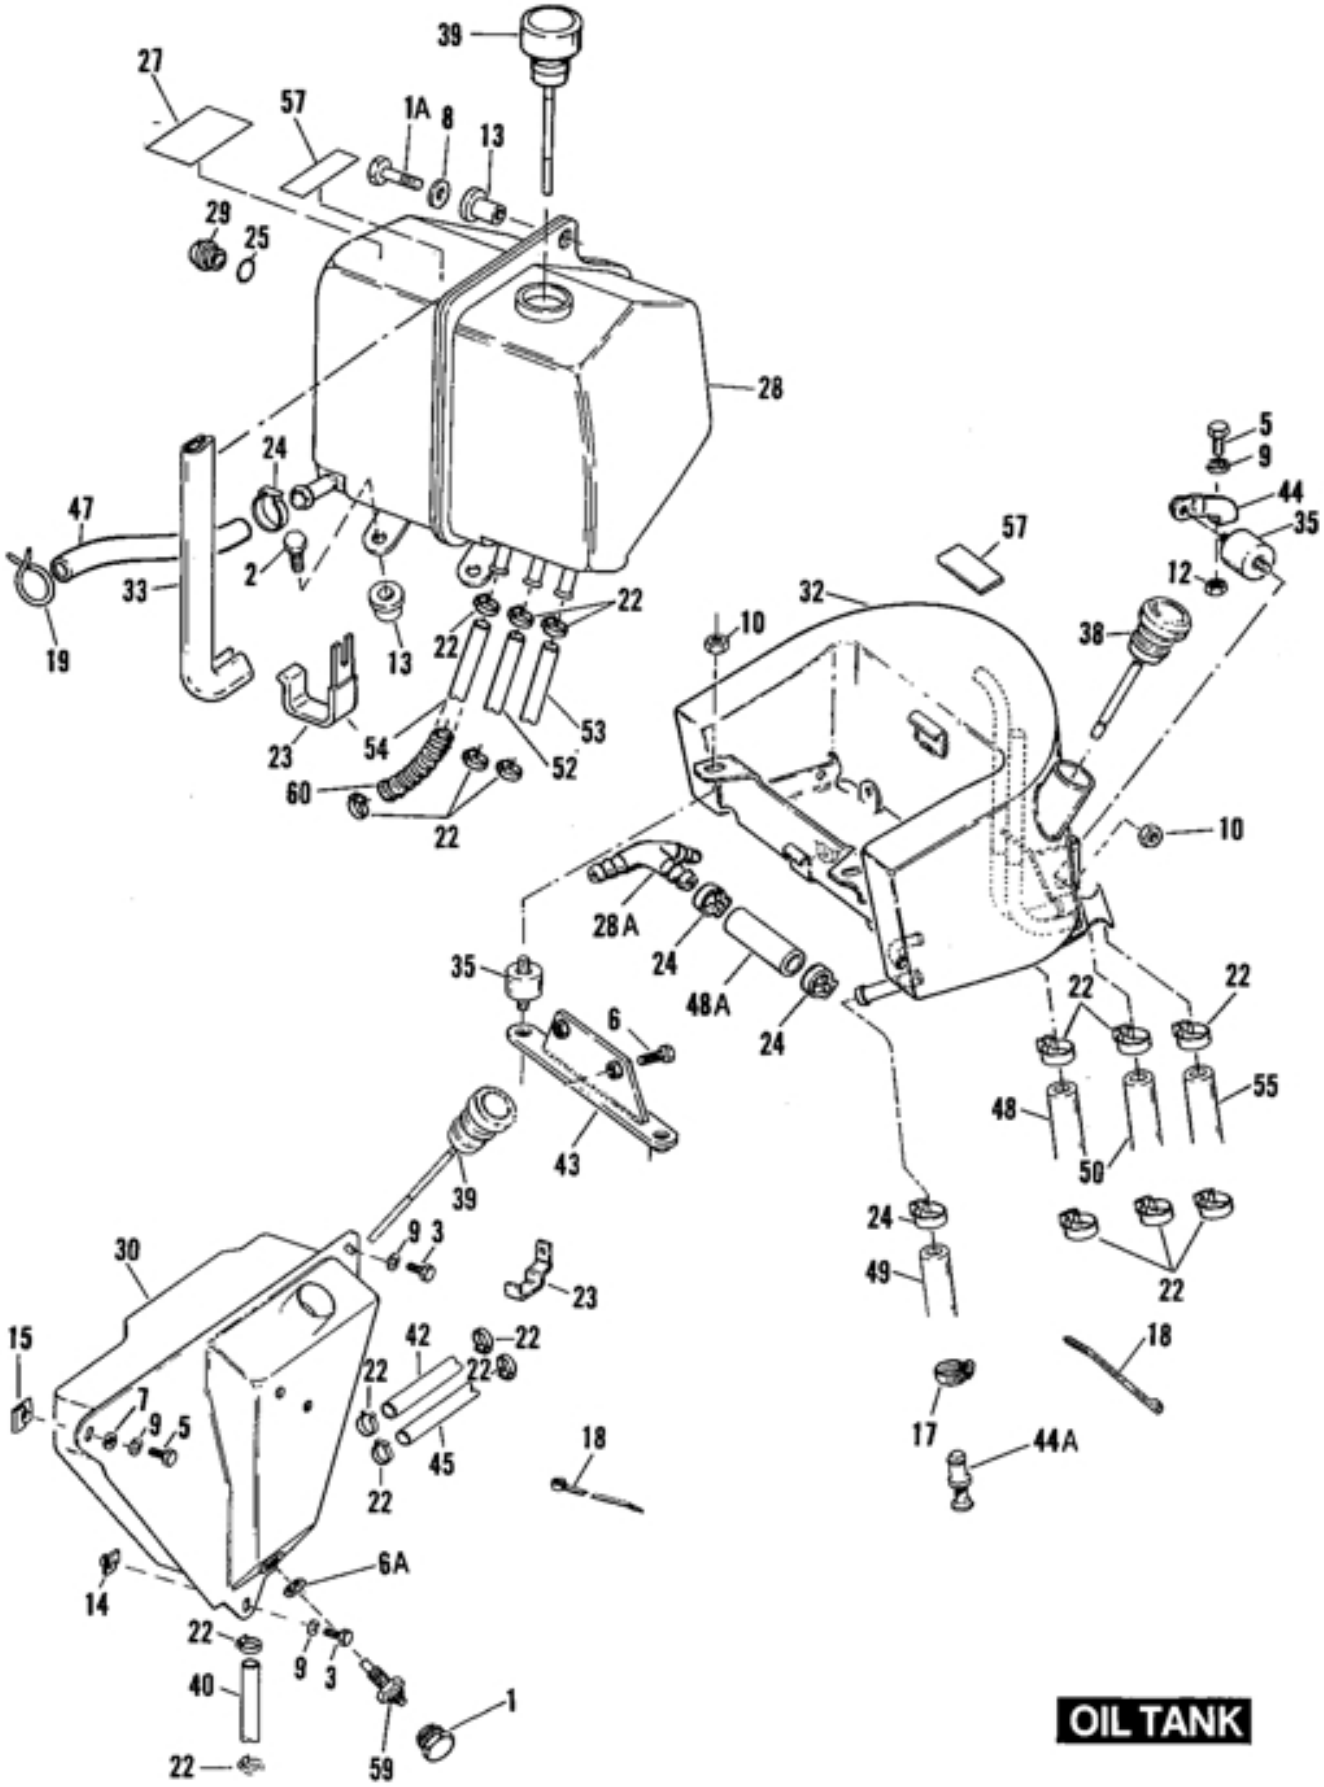
OIL TANK


OIL TANK (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
47	63504-83	HOSE, tank drain, N/A (1)	FXR: 87 to 90-ALL
48	63515-86	HOSE, tank to pump (1)	Softail: 87 to 90-ALL
48A	63550-89	HOSE, tank to tee (1)	Softail: 89 to 90-ALL
49	63553-86	HOSE, tank drain (1)	Softail: 87 and 88-ALL
49	63553-89	HOSE, tank drain (1)	Softail: 89-ALL
49	63553-90	HOSE, tank drain (1)	Softail: 90 to 90-ALL
50	63556-87	HOSE, filter to tank (1)	Softail: 87 to 90-ALL
52	63557-84	HOSE, tank to pump (1)	FXR: 87 to 89-ALL
52	63557-90	HOSE, tank to pump (1)	FXR: 90 to 90-ALL
53	63559-84	HOSE, crankcase to tank vent (1)	FXR: 87 and 88-ALL
53	63559-89	HOSE, crankcase to tank vent (1)	FXR: 89-ALL
53	63599-90	HOSE, crankcase to tank vent (1)	FXR: 90 to 90-ALL
54	63563-85A	HOSE, filter to tank vent (1)	FXR: 87 to 90-ALL
55	63572-86	HOSE, tank vent (1)	Softail: 87 to 90-ALL
57	66042-79A	WARNING LABEL (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ/K
57	66047-80A	WARNING LABEL (1)	Softail: 87 to 90-BH/J/M
59	74405-86	SENDER, oil temperature (1)	Touring: 87-DB/D/J
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
60	63497-89	INSULATOR, 5/8 ID (nylon) (8 ft. lg.) (1)	Softail: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

EXHAUST SYSTEM — FLT

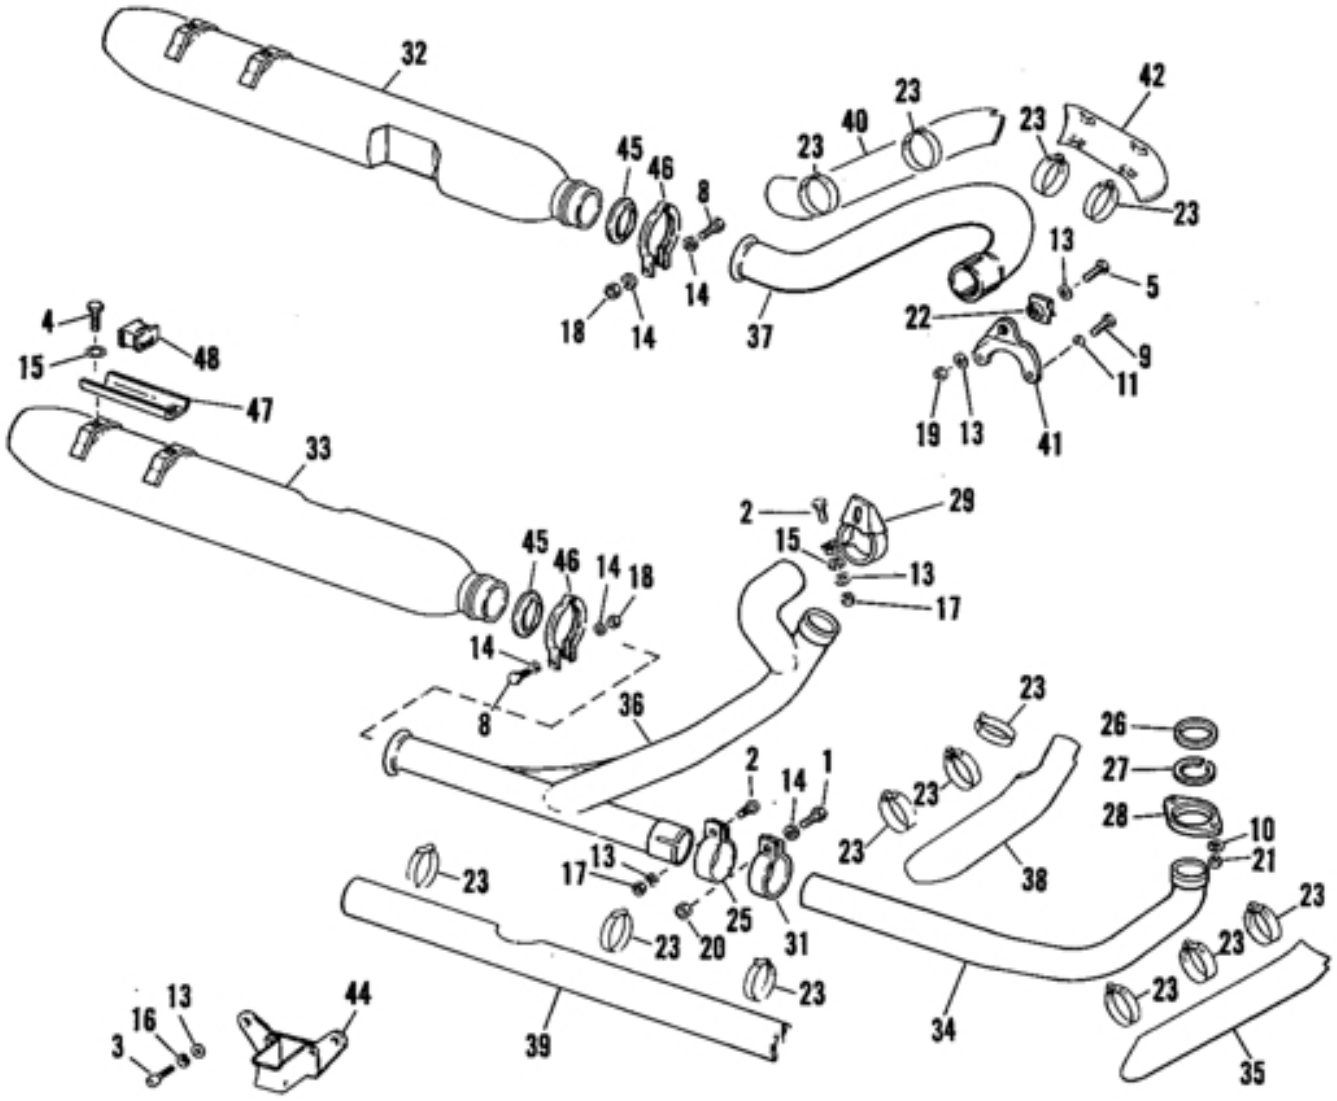


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2551W	BOLT (1)	Touring: 87 to 90-ALL
2	2818	BOLT (2)	Touring: 87 to 90-ALL
3	3210	SCREW (4)	Touring: 87 to 90-ALL
4	3953W	BOLT (4)	Touring: 87 to 90-ALL
5	4036	BOLT (1)	Touring: 87 to 90-ALL
8	3993	BOLT (2)	Touring: 87 to 90-ALL
9	4326A	SCREW (2)	Touring: 87 to 90-ALL
10	6016	WASHER (4)	Touring: 87 to 90-ALL
11	6099	WASHER (4)	Touring: 87 to 90-ALL
13	6702	WASHER, 4-87 (3)	Touring: 87 to 90-ALL
14	6703	WASHER (5)	Touring: 87 to 90-ALL
15	7041	LOCKWASHER (5)	Touring: 87 to 90-ALL
16	7127	LOCKWASHER (4)	Touring: 87 to 90-ALL
17	7531	LOCKNUT (2)	Touring: 87 to 90-ALL
18	7686	LOCKNUT (2)	Touring: 87 to 90-ALL
19	7729	LOCKNUT (1)	Touring: 87 and 88-ALL
20	7742	LOCKNUT (1)	Touring: 87 to 90-ALL
21	7753	NUT (8)	Touring: 87 to 90-ALL
22	8101	CLIP NUT (1)	Touring: 89 to 90-ALL
23	9955	CLAMP, shield (11)	Touring: 87 to 90-ALL
25	65276-62	MUFFLER CLAMP (1)	Touring: 87 to 90-ALL
26	65324-83A	GASKET, exhaust port (2)	Touring: 87 to 90-ALL
27	65325-83	RETAINING RING, exh. gasket (2)	Touring: 87 to 90-ALL
28	65328-83	CLAMP, exh. manifold (1)	Touring: 87 to 90-ALL
29	65502-83A	CLAMP, left exh. pipe (1)	Touring: 87 and 88-ALL
29	65502-89	CLAMP, left exh. pipe (1)	Touring: 89 to 90-ALL
31	65519-52B	CLAMP, pipe to bracket (1)	Touring: 87 to 90-ALL
32	65538-85	MUFFLER, left (1)	Touring: 87 to 90-ALL
33	65539-86	MUFFLER, right (1)	Touring: 87 to 90-ALL
34	65621-83	EXHAUST PIPE, right (1)	Touring: 87 to 90-ALL
35	65630-83A	SHIELD, front exh. pipe (1)	Touring: 87 to 90-ALL
36	65626-85	EXHAUST PIPE, right-rear (1)	Touring: 87 to 90-ALL
37	65627-85	EXHAUST PIPE, left (1)	Touring: 87 to 90-ALL
38	65632-83A	SHIELD, rear exh. pipe (1)	Touring: 87 to 90-ALL
39	65634-81C	SHIELD KIT, right exh. pipe (2 piece) (1)	Touring: 87 to 90-ALL
40	65636-85	SHIELD, left exh. pipe (1)	Touring: 87 to 90-ALL
41	65645-85	BRACKET, left-rear exh. pipe (1)	Touring: 87 and 88-ALL
41	65645-89	BRACKET, left-rear exh. pipe (1)	Touring: 89 to 90-ALL
42	65647-83	SHIELD, left exh. pipe (1)	Touring: 87 to 90-ALL
44	65678-85A	BRACKET, rear exh. pipe (1)	Touring: 87 to 90-ALL
45	65721-85	GASKET, muffler clamp (2)	Touring: 87 to 90-ALL
46	65722-85	MUFFLER CLAMP (2)	Touring: 87 to 90-ALL
47	65723-85	MOUNTING BRACKET (2)	Touring: 87 to 90-ALL
48	65724-85	MOUNT, rubber (2)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
32	65682-85	MUFFLER, left (HDI only) (1)	Touring: 87 and 88-ALL
32	65682-89A	MUFFLER, left (HDI only) (1)	Touring: 89 to 90-ALL
33	65680-85	MUFFLER, right (HDI only) (1)	Touring: 87 and 88-ALL
33	65680-89A	MUFFLER, right (HDI only) (1)	Touring: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

EXHAUST SYSTEM — FXR, SOFTAIL

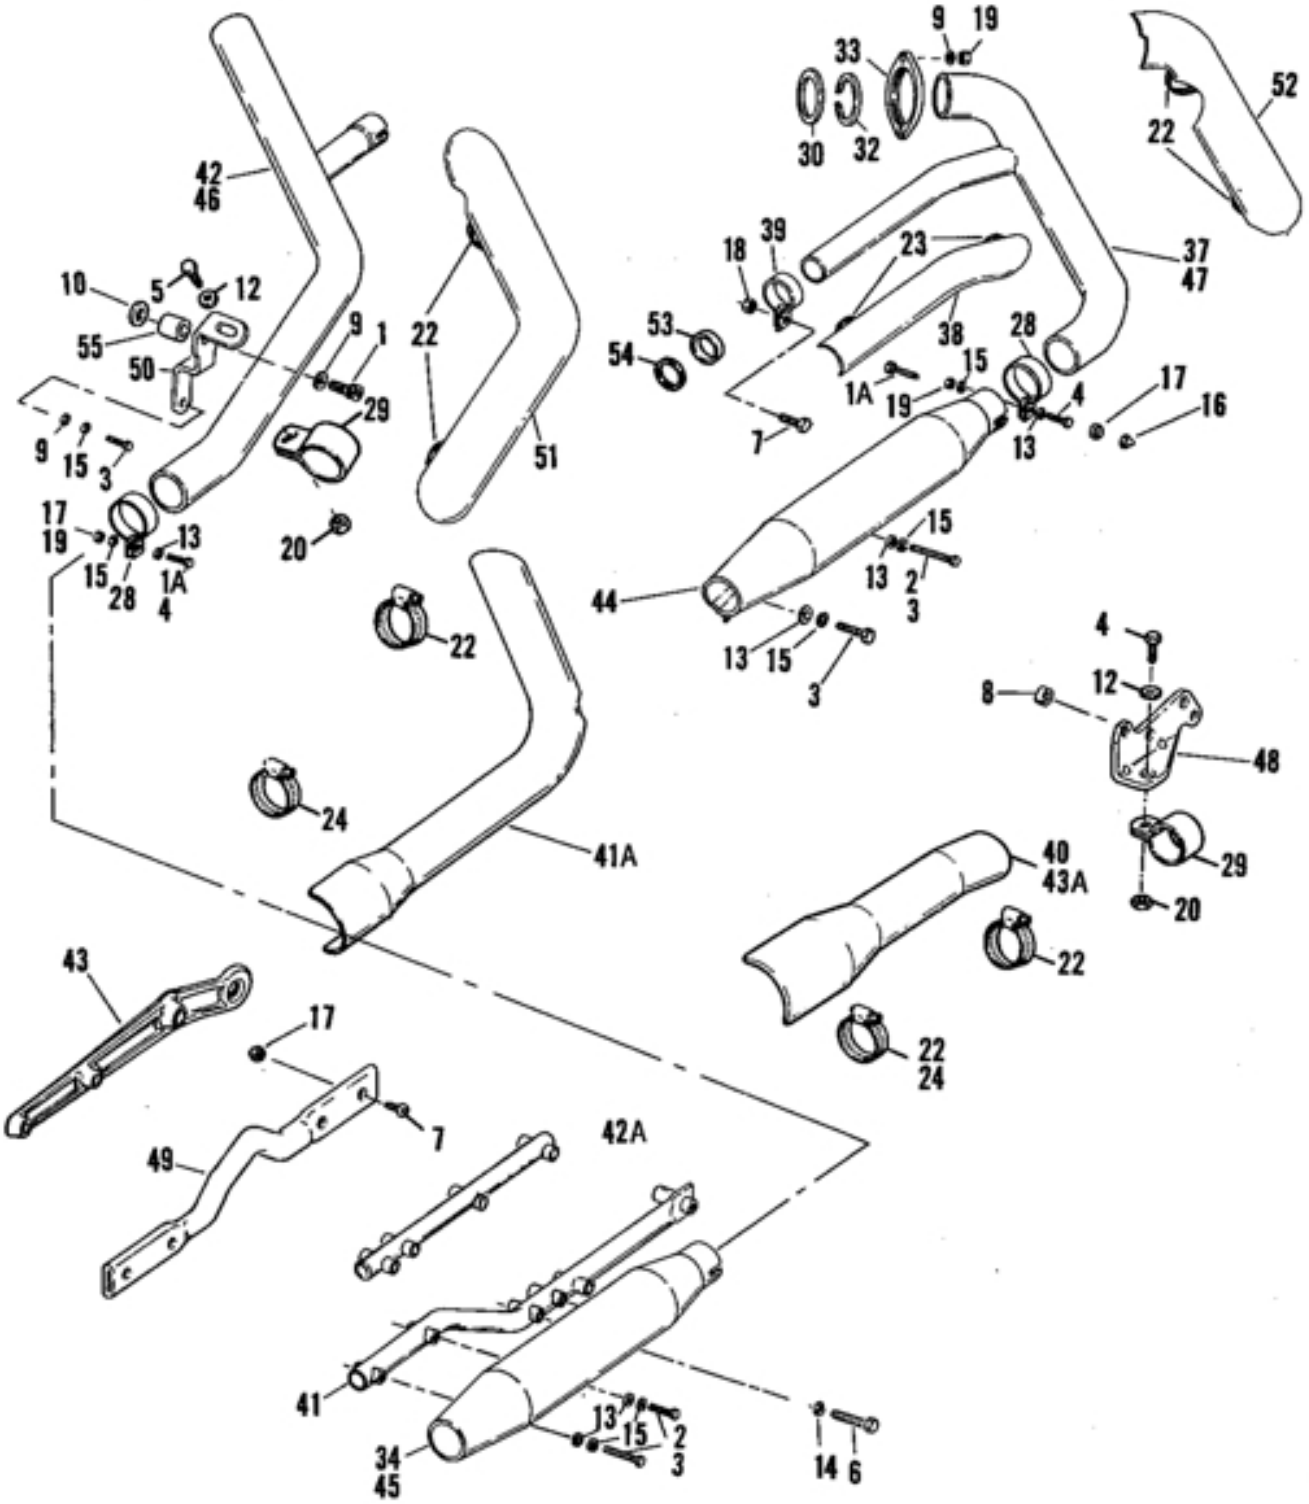


EXHAUST SYSTEM - FXR AND SOFTAIL MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2708	SCREW (1)	FXR: 89-ALL
1	3485	SCREW (1)	FXR: 90 to 90-ALL
1A	2818	BOLT (2)	FXR: 88 to 90-ALL Softail: 88 to 90-ALL
2	3987	BOLT (3)	Softail: 87-ALL
3	4017	BOLT, 4-Softail-1988 and Later (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
4	4036	BOLT, 2-1987 (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
5	4319	BOLT (1)	FXR: 87 to 90-ALL
6	4722	BOLT (2)	Softail: 87 to 90-ALL
7	5411	SCREW, 4-FXR (1)	FXR: 87 to 90-ALL Softail: 87-BH/J/K/L
8	5887	SPACER (1)	FXR: 87 to 90-ALL
9	6016	WASHER, 5-FXR; 4-Softail (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
10	6109	WASHER (1)	FXR: 89-ALL
12	6701	WASHER (2)	FXR: 87 to 90-ALL
13	6702	WASHER, 6-Softail (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
14	7038	LOCKWASHER (2)	Softail: 87 to 90-ALL
15	7041	LOCKWASHER, 3-1987 FXR; 4-Softail (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
16	7507	ACORN NUT (1)	Softail: 88 to 90-ALL
17	7531	LOCKNUT, 2-Softail (4)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
18	7748W	NUT (1)	Softail: 87 to 90-BH/J/K/L
19	7753	NUT, 6-87 (4)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
20	7782	LOCKNUT (2)	FXR: 87 to 90-ALL
22	9955	CLAMP, 5-BJ; 4-BH/K/L (6)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
23	10048	CLAMP (2)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/K/L
24	10074	CLAMP, shield (front-BJ; rear-BM) (1)	Softail: 87 to 90-BJ/M
28	65276-62	CLAMP, muffler (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
29	65302-82	CLAMP, exhaust pipe (2)	FXR: 87 to 90-ALL
30	65324-83A	GASKET, exhaust port (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
31	65325-83	RETAINING RING, exhaust gasket (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
33	65328-83	CLAMP, exh. manifold (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
34	65380-85	MUFFLER, rear (1)	Softail: 87 to 89-ALL; 90 to 90-BH/J/L
34	65380-90	MUFFLER, rear-BK; 2-BM (1)	Softail: 90 to 90-BK/M
34	65381-89	MUFFLER, rear-fishtail (1)	Softail: 89 to 90-BJ

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

EXHAUST SYSTEM — FXR, SOFTAIL

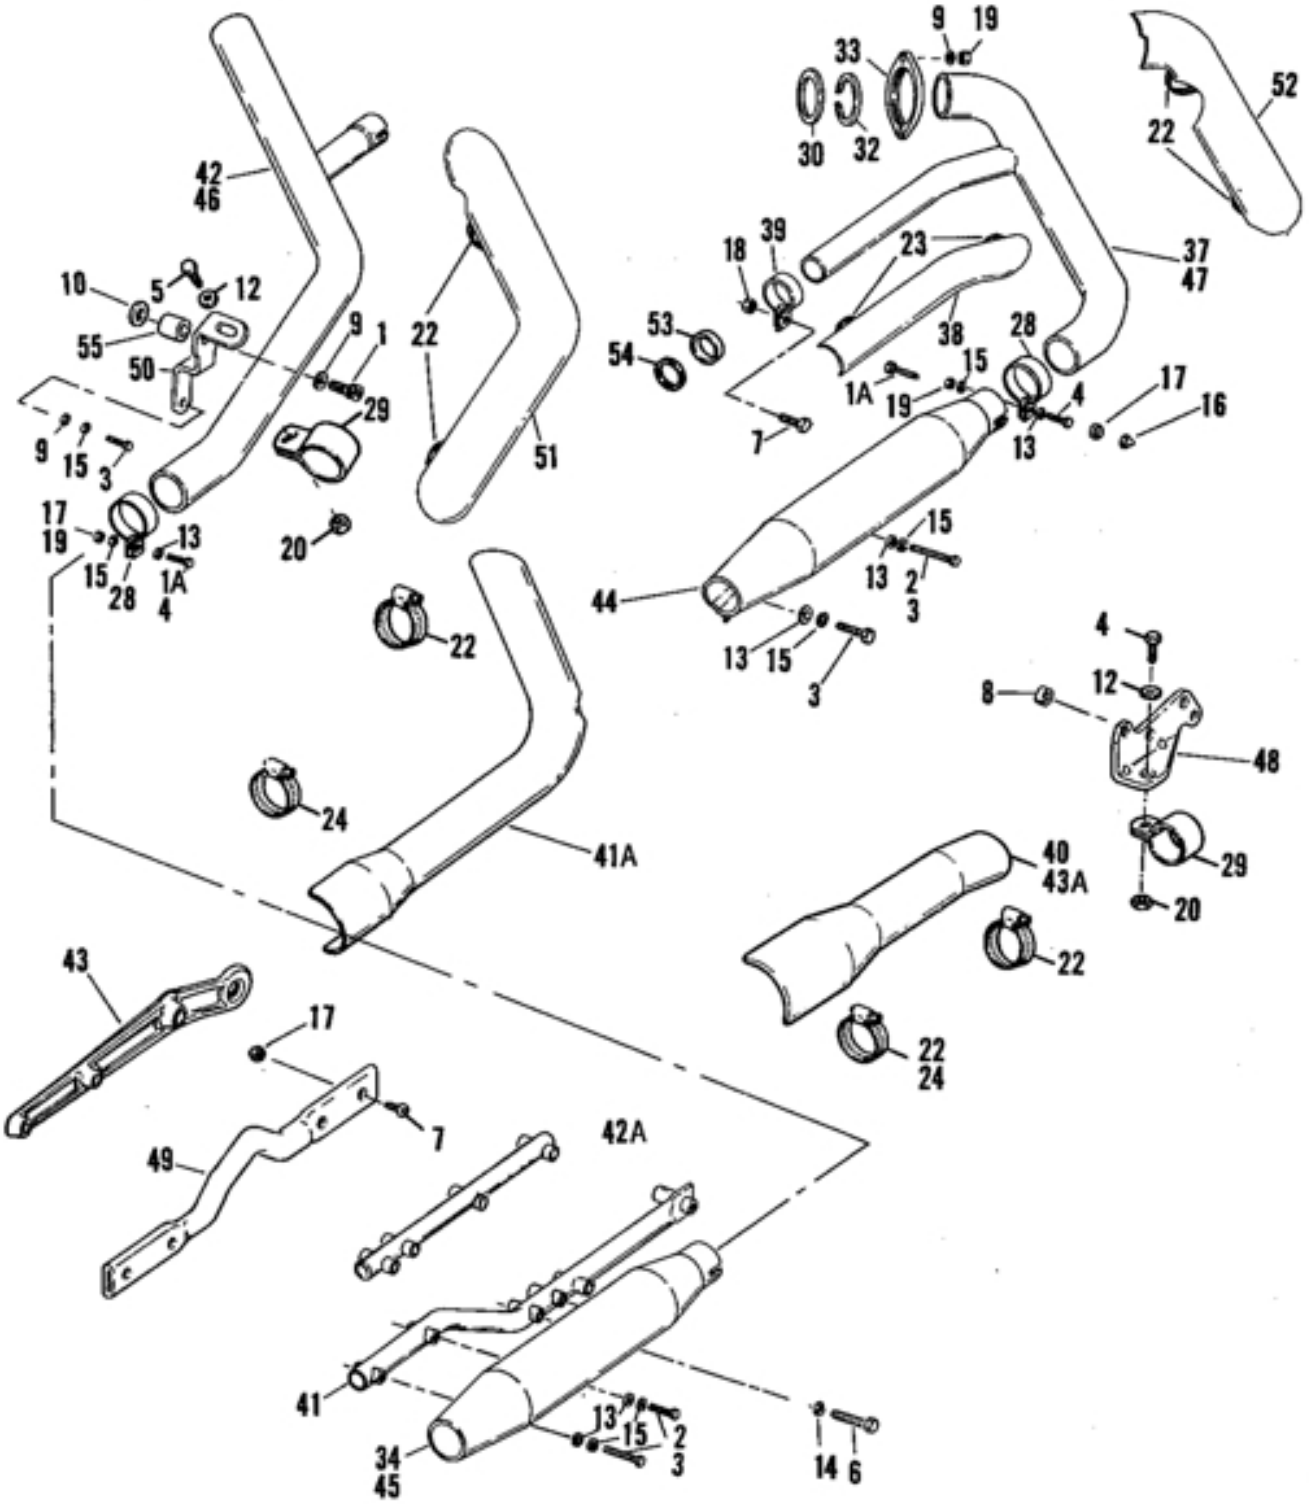


EXHAUST SYSTEM - FXR AND SOFTAIL MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	65401-86	EXHAUST PIPE, front (1)	Softail: 87 to 90-BH/J/K/L
37	65483-89	EXHAUST PIPE, front (1)	Softail: 90 to 90-BM
38	65410-83	SHIELD, crossover pipe (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/L
38	65475-89	SHIELD, crossover pipe (1)	Softail: 90 to 90-BM
39	65411-80A	CLAMP, crossover pipe (1)	Softail: 87 to 90-BH/J/K/L
40	65432-89	SHIELD, front muffler (1)	Softail: 90 to 90-BM
40	65447-86	SHIELD, front muffler (1)	Softail: 87 to 90-BJ
41	65458-86A	SUPPORT TUBE, blue (1)	Softail: 87 to 90-BK
41	65459-84A	SUPPORT TUBE, black (1)	Softail: 87 to 90-ALL
41	65460-87A	SUPPORT TUBE, red (1)	Softail: 87 to 90-BK
41A	65464-89	SHIELD, rear exhaust and muffler (1)	Softail: 90 to 90-BM
42	65487-89	EXHAUST PIPE, rear (1)	Softail: 90 to 90-BM
42	65603-86	EXHAUST PIPE, rear (1)	Softail: 87 to 90-BH/J/K/L
42A	65492-89	SUPPORT TUBE, silver (1)	Softail: 90 to 90-BM
43	65522-89	MUFFLER SUPPORT, rear (1)	Softail: 90 to 90-BM
43A	65571-82	SHIELD, front muffler (1)	FXR: 87 to 90-ALL
44	65689-89	MUFFLER, front-fishtail (1)	Softail: 89 to 90-BJ
44	65699-86	MUFFLER, front (1)	Softail: 87 to 89-ALL; 90 to 90-BH/J/L
44	65699-90	MUFFLER, front (1)	Softail: 90 to 90-BK
44	65747-87	MUFFLER, front (1)	FXR: 87 to 90-ALL
45	65657-87	MUFFLER, rear (1)	FXR: 87 to 90-ALL
46	65668-87	EXHAUST PIPE, rear (chrome) (1)	FXR: 87 to 90-ALL
47	65669-87	EXHAUST PIPE, front (chrome) (1)	FXR: 87 to 90-ALL
48	65670-82B	BRACKET, front exhaust (1)	FXR: 87 to 90-ALL
49	65674-87	SUPPORT, muffler (1)	FXR: 87 to 90-ALL
50	65675-87	BRACKET, rear exhaust (1)	FXR: 87 to 90-ALL
51	65702-86	SHIELD, rear exh. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BH/J/K/L
52	65732-86	SHIELD, front exh. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
53	65781-82	GASKET (1)	FXR: 87 to 90-ALL Softail: 90 to 90-BM
54	65782-82	WASHER, exhaust (1)	FXR: 87 to 90-ALL Softail: 90 to 90-BM
55	65802-90	SPACER (1)	FXR: 90 to 90-ALL
		INTERNATIONAL MODELS ONLY	
	52103-31	SPACER, muffler extension (HDI only) (1)	Softail: 87 to 90-ALL
	65185-84	EXTENSION, front muffler (HDI only) (1)	FXR: 87 to 90-ALL
	65190-84	EXTENSION, front muffler (HDI only) (1)	Softail: 87 to 90-ALL
34	65382-86	MUFFLER, rear (HDI only) (1)	Softail: 87 and 88-ALL
34	65382-89A	MUFFLER, rear (HDI only) (1)	Softail: 89 to 90-ALL
45	65739-87	MUFFLER, rear (HDI only) (1)	FXR: 87 and 88-ALL
45	65739-89A	MUFFLER, rear (HDI only) (1)	FXR: 89 to 90-ALL
44	65395-86	MUFFLER, front (HDI only) (1)	Softail: 87 and 88-ALL
44	65395-89A	MUFFLER, front (HDI only) (1)	Softail: 89 to 90-ALL
44	65738-87	MUFFLER, front (HDI only) (1)	FXR: 87 and 88-ALL
44	65738-89A	MUFFLER, front (HDI only) (1)	FXR: 89 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


BATTERY

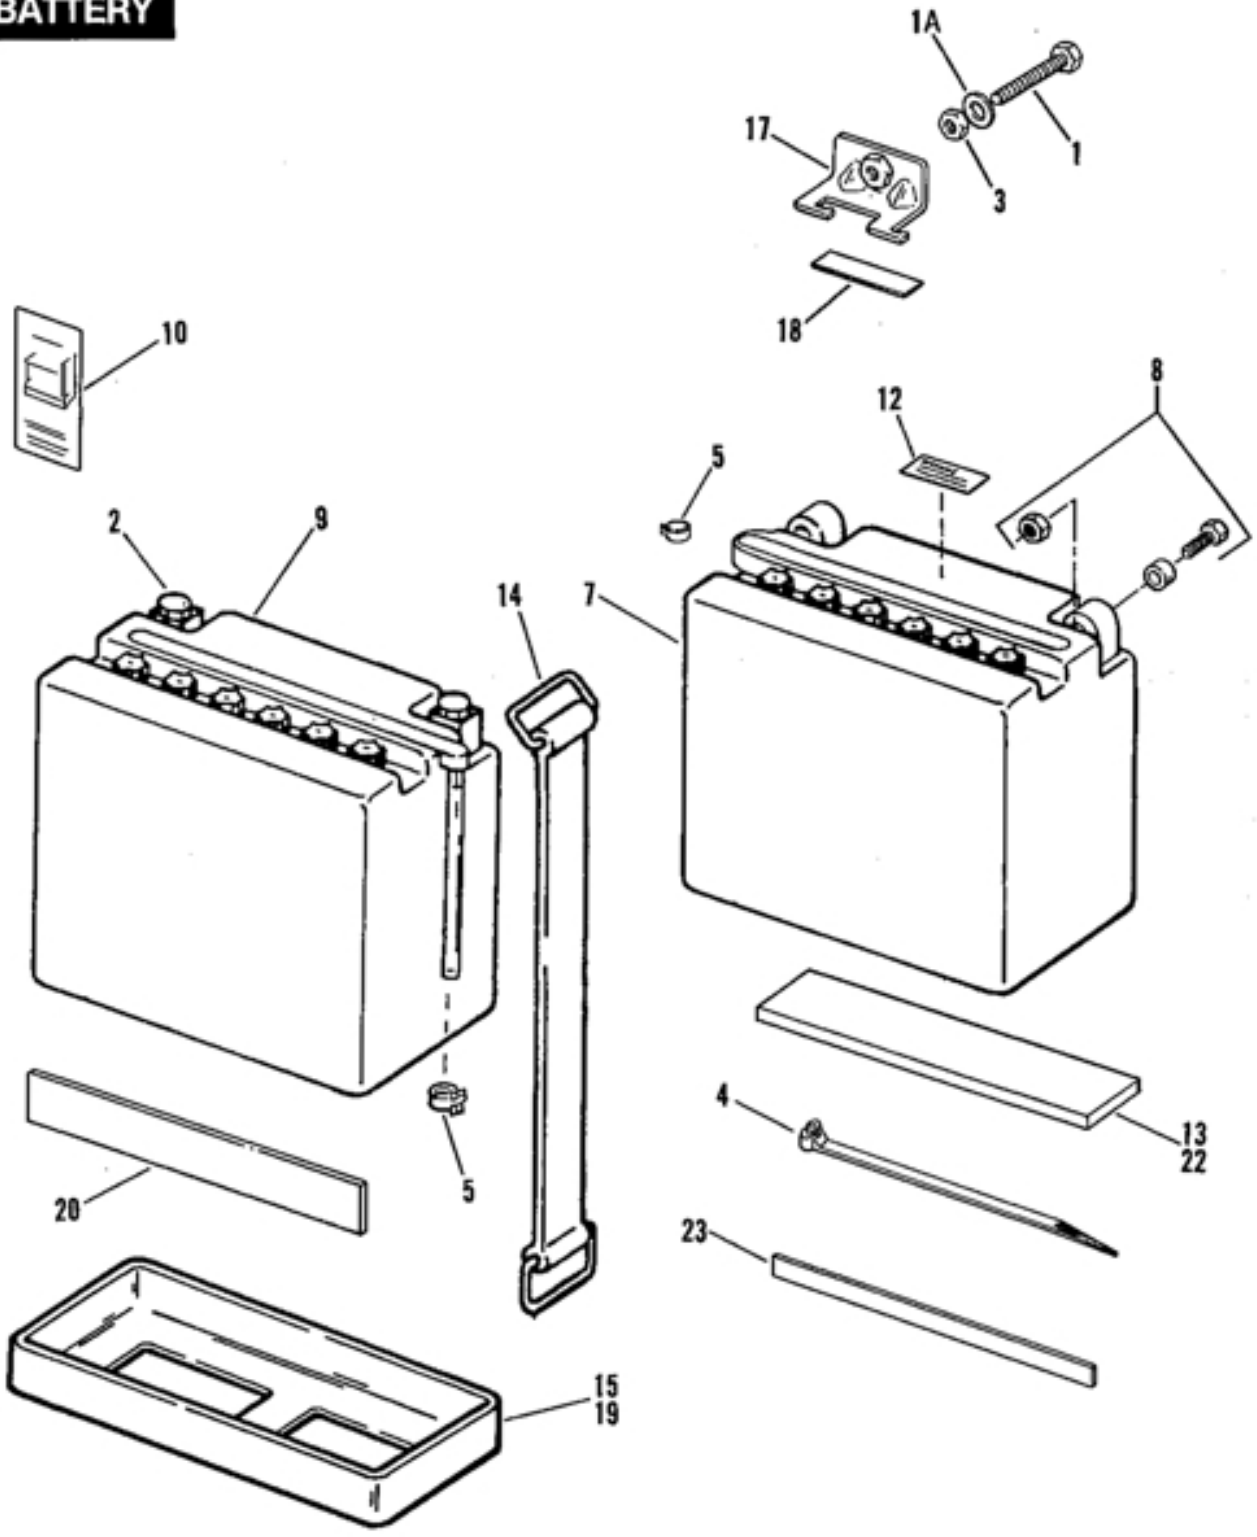

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2796W	SCREW (1)	FXR: 87 to 90-ALL
1A	6703	WASHER (1)	FXR: 90 to 90-ALL
2	7229W	LOCKWASHER (2)	Touring: 87 to 90-ALL
3	7689W	JAMNUT (1)	FXR: 87 to 90-ALL
4	10039	CABLE STRAP (1)	FXR: 87 to 90-ALL
5	10067	CLAMP (1)	ALL
7	65991-82A	BATTERY, w/#4 and 8 (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
8	66000-80	BATTERY TERMINAL KIT (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
9	66010-82A	BATTERY (1)	Touring: 87 to 90-ALL
10	66014-79	DECAL, battery installation (1)	Touring: 87 to 90-ALL
12	66042-79A	WARNING LABEL (1)	Softail: 87 to 90-BJ/K/L/M
13	66104-84	CUSHION (2)	FXR: 87 to 90-ALL
14	66105-77	BATTERY STRAP (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
15	66106-86	CUSHION (1)	Touring: 87 to 90-ALL
17	66183-82	BRACKET, battery tie down (1)	FXR: 87 to 90-ALL
18	66188-82A	CUSHION (1)	FXR: 87 to 90-ALL
19	66210-85A	CUSHION (1)	Softail: 87 to 90-ALL
20	66308-80	PAD (1)	Touring: 87 to 90-ALL
22	66309-84	CUSHION (1)	Softail: 87 to 90-ALL
23	67067-76	ISOLATOR (1)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

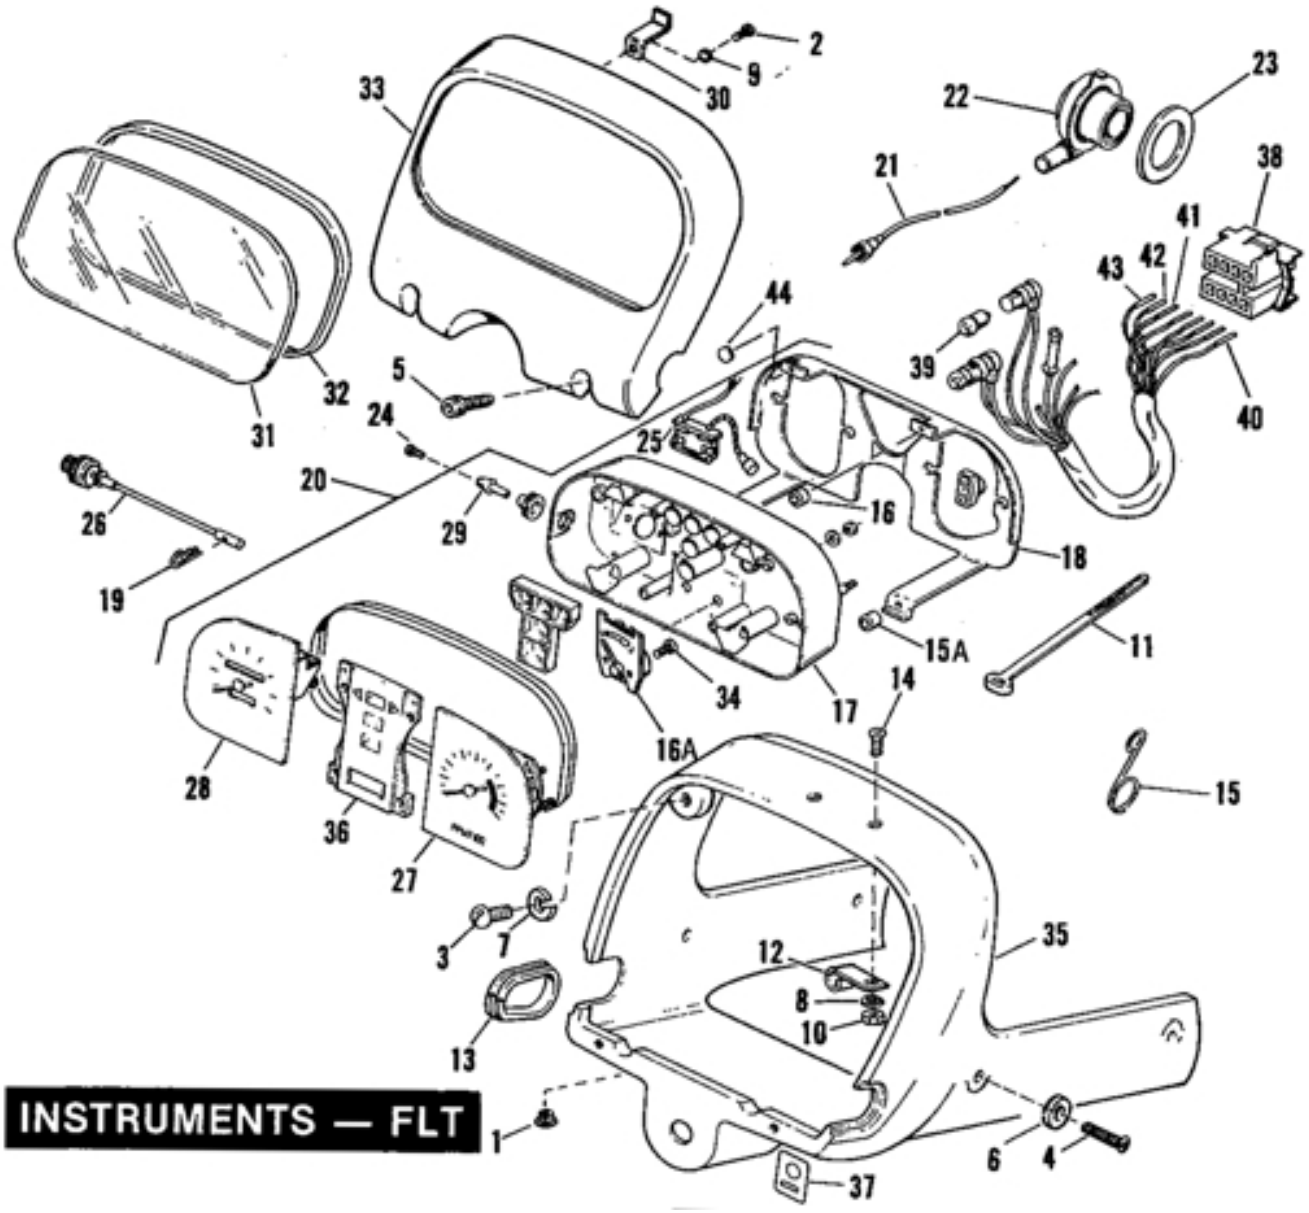


INSTRUMENTS — FLT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	729	PLUG (3)	Touring: 87 to 90-DB/M, FA
2	2585	SCREW (3)	Touring: 87 to 90-DB/M, FA
3	2625	SCREW (2)	Touring: 87 and 88-DB, FA
4	3996	BOLT (4)	Touring: 87 to 90-DB/M
5	4069A	SCREW (2)	Touring: 87 to 90-DB/M, FA
6	6702	WASHER (4)	Touring: 87 to 90-DB/M
7	7015	LOCKWASHER (2)	Touring: 87 and E88-DB, FA
8	7069	LOCKWASHER (2)	Touring: L88 to 90-DB/M, FA
9	7115	LOCKWASHER (3)	Touring: 87 to 90-DB/M
10	7638	NUT (2)	Touring: L88 to 90-DB/M, FA
11	10065	CABLE STRAP (1)	Touring: 87 to 90-DB
12	10091	CLIP (2)	Touring: L88 to 90-DB/M, FA
13	11435	GROMMET, handlebar (2)	Touring: 87 and E88-DB, FA
13	11454	GROMMET, handlebar (2)	Touring: L88 to 90-DB/M, FA
14	42534-82	SCREW (2)	Touring: L88 to 90-DB/M, FA
15	45092-66A	GUIDE, speedometer cable (1)	Touring: 87 to 90-DB/M
15A	58355-86	SPACER (2)	Touring: 87 to 90-DD/J/P
16	58356-86	SPACER (2)	Touring: 87 to 90-DD/J/P
16A	61631-84	FUEL GAUGE (1)	Touring: 87 to 90-ALL
17	66997-86	CASE, instrument (1)	Touring: 87 to 90-DD/J/P
18	66998-86	BRACKET, inst. mtg. (1)	Touring: 87 to 90-DD/J/P
19	66999-86	CLIP (1)	Touring: 87 to 90-DD/J/P
20	67000-85B	INSTRUMENT PANEL ASSY., mph (1)	Touring: 87 to 90-DB/M, FA
20	67003-86A	INSTRUMENT PANEL ASSY., mph (1)	Touring: 87 to 90-DD/J/P
21	67060-87A	CABLE ASSEMBLY, speedometer (1)	Touring: 87 to 90-DD/J/P
21	67072-87B	CABLE ASSEMBLY, speedometer (1)	Touring: 87 to 90-DB/M, FA
22	67073-87A	DRIVE UNIT, speedometer (1)	Touring: 87 to 90-ALL
23	67096-87	SEAL, drive unit (1)	Touring: 87 to 90-ALL
24	67117-85	SCREW (1)	Touring: 87 to 90-DB/M, FA
25	67123-86	REED SWITCH (1)	Touring: 87 to 90-ALL
26	67219-86	RESET CABLE, odometer (1)	Touring: 87 to 90-DD/J/P
27	67229-85	TACHOMETER (1)	Touring: 87 to 90-ALL
28	67211-86	SPEEDOMETER, mph (1)	Touring: 87 to 90-DD/J/P
28	67232-85	SPEEDOMETER, mph (1)	Touring: 87 to 90-DB/M, FA
29	67234-84	RESET KNOB, odometer (1)	Touring: 87 to 90-DB/M, FA
30	67235-80	CLIP (3)	Touring: 87 to 90-DB/M, FA
31	67236-80	LENS (1)	Touring: 87 to 90-DB/M, FA
31	67608-86	LENS (1)	Touring: 87 to 90-DD/J/P
32	67237-80	GASKET (1)	Touring: 87 to 90-DB/M, FA
33	67238-80	CASE (1)	Touring: 87 to 90-DB/M, FA
34	67243-84	SCREW (1)	Touring: 87 to 90-ALL
35	67795-85A	DASH PANEL SUPPORT KIT (1)	Touring: 87 to 90-DB/M, FA
36	68459-84A	PANEL, instr. panel (1)	Touring: 87 to 90-DB/M, FA
37	68602-79	LABEL, flasher switch (1)	Touring: 87 and 88-DB
38	70287-81	CONNECTOR, eight socket (1)	Touring: 87 to 90-ALL
39	71099-74	BULB, instr. panel (4)	Touring: 87 to 90-ALL
40	72038-71	SOCKET, single pin (8)	Touring: 87 to 90-ALL
41	72039-71	PIN, single socket (1)	Touring: 87 to 90-ALL
42	72043-71	CONNECTOR, single pin (1)	Touring: 87 to 90-ALL
43	72044-71	CONNECTOR, single socket (1)	Touring: 87 to 90-ALL
44	75101-82	SPACER, rubber (2)	Touring: 88 to 90-ALL
		INTERNATIONAL MODELS ONLY	
28	67216-86A	SPEEDOMETER, kph (HDI only) (1)	Touring: 87 to 90-DD/J/P
28	67233-80C	SPEEDOMETER, kph (HDI only) (1)	Touring: 87 to 90-DB/M, FA

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	


INSTRUMENTS
FXRS & FXRS-SP

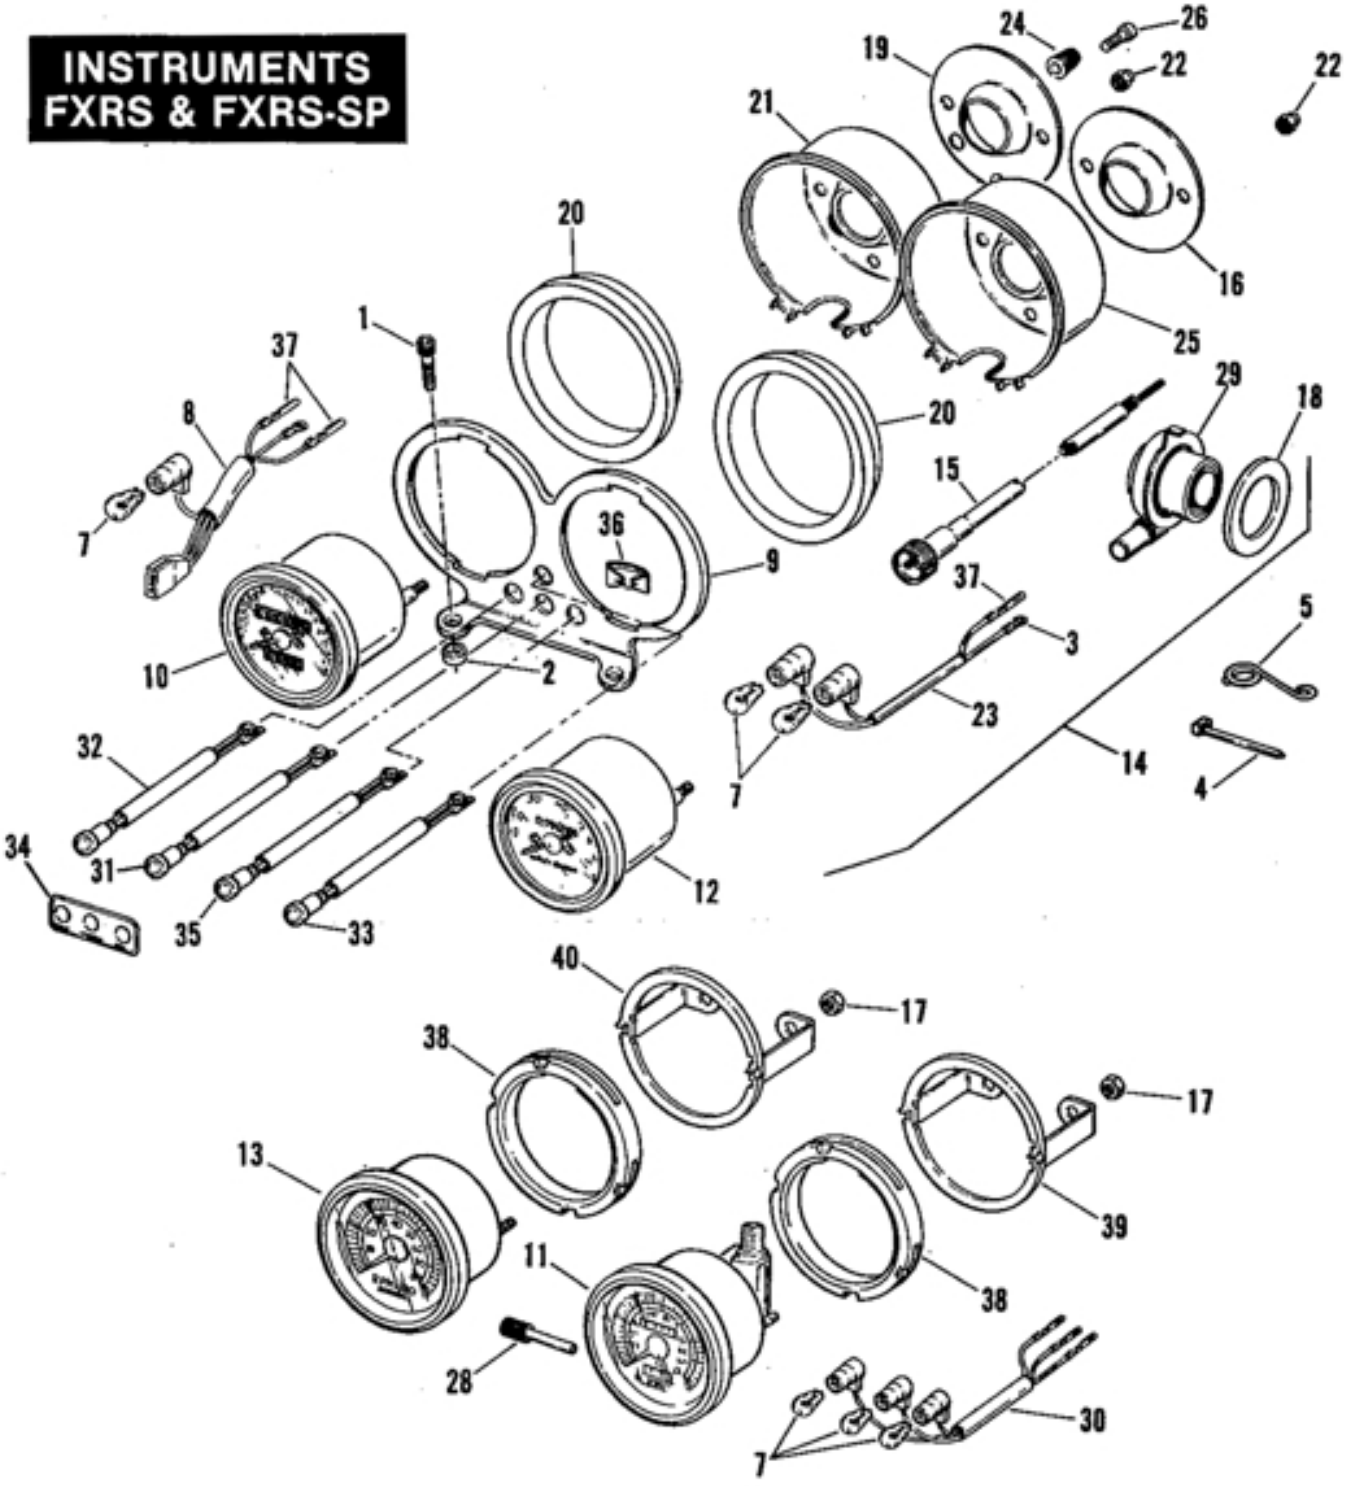

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	853A	SCREW (2)	FXR: 87-EB; 87 to 90-EG/M
2	5736	SPACER (2)	FXR: 87-EB; 87 to 90-EG/M
3	9857	TERMINAL, ring type #10 hole (2)	FXR: 87-EB; 87 to 90-EG/M
4	10081	CABLE STRAP, double loop (1)	FXR: 87-EB; 87 to 90-EG/M
5	45092-66A	GUIDE, cable (1)	FXR: 87-EB; 87 to 90-EG/M
7	53439-79	BULB (3)	FXR: 87 to 90-EB/G
8	67034-83A	BULB AND SOCKET, w/terminals-tach. (1)	FXR: 87-EB; 87 to 90-EG/M
9	67036-86	BRACKET, mounting (1)	FXR: 87-EB; 87 to 90-EG/M
10	67037-85A	SPEEDOMETER, mph (1)	FXR: 87-EB; 87 to 90-EG/M
11	67168-88A	SPEEDOMETER, mph (1)	FXR: 88 to 90-EB
12	67042-85	TACHOMETER, w/wiring-mph (1)	FXR: 87-EB; 87 to 90-EG/M
13	67171-88	TACHOMETER, w/wiring (1)	FXR: 88 to 90-EB
14	67046-86A	SPEEDOMETER AND TACHOMETER ASSY., w/bracket-mph (1)	FXR: 87-EB; 87 to 90-EG/M
15	67048-83A	CABLE ASSY., speedometer (1)	FXR: 87 to 90-EG/M
15	67052-78B	CABLE ASSY., speedometer (1)	FXR: 87-EB
15	67186-88	CABLE ASSY., speedometer (1)	FXR: 88 to 90-EB
16	67085-83	TRIM, tachometer (chrome) (1)	FXR: 87-EB; 87 to 90-EG/M
17	67094-85	NUT (4)	FXR: 88 to 90-EB
18	67098-87	SEAL, drive unit (1)	FXR: 87-EB; 87 to 90-EG/M
19	67103-83	TRIM, speedometer (chrome) (1)	FXR: 87-EB; 87 to 90-EG/M
20	67104-83	CUSHION, speedo and tach. mtg. (2)	FXR: 87-EB; 87 to 90-EG/M
21	67105-83	COVER, speedo.-lower (black) (1)	FXR: 87-EB; 87 to 90-EG/M
22	67106-83	ACORN NUT (4)	FXR: 87-EB; 87 to 90-EG/M
23	67107-83	BULB AND SOCKET, w/terminals-speedo. (1)	FXR: 87-EB; 87 to 90-EG/M
24	67108-83	RESET KNOB, odometer (chrome) (1)	FXR: 87-EB; 87 to 90-EG/M
25	67112-83	COVER, tach.-lower (black) (1)	FXR: 87-EB; 87 to 90-EG/M
26	67117-85	SCREW, reset knob (1)	FXR: 87-EB; 87 to 90-EG/M
28	67122-85	RESET KNOB, odometer (chrome) (1)	FXR: 88 to 90-EB
29	67127-84A	DRIVE UNIT, speedometer (1)	FXR: 87 to 90-EB/G/M
30	67172-88A	WIRING HARNESS (1)	FXR: 88 to 90-EB
31	67851-86	INDICATOR LAMP, neutral (green) (1)	FXR: 88 to 90-EB
31	68574-86	INDICATOR LAMP, neutral (green) (1)	FXR: 87-EB; 87 to 90-EG/M
32	67862-86	INDICATOR LAMP, high beam (blue) (1)	FXR: 88 to 90-EB
32	68597-86	INDICATOR LAMP, high beam (blue) (1)	FXR: 87-EB; 87 to 90-EG/M
33	67864-86	INDICATOR LAMP, turn signal (amber) (1)	FXR: 88 to 90-EB
33	68740-91	INDICATOR LAMP, turn signal (amber) (1)	FXR: 87-EB; 87 to 90-EG/M
33	68473-88A	INDICATOR LAMP, turn signal (amber) (1)	FXR: 88 to 90-EG
34	68464-86	TRIM, indicator lamps (black) (1)	FXR: 87-EB; 87 to 90-EG/M
35	68022-91	INDICATOR LAMP, oil pressure (red) (1)	FXR: 87-EB; 87 to 90-EG/M
35	68536-86	INDICATOR LAMP, oil pressure (red) (1)	FXR: 88 to 90-EB
36	68608-83	SPEED NUT (4)	FXR: 87 to 90-EB/G/M
37	72038-71	SOCKET, single pin (7)	FXR: 87 to 90-EB/G/M
38	92061-83	CUSHION, speedo and tach. mtg. (2)	FXR: 88 to 90-EB
39	92079-88	BRACKET, speedometer (1)	FXR: 88 to 90-EB
40	92080-88	BRACKET, tachometer (1)	FXR: 88 to 90-EB
		INTERNATIONAL MODELS ONLY	
10	67041-83A	SPEEDOMETER, kph (HDI only) (1)	FXR: 87-EB; 87 to 90-EG/M
12	67042-83	TACHOMETER, w/wiring-kph (HDI only) (1)	FXR: 87-EB; 87 to 90-EG/M
11	67169-88A	SPEEDOMETER, kph (HDI only) (1)	FXR: 88 to 90-EB
29	67187-88	DRIVE UNIT, speedometer (HDI only) (1)	FXR: 88 to 90-EB

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

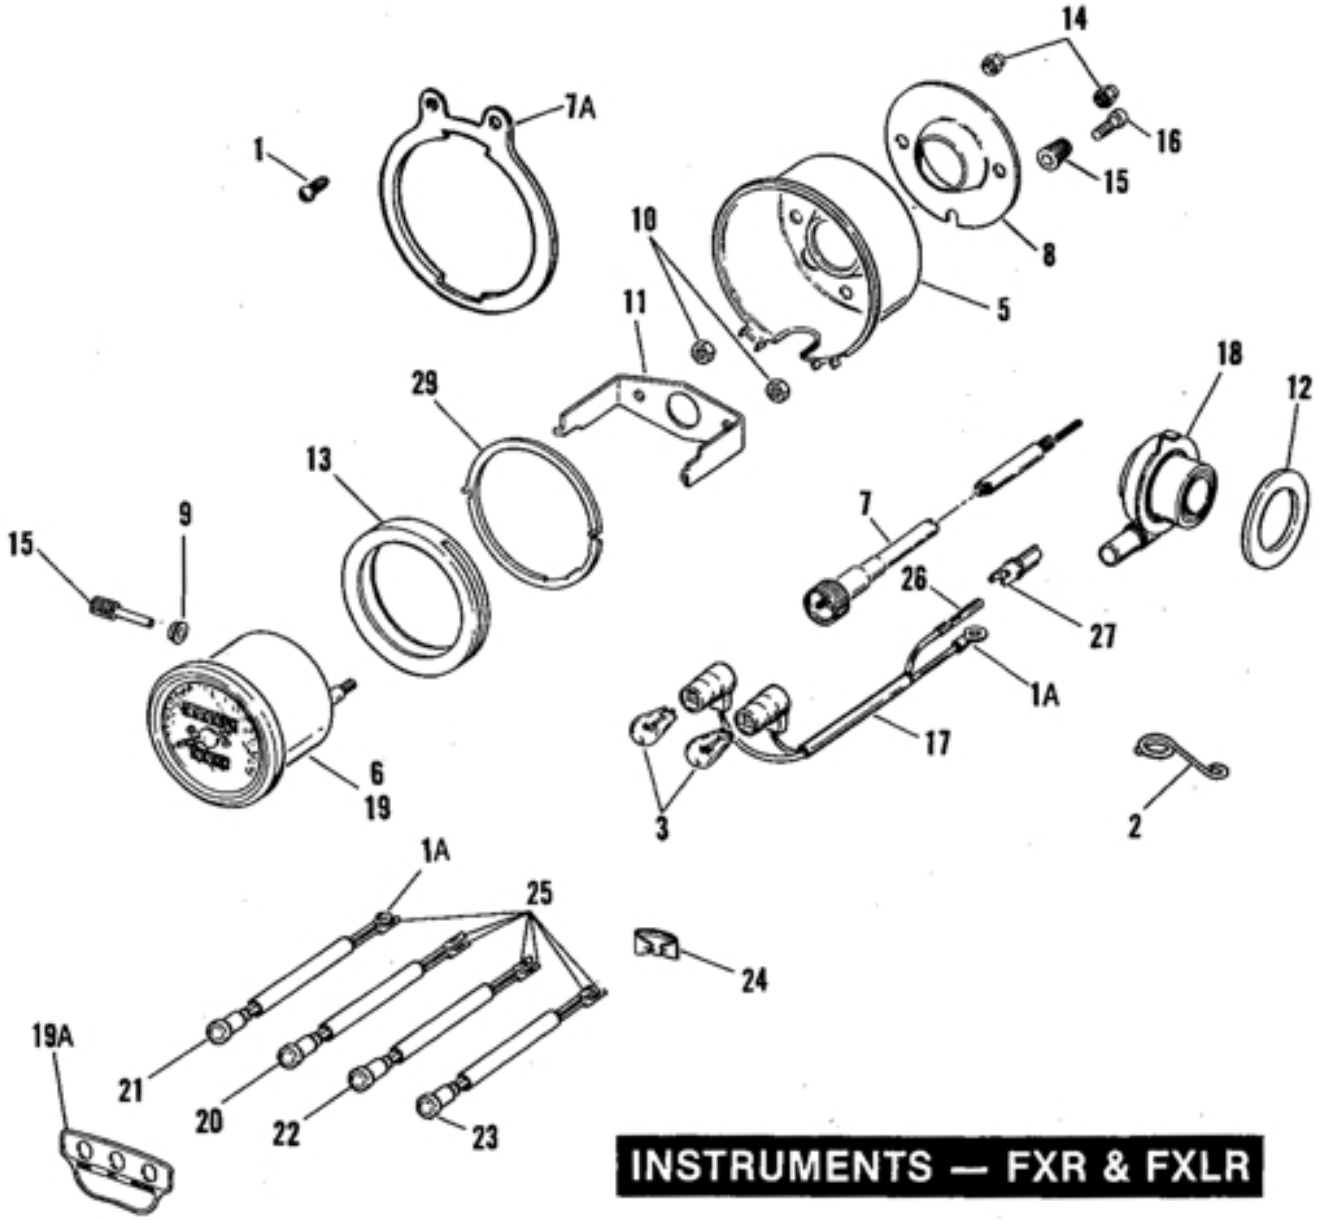


INSTRUMENTS — FXR & FXLR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW (2)	FXR: 87 to 90-EL
1A	9857	TERMINAL, ring type-#10 hole (1)	FXR: 87 to 90-EA
2	45092-66A	GUIDE, cable (1)	FXR: 87 to 90-EA/L
3	53439-79	BULB (2)	FXR: 87 to 90-EA/L
5	67014-87	COVER, speedometer (chrome) (1)	FXR: 87 to 90-EL
6	67020-85A	SPEEDOMETER, mph (1)	FXR: 87 to 90-EA
6	67025-87	SPEEDOMETER, w/wiring-mph (1)	FXR: 87 to 90-EL
7	67078-85A	CABLE ASSY., speedometer (1)	FXR: 87 to 90-EA/L
7A	67080-87	MOUNTING BRACKET, speedometer (1)	FXR: 87 to 90-EL
8	67085-83	TRIM, speedometer (1)	FXR: 87 to 90-EL
9	67086-85	GROMMET (1)	FXR: 87 to 90-EA
10	67094-85	NUT (2)	FXR: 87 to 90-EA
11	67095-85	BRACKET, mounting (1)	FXR: 87 to 90-EA
12	67098-87	SEAL, drive unit (1)	FXR: 87 to 90-EA/L
13	67104-83	GASKET, speedometer mtg. (1)	FXR: 87 to 90-EL
13	92061-83	GASKET, speedometer mtg. (1)	FXR: 87 to 90-EA
14	67106-83	ACORN NUT (2)	FXR: 87 to 90-EL
15	67108-83	RESET KNOB, odometer (1)	FXR: 87 to 90-EL
15	67122-85	RESET KNOB, odometer (1)	FXR: 87 to 90-EA
16	67117-85	SCREW, reset knob (1)	FXR: 87 to 90-EL
17	67126-87	BULB AND SOCKET (1)	FXR: 87 to 90-EL
17	67202-86	BULB AND SOCKET, w/terminals (1)	FXR: 87 to 90-EA
18	67127-84A	DRIVE UNIT, speedometer (1)	FXR: 87 to 90-EA
18	67132-85A	DRIVE UNIT, speedometer (1)	FXR: 87 to 90-EL
19	67200-86A	SPEEDOMETER, w/wiring-mph (1)	FXR: 87 to 90-EA
19A	67826-87	TRIM, indicator lamps (1)	FXR: 87 to 90-EL
20	67851-86	INDICATOR LAMP, neutral (green) (1)	FXR: 87 to 90-EA
20	68419-87	INDICATOR LAMP, neutral (green) (1)	FXR: 87 to 90-EL
21	67862-86	INDICATOR LAMP, high beam (blue) (1)	FXR: 87 to 90-EA
21	68421-87	INDICATOR LAMP, high beam (blue) (1)	FXR: 87 to 90-EL
22	67864-86	INDICATOR LAMP, turn signals (amber) (1)	FXR: 87 to 90-EA
23	68420-87	INDICATOR LAMP, oil pressure (red) (1)	FXR: 87 to 90-EL
23	68536-86	INDICATOR LAMP, oil pressure (red) (1)	FXR: 87 to 90-EA
24	68608-83	SPEED NUT, 3-EL (4)	FXR: 87 to 90-EA/L
25	72038-71	SOCKET, single pin (1)	FXR: 87 to 90-EA
26	72039-71	PIN, single socket (1)	FXR: 87 to 90-EA
27	72043-71	CONNECTOR, single pin (1)	FXR: 87 to 90-EA
29	92070-86	PLATE, mounting (1)	FXR: 87 to 90-EA
		INTERNATIONAL MODELS ONLY	
4	67015-87A	SPEEDOMETER ASSY., kph (HDI only) (1)	FXR: 87 to 90-EL
6	67018-87A	SPEEDOMETER, w/wiring-kph (HDI only) (1)	FXR: 87 to 90-EL
	67021-85B	SPEEDOMETER, kph (HDI only) (1)	FXR: 87 to 90-EA
19	67201-86A	SPEEDOMETER, w/wiring-kph (HDI only) (1)	FXR: 87 to 90-EA

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

INSTRUMENTS — FXRT

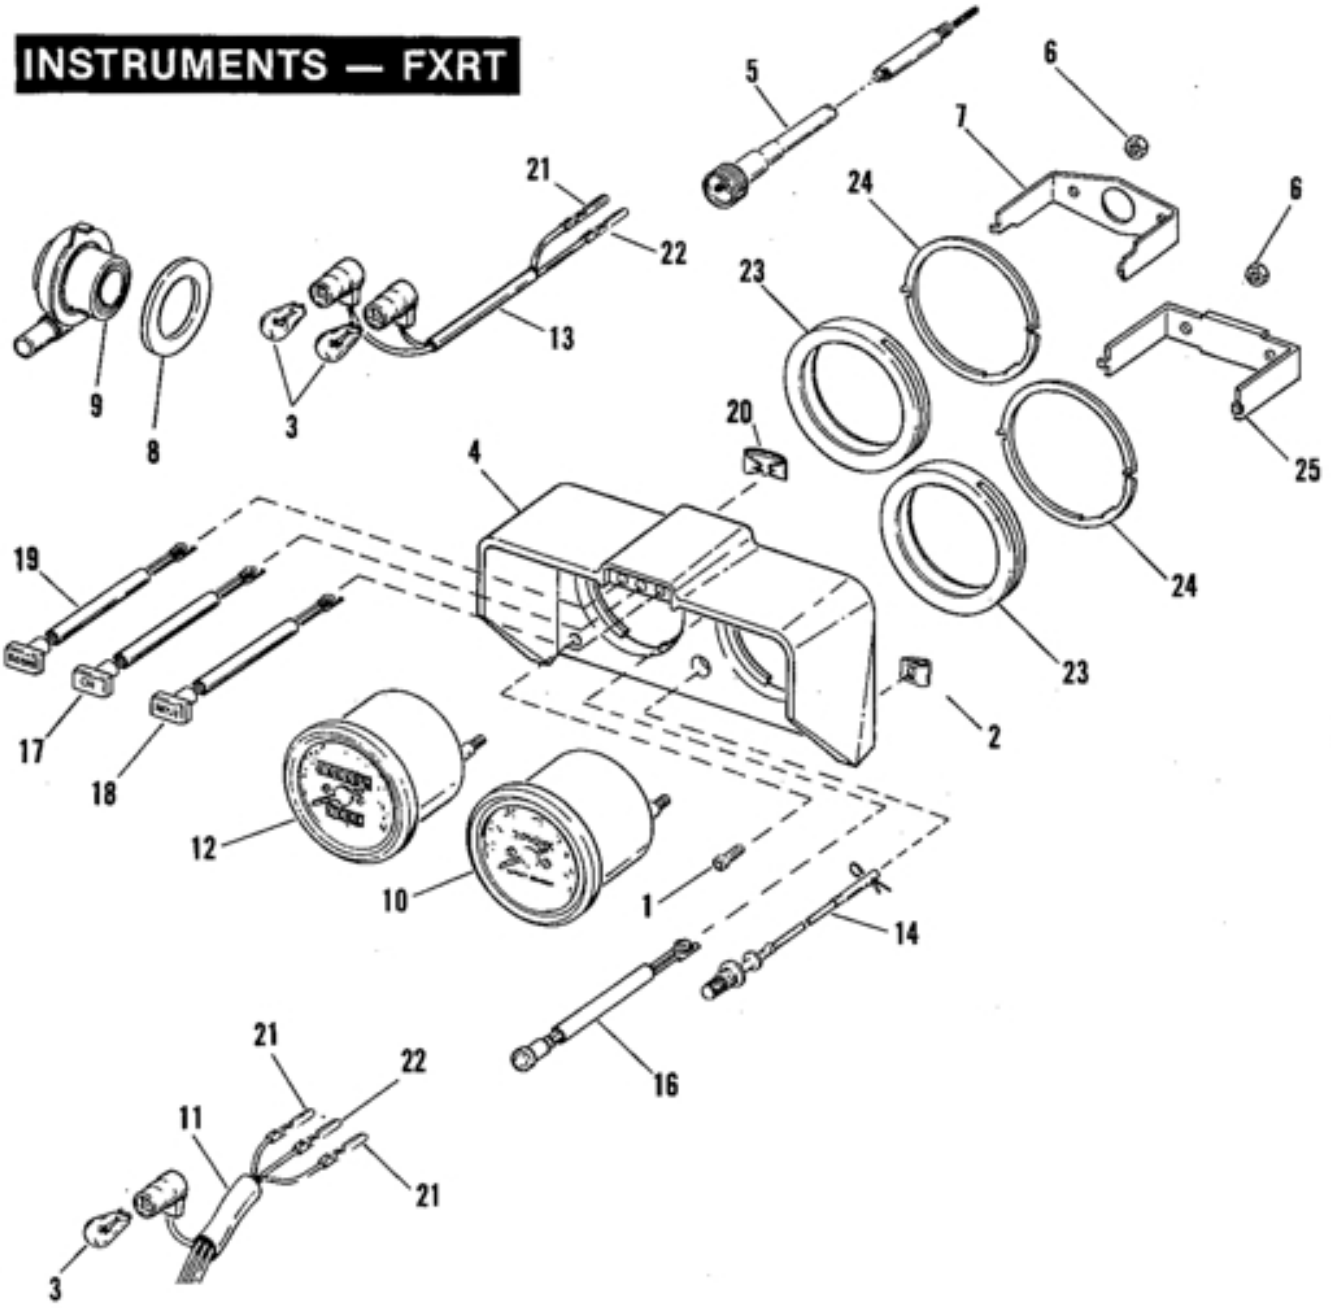


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3766	SCREW (4)	FXR: 87 to 90-EC
2	8107	SPEEDNUT (4)	FXR: 87 to 90-EC
3	53439-79	BULB, speedometer; tachometer (3)	FXR: 87 to 90-EC
4	67029-86A	VISOR (1)	FXR: 87 to 90-EC
5	67054-83B	CABLE, speedometer (1)	FXR: 87 to 90-EC
6	67094-85	NUT (4)	FXR: 87 to 90-EC
7	67097-86	BRACKET, speedometer mounting (1)	FXR: 87 to 90-EC
8	67098-87	SEAL, drive unit (1)	FXR: 87 to 90-EC
9	67127-84A	DRIVE UNIT, speedometer (1)	FXR: 87 to 90-EC
10	67152-86	TACHOMETER (1)	FXR: 87 to 90-EC
11	67153-86	SOCKET AND BULB, tachometer (1)	FXR: 87 to 90-EC
12	67154-86	SPEEDOMETER, mph (1)	FXR: 87 to 90-EC
12	67157-86	SPEEDOMETER, kph, N/A (1)	FXR: 87 to 90-EC
13	67155-86	SOCKET AND BULBS, speedometer (1)	FXR: 87 to 90-EC
14	67156-86A	CABLE, odometer reset (1)	FXR: 87 to 90-EC
16	68465-86	INDICATOR LAMP, turn signal (amber) (2)	FXR: 87 to 90-EC
17	68489-83	INDICATOR LAMP, oil pressure (red) (1)	FXR: 87 to 90-EC
18	68574-83	INDICATOR LAMP, neutral (green) (1)	FXR: 87 to 90-EC
19	68588-86	INDICATOR LAMP, high beam (blue) (1)	FXR: 87 to 90-EC
20	68608-83	SPEEDNUT (5)	FXR: 87 to 90-EC
21	72038-71	SOCKET, single pin (7)	FXR: 87 to 90-EC
22	72039-71	PIN, single socket (9)	FXR: 87 to 90-EC
23	92061-83	GASKET, inst. mtg. (1)	FXR: 87 to 90-EC
24	92068-83	PLATE, mounting (2)	FXR: 87 to 90-EC
25	92077-83	BRACKET, tachometer mounting (1)	FXR: 87 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

INSTRUMENTS — SOFTAIL

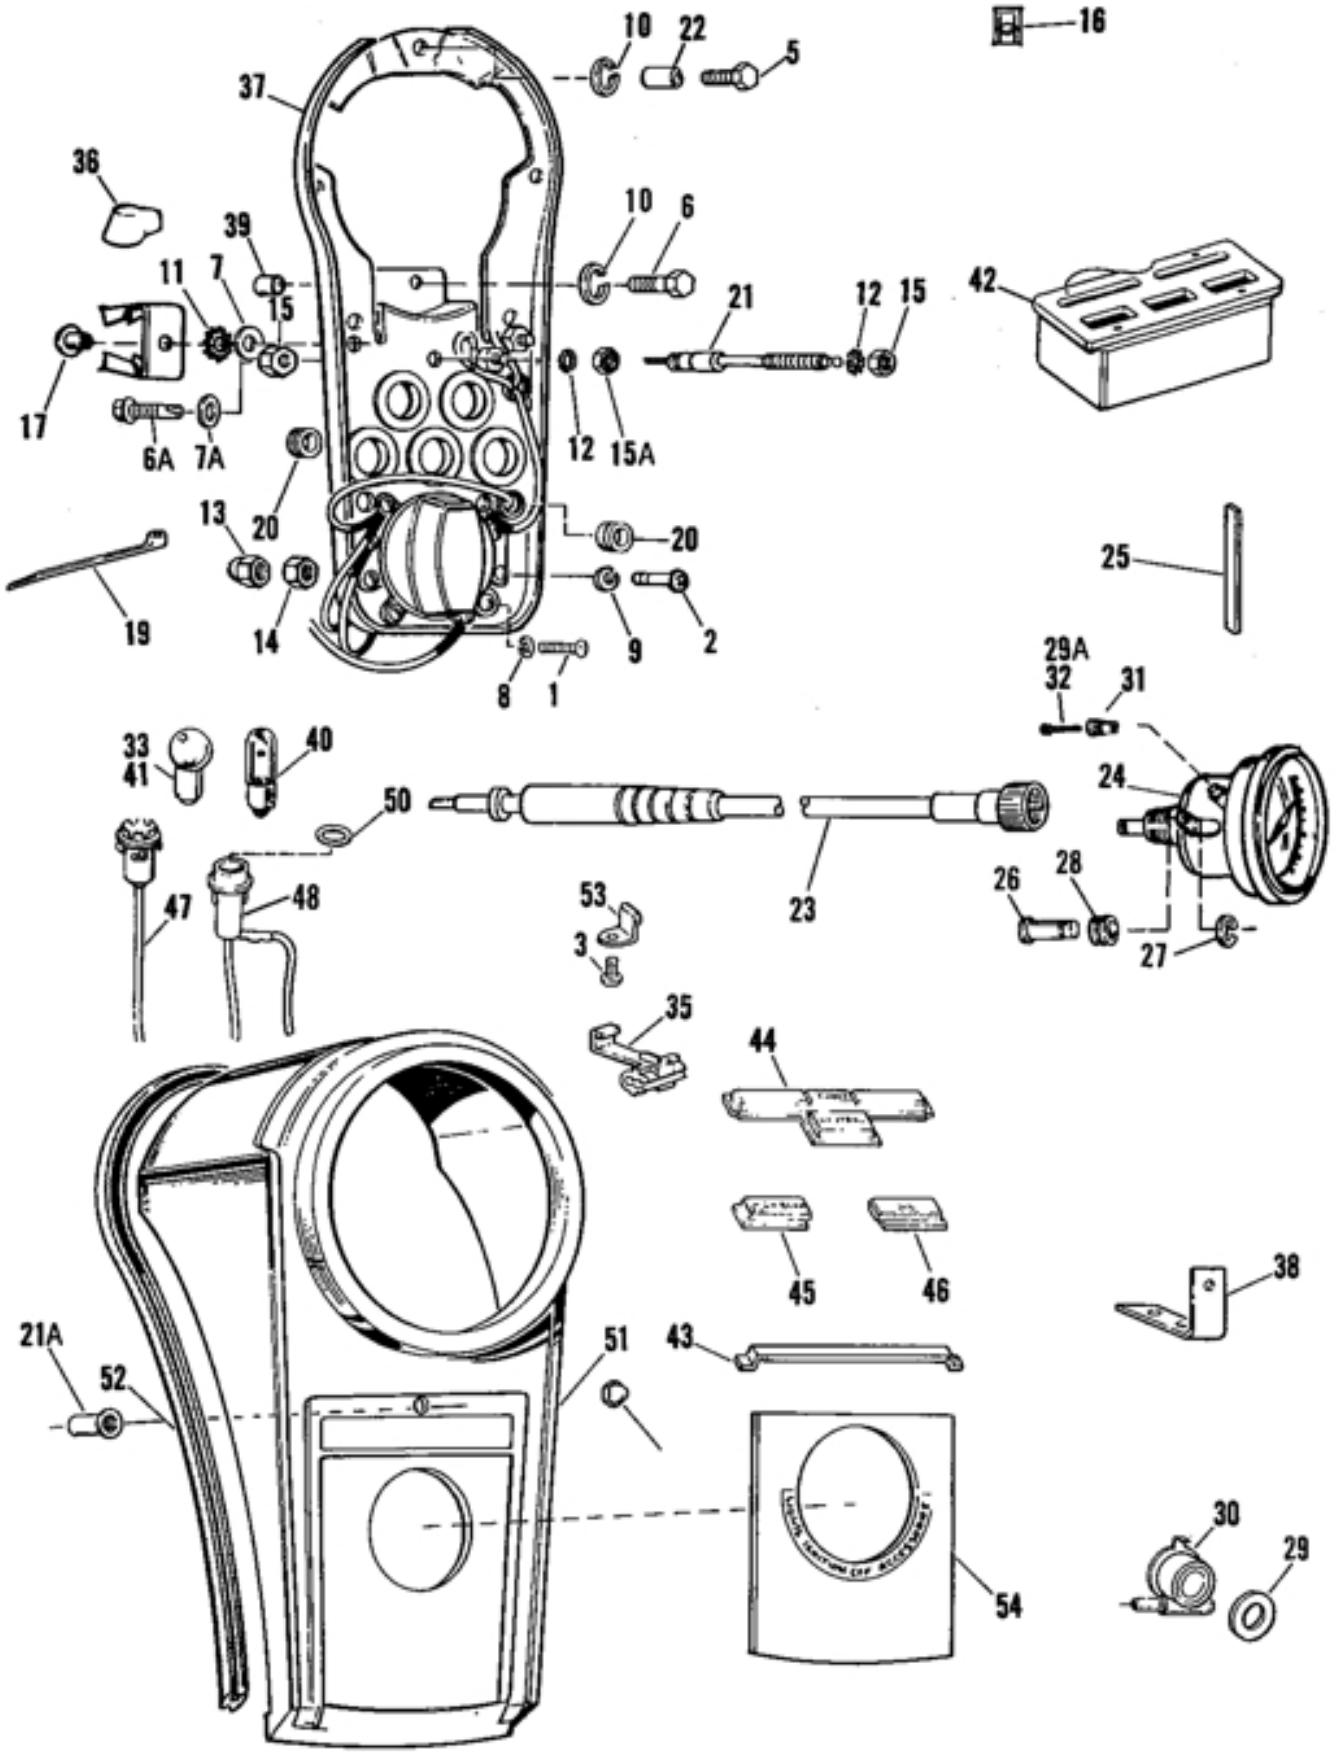


INSTRUMENTS - SOFTAIL MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2574WA	SCREW (6)	Softail: 87 to 90-ALL
2	2594A	SCREW (4)	Softail: 87 to 90-ALL
3	2630W	SCREW (2)	Softail: 87 to 90-ALL
5	3419	BOLT (1)	Softail: 87 to 90-ALL
6	4068	BOLT (2)	Softail: 87 to 90-ALL
6A	4739	BOLT (1)	Softail: 90 to 90-ALL
7	6192	WASHER (4)	Softail: 87 to 90-ALL
7A	6701	WASHER (1)	Softail: 90 to 90-ALL
10	7041	LOCKWASHER (3)	Softail: 87 to 90-ALL
11	7229W	LOCKWASHER (3)	Softail: 87 to 90-ALL
12	7232	LOCKWASHER (1)	Softail: 87 to 90-ALL
12A	7549	ACORN NUT (1)	Softail: 90 to 90-ALL
13	7602	ACORN NUT, locking (6)	Softail: 87 to 90-ALL
14	7638	NUT (6)	Softail: 87 to 90-ALL
15	7744	JAMNUT (2)	Softail: 87 to 89-ALL
15A	7763W	JAMNUT (1)	Softail: 90 to 90-ALL
16	8155	SPEED NUT (2)	Softail: 87 to 90-ALL
17	8672	POP RIVET (4)	Softail: 87 to 90-ALL
18	9952	CLIP, circuit breaker (4)	Softail: 87 to 90-ALL
19	10065	CABLE STRAP (6)	Softail: 87 to 90-ALL
20	11430	GROMMET, instrument panel (2)	Softail: 87 to 90-ALL
21	29211-86	CONTROL CABLE, choke (1)	Softail: 87 to 90-ALL
21A	61644-88	BUSHING (1)	Softail: 87 to 89-ALL
22	62043-81A	SPACER, panel mounting (1)	Softail: 87 to 90-ALL
23	67024-84A	CABLE ASSY., speedometer (1)	Softail: 87 to 90-BH/K/L
23	67079-86A	CABLE ASSY., speedometer (1)	Softail: 87 to 90-BJ
24	67027-81E	SPEEDOMETER, mph (1)	Softail: 87 to 90-ALL
24	67040-81F	SPEEDOMETER, mph (1)	Softail: 87 to 90-ALL
25	67067-76	ISOLATOR STRIP, black (1)	Softail: 87 to 90-ALL
26	67068-76	PIN, speedometer mounting (2)	Softail: 87 to 90-ALL
27	67069-76	RETAINING RING, speedometer mtg. (2)	Softail: 87 to 90-ALL
28	67070-76	GROMMET, speedometer mtg. (2)	Softail: 87 to 90-ALL
29	67098-87	SEAL, drive unit (1)	Softail: L88 to 90-BL
29	67118-87	SEAL, drive unit (1)	Softail: 87 to 90-BH/J/K/M
29A	67117-85	SCREW (1)	Softail: 90 to 90-ALL
30	67120-84B	DRIVE UNIT, speedometer (1)	Softail: 87 to 90-BH/K/M
30	67125-86A	DRIVE UNIT, speedometer (1)	Softail: 87 to 90-BJ
30	67166-88	DRIVE UNIT, speedometer (1)	Softail: L88 to 90-BL
31	67215-68	KNOB, odometer reset (1)	Softail: 87 to 89-ALL
31	67215-89	KNOB, odometer reset (1)	Softail: 90 to 90-ALL
32	67217-68	SCREW, reset knob (1)	Softail: 87 to 89-ALL
33	68462-64	BULB, indicator lamps (4)	Softail: 87 to 90-ALL
35	70576-68	CONNECTOR (1)	Softail: 87 and 88-ALL
36	70579-65	INSULATING BOOT (1)	Softail: 87 to 90-ALL
37	70936-87	INSTRUMENT PANEL BASE (1)	Softail: 87 to 90-ALL
38	70939-84A	BRACKET, circuit breakers (1)	Softail: 87 to 90-ALL
39	70941-84A	SPACER, instrument panel mounting (1)	Softail: 87 to 90-ALL
40	71090-64	BULB, speedometer (1)	Softail: 87 to 90-ALL
41	71092-68A	BULB, high beam (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

INSTRUMENTS — SOFTAIL

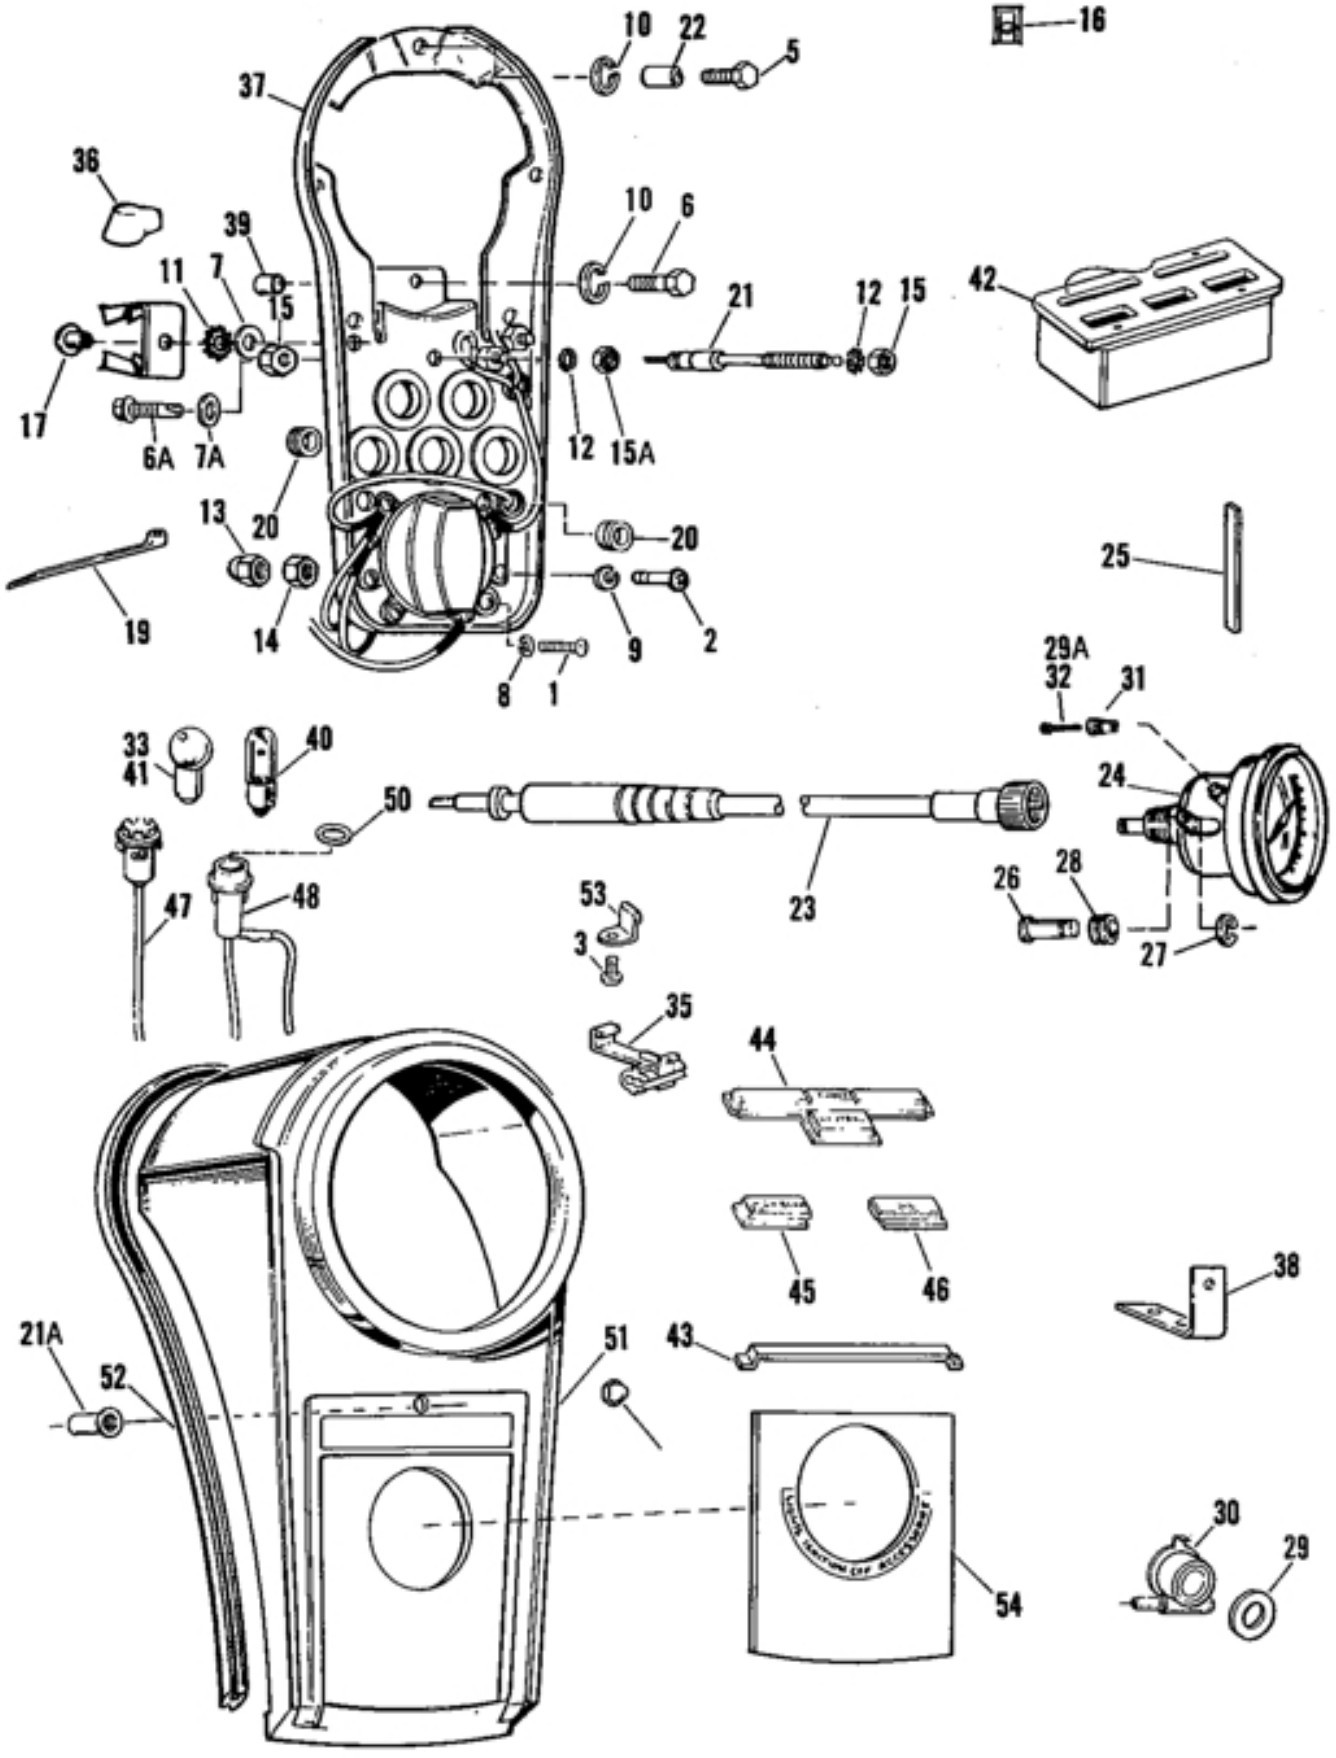


INSTRUMENTS - SOFTAIL MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
42	71134-68	SUPPORT, indicator lamp lens (1)	Softail: 87 to 90-ALL
43	71141-68	RETAINER, indicator lamp lens (1)	Softail: 87 to 90-ALL
44	71143-75	LENS, neutral (green) (1)	Softail: 87 to 89-ALL
44	71143-90	LENS, neutral (green) (1)	Softail: 90 to 90-ALL
45	71144-75A	LENS, high beam (blue) (1)	Softail: 87 to 90-ALL
46	71145-75	LENS, oil pressure (red) (1)	Softail: 87 to 90-ALL
47	71158-86	SOCKET, speedometer lamp (1)	Softail: 87 to 90-ALL
48	71162-70	SOCKET (3)	Softail: 87 to 90-ALL
50	71182-47A	WASHER, signal lamp socket (1)	Softail: 87 to 90-ALL
51	71241-68B	COVER, instrument panel (chrome) (1)	Softail: 87 to 90-ALL
52	71295-68	GASKET, instrument panel cover (1)	Softail: 87 to 90-ALL
53	71297-68	CLIP, lens support (2)	Softail: 87 to 90-ALL
54	71298-89	PLATE, ignition switch (chrome) (1)	Softail: 90 to 90-BM
54	71300-79	PLATE, ignition switch (chrome) (1)	Softail: 87 to 90-BH/J/K/L
		INTERNATIONAL MODELS ONLY	
24	67030-81F	SPEEDOMETER, kph (HDI only) (1)	Softail: 87 to 90-ALL
24	67056-81F	SPEEDOMETER, kph (HDI only) (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

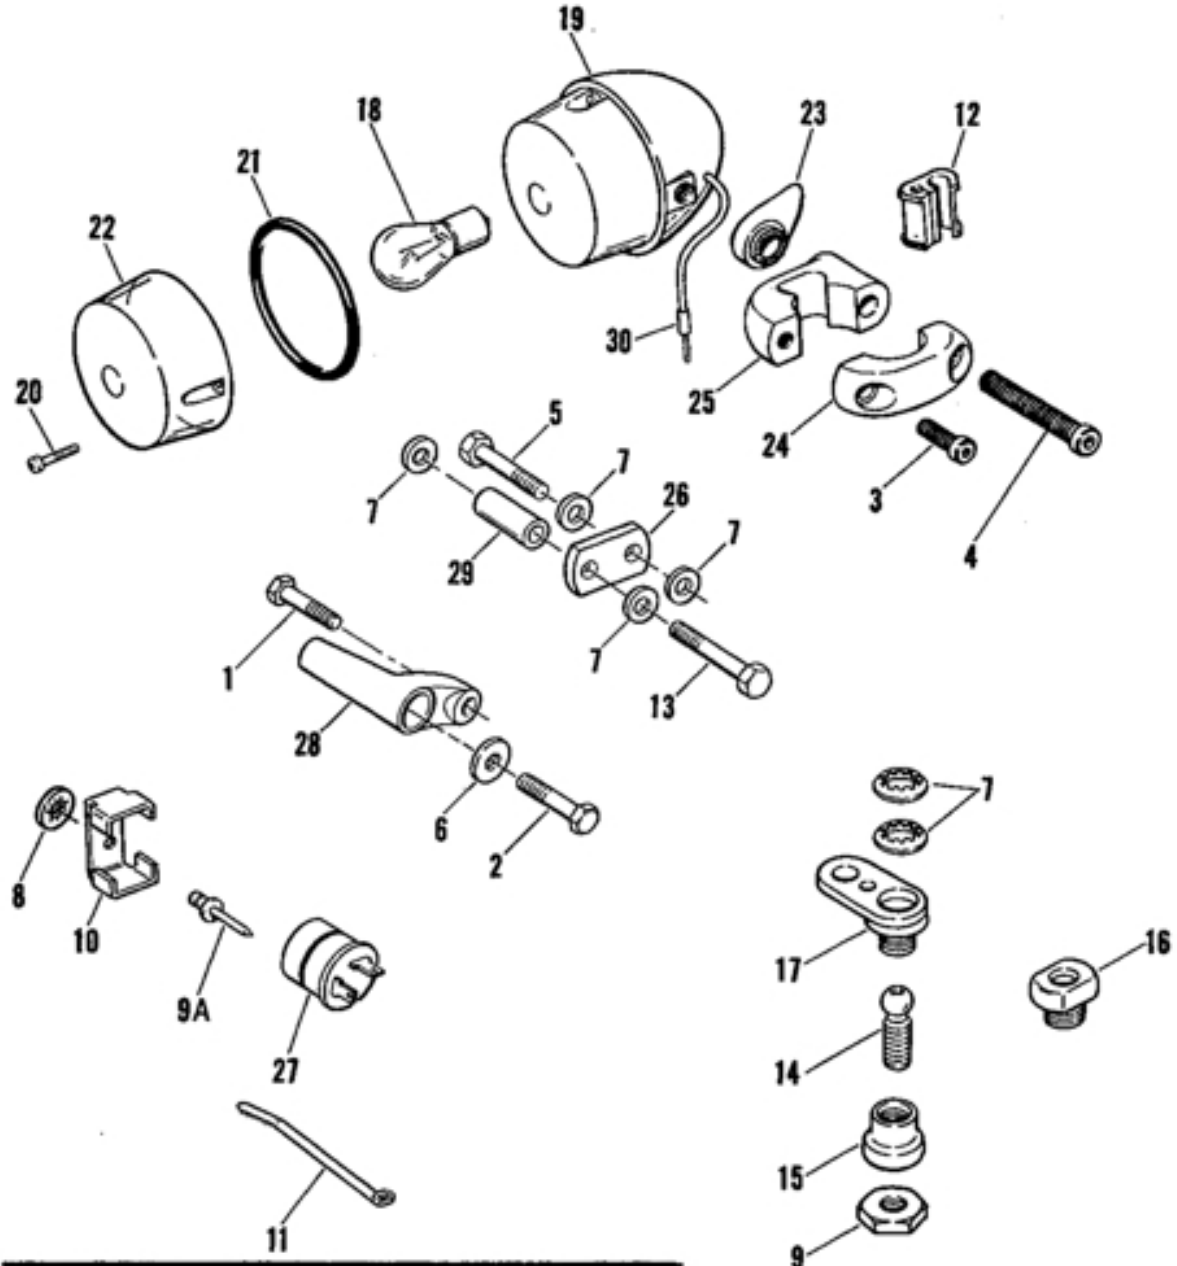


FRONT TURN SIGNALS — FXR, FXRS, FXLR & SOFTAIL

FRONT TURN SIGNALS - FXR, FXRS, FXLR AND SOFTAIL MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4047	SCREW (2)	FXR: 87-EL; 87 to 90-EG/M
2	2698	SCREW (2)	FXR: 87-EL; 87 to 90-EG/M
3	4069A	SCREW (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
4	4070	SCREW (2)	Softail: 87 to 90-ALL
5	4391	BOLT (1)	FXR: 87 to 90-EA
6	7042	LOCKWASHER (2)	FXR: 87-EL; 87 to 90-EG/M
7	7127	LOCKWASHER, 8-87 (3)	FXR: 87-EA; 88 to 90-EA/B/L Softail: 88 to 90-ALL
8	7229W	LOCKWASHER (1)	Softail: 87 to 90-BH/K
9	7744	JAMNUT (2)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
9A	8672	POP RIVET (1)	Softail: 87 to 90-BH/K
10	9952	CLIP (1)	Softail: 87 to 90-BH/K
11	10006	CABLE STRAP (2)	FXR: 87 to 90-EA/B/G/L/M
11	10065	CABLE STRAP (1)	FXR: 87 to 90-EC Softail: 87 to 90-ALL
12	11449	GROMMET (2)	FXR: 87-EB/G/L Softail: 87-ALL
13	30013-71	BOLT (2)	FXR: 87-EA
14	67822-88	BALL STUD (2)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
15	67827-88	CLAMP, ball stud (2)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
16	67828-88	RETAINER, right (1)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
17	67829-88	BALL RECEPTACLE, left (1)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
18	68168-89	BULB, fr. turn signals (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
19	68406-86C	LAMP WITH WIRE, front (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
20	68452-86	SCREW W/O-RING, turn sig. lens (4)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

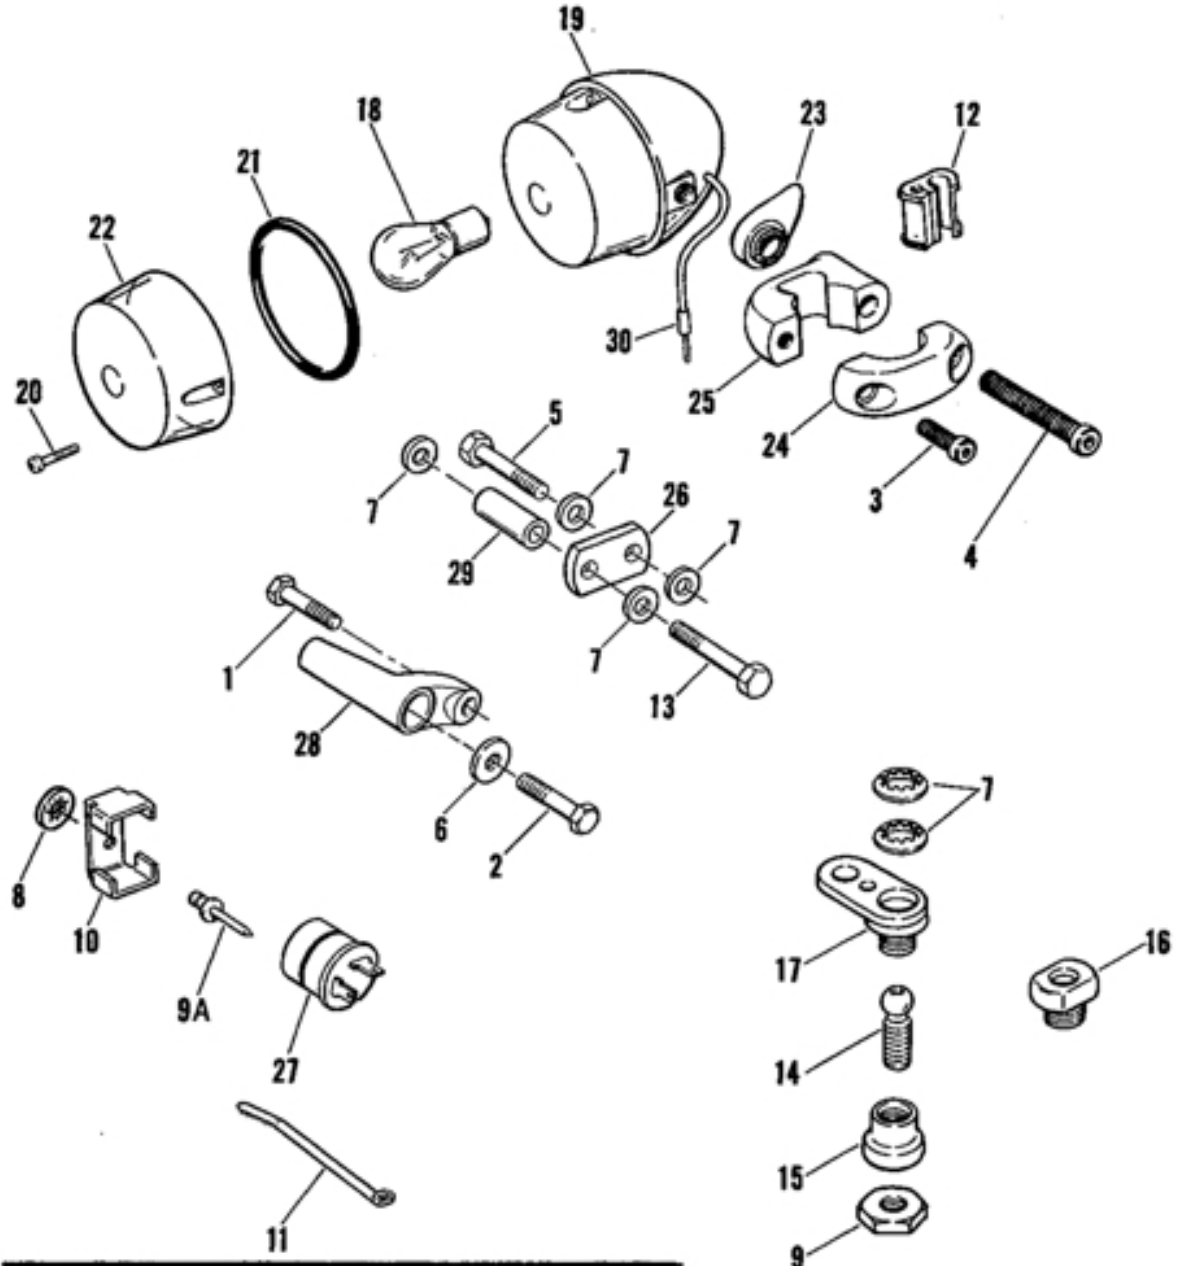

FRONT TURN SIGNALS — FXR, FXRS, FXLR & SOFTAIL


FRONT TURN SIGNALS - FXR, FXRS, FXLR AND SOFTAIL MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	68455-86	O-RING, turn sig. (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
22	68457-86	LENS, turn sig. (amber) (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
23	68477-73	BRACKET, clamp to lamp (2)	FXR: 87 to 90-EB Softail: 87 to 90-ALL
24	68486-82A	CLAMP, upper-handlebar (2)	FXR: 87 to 90-EB Softail: 87 to 90-ALL
25	68487-82	CLAMP, lower-handlebar (2)	FXR: 87 to 90-EB Softail: 87 to 90-ALL
26	68504-83	BRACKET (2)	FXR: 87-EA
27	68543-64B	FLASHER, turn signal (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
28	68555-87	SUPPORT, front turn signal (2)	FXR: 87-EL; 87 to 90-EG/M
29	68559-87	SPACER, front turn signal (2)	FXR: 87-EA
30	72039-71	PIN, single socket (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
18	68163-84	BULB, HDI only (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 89 to 90-ALL
19	68408-86C	LAMP WITH WIRE, front (HDI only) (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
22	68566-90	LENS, turn sig. (amber) (HDI only) (2)	FXR: 89 to 90-EA/B/G/L/M Softail: 87 to 90-ALL
27	68550-83	FLASHER, turn signal (HDI only) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL

FOR HERITAGE CLASSIC SEE SECTION F36A

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

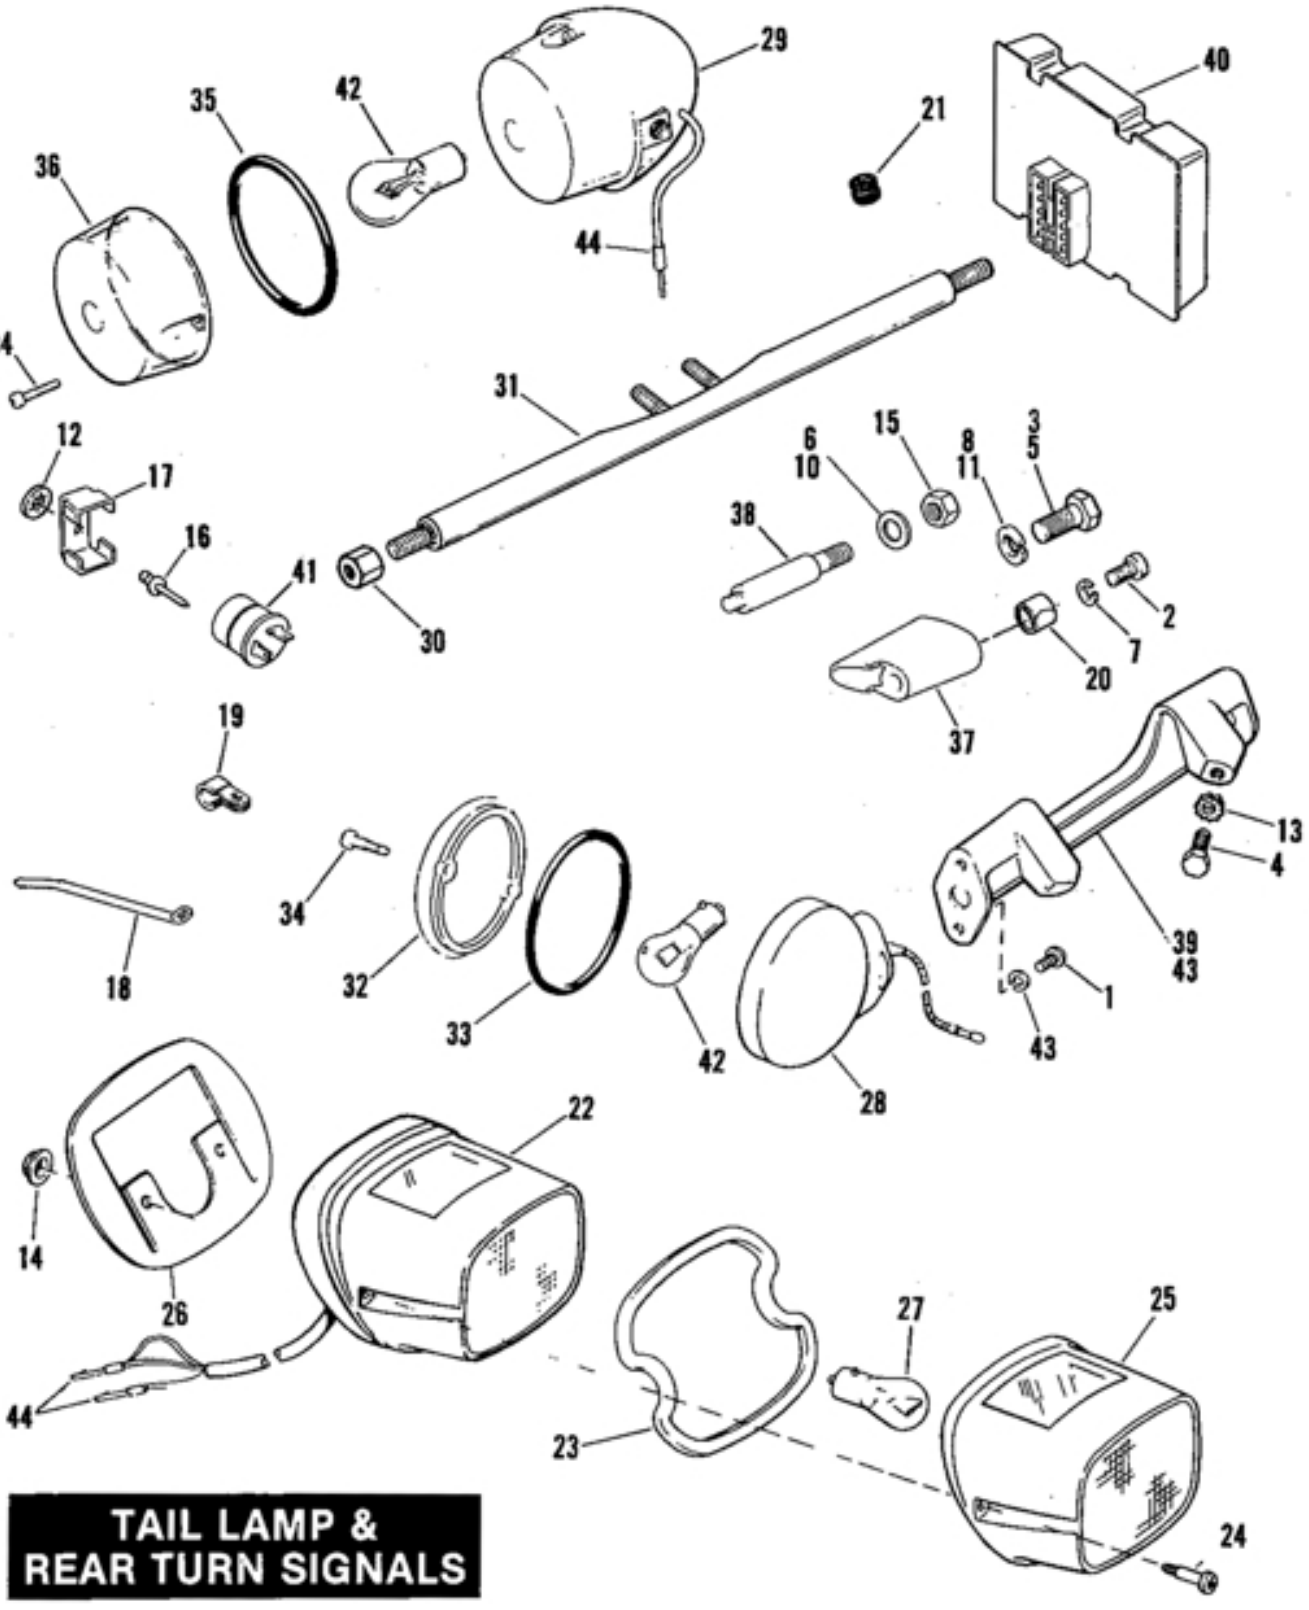


TAIL LAMP & REAR TURN SIGNALS

TAIL LAMP AND REAR TURN SIGNALS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2692W	SCREW (4)	FXR: 87 to 90-EC Softail: 87 to 90-BJ Touring: 87 to 90-ALL
2	2698	SCREW (2)	Softail: 87 to 90-BH/K/L
3	2904	SCREW (2)	Softail: 87 to 90-ALL
4	3546	BOLT (2)	Softail: 90 to 90-BJ
4	3767B	BOLT (2)	Softail: 87 to 89-BJ Touring: 87 to 90-ALL
5	4412	BOLT (2)	FXR: 87 to 90-EA/B/G/L
6	6701	WASHER (2)	FXR: 87 to 90-EA/B/G/L
7	7042	LOCKWASHER (2)	Softail: 87 to 90-BH/K/L
8	7045	LOCKWASHER (2)	Softail: 87 to 90-ALL
9	7069	LOCKWASHER (4)	FXR: 87 to 90-EC Softail: 87 to 90-BJ Touring: 87 to 90-ALL
10	7101	LOCKWASHER (2)	Softail: 90 to 90-BM
11	7130W	LOCKWASHER (2)	FXR: 87 to 90-EA/B/G/L
12	7229W	LOCKWASHER (1)	Softail: 87 to 90-BH/K/L
13	7230	LOCKWASHER (2)	FXR: 87 to 90-EC Softail: 87 to 89-BJ Touring: 87 to 90-ALL
14	7501	SPEED NUT (2)	ALL
15	7667	NUT (2)	FXR: 87 to 90-EA/B/G/L
15	7800W	NUT (2)	Softail: 90 to 90-BM
16	8672	POP RIVET (1)	Softail: 87 to 90-BH/K/L
17	9952	CLIP (1)	Softail: 87 to 90-BH/K/L
18	10065	CABLE STRAP (1)	FXR: 87 to 90-EC Softail: 87 to 90-ALL
19	10033	CLIP (1)	FXR: 87 to 90-EC Softail: 87 to 90-BJ/M Touring: 87 to 90-ALL
20	59959-86	SPACER (1)	Softail: 87 to 90-ALL
21	67070-76	GROMMET, rear fender (1)	FXR: L89 to 90-EM
22	68008-73B	TAIL LAMP ASSEMBLY (1)	ALL
23	68027-90	GASKET, tail lamp lens (1)	ALL
24	68026-73	SCREW, tail lamp (2)	ALL
25	68033-90	LENS, tail lamp (1)	ALL
26	68123-73	GASKET, tail lamp housing (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
27	68168-89	BULB, tail lamp (1)	ALL
28	68402-86	LAMP WITH WIRE, rear (amber) (2)	FXR: 87 to 90-EC Softail: 87 to 90-BJ Touring: 87 to 90-ALL
29	68407-86	LAMP WITH WIRE, rear (amber) (2)	Softail: 87 to 90-BH/K/K
29	68410-87B	LAMP WITH WIRE, rear (amber) (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 90 to 90-BM
30	68424-89	NUT (2)	FXR: L89 to 90-EM
31	68430-89	TURN SIGNAL BAR (1)	FXR: L89 to 90-EM
32	68440-86	LENS, turn signal (2)	FXR: 87 to 90-EC Softail: 87 to 90-BJ Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

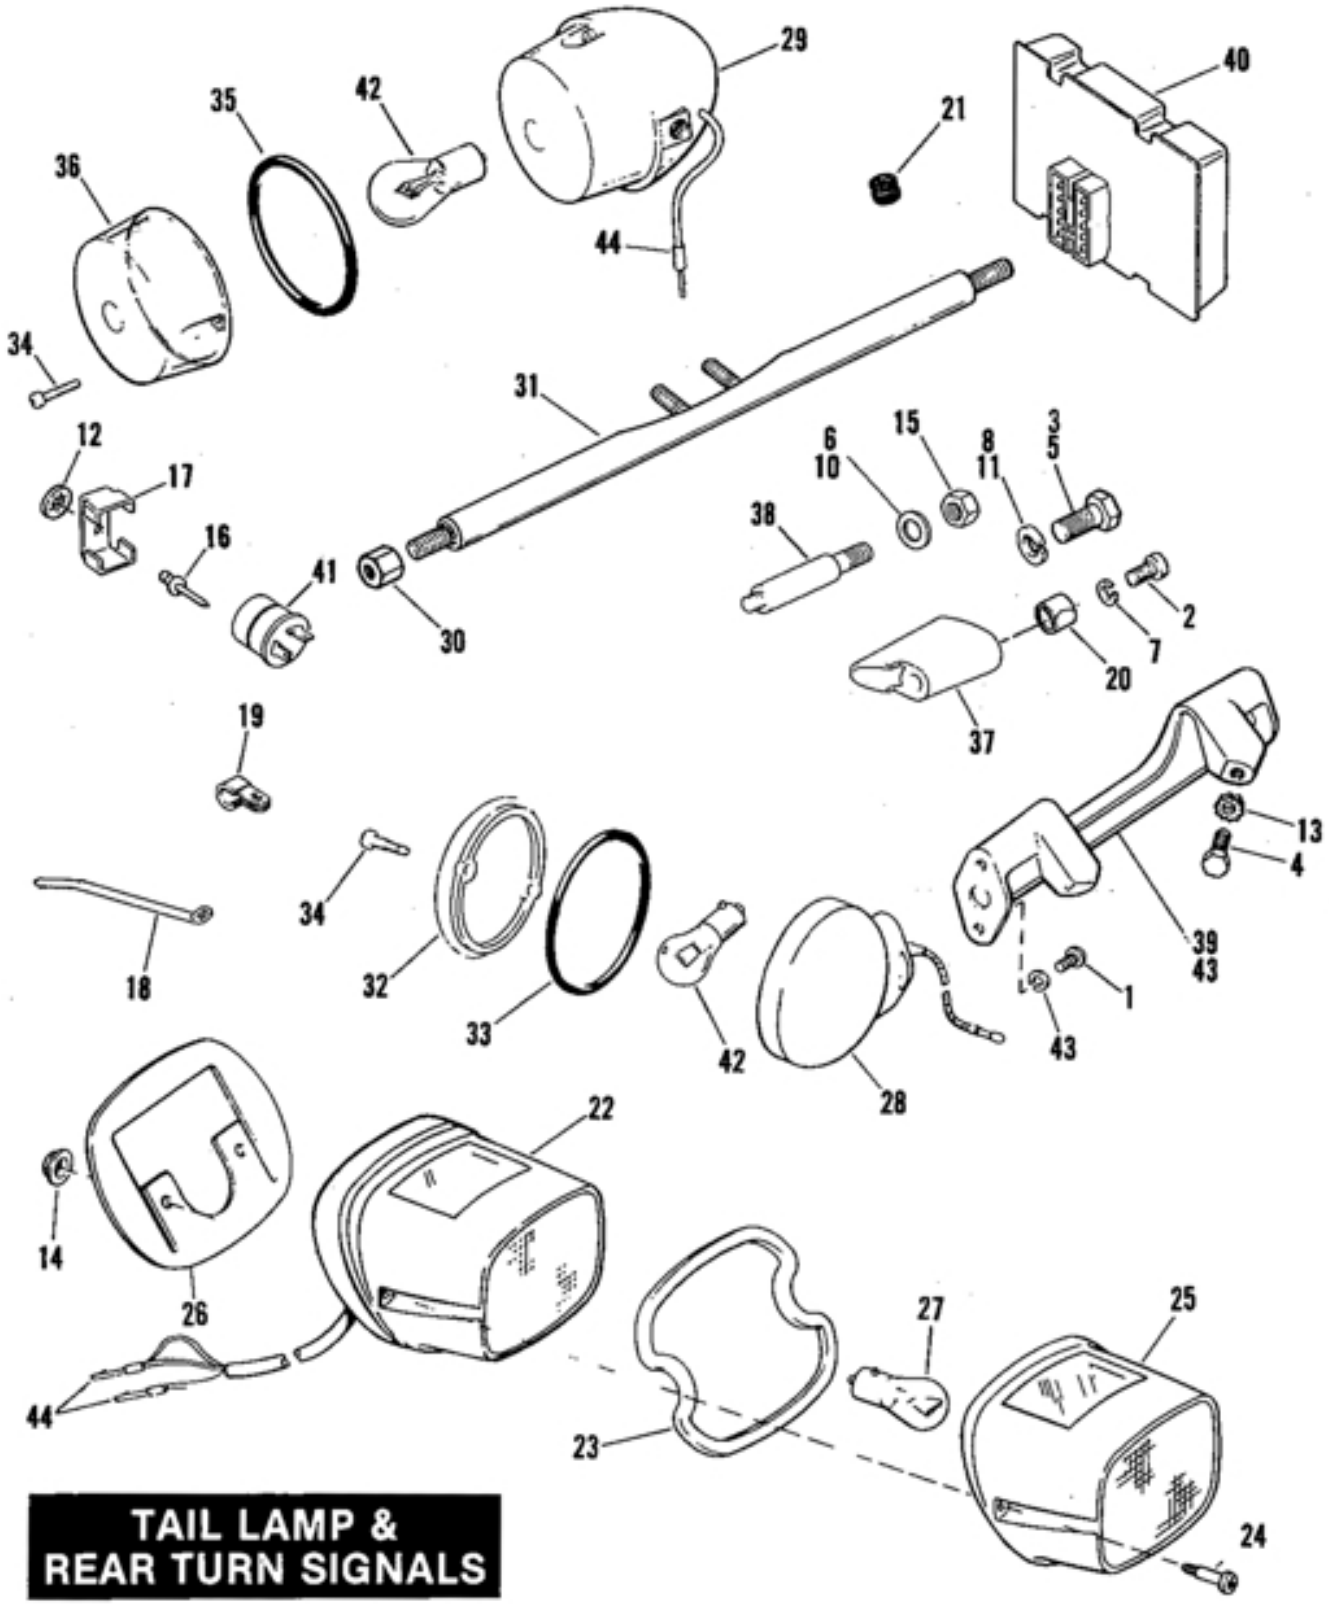


TAIL LAMP & REAR TURN SIGNALS

TAIL LAMP AND REAR TURN SIGNALS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	68451-86	O-RING, turn sig. lens (2)	FXR: 87 to 90-EC Softail: 87 to 90-BJ Touring: 87 to 90-ALL
34	68452-86	SCREW W/O-RING (4)	ALL
35	68455-86	O-RING, turn sig. (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L/M
36	68457-86	LENS, turn sig. (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L/M
37	68480-73	SUPPORT, rear lamp mtg. (2)	Softail: 87 to 90-BH/K/L
38	68493-87	STUD, rear turn sig. (2)	FXR: 87 to 90-EA/B/G/L
38	68493-90	SUPPORT, rear lamp mtg. (2)	Softail: 90 to 90-BM
39	68510-74B	BRACKET, rear turn sig. (1)	Softail: 87 to 90-BJ
40	68537-89C	TURN SIGNAL CANCELLER (1)	Touring: 87 to 90-ALL
41	68543-64B	FLASHER, turn sig. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL
42	68572-64B	BULB, rear turn sig. (2)	ALL
43	68643-83B	BRACKET, rear turn sig. (1)	FXR: 87 to 90-EC Touring: 87 to 90-ALL
44	72039-71	PIN, single socket (2)	ALL
		INTERNATIONAL MODELS ONLY	
	59257-84A	REFLECTOR KIT, HDI only, N/A (1)	FXR: 87 to 89-ALL Softail: 87 to 89-ALL Touring: 87 to 89-ALL
	59710-84	COVER, rear. turn sig. hole (HDI only) (1)	Softail: 87 to 90-BH/K/L
27	68163-84	BULB, tail lamp (HDI only), N/A (1)	ALL
28	68392-90	LAMP W/ WIRE, rear (amber) (HDI only) (2)	FXR: 90 to 90-EC Softail: 90 to 90-BJ Touring: 90 to 90-ALL
28	68401-90	LAMP W/ WIRE, rear (amber) (HDI only) (2)	FXR: 87 to 89-EC Softail: 87 to 90-BJ Touring: 87 to 89-ALL
29	68403-86A	LAMP W/ WIRE, rear (amber) (HDI only) (2)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-BH/K/L/M
32	68506-90	LENS, turn sig. (amber) (HDI only) (2)	FXR: 90 to 90-EC Softail: 90 to 90-BJ Touring: 90 to 90-ALL
36	68507-90	LENS, turn sig. (amber) (HDI only) (2)	FXR: 90 to 90-EA/B/G/L/M Softail: 90 to 90-BH/K/L/M
41	68550-83	FLASHER, turn sig. (HDI only) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL
	68559-87	SPACER, rear (HDI only) (2)	Softail: 87 to 90-BH/K/L
	68578-84A	SUPPORT, rear. turn sig. (HDI only) (2)	Softail: 87 to 90-BH/K/L
42	68163-84	BULB, rear. turn sig. (HDI only) (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

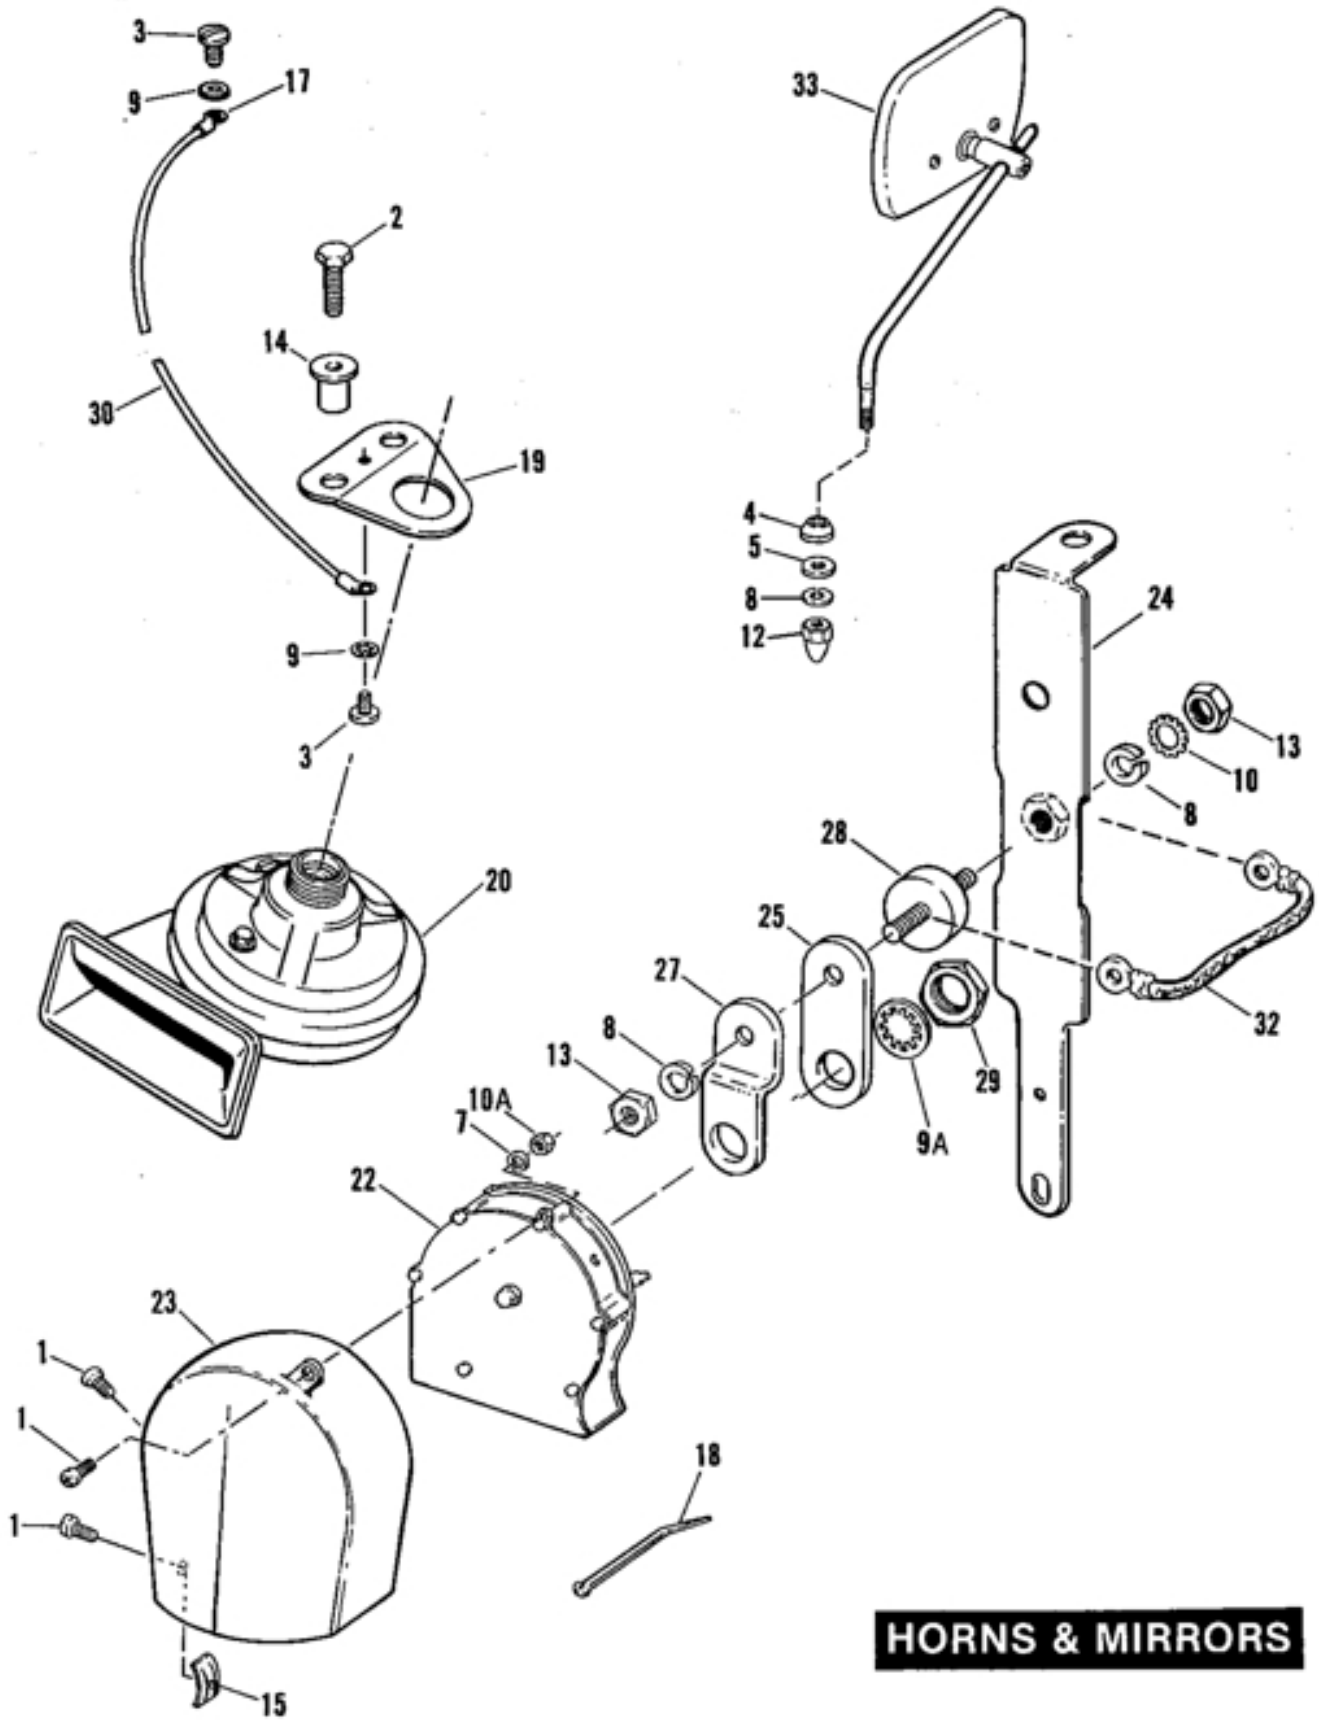

3
9
17
2
14
30
19
9
3
20
33
4
5
8
12
24
13
10
8
28
25
27
8
13
10A
7
22
23
1
1
1
18
15
32
29
9A
HORNS & MIRRORS

HORNS AND MIRRORS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1719W	SCREW (3)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
2	2339	BOLT (2)	FXR: 87 to 90-ALL
3	2731W	SCREW (2)	FXR: 87 to 90-ALL
4	5714	SPACER (2)	ALL
5	6702	WASHER (2)	FXR: 87-ALL Softail: 87-ALL Touring: 87 to 89-ALL
5	6781	WASHER (2)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
7	7015	LOCKWASHER (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
8	7041	LOCKWASHER, 4-87; 2-FXR (3)	ALL
8	7127	LOCKWASHER (3)	FXR: 88 to 90-EA/B/L Softail: 88 to 90-ALL
9	7118	LOCKWASHER (2)	FXR: 87 to 90-ALL
9A	7150	LOCKWASHER (1)	Softail: 89 to 90-ALL
10	7232	LOCKWASHER (1)	Touring: 90 to 90-ALL
10A	7608	NUT (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
12	7736	ACORN NUT, chrome (2)	ALL
13	7748W	NUT (2)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
14	8098	WELL NUT (2)	FXR: 87 to 90-ALL
15	8125	SPEED NUT (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
17	9857	TERMINAL, ring type (2)	FXR: 87 to 90-ALL
18	10006	CABLE STRAP (1)	Softail: 87 to 90-ALL
19	69006-84	BRACKET, horn mounting (1)	FXR: 87 to 90-ALL
20	69007-84	HORN (1)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

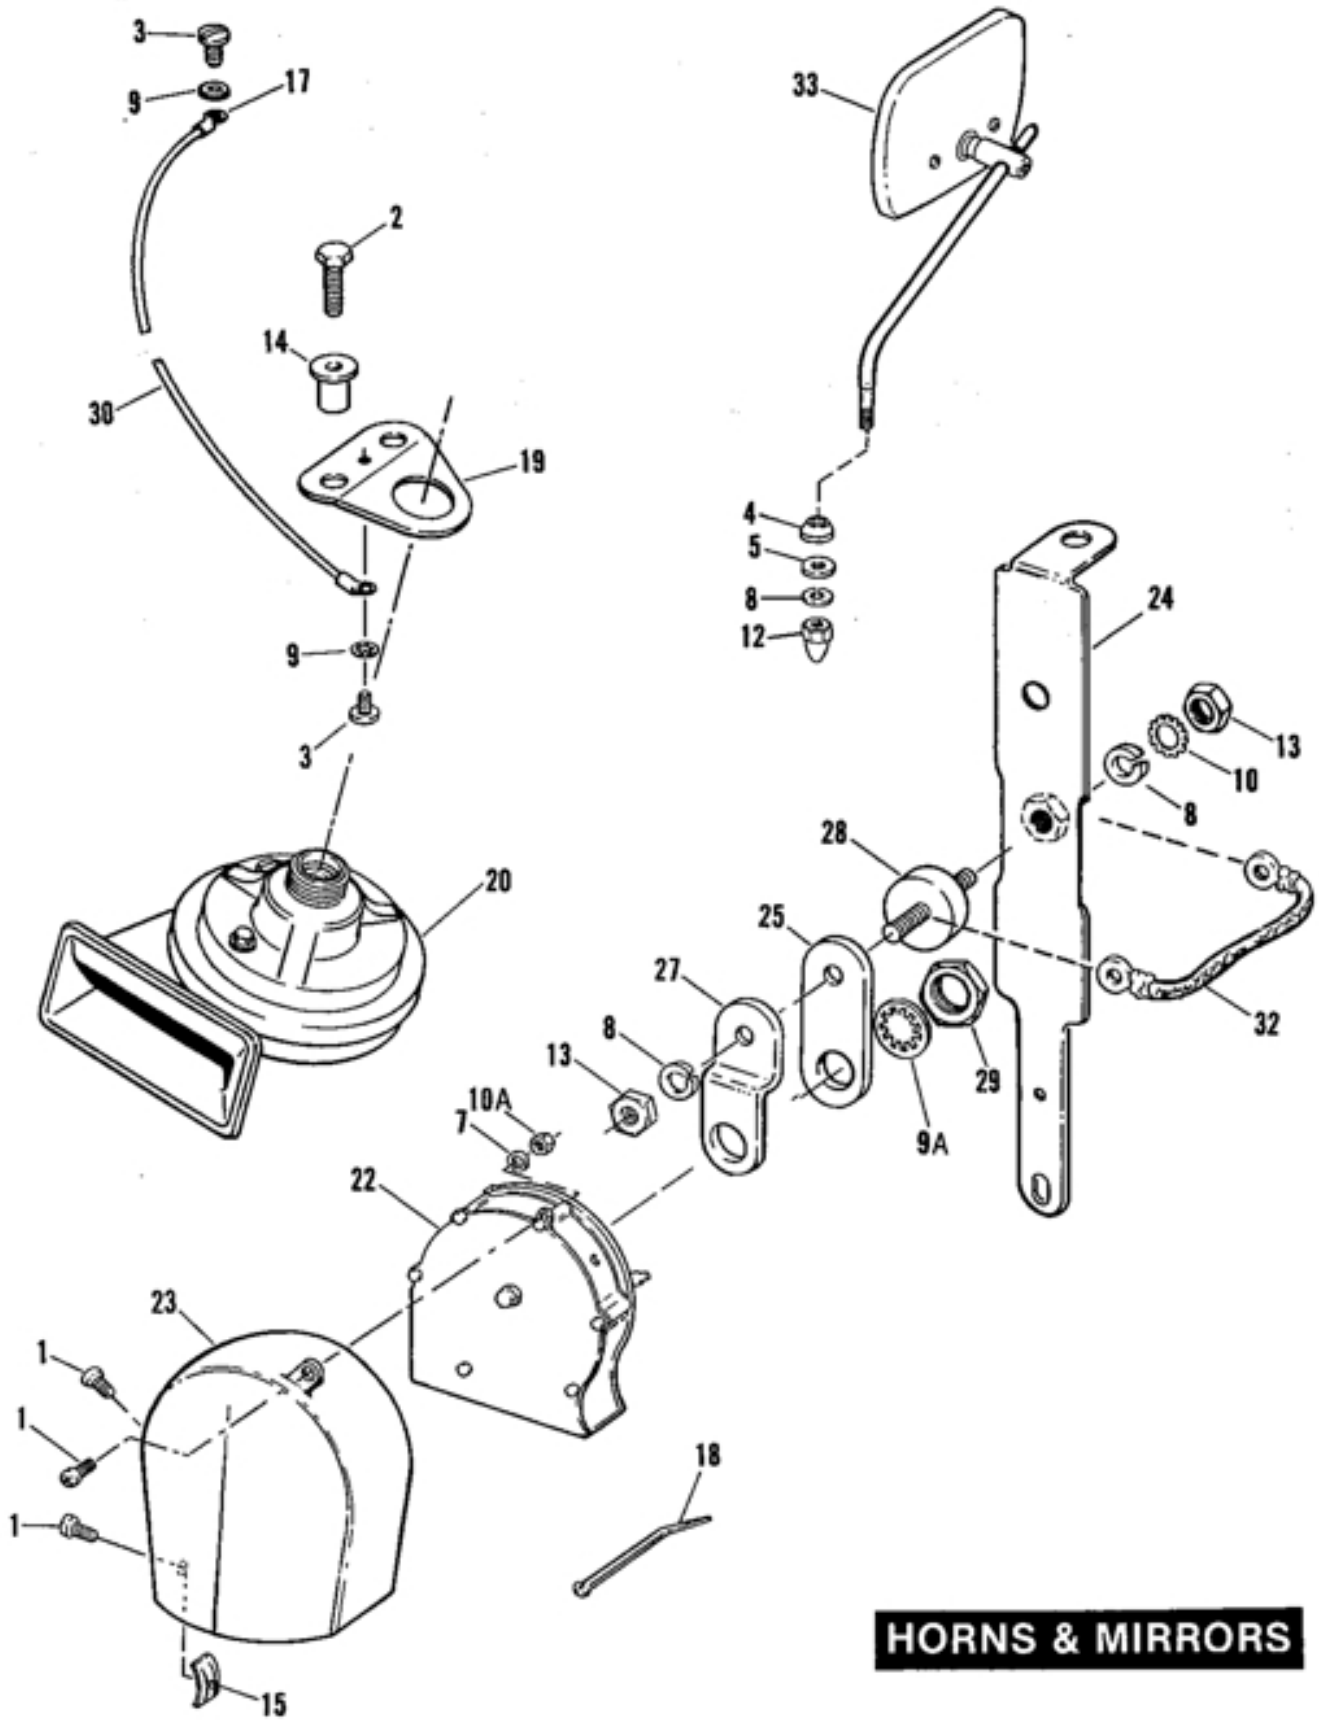

3
9
17
2
14
30
19
9
3
20
33
4
5
8
12
24
13
10
8
28
25
27
8
13
10A
7
22
23
1
1
1
15
18
9A
29
32
HORNS & MIRRORS

HORNS AND MIRRORS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	69016-76A	HORN (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
23	69017-76	COVER, horn (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
24	69031-83A	BRACKET, horn and choke (1)	Touring: 87 to 89-ALL
24	69031-90	BRACKET, horn (1)	Touring: 90 to 90-ALL
25	69117-65	BRACKET, horn mtg. (1)	Touring: 87 to 90-ALL
27	69118-84	BRACKET, horn mtg. (1)	Softail: 87 to 90-ALL
28	69125-65	MOUNT, horn (rubber) (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
29	69149-65	NUT, horn mtg. (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
30	69606-82	GROUND STRAP, horn (1)	FXR: 87 to 90-ALL
32	70016-65A	GROUND STRAP, horn (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
33	91875-82	MIRROR KIT, short-right (1)	FXR: 87-EA/B/C Softail: 87 to 90-ALL Touring: 87-ALL
33	91875-88	MIRROR KIT, short-right-convex (1)	FXR: 88 to 90-EA/B/C/M Softail: 88 to 90-ALL Touring: 88 to 90-ALL
33	91892-82	MIRROR KIT, short-left (1)	FXR: 87-EA/B/C Softail: 87-ALL Touring: 87-ALL
33	91892-88	MIRROR KIT, short-left-convex (1)	FXR: 88 to 90-EA/B/C/M Softail: 88 to 90-ALL Touring: 88 to 90-ALL
33	91902-86	MIRROR KIT, long-left (1)	FXR: 87-EG/L
33	91902-88	MIRROR KIT, long-left-convex (1)	FXR: 88 to 90-EG/L
33	91904-86	MIRROR KIT, long-right (1)	FXR: 87-EG/L
33	91904-88	MIRROR KIT, long-right-convex (1)	FXR: 88 to 90-EG/L

MODEL IDENTIFICATION CODES


DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

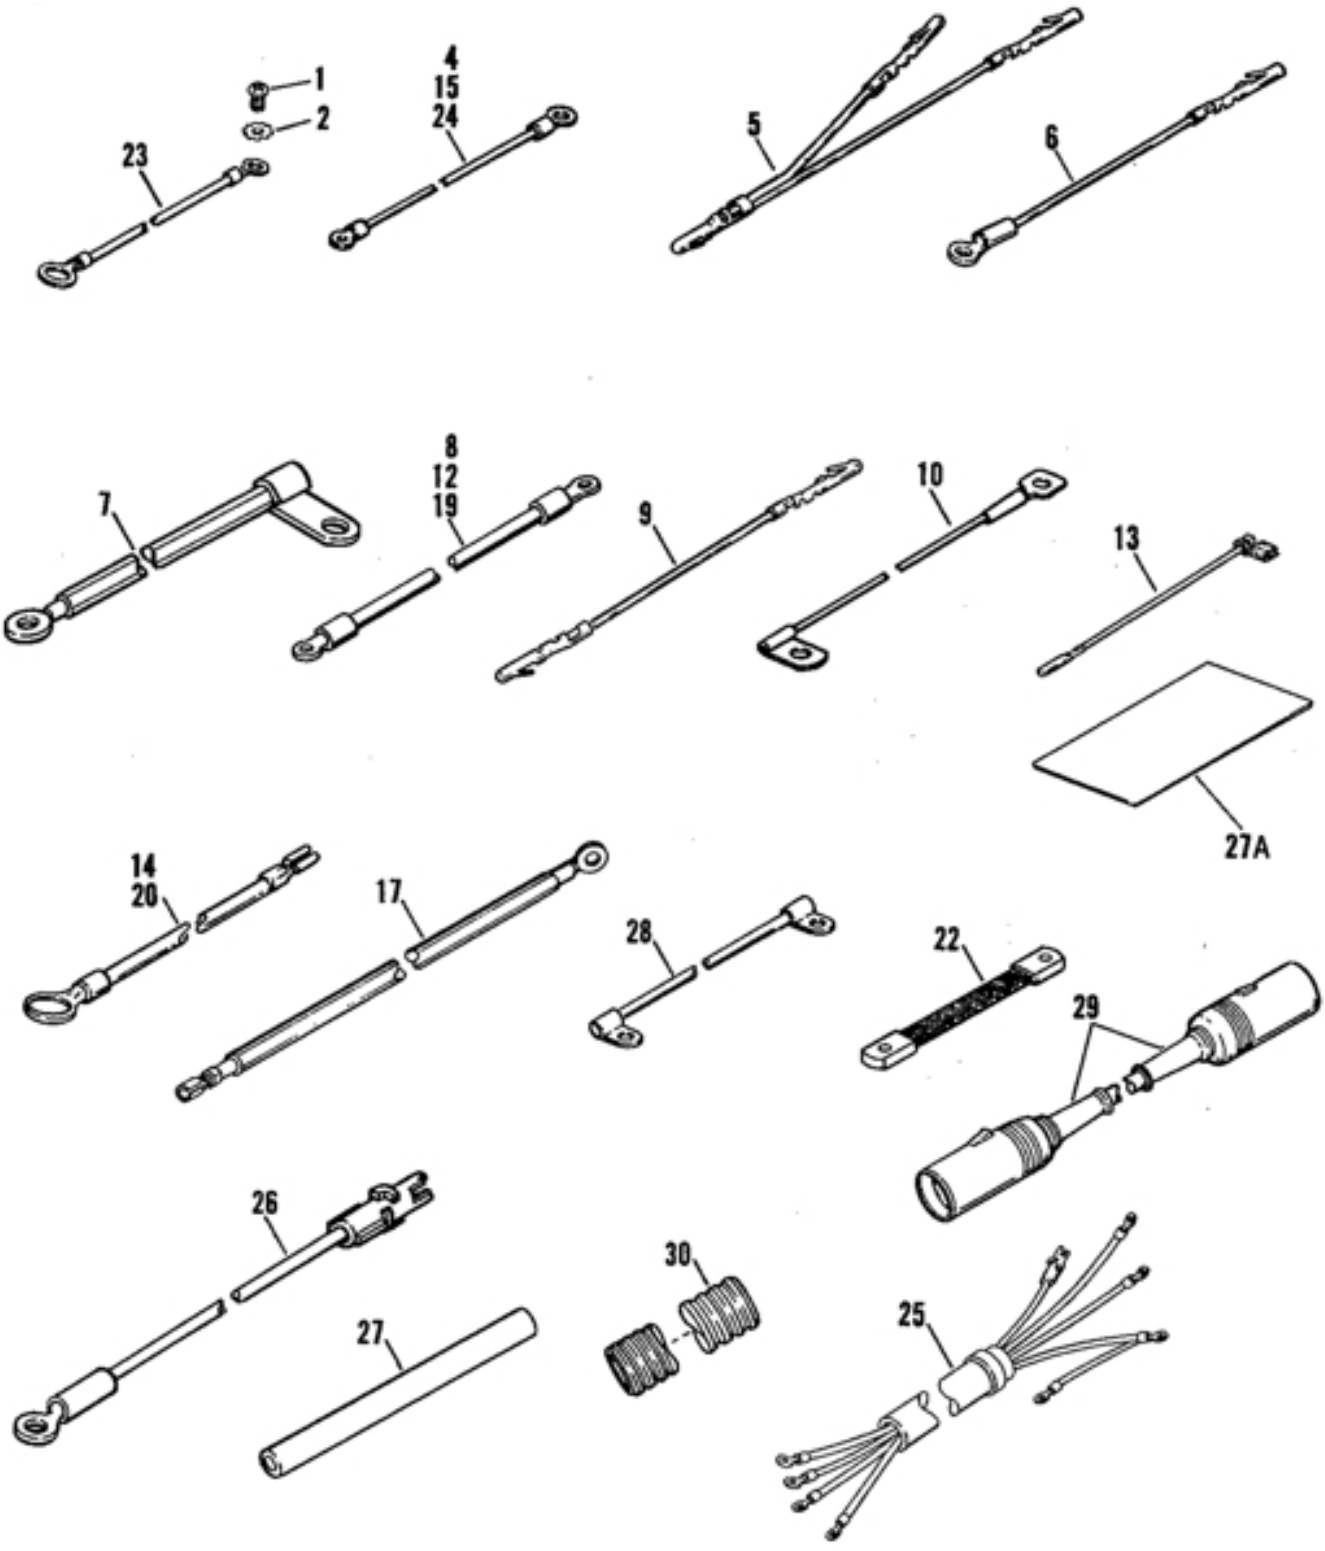
1
2
23
4
15
24
5
6
7
8
12
19
9
10
13
27A
14
20
17
28
22
29
26
27
30
25

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2582	SCREW, headlamp ground (1)	Softail: 87 to 90-ALL
1	2662W	SCREW, handlebar ground (1)	FXR: 90 to 90-ALL Softail: 87 to 90-ALL
1	2770WA	SCREW, batt grd. (1)	Softail: 89 to 90-ALL
2	7220	LOCKWASHER (1)	Softail: 87 to 90-ALL
2	7230	LOCKWASHER, batt grd. (1)	Softail: 89 to 90-ALL
3	58480-88	CABLE ASSY., gauges (1)	Touring: 88 to 90-DB
3	69545-86	MAIN WIRING HARNESS (1)	FXR: 87 and 88-EC
3	69545-89	MAIN WIRING HARNESS (1)	FXR: 89 to 90-EC
3	69551-85	MAIN WIRING HARNESS (1)	FXR: 87 and 88-EA/B/G
3	69551-89	MAIN WIRING HARNESS (1)	FXR: 89 to 90-EA/B/G/M
3	69555-87	MAIN WIRING HARNESS (1)	FXR: 87 and 88-EL
3	69555-89	MAIN WIRING HARNESS (1)	FXR: 89 to 90-EL
3	69600-89	WIRING HARNESS, front section (1)	Touring: 89-DJ
4	69620-86	WIRE ASSY., light to access. cb. (gn), N/A (1)	FXR: 87 to 90-EC
5	70003-83	WIRE ASSY., access. to instr. conn. (o), N/A (1)	FXR: 87 to 90-EA/B/G/M
6	70004-83	WIRE ASSY., access. to fairing (bk), N/A (1)	FXR: 87 to 90-EC
7	70008-86	WIRE ASSY., starter rly. to gnd. (bk) (1)	Softail: 87-ALL
8	70011-84B	WIRE ASSY., battery ground (bk) (1)	Softail: 87 and 88-ALL
8	70011-89	WIRE ASSY., starter rly. to gnd. (bk), N/A (1)	Softail: 89 to 90-ALL
9	70019-86	WIRE ASSY., indicator lamp (be), N/A (1)	FXR: 87 to 90-EA/B/C/G/M
9	70022-83	WIRE ASSY., left fr. turn sig. (1)	FXR: 87 to 90-EA/B/G/M
9	70027-83	WIRE ASSY., right fr. turn sig. (1)	FXR: 87 to 90-EA/B/G/M
9	70029-90	WIRE ASSY., AVC (1)	Touring: 90 to 90-DJ
10	70033-79A	CABLE ASSY., battery (bk) (2)	Touring: 87 and 88-ALL
10	70033-89	CABLE ASSY., battery (bk) (2)	Touring: 89 to 90-ALL
10	70083-89	CABLE ASSY., batt. neg. (1)	FXR: 89 to 90-ALL
12	70034-82	CABLE ASSY., btry. pos. to cb. (r and gn) (1)	FXR: 87 to 90-ALL
13	70049-83	WIRE ASSY., flasher connection (o) (1)	FXR: 87 to 90-EA/B/G/M
14	70050-83	WIRE ASSY., hdlamp. gnd. (bk) (1)	FXR: 87 to 90-EA/B/G/M
15	70062-85	WIRE ASSY., battery negative (bk) (1)	FXR: 87 and 88-ALL
15	70069-65B	WIRE ASSY., battery positive (bk) (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL
15	70073-89	WIRE ASSY., battery pos. (bk) (1)	FXR: 89 to 90-ALL
17	70064-84A	WIRE ASSY., battery positive (bk) (1)	Softail: 87 and 88-ALL
17	70268-92	WIRE ASSY., battery (bk) (2)	Softail: 89 to 90-ALL
19	70100-79A	WIRE ASSY., sol. to start. (bk) (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
20	70106-86	WIRE ASSY., start. to rly. (bk), N/A (1)	Touring: 87-ALL
20	70132-89	WIRING HARNESS, lighter (1)	Touring: 89 to 90-DM
20	70142-86	WIRE ASSY., module gnd. (bk) (1)	Touring: 87 to 90-ALL
20	70158-89	WIRING HARNESS, lighter (1)	Touring: 89 to 90-DP
20	70172-86	WIRING HARNESS, fairing (1)	Touring: 87-DB
20	70172-89	WIRING HARNESS, fairing (1)	Touring: 88 to 90-DB/M
20	70253-88	WIRE ASSY., solenoid, N/A (1)	Touring: 88-ALL
22	70186-82	STRAP, ground (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
23	70191-73A	WIRE ASSY., hdlbar gnd. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
23	70216-87A	MAIN WIRING HARNESS (1)	Softail: 87 and 88-ALL
23	70216-89	MAIN WIRING HARNESS (1)	Softail: 89 to 90-ALL
23	70232-89	WIRING HARNESS, front section (1)	Touring: 89 to 90-DP; 90 to 90-DJ

MODEL IDENTIFICATION CODES


DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

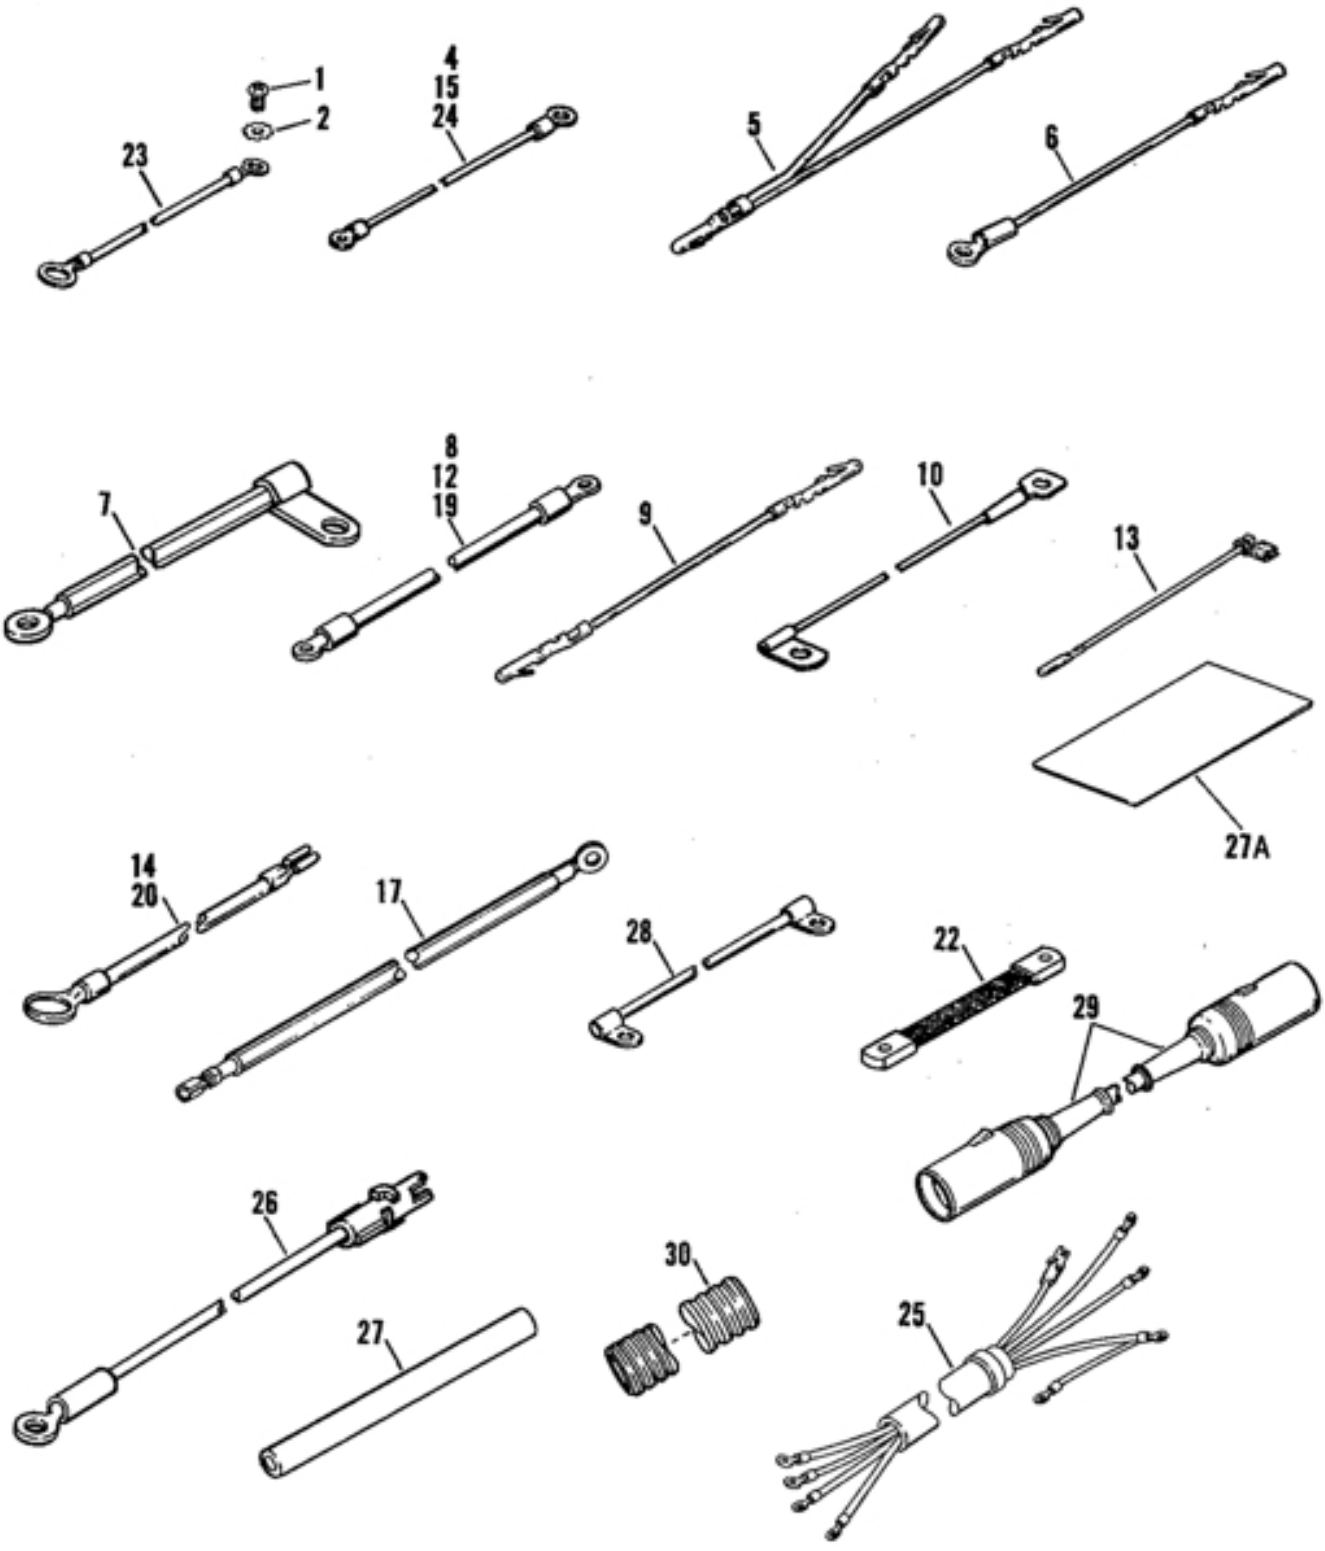
1
2
23
4
15
24
5
6
7
8
12
19
9
10
13
27A
14
20
17
28
22
29
26
27
30
25

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	70236-87	MAIN WIRING HARNESS (1)	Touring: 87-DD
23	70245-89A	MAIN WIRING HARNESS (1)	Touring: 90 to 90-FA
23	70285-87	WIRING HARNESS, front section (1)	Touring: 87 and 88-FA
23	70285-89	WIRING HARNESS, front section (1)	Touring: 89 to 90-FA
23	70980-87	MAIN WIRING HARNESS (1)	Touring: 87-FA
23	70980-88	MAIN WIRING HARNESS (1)	Touring: 88-FA
23	70980-89	MAIN WIRING HARNESS (1)	Touring: 89-FA
23	70985-89A	MAIN WIRING HARNESS (1)	Touring: 89 to 90-DB/J/M/P
24	70262-79	WIRE ASSY., sol. to cb., N/A (1)	Touring: 87 to 90-ALL
24	70263-87	MAIN WIRING HARNESS (1)	Touring: 87-DB/J
24	70263-88	MAIN WIRING HARNESS (1)	Touring: 88-DB/J
25	70277-86	CABLE ASSY., ignition switch, N/A (1)	Touring: 87 and 88-ALL
25	70277-89	CABLE ASSY., ignition switch (1)	Touring: 89 to 90-DB/J/M/P
25	70283-89	CABLE ASSY., ignition switch (1)	Touring: 89 to 90-FA
25	70282-86	WIRING HARNESS, front section (1)	Touring: 87-DB
25	70282-88	WIRING HARNESS, front section (1)	Touring: 88-DB
25	70282-89	WIRING HARNESS, front section (1)	Touring: 89 to 90-DB/M
25	70296-89	CABLE ASSY., fuse board (1)	Touring: 89 to 90-DM/P
26	70328-84	WIRE ASSY., fuel sending unit (y/w) (1)	Touring: 87 to 90-ALL
27	70550-85	CONDUIT, No. 7-htm. (black), N/A (1)	Touring: 87 to 90-ALL
27	70551-69	CONDUIT, 1/8 inch I.D.-htm. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70552-69	CONDUIT, 3/8 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70553-69	CONDUIT, 7/16 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70554-69	CONDUIT, 1/4 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70555-69	CONDUIT, 1/4 inch I.D.-htm. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70556-71	CONDUIT, 5/16 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70558-71	CONDUIT, 1/2 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27	70559-71	CONDUIT, 1/8 inch I.D. (black) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
27A	70937-90	PROTECTIVE TAPE, pos. batt. cable (1)	Softail: 89 to 90-ALL
28	70966-84	WIRE ASSY., btry. pos. to rly. (black) (1)	Touring: 87 to 90-ALL
29	76292-89	CABLE ASSY., console to radio (1)	Touring: 89 to 90-DM/P
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
30	63505-84	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. lg.) (1)	ALL
		INTERNATIONAL MODELS ONLY	
	69556-89	HARNESS, pass and park lamps (HDI only) (1)	Touring: 89 to 90-DJ/P
	70245-89A	MAIN WIRING HARNESS, HDI only (1)	Touring: 89 to 90-FA
	70281-89	HARNESS, park lamps (HDI only) (1)	Touring: 89 to 90-DB/M
	70321-89	MAIN WIRING HARNESS, HDI only (1)	Softail: 89 to 90-BJ

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

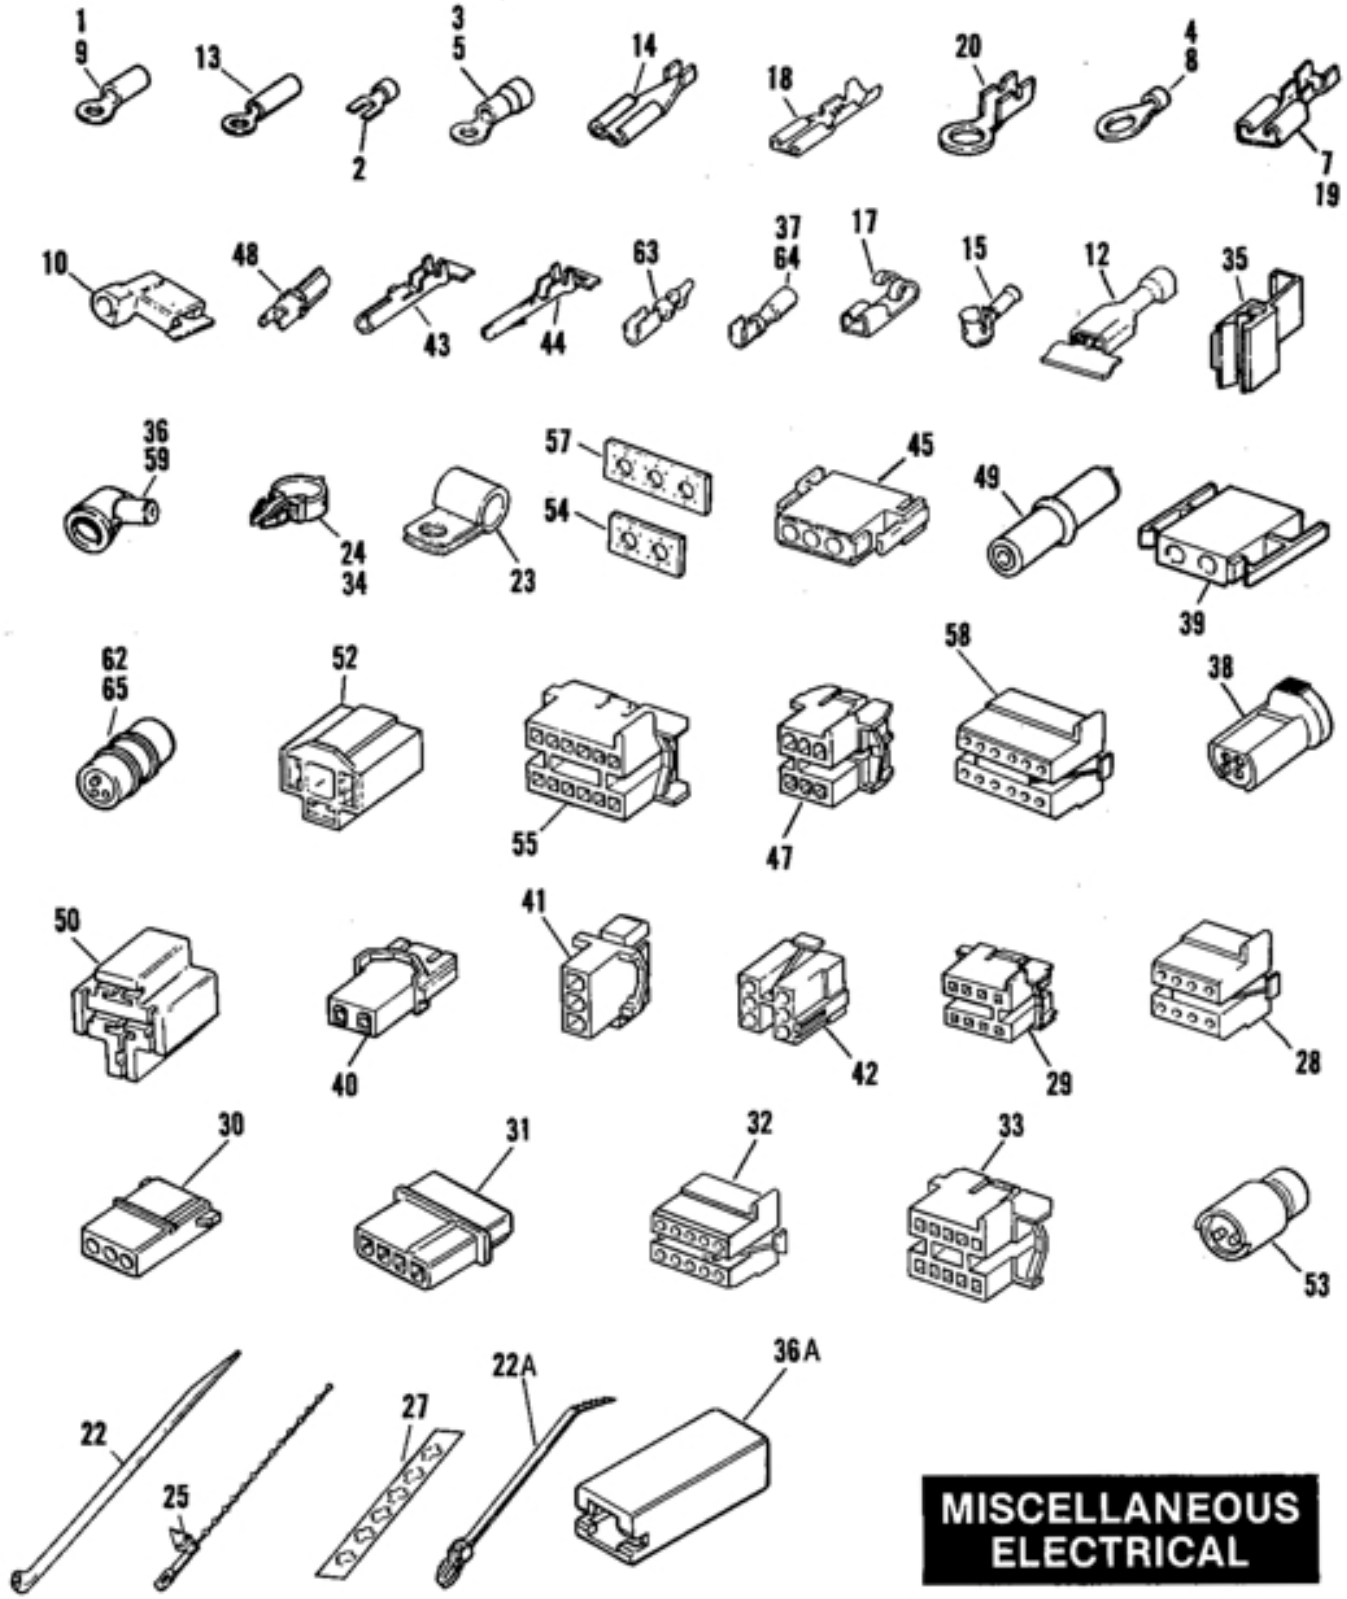

1
9
13
2
3
5
14
18
20
4
8
7
19
10
48
43
44
63
37
64
17
15
12
35
36
59
24
34
23
57
54
45
49
39
62
65
52
55
58
47
38
50
40
41
42
29
28
30
31
32
33
53
22
25
27
22A
36A
MISCELLANEOUS
ELECTRICAL

MISCELLANEOUS ELECTRICAL (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	9856	TERMINAL, ring type-# 6 hole (1)	Softail: 87 to 90-ALL
1	9857	TERMINAL, ring type-# 10 hole (1)	ALL
1	9858	TERMINAL, ring type-1/4 inch dia. hole (1)	FXR: 87 to 90-EA/B/G/M Touring: 87 to 90-ALL
1	9859	TERMINAL, ring type-3/8 inch dia. hole (1)	Touring: 89 to 90-ALL
1	9860	TERMINAL, ring type-3/8 inch dia. hole (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
2	9861	TERMINAL, slotted tongue-# 10 slot (1)	Touring: 87 and 88-ALL
3	9862	TERMINAL, ring type-# 10 hole (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL
3	9863	TERMINAL, ring type-1/4 inch dia. hole (1)	FXR: 87 to 90-EA/B/G Softail: 87 to 90-ALL Touring: 87 to 90-ALL
3	9864	TERMINAL, ring type-5/16 inch dia. hole (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
3	9865	TERMINAL, ring type-3/8 inch dia. hole (1)	Touring: 87 to 90-ALL
3	9869	TERMINAL, ring type-3/8 inch dia. hole (1)	Touring: 88-ALL
4	9866	TERMINAL, ring type-# 10 hole (1)	ALL
4	9868	TERMINAL, ring type-5/16 inch dia. hole (1)	Touring: 89 to 90-ALL
5	9871	TERMINAL, ring type-# 6 hole (1)	Softail: 87 to 90-ALL
7	9875	TERMINAL, female spade-5/16 inch slot (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-ALL
8	9879	TERMINAL, ring type-17/64 inch dia. hole, N/A (1)	FXR: 87 to 90-ALL
9	9892	TERMINAL, ring type-1/2 inch dia. hole (1)	Touring: 87 to 90-ALL
10	9898	TERMINAL, female flag-# 14-16 wire (1)	ALL
12	9900	TERMINAL, connector (1)	ALL
12	9907	TERMINAL, connector (1)	Touring: 89 to 90-ALL
13	9903	TERMINAL, ring type-1/8 inch dia. hole, N/A (1)	Touring: 87 to 90-ALL
14	9904	TERMINAL, female spade-1/8 inch slot (1)	Touring: 87 to 90-ALL
15	9905	TERMINAL, cap type-1/4 inch dia. (1)	ALL
17	9928	TERMINAL, female flag-1/4 inch slot (1)	Touring: 87 to 90-ALL
18	9930	TERMINAL, female spade-3/16 inch slot (1)	Touring: 87 to 90-ALL
19	9937	TERMINAL, female spade-1/4 inch slot (1)	FXR: 87 to 90-ALL Touring: 89 to 90-ALL
19	9938	TERMINAL, female spade-1/4 inch slot (1)	Touring: 89 to 90DM
20	9945	TERMINAL, ring type-5/16 inch dia. hole (1)	Touring: 87 to 90-ALL
22	10006	CABLE STRAP, black (1)	ALL
22	10007	CABLE STRAP, white (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
22	10039	CABLE STRAP (1)	FXR: 87 to 90-EB/G/M Softail: 87 to 90-ALL Touring: 87 to 90-ALL
22	10065	CABLE STRAP (1)	ALL
22A	10073	CABLE STRAP (4)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
23	10077	CLAMP, wiring harness (3)	Touring: 87 to 90-ALL
23	38712-68	CLAMP, wiring harness (2)	Touring: 87 to 90-ALL
23	68659-86	CLAMP (1)	Touring: 89 to 90-ALL
24	56073-83	RETAINER (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
25	70005-70	CABLE STRAP (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

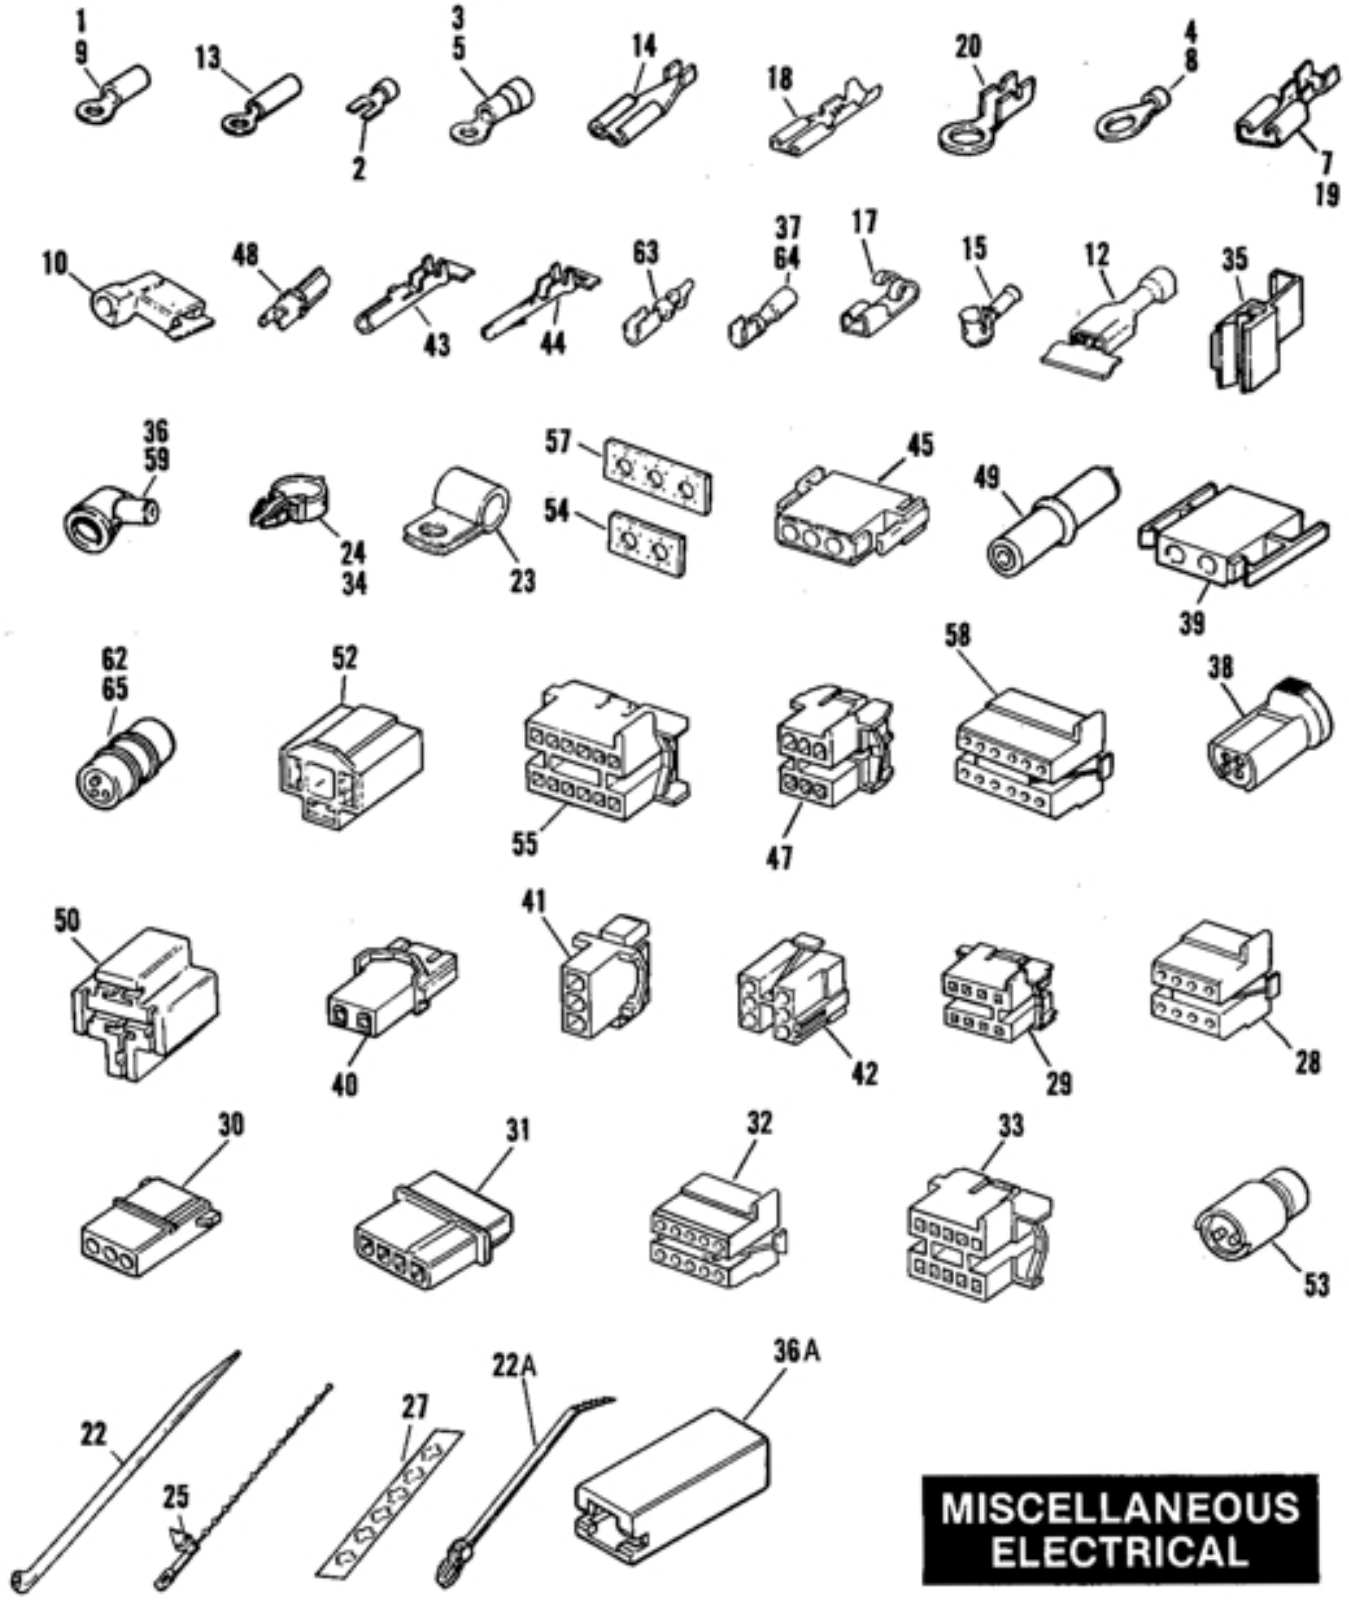

1
9
13
2
3
5
14
18
20
4
8
7
19
10
48
43
44
63
37
64
17
15
12
35
36
59
24
34
23
57
54
45
49
39
62
65
52
55
58
47
38
50
40
41
42
29
28
30
31
32
33
53
22
25
27
22A
36A
MISCELLANEOUS
ELECTRICAL

MISCELLANEOUS ELECTRICAL (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	70043-81	LABEL, battery-positive (1)	FXR: 87 to 90-ALL Softail: 89 to 90-ALL Touring: 87 to 90-ALL
28	70287-81	CONNECTOR, eight socket (2)	FXR: 87 to 90-EC/L Touring: 87 to 90-ALL
29	70288-81	CONNECTOR, eight pin (2)	FXR: 87 to 90-EC/L Touring: 87 to 90-ALL
30	70289-89	CONNECTOR, three socket (1)	Touring: 89 to 90-DM/P
31	70291-89	CONNECTOR, four pin (1)	Touring: 89 to 90-DM
31	70292-89	CONNECTOR, four pin (1)	Touring: 89 to 90-DM/P
32	70293-87	CONNECTOR, ten socket (2)	Softail: 87 and 88-ALL Touring: 89 to 90-ALL
33	70294-87	CONNECTOR, ten pin (1)	Softail: 87 and 88-ALL Touring: 89 to 90-DM/P
34	70345-84	RETAINER, wiring harness (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
35	70576-68	CONNECTOR, wire (1)	FXR: 87 to 90-EA
36	70578-89	BOOT, insulating (1)	FXR: 89 to 90-ALL Softail: 89 to 90-ALL Touring: 89 to 90-ALL
36	70579-65	BOOT, insulating (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 to 90-FA
36A	71774-77	INSULATOR, N/A (1)	Touring: 88-DJ
37	72028-83	SOCKET, ignition module (1)	Touring: 87 to 90-ALL
38	72029-84	PLUG, four wire (1)	Touring: 87 to 90-ALL
39	72034-71	CONNECTOR, two pin (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BJ
40	72035-71	CONNECTOR, two socket (1)	FXR: 87 to 90-EA/B/G/M Softail: 87 to 90-BJ Touring: 89 to 90-ALL
40	72045-90	CONNECTOR, two socket (1)	Touring: 90 to 90-DM/P
41	72036-71	CONNECTOR, three pin (1)	Touring: 88 to 90-DB/J
41	72048-90	CONNECTOR, three pin (1)	Touring: 90 to 90-DM/P
42	72037-71	CONNECTOR, six socket (1)	ALL
43	72038-71	SOCKET, single pin (1)	ALL
44	72039-71	PIN, single socket (1)	ALL
45	72040-71	CONNECTOR, three socket (1)	Touring: 87 to 90-DB/J
47	72041-71	CONNECTOR, six pin (1)	FXR: 87 to 90-ALL Touring: 87 to 90-ALL
48	72043-71	CONNECTOR, single pin (1)	ALL
49	72044-71	CONNECTOR, single socket (1)	FXR: 87 to 90-EA/B/G/L/M Touring: 87 to 90-ALL
50	72046-79	INSULATOR, spade terminals (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

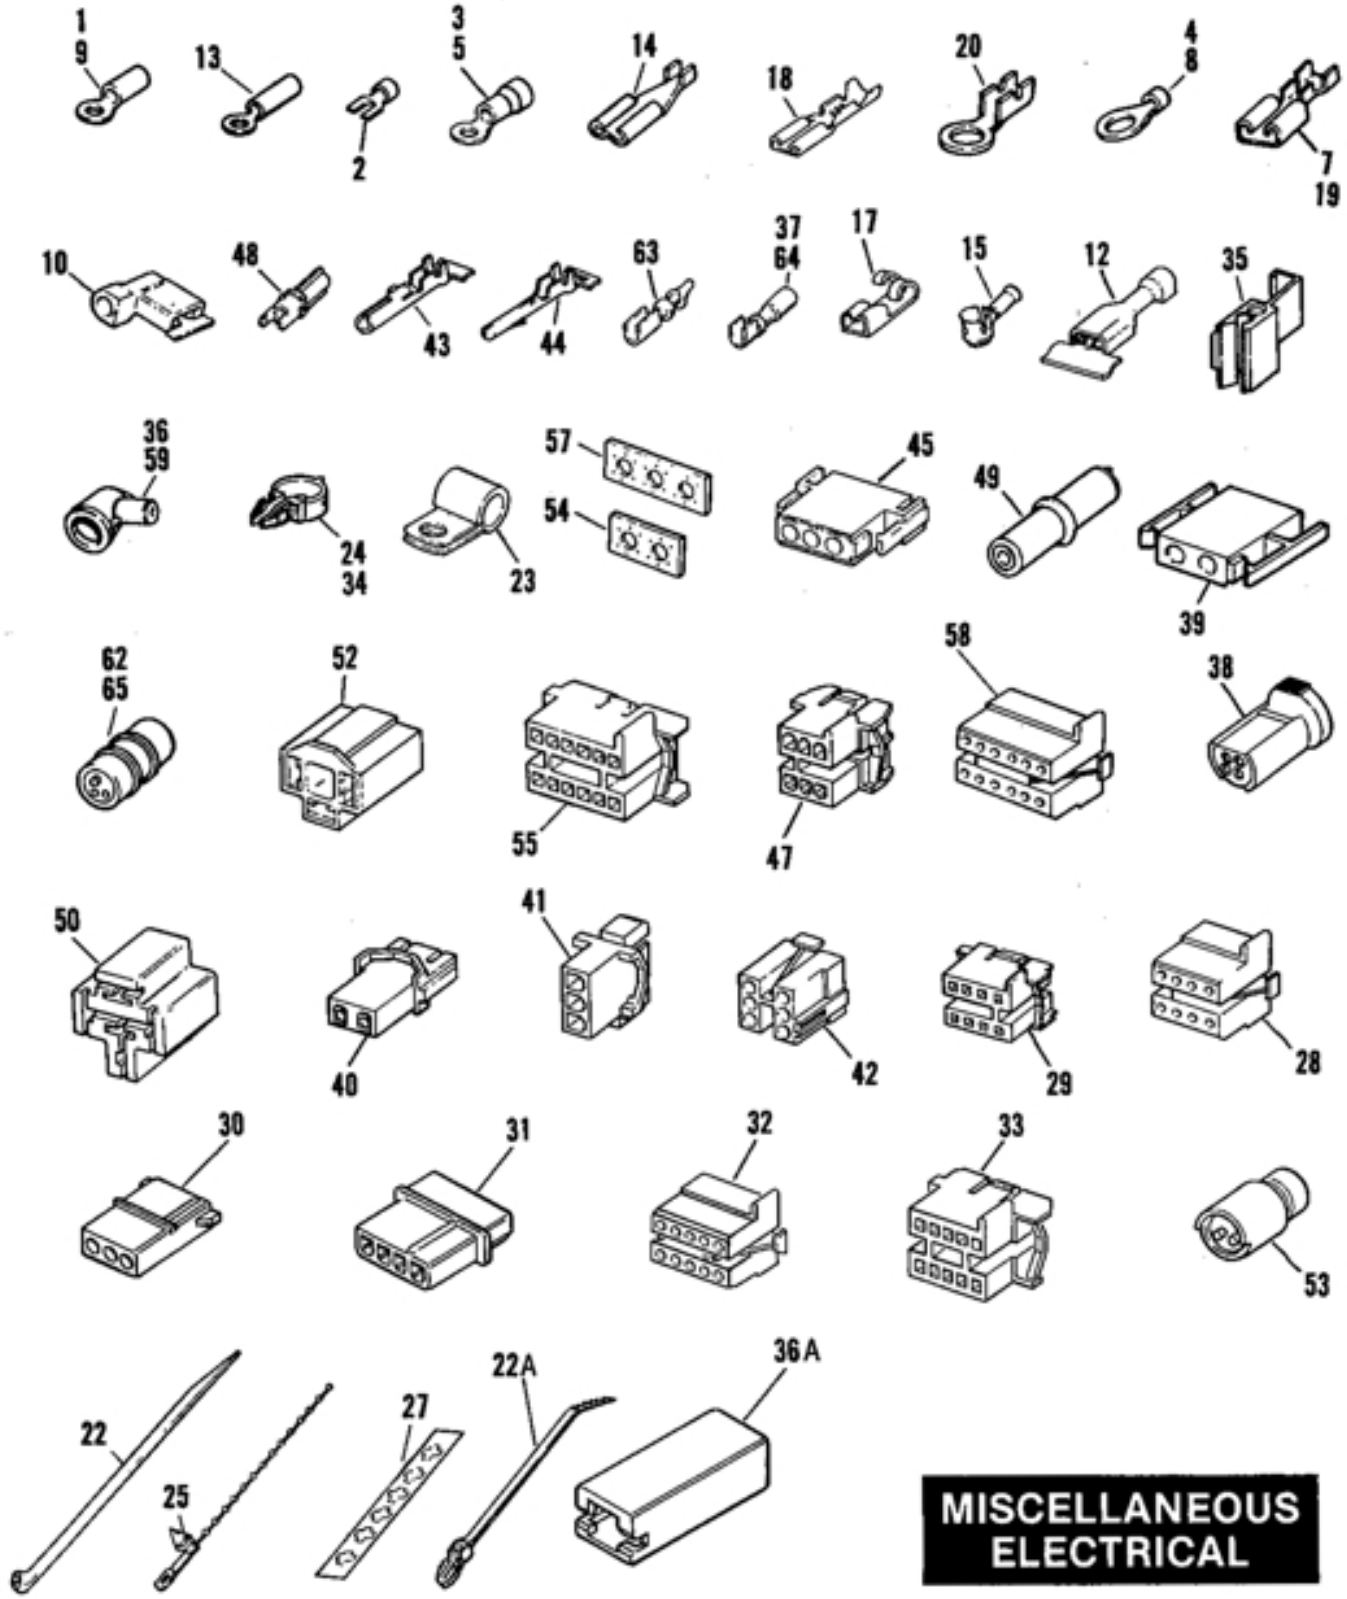

MISCELLANEOUS ELECTRICAL


MISCELLANEOUS ELECTRICAL (3 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
52	72047-71	INSULATOR, spade terminals (1)	FXR: 87 to 90-EA/B/G/L/M
53	72051-77	CONNECTOR, three socket (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 89 to 90-ALL
54	72275-74	CONNECTOR TAB, two terminal (1)	FXR: 87 to 90-ALL Softail: 87 to 90-BJ Touring: 87 to 90-ALL
55	72276-74	CONNECTOR, twelve pin (1)	FXR: 87 to 90-EA/B/C/G/M Softail: 87 to 90-BJ Touring: 87 to 90-ALL
57	72277-74	CONNECTOR TAB, three terminal (1)	FXR: 87 to 90-EA/B/C/G/M Softail: 87 to 90-BJ Touring: 87 to 90-ALL
58	72278-74	CONNECTOR, twelve socket (1)	FXR: 87 to 90-EA/B/C/G/M Softail: 87 to 90-BJ Touring: 87 to 90-ALL
59	74407-86	BOOT, oil sending unit (1)	Touring: 87 to 90-ALL
62	74521-77	CONNECTOR, pin and socket (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
63	74536-77A	SOCKET, single pin (1)	ALL
64	74539-77A	PIN, single socket (1)	ALL
65	90771-79	PLUG, wiring harness (1)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

SOUND SYSTEM 1987

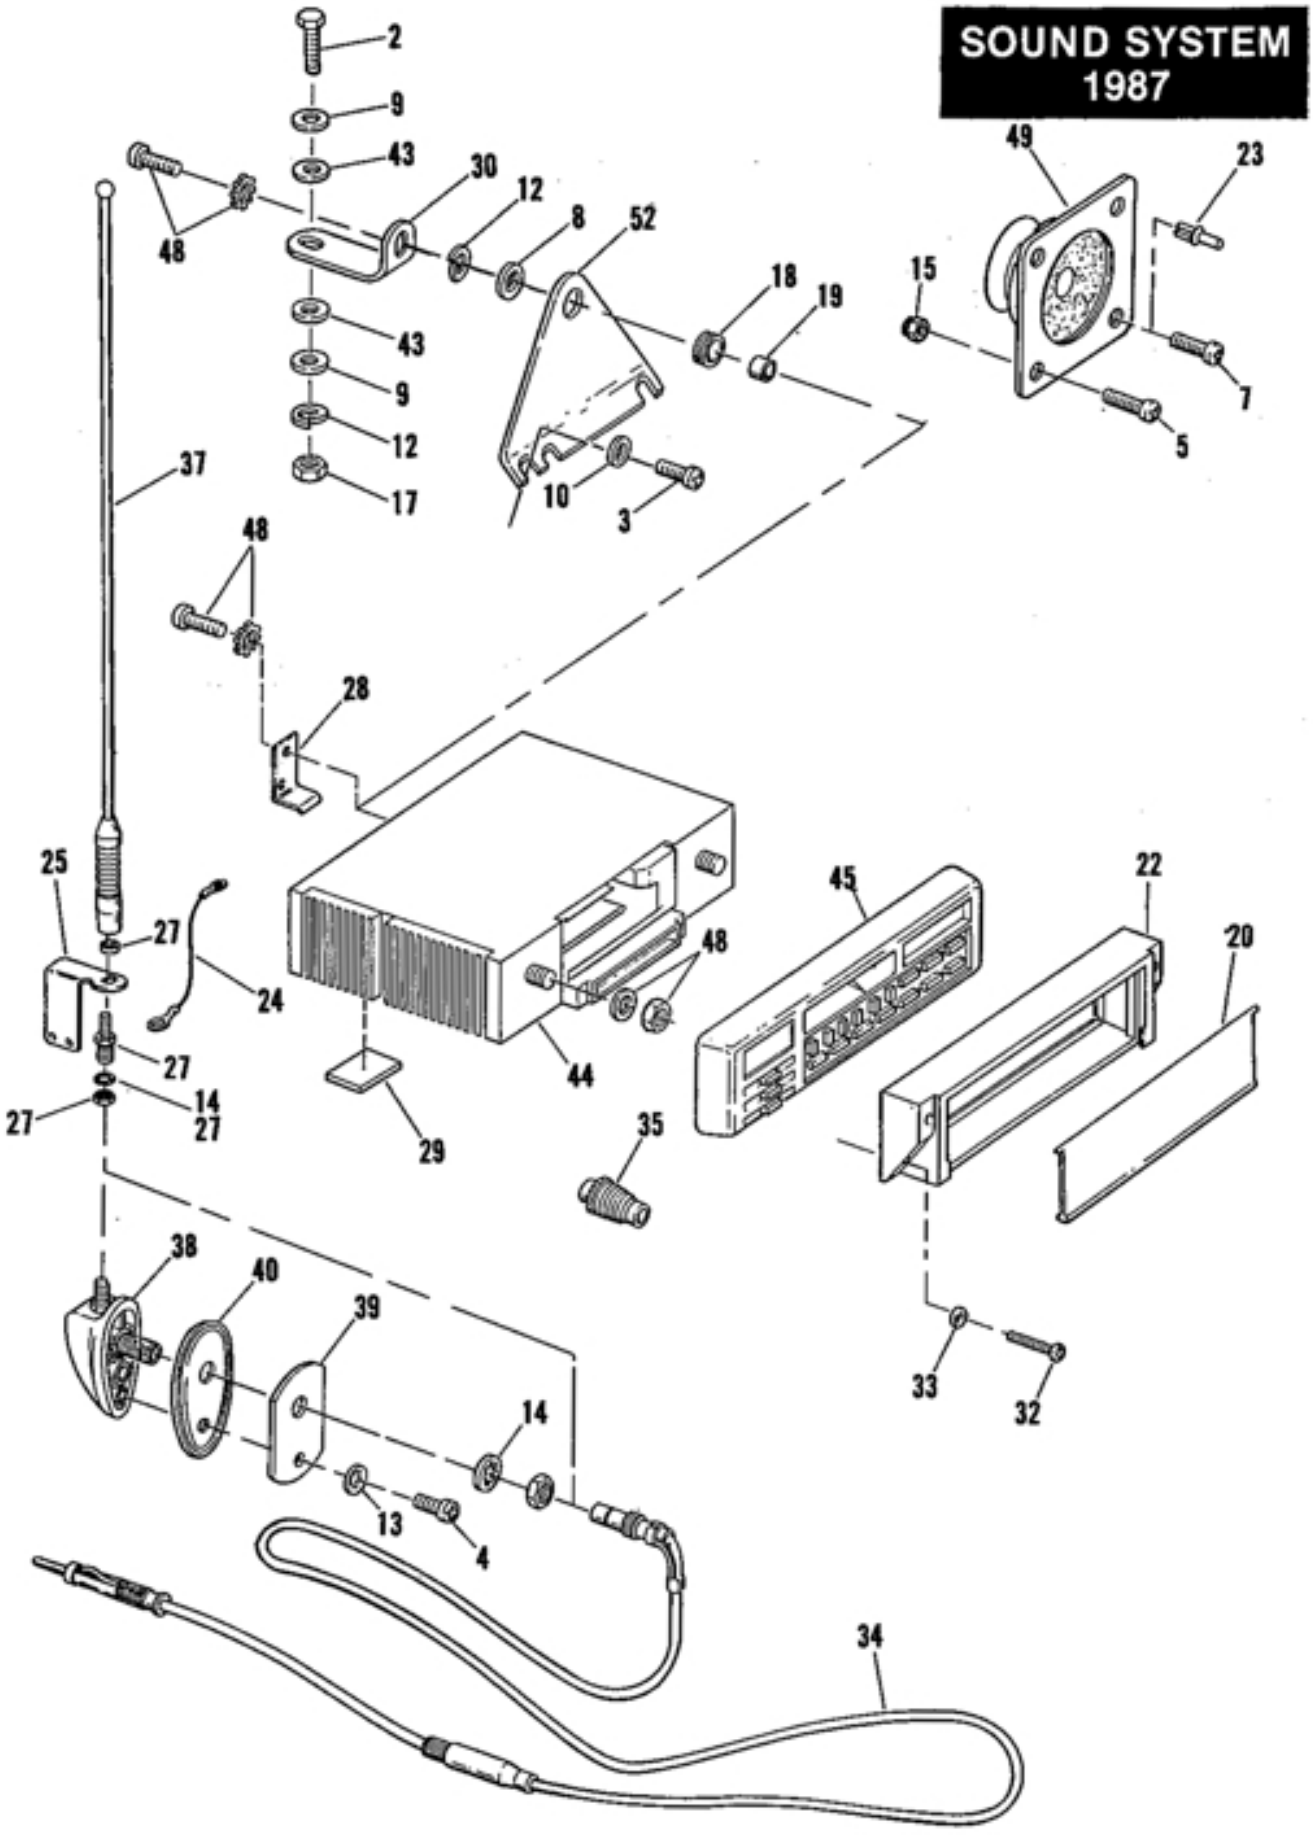


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	2551W	BOLT (1)	Touring: 87-DB
3	2583	SCREW (1)	Touring: 87-DJ
4	2587	SCREW (1)	Touring: 87-DB/J
5	2646	SCREW (8)	Touring: 87-DB
7	5209	SCREW (6)	Touring: 87-DJ
8	6036	WASHER (1)	Touring: 87-DJ
9	6235	WASHER (2)	Touring: 87-DB
10	6716	WASHER (2)	Touring: 87-DJ
12	7036	WASHER (2)	Touring: 87-DB/J
13	7118	LOCKWASHER (1)	Touring: 87-DB/J
14	7129	LOCKWASHER (1)	FXR: 87-EC Touring: 87-DB/J
15	7609W	LOCKNUT (8)	Touring: 87-DB
17	7686	LOCKNUT (1)	Touring: 87-DB
18	11412	GROMMET (1)	Touring: 87-DJ
19	58315-86	SPACER (1)	Touring: 87-DJ
20	58661-86	DOOR, radio (1)	FXR: 87-EC
22	58662-86	HOOD, radio (1)	FXR: 87-EC
23	58709-86	RIVET (8)	FXR: 87-EC
24	70015-87	CABLE ASSY., antenna ground (1)	FXR: 87-EC
	70149-86	WIRING HARNESS, radio (not illus.), N/A (1)	FXR: 87-EC
24	70465-86	WIRE ASSY., antenna ground (1)	FXR: 87-EC Touring: 87-DB/J
25	76163-87	BRACKET, antenna mtg. (1)	FXR: 87-EC
27	76164-87	ANTENNA BASE (1)	FXR: 87-EC
28	76171-86	BRACKET, radio-rear (1)	FXR: 87-EC
29	76172-86	PAD, radio-ear (1)	FXR: 87-EC
30	76240-86	BRACKET, radio-rear (1)	Touring: 87-DB
32	76243-86	SCREW, 4-EC (6)	FXR: 87-EC Touring: 87-DB/J
33	76244-86	WASHER, 4-EC (6)	FXR: 87-EC Touring: 87-DB/J
34	76248-86	CABLE, antenna (1)	FXR: 87-EC Touring: 87-DB/J
35	76249-86	GROMMET, split (2-DB) (1)	FXR: 87-EC Touring: 87-DB/J
37	76250-86A	ANTENNA, radio (1)	FXR: 87-EC Touring: 87-DB/J
38	76252-86	ANTENNA BASE (1)	Touring: 87-DB/J
39	76253-86	REINFORCEMENT PLATE (1)	Touring: 87-DB/J
40	76255-86	GASKET, base (1)	Touring: 87-DB/J
43	77004-80	WASHER, rubber (2)	Touring: 87-DB
44	77008-86A	CHASSIS, radio, N/A (1)	FXR: 87-EC Touring: 87-DB/J
45	77025-86	CONTROL PANEL, w/case, N/A (1)	FXR: 87-EC Touring: 87-DB/J
48	77028-86	MOUNTING KIT (2)	FXR: 87-EC Touring: 87-DB/J
49	77029-86	SPEAKER (2)	FXR: 87-EC Touring: 87-DB/J
52	77035-86	BRACKET, radio-rear (1)	Touring: 87-DJ

See F35B for hood and door assy.-FLHT/C

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

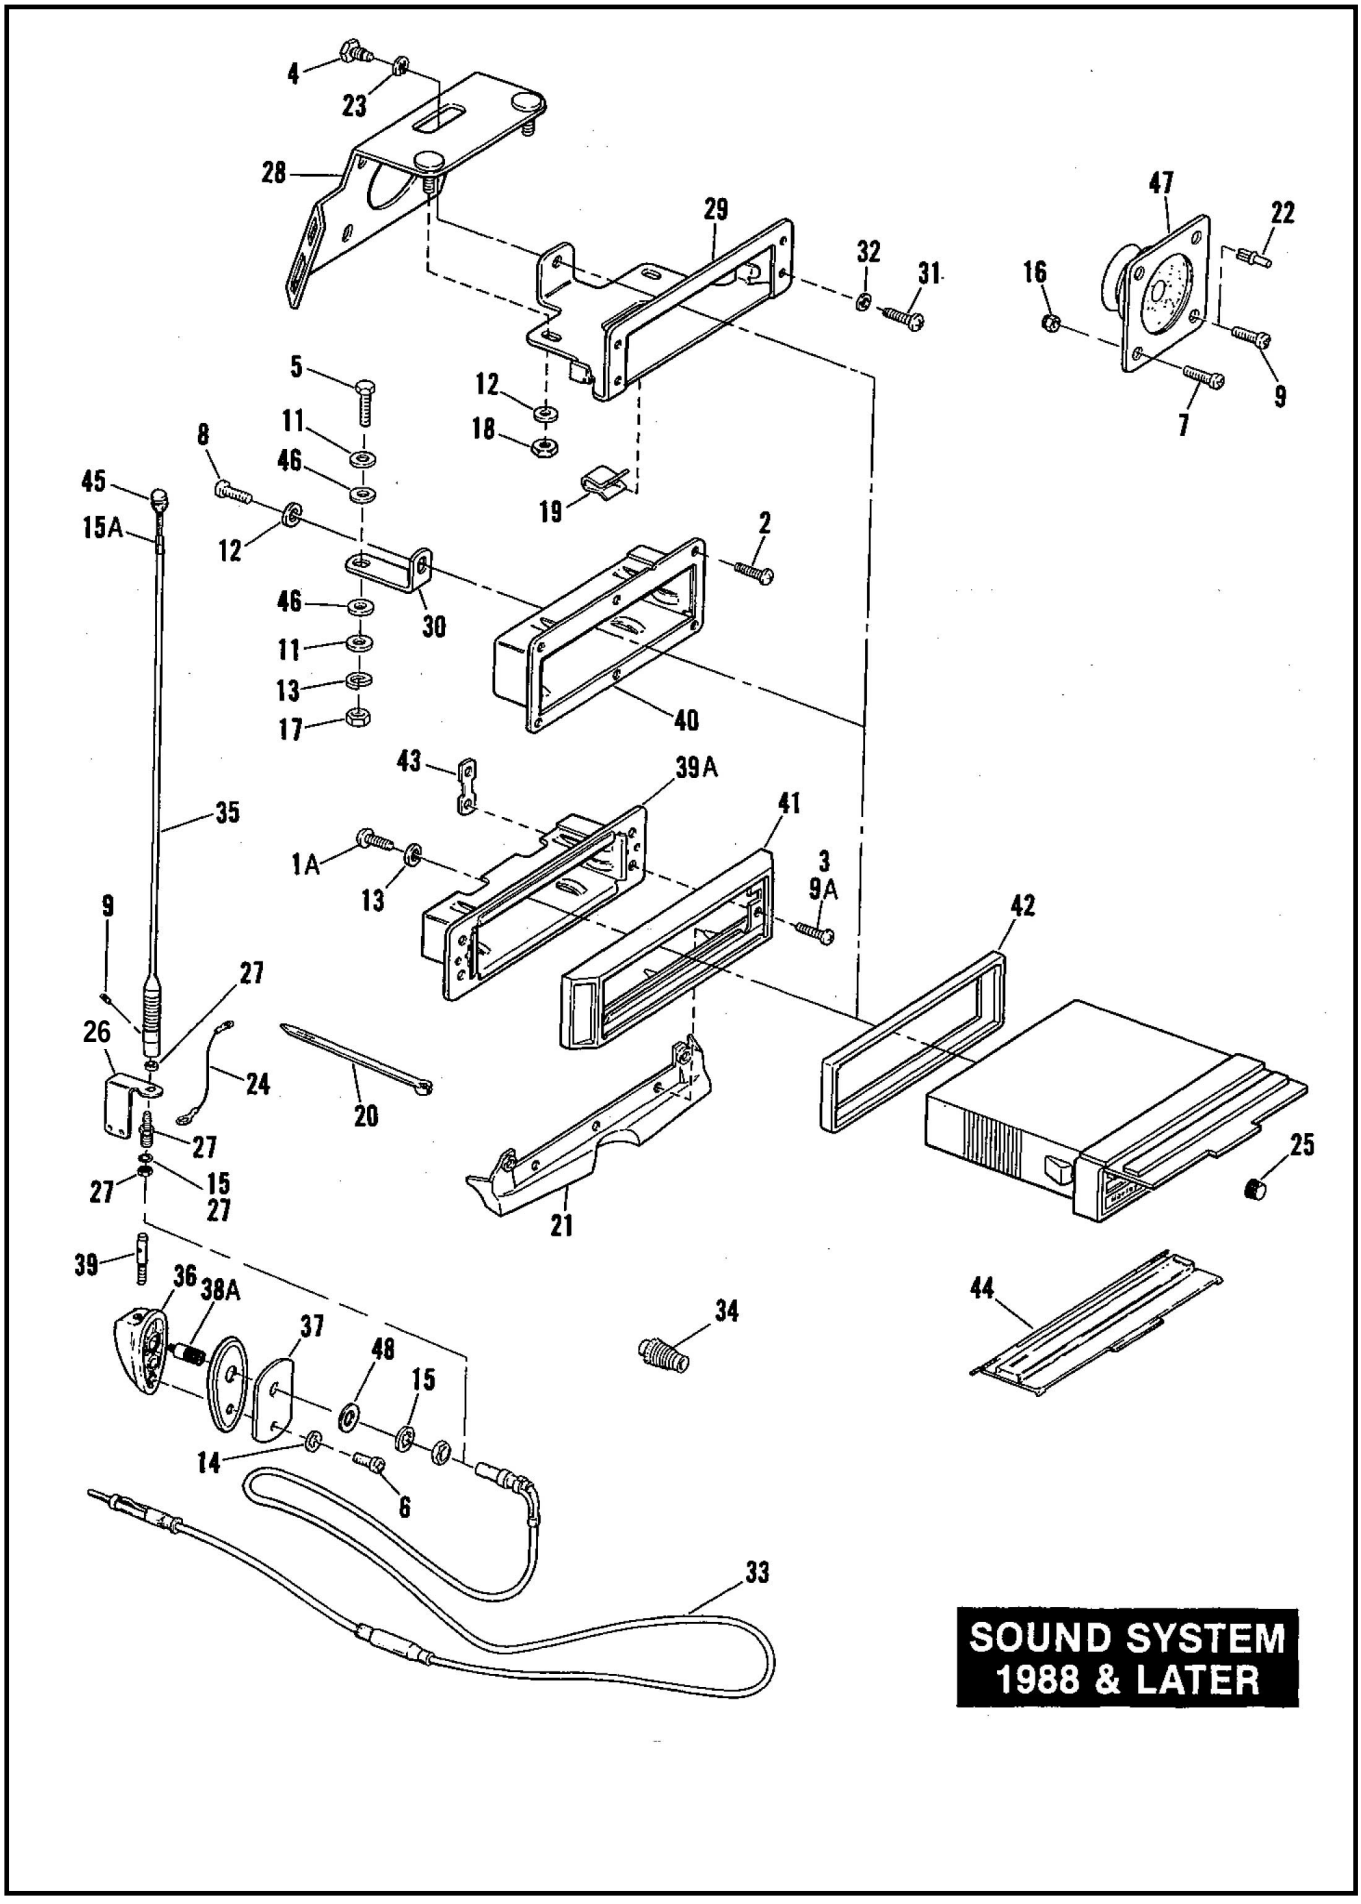

4
23
28
29
32
31
47
22
16
9
7
5
12
18
11
46
8
45
15A
19
2
30
40
13
17
43
39A
41
35
1A
3
9A
42
9
27
26
24
20
25
21
15
39
36
38A
37
48
34
44
14
6
33
SOUND SYSTEM
1988 & LATER

SOUND SYSTEM - 1988 AND LATER (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	922	SCREW, spkr. mtg.-rear (8)	Touring: L89 to 90-DM/P
1A	924	SCREW (1)	Touring: 88 to 90-DJ/P
2	2508	SCREW (6)	Touring: 88 to 90-DB/M
3	2513	SCREW (4)	Touring: 88-DJ/P
4	2537	SCREW, radio mtg. (1)	FXR: 88 to 90-EC
5	2551W	BOLT (1)	Touring: 88 to 90-DB/M
6	2576	SCREW (1)	Touring: 88 to 90-DB/J/M/P
7	2625	SCREW, spkr. mtg.-rear (8)	Touring: E89-DM/P
7	2646	SCREW, spkr. mtg.-front (8)	Touring: 88 to 90-DB/M
8	2774	SCREW (1)	Touring: 88 to 90-DB/M
9	3216	SET SCREW (1)	Touring: 89 to 90-DM/P
9A	4015	SCREW (4)	Touring: 89 to 90-DJ/P
10	5209	SCREW (6)	Touring: 88 to 90-DJ/P
11	6235	WASHER (2)	Touring: 88 to 90-DB/M
12	6333	WASHER (2)	FXR: 88 to 90-EC
13	7036	WASHER, 2-DB (1)	Touring: 88 to 90-DB/J
14	7118	LOCKWASHER (1)	Touring: 88 to 90-DB/J
15	7129	LOCKWASHER (2)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
15A	7566	LOCKNUT (1)	Touring: 89 to 90-DM/P
16	7609W	LOCKNUT (8)	Touring: 88 to 90-DB/M
17	7686	LOCKNUT (1)	Touring: 88 to 90-DB/M
18	7739	LOCKNUT (2)	FXR: 88 to 90-EC
19	8128	U-FASTENER, N/A (1)	FXR: 88 to 90-EC
20	10039	CABLE STRAP (1)	FXR: 88 to 90-EC
21	56107-88	HANDLEBAR COVER, black (1)	Touring: 88 to 90-DJ/P
21	56109-88	HANDLEBAR COVER, brown (1)	Touring: 88 to 90-DJ
22	58709-86	RIVET (8)	FXR: 88 to 90-EC
23	67069-76	RETAINING RING (1)	FXR: 88 to 90-EC
24	70015-87	WIRE ASSY., antenna ground (1)	FXR: 88 to 90-EC
24	70465-86	WIRE ASSY., antenna ground (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
	70160-89	WIRING HARNESS, audio (not illus.) (1)	Touring: 89 to 90-DM/P
	70168-89	WIRE ASSY., radio ground (not illus.) (1)	Touring: 89 to 90-DM
	70296-89	WIRING HARNESS, power (not illus.) (1)	Touring: 89 to 90-DM/P
	70341-89	WIRE ASSY., radio ground (not illus.) (1)	Touring: 89 to 90-DJ/P
	70349-89	WIRING HARNESS, radio spkr. (not illus.) (1)	Touring: 89 to 90-DP
	77026-89	WIRING HARNESS, radio spkrs. (not illus.) (1)	Touring: 89 to 90-DM
25	71809-88	CONTROL KNOB (2)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
26	76163-87	BRACKET, antenna mounting (1)	FXR: 88 to 90-EC
27	76164-87	BASE, antenna (1)	FXR: 88 to 90-EC
28	76170-88	BRACKET, support (1)	FXR: 88 to 90-EC
29	76173-88	BRACKET, mtg. (1)	FXR: 88 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

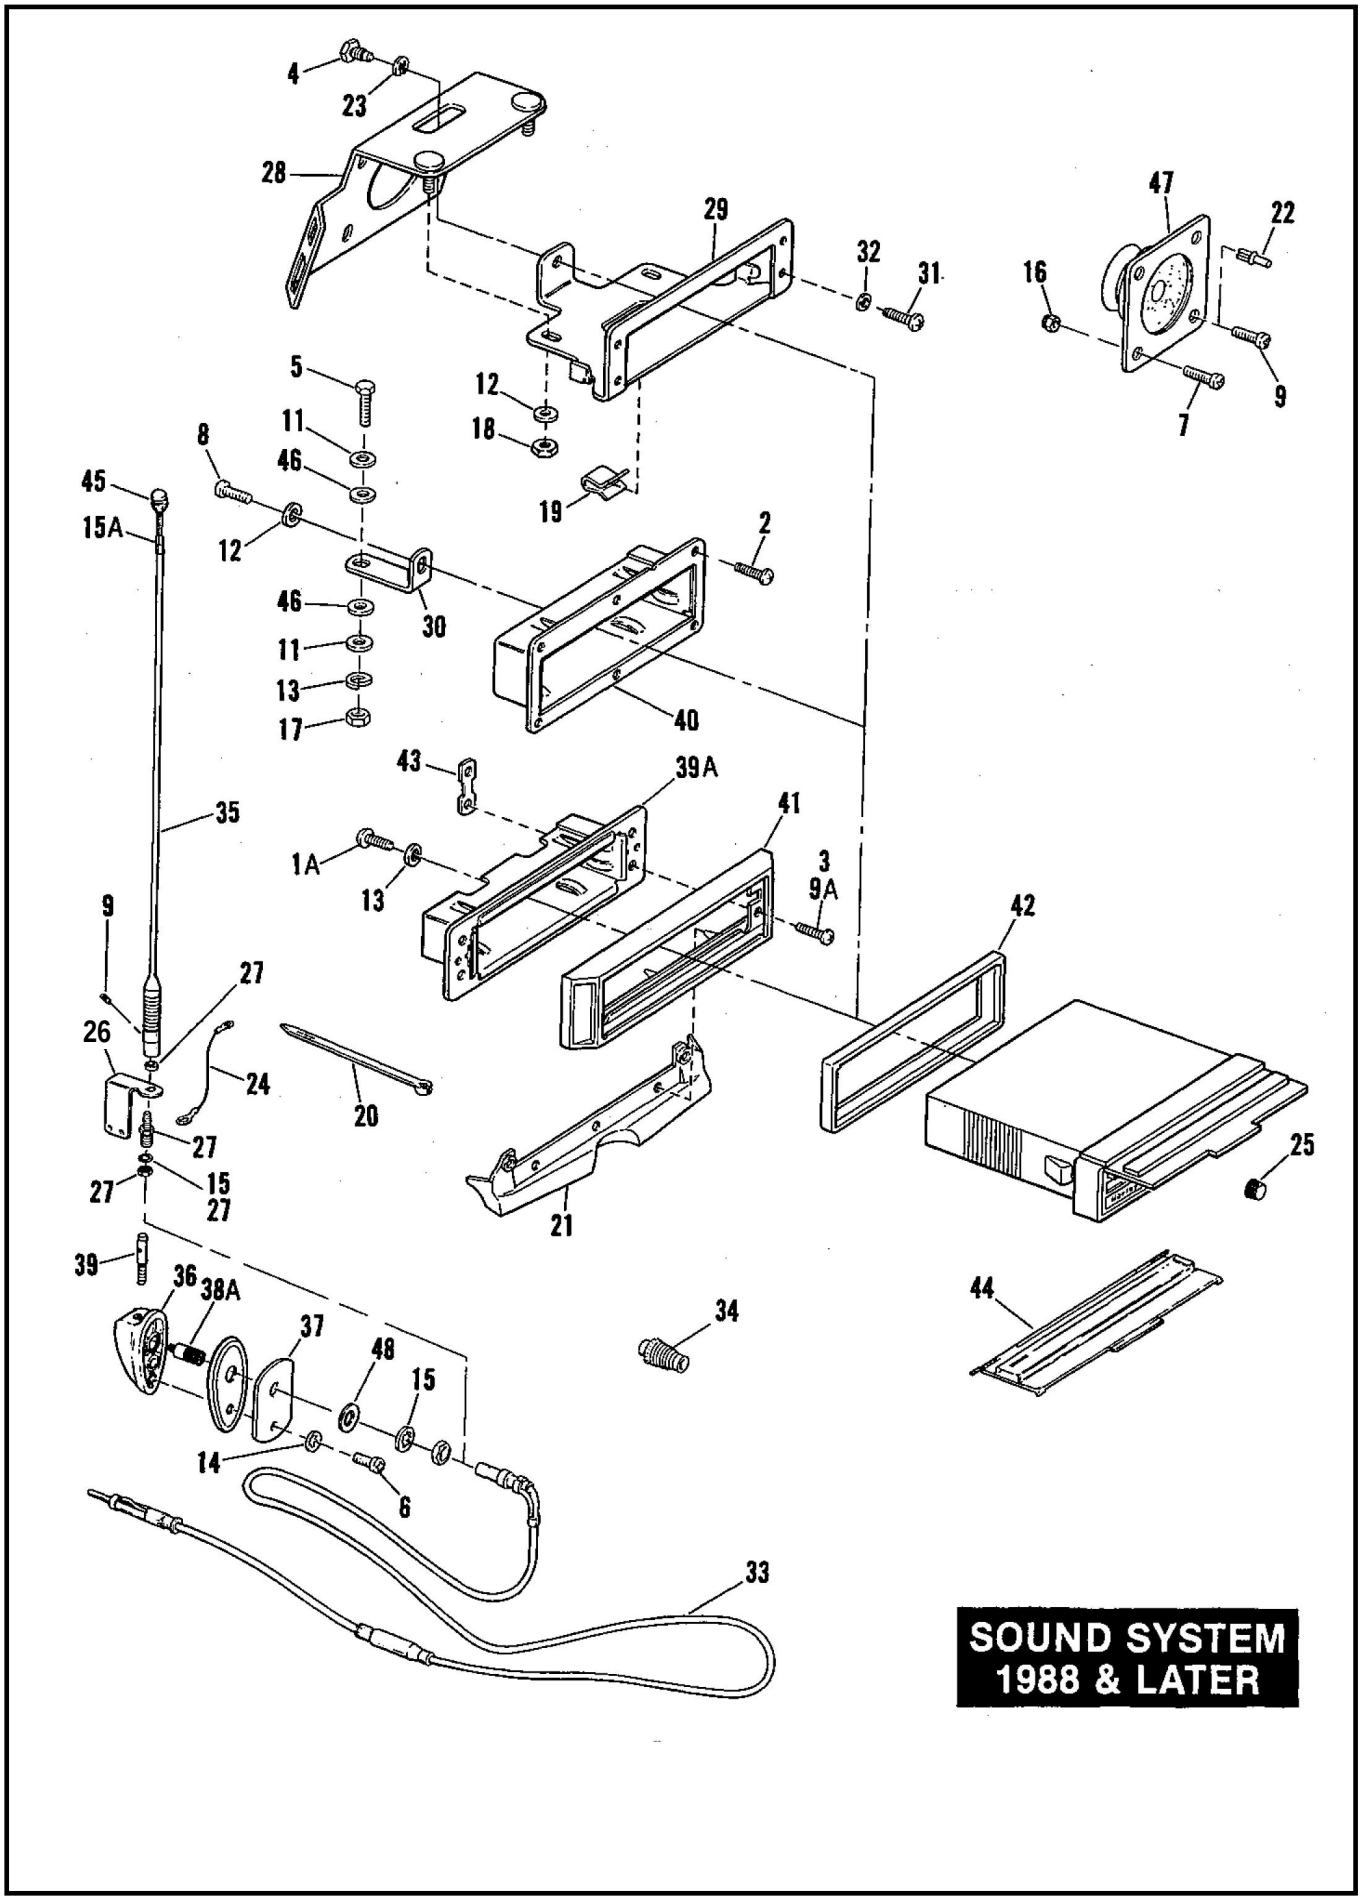
4
23
28
29
32
31
47
22
16
9
7
5
12
18
11
46
8
19
45
15A
12
2
46
30
11
13
17
40
43
39A
41
35
1A
13
3
9A
42
9
27
26
24
20
27
27
15
27
25
21
39
36
38A
37
48
15
44
34
14
6
33
SOUND SYSTEM
1988 & LATER


SOUND SYSTEM - 1988 AND LATER (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	76240-88	BRACKET, rear (1)	Touring: 88 to 90-DB/M
31	76243-86	SCREW (4)	FXR: 88 to 90-EC
32	76244-86	WASHER (4)	FXR: 88 to 90-EC
33	76248-86	CABLE, antenna (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J
33	76295-89	CABLE, antenna (1)	Touring: 89 to 90-DM/P
34	76249-86	GROMMET, split (2-DB) (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
35	76250-86A	ANTENNA, radio (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J
35	76296-89	ANTENNA, radio and C.B. (1)	Touring: 89 to 90-DM/P
36	76252-86	BASE, antenna (1)	Touring: 88 to 90-DB/J
37	76253-86	REINFORCEMENT PLATE (1)	Touring: 88 to 90-DB/J
38	76255-86	GASKET, base (1)	Touring: 88 to 90-DB/J
38A	76258-86	PLUG ASSY. (1)	Touring: 88 to 90-DB/J/M/P
39	76260-89	ANTENNA ADAPTOR (1)	Touring: 89 to 90-DM/P
39A	76274-88	BRACKET, mtg. (1)	Touring: 88 to 90-DJ/P
40	76277-88	BRACKET, mtg. (1)	Touring: 88 to 90-DB/M
41	76280-88	NOSE SEAL (1)	Touring: 88 to 90-DJ/P
42	76281-88	NOSE SEAL (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/M
43	76282-88	NUT PLATE (2)	Touring: 88 to 90-DJ/P
44	76283-88	FRONT COVER (1)	FXR: E88-EC Touring: E88-DB/J/M/P
44	76283-89	FRONT COVER (1)	FXR: L88 to 90-EC Touring: L88 to 90-DB/J/M/P
45	76298-89	TIP ASSEMBLY (1)	Touring: 89 to 90-DM/P
46	77004-80	WASHER, rubber (2)	Touring: 88 to 90-DB/M
47	77029-86	SPEAKER, 4-DM/P (2)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
48	90763-79	WASHER (1)	Touring: 89 to 90-DM/P

For all service and warranty claims on the radio chassis. Contact; RADIO SOUND, INC. 1031 West Main Louisville, KY 40202 Phone: (502) 589-9946

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

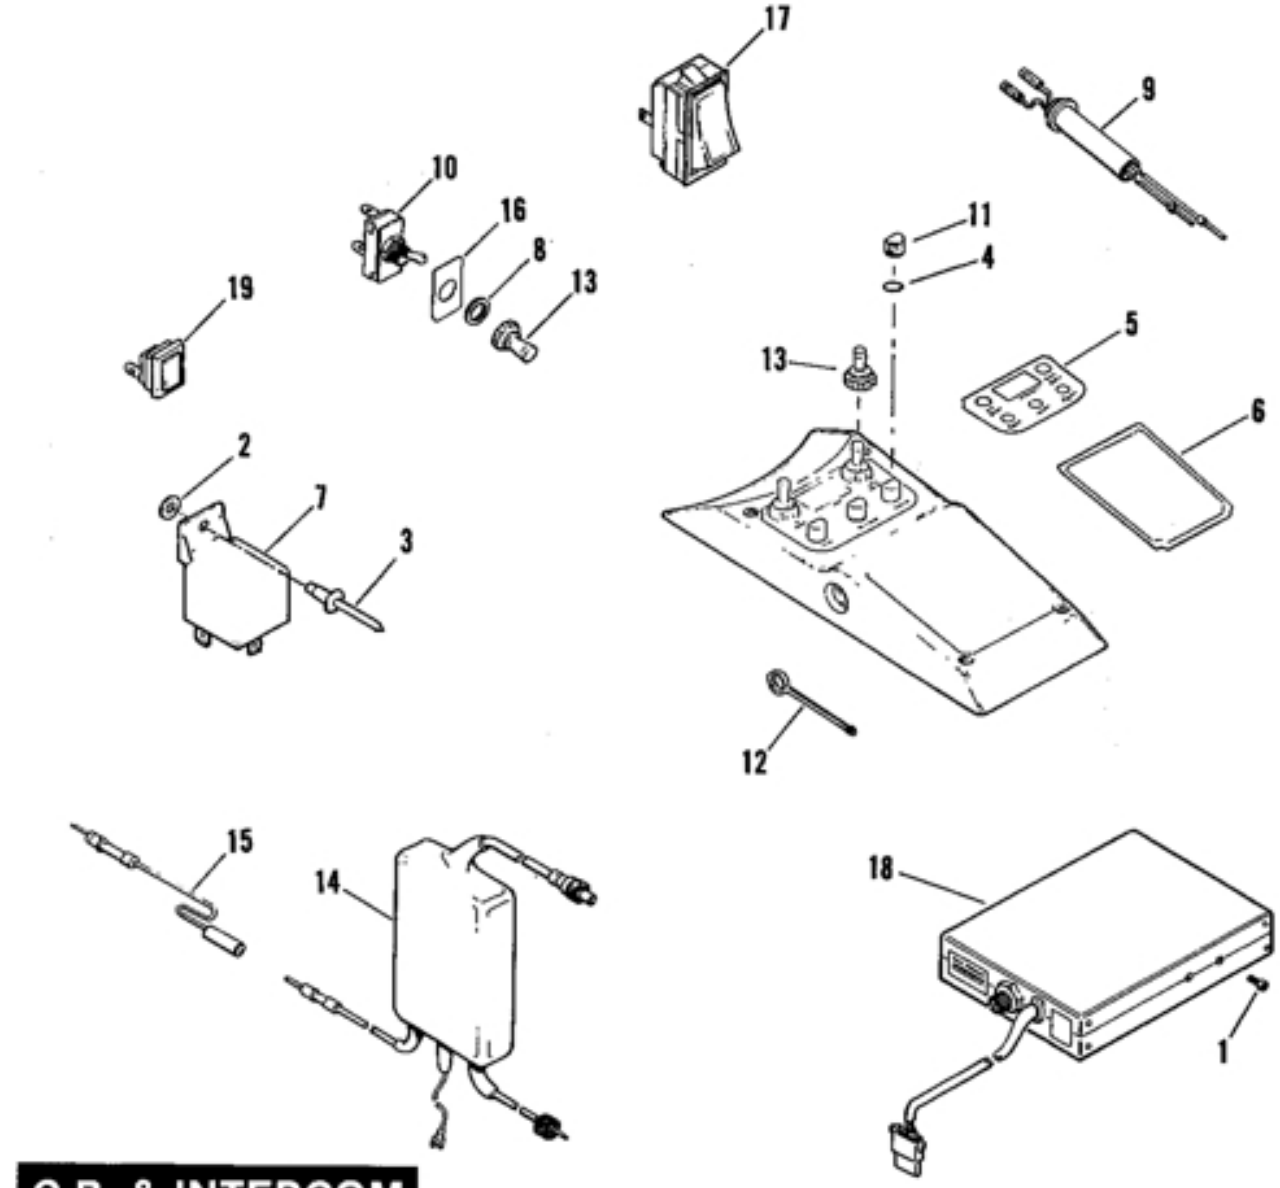


C.B. & INTERCOM SYSTEMS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2787	SCREW, C.B. mtg. (4)	Touring: 89 to 90-DM/P
2	6716	WASHER (2)	Touring: 89 to 90-DM
3	8498	RIVET (2)	Touring: 89 to 90-DM
4	11176	O-RING, N/A (2)	Touring: 89 to 90-DM/P
5	14303-90	TRIM, C.B. console (1)	Touring: 90 to 90-DM/P
7	31506-79B	RELAY (2)	Touring: 89 to 90-DM/P
8	67846-70	NUT (1)	Touring: 89 to 90-DM
9	70642-89	CABLE ASSEMBLY, P.T.T.-C.B. (1)	Touring: 89 to 90-DM/P
10	71521-89	SWITCH, speakers (1)	Touring: 89 to 90-DM
11	71813-89	KNOB, radio (1)	Touring: 89 to 90-DM/P
12	72059-89A	PLUG, weather (1)	Touring: 89 to 90-DM/P
13	74408-89	BOOT, toggle switch (4)	Touring: 89 to 90-DM/P
14	76294-89	SPLITTER AND CABLES, antenna (1)	Touring: 89 to 90-DM/P
15	76295-89	CABLE ASSEMBLY, splitter to radio (1)	Touring: 89 to 90-DM/P
16	76297-89	LABEL, speaker (1)	Touring: 89 to 90-DM
17	77092-89	SWITCH, spkr. control (on fairing) (1)	Touring: 89 to 90-DP
18	77093-89	C.B. CHASSIS ASSEMBLY (1)	Touring: 89 to 90-DM/P
19	77100-89A	HANDLEBAR SWITCH, P.T.T. (1)	Touring: 89 to 90-DM/P
		INTERNATIONAL MODELS ONLY	
5	14304-90	TRIM, intercom console (Japan only) (1)	Touring: 90 to 90-DM/P
6	14305-90	TRIM, console (Japan only) (1)	Touring: 90 to 90-DM/P

For all service and warranty claims on the C.B./intercom pod or C.B. chassis. Contact; RADIO SOUND, INC. 1031 West Main Louisville, KY 40202 Phone: (502) 589-9946

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

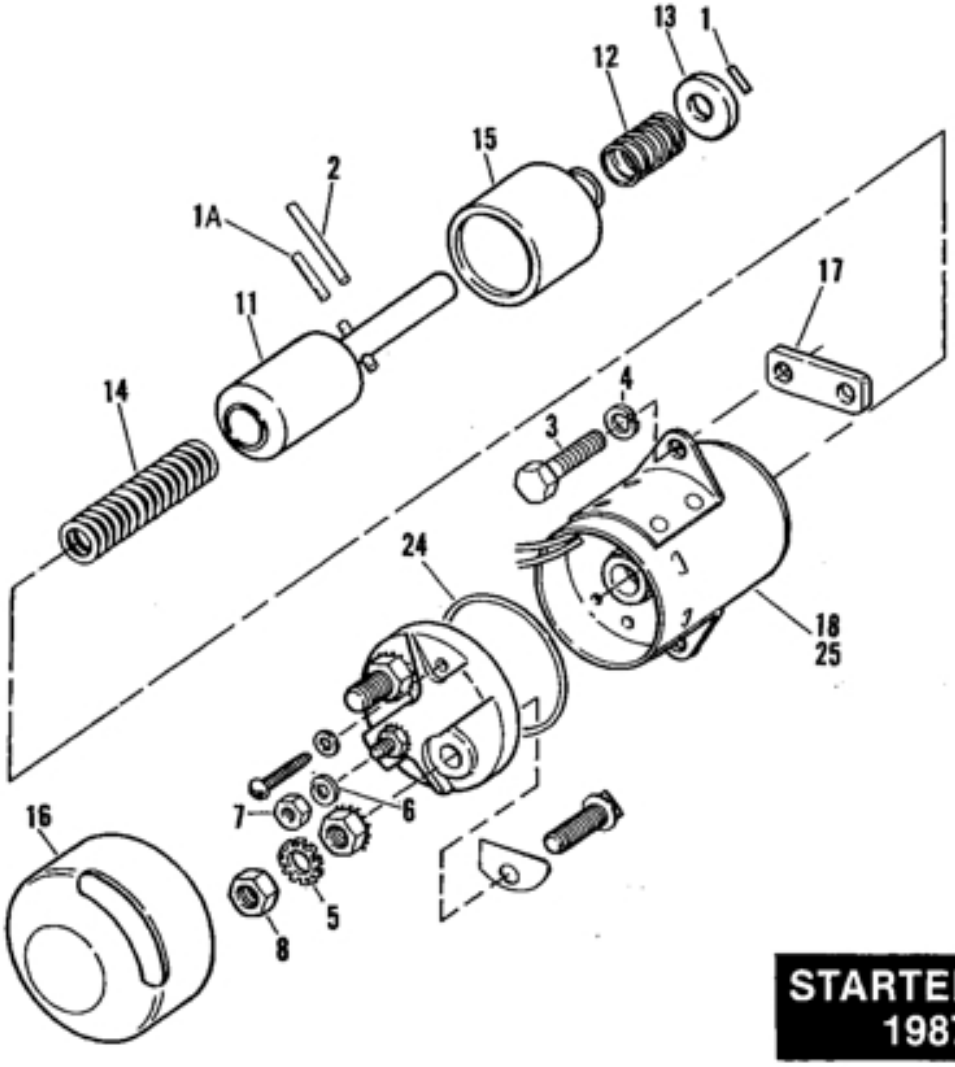

STARTER SOLENOID
1987 & 1988


STARTER SOLENOID - 1987 AND 1988

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	257	PIN (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
1A	600	ROLL PIN (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
2	613	ROLL PIN (1)	Softail: 87 and 88-ALL
2	614	ROLL PIN (1)	FXR: 87 and 88-ALL Touring: 87 and 88-ALL
3	3767B	BOLT (2)	FXR: 87 and 88-ALL
3	3787	BOLT (2)	Touring: 87 and 88-ALL
3	3802W	BOLT (2)	Softail: 87 and 88-ALL
4	7036	WASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
5	7145W	LOCKWASHER (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
6	7220	LOCKWASHER (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
7	7638	NUT (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
8	7667	NUT (2)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
9	27060-55	O-RING, O-RING (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
11	31435-65B	PLUNGER ASSEMBLY, solenoid (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
12	31438-65A	OVER-RUN SPRING (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
13	31439-84	RETAINER, over-run spring (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
14	31440-65	RETURN SPRING, plunger (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
15	31441-65A	BOOT, solenoid plunger (rubber) (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
16	31444-65A	COVER, solenoid (gray) (1)	FXR: 87-EB; 87 and 88-EA/C/G Softail: 87 and 88-BH/J Touring: 87 and 88-ALL
16	31475-77	COVER, solenoid (black) (1)	FXR: 87 and 88-EL; 88-EB Softail: 87 and 88-BK/L
17	31452-65A	SPACER (1)	Softail: 87 and 88-ALL
18	31489-79B	STARTER SOLENOID (1)	FXR: 87-EB; 87 and 88-EA/C/G Touring: 87 and 88-ALL
18	31526-81B	STARTER SOLENOID, black wrinkle (1)	FXR: 87 and 88-EL; 88-EB
24	71467-65	GASKET, solenoid (1)	FXR: 87 and 88-ALL Softail: 87 and 88-ALL Touring: 87 and 88-ALL
25	71469-65B	STARTER SOLENOID (1)	Softail: 87 and 88-BH/J
25	71473-77B	STARTER SOLENOID, black wrinkle (1)	Softail: 87 and 88-BK/L

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

HANDLEBAR SWITCHES

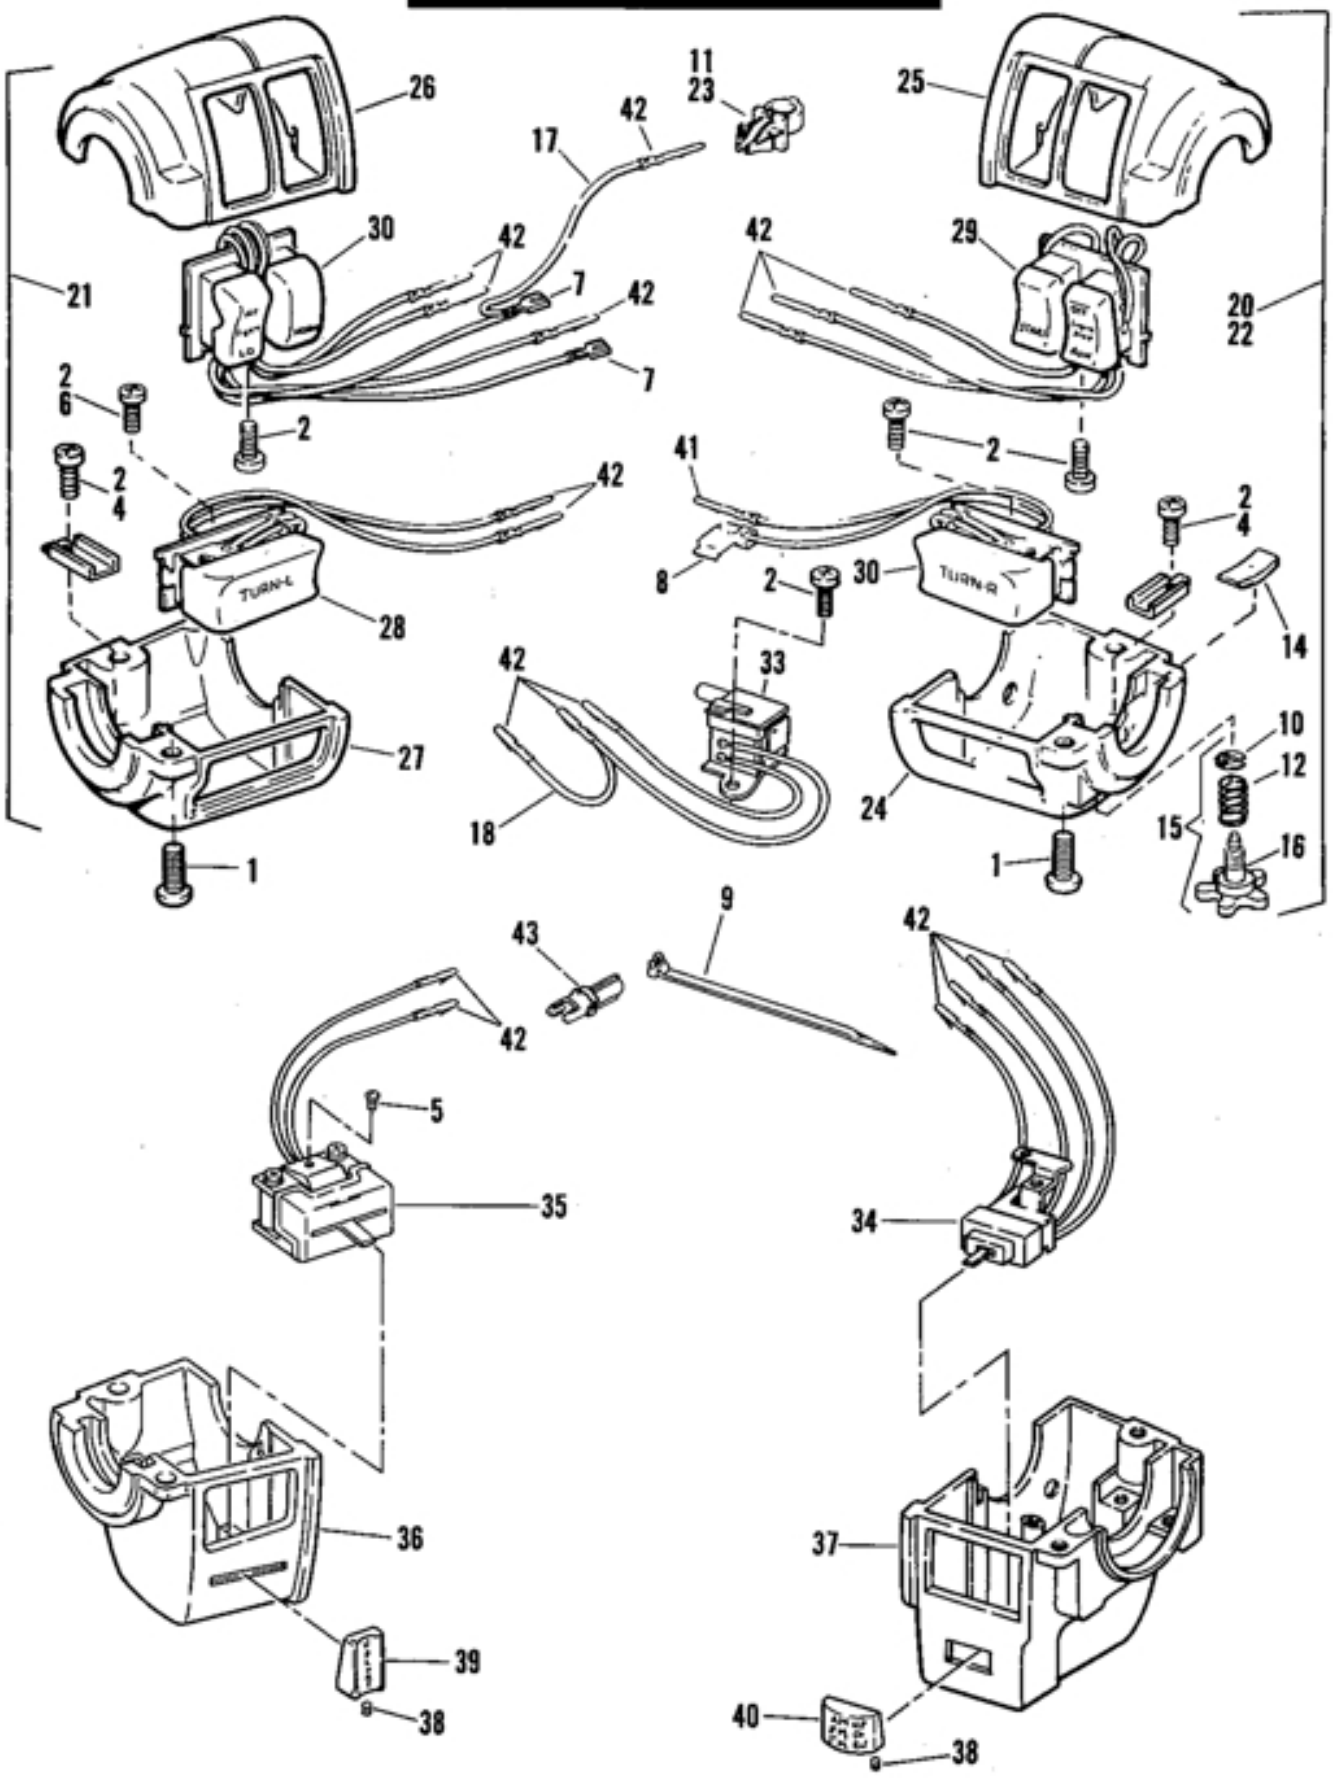


HANDLEBAR SWITCHES (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2508	SCREW (4)	ALL
2	2907	SCREW, 4-radio equipped (7)	ALL
4	2908	SCREW (2)	FXR: 87 to 90-EC Touring: 87 to 90-DB/J/M/P
5	2909	SCREW (1)	FXR: 87 to 90-EC Touring: 87 to 90-DB/J/M/P
6	2910	SCREW (1)	FXR: 87 to 90-EC Touring: 87 to 90-DB/J/M/P
7	9875	TERMINAL, female spade (2)	ALL
8	9898	TERMINAL, flag (1)	ALL
9	10065	CABLE STRAP (2)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
10	11155	RETAINING RING (1)	ALL
11	56073-83	RETAINER, wiring harness (4)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
12	56394-74	SPRING, adjusting screw (1)	ALL
14	56396-74A	SPRING, throttle grip (1)	ALL
15	56397-74C	ADJUSTING SCREW KIT, w/#10, 12 and 16 (1)	ALL
16	56402-83A	SCREW, throttle adjusting (1)	ALL
17	70047-82	WIRE ASSY., 5 inches lg. (white) (1)	ALL
18	70082-82	WIRE ASSY., 3 inches lg. (orange) (1)	Softail: 87 to 90-ALL
20	70180-87	SWITCH ASSY. KIT, complete-right, N/A (1)	FXR: 87-EC Touring: 87-DB/J
20	70180-88	SWITCH ASSY. KIT, complete-right, N/A (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J
21	70181-87	SWITCH ASSY. KIT, complete-left (1)	FXR: 87-EC Touring: 87-DB/J
21	70181-88	SWITCH ASSY. KIT, complete-left, N/A (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J
21	70218-87	SWITCH ASSY. KIT, complete-left (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 to 90-DD, FA
22	70219-87	SWITCH ASSY. KIT, complete-right (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 to 90-DD, FA
23	70345-84	RETAINER (4)	Touring: 87 to 90-ALL
24	71563-82A	HOUSING, lower-right (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 to 90-DD, FA
25	71564-82A	HOUSING, upper-right (1)	ALL
26	71567-82	HOUSING, upper-left (1)	ALL
27	71568-82A	HOUSING, lower-left (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 to 90-DD, FA
28	71570-82A	SWITCH ASSY., left turn signal (1)	ALL
29	71571-82	SWITCH ASSY., engine stop/start (1)	ALL
30	71572-82A	SWITCH ASSY., right turn signal (1)	ALL
31	71573-82A	SWITCH ASSY., dimmer and horn (1)	ALL
33	71574-82	STOPLAMP SWITCH (1)	ALL
34	71592-86	3-WAY FUNCTIONAL SWITCH (1)	FXR: 87-EC Touring: 87-DB/J
34	71592-88	3-WAY FUNCTIONAL SWITCH (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
35	71593-86	VOLUME CONTROL (1)	FXR: 87-EC Touring: 87-DB/J
35	71593-88	VOLUME CONTROL (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

HANDLEBAR SWITCHES

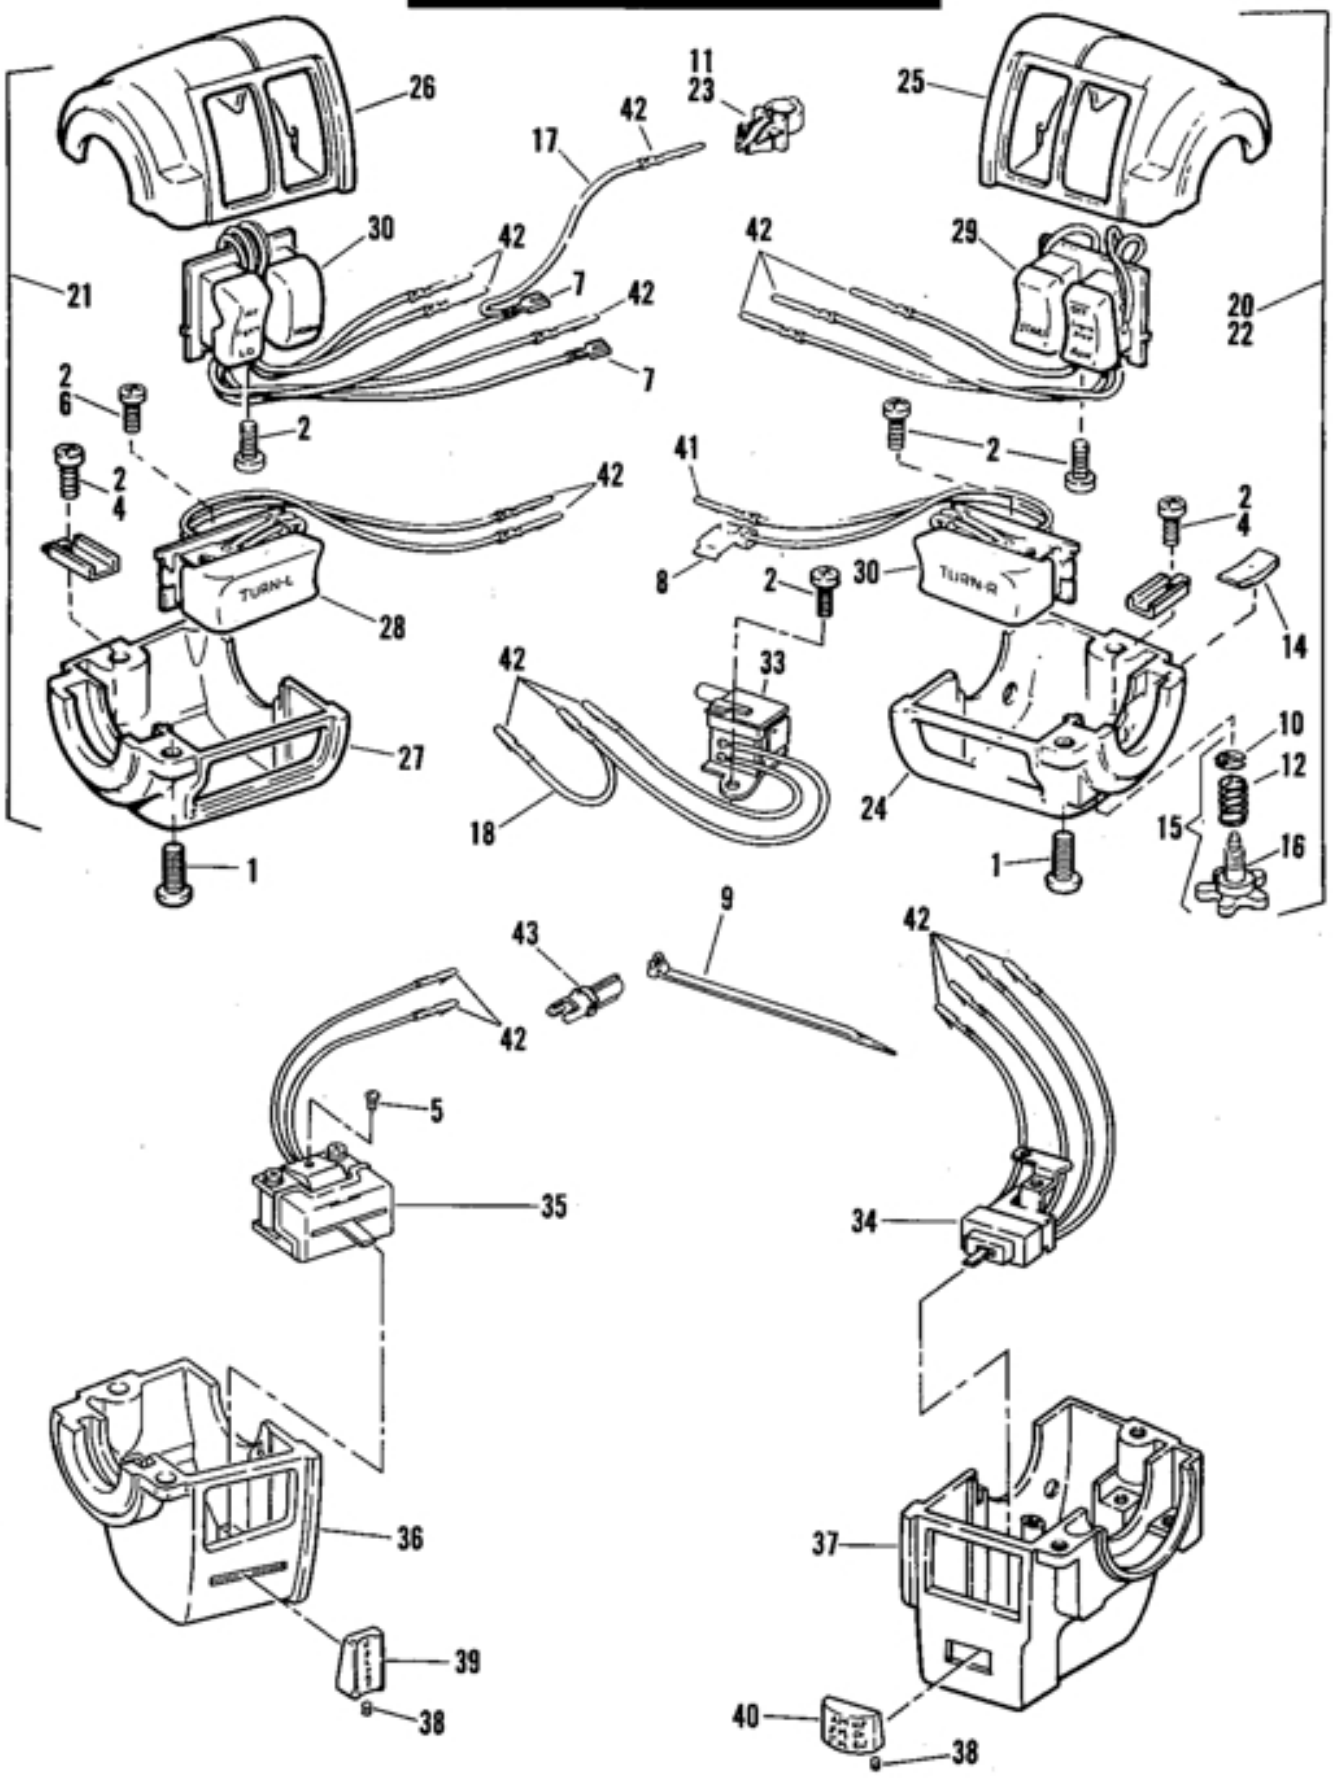


HANDLEBAR SWITCHES (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	71594-86	HOUSING, lower-left (1)	FXR: 87-EC Touring: 87-DB/J
36	71594-88	HOUSING, lower-left (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
37	71595-86	HOUSING, lower-right (1)	FXR: 87 to 90-EC Touring: 87 to 90-DB/J/M/P
38	71805-88	SET SCREW (2)	FXR: 87 to 90-EC Touring: 87 to 90-DB/J/M/P
39	71806-86	KNOB, volume (1)	FXR: 87-EC Touring: 87-DB/J
39	71806-88	KNOB, volume (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
40	71807-86	KNOB, am/fm/tm (1)	FXR: 87-EC Touring: 87-DB/J
40	71807-88	KNOB, am/fm/wb (1)	FXR: 88 to 90-EC Touring: 88 to 90-DB/J/M/P
41	72038-71	SOCKET, single pin (1)	ALL
42	72039-71	PIN, single socket (12)	ALL
43	72043-71	CONNECTOR, single pin (1)	ALL
		INTERNATIONAL MODELS ONLY	
20	70094-87	SWITCH ASSY. KIT, complete-right (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 and 88-DD, FA
20	70098-87	SWITCH ASSY. KIT, complete-right (1)	FXR: 87-EC Touring: 87-DB/J
20	70098-88	SWITCH ASSY. KIT, complete-right (1)	FXR: 88 to 90-EC Touring: 88-DB/J
21	70095-87	SWITCH ASSY. KIT, complete-right (1)	FXR: 87 to 90-EA/B/G/L/M Softail: 87 to 90-ALL Touring: 87 and 88-DD, FA
21	70099-87	SWITCH ASSY. KIT, complete-right (1)	FXR: 87-EC Touring: 87-DB/J
21	70099-88	SWITCH ASSY. KIT, complete-right (1)	FXR: 88 to 90-EC Touring: 88-DB/J
28	71581-82A	SWITCH ASSY., left turn signal (rocker type) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL
30	71579-82A	SWITCH ASSY., right turn signal (rocker type) (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL Touring: 87 and 88-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

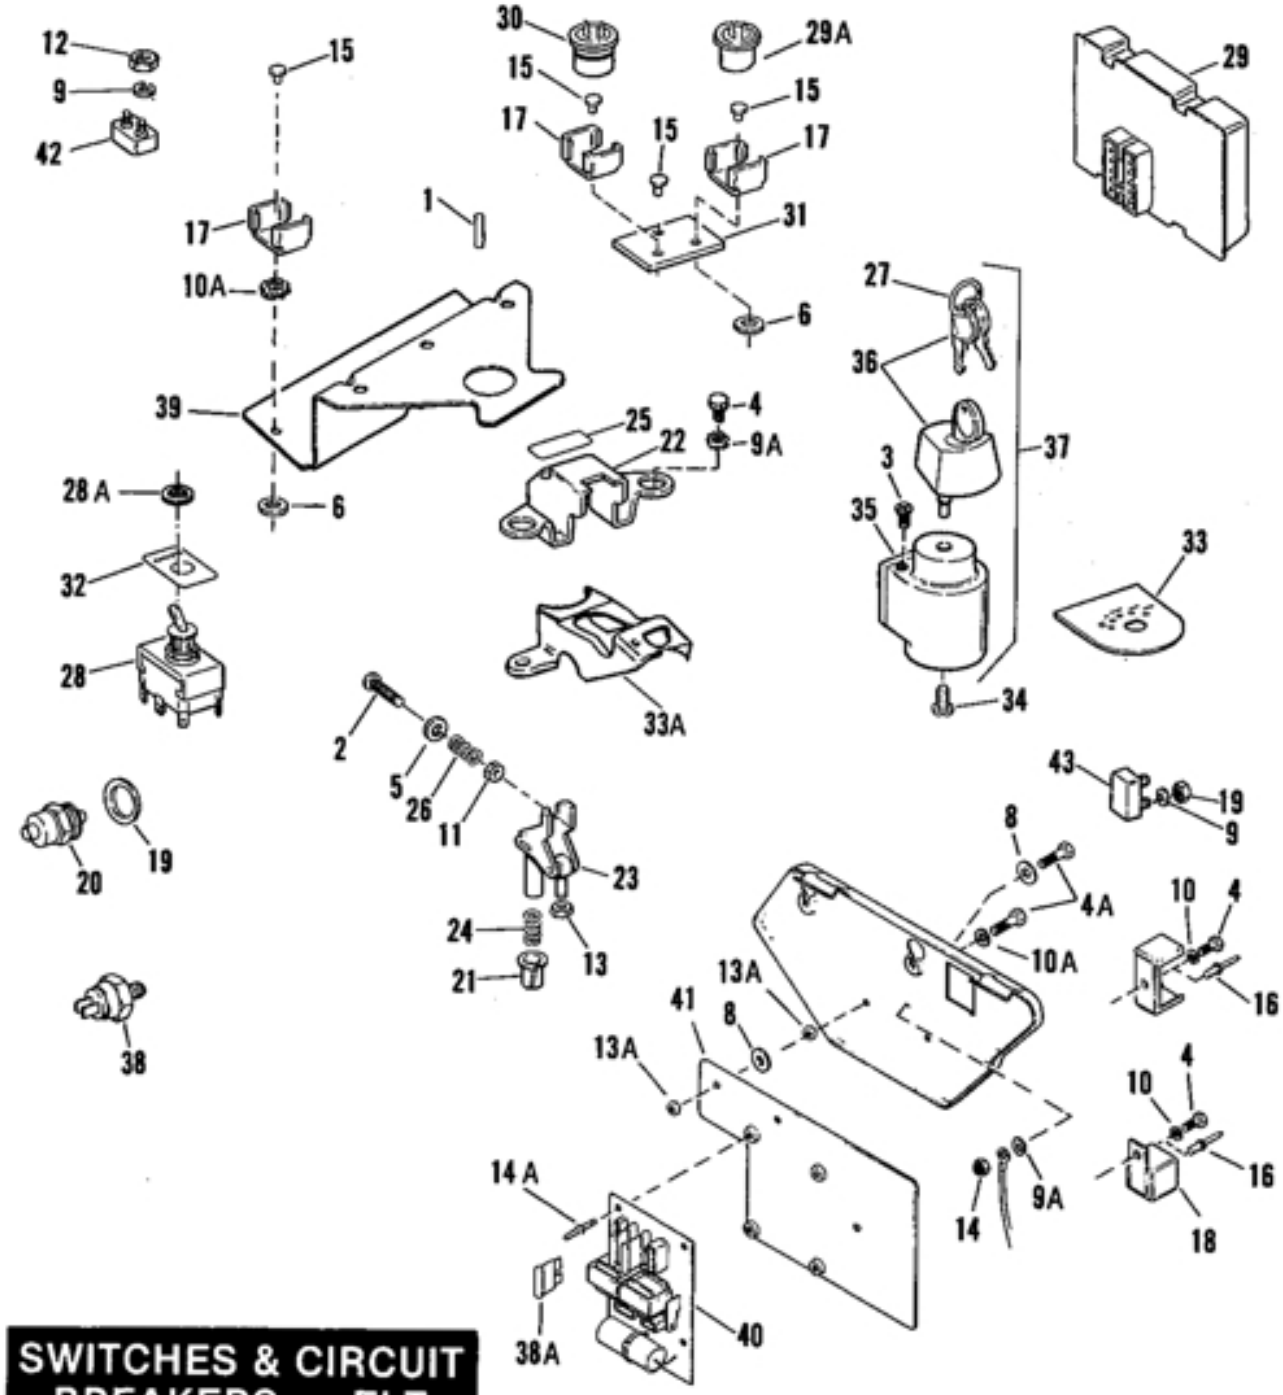


SWITCHES & CIRCUIT BREAKERS — FLT

SWITCHES AND CIRCUIT BREAKERS - FLT MODELS (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	608	ROLL PIN (1)	Touring: 87 to 90-ALL
2	909	SCREW (1)	Touring: 87 to 90-ALL
3	1601	SCREW (2)	Touring: 87 to 90-ALL
4	3581	BOLT, 2-1989 and Later (1)	Touring: 87 to 90-ALL
4A	3767B	BOLT, 2 DM/P (1)	Touring: 87 to 90-ALL
5	6150W	WASHER (1)	Touring: 87 to 90-ALL
6	6192	WASHER, 7-87 (4)	Touring: 87 to 90-ALL
7	6324W	WASHER (2)	Touring: 87 to 90-ALL
8	6703	WASHER, 2-89 DM/P (1)	Touring: 87-DB/D/J/M/P
9	7069	LOCKWASHER (10)	Touring: 87 to 90-ALL
9A	7127	LOCKWASHER (2)	Touring: 87 to 90-ALL
10	7220	LOCKWASHER (4)	Touring: 88 to 90-ALL
10A	7229W	LOCKWASHER (6)	Touring: 87-DB/D/J/M/P
11	7620W	NUT (1)	Touring: 87 to 90-ALL
12	7638	NUT (11)	Touring: 87 to 90-ALL
13	7686	LOCKNUT (1)	Touring: 87 to 90-ALL
13A	7688	NUT (4)	Touring: 89 to 90-DM/P
14	7742	LOCKNUT (1)	Touring: 87 to 90-DB/D/J
14A	8498	RIVET (4)	Touring: 89 to 90-DM/P
15	8519	RIVET, 7-87 (4)	Touring: 87 to 90-ALL
16	8672	POP RIVET (1)	Touring: 87-ALL
17	9952	CLIP, flashers and cb. (7-87) (4)	Touring: 87 to 90-ALL
17A	10039	CABLE STRAP (1)	Touring: 89 to 90-DM/P
18	31506-79B	STARTER RELAY (1)	Touring: 87 to 90-ALL
19	33043-80	WASHER, neut. ind. sw. (1)	Touring: 87 to 90-ALL
20	33900-59B	SWITCH, neut. ind. (1)	Touring: 87 to 90-ALL
21	45426-79	SLEEVE, fork lock (1)	Touring: 87 to 90-ALL
22	45427-79	SHIELD, fork lock (1)	Touring: 87 to 90-DB
23	45437-81	LEVER ASSY., fork lock w/#1 (1)	Touring: 87 to 90-ALL
24	45447-81	SPRING (1)	Touring: 87 to 90-ALL
25	45448-81	LABEL, "Warning", N/A (1)	Touring: 87 to 90-ALL
26	45494-79	SPRING, fork lock (1)	Touring: 87 to 90-ALL
27	61077-82	KEYSET, ign. sw. and door (specify key no.) (1)	Touring: 87 to 90-ALL
28	67843-70	TOGGLE SWITCH, hazard wrn. flasher (1)	Touring: 87 and 88-DB, FA
28A	67846-70	NUT, toggle switch (1)	Touring: 87 to 90-DB/M, FA
29	68537-89C	TURN SIGNAL CANCELLER (1)	Touring: 89 to 90-ALL
29A	68541-64A	FLASHER, hazard wrn. (1)	Touring: 87 and 88-ALL
30	68543-64B	FLASHER, turn signal (1)	Touring: 87 and 88-ALL
31	68561-79	PAD, flasher clip mtg., N/A (1)	Touring: 87 and 88-ALL
32	68602-79	LABEL, hazard wrn. flasher sw. (1)	Touring: 87 and 88-DB, FA
33	71426-87	DECAL, ignition switch (1)	Touring: L88 to 90-DB/M, FA
33	71427-79A	DECAL, ignition switch (1)	Touring: 87 and E88-ALL; L88 to 90-DD/P
33A	71517-86	SHIELD, fork lock (1)	Touring: 87 to 90-DD/JP

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

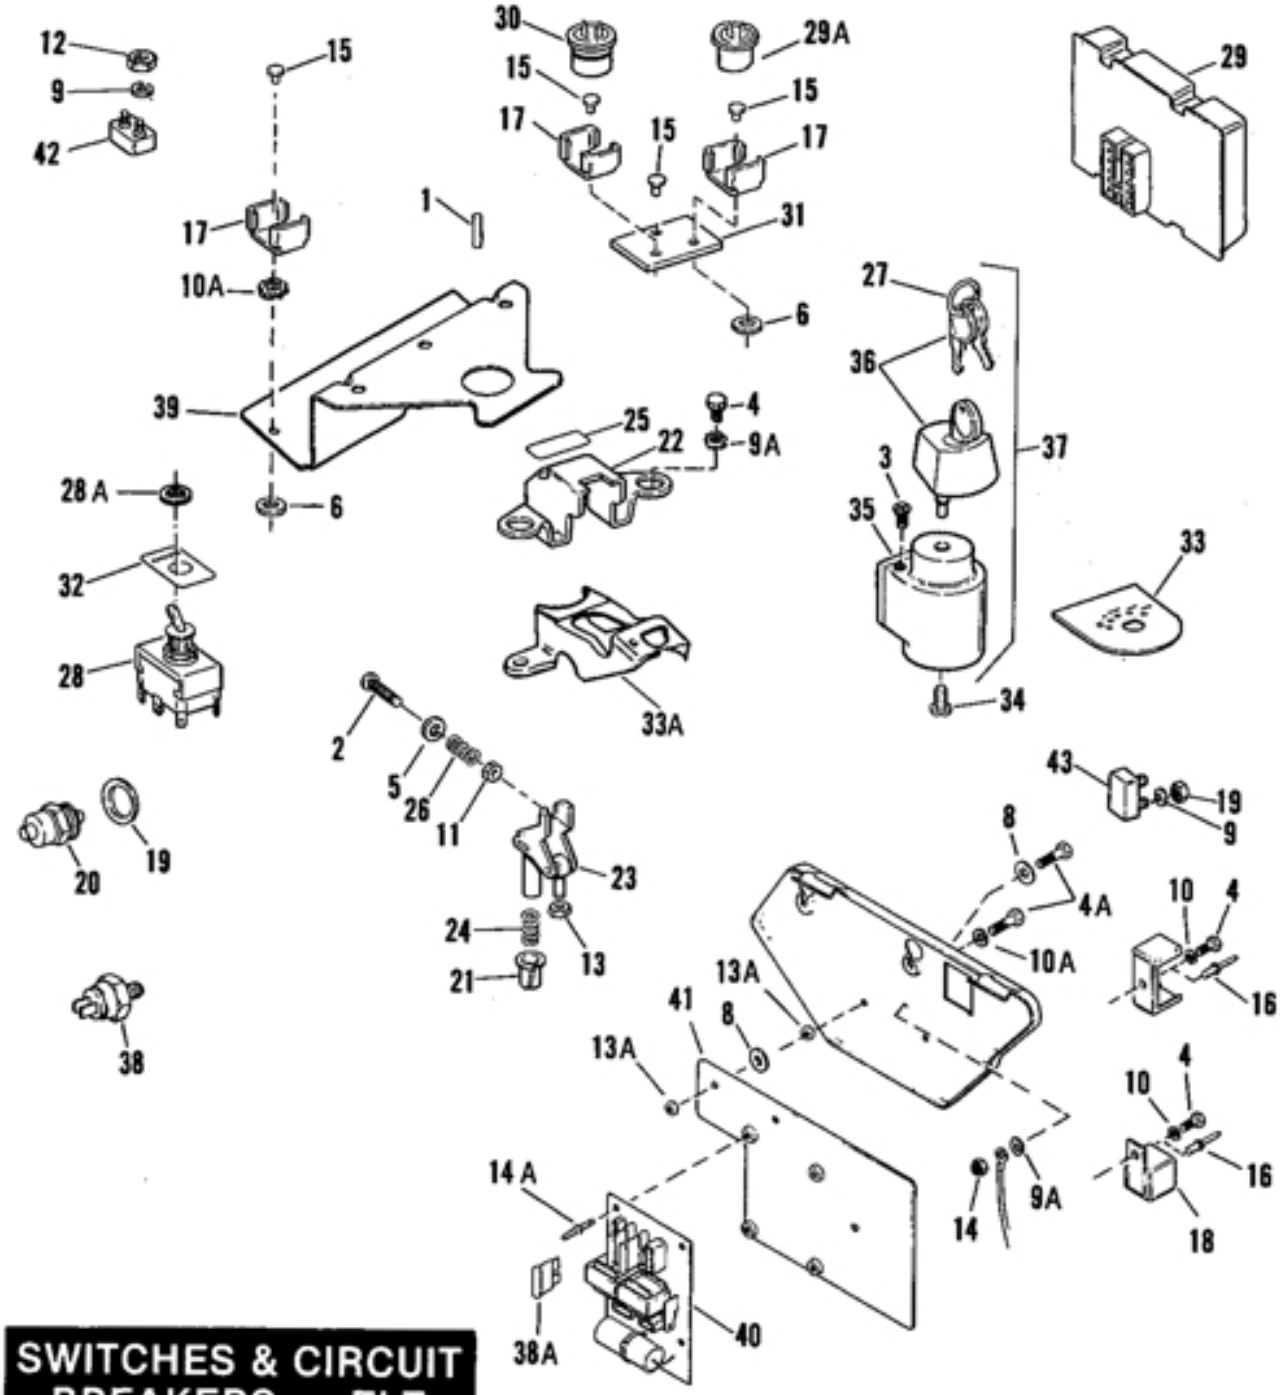


SWITCHES & CIRCUIT BREAKERS — FLT

SWITCHES AND CIRCUIT BREAKERS - FLT MODELS (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	71518-80	SCREW, w/washer (4)	Touring: 87 to 90-ALL
35	71526-80	HOUSING, ignition switch (1)	Touring: 87 to 90-ALL
36	71536-82A	KNOB, ign. sw. (1)	Touring: 87 to 90-ALL
37	71549-82A	IGNITION SWITCH, w/#34, 35 and 36 (1)	Touring: 87 to 90-ALL
38	72023-51A	STOPLIGHT SWITCH, rear (1)	Touring: 87 to 90-ALL
38A	72300-89	FUSE, 1 amp (1)	Touring: 89 to 90-DM/P
38A	72301-89	FUSE, 3 amp (1)	Touring: 89 to 90-DM/P
38A	72302-89	FUSE, 5 amp (1)	Touring: 89 to 90-DM/P
39	72306-88	MOUNTING BRACKET (1)	Touring: 89 to 90-ALL
39	72309-79B	MOUNTING BRACKET (1)	Touring: 87 and 88-ALL
40	72316-89	FUSE BOARD (1)	Touring: 89 to 90-DM/P
41	72320-89	MOUNTING PLATE (1)	Touring: 89 to 90-DM/P
42	74589-73	CIRCUIT BREAKER (4)	Touring: 87 to 90-ALL
43	74599-77B	CIRCUIT BREAKER, battery (1)	Touring: 87 to 90-ALL
		INTERNATIONAL MODELS ONLY	
	6182W	WASHER, 7-DB (HDI only) (1)	Touring: 89 to 90-ALL
	6192	WASHER, HDI only (1)	Touring: 87 to 90-ALL
	7229W	LOCKWASHER, HDI only (1)	Touring: 87 and 88-ALL
	8483	RIVET, HDI only (1)	Touring: 89 to 90-DJ/P
	8498	RIVET, HDI only (1)	Touring: 89 to 90-DB
	8519	RIVET, HDI only (1)	Touring: 87 to 90-ALL
	9952	CLIP, cb. (HDI only) (1)	Touring: 87 to 90-ALL
	31506-79B	RELAY, parking lamps (HDI only) (1)	Touring: 87 to 90-ALL
	67858-89	SWITCH, parking lamps (HDI only) (1)	Touring: 89 to 90-DB/M
30	68550-83	FLASHER, turn signal (HDI only) (1)	Touring: 87 and 88-ALL
	71512-89	SWITCH, parking lamps (HDI only) (1)	Touring: 89 to 90-DJ/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

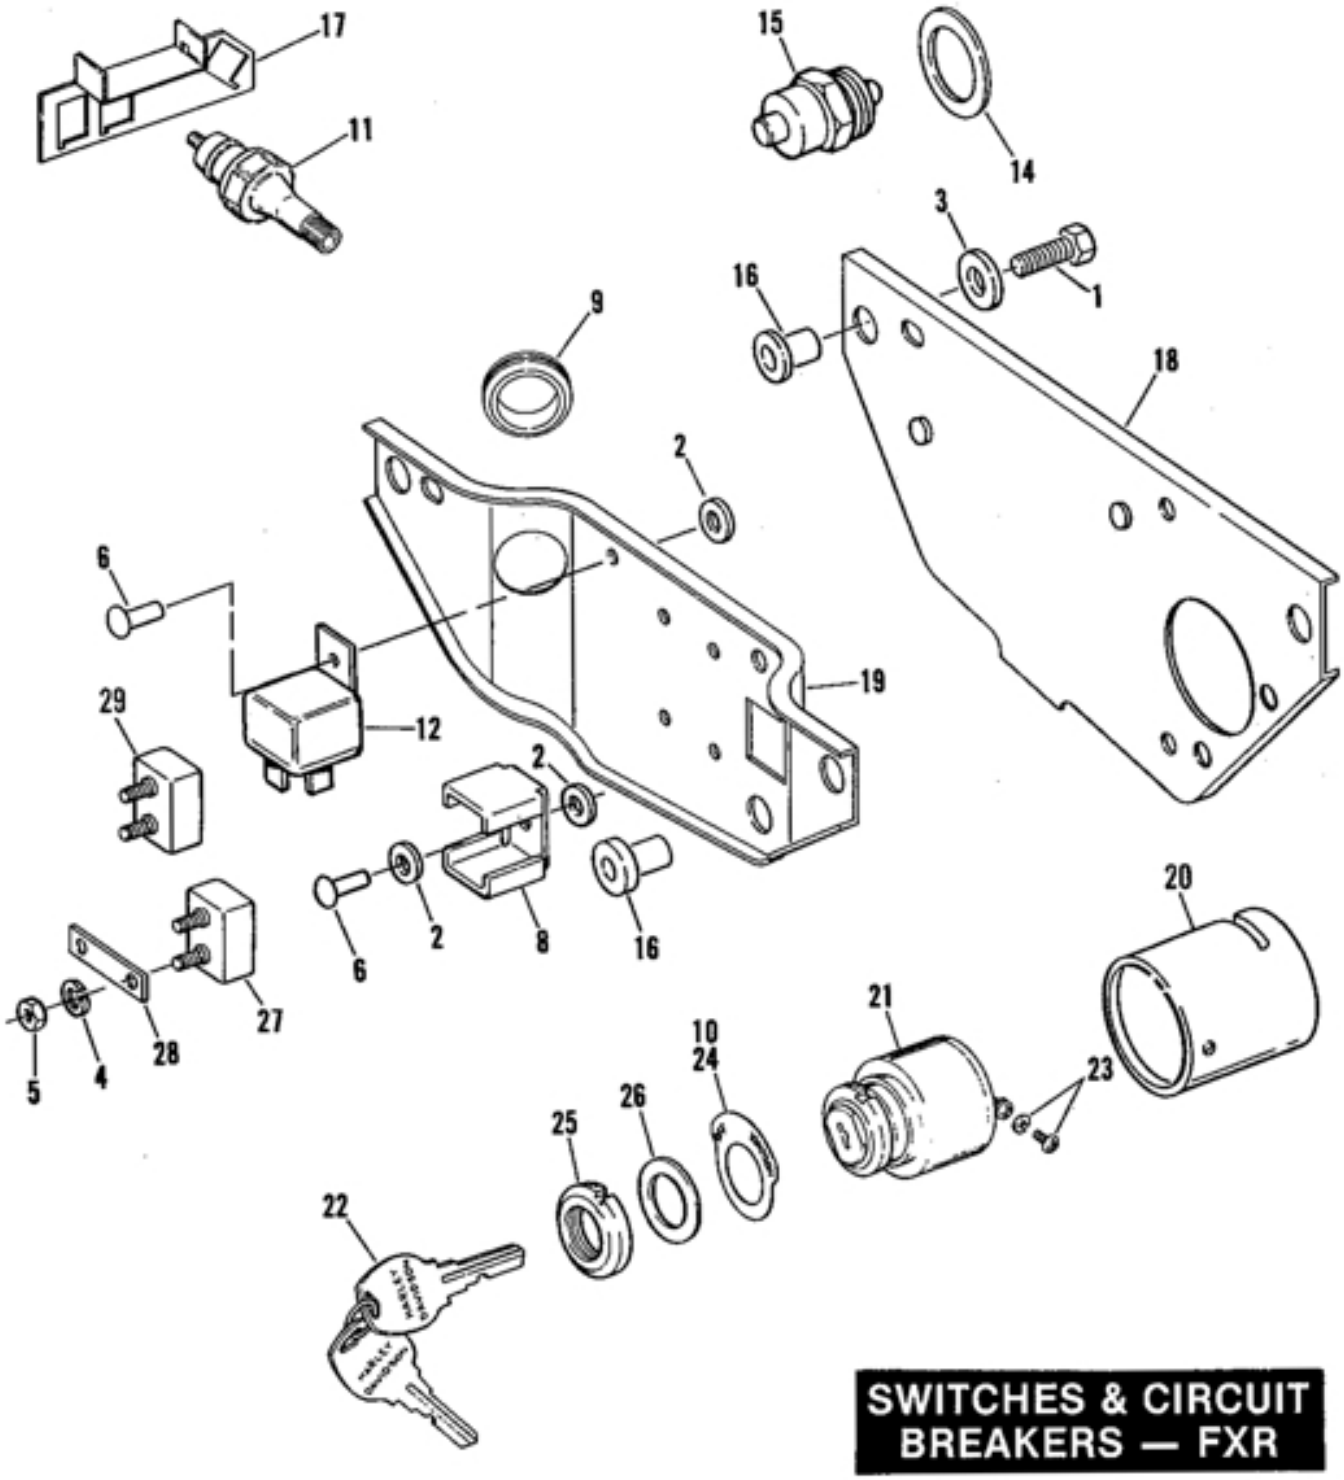

SWITCHES & CIRCUIT BREAKERS — FXR


SWITCHES AND CIRCUIT BREAKERS - FXR MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3787	BOLT (6)	FXR: 87 to 90-ALL
2	6192	WASHER, 10-EC (8)	FXR: 87 to 90-ALL
3	6703	WASHER (6)	FXR: 87 to 90-ALL
4	7069	LOCKWASHER, 11-EC (9)	FXR: 87 to 90-ALL
5	7638	NUT, 10-EC (8)	FXR: 87 to 90-ALL
6	8672	RIVET, 6-EC (5)	FXR: 87 to 90-ALL
8	9952	CLIP, circuit breakers (5-EC) (4)	FXR: 87 to 90-ALL
9	11440	GROMMET (1)	FXR: 87 to 90-ALL
10	14116-86	LABEL, ignition switch (1)	FXR: 87 to 90-EC
11	26561-84	OIL PRESSURE SWITCH (1)	FXR: 87 to 90-ALL
12	31506-79B	STARTER RELAY (1)	FXR: 87 to 90-ALL
14	33043-80	WASHER, neutral indicator switch (1)	FXR: 87 to 90-ALL
15	33900-59B	SWITCH, neutral indicator (1)	FXR: 87 to 90-ALL
16	64511-63	WELL NUT (6)	FXR: 87 to 90-ALL
17	70199-87A	BRACKET, connectors (1)	FXR: 87 to 90-EL
18	70970-82C	IGNITION PANEL (1)	FXR: 87 to 90-ALL
19	70979-86	ELECTRICAL PANEL (1)	FXR: 87 to 90-ALL
20	71424-83	BOOT, ignition switch (1)	FXR: 87 to 90-ALL
21	71425-77	IGNITION SWITCH (1)	FXR: 87 to 90-ALL
22	71451-78	KEYSET, ignition switch (specify key no.) (1)	FXR: 87 to 90-ALL
23	71518-80	SCREW, w/washer (1)	FXR: 87 to 90-ALL
24	71550-75	LABEL, ignition switch (1)	FXR: 87 to 90-EA/B/G/L/M
25	71552-75	FACE NUT, ignition switch (1)	FXR: 87 to 90-ALL
26	71554-75	WASHER, ignition switch (1)	FXR: 87 to 90-ALL
27	74589-73	CIRCUIT BREAKER, 5-EC (3)	FXR: 87 to 90-ALL
28	74598-73	CONNECTOR BAR, circuit breaker (2-EC) (1)	FXR: 87 to 90-ALL
29	74599-77B	CIRCUIT BREAKER, battery (1)	FXR: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

SWITCHES & CIRCUIT BREAKERS — SOFTAIL

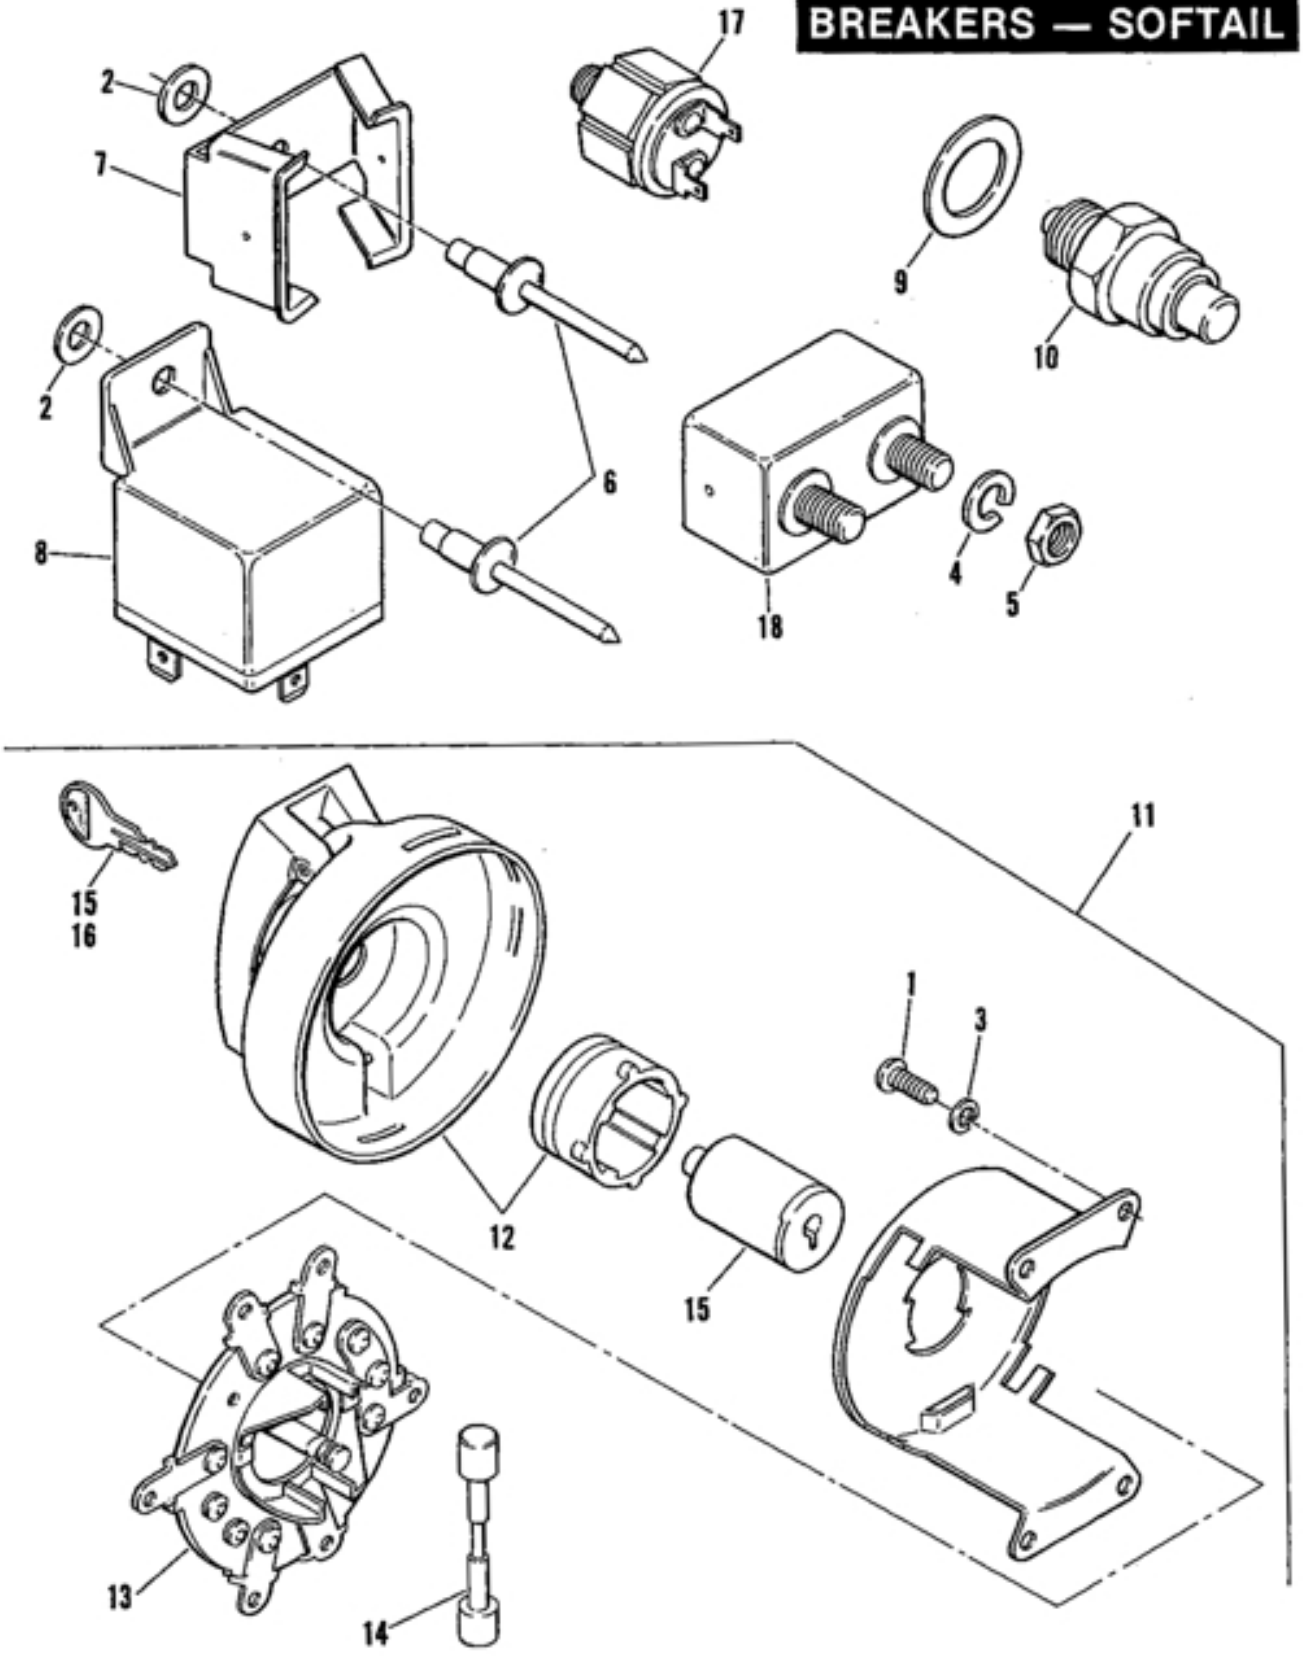


SWITCHES AND CIRCUIT BREAKERS - SOFTAIL MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2594	SCREW (4)	Softail: 87 to 90-ALL
2	6047	WASHER (2)	Softail: 88 to 90-ALL
3	7015	LOCKWASHER (4)	Softail: 87 to 90-ALL
4	7069	LOCKWASHER (6)	Softail: 87 to 90-ALL
5	7638	NUT (6)	Softail: 87 to 90-ALL
6	8483	RIVET, circuit breakers (4)	Softail: 89 to 90-ALL
6	8687	RIVET, starter relay (1)	Softail: 89 to 90-ALL
6	8672	RIVET (4)	Softail: 87 and 88-ALL
7	9952	CLIP, circuit breaker (4)	Softail: 87 to 90-ALL
8	31506-79B	STARTER RELAY (1)	Softail: 87 to 90-ALL
9	33043-80	WASHER, neutral indicator switch (1)	Softail: 87 to 90-ALL
10	33900-59B	SWITCH, neutral indicator (1)	Softail: 87 to 90-ALL
11	71501-73A	IGNITION SWITCH (1)	Softail: 87 to 90-ALL
12	71506-84	SWITCH COVER (1)	Softail: 87 to 90-ALL
13	71541-84	PLATE, switch mounting (1)	Softail: 87 to 90-ALL
14	71560-84	CONTACT ROLLER (1)	Softail: 87 to 90-ALL
15	71580-84	SWITCH LOCK AND KEY (1)	Softail: 87 to 90-ALL
16	71583-85	KEYSET, ignition switch (specify key no.) (1)	Softail: 87 to 90-ALL
17	72023-51A	STOPLAMP SWITCH, rear (1)	Softail: 87 to 90-ALL
18	74589-73	CIRCUIT BREAKER (3)	Softail: 87 to 90-ALL
18	74599-77B	CIRCUIT BREAKER, battery (1)	Softail: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	


SADDLEBAGS — FLT

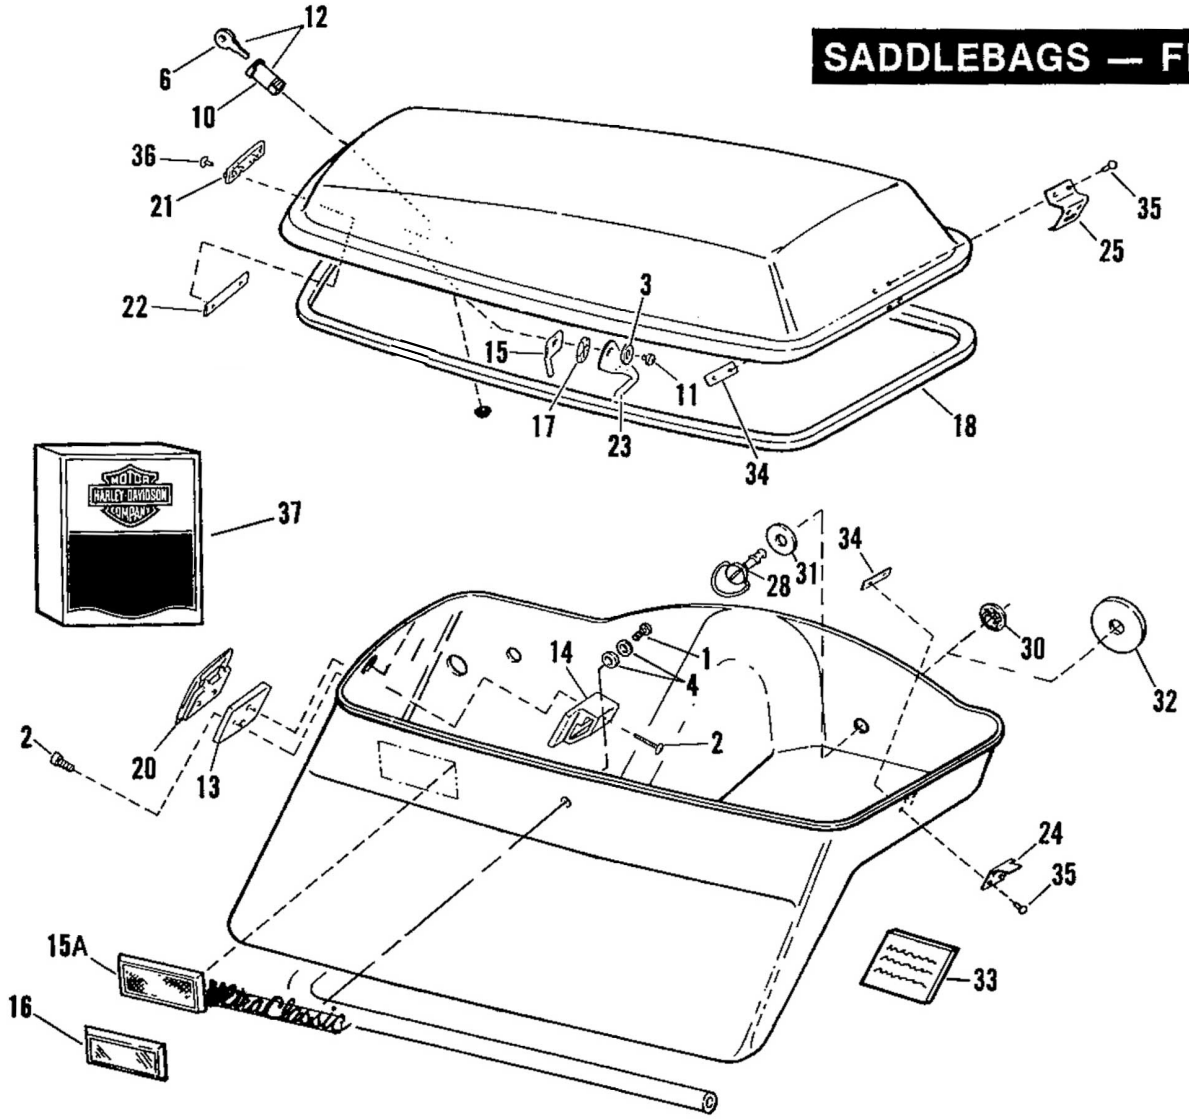

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	2589	SCREW (6)	Touring: 89 to 90-DM/P
1A	3597	SCREW (4)	Touring: 87 to 90-ALL
2	3598	SCREW (4)	Touring: 87 to 90-ALL
3	6055	WASHER (2)	Touring: 87 to 90-ALL
4	6717	WASHER (6)	Touring: 89 to 90-DM/P
6	48152-82	KEY, specify key no. (1)	Touring: 87 to 90-ALL
10	53580-82	CAM LOCK (2)	Touring: 87 to 90-ALL
11	53582-82	SCREW (2)	Touring: 87 to 90-ALL
12	53587-85	LOCK SET, w/#6, 10, 11 and 17 (1)	Touring: 87 to 90-DB/M
12	53588-85	LOCK SET, w/#6, 10, 11 and 17 (1)	Touring: 87 to 90-DD/J/P
12	53590-84	LOCK SET, w/#6, 10, 11 and 17 (1)	Touring: 87 to 90-FA
13	53615-85	SPACER (2)	Touring: 87 to 90-ALL
14	53616-85	CATCH (2)	Touring: 87 to 90-ALL
15	53617-85	GUIDE (2)	Touring: 87 to 90-ALL
15A	59244-89	NAMEPLATE, left (1)	Touring: 89-DM/P
15A	59244-90	NAMEPLATE, left (1)	Touring: 90 to 90-DM/P
15A	59245-89	NAMEPLATE, right, N/A (1)	Touring: 89-DM/P
15A	59245-90	NAMEPLATE, right (1)	Touring: 90 to 90-DM/P
16	59255-72	REFLECTOR, red (2)	Touring: 87 and 88-ALL; 89 to 90-DB/J, FA
16	59259-90	REFLECTOR, red (2)	Touring: 90 to 90-DM/P
16	59263-79	REFLECTOR, red (2)	Touring: 89-DM/P
17	84850-67	NUT, lock (2)	Touring: 87 to 90-ALL
18	90633-82A	GASKET, cover-46 inches (2)	Touring: 87 to 90-ALL
20	90649-85	BODY, catch (use 90681-95A) (2)	Touring: 87 to 90-ALL
21	90663-85	CATCH, upper (use 90681-95A) (2)	Touring: 87 to 90-ALL
22	90688-85	BACKING PLATE (2)	Touring: 87 to 90-ALL
23	90689-84	CAM HOOK (2)	Touring: 87 to 90-ALL
24	90745-79A	HINGE CLIP (2)	Touring: 87 to 90-ALL
25	90747-79	HINGE (2)	Touring: 87 to 90-ALL
28	90789-83	BAIL HEAD STUD (4)	Touring: 87 to 90-ALL
30	90790-83	RETAINER (4)	Touring: 87 to 90-ALL
31	90791-83	WASHER, reinforcement (4)	Touring: 87 to 90-ALL
32	90797-80	WASHER, rubber (4)	Touring: 87 to 90-ALL
33	90820-74A	LABEL, load limits (1)	Touring: 87 to 90-ALL
34	90964-63	BACKING PLATE (8)	Touring: 87 to 90-ALL
35	90965-63	RIVET, 5/16 inch long (16)	Touring: 87 to 90-ALL
36	90967-64	RIVET (4)	Touring: 87 to 90-ALL
37	91851-88	LINER, right (1)	Touring: 89 to 90-DM/P
37	91852-88	LINER, left (1)	Touring: 89 to 90-DM/P
		INTERNATIONAL MODELS ONLY	
	2551W	BOLT, saddlebag mtg. (HDI only) (4)	Touring: 90 to 90-ALL
	7743	CLIP NUT, saddlebag mtg. (HDI only) (4)	Touring: 90 to 90-ALL
16	59256-84A	REFLECTOR, amber (HDI only) (2)	Touring: 87 to 90-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

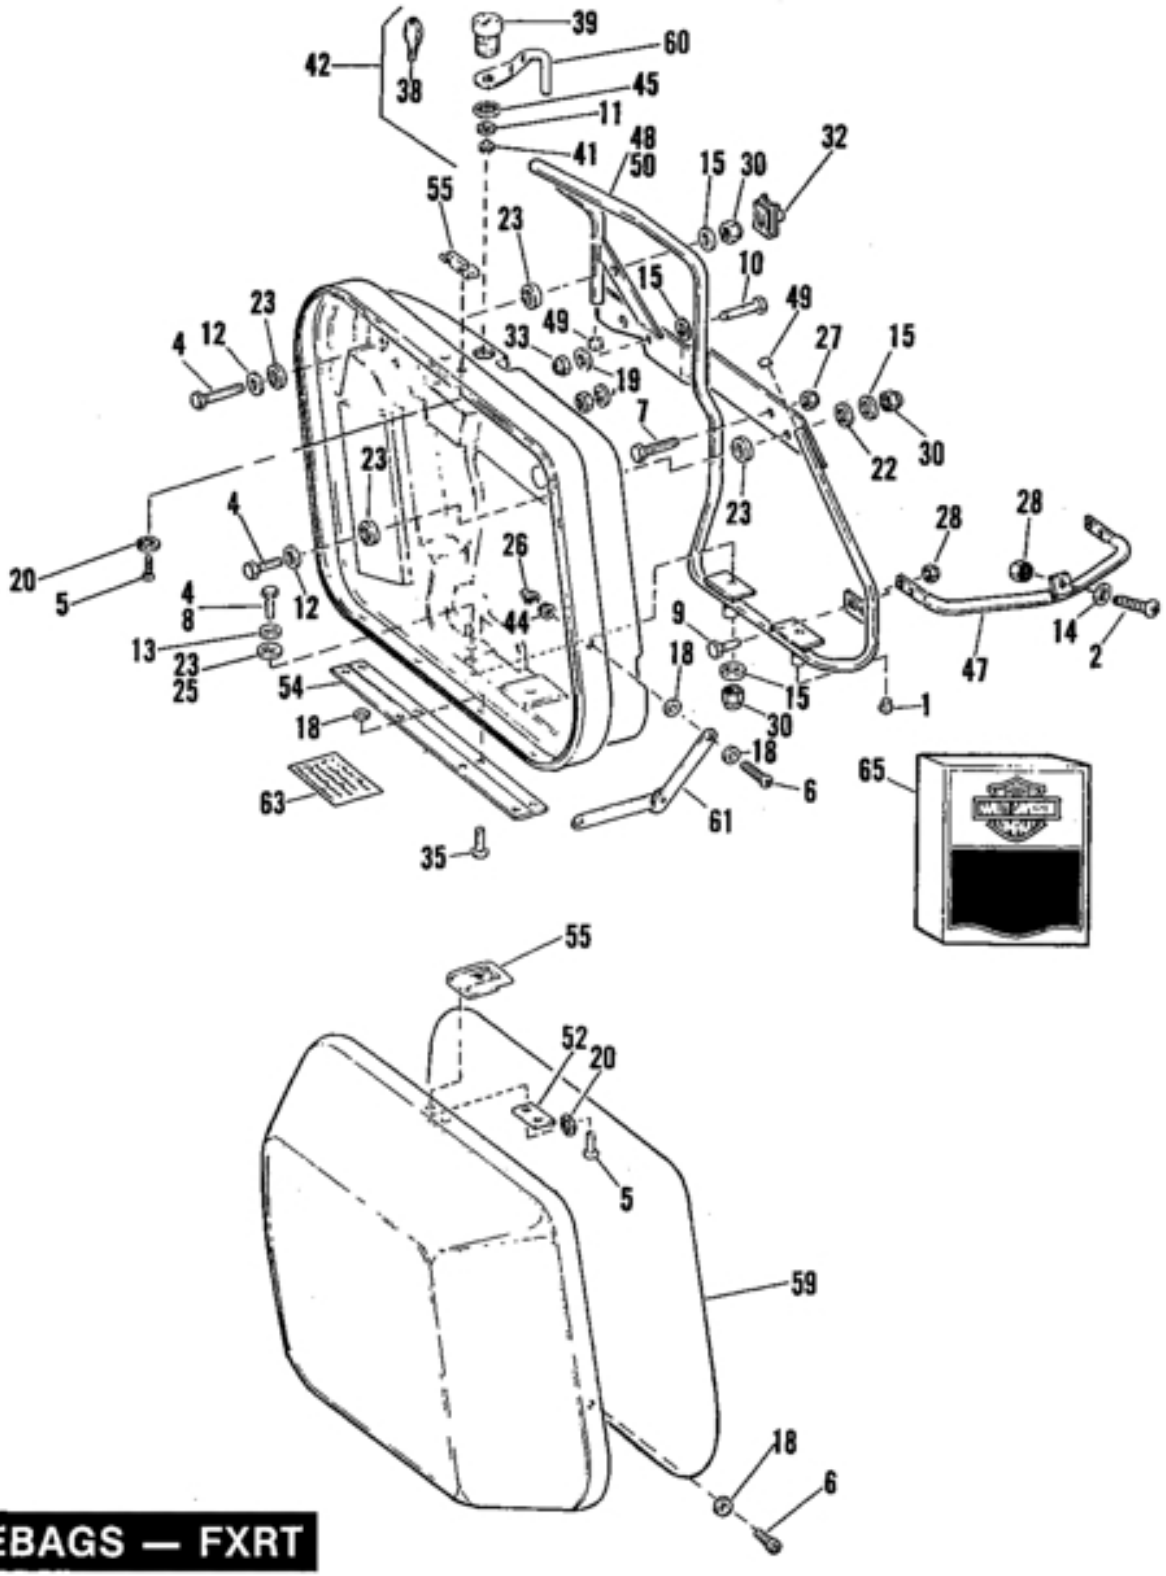


SADDLEBAGS — FXRT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	735	PLUG, saddlebag bracket (4)	FXR: 87 to 90-EC
2	2607	SCREW (1)	FXR: 87 to 90-EC
4	2790A	BOLT, w/lockpatch (4)	FXR: 87 to 90-EC
5	2804W	SCREW (8)	FXR: 87 to 90-EC
6	2806	SCREW (4)	FXR: 87 to 90-EC
7	2887W	BOLT (2)	FXR: 87 to 90-EC
8	3445	BOLT (4)	FXR: 87 to 90-EC
9	3787	BOLT (4)	FXR: 87 to 90-EC
10	4412	BOLT (2)	FXR: 87 to 90-EC
11	6055	WASHER (2)	FXR: 87 to 90-EC
12	6229W	WASHER (7)	FXR: 87 to 90-EC
13	6333	WASHER (2)	FXR: 87 to 90-EC
14	6410	WASHER (1)	FXR: 87 to 90-EC
15	6701	WASHER (2)	FXR: 89 to 90-EC
18	6717	WASHER (24)	FXR: 87 to 90-EC
19	6774	WASHER (2)	FXR: 87 and 88-EC
20	7112	LOCKWASHER (8)	FXR: 87 to 90-EC
22	7130W	LOCKWASHER (2)	FXR: 87 to 90-EC
23	7415A	WASHER (15)	FXR: 87 to 90-EC
25	7419	WASHER, left side only (1)	FXR: 87 to 90-EC
26	7520	ACORN NUT (4)	FXR: 87 to 90-EC
27	7531	LOCKNUT (2)	FXR: 87 to 90-EC
28	7686	LOCKNUT (5)	FXR: 87 to 90-EC
30	7739	LOCKNUT (8)	FXR: 87 to 90-EC
32	7752	SPEED NUT (4)	FXR: 87 to 90-EC
33	7776W	LOCKNUT (2)	FXR: 87 to 90-EC
35	8533	RIVET (16)	FXR: 87 to 90-EC
38	48152-82	KEY, specify key no. 1 to 100 (1)	FXR: 87 to 90-EC
39	53580-82	LOCK (2)	FXR: 87 to 90-EC
41	53582-82	SCREW (2)	FXR: 87 to 90-EC
42	53590-84	LOCK SET, w/#38, 39, 41 and 45 (1)	FXR: 87 to 90-EC
44	60031-61	LOCKNUT (4)	FXR: 87 to 90-EC
45	84850-67	NUT, lock bracket (2)	FXR: 87 to 90-EC
47	90488-83	CROSS BRACE (1)	FXR: 87 to 90-EC
48	90492-85B	SUPPORT, saddlebag-left (1)	FXR: 87 to 90-EC
49	90493-83	PLUG (4)	FXR: 87 to 90-EC
50	90499-83B	SUPPORT, saddlebag-right (1)	FXR: 87 to 90-EC
52	90655-83	CATCH, lock (2)	FXR: 87 to 90-EC
54	90657-84	HINGE (2)	FXR: 87 to 90-EC
55	90658-84	CATCH (2)	FXR: 87 to 90-EC
59	90685-83	SEAL, cover (2)	FXR: 87 to 90-EC
60	90689-84	LOCKING HOOK (2)	FXR: 87 to 90-EC
61	90699-83	RETAINER ARM, cover (2)	FXR: 87 to 90-EC
63	90820-74A	LABEL, load limit (2)	FXR: 87 to 90-EC
65	91836-82	TRAVEL BAG, large (2)	FXR: 87 to 90-EC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

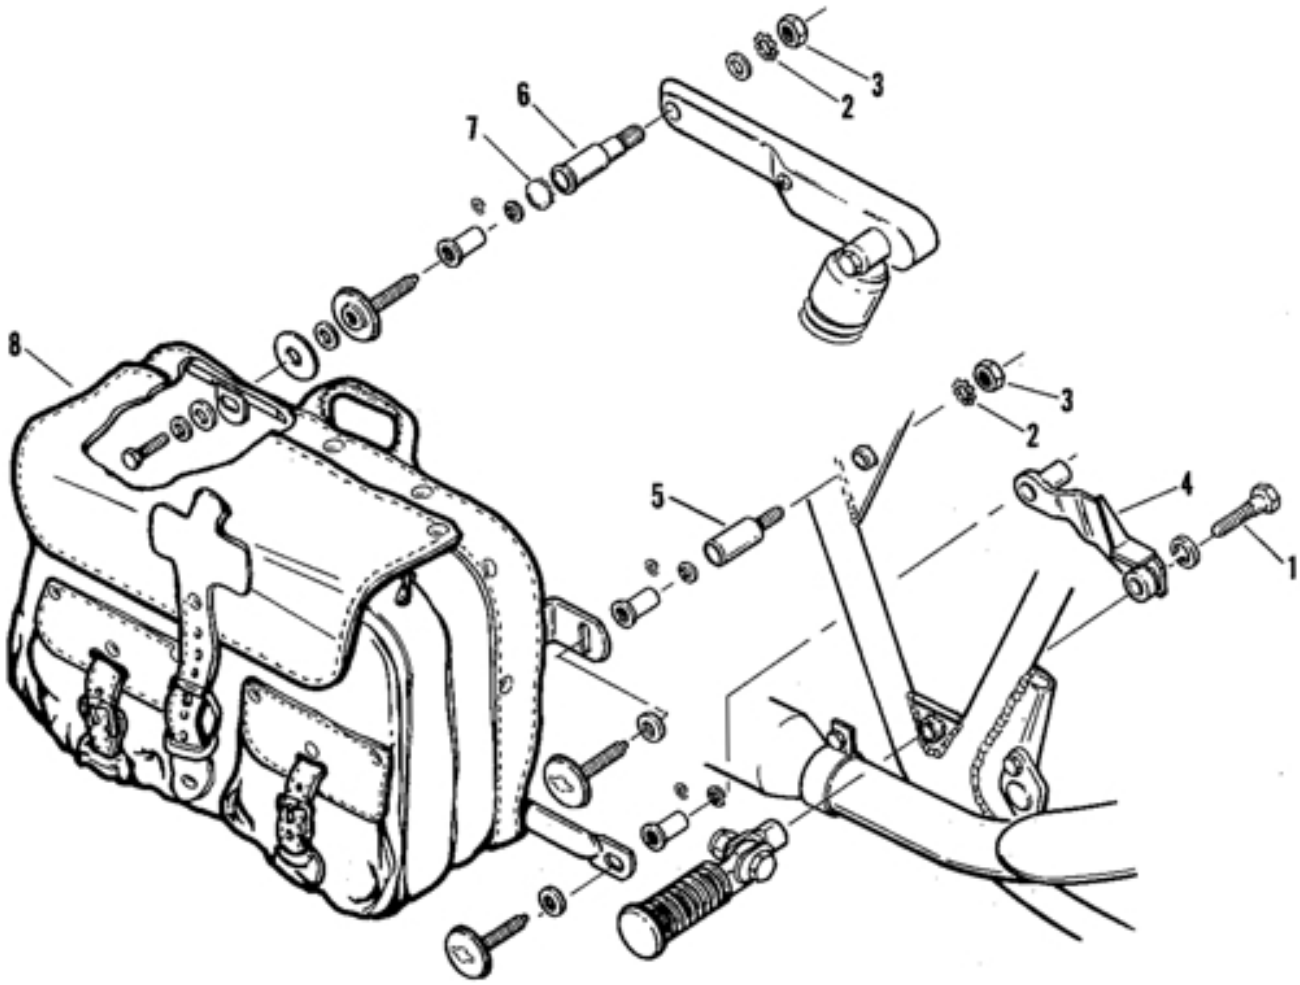


SADDLEBAGS
FXRS-CON

SADDLEBAGS - FXRS-CON

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4081	BOLT (2)	FXR: L89 to 90-EM
2	7145W	LOCKWASHER (4)	FXR: L89 to 90-EM
3	7643W	JAMNUT (4)	FXR: L89 to 90-EM
4	90350-89	MOUNTING BRACKET, lower-right (1)	FXR: L89 to 90-EM
4	90351-89	MOUNTING BRACKET, lower-left (1)	FXR: L89 to 90-EM
5	90359-89	WELL NUT RECEPTACLE, upper-front (2)	FXR: L89 to 90-EM
6	90360-89	WELL NUT STUD (2)	FXR: L89 to 90-EM
7	90357-89	HOLE PLUG, chrome (2)	FXR: L89 to 90-EM
8	90702-89	SADDLEBAG, left (1)	FXR: L89 to 90-EM
8	90703-89	SADDLEBAG, right (1)	FXR: L89 to 90-EM

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

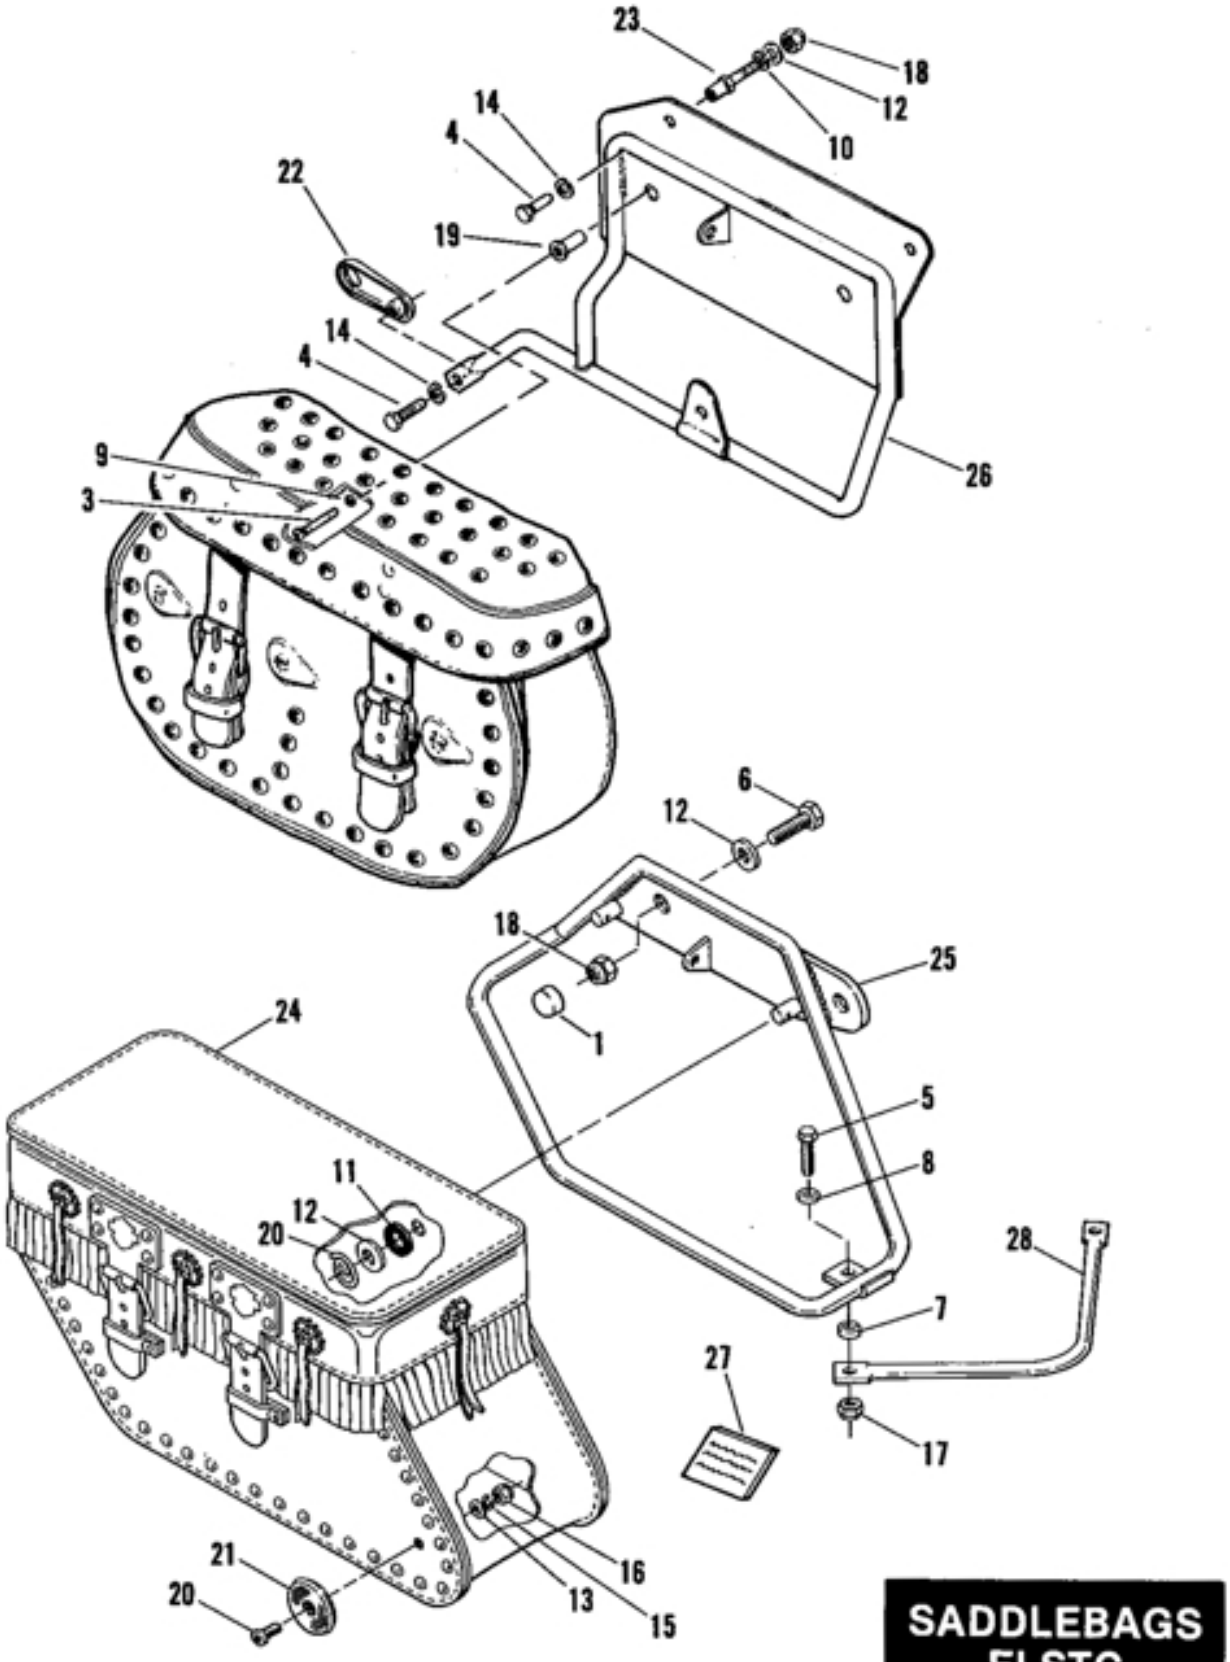


SADDLEBAGS FLSTC

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	741	CAP, plastic (4)	Softail: L87 to 89-BJ
2	1205	SCREW (2)	Softail: 89-BJ
2	2665	SCREW (2)	Softail: L87 and 88-BJ
3	2602	SCREW (6)	Softail: 90 to 90-BJ
4	2882W	SCREW (6)	Softail: 90 to 90-BJ
5	2887W	BOLT (2)	Softail: L87 to 89-BJ
6	4720W	BOLT (4)	Softail: L87 to 89-BJ
7	5940	SPACER, N/A (2)	Softail: L87 to 89-BJ
8	6109	WASHER (2)	Softail: L87 to 89-BJ
9	6235	WASHER (4)	Softail: 90 to 90-BJ
10	6379W	WASHER (4)	Softail: 90 to 90-BJ
11	6398	WASHER, rubber (4)	Softail: L87 to 89-BJ
12	6701	WASHER, 8-87 (4)	Softail: L87 to 90-BJ
13	6716	WASHER (2)	Softail: L87 to 89-BJ
15	7069	LOCKWASHER (2)	Softail: 88 and 89-BJ
14	7041	LOCKWASHER (8)	Softail: 90 to 90-BJ
16	7626W	LOCKNUT (2)	Softail: L87-BJ
16	90844-80	ACORN NUT (2)	Softail: 88 and 89-BJ
17	7739	LOCKNUT (2)	Softail: L87 to 89-BJ
18	7778	LOCKNUT (4)	Softail: L87 to 89-BJ
19	8099	WELL NUT (6)	Softail: 90 to 90-BJ
20	51923-86	CIRCLE COTTER (4)	Softail: L87 to 89-BJ
21	59264-86	REFLECTOR, red (2)	Softail: L87 to 89-BJ
22	90346-90	SUPPORT, lower-front (2)	Softail: 90 to 90-BJ
23	90361-90	SUPPORT, upper (4)	Softail: 90 to 90-BJ
24	90640-86	SADDLEBAG, left (1)	Softail: L87 to 89-BJ
24	90644-86	SADDLEBAG, right (1)	Softail: L87 to 89-BJ
25	90785-86	SUPPORT, right (1)	Softail: L87 to 89-BJ
25	90787-86	SUPPORT, left (1)	Softail: L87 to 89-BJ
26	90785-90	SUPPORT, right (1)	Softail: 90 to 90-BJ
26	90787-90	SUPPORT, left (1)	Softail: 90 to 90-BJ
27	90820-74A	LABEL, load limit (2)	Softail: L87 to 89-BJ
27	90835-90	SADDLEBAG ASM., complete (1)	Softail: 90 to 90-BJ
28	90989-63	BRACE, saddlebag (1)	Softail: L87 to 89-BJ
		INTERNATIONAL MODELS ONLY	
	1205	SCREW, HDI only (2)	Softail: 87 to 89-BJ
	6716	WASHER, HDI only (2)	Softail: 87 to 89-BJ
	7069	LOCKWASHER, HDI only (2)	Softail: 87 to 89-BJ
	59252-87	REFLECTOR, round (amber) (HDI only) (2)	Softail: 87 to 89-BJ
	90844-80	ACORN NUT, HDI only (2)	Softail: 87 to 89-BJ

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

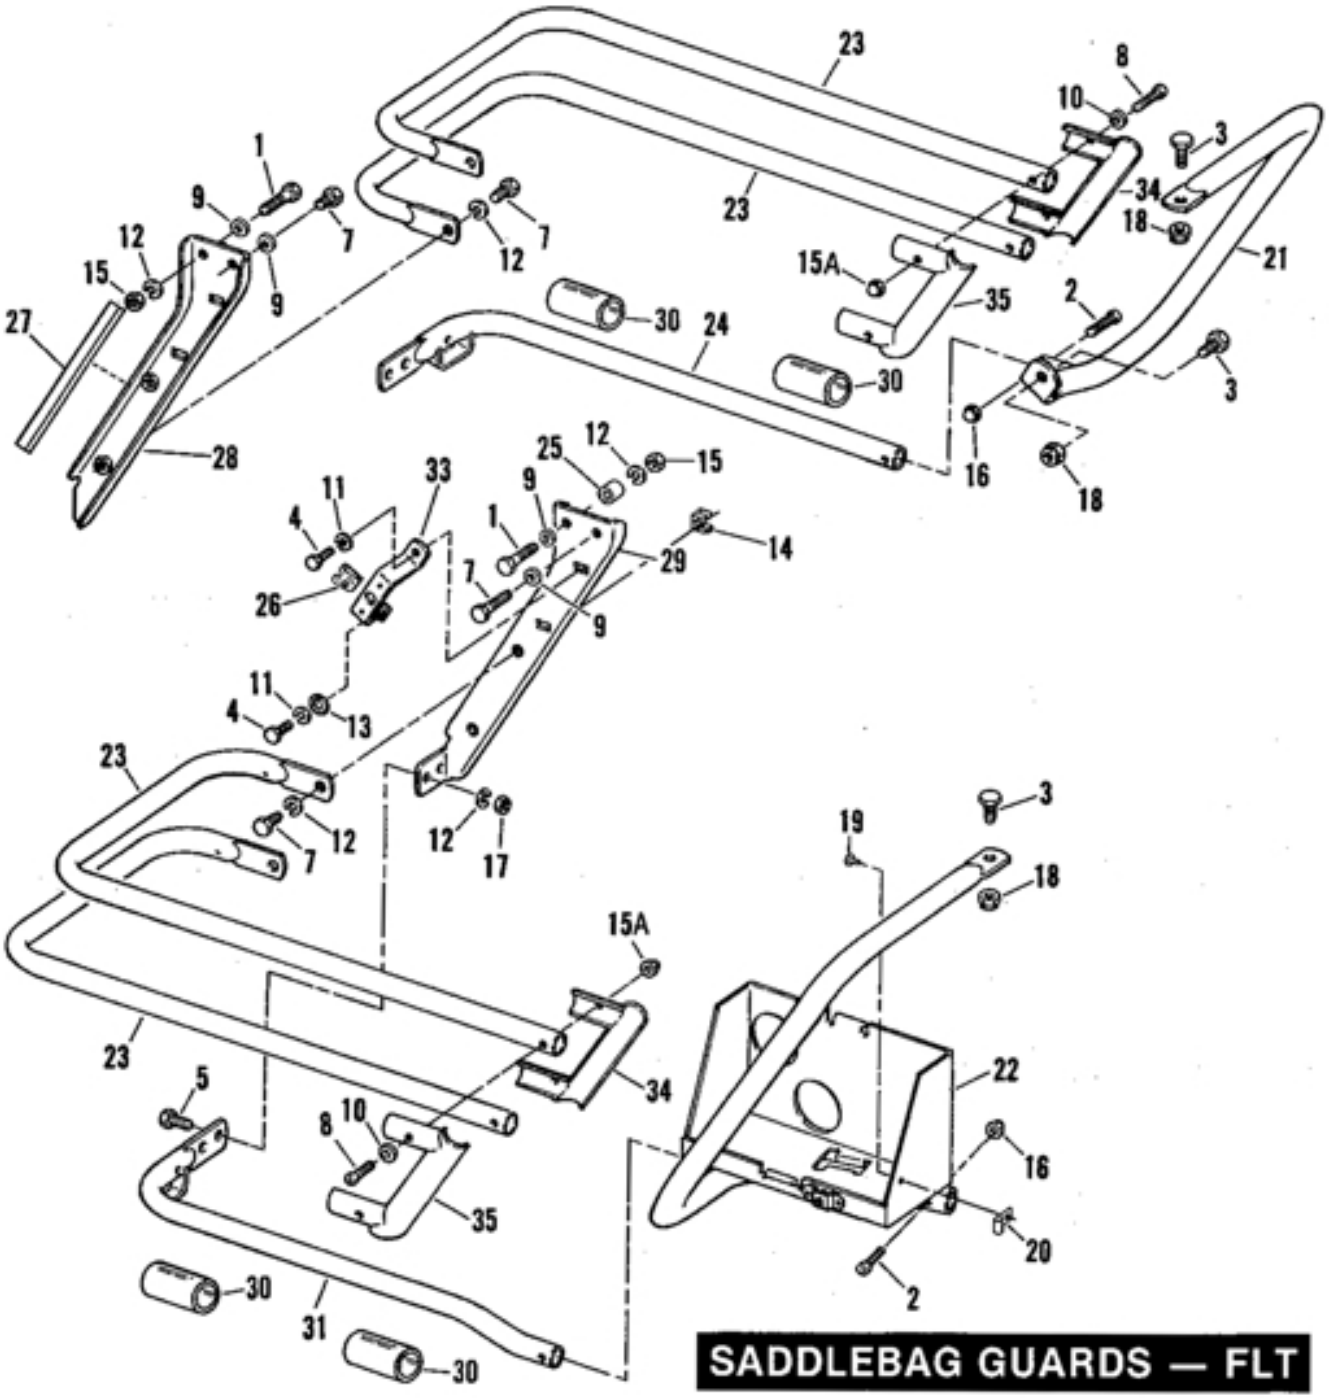


SADDLEBAG GUARDS — FLT

SADDLEBAG GUARDS - FLT MODELS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2818	BOLT (2)	Touring: 87 to 90-ALL
1A	2882W	SCREW (2)	Touring: 90 to 90-DB/J/M/P
2	2841W	SCREW (3)	Touring: 87 to 90-ALL
3	2889	BOLT (3)	Touring: 87 to 90-ALL
4	3765	BOLT (4)	Touring: 87 to 90-ALL
5	3974HW	BOLT (4)	Touring: 87 to 90-ALL
7	4391	BOLT (2)	Touring: 87 to 89-DB/D/J/M/P
8	4800	SCREW (4)	Touring: 87 to 90-DB/D/J/M/P
9	6702	WASHER (4)	Touring: 87 to 90-ALL
10	6703	WASHER (4)	Touring: 87 to 90-DB/D/J/M/P
11	7036	WASHER (4)	Touring: 87 to 90-ALL
12	7041	LOCKWASHER, 6-FA (10)	Touring: 87 to 90-ALL
13	7230	LOCKWASHER (1)	Touring: 87 to 90-ALL
14	7510	CLIP NUT (4)	Touring: 87 to 90-ALL
15	7531	LOCKNUT (2)	Touring: 87 to 90-ALL
15A	7737W	ACORN NUT (4)	Touring: 87 to 90-DB/D/J/M/P
16	7683	LOCKNUT (3)	Touring: 87 to 90-ALL
17	7753	NUT (4)	Touring: 87 to 90-ALL
18	7776W	LOCKNUT (3)	Touring: 87 to 90-ALL
19	8672	RIVET (1)	Touring: 87 to 90-ALL
20	10034	CLIP (1)	Touring: 87 to 90-ALL
21	49187-79	GUARD, left (1)	Touring: 87 to 90-ALL
22	49188-79A	GUARD, right, with battery support (1)	Touring: 87 to 90-ALL
23	49193-79	GUARD, saddlebags (4)	Touring: 87 to 90-DB/D/J/M/P
24	49194-85	SUPPORT, saddlebag-left (1)	Touring: 87 to 90-ALL
25	59059-86	SPACER (2)	Touring: 87 to 90-ALL
26	70908-82	RECEPTACLE (4)	Touring: 87 to 90-ALL
27	90594-85	CUSHION (2)	Touring: 87 to 90-ALL
28	90718-79	SUPPORT BRACKET, left (1)	Touring: 87 to 90-ALL
29	90720-79	SUPPORT BRACKET, right (1)	Touring: 87 to 90-ALL
30	90764-83	PAD, saddlebag mounting (4)	Touring: 87 to 90-ALL
31	90781-85	SUPPORT, saddlebag-right (1)	Touring: 87 to 90-ALL
33	90801-83	BRACKET, saddlebag mounting (2)	Touring: 87 to 90-ALL
34	90940-79	CLAMP, saddlebag guard-left (2)	Touring: 87 to 90-DB/D/J/M/P
35	90941-79	CLAMP, saddlebag guard-right (2)	Touring: 87 to 90-DB/D/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

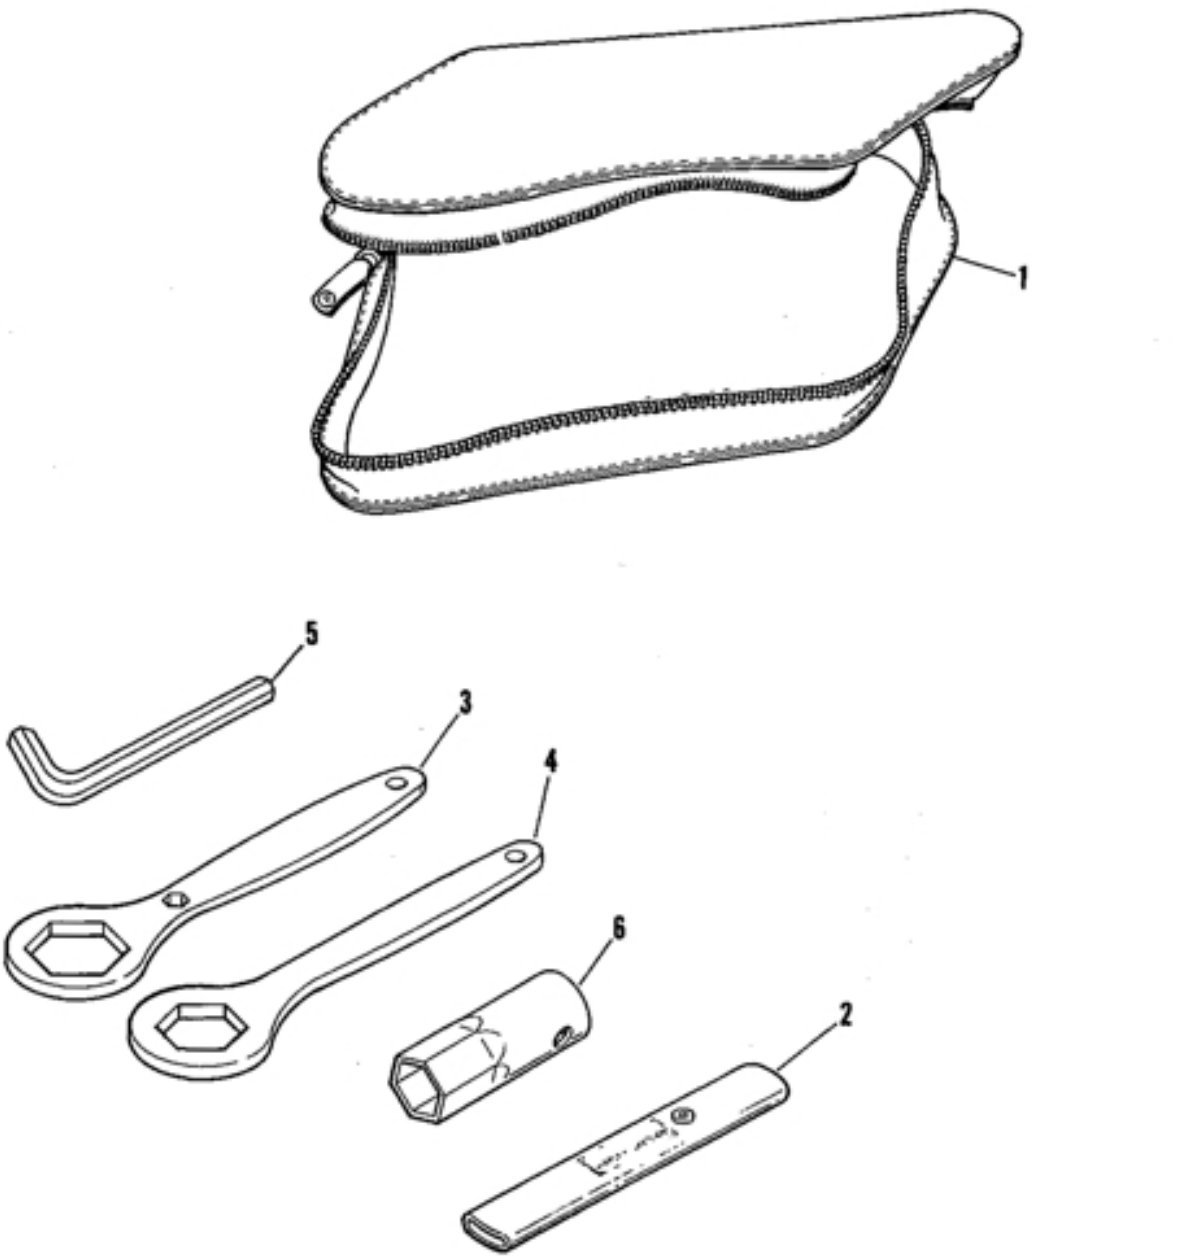


RIDER TOOLS — FLT

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	94436-82A	POUCH, N/A (1)	Touring: 87 to 90-DB/D/J/M/P
2	94443-82	EXTENSION HANDLE, N/A (1)	Touring: 87 to 89-DB/D/J/M/P
3	94445-82	WRENCH, rear axle (1)	Touring: 87 to 89-DB/D/J/M/P
4	94447-82	WRENCH, front axle-3/4 (1)	Touring: 87 to 89-DB/D/J/M/P
5	94452-85	HEX WRENCH, 3/8 (1)	Touring: 87 to 90-DB/D/J/M/P
5	94453-85	HEX WRENCH, 5/16 (1)	Touring: 87 to 90-DB/D/J/M/P
6	94515-68A	SPARK PLUG SOCKET (1)	Touring: 87 to 90-DB/D/J/M/P

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

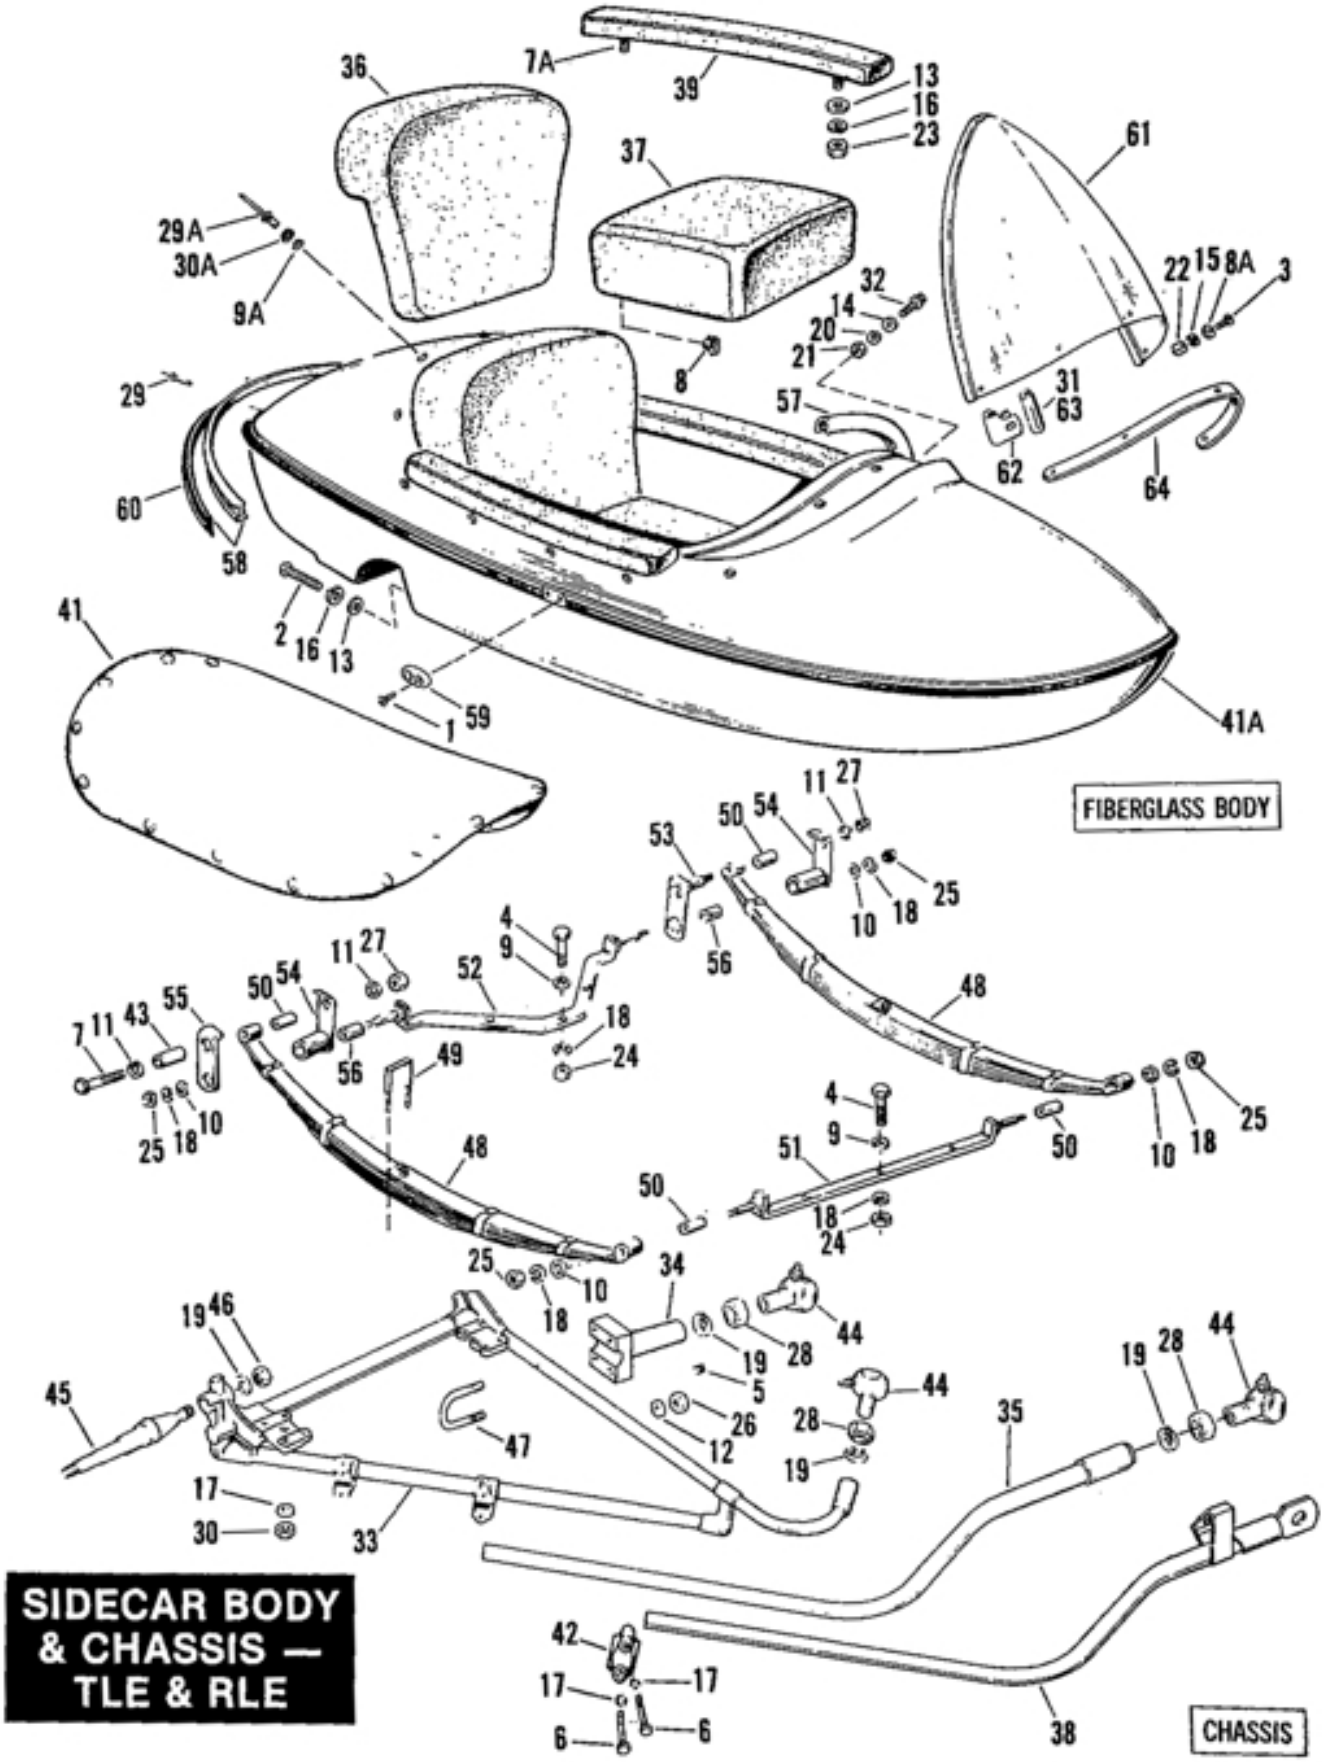

SIDECAR BODY & CHASSIS — TLE & RLE
FIBERGLASS BODY
CHASSIS

SIDECAR BODY AND CHASSIS - TLE AND RLE (1 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2216W	SCREW (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
2	2599	SCREW (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
3	2726	SCREW (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX
4	2887W	BOLT (6)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	3233	SCREW (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	3946	BOLT (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7	4401W	BOLT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7A	5406B	BOLT, N/A (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX
8	5486W	TEE NUT, N/A (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
8A	6228W	WASHER (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX
9	6332B	WASHER (6)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
9A	6335	WASHER (16)	FXR: 90 to 90-HX Touring: 90 to 90-GX, KX
10	6237	WASHER (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
11	6416	WASHER (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
12	6701	WASHER (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
13	6703	WASHER (6)	FXR: 87 to 90-HX Touring: 87 to 90-GX
14	6716	WASHER (16)	FXR: 87 to 89-HX Touring: 87 to 89-GX
15	7030W	LOCKWASHER (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX
16	7036	WASHER (6)	FXR: 87 to 90-HX Touring: 87 to 90-GX
17	7039	LOCKWASHER (12)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
18	7041	LOCKWASHER (10)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
19	7043	LOCKWASHER (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
20	7069	LOCKWASHER (16)	FXR: 87 to 89-HX Touring: 87 to 89-GX
21	7638	NUT (16)	FXR: 87 to 89-HX Touring: 87 to 89-GX

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

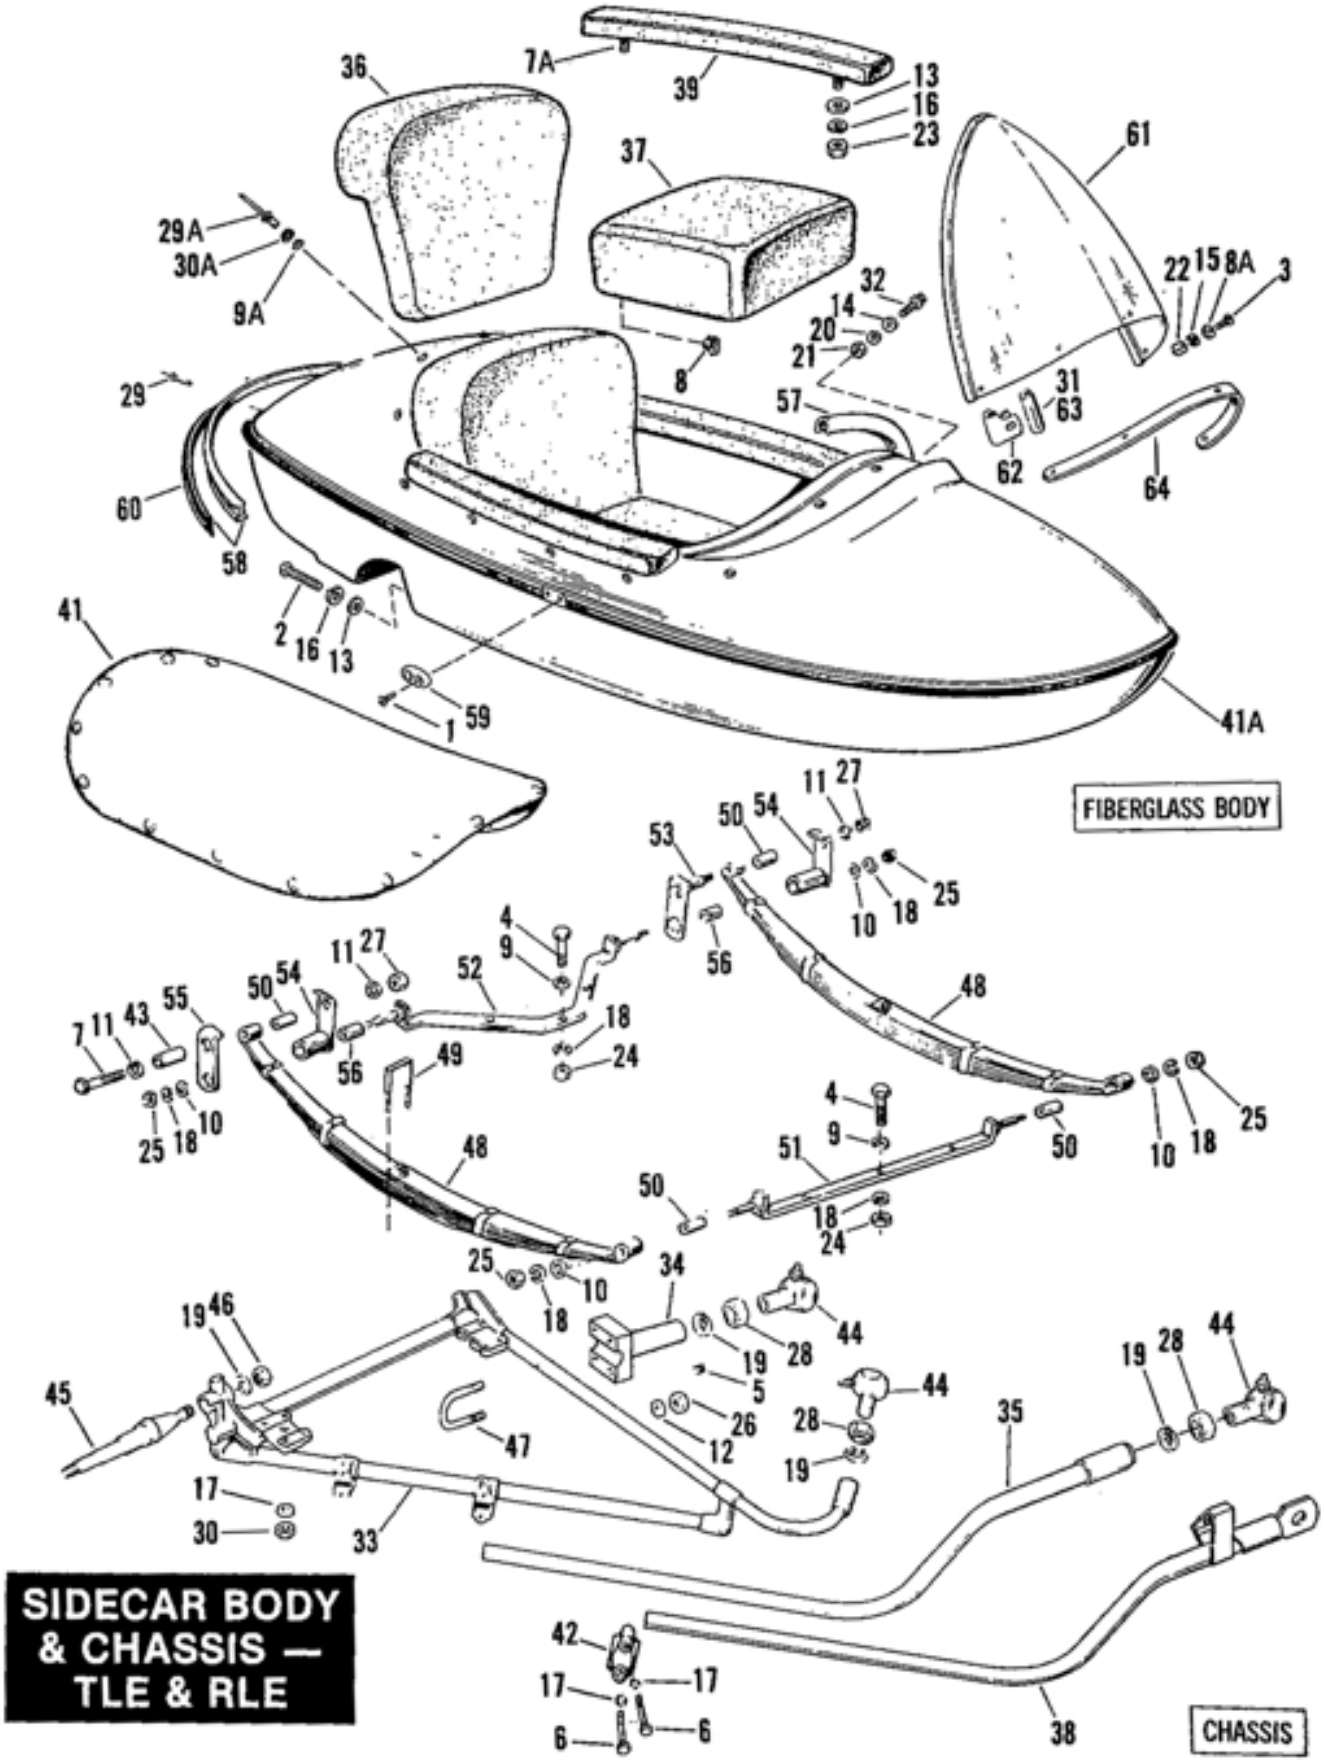

SIDECAR BODY & CHASSIS — TLE & RLE
FIBERGLASS BODY
CHASSIS

SIDECAR BODY AND CHASSIS - TLE AND RLE (2 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	7654W	NUT (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX
23	7688	NUT (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX
24	7748W	NUT (6)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
25	7753	NUT (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
26	7775	LOCKNUT (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
27	7780	LOCKNUT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
28	7855W	JAMNUT (3)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
29	8688	POP RIVET (29)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
29A	8696	POP RIVET (16)	FXR: 90 to 90-HX Touring: 90 to 90-GX, KX
30	16602-30	NUT (8)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
30A	47076-72	SNAP BASE (1)	FXR: 90 to 90-HX Touring: 90 to 90-GX, KX
31	58049-50A	BUSHING, windshield molding, N/A (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
32	58132-66	SNAP STUD, body cover, N/A (16)	FXR: 87 to 89-HX Touring: 87 to 89-GX
33	87006-85	FRAME ASSY., sidecar (1)	FXR: 87 to 90-HX
33	87160-83	FRAME ASSY., sidecar (1)	Touring: 87 to 90-GX, KX
34	87014-85	REAR MOUNTING ASSY. (1)	FXR: 87 to 90-HX
34	87157-83	REAR MOUNTING ASSY. (1)	Touring: E87-GK
34	87157-87	REAR MOUNTING ASSY. (1)	Touring: L87 to 90-GX, KX
35	87030-85	BRACE, sidecar frame (1)	FXR: 87 to 90-HX
36	87053-79	BACK CUSHION, brown (1)	Touring: 87 to 90-GX
36	88481-67	BACK CUSHION, black (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
37	87055-79	SEAT CUSHION, brown (1)	Touring: 87 to 90-GX
37	88487-67	SEAT CUSHION, black (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
38	87056-83B	BRACE, sidecar frame (1)	Touring: 87 to 90-GX, KX
39	87057-79	ARM REST CUSHION, brown (2)	Touring: 87 to 90-GX
39	88493-67	ARM REST CUSHION, black (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
41	87058-79	COVER, sidecar body (brown) (1)	Touring: 87 to 90-GX
41	88528-67	COVER, sidecar body (black) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
41A	87068-87	SIDECAR BODY, candy two-tone (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
41A	87075-87	SIDECAR BODY, single color (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
41A	87078-87	SIDECAR BODY, two-tone (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
41A	87079-87	SIDECAR BODY, single candy color (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
42	87117-36	LOWER CLAMP (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

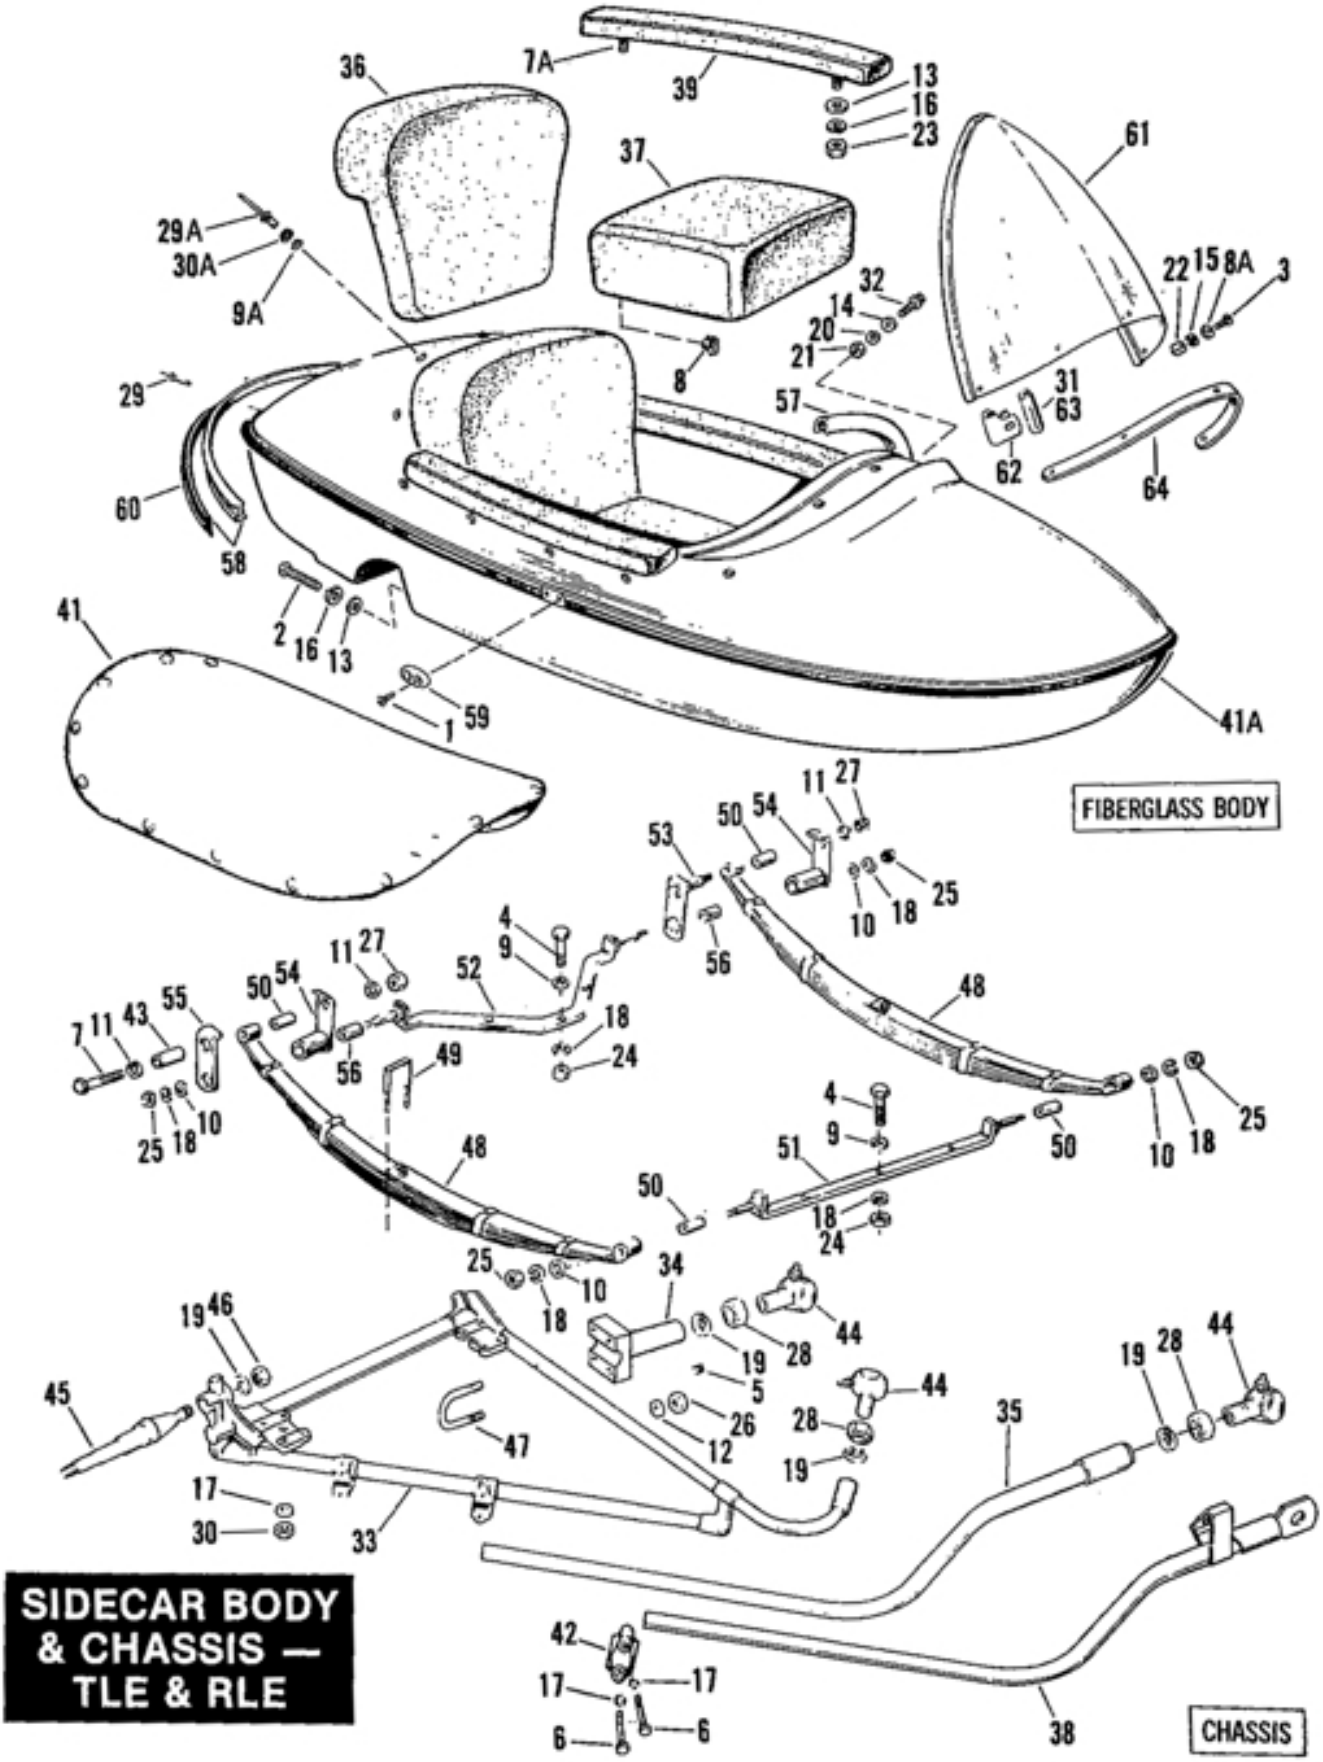

SIDECAR BODY & CHASSIS — TLE & RLE
FIBERGLASS BODY
CHASSIS

SIDECAR BODY AND CHASSIS - TLE AND RLE (3 OF 3)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
43	87120-79	SPACER, turn signal and spring shackle (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
44	87159-83	ROD END, sidecar mounting (3-HX) (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
45	87435-83	AXLE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
46	87444-33	AXLE NUT, inside sidecar frame (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
47	87701-79	U-BOLT, rear mounting bracket (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
48	88100-24A	SIDECAR SPRING (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
49	88172-25	U-BOLT, springs (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
50	88174-37	SPRING BUSHING (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
51	88261-36	SUPPORT ROD, front (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
52	88264-36	SUPPORT ROD, rear (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
53	88300-79	SHACKLE PLATE, w/stud, inner-spring, N/A (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
54	88301-79	SHACKLE PLATE, w/bushing, spring (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
55	88302-79	SHACKLE PLATE, spring-outer (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
56	88314-37	BUSHING, shackle plate (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
57	88425-67	TRIM STRIP, body top (black) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
58	88694-67	TRIM STRIP, w/fittings, N/A (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
59	88695-67	RETAINER CLIP, sidecar trim strip (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
60	88698-67	CHANNEL INSERT, trim strip (blk vinyl) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
61	88862-67	WINDSHIELD, only (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
62	88883-67	CLAMP, windshield molding (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
63	88885-67	BUSHING, windshield molding, N/A (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX
64	88895-67	WINDSHIELD BRACE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

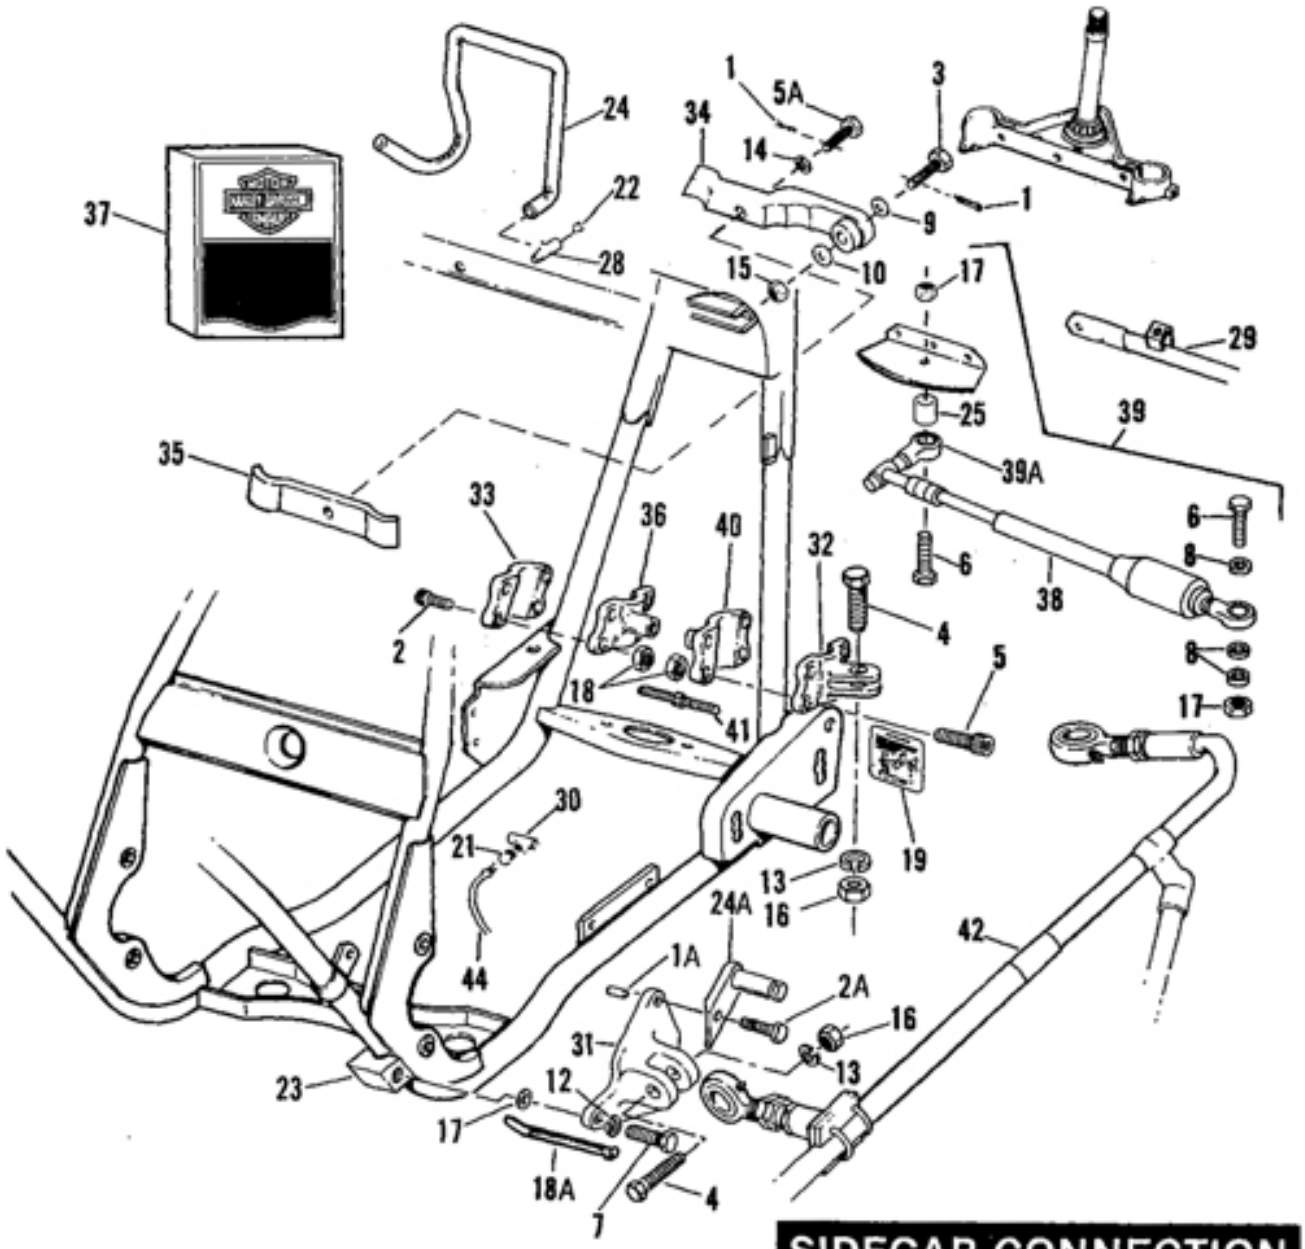

SIDECAR CONNECTION KIT — TLE


SIDECAR CONNECTION KIT - TLE

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	559	COTTER PIN (1)	Touring: 87 to 90-GX, KX
1A	604	ROLL PIN (1)	Touring: 87 to 90-GX, KX
2	855A	SCREW (4)	Touring: 87 to 90-GX, KX
2A	3764	BOLT (1)	Touring: 90 to 90-GX, KX
2A	3946	BOLT (1)	Touring: L87 to 89-GX
3	3973	BOLT (1)	Touring: 87 to 90-GX, KX
4	4028	BOLT (2)	Touring: 87 to 90-GX, KX
5	4029	SCREW (4)	Touring: 87 to 90-GX, KX
5A	4081	BOLT (1)	Touring: 87 to 90-GX, KX
6	4411	BOLT (2)	Touring: 87 to 90-GX, KX
7	4729	BOLT (1)	Touring: 87 to 90-GX, KX
8	6701	WASHER (3)	Touring: 87 to 90-GX, KX
9	6718	WASHER (1)	Touring: 87 to 90-GX, KX
10	6723	WASHER (1)	Touring: 87 to 90-GX, KX
11	6960	WASHER, 0.004 inch thick (as req'd) (1)	Touring: 87 to 90-GX, KX
11	6961	WASHER, 0.007 inch thick (as req'd) (1)	Touring: 87 to 90-GX, KX
11	6962	WASHER, 0.015 inch thick (as req'd) (1)	Touring: 87 to 90-GX, KX
11	6963	WASHER, 0.031 inch thick (as req'd) (1)	Touring: 87 to 90-GX, KX
12	7039	LOCKWASHER (1)	Touring: 87 to 90-GX, KX
13	7043	LOCKWASHER (2)	Touring: 87 to 90-GX, KX
14	7068	LOCKWASHER (1)	Touring: 87 to 90-GX, KX
15	7734W	NUT (1)	Touring: 87 to 90-GX, KX
16	7652	NUT (2)	Touring: 87 to 90-GX, KX
17	7775	LOCKNUT (2)	Touring: 87 to 90-GX, KX
18	7778	LOCKNUT (8)	Touring: 87 to 90-GX, KX
19	10006	CABLE STRAP (8)	Touring: 87 to 90-GX, KX
20	14027-83	LABEL, footboard and brake pedal adj. (1)	Touring: 87 to 90-GX, KX
21	42311-58	PLUG, brake line (w/sidecar removed) (1)	Touring: 87 to 90-GX, KX
22	45830-48	PLUG, front fork air control (1)	Touring: 87-GX
23	47902-83	MOUNTING BLOCK, rear (1)	Touring: 87 to 90-GX, KX
24	49060-84	HOSE, front fork air control (1)	Touring: 87-GX
24A	50594-87	MOUNT, passenger footboard (1)	Touring: L87 to 90-GX, KX
25	59938-72	SPACER, mounting (1)	Touring: 87 to 90-GX, KX
28	74423-68	FITTING, front fork air control (1)	Touring: 87-GX
29	87056-83B	BRACE, sidecar frame (1)	Touring: 87 to 90-GX, KX
30	87113-83	TEE, brake line (1)	Touring: 87 to 90-GX, KX
31	87114-83	BRACKET ASSY., rear w/# 1 (1)	Touring: 87 to 90-GX, KX
32	87122-83	MOUNTING BRACKET, lower front-right (1)	Touring: 87 to 90-GX, KX
33	87123-83	MOUNTING BRACKET, lower front-left (1)	Touring: 87 to 90-GX, KX
34	87131-83B	UPPER CONNECTION, front (1)	Touring: 87 to 90-GX, KX
35	87132-83B	UPPER CONNECTION, rear (1)	Touring: 87 to 90-GX, KX
36	87137-83	STABILIZER BRACKET, left (1)	Touring: 87 to 90-GX, KX
37	87140-83	STEERING DAMPER KIT, N/A (1)	Touring: 87 to 90-GX, KX
38	87141-83	STEERING DAMPER (1)	Touring: 87 to 90-GX, KX
39	87142-83	DAMPER MOUNTING KIT (1)	Touring: 87 to 90-GX, KX
39A	87144-83	ROD END BALL JOINT (1)	Touring: 87 to 90-GX, KX
40	87148-83	STABILIZER BRACKET, right (1)	Touring: 87 to 90-GX, KX
41	87156-83	STABILIZER, front (1)	Touring: 87 to 90-GX, KX
42	87160-83	FRAME ASSY. (1)	Touring: 87 to 90-GX, KX
42	87166-83C	CONNECTION KIT, sidecar (1)	Touring: 87 to 90-GX, KX
44	87776-83	BRAKE LINE, sidecar (1)	Touring: 87 to 90-GX, KX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

SIDECAR CONNECTION KIT — RLE

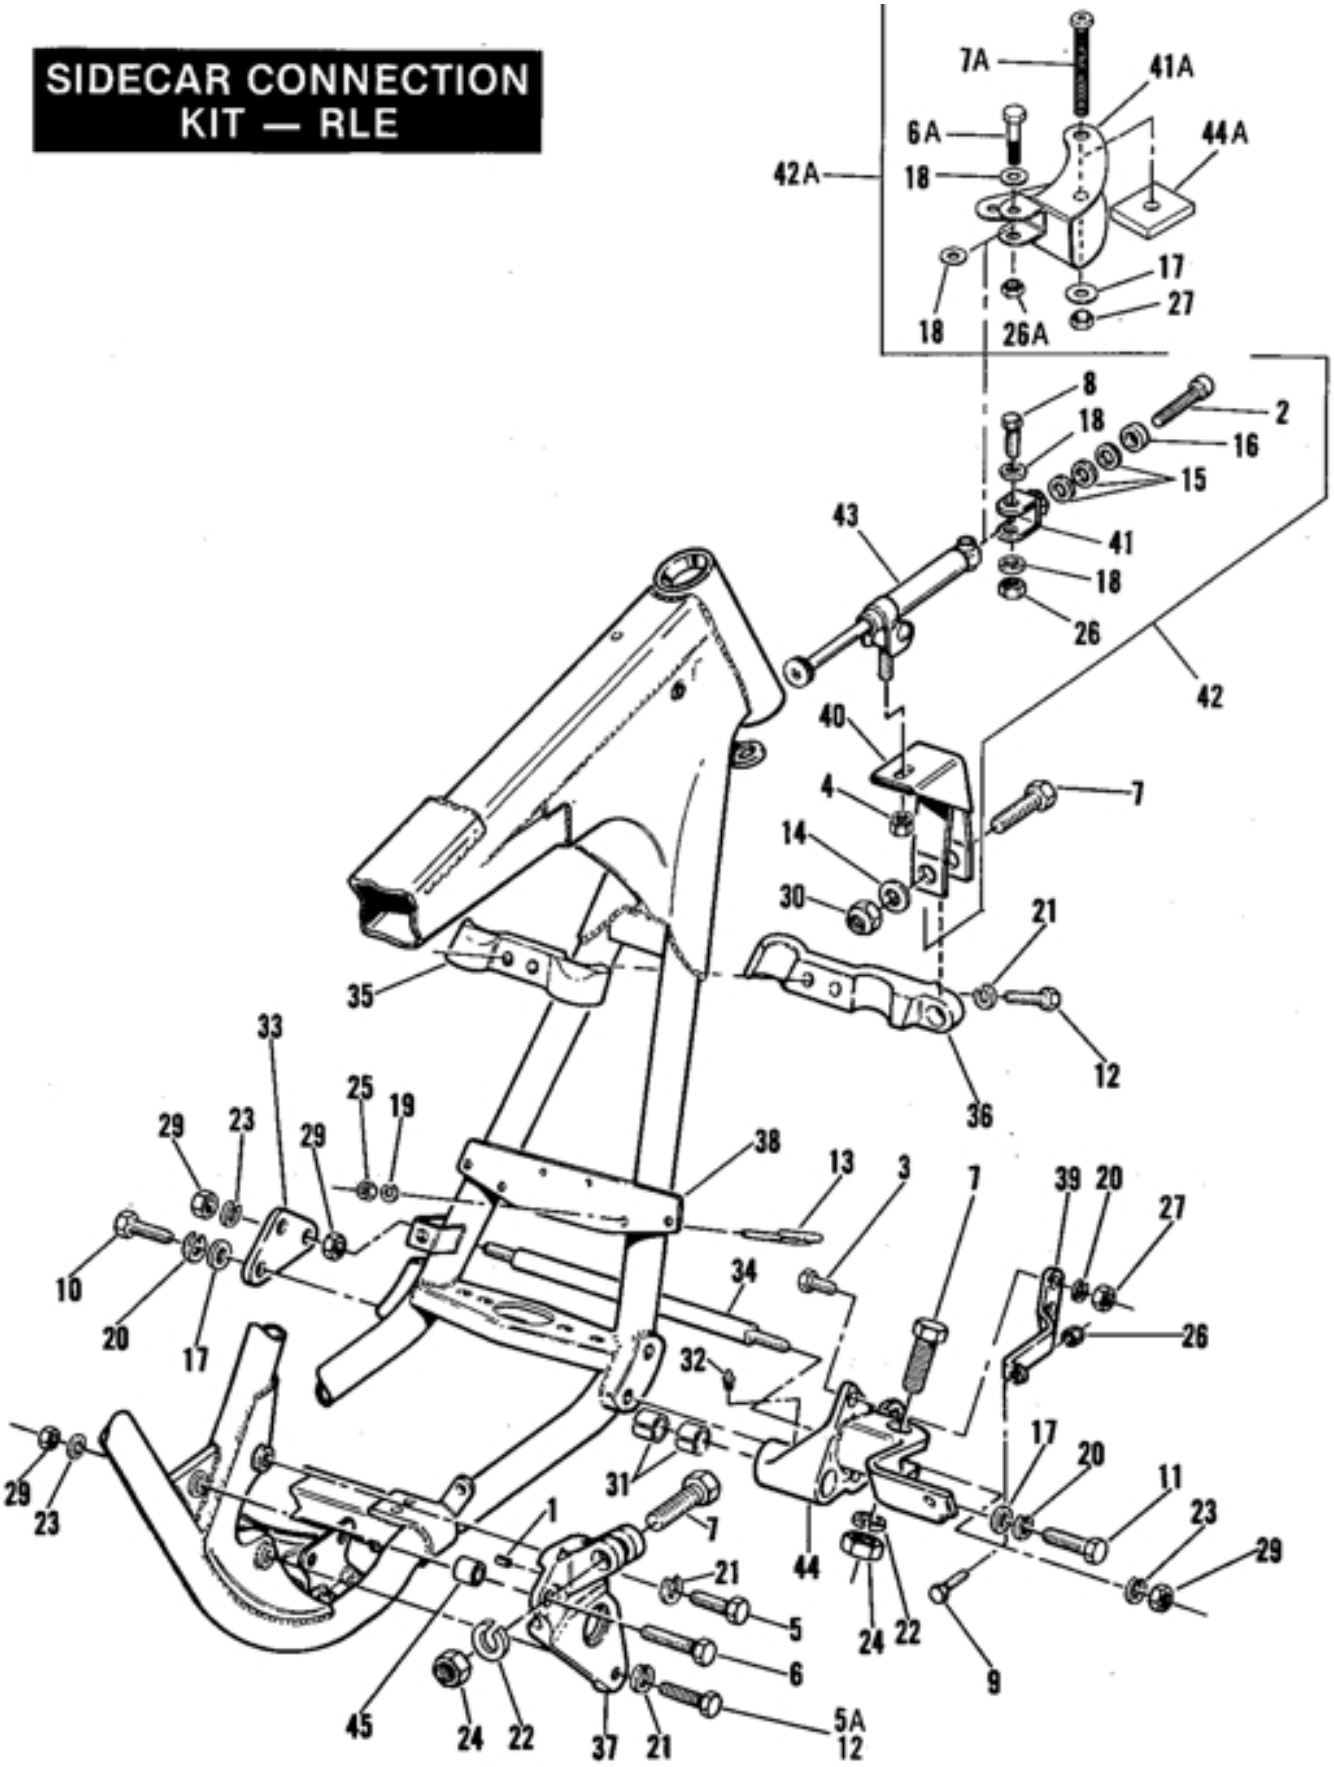


SIDECAR CONNECTION KIT - RLE (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	604	ROLL PIN (1)	FXR: 87 to 90-HX
2	883	SCREW (1)	FXR: 87-HX
3	2879W	BOLT (1)	FXR: 87 to 90-HX
4	3403	LOCKNUT (1)	FXR: 87 to 90-HX
5	3764	BOLT (1)	FXR: 90 to 90-HX
5A	3771	BOLT (1)	FXR: 90 to 90-HX
5A	3946	BOLT (1)	FXR: 87 to 89-HX
6	3958	BOLT (1)	FXR: 87 to 90-HX
6A	4014W	BOLT (1)	FXR: 88 to 90-HX
7	4028	BOLT (3)	FXR: 87 to 90-HX
7A	4030	SCREW (1)	FXR: 88 to 90-HX
8	4036	BOLT (1)	FXR: 87-HX
9	4701	BOLT (1)	FXR: 87 to 90-HX
10	4716W	SCREW (2)	FXR: 87 to 90-HX
11	4721	BOLT (2)	FXR: 87 to 90-HX
12	4726	BOLT, 3-87 (2)	FXR: 87 to 90-HX
13	5251	U-BOLT, N/A (2)	FXR: 87 to 90-HX
14	6340	WASHER, N/A (1)	FXR: 87 to 90-HX
15	6375B	WASHER (3)	FXR: 87-HX
16	6379W	WASHER (1)	FXR: 87-HX
17	6701	WASHER (4)	FXR: 87 to 90-HX
18	6702	WASHER (2)	FXR: 87 to 90-HX
19	7036	WASHER (4)	FXR: 87 to 90-HX
20	7038	LOCKWASHER (5)	FXR: 87 to 90-HX
21	7039	LOCKWASHER (4)	FXR: 87 to 90-HX
22	7043	LOCKWASHER (2)	FXR: 87 to 90-HX
23	7068	LOCKWASHER (3)	FXR: 87 to 90-HX
24	7652	NUT (2)	FXR: 87 to 90-HX
25	7688	NUT (4)	FXR: 87 to 90-HX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

SIDECAR CONNECTION KIT — RLE

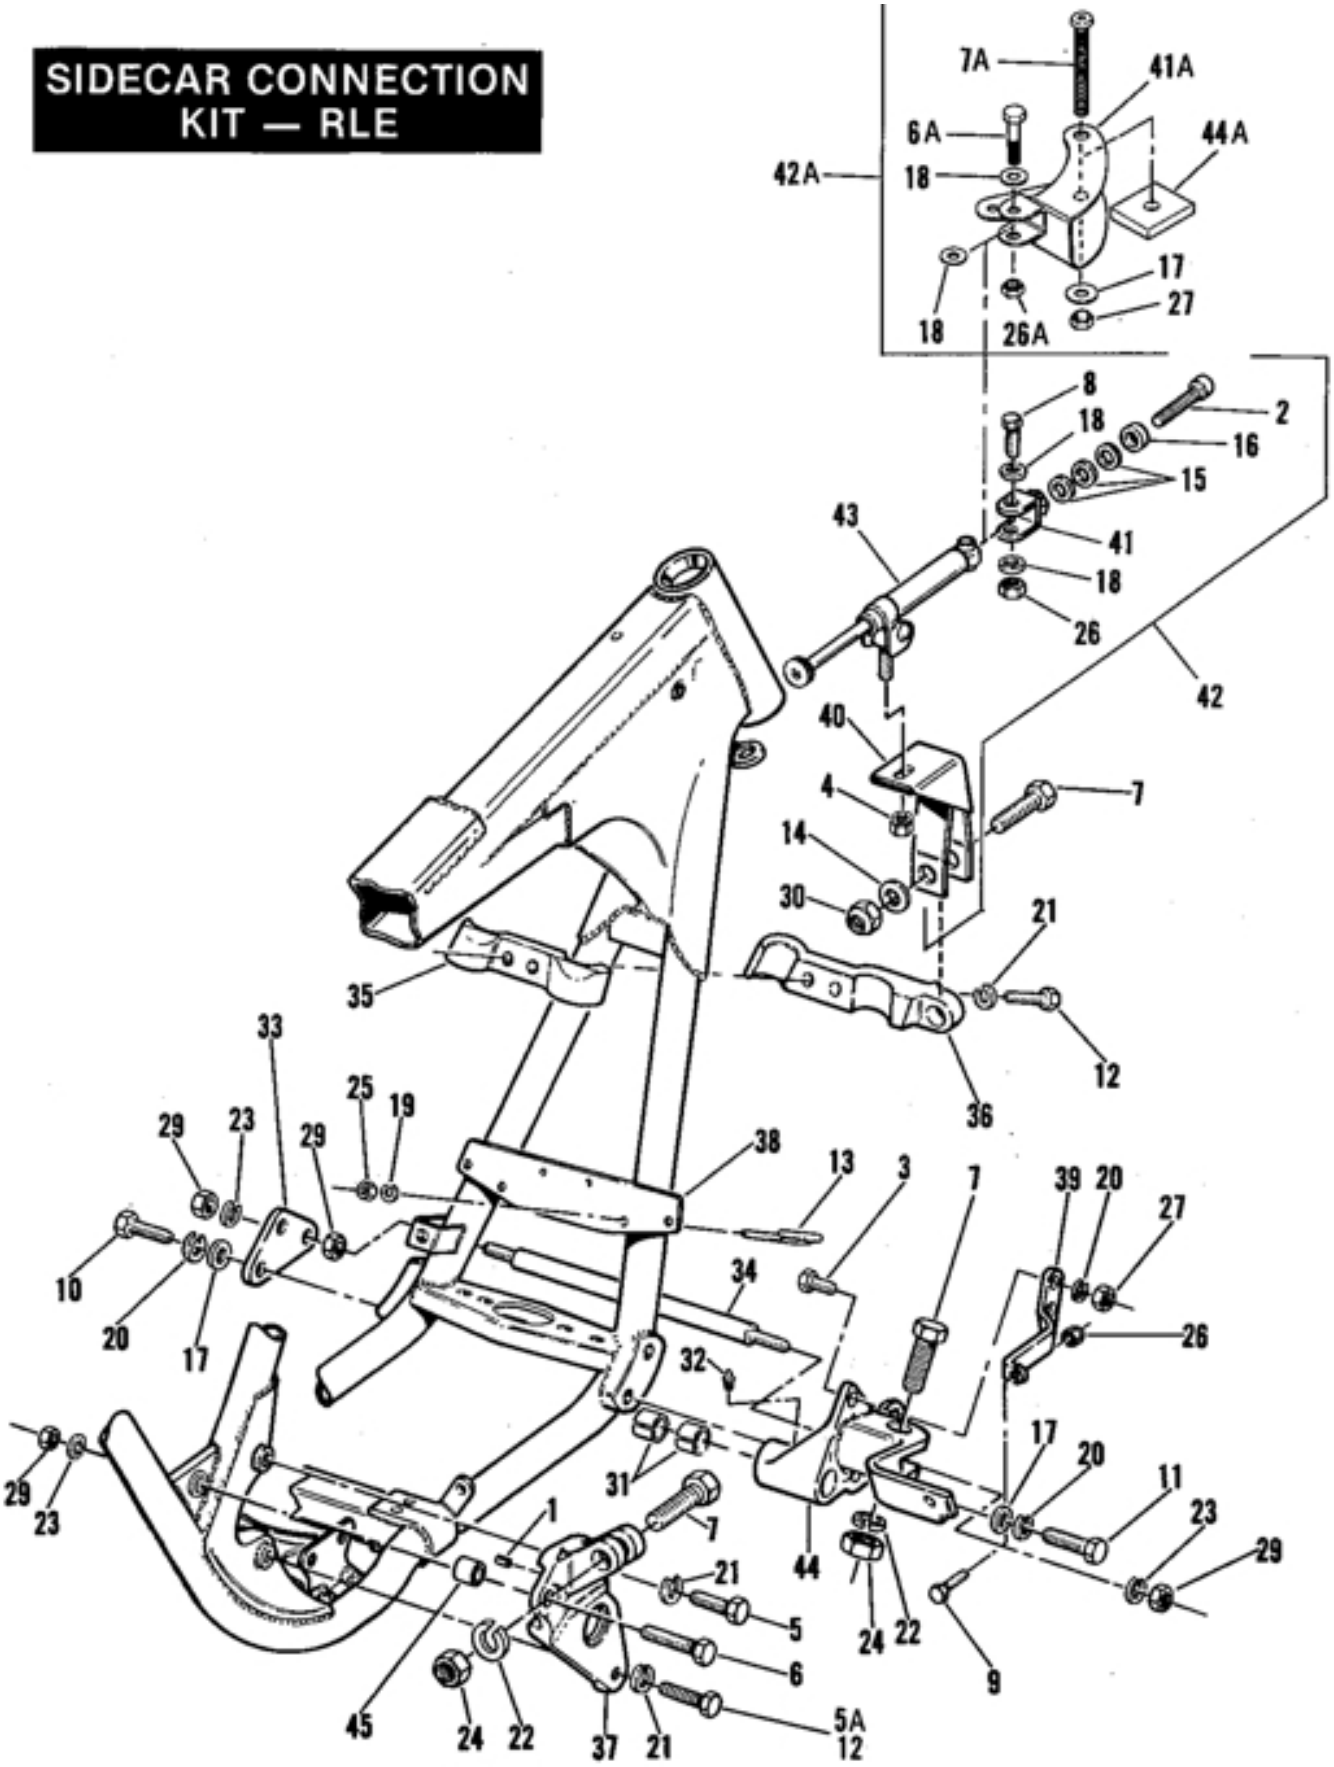


SIDECAR CONNECTION KIT - RLE (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	7725	LOCKNUT (2)	FXR: 87 to 90-HX
26A	7727	LOCKNUT (1)	FXR: 88 to 90-HX
27	7778	LOCKNUT (1)	FXR: 88 to 90-HX
27A	7783	NUT (1)	FXR: 87 to 90-HX
29	7845	NUT (4)	FXR: 87 to 90-HX
30	35078-79	NUT (1)	FXR: 87 to 90-HX
30	45421-84	FORK BRACE, chrome (1)	FXR: 87-HX
30	45452-87	FORK BRACE, chrome (1)	FXR: 88 to 90-HX
31	47247-83	BUSHING (2)	FXR: 87 to 90-HX
32	50972-75	FITTING, lubrication (1)	FXR: 87 to 90-HX
33	87007-85	ADJUSTER PLATE, left front (1)	FXR: 87 to 90-HX
33	87008-85	SIDECAR CONNECTION KIT, N/A (1)	FXR: 87-HX
33	87008-88	SIDECAR CONNECTION KIT (1)	FXR: 88 to 90-HX
34	87010-85	STABILIZER, front (1)	FXR: 87 to 90-HX
35	87011-85	UPPER CONNECTION, rear (1)	FXR: 87 to 90-HX
36	87013-85	UPPER CONNECTION, front (1)	FXR: 87 to 90-HX
37	87015-85	BRACKET ASSY., rear w/# 1 (1)	FXR: 87 to 90-HX
38	87018-85	BRACKET, brake reservoir (1)	FXR: 87 to 90-HX
39	87019-85	BRACKET, brake stop (1)	FXR: 87 to 90-HX
40	87020-85	BRACKET, steering damper (1)	FXR: 87 to 90-HX
41	87022-85	U-BRACKET, steering damper (1)	FXR: 87-HX
41A	87022-88	MOUNTING BRACKET (1)	FXR: 88 to 90-HX
42	87023-85	DAMPER MOUNTING KIT, w/o damper, N/A (1)	FXR: 87-HX
42A	87023-88	DAMPER MOUNTING KIT (1)	FXR: 88 to 90-HX
43	87024-85	STEERING DAMPER (1)	FXR: 87 to 90-HX
44	87025-85A	BRACKET, lower front-rear w/# 31 and 32 (1)	FXR: 87 to 90-HX
44A	87048-88	SPACER (1)	FXR: 88 to 90-HX
45	90480-85	SPACER, rear mount (1)	FXR: 87 to 90-HX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

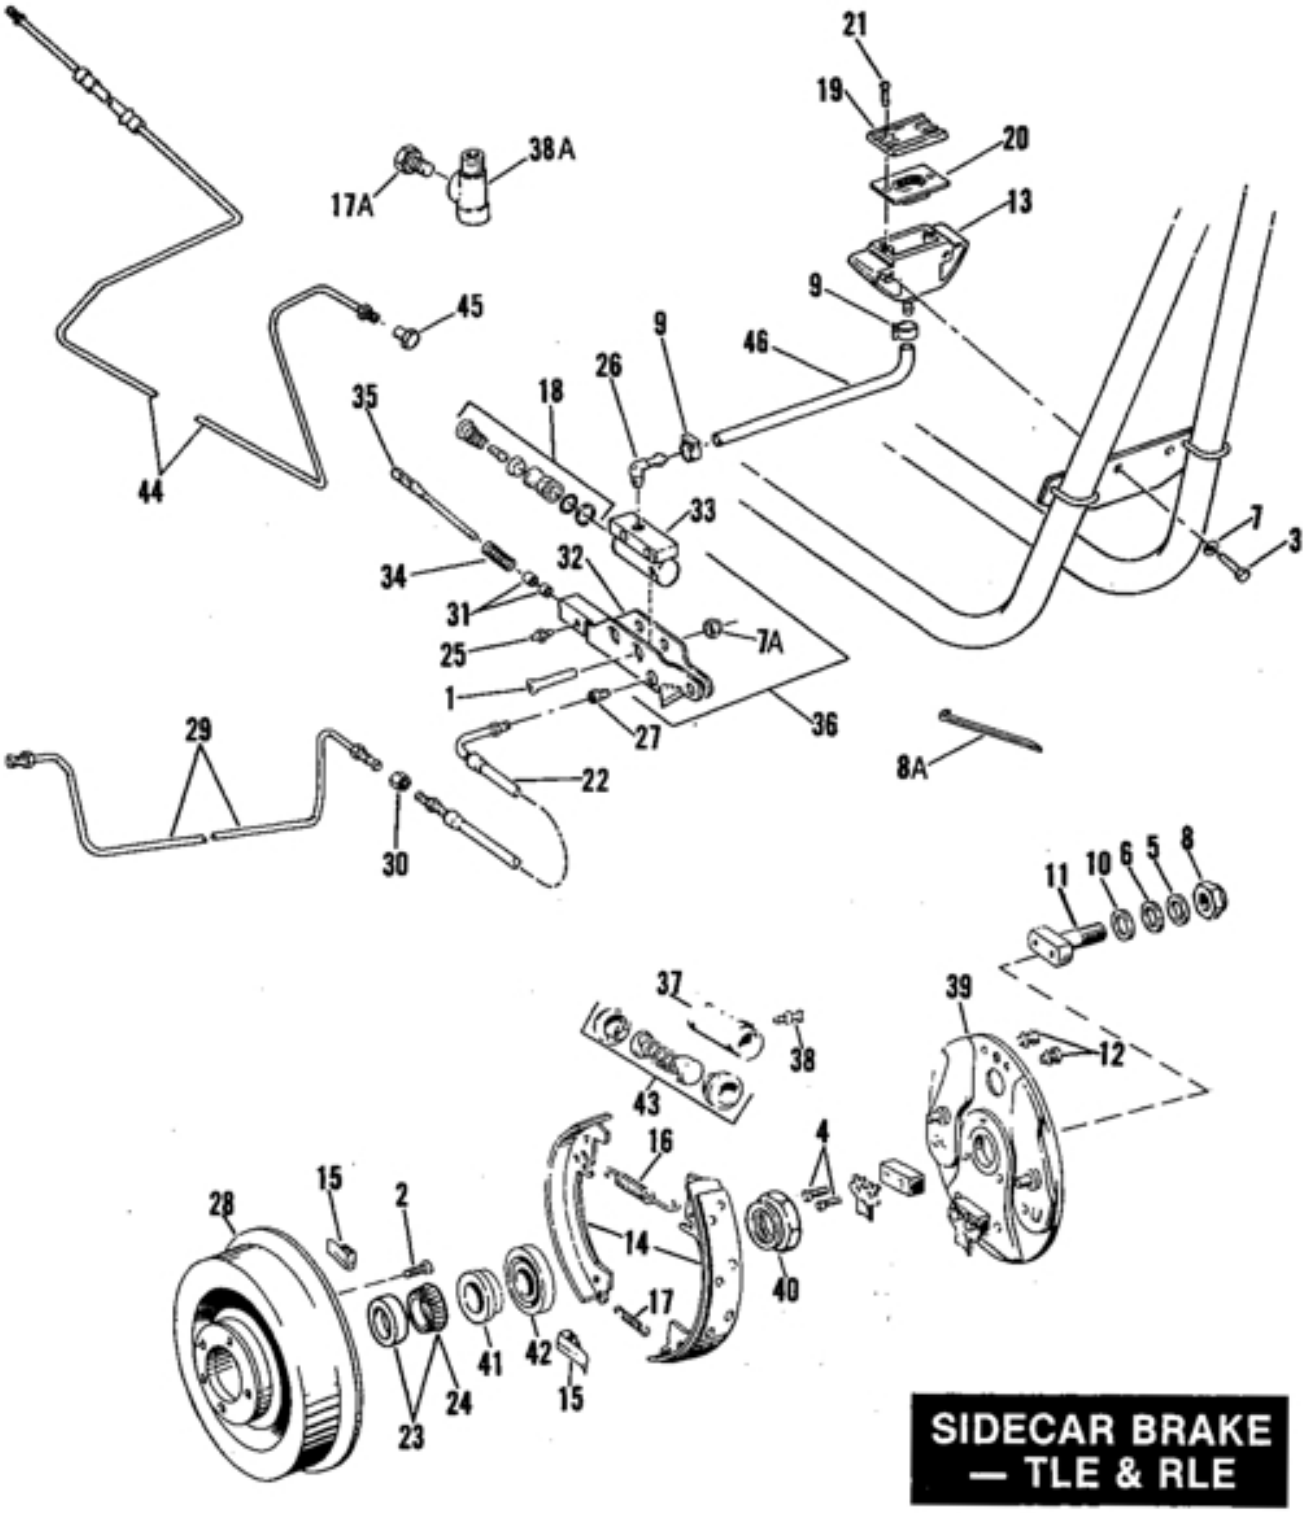

21
19
20
13
9
46
38A
17A
45
9
26
18
35
44
33
7
3
34
32
31
25
7A
1
27
36
29
22
8A
30
11
10
6
5
8
37
39
38
12
43
16
4
15
2
28
14
40
17
41
42
24
15
23
SIDECAR BRAKE
— TLE & RLE

SIDECAR BRAKE - TLE AND RLE (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1610	SCREW (2)	FXR: 87 to 90-HX
2	1643	SCREW (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
3	3473	BOLT (2)	FXR: 87 to 90-HX
4	4020W	BOLT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	6700B	WASHER, as req'd (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	6712B	WASHER, as req'd (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7	6716	WASHER (2)	FXR: 87 to 90-HX
7A	7729	LOCKNUT (2)	FXR: 87 to 90-HX
8	7993	LOCKNUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
8A	10006	CABLE STRAP (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
9	10038	CLAMP (2)	FXR: 87 to 90-HX
10	18268-48	WASHER, as req'd (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
11	41720-58	ANCHOR STUD (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
12	41742-58A	SCREW AND LOCKWASHER, brake cyl. (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
13	41800-81A	RESERVOIR, master cylinder (1)	FXR: 87 to 90-HX
14	41801-58A	SET OF BRAKE SHOES AND LININGS (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
15	41835-58	HOLD DOWN, spring (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
16	41836-58	BRAKE SHOE SPRING, upper (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
17	41837-58	BRAKE SHOE SPRING, lower (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
17A	42311-58	PLUG, brake line tee (1)	Touring: 87 to 90-GX, KX
18	42374-77B	REPAIR KIT, master cylinder (1)	FXR: 87 to 90-HX
19	42376-77A	COVER, reservoir, N/A (1)	FXR: 87 to 89-HX
19	45057-82	COVER, reservoir (1)	FXR: 90 to 90-HX
20	42455-80	GASKET, reservoir (1)	FXR: 87 to 90-HX
21	42534-82	SCREW (2)	FXR: 87 to 90-HX
22	45114-77	HOSE, brake line (1)	FXR: 87 to 90-HX
23	48302-85	BEARING, brake drum (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
24	48315-60	BEARING CUP, brake drum (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
25	50972-75	FITTING, lubrication (1)	FXR: 87 to 90-HX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

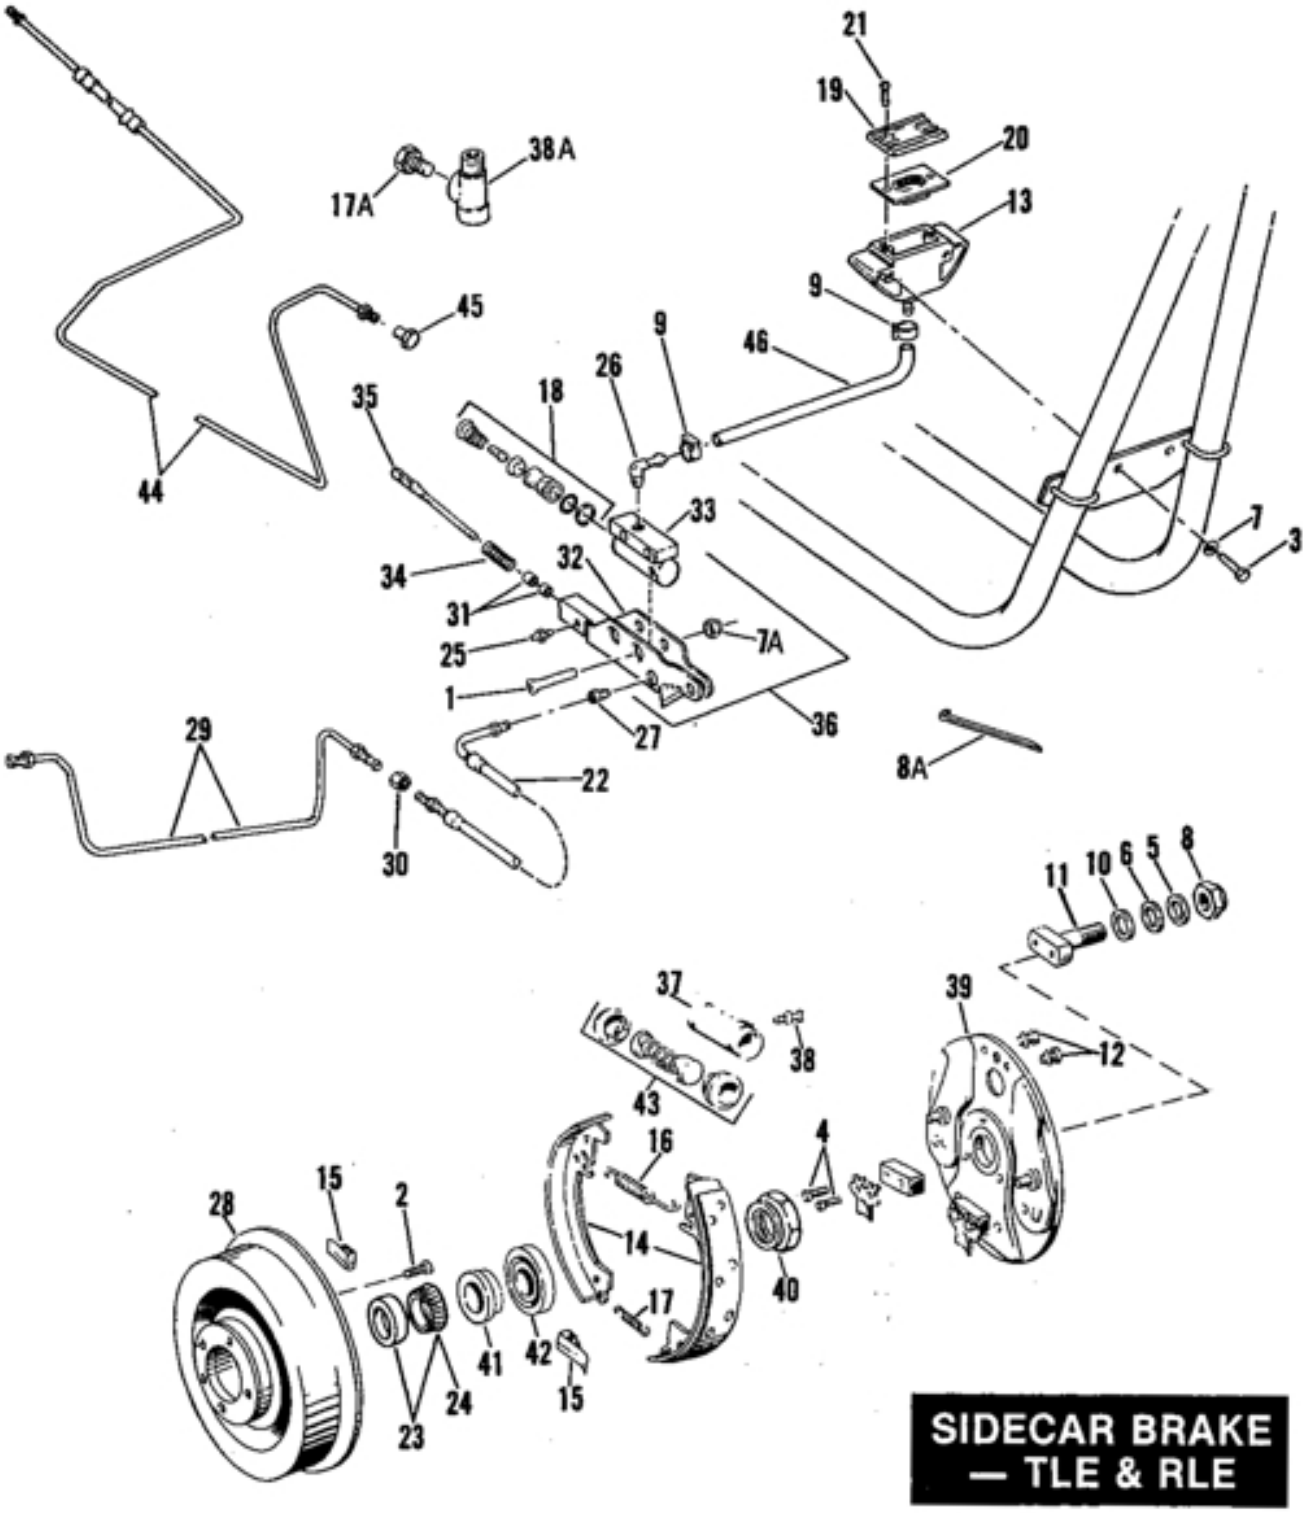


SIDECAR BRAKE — TLE & RLE

SIDECAR BRAKE - TLE AND RLE (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	63551-82	FITTING, reservoir hose (1)	FXR: 87 to 90-HX
27	63609-72	FITTING, brake hose (1)	FXR: 87 to 90-HX
28	87002-83	BRAKE DRUM ASSY. (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
29	87029-85	BRAKE LINE (1)	FXR: 87 to 90-HX
30	87032-85	FITTING, brake line (1)	FXR: 87 to 90-HX
31	87038-85	BUSHING, housing (2)	FXR: 87 to 90-HX
32	87039-85	HOUSING, master cylinder (1)	FXR: 87 to 90-HX
33	87040-85	MASTER CYLINDER (1)	FXR: 87 to 90-HX
34	87041-85	SPRING, brake rod (1)	FXR: 87 to 90-HX
35	87042-85	ROD, brake (1)	FXR: 87 to 90-HX
36	87043-85	MASTER CYLINDER AND HOUSING ASSY. (1)	FXR: 87 to 90-HX
37	87071-89	BRAKE CYLINDER, wheel (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
38	87073-79	BLEEDER FITTING, brake cylinder (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
38A	87113-83	TEE, sidecar brake line (1)	Touring: 87 to 90-GX, KX
39	87672-76	SIDE PLATE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
40	87706-83	LOCKNUT, axle shaft (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
41	87713-83	SPACER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
42	87714-83	OIL SEAL (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
43	87752-58A	REPAIR KIT, brake cylinder (3/4 inch dia.) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
43	87752-89	REPAIR KIT, brake cylinder (5/8 inch dia.) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
44	87776-83	BRAKE LINE (1)	Touring: 87 to 90-GX, KX
45	87778-64A	CAP, sidecar brake line (1)	Touring: 87 to 90-GX, KX
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
46	63573-82	HOSE, 5/16 I.D. (rubber) (25 ft. lg.) (1)	FXR: 87 to 90-HX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

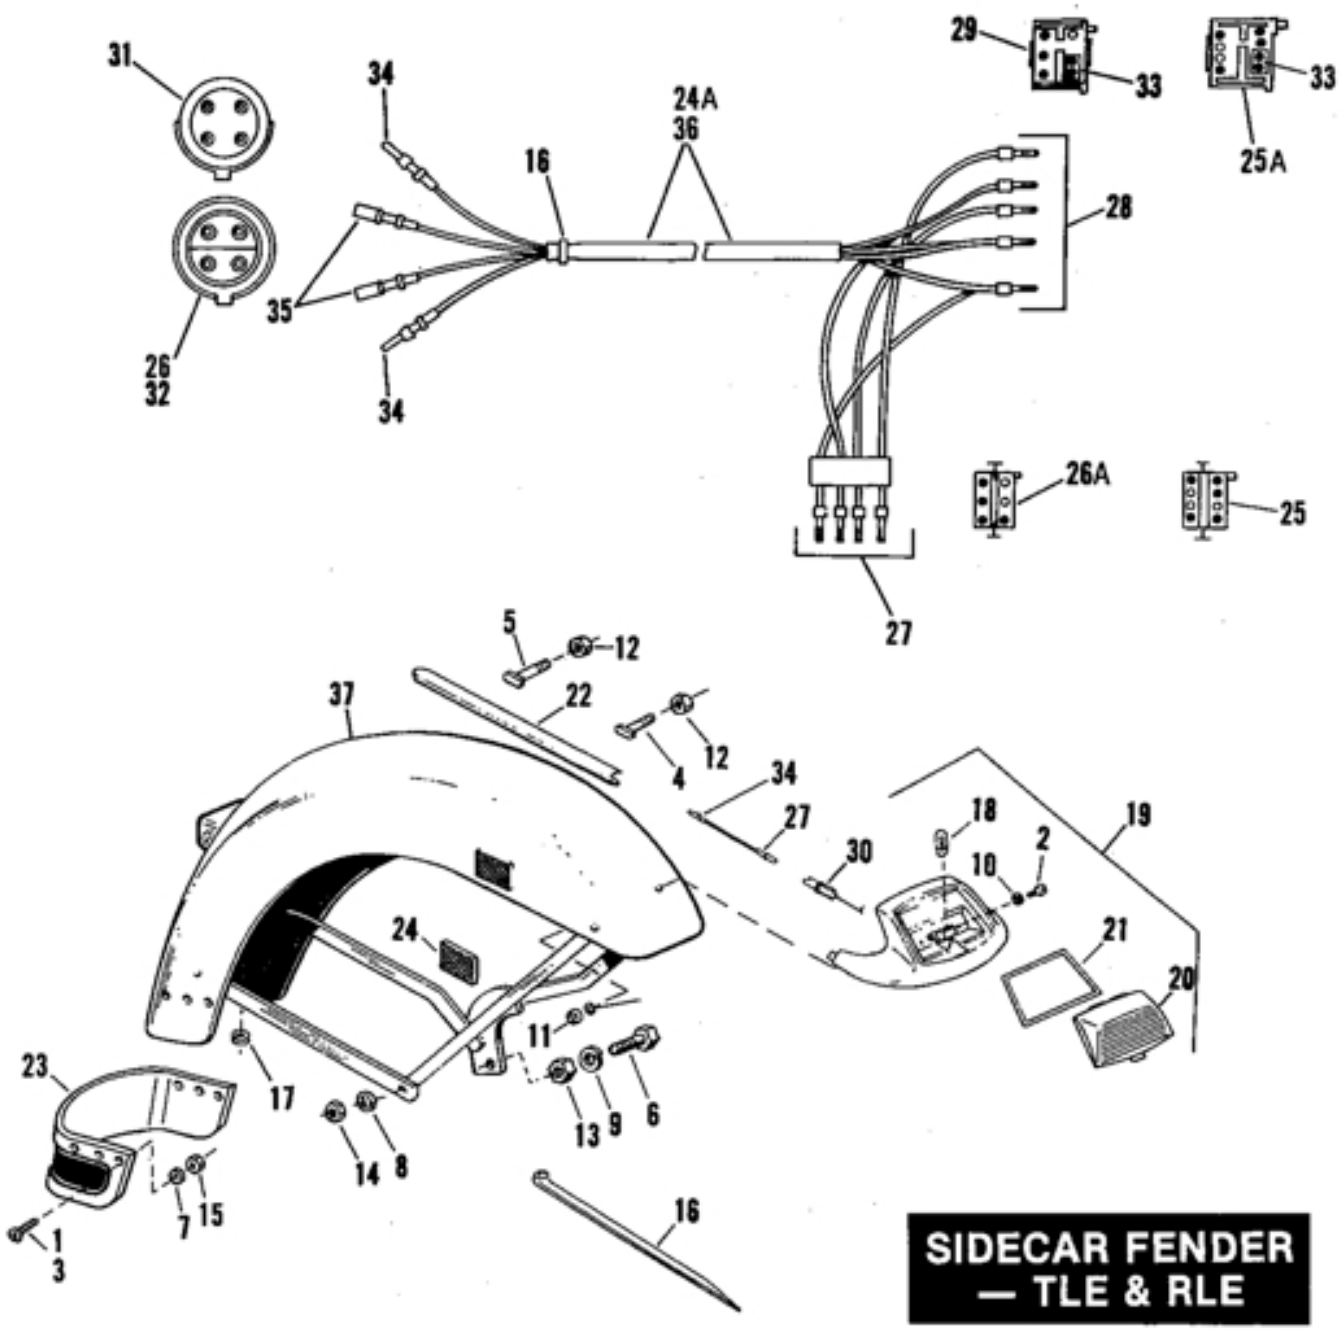


SIDECAR FENDER — TLE & RLE

SIDECAR FENDER - TLE AND RLE (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
1	2531	SCREW (6)	Touring: 87 to 90-GX, KX
2	2604	SCREW (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
3	2710C	SCREW (4)	Touring: 87 to 90-GX, KX
4	3560W	TEE BOLT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	3561WB	TEE BOLT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	4721	BOLT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7	6335	WASHER (6)	Touring: 87 to 90-GX, KX
8	6653	WASHER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
9	7038	LOCKWASHER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	7118	LOCKWASHER (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
11	7638	NUT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
12	7624	LOCKNUT (4)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
13	7783	NUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
14	7823	NUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
15	8131W	LOCKNUT (6)	Touring: 87 to 90-GX, KX
16	10006	CABLE STRAP, as req'd (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
16	10065	CABLE STRAP (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
17	11410	GROMMET, tail lamp wiring (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
18	53439-79	BULB, fender tip lamp (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
19	59082-79	LAMP ASSY., fender tip (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
20	59180-80	LENS, fender tip lamp (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX

MODEL IDENTIFICATION CODES

DB = FLTC	DD = FLHT	DJ = FLHTC	DM = FLTC-U	DP = FLHTC-U	FA = FLHS	EA = FXR	EB = FXRS	EC = FXRT
EG = FXRS-SP	EL = FXLR	EM = FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

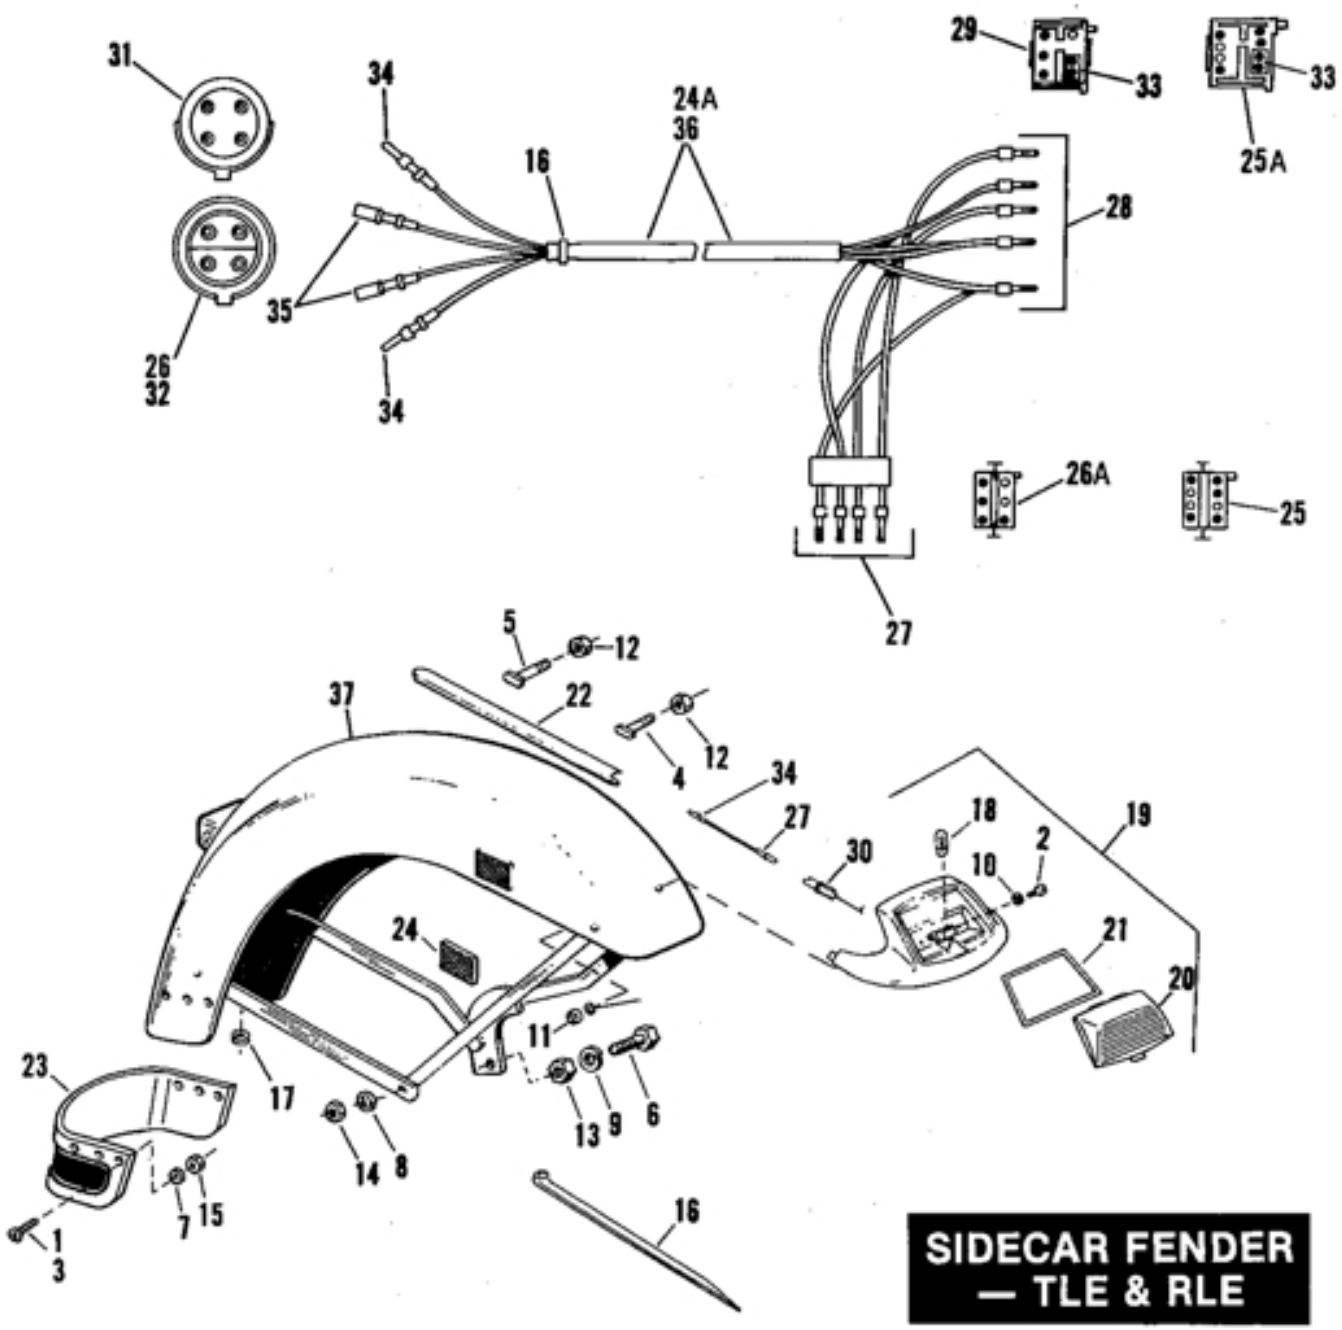


SIDECAR FENDER — TLE & RLE

SIDECAR FENDER - TLE AND RLE (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: Refer to Painted Parts Book for painted part numbers.	
20	59180-80	LENS, fender tip lamp (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
21	59181-80	GASKET, fender tip lamp lens (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
22	59211-74	SIDE TRIM STRIP (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
23	59231-86	TRIM, lower (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
24	59255-72	REFLECTOR, red (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX
24A	70028-85A	WIRING HARNESS (1)	Touring: 87 to 90-GX, KX
25	700287-81	CONNECTOR, eight socket (1)	Touring: 87 to 90-GX, KX
25A	70288-81	CONNECTOR, eight pin (1)	Touring: 87 to 90-GX, KX
26	72029-84	PLUG, four terminal (1)	FXR: 87 to 90-HX
26A	72037-71	CONNECTOR, six socket (1)	FXR: 87 to 90-HX
27	72038-71	SOCKET, single pin (as req'd) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
28	72039-71	PIN, single socket (6-GX, KX) (5)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
29	72041-71	CONNECTOR, six pin (1)	FXR: 87 to 90-HX
30	72044-71	CONNECTOR, single socket (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
31	72054-84	PLUG RECEPTACLE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
32	72057-84	PROTECTIVE PLUG, w/sidecar removed (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
33	72275-74	CONNECTOR TAB, two terminal (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
34	74536-77A	PIN, single socket (3)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
35	74539-77A	SOCKET, single pin (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
36	87027-85	WIRING HARNESS (1)	FXR: 87 to 90-HX
37	87901-83A	FENDER, sidecar (prime) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

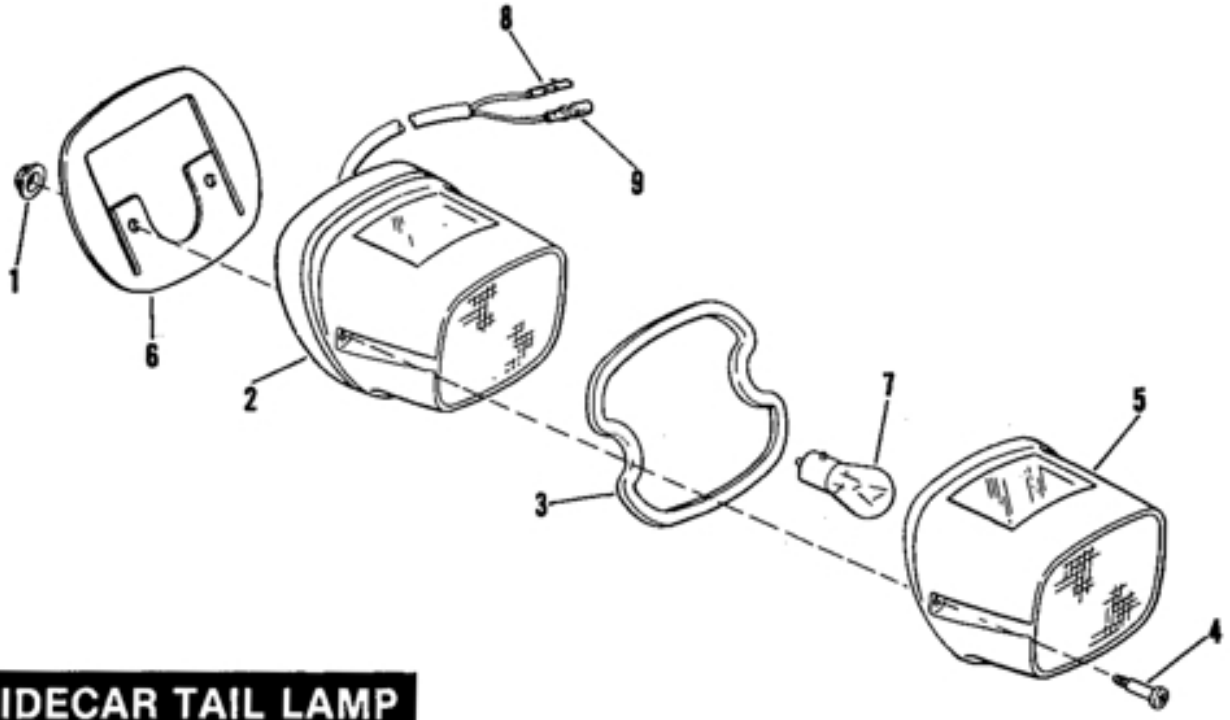


SIDECAR TAIL LAMP — TLE & RLE

SIDECAR TAIL LAMP - TLE AND RLE

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7501	SPEED NUT (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
2	68008-73B	TAIL LAMP ASSY. (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
3	68025-73	GASKET, tail lamp lens (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
4	68027-90	SCREW, tail lamp lens (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	68033-90	LENS, tail lamp (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	68123-73	GASKET, tail lamp housing (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7	68168-89	BULB, tail lamp-12V. (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
8	74536-77A	PIN, single socket (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
9	74539-77A	SOCKET, single pin (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX


MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

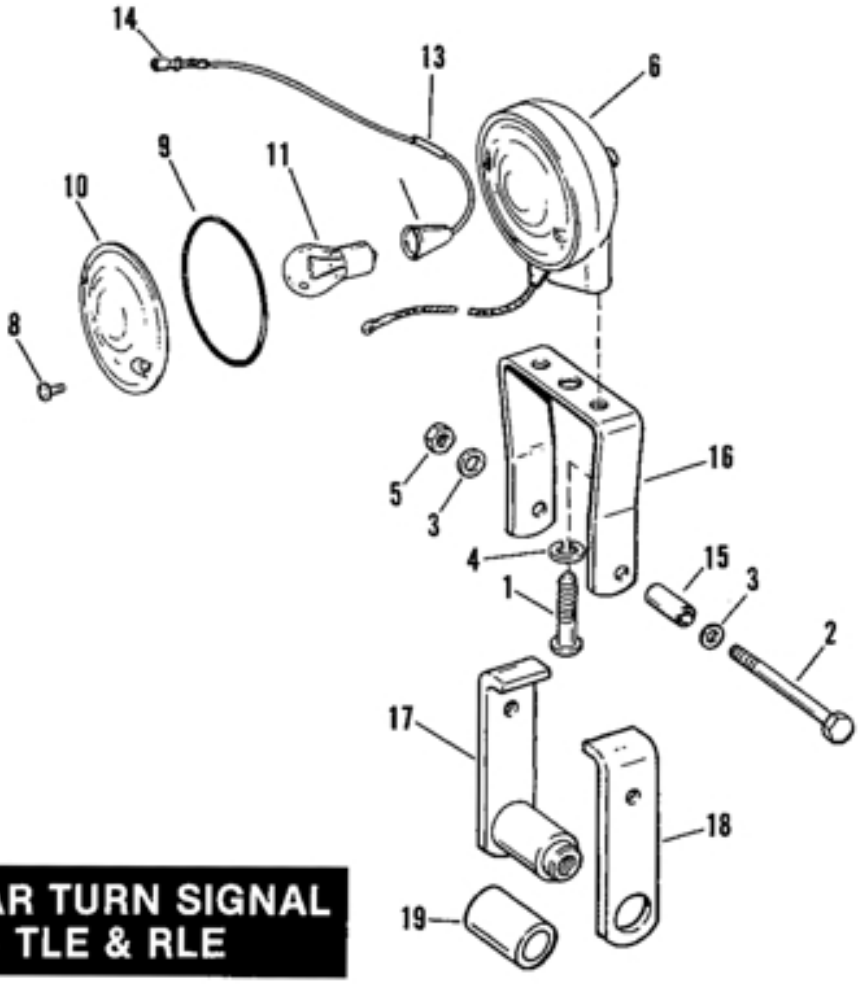

SIDECAR TURN SIGNAL — TLE & RLE

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2664	SCREW (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
2	4401W	BOLT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
3	6416	WASHER (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
4	7069	LOCKWASHER (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	7780	LOCKNUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	68402-86	LAMP WITH WIRE, turn signal (amber) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
8	68440-86	SCREW W/O-RING (2)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
9	68451-86	O-RING, turn signal lens (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	68452-86	LENS, turn signal (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
11	68572-64B	BULB, turn signal (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
13	70581-73	CONNECTOR (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
14	74539-77A	SOCKET, single pin (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
15	87120-79	SPACER, turn signal and spr. shackle (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
16	87121-79	BRACKET, turn signal (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
17	88301-79	SHACKLE PLATE, w/bshg.-turn sig. and spr. (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
18	88302-79	SHACKLE PLATE, turn signal and spring (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
19	88314-37	BUSHING, shackle plate (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX

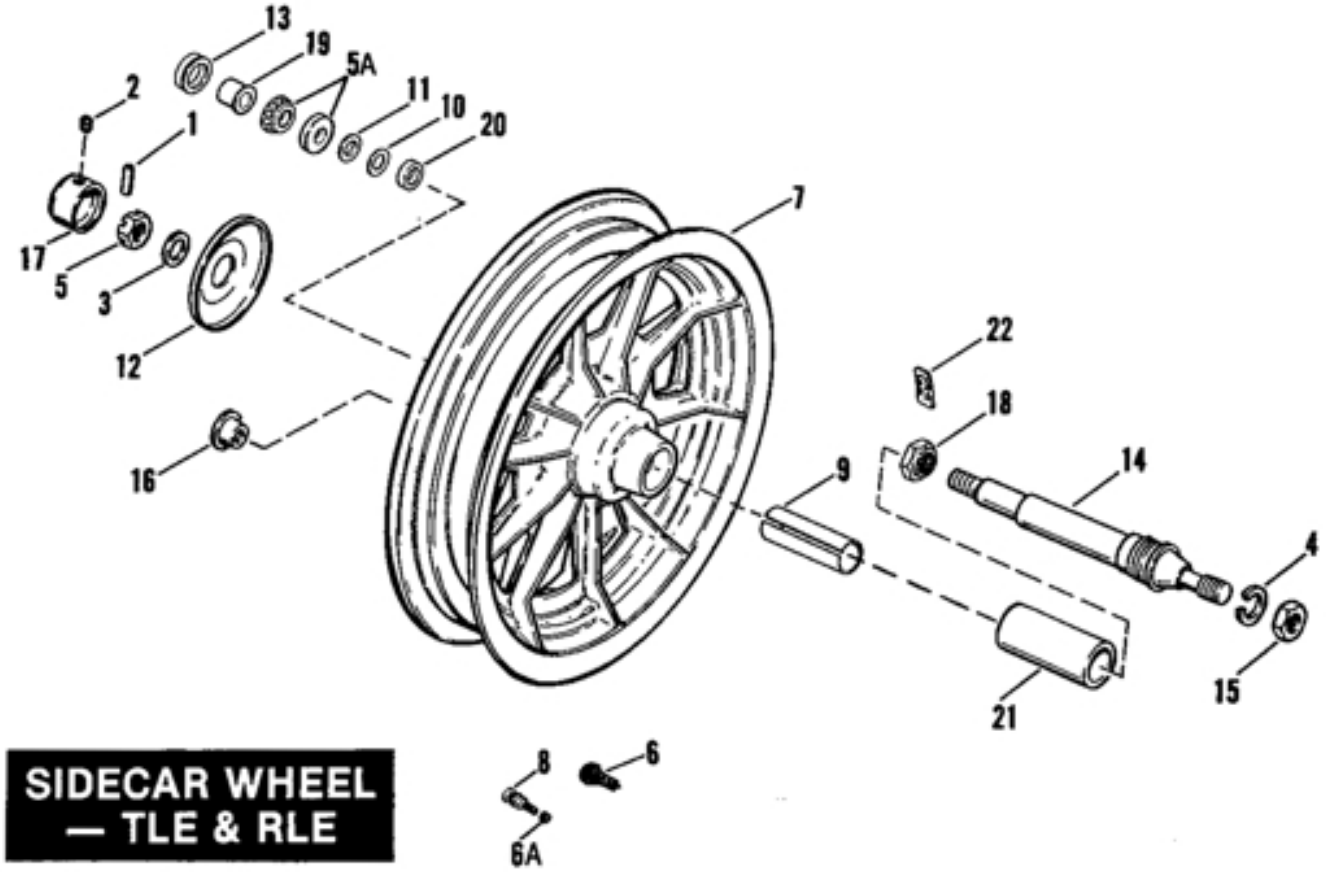


SIDECAR WHEEL — TLE & RLE

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
2	3234W	SCREW (2)	FXR: 87-HX Touring: E87-GX
3	6653	WASHER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
4	7043	LOCKWASHER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5	7823	NUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
5A	9052	ROLLER BEARING, w/cup (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
6	40999-87	VALVE STEM (1)	FXR: 87 to 90-HX Touring: L87 to 90-GX, KX
6A	41123-79	VALVE CAP (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
7	41157-83	WHEEL ASSY., 16 inches-16 spoke (black), N/A (1)	Touring: E87-GX
7	41157-87	WHEEL ASSY., 16 inches-10 spoke (black) (1)	FXR: 87 to 90-HX Touring: L87 to 90-GX, KX
8	43157-83A	VALVE STEM (1)	Touring: E87-GX
9	43288-82	SLEEVE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	43290-82	SPACER, 0.032 inch (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	43291-82	SPACER, 0.016 inch (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	43292-82	SPACER, 0.008 inch (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	43293-82	SPACER, 0.004 inch (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
10	43294-82	SPACER, 0.002 inch (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
11	43650-82	SPACER WASHER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
12	44444-79	HUB CAP, sidecar (chrome) (1)	Touring: E87-GX
13	47519-83A	OIL SEAL (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
14	87435-83	AXLE (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
15	87444-33	AXLE NUT, inside sidecar frame (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
16	87700-79	CAP, sidecar wheel-outer (plastic) (5)	Touring: E87-GX
17	87705-79	CAP, axle end (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
18	87706-79	NUT (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
19	87710-83	SPACER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
20	87711-83	SPACER (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
21	87712-83	SLEEVE, bearing spacer (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX
22	95594-84	WHEEL WEIGHT, 1/4 oz. (black) (1)	FXR: 87 to 90-HX Touring: 87 to 90-GX, KX

MODEL IDENTIFICATION CODES

DB = FLT	DD = FLT	DJ = FLT	DM = FLT	DP = FLT	FA = FLT	EA = FXR	EB = FXR	EC = FXR
FLTC	FLHT	FLHTC	FLTC-U	FLHTC-U	FLHS	FXR	FXRS	FXRT
EG = FXR	EL = FXR	EM = FXR	BH = Softail	BJ = Softail	BK = Softail	BL = Softail	BM = Softail	
FXRS-SP	FXLR	FXRS-CON	FXST	FLSTC/C	FXSTC	FXSTS	FLSTF	

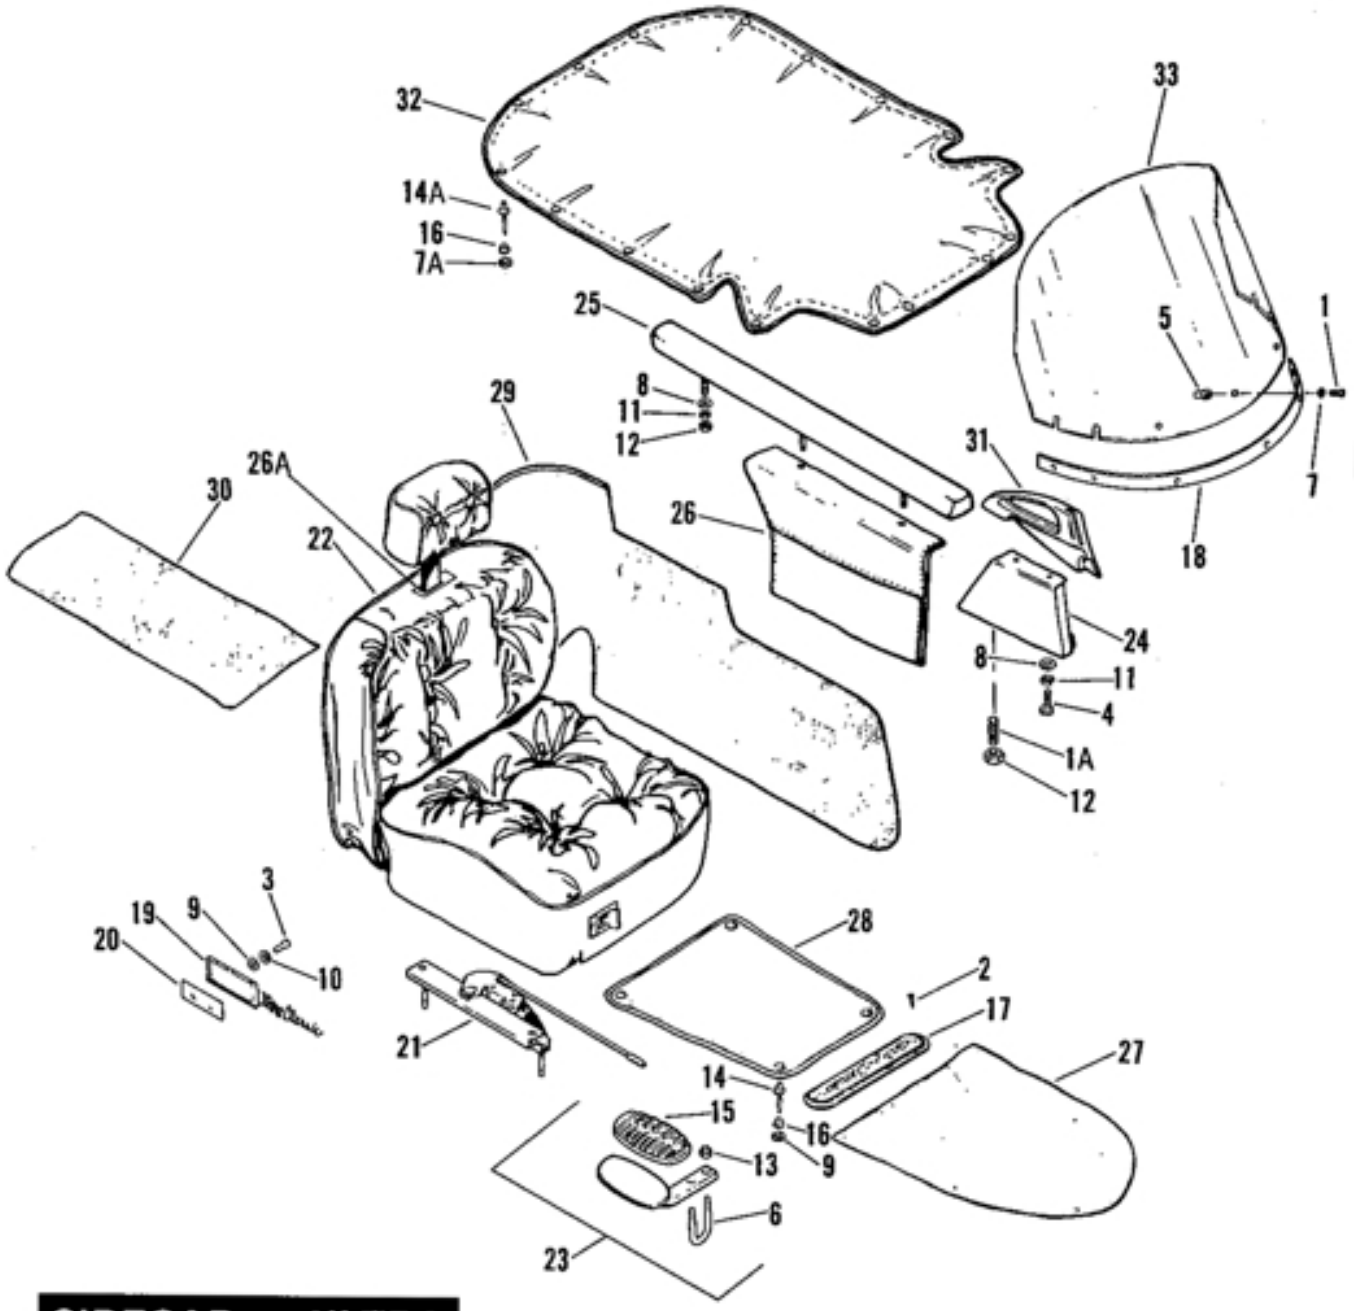


SIDECAR — ULTRA

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	933	SCREW (7)	Touring: 89 to 90-KX
1A	2522	STUD (4)	Touring: 90 to 90-KX
2	2568	SCREW, wood (2)	Touring: 89 to 90-KX
3	2803W	SCREW (3)	Touring: 89 to 90-KX
4	3787	BOLT (4)	Touring: 89 to 90-KX
5	5207	WELL NUT (7)	Touring: 89 to 90-KX
6	5252	U-BOLT, N/A (1)	Touring: 89 to 90-KX
7	6053	WASHER, nylon (7)	Touring: 89 to 90-KX
7A	6335	WASHER (16)	Touring: 90 to 90-KX
8	6703	WASHER, 10-1989 (6)	Touring: 89 to 90-KX
9	6716	WASHER, 24-89 (8)	Touring: 89 to 90-KX
10	6717	WASHER (6)	Touring: 89 to 90-KX
11	7036	WASHER, 10-1989 (6)	Touring: 89 to 90-KX
12	7688	NUT, 6-1989 (8)	Touring: 89 to 90-KX
13	7739	LOCKNUT (2)	Touring: 89 to 90-KX
14	8316	POP RIVET, 21-89 (5)	Touring: 89 to 90-KX
14A	8696	POP RIVET (16)	Touring: 90 to 90-KX
	36756-89	CABLE, seat recline (not illustrated) (1)	Touring: E89-KX
	36760-89	CABLE, seat recline (not illustrated) (1)	Touring: L89 to 90-KX
15	36964-67	PAD, sidecar step (1)	Touring: 89 to 90-KX
16	47076-72	SNAP BASE (21)	Touring: 89 to 90-KX
17	58378-89	NAMEPLATE, footrest "Harley-Davidson" (1)	Touring: 89 to 90-KX
18	58717-79	FOAM TAPE, windshield (1)	Touring: 89 to 90-KX
19	59245-90	NAMEPLATE, fender (1)	Touring: 89 to 90-KX
20	59263-79	REFLECTOR, fender (red) (1)	Touring: 89 to 90-KX
20	59259-90	REFLECTOR, fender (red) (1)	Touring: 90 to 90-KX
21	88483-89	SEAT SLIDE, right (1)	Touring: 89 to 90-KX
21	88484-89	SEAT SLIDE, left (1)	Touring: 98 to 90-KX
22	88489-89A	SEAT ASSEMBLY, black (1)	Touring: 89 to 90-KX
23	88490-88A	SIDECAR STEP KIT, w/6, 13 and 15 (1)	Touring: 89 to 90-KX
24	88494-89	KNEE BOLSTER, right (1)	Touring: 89 to 90-KX
24	88495-89	KNEE BOLSTER, left (1)	Touring: 89 to 90-KX
25	88496-89	ARM REST CUSHION, right (1)	Touring: 89 to 90-KX
25	88497-89	ARM REST CUSHION, left (1)	Touring: 89 to 90-KX
26	88500-89	MAP POCKET, right (1)	Touring: 89 to 90-KX
26	88501-89	MAP POCKET, left (1)	Touring: 89 to 90-KX
26A	88506-89	INSERT, headrest (1)	Touring: 89 to 90-KX
27	88540-89	CARPET, front (1)	Touring: 89 to 90-KX
28	88541-89	CARPET, floor w/snaps (1)	Touring: 89 to 90-KX
29	88542-89	CARPET, side-left (1)	Touring: 89 to 90-KX
29	88543-89	CARPET, side-right (1)	Touring: 89 to 90-KX
30	88544-89	CARPET, rear (1)	Touring: 89 to 90-KX
31	88545-89	HANDHOLD, left (1)	Touring: 89 to 90-KX
31	88546-89	HANDHOLD, right (1)	Touring: 89 to 90-KX
32	88530-89A	COVER, sidecar body (black) (1)	Touring: 89 to 90-KX
33	88865-89	WINDSHIELD, only (1)	Touring: 89 to 90-KX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

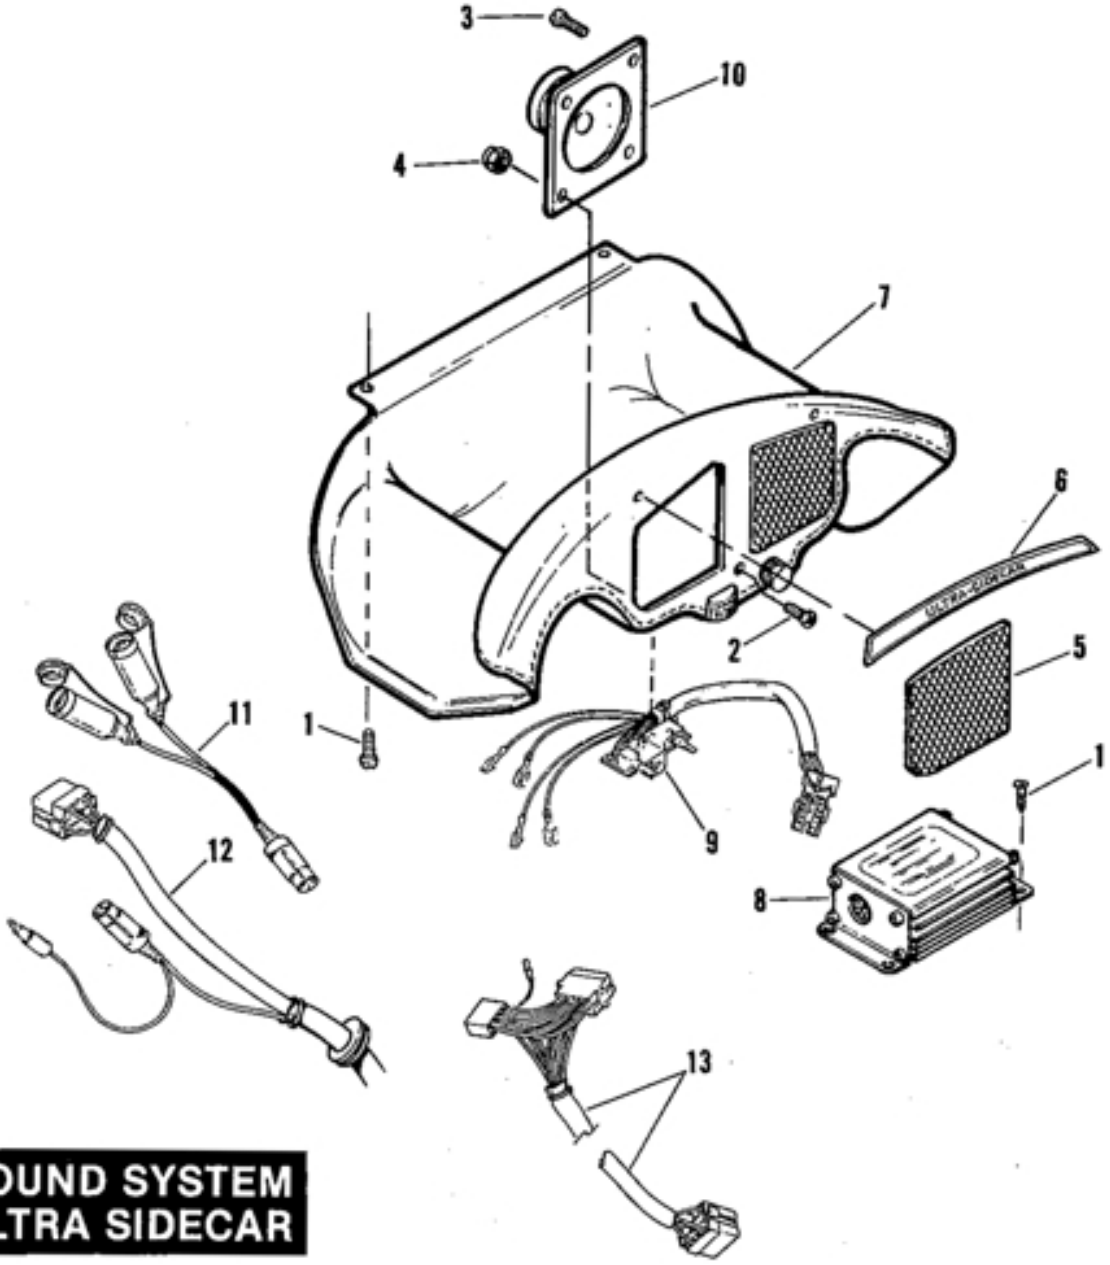

SOUND SYSTEM
ULTRA SIDECAR

SOUND SYSTEM ULTRA SIDECAR

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2623W	SCREW (4)	Touring: 90 to 90-KX
1	2568	SCREW, wood (6-89) (2)	Touring: 89 to 90-KX
2	2625	SCREW (1)	Touring: 89 to 90-KX
3	5209	SCREW (2)	Touring: 89 to 90-KX
4	7608	NUT (6)	Touring: 89 to 90-KX
5	58184-86	SPEAKER GRILLE, left (1)	Touring: 89 to 90-KX
5	58186-86	SPEAKER GRILLE, right (1)	Touring: 89 to 90-KX
6	58379-89	NAMEPLATE, "Ultra Sidecar" (1)	Touring: 89 to 90-KX
7	60954-89	CONSOLE (1)	Touring: 89 to 90-KX
8	76192-89	AMPLIFIER (1)	Touring: 89 to 90-KX
9	76299-89	SWITCH, function control/volume (1)	Touring: 89 to 90-KX
10	77029-86	SPEAKER (2)	Touring: 89 to 90-KX
11	77032-89	WIRING HARNESS, intercom (1)	Touring: 89 to 90-KX
12	88403-89	WIRING HARNESS, cycle to sidecar (1)	Touring: 89 to 90-KX
13	88404-89	WIRING HARNESS, amp. to spkrs. (1)	Touring: 89 to 90-KX

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

Not Illustrated

CALIFORNIA EVAPORATIVE EMISSIONS KIT (1 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: These parts are required for motorcycles sold in the state of California.	
	2551W	BOLT (2)	Softail: 90 to 90-ALL
	3787	BOLT, 4-FXR; 5-Softail; 2-1988 (1)	FXR: 87 to 90-ALL Softail: 87 to 89-ALL
	3953W	BOLT, 5-87 (4)	Touring: 87 to 90-ALL
	4391	BOLT (1)	Touring: 88 to 90-ALL
	4094	SCREW, N/A (1)	Touring: 87 to 90-ALL
	5728	SPACER (2)	Touring: 87 and 88-ALL
	5758	SPACER (1)	Touring: 89 to 90-ALL
	6235	WASHER (2)	FXR: 89788-ALL
	6702	WASHER (1)	Touring: 87 to 90-ALL
	6703	WASHER, 6-1987; 4-FXR; 8-Softail (1)	FXR: 87 to 90-ALL Softail: 87 to 89-ALL
	7036	WASHER (2)	Softail: 90 to 90-ALL
	7127	LOCKWASHER (5)	Touring: 87 to 90-ALL
	7686	LOCKNUT, 4-FXR; 7-Softail (1)	FXR: 87 to 90-ALL Softail: 87 to 89-ALL
	8099	WELL NUT (1)	Softail: 90 to 90-ALL
	8476	RIVET (1)	Softail: 90 to 90-ALL
	9890	CLIP, valve mtg. (1)	Softail: 90 to 90-ALL
	9893	CLAMP, valve mtg. (1)	Touring: 87 to 90-ALL
	9988	CLAMP (1)	Softail: 90 to 90-ALL
	10006	CABLE STRAP, as req'd (1)	ALL
	10014	CLAMP (1)	Softail: 87 to 90-ALL
	10039	CABLE STRAP (1)	Softail: 90 to 90-ALL
	27014-86A	HOSE, canister to air cleaner (1)	Touring: 87 to 89-ALL
	27014-90	HOSE, canister (1)	Touring: 90 to 90-ALL
	27017-87	EVAPORATIVE EMMISSION KIT, complete (1)	Touring: 87-ALL
	27018-85	CLAMP (1)	FXR: 87-ALL; 88 to 90EA/C/G/M Softail: 87-ALL
	27028-88	VENT VALVE TUBE ASSY., V.O.V.S. (1)	FXR: 88 and 89-ALL Softail: 88 and 89-ALL Touring: 88 and 89-ALL
	27028-90	VENT VALVE TUBE ASSY., V.O.V.S. (1)	FXR: 90 to 90-ALL Softail: 90 to 90-ALL Touring: 90 to 90-ALL
	27030-85	BRACKET, hold-down (1)	Touring: 87 to 90-ALL
	27042-84	CANISTER (1)	Softail: 87 to 90-ALL Touring: 87 to 90-ALL
	27043-87	CANISTER (1)	FXR: 87 to 90-ALL
	27047-84	BRACKET, canister mtg. (1)	FXR: 87 to 90-ALL Softail: 87 to 90-ALL
	27048-84	CLAMP, canister down tube (1)	FXR: 87 to 90-ALL
	27049-88	CLAMP, canister (1)	Softail: 88 and 89-ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

Not Illustrated

CALIFORNIA EVAPORATIVE EMISSIONS KIT (2 OF 2)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		NOTE: These parts are required for motorcycles sold in the state of California.	
	27052-84	BRACKET, canister, N/A (1)	Touring: 87 to 90-ALL
	27056-84	BRACKET, canister, N/A (1)	Touring: 87 to 90-ALL
	27069-89	HOSE, canister to carburetor (1)	Touring: 88 to 90-ALL
	27301-86	MAIN JET, 1.70 mm. (1)	FXR: 87-ALL Softail: 87-ALL
	27303-84	MAIN JET, 1.75 mm. (1)	Touring: 87-ALL
	27496-87	CARBURETOR SERVICE KIT, N/A (1)	Touring: 87-ALL
	27497-87	CARBURETOR SERVICE KIT (1)	FXR: 87-ALL Softail: 87-ALL
	27506-87	CALIBRATION KIT, N/A (1)	Touring: 87-ALL
	27507-87	CALIBRATION KIT, N/A (1)	FXR: 87-ALL Softail: 87-ALL
	28801-85A	CLAMP, valve mtg., N/A (1)	Softail: 87 to 90-ALL
	28813-87	EVAPORATIVE EMMISSION KIT, comp., N/A (1)	FXR: 87-ALL
	28815-86A	HOSE, canister to air cleaner (1)	FXR: 87-ALL Softail: 87 to 89-ALL
	28827-87	EVAPORATIVE EMMISSION KIT, comp., N/A (1)	Softail: 87-ALL
	28829-87	BRACKET, canister mtg. (1)	Softail: 87 to 90-ALL
	28855-90	HOSE, canister (1)	Softail: 90 to 90-ALL
	28878-90	HOSE, canister (1)	FXR: 90 to 90-ALL
	29121-84	CAP, overflow (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
	29264-86	FITTING, air cleaner backplate (1)	FXR: 87-ALL Softail: 87-ALL Touring: 87-ALL
	62150-85	VAPOR VALVE (1)	ALL
	62563-65	MOUNT, rubber (1)	Softail: 87 to 89-ALL
	67239-83	CABLE GUIDE (3)	Softail: 90 to 90-ALL
	70933-90	PROTECTIVE TAPE (1)	Softail: 90 to 90-ALL
		NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.	
	26571-90	HOSE, 7/32 I.D. X 7/16 O.D. (rubber) (10 ft. lg.) (1)	ALL

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

Not Illustrated

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		REAR BELT GUARD	
	60295-87	REAR BELT GUARD, chrome, N/A (1)	FXR: 87-FXRC
		REAR WHEEL	
	41029-87	WHEEL ASSEMBLY, disc (black) (1)	FXR: 87-FXRC
		FRAME, REAR FORK AND JIFFY STAND	
	45547-87	REAR FORK, blue (1)	FXR: 87-FXRC
	47218-87	FRAME, blue, N/A (1)	FXR: 87-FXRC
	47219-87	FRAME, blue (HDI ONLY) (1)	FXR: 87-FXRC
	47220-87	FRAME, blue, N/A (1)	FXR: Late 87-FXRC
	47221-87	FRAME, blue (HDI ONLY), N/A (1)	FXR: Late 87-FXRC
	47302-86	TRIM, "BELT DRIVE" (1)	FXR: 87-FXRC
	47831-87	END CAP, left (blue), N/A (1)	FXR: 87-FXRC
	47832-87	END CAP, right (blue), N/A (1)	FXR: 87-FXRC
		SEATS	
	52187-87	SEAT, rear, N/A (1)	FXR: 87-FXRC
	52188-87	SEAT, front, N/A (1)	FXR: 87-FXRC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

Not Illustrated

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		CYLINDER HEADS AND VALVES-V2tm	
	16512-86A	CYLINDER W/ PISTON, black wrinkle (2)	Touring: 87-FLTC, FLHTC
	16692-85B	HEAD, front cylinder (black wrinkle) (1)	Touring: 87-FLTC, FLHTC
	16696-85B	HEAD, rear cylinder (black wrinkle) (1)	Touring: 87-FLTC, FLHTC
		ROCKER ARMS, COVERS AND PUSHRODS-V2tm	
	17528-84A	ROCKER COVER, outer (chrome) (2)	Touring: 87-FLTC, FLHTC
	17529-84A	SPACER, rocker cover (chrome) (2)	Touring: 87-FLTC, FLHTC
	17530-84B	ROCKER COVER, inner (chrome) (2)	Touring: 87-FLTC, FLHTC
	18622-85	TAPPET GUIDE, rear (black wrinkle), N/A (1)	Touring: 87-FLTC, FLHTC
	18623-85	TAPPET GUIDE, front (black wrinkle), N/A (1)	Touring: 87-FLTC, FLHTC
		CRANKCASE	
	24473-85	CRANKCASE SET, black wrinkle, N/A (1)	Touring: 87-FLTC, FLHTC
	25268-84A	GEAR COVER, chrome, with 2511, 25275-82, and 83162-51 (1)	Touring: 87-FLTC, FLHTC
		STARTER SHAFT AND HOUSING	
	31447-86	STARTER SHAFT HOUSING, w/ 9062 bearing (black wrinkle) (1)	Touring: 87-FLTC, FLHTC
		TRANSMISSION	
	34468-86A	COVER, upper (chrome) (1)	Touring: 87-FLTC, FLHTC
	34700-87	HOUSING, transmission (black wrinkle), N/A (1)	Touring: 87-FLTC, FLHTC
	35261-87	HOUSING, bearing (black wrinkle) (1)	Touring: 87-FLTC, FLHTC
	37075-87	DIPSTICK, chrome (1)	Touring: 87-FLTC, FLHTC
	37105-87A	CLUTCH RELEASE COVER ASSEMBLY, chrome (1)	Touring: 87-FLTC, FLHTC
		FAIRING	
	14158-87	DECAL, "TOUR GLIDE" (tomato red), N/A (2)	Touring: 87-FLTC, FLHTC
		FRONT FENDER	
	14159-87	DECAL, "CLASSIC" (tomato red) (2)	Touring: 87-FLTC, FLHTC
		PRIMARY HOUSING	
	60432-86	PRIMARY HOUSING ASSEMBLY, black wrinkle (1)	Touring: 87-FLTC, FLHTC
	60665-85B	COVER ASSEMBLY, chrome (1)	Touring: 87-FLTC, FLHTC
	60668-84B	CLUTCH COVER, chrome (1)	Touring: 87-FLTC, FLHTC
	60670-85	INSPECTION COVER, chrome (1)	Touring: 87-FLTC, FLHTC
		STARTER SWITCHES	
	31475-77	COVER, solenoid (black) (1)	Touring: 87-FLTC, FLHTC
	31526-81B	STARTER SOLENOID, black wrinkle (1)	Touring: 87-FLTC, FLHTC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

Not Illustrated

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
		BELTS AND SPROCKETS	
	40218-88	FINAL DRIVE SPROCKET, 70T (gold), N/A (1)	FXR: 88-FXRS Touring: 88-FLTC, FLHTC
		FRONT WHEEL	
	41036-88	WHEEL ASSEMBLY, 19 inches (gold) (1)	FXR: 88-FXRS
	43464-88	WHEEL ASSEMBLY, 16 inches (gold), N/A (1)	Touring: 88-FLTC, FLHTC
		REAR WHEEL	
	41035-88	WHEEL ASSEMBLY, 16 inches (gold) (1)	FXR: 88-FXRS
	43465-88	WHEEL ASSEMBLY, 16 inches (gold) (1)	Touring: 88-FLTC, FLHTC
		FAIRING	
	14158-87	DECAL, "TOUR GLIDE" (tomato red), N/A (2)	Touring: 88-FLTC
		FRONT FENDER	
	14000-88	DECAL, 85th Anniversary (1)	FXR: 88-FXRS Softail: 88-FXSTS
	14189-88	DECAL, 85th Anniversary (1)	Touring: 88-FLTC, FLHTC
	59173-81A	DECAL, "CLASSIC" (gold) (2)	Touring: 88-FLTC, FLHTC
		FUEL TANK	
	14187-88	DECAL, 85th Anniversary-left (1)	FXR: 88-FXRS Touring: 88-FLTC, FLHTC
	14188-88	DECAL, 85th Anniversary-right (1)	FXR: 88-FXRS Touring: 88-FLTC, FLHTC
	14221-88	DECAL, 85th Anniversary-left (1)	Softail: 88-FXSTS
	14222-88	DECAL, 85th Anniversary-right (1)	Softail: 88-FXSTS
		LUGGAGE BOX (KING TOUR-PAK)	
	14219-88	DECAL, 85th Anniversary (1)	Touring: 88-FLTC, FLHTC

MODEL IDENTIFICATION CODES

DB = FLT FLTC	DD = FLT FLHT	DJ = FLT FLHTC	DM = FLT FLTC-U	DP = FLT FLHTC-U	FA = FLT FLHS	EA = FXR FXR	EB = FXR FXRS	EC = FXR FXRT
EG = FXR FXRS-SP	EL = FXR FXLR	EM = FXR FXRS-CON	BH = Softail FXST	BJ = Softail FLSTC/C	BK = Softail FXSTC	BL = Softail FXSTS	BM = Softail FLSTF	

NUMERICAL INDEX

PART NO.	PAGE
10003	7
10003	45
10003	53
10003	135
10003	189
10006	45
10006	51
10006	53
10006	149
10006	183
10006	189
10006	193
10006	203
10006	217
10006	251
10006	275
10006	283
10006	291
10006	337
10006	343
10006	347
10006	361
10007	189
10007	291
10014	31
10014	37
10014	237
10014	239
10014	241
10014	245
10014	361
10031	95
10031	105
10033	279
10034	327
10038	105
10038	107
10038	111
10038	343
10039	261
10039	291
10039	299
10039	311
10039	361
10040	245
10046	23
10046	53
10048	257
10049	251
10053	95
10059A	89
10065	45
10065	175
10065	185
10065	193
10065	213
10065	263
10065	271
10065	275
10065	279
10065	291
10065	307
10065	347
10067	261
10069	73
10072	183
10073	291
10074	257
10076	95
10077	291
10080	19
10080	73
10080	149
10080	251
10081	95
10081	265
10084	73
10084	251
10086	251
10088	89
10089	239
10091	263
10092	189
10205	179
1040	147
10998	73
11002	23
11002	29
11013	45
11013	191
11016	69
11020	73
11039	57
11067	79
11083	69
11096	79
11096	81
11096	85
11105	23
11105	29
11116	63
11117	69
11132	13
11132	147
11132	149
11132	251
11140	147
11143	89
11143	95
11145	13
11147	233
11150	69
11155	189
11155	307
11157	13
11158	159
11160A	19
11161	73
11165	75
11170	147
11170	149
11171	65
11171	147
11171	149
11173	101
11174	247
11175	101
11176	303
11177	19
11178	75
11179	75
11182	65
11183	65
11191	69
11192	7
11193	191
11218	17
11219	17
11219	23
11220	65
11400	225
11410	175
11410	347
11411	93
11411	199
11412	151
11412	197
11412	297
11422	199
11430	225
11430	271
11435	263
11436	151
11437	221
11437	225
11440	315
11445	199
11447	245
11448	213
11449	275
11451	155
11451	159
11452	243
11453	199
11454	263
11456	159
11717	245
11729	69
11733	75
12013A	79
12026B	19
1203	213
12045	69
1205	325
1205	325
12050	75
12051	75
12051	233
12052	233
12053	233
1309B	237
1309B	239
1309B	243
1311	243
1357W	167
14000-88	369
14010-82	193
14011-82	193
14012-82A	193
14019-83	197
14019-83	219
14027-83	105
14027-83	337
14031-87	247
14048-86	193
14052-85	149
14052-85	181
14052-88	181
14055-84	247
14056-84	247
14072-86	247
14072-88	247
14073-86	247
14073-88	247
14082-84	147
14101-84	251
14105-86	247
14105-88	247
14106-86	247
14106-88	247
14107-86	247
14107-86	247
14108-86	247
14108-88	247
14109-86	247
14109-88	247
14110-86	247
14110-88	247
14112-85	181
14112-88	181
14114-86	203
14116-86	315
14120-86	199
14126-86	247
14127-86	247
14128-86A	197
14142-86	221
14143-86	247
14145-86	247
14146-86	247
14150-86	139
14158-87	193

PART NO.	PAGE
14158-87	367
14158-87	369
14159-87	221
14159-87	367
14161-87	247
14162-87	247
14163-87	247
14164-87	247
14165-87	247
14171-87	247
14172-87	247
14178-89	179
14178-90	179
14179-89	179
14179-90	179
14186-88	247
14187-88	369
14188-88	369
14189-88	369
14200-88	247
14201-88	247
14202-88	247
14203-88	247
14204-88	247
14205-88	247
14214-89	247
14214-90	247
14215-89	247
14216-89	247
14217-89	197
14218-89	179
14219-88	369
14221-88	369
14222-88	369
14223-89	199
14224-89	193
14227-88	209
14228-89	247
14240-90	247
14242-90	247
14244-90	247
14246-90	179
14248-90	179
14250-90	197
14251-90	179
14303-90	303
14304-90	303
14305-90	303
14306-90	249
14307-90	249
14311-90	249
14312-90	249
14319-90	249
14320-90	249
14321-90	249
14322-90	249
14323-90	249
14324-90	249
14325-90	249
14326-90	249
14328-90	249
14329-90	249
14331-90	221
14333-90	249
14335-90	249
14337-90	249
14339-90	249
1601	23
1601	53
1601	311
1602	165
1602	167
1610	343
16101-90	7
16103-90	7
16105-90	7
16106-90	7
16107-90	11
16108-90	7
16109-90	7
1611	203
16114-90	7
16115-90	11
16120-90	11
16121-90	7
16122-90	11
16123-90	11
16124-90	7
16125-90	7
16126-90	7
16127-90	7
16128-90	7
16131-90	7
16135-90	11
16136-90	11
1614	181
16207-79B	21
16216-83D	7
16216-90	7
16219-79A	7
16219-79A	21
16284-84	9
16302-81	21
16304-87	21
1643	343
16478-85A	9
16480-85A	9
16482-85	9
16510-83A	9
16512-86A	9
16512-86A	367
16573-83	9
16602-30	333
16690-85B	9
16691-85C	9
16692-85B	367
16692-85C	9
16696-85B	9
16696-85B	367
16715-83	9
16770-84B	9
16774-86B	9
16778-84A	13
16779-84A	13
16830-29A	9
16831-83	9
16837-85A	9
16837-85A	21
16852-83A	9
16852-90	9
17033-83A	9
17033-83A	13
17035-83B	9
17035-83B	13
1719W	69
1719W	283
17355-84A	13
17356-84A	13
17358-84A	13
17360-83	13
17375-83	13
17428-57	13
17503-84B	13
17510-84	13
17521-84B	13
17528-84A	13
17528-84A	367
17529-84A	13
17529-84A	367
17530-84B	13
17530-84B	367
17539-90	13
17611-83	15
1783	91
17921-83	15
17924-83	15
17927-83	15
17930-83	15
17935-79B	15
17938-83	15
17945-36B	15
17947-36	15
17950-66	15
18001-83A	9
18011-86	9
18020-83	9
18074-83A	9
18076-83	9
18082-83	9
18087-83	9
18124-83	9
18130-83C	11
18131-83C	11
18133-83A	11
18134-83	9
18201-83	11
18202-83	11
18219-83	11
18222-83	11
18229-83	11
18268-48	343
18523-86	15
18540-83A	15
18542-83A	15
18622-85	367
18622-85A	15
18623-85	367
18623-85A	15
18633-48D	15
18634-48C	15
2003	151
2005	231
21920-83	17
21921-83	17
21922-83	17
21923-83	17
21924-83	17
21940-83	17
21941-83	17
21942-83	17
21943-83	17
21944-83	17
221	233
2216W	51
2216W	331
222	107
22589-83A	17
22764-83	17
2339	283
239	29
23906-87A	17
23906-90	17
23961-80A	17
23969-83	17
23974-87	17
23974-87	17
23985-18	171
23985-54	17
23985-54	23
24002-70	21
24006-87	17
2401	163
24016-80	17
24020-87	17
24021-87	17
24022-90	23
24023-54	23
24032-70	21
24032-70	91
24033-70	21
24033-70	91
24034-70	21

PART NO.	PAGE
24034-70	91
24035-70	21
24035-70	91
24036-70	21
24036-70	91
24037-70	21
24037-70	91
24040-78	23
24040-90	23
24041-78	23
24041-90	23
24042-78	23
24042-90	23
24043-78	23
24043-90	23
24044-78	25
24044-90	25
24045-78	25
24045-90	25
24046-78	25
24046-90	25
2417	89
2417	127
2417	139
2420	211
24281-83	17
2430	207
2432	197
24334-36	17
24335-36	17
24345-36A	17
24346-87A	17
24356-36A	17
24469-83B	21
24473-85	367
24473-85B	21
24553-83	21
24557-87	75
24581-88	25
24581-90	25
24582-83A	25
24582-88	25
24582-90	25
24599-58A	21
24600-58A	21
24601-58A	21
24626-87	21
24628-87	21
24641-36	25
24641-87	21
24643-87	21
24703-54B	25
24704-90	25
24922-86	45
24981-70	25
24982-70	25
2501	107
2501	191
2504	193
2508	203
2508	299
2508	307
2511	23
2513	199
2513	299
2519	243
2522	357
25225-70B	25
25258-80B	25
25268-84A	25
25268-84A	367
25275-82	25
2531	221
2531	347
25310-82A	25
25320-82	27
25321-82	27
25322-82	27
25323-82	27
25325-82	27
25326-82	27
25327-82	27
25328-82	27
2537	299
2538	155
2538	167
25414-70A	233
25416-84	233
25418-89	233
25452-87A	75
25452-90	75
25453-87	75
25453-90	75
2551W	69
2551W	179
2551W	251
2551W	255
2551W	297
2551W	299
2551W	319
2551W	361
25550-36	27
25550-57	27
25551-36	27
25552-36	27
25553-36	27
25554-36	27
25555-36	27
25555-84	27
25556-79	27
25557-79	27
25558-79	27
25559-79	27
25581-70	27
25582-73	27
2568	357
2568	359
257	305
2574WA	271
2576	299
2579	95
2581	237
2582	131
2582	151
2582	287
2583	297
2585	89
2585	263
2587	297
2589	319
2592	127
2592	211
2594	317
2594A	271
2599	239
2599	331
2602	325
2604	105
2604	221
2604	225
2604	347
26052-86	27
26058-84	29
2607	165
2607	167
2607	225
2607	251
2607	321
2611B	53
2612	237
2614	91
26190-73	29
26207-83	29
26216-84	29
26227-58	29
26234-84	29
2623W	199
2623W	359
26242-84	29
2625	179
2625	263
2625	299
2625	359
26262-80	29
26263-80	27
26263-80	29
26273-80B	29
26276-80A	29
26277-84	29
26285-82A	29
2630W	271
26315-68A	29
26317-68A	29
26326-62A	29
26327-68	29
26328-74	29
26338-68	29
26345-73	27
26346-70	27
26346-70	29
26348-15	27
26348-15	29
26348-36	29
26349-84	27
26350-85A	75
26352-85	75
26354-90	27
26400-82	29
26432-76A	11
2646	297
2646	299
2647A	193
2647A	217
2648	193
2648	203
26496-75	75
2652	107
26555-84	11
26555-84	31
26555-90	11
26557-83	11
26557-83	31
26558-84	11
26558-84	31
26561-84	27
26561-84	315
26570-84	35
26570-84	43
26571-90	363
2661W	127
2661W	129
2661W	135
2661W	151
2662W	95
2662W	129
2662W	287
2664	105
2664	353
2665	53
2665	89
2665	241
2665	325
2667	111
2682	59
2692W	279
2698	93
2698	275
2698	279
26994-90	43
26995-86A	37
27002-89	37
27008-83A	31

PART NO.	PAGE
27009-86A	37
27010-86A	37
27012-83A	31
27014-86A	361
27014-90	361
27017-87	361
27018-85	361
27019-83	31
27019-89	37
27025-90A	43
27026-88A	31
27026-88A	35
27026-90	37
27028-88	361
27028-90	361
27029-86B	31
27029-88	31
27029-90A	43
27030-85	361
27034-86B	31
27035-90A	37
27038-90A	37
27039-90A	37
27040-88	37
27042-84	361
27043-87	361
27047-84	361
27048-84	211
27048-84	361
27049-88	361
27052-84	363
27056-84	363
27060-55	305
27069-89	363
27079-84	31
2708	105
2708	257
27085-90	239
27100-88	37
27101-88	37
2710C	347
2711	165
27115-88	43
27116-88	37
2712	51
27121-89	37
27122-89	37
27123-89	37
27124-89	37
27125-89	39
27126-89	39
27127-89	39
27128-89	39
27129-88	39
27130-81	31
27130-81	39
27136-81	31
27136-81	39
27137-81	31
27137-81	39
27139-81	31
27143-81	31
27144-86A	33
27145-81	33
27146-89	39
27147-89	39
27148-89	39
27156-89	39
27157-89	39
27158-89	39
27159-89	39
27160-89	39
27162-89	39
27170-89	39
27171-89	41
27175-90	41
27176-90	41
27177-90	43
27178-90	41
27179-90	41
2718	115
27185-90	37
2720	51
2725	207
2726	197
2726	331
27301-86	33
27301-86	363
27302-84	33
27303-84	363
27304-76	33
27307-76	33
27308-76	33
27309-76	33
27311-76	33
27311-76	41
27315-88	41
27317-88	41
2731W	53
2731W	283
27324-83	33
27325-86	33
27327-83	33
27329-83	33
2733	165
27330-83	33
27333-76	33
27335-76	33
27339-90	41
27340-90	41
27360-76	33
27360-76	41
27361-76	33
27361-76	41
27362-76	35
27362-76	41
27363-88	41
27366-76	35
27367-76	35
27368-76	35
27368-76	41
27369-76	35
2737	45
27370-83	35
27371-76	35
27371-76	41
27383-88	33
27383-88	35
27385-76	35
2739	165
2739	167
27450-82	45
27451-82	45
27496-87	363
27497-87	363
275	23
27506-87	363
27507-87	363
27575-88	41
27576-88	41
27577-88	41
27579-88	43
2757W	93
2757W	165
2757W	167
27580-88	43
27581-88	43
27582-88	43
27583-88	43
27585-88	43
27586-88	43
27587-88	43
27616-88	33
27616-88	35
2770W	159
2770WA	287
2773	69
2773	163
2773	173
2773	239
2774	229
2774	237
2774	239
2774	299
2779	203
2784	203
2784	211
2787	303
27886-78A	35
27886-78A	43
27887-78	35
27891-80	35
27898-78	33
2790A	321
2796W	261
2803W	357
2804W	175
2804W	321
2806	197
2806	321
2818	31
2818	233
2818	255
2818	257
2818	327
2823	129
2823	137
2824W	225
2831	175
2841W	327
2851	73
2851	155
2851	169
2871W	31
2871W	73
2871W	213
2871W	233
2872W	29
2879W	73
2879W	155
2879W	167
2879W	181
2879W	339
28801-85A	363
28813-87	363
28815-86A	363
28816-86	45
28816-86	49
28816-90	45
2881W	81
28820-86	47
28821-86	47
28825-86	47
28827-87	363
28829-87	363
2882W	93
2882W	159
2882W	163
2882W	221
2882W	251
2882W	325
2882W	327
28855-90	363
28878-90	363
2887W	57
2887W	107
2887W	183
2887W	231
2887W	321
2887W	325
2887W	331
2888	175

PART NO.	PAGE
2889	327
29016-88	47
29017-88	47
29017-90	47
2904	279
29058-77	35
29058-77	47
29059-88	47
2906	181
2906	231
29068-86	45
29068-89	45
2907	307
2908	307
2909	307
2910	307
29121-84	363
29126-90	47
29134-86	47
29134-90	47
29145-86	47
29161-86	47
29164-87	47
29165-83A	49
29165-89	49
29166-86	47
29169-84	47
29172-85	47
29174-85	47
29181-88	47
29209-86	49
29210-86	49
29211-86	49
29211-86	271
29214-71	49
29228-80	49
29236-90	49
29242-83	35
29250-78A	35
29252-86B	49
29252-89	49
29256-90	47
29259-86	49
29259-89	49
29264-86	49
29264-86	363
29269-83	49
29276-81	151
29278-86	47
29279-86	47
29293-86	49
29954-71A	51
29957-81B	51
29960-85	51
29961-85	51
29965-81A	51
29970-88A	51
30013-71	275
31300-84	57
31311-80	57
31312-80	57
31340-80	57
31340-89	65
31342-90	65
31430-90	65
31433-84A	233
31435-65B	305
31438-65A	305
31439-84	305
31440-65	305
31441-65A	305
31443-65A	57
31444-65A	305
31447-86	57
31447-86	367
31452-65A	305
31473-86	57
31473-86	233
31474-86	233
31475-77	305
31475-77	367
31479-83	59
31482-86	57
31487-90	65
31489-79B	305
31491-79	57
31493-67	57
31495-79	57
31502-65	57
31503-65	57
31506-79B	303
31506-79B	311
31506-79B	313
31506-79B	315
31506-79B	317
31524-80	59
31526-81B	305
31526-81B	367
31535-89	65
31536-89	65
31543-90	65
31544-90	65
31545-90	65
31547-89	65
31548-90	65
31549-90	65
31550-90	65
31551-90	65
31552-89A	65
31554-90	65
31555-90	65
31557-81	67
31564-83	59
31570-73	61
31572-86	57
31575-73	61
31576-73	61
31577-73	61
31578-73	61
31579-73	61
31580-73	61
31581-73	61
31582-73	61
31583-73	61
31584-73	61
31585-73	61
31586-73	61
31593-81	67
31597-81	67
31598-89	67
31614-83A	53
31625-82	53
31727-85	53
31800-78A	53
31981-65B	55
31983-71A	55
31992-85	55
31994-85	55
3201W	37
3210	45
3210	73
3210	185
3210	221
3210	255
3216	299
32311-83	55
3233	331
32342-58	55
3234W	355
32400-80A	55
32402-83	55
32405-88A	55
32451-83	151
32504-80	27
32504-80	55
32524-83	27
32524-83	55
32525-89	27
32525-89	55
32591-80	27
32591-80	55
32604-78	55
32606-82	27
32606-82	55
33005-90	75
33006-90	75
33008-90	75
33013-90	75
33017-90	75
33021-90	75
33022-90	75
33024-90	75
33036-90	75
33043-80	75
33043-80	311
33043-80	315
33043-80	317
33048-72	171
33085-74	173
33114-79	75
33119-79A	69
33120-85	57
33120-89	67
33121-79	57
33121-89	67
33125-89	67
33126-90	67
33127-90	67
33189-63	171
33205-80	69
33206-80	69
33207-80	69
33208-80	69
33209-80	69
33210-80	69
33211-80	69
33212-80	69
33318-85	233
33320-79C	69
33326-79	69
33332-79	69
33334-85	75
33340-90	67
33345-89	67
33445-89	233
33446-89	233
33447-89	67
33448-89	235
33449-90	67
335	73
336	73
33630-87	173
33630-90	173
33638-70	69
33640-83	71
33642-86	71
33642-89	71
33660-85	71
33660-90	71
33668-86	71
33668-90	71
33683-87A	171
33683-90	171
337	73
33709-82	71
33713-85	71
33713-85	235
33714-90	71
33715-85	71
33718-82	71
33719-79A	71
33728-82A	71

PART NO.	PAGE
33729-82	71
33871-85	71
33882-83B	105
33895-82	71
33900-59B	75
33900-59B	311
33900-59B	315
33900-59B	317
3402	63
3403	339
34082-79	71
34083-79	71
34084-86	71
34085-79A	71
34086-79	71
34087-79	71
34088-87	71
34089-79	71
3409	245
34091-85	79
3415	69
3419	115
3419	245
3419	271
34191-79C	71
34193-79C	71
34195-79C	71
3427	19
3429	29
3430	19
3440	159
3440	169
3444	95
3444A	69
3445	225
3445	321
34464-86A	75
34468-86A	75
34468-86A	367
3450	185
34561-84	71
34564-74B	71
34564-90A	71
34599-81	71
34611-65	71
3462	221
34621-84	71
34632-84	71
3464	169
34700-87	75
34700-87	367
34700-88	75
34700-89A	75
3471	185
34725-84	77
3473	53
3473	107
3473	111
3473	343
34730-87	75
34730-88	75
34730-89A	75
34731-86A	75
34731-89	75
34732-86A	75
34732-89A	75
3479	73
3481	13
3485	57
3485	221
3485	257
3486	169
3487	163
3487	165
34901-85	235
34904-86	77
34906-85	235
34920-86	77
3494	31
3494	185
3500	13
3501	13
35023-86	79
35024-86	79
35025-79	79
35026-79A	79
35027-79A	79
35028-79	79
35029-85A	79
3503	169
3504	19
35042-85	79
35042-90	79
3506	19
35064-79	79
35068-79	71
35074-87	77
35074-90A	77
35076-79	77
35077-87	77
35077-90	77
35078-79	77
35078-79	115
35078-79	341
3509	111
3512	19
3512	73
3514	213
3516A	169
3516A	173
35211-36	77
35257-87C	77
35259-87B	77
3526	111
35261-87	77
35261-87	367
35261-90A	77
3528	19
3528	73
3529	239
3531	187
3533	143
3535	181
3536	181
3537	93
3538	95
3538	143
3540	93
3541	179
3545	179
3545	233
3546	279
3549A	169
3554	19
3555	63
3557	63
3560W	221
3560W	347
3561WB	221
3561WB	347
35622-79B	79
35625-79A	79
35626-79A	79
35629-79	79
35632-79	79
35652-79A	77
358	19
358	23
3581	311
35850-84	21
35850-84	91
35851-84	21
35851-84	91
35852-84	21
35852-84	91
3589	95
3597	175
3597	319
3598	175
3598	319
3652	99
3652	243
3652	247
3655	101
36753-87A	89
36755-87A	89
36756-89	357
36760-89	357
36801-87A	77
36956-65A	115
36962-67	115
36964-67	115
36964-67	357
37071-87	77
37075-87	77
37075-87	367
37081-87A	77
37088-87	79
37088-87	81
37088-90	79
37088-90	85
37089-84	79
37089-84	81
37089-84	85
37090-84A	79
37090-84A	81
37090-84A	85
37103-87A	77
37105-87A	77
37105-87A	367
37109-87A	77
37312-75	79
37312-75	81
37312-75	85
37313-80	79
37313-80	81
37313-80	85
37357-84	81
37357-84	85
3738	127
37496-84	81
37496-90	85
375	73
375	233
37503-41	107
37503-41	111
37523-85	79
37523-85	81
37550-84A	81
37550-90A	85
3764	337
3764	339
3765	327
3766	269
3767B	159
3767B	165
3767B	167
3767B	233
3767B	279
3767B	305
3767B	311
3770	13
37707-84	81
37707-90	85
3771	339
37800-84	81
3782	155
3782	173
3784	69
3787	51
3787	93
3787	115

PART NO.	PAGE
3787	163
3787	175
3787	199
3787	305
3787	315
3787	321
3787	357
3787	361
37871-84A	81
37871-90	85
37872-90	85
37901-84	83
37902-82	83
37902-84A	83
37903-84	83
37903-90	85
37904-84	83
37904-90	85
37905-84	83
37905-90	87
37906-84	83
37906-90	87
37907-84	83
37908-90	87
37909-90	87
37910-90	87
37911-90	87
37912-90	87
37913-90	87
37930-84A	83
37931-84	83
37975-84A	83
37975-90	87
37976-90	87
37977-90	87
3802W	107
3802W	203
3802W	305
3825	105
3825	111
3825	169
3826	53
38601-89	89
38606-87A	89
38607-87A	89
38608-82B	89
38622-87	221
38630-88	89
38712-68	107
38712-68	211
38712-68	225
38712-68	291
38713-87A	55
38713-87A	89
38715-85	89
3945	213
3946	331
3946	337
3946	339
3950	181
3953W	139
3953W	255
3953W	361
3958	339
3960W	151
3960W	159
3960W	165
3960W	173
3960W	217
3973	337
3974HW	51
3974HW	151
3974HW	159
3974HW	167
3974HW	207
3974HW	225
3974HW	327
3987	93
3987	111
3987	151
3987	155
3987	191
3987	203
3987	225
3987	241
3987	245
3987	251
3987	257
3991	93
3991	165
3991	221
3991	241
3993	53
3993	69
3993	173
3993	255
3996	165
3996	263
3997	13
39976-65B	91
39990-65	91
39992-65C	91
39993-65	91
39996-65	91
39998-65	91
40001-85	91
40007-36A	91
40010-89	91
40023-86	91
40023-86	91
40037-79	91
40055-39	91
40100-85	91
40109-86	91
4011	149
4013	159
4013	213
4013	231
4014W	93
4014W	169
4014W	217
4014W	245
4014W	339
4015	89
4015	95
4015	199
4015	299
4016	69
4017	59
4017	69
4017	93
4017	149
4017	213
4017	241
4017	257
4020W	217
4020W	343
40210-85C	77
40210-85C	91
40218-88	369
40221-85A	91
40221-85A	123
40236-88A	91
40236-88A	125
40266-85	91
40267-85	91
40269-85	91
40275-83	91
4028	337
4028	339
4029	131
4029	143
4029	337
40299-83	91
4030	231
4030	339
4033	89
4033	95
4036	217
4036	255
4036	257
4036	339
40375-70	91
40384-83A	91
40392-70	91
4047	131
4047	275
4053W	105
4061	239
4067	237
4067	241
4068	115
4068	233
4068	271
4069A	69
4069A	263
4069A	275
4070	275
4074	183
4081	181
4081	323
4081	337
4086	233
40902-87	115
40903-87	107
40903-87	111
4091	221
40910-84A	101
40918-82	107
40918-82	111
40918-82	115
40918-87	107
40918-87	111
40920-79	105
40920-82	107
40920-82	111
40920-82	115
40920-87	107
40920-87	111
40920-87	115
40922-79	105
40922-79	107
40922-79	111
40922-79	115
40922-87	107
40922-87	111
40922-87	115
40924-86	105
40939-86A	123
4094	361
4095	139
40956-82	107
40956-87	107
40957-86	115
40957-87A	115
40971-86A	105
40975-86	123
40976-86	123
40999-87	101
40999-87	123
40999-87	355
41008-87A	123
4100HW	241
41010-86	123
41015-86	123
41015-86	123
41020-86	123
41029-87	365
41035-88	369
41036-88	369
41040-88	145
41043-89	101

PART NO.	PAGE
41109-88	101
41110-79A	123
41112-79	151
41112-79	155
41123-79	101
41123-79	123
41123-79	147
41123-79	149
41123-79	185
41123-79	355
41157-83	355
41157-87	355
41198-73	123
41465-86	123
41549-87A	159
41549-89	159
41556-87	159
41559-87	159
41570-77	155
41573-84	151
41584-86	101
41591-81	123
41595-86	123
41665-82	119
41713-86	95
41713-86	115
41720-58	343
41731-82	95
41731-82	105
41731-82	107
41731-82	111
41731-82	115
41731-88	95
41731-88	105
41731-88	107
41731-88	111
41731-88	115
41733-88	95
41739-84A	95
41739-84A	95
41742-58A	343
41745-79	115
41747-82A	95
41747-82A	105
41747-82A	107
41747-82A	111
41747-82A	115
41755-86	105
41791-79A	123
41800-81A	105
41800-81A	107
41800-81A	111
41800-81A	343
41801-58A	343
41804-84A	105
41804-84A	109
41804-84A	113
41814-76A	101
41835-58	343
41836-58	343
41837-58	343
41957-86	105
42268-90	111
42269-30	111
42269-70	105
42269-70	115
42301-79A	115
42301-87	115
42303-89A	95
42305-86	95
42305-86A	95
42309-70	111
42309-70	115
42311-58	337
42311-58	343
42315-85	105
42327-70	55
42331-87	111
42334-82	171
42374-77B	343
42374-82B	111
42374-82B	115
42374-86	105
42375-82	115
42375-87	115
42376-77A	105
42376-77A	107
42376-77A	111
42376-77A	343
42381-82	115
42382-82A	109
42382-87	111
42382-87A	109
42382-87A	115
42407-87B	117
42407-88	117
42416-83	105
42416-83	115
42431-86	117
42431-86	173
42431-87	117
42437-81	109
42437-87	109
42444-87B	111
42446-82A	109
42446-87A	109
42448-82A	109
42448-82A	111
42448-87	109
42448-87	111
42452-87	109
42452-87A	111
42453-82A	117
42455-80	105
42455-80	109
42455-80	111
42455-80	343
42455-82	117
42467-87C	117
42470-82B	111
42471-87	117
42473-87	117
42476-87	113
42479-90	115
42507-86	111
42507-86	171
42507-87A	111
42507-87A	171
42507-89A	111
42507-89A	171
42510-83	105
42515-82	111
42522-82	113
42522-87	113
42523-82	109
42523-87	109
42524-82	109
42524-82	113
42531-87	113
42532-82	113
42534-82	105
42534-82	109
42534-82	113
42534-82	263
42534-82	343
43001-79	101
43005-86	101
43020-87	101
43024-73B	101
43025-73B	101
43032-40B	101
43032-40B	123
43035-87	101
43053-86	101
43057-80A	101
43067-86	101
43085-81	101
43085-81	123
43150-83	101
43157-83A	101
43157-83A	123
43157-83A	355
4319	19
4319	167
4319	257
4325	63
4326A	63
4326A	255
43283-86	159
43288-82	355
43290-82	101
43290-82	125
43290-82	355
43291-82	101
43291-82	125
43291-82	355
43292-82	101
43292-82	125
43292-82	355
43293-82	101
43293-82	125
43293-82	355
43294-82	101
43294-82	125
43294-82	355
43299-87	125
43312-84	101
43338-83	101
43345-84A	101
43345-87	101
43346-83	103
43349-87	95
43358-83A	103
4337W	7
4337W	147
4337W	151
4337W	159
4337W	169
4340	53
43403-87	103
43404-87	103
43464-88	369
43465-88	369
4350A	131
4350A	143
4351	131
4355	7
43557-87	103
43567-79	125
43601-78A	103
43601-78A	125
43602-78A	103
43602-78A	125
43603-78A	103
43603-78A	125
43604-78	125
43605-78	125
43606-78	125
43608-82	103
43608-82	125
43610-87	103
43615-82	103
43615-82	125
43619-84	103
43623-78	103
43624-78	103
43625-78	103
43626-84	101
43637-89	103
43638-89	103
43648-86	125
43650-82	103

PART NO.	PAGE
43650-82	125
43650-82	355
43654-86A	103
43654-86A	125
43657-89	101
43658-89	103
43662-80B	103
43668-82	103
43668-82	125
43671-84	103
43672-84	103
43676-88	103
43677-88	103
4371W	135
4371W	203
4371WA	129
4371WA	139
4371WA	213
43883-84	103
43895-87	103
4391	51
4391	53
4391	163
4391	251
4391	275
4391	327
4391	361
43946-86	119
43957-86E	119
43959-86	119
43960-86	119
44019-83	99
4401W	331
4401W	353
44020-83	99
44021-83	99
44022-83	99
44023-83A	99
44029-88	103
44030-88	145
44034-86	119
44035-86A	119
44039-86	119
44044-88	145
44045-87	119
44046-84C	99
44047-83	99
44048-83	99
44048-83	119
44050-82A	119
44050-87	119
44053-83A	99
44054-83	99
44059-83	99
44060-83	99
44061-83	99
44062-83	99
44063-83C	99
44065-83	99
44069-84	119
44074-88	99
44076-86A	119
44077-88B	99
4411	7
4411	115
4411	129
4411	135
4411	193
4411	213
4411	337
4412	279
4412	321
44126-82	105
44126-82	109
44126-82	113
44126-82	117
44126-87	109
44126-87	113
44126-87	117
44136-92	103
44146-77	119
44146-82	119
44147-87	121
44152-77	121
4416	19
44190-88	99
44197-77	99
44197-77	121
44198-87	121
44199-79	121
44199-82	121
44200-82	121
44201-82	121
44205-82	121
44205-87	121
44207-82	121
44207-87	121
44208-82	121
44209-82A	121
44209-87C	121
44211-82	121
44212-82	121
4435W	151
4435W	193
44444-79	355
44447-89	103
4453	139
4460	131
45004-85	95
45004-85	117
45005-85	95
45005-85	117
45006-87A	95
45013-85A	95
45016-82A	97
45017-82A	89
45017-88A	89
45019-85A	95
45021-86	89
45031-82	97
45032-82	89
45032-82	97
45036-82	89
45036-88	89
45039-68	89
45042-82	97
45042-82	117
45043-89	89
45043-89	97
45044-82	89
45044-82	97
45051-82	97
45057-82	105
45057-82	107
45057-82	111
45057-82	343
45072-87	97
45085-88	221
45092-66A	35
45092-66A	263
45092-66A	265
45092-66A	267
45095-85	21
45110-88	97
45110-88A	97
45111-89	97
45112-84	97
45112-84A	97
45114-77	343
45121-84	97
45121-88	97
45121-88A	97
45128-86	97
45128-88	97
45140-87	97
45141-87	97
45141-87A	97
45152-78A	113
45152-78A	117
45154-84	113
45156-84	113
45156-84	117
45156-87A	113
45156-89B	113
45373-88	131
45374-87	131
45375-87	131
45376-87	131
45377-87	131
45378-87	131
45381-87	131
45382-83	129
45382-83	135
45384-83	135
45386-83	129
45386-83	135
45387-83	129
45387-83	135
45388-83	135
45389-86	135
45389-86	149
45392-86	135
45393-87	131
45401-87	131
45403-84	129
45403-84	135
45404-75	129
45404-75	135
45405-75A	127
45405-75A	129
45405-75A	131
45405-75A	135
45405-75A	137
45405-75A	139
45407-86	129
45408-84	129
45410-84	129
45410-84	135
45412-75	129
45412-75	135
45413-84	129
45413-84	135
45416-84	129
45416-84	135
45417-84	137
45418-84	137
45419-80	137
45419-80	139
45420-80	137
45421-84	341
45424-87	131
45425-87	131
45426-79	311
45427-79	311
45429-86	129
45431-85	127
45435-83A	127
45437-81	311
45443-86	127
45446-87	127
45447-81	311
45448-81	311
45449-86	127
45452-87	341
45456-86	139
45461-87	131
45462-87	131
45463-87	131
45465-87	131
45473-88	143
45494-79	311
45534-87	127

PART NO.	PAGE
45543-88	143
45544-88	185
45547-87	365
45549-88	133
45550-88	131
45559-87	131
45561-87	133
45562-87	131
45563-87	133
45566-88	143
45567-88	143
45568-88	143
45569-88	143
45583-83	97
45583-83	147
45583-83	149
45585-83	147
45585-83	149
45587-83A	149
45587-88	149
45589-84	135
45603-86	139
45605-88	141
45607-88	143
45611-86	131
45611-86	139
45611-86	143
45621-83A	149
45640-84B	137
45640-88	137
45640-88	141
45648-85	137
45648-85	213
45649-88	145
45651-88	145
45655-88	145
45659-88	145
45660-88A	145
45661-88	145
45662-88	145
45663-88A	145
45665-84B	137
45670-80	137
45670-80	139
45672-80	137
45717-63	137
45718-60	127
45718-60	137
45718-71	129
45718-71	135
45733-48	137
45733-48	139
45736-78B	129
45736-78B	135
45739-87	131
45743-84	129
45746-84	129
45750-87	131
45751-71A	129
45762-86	139
45782-72A	129
45782-72A	135
45790-80	129
45790-80	131
45790-80	135
45791-84A	135
45791-88	131
45793-85A	135
45793-88	131
45827-84	127
45830-48	21
45830-48	29
45830-48	149
45830-48	337
45832-77A	127
45832-77A	137
45832-77A	139
45834-77	127
45834-77	137
45834-77	139
45838-77	137
45838-77	139
45839-84	127
45839-84	147
45841-84	127
45842-77	137
45842-77	139
45845-77	127
45845-77	137
45845-77	139
45847-84	127
45853-83	127
45855-77	127
45855-77	137
45857-83	127
45858-77	127
45858-77	137
45858-77	139
45859-77	127
45859-77	137
45859-77	139
45860-84	127
45863-84	127
45864-84	127
45865-84	127
45865-84	137
45865-84	139
45866-84	127
45866-84	137
45866-84	139
45870-84	127
45873-84	137
45874-84	137
45875-84	127
45875-84	137
45875-84	139
45903-84A	129
45904-84A	129
45905-87	131
45906-84	129
45908-80	129
45909-83	135
45912-84	129
45912-84	135
45913-84	135
45914-84	129
45915-86	139
45916-86	139
45917-86	139
45918-86	139
45919-87	131
45920-87	131
45921-87	131
45922-87	131
45923-87	131
45924-87	133
45925-88	133
45930-86	139
45931-86	139
45932-86	139
45933-86	139
45934-86	133
45934-86	139
45935-88	143
45936-88	143
45937-88	143
45940-84	127
45940-84	137
45940-84	139
45964-49	127
45964-86	139
45964-89	127
45982-73	129
45982-73	135
45982-73	149
45984-87	133
45984-87	149
45990-88	133
45990-88	149
45993-86	129
45994-84	129
45994-84	135
45996-87	133
45997-73	129
45997-73	135
45997-73	149
45998-73	129
45998-73	135
45998-73	137
45998-73	139
46002-87	133
46004-84	137
46006-84	137
46008-88	143
46020-84	127
46020-84	129
46020-84	135
46020-84	137
46020-84	145
46048-84	137
46053-88	143
46054-88	143
46055-88	143
46056-88	143
46057-88	143
46060-88	143
46065-88	143
46440-84B	147
46450-86	149
46450-88	149
46451-85	149
46451-88A	149
46452-85	147
46452-85	149
46454-83	149
46455-85	147
46457-86	149
46459-86	147
46459-86	149
46461-86	147
46461-86	149
46462-88	149
46501-86	149
46503-86	149
47005-87	155
47008-87A	161
47008-89A	161
4701	339
47076-72	333
47076-72	357
4713W	111
4713W	115
47159-79A	21
47169-83A	11
47169-90	11
4716W	19
4716W	231
4716W	339
4717	73
47173-87A	161
47173-88A	161
47173-89A	161
47174-87A	161
47174-88A	161
47174-89A	161
47175-87A	161
47175-89A	161
47176-87A	161
47176-89A	161
4718A	23
4718A	53
4718A	73

PART NO.	PAGE
4718A	233
47201-87	155
47202-87	157
47203-87	155
47204-87	157
47205-87B	155
47206-87B	157
4720W	325
4721	7
4721	19
4721	169
4721	173
4721	231
4721	339
4721	347
47218-87	365
47219-87	365
4722	257
47220-87	365
47221-87	365
4724	19
4724	111
4724	149
4724	169
4724	213
47247-83	105
47247-83	151
47247-83	341
4726	7
4726	123
4726	339
47279-89	161
47280-89	161
4729	127
4729	137
4729	139
4729	173
4729	337
47302-86	365
4736	145
47365-83A	173
47374-83A	163
4739	271
4740A	23
4740A	89
4740A	233
4741	73
4741	95
47491-89	151
47491-89	155
47492-89A	151
47492-89A	155
47505-86	151
47505-86	155
47510-80	151
47510-80	155
47511-80	151
47511-80	155
47512-82	151
47513-80	151
47513-80	155
47515-86	151
47515-86	155
47519-83A	103
47519-83A	125
47519-83A	355
47530-79A	127
47530-79A	131
47538-79	151
47538-79	155
47544-85	151
47551-79A	151
47552-79A	153
47556-81	153
47556-81	157
47564-86	153
47564-86	157
47573-86	159
47573-87A	159
47573-89A	159
47577-86	161
47579-86	161
47692-84	135
47693-84	129
47694-84	129
47698-86B	161
47716-86	113
47716-86	117
47813-89	159
47815-87A	159
47815-89	159
47819-87	153
47819-87	157
47820-81A	157
47825-81	157
47826-81	157
47830-86	135
47831-87	365
47832-87	365
47900-83D	153
47900-89A	153
47902-83	337
4800	327
48030-86	183
48031-89A	183
48033-84	183
48036-87	157
4809	185
4810	23
48130-87A	161
48130-88A	161
48130-89A	161
48131-87	161
4813A	23
4813A	233
4814	73
48140-84	127
48140-84	129
48140-84	133
48140-84	135
48140-84	137
48140-84	141
48152-82	175
48152-82	193
48152-82	319
48152-82	321
48165-87	153
48165-89A	153
4816A	185
4820	233
4825A	73
48300-60	127
48300-60	129
48300-60	133
48300-60	135
48300-60	137
48300-60	139
48300-60	143
48302-85	343
48306-88	143
48311-60	161
48315-60	127
48315-60	129
48315-60	133
48315-60	135
48315-60	137
48315-60	139
48315-60	153
48315-60	157
48315-60	161
48315-60	343
48330-48A	137
48332-48B	137
48333-80	127
48361-80	127
48361-80	129
48361-80	133
48361-80	135
48361-80	137
48361-80	139
48361-80	143
48365-48A	127
48365-48A	129
48365-48A	133
48365-48A	135
48365-48A	137
48365-48A	139
48365-48A	143
49017-82A	157
49059-84	147
49059-88A	147
49060-84	337
49126-77B	171
49127-77A	171
49184-84A	147
49184-88	153
49187-79	327
49188-79A	327
49193-79	327
49194-85	327
4961	159
50005-85A	161
50007-86	161
50009-82	157
50010-84	157
50011-30A	153
50011-30A	157
50015-74	153
50015-74	161
50018-85	161
50025-84	153
50025-84	161
50027-84	153
50027-84	161
50028-74A	161
50031-84A	157
50034-84	161
50041-85	161
50050-84	153
50059-85	153
50061-85	161
50069-86	157
50074-83	153
50075-83A	153
50078-81	153
50087-86	161
50087-89A	161
50100-70	161
50100-70	235
50518-83A	173
50531-81	171
50584-87	173
50585-87	173
50594-87	337
50606-86A	173
50613-86	173
50614-66	173
50619-74A	173
50620-74	173
50621-79A	173
50622-83A	173
50635-82	173
50636-81A	171
50639-81	171
50643-82	171
50646-82	171
50647-82	171
50900-72	171
50912-72	171
50921-83	171
50933-86	173
50939-52	171

PART NO.	PAGE
50940-52	171
50972-75	105
50972-75	117
50972-75	153
50972-75	235
50972-75	341
50972-75	343
50973-65	171
50989-86	173
50990-86B	173
50991-86	139
50992-86	117
50992-87	117
511	123
51184-88	167
51185-87	167
51185-90	167
51186-89	167
51188-86	167
515	105
515	107
515	111
515	115
51651-79	165
51652-83	165
51652-83	167
51923-86	325
52020-82	165
52041-82	165
5207	53
5207	193
5207	203
5207	357
5209	197
5209	297
5209	299
5209	359
52092-77	229
520W	155
5210	179
5210	197
5210	199
5210	203
5210	211
5210	211
52103-31	259
52106-86	165
52107-86	165
52107-86	241
52108-86	165
5211	179
52111-85A	165
5212	211
5212	211
52128-87	165
52133-87	165
52134-87	165
52135-87	165
52138-82A	165
52139-82	165
52141-82	165
52142-82A	165
52151-86A	163
52151-89	163
52164-86A	163
52164-89	163
52177-86A	163
52177-89	163
52187-87	365
52188-87	365
52191-86	167
52192-86A	163
52201-86B	163
52208-86	167
52213-82	165
52219-86B	163
52231-86A	163
52231-89	163
52236-86	167
52355-82	165
52501-84	167
52502-86	167
52503-88	167
52503-88B	167
52504-89	167
5251	339
5252	357
52541-87	167
52545-84	165
52658-86	167
52700-81	171
52713-87	173
52713-91	173
52739-83	165
52756-79	175
52765-85	165
52766-85	165
52771-82	165
52771-82	167
52797-87	165
52798-87	165
53156-86	185
53165-89	179
53166-89	179
53170-89	179
53266-88	179
53278-89	179
534	99
534	145
53411-86A	163
53415-83	175
53424-79	175
53426-80	175
53426-87	175
53433-80	203
53434-80	175
53435-88	175
53437-79	175
53439-79	175
53439-79	221
53439-79	225
53439-79	265
53439-79	267
53439-79	269
53439-79	347
53440-79	175
53447-83A	175
53447-87	175
53477-80A	175
53478-80	175
53486-85	175
53487-87	153
53487-87	157
53515-86	163
53517-86	163
53521-87A	163
53563-82	175
53564-82	175
53564-89	175
53570-89	175
53580-82	175
53580-82	193
53580-82	319
53580-82	321
53582-82	175
53582-82	193
53582-82	319
53582-82	321
53583-82	193
53587-85	175
53587-85	193
53587-85	319
53588-85	175
53588-85	319
53590-84	319
53590-84	321
53598-88	179
53615-85	177
53615-85	319
53616-85	177
53616-85	319
53617-85	177
53617-85	319
5403B	229
5406B	331
5411	257
54309-87	181
54310-83	181
54314-83	181
54315-83	181
54316-83A	147
54316-83A	149
54316-83A	185
54317-85	181
54319-85	181
54321-85	103
54321-85	125
54321-85	181
54323-85	147
54323-85	149
54323-85	181
54324-85	181
5444	91
54473-79	181
54474-79	181
54475-79	181
54483-88	143
54491-85	181
54492-85	181
54493-85	181
54494-85	181
54495-85	181
54496-85	181
54502-87	181
54506-87	181
54508-86A	183
54508-89	183
54520-86	183
54523-82	181
54532-85	181
54536-85	181
54547-87	181
54548-87	181
54551-86	183
54585-87	181
54586-87	181
5465	229
54701-82	181
54705-81	181
5486W	331
551	191
559	337
55915-88	189
55917-79	185
55918-79	185
55919-82	185
55920-83A	185
55920-83B	185
55934-89	185
55936-88	185
55937-88	185
56073-83	185
56073-83	191
56073-83	213
56073-83	291
56073-83	307
56081-82	185
56082-83	185
56084-87A	185
56087-86	185
56093-88	185
56105-84	185

PART NO.	PAGE
56107-88	199
56107-88	299
56109-88	199
56109-88	299
56114-86	199
56115-79B	185
56116-82A	187
56117-82A	187
56119-77A	185
56122-77	187
56124-77	187
56137-84A	185
56140-84A	187
56141-84A	187
56144-86	187
56146-86	187
56148-87	187
56149-88	187
56151-88A	187
56153-73	187
56158-73	185
56159-73	187
56161-83	185
56206-81A	189
56220-81B	189
56305-88	189
56305-90	189
56306-88	189
56306-90	189
56323-81C	189
56324-81C	189
56327-81B	189
56327-90	189
56327-90	191
56328-81B	189
56328-90	189
56336-83	189
56337-83	189
56342-88	189
56342-90	189
56343-88	189
56343-90	189
56351-89A	191
56351-90	191
56352-89	191
56353-89	191
56354-89	191
56354-90	191
56394-74	189
56394-74	307
56396-74A	189
56396-74A	307
56397-74C	189
56397-74C	307
56402-83A	189
56402-83A	307
56508-76	189
56538-88	187
56540-88	187
56541-86A	187
56542-86A	187
56567-86A	185
56569-86	185
5702	69
5710	137
5710	139
5713	231
5714	283
57215-75	117
5724	165
5728	361
5736	185
5736	265
5756	123
5758	191
5758	361
5775	245
57807-86	203
57808-86	203
57809-86	203
57978-63	177
57980-87	203
57997-83	207
58009-83B	193
58009-89A	193
58016-83B	193
58016-89A	193
58018-86	207
58031-80	193
58036-83	207
58042-86	203
58049-50A	333
58067-83	207
58068-83	207
58075-86	207
58078-49	207
58079-49	207
58080-83	207
58081-83	207
58082-87	217
58109-88A	209
58128-89	199
58129-89	199
58132-66	333
58147-86	203
58183-78	207
58184-86	199
58184-86	359
58186-86	199
58186-86	359
58187-86	197
58190-86	203
58196-86	199
58196-88	199
58207-86	199
58210-86	199
58210-88	199
58212-86	203
58218-86A	203
58219-86A	203
58220-86A	203
58223-86	203
58247-86	197
58311-86	199
58315-86	297
58322-88	199
58323-86	199
58355-86	263
58356-86	263
58378-89	357
58379-89	359
58380-89	179
58381-89	179
58382-89	179
58383-89	179
58384-89	179
58385-89	179
58386-89	179
58388-89	179
58398-84	195
58400-80	193
58402-80	193
58406-75	207
58408-75	207
58411-76	207
58412-76	207
58415-86A	199
58416-77	207
58417-77	207
58419-88	209
58420-88	209
58421-88	209
58422-88	209
58423-88	209
58424-88	209
58425-88	209
58426-88	209
58453-83B	193
58453-89A	193
58454-86	203
58459-80	193
58460-80	193
58461-80	193
58462-89	193
58466-80	193
58473-80	193
58477-80	193
58478-86	199
58479-86	199
58480-86	199
58480-88	199
58480-88	287
58482-86	195
58484-84	195
58484-84A	195
58484-89	195
58486-84	195
58486-84A	195
58486-89	195
58487-79	195
58488-84	195
58489-84	195
58493-89	211
58493-89	211
58494-89	211
58494-89	211
58498-86	195
58498-86	203
58499-86	195
58499-86	203
58520-79A	127
58661-86	297
58662-86	297
58683-89	211
58684-89	211
58687-89	211
58688-89	211
58702-86	203
58703-86	203
58704-86	67
58706-86	205
58708-86	205
58709-86	297
58709-86	299
58712-79A	195
58713-79A	195
58714-79	195
58715-79	195
58716-79	195
58717-79	195
58717-79	357
58718-82	195
58719-82	195
58722-84	205
58723-84	205
58729-82	195
58730-82	195
58826-89	195
5885	217
5887	257
58998-83	223
59007-84	223
59059-86	327
59082-79	223
59082-79	347
59093-87	223
59111-74	223
59126-86B	225
59129-86	223
59139-89	223
59159-80	223
59166-80	223

PART NO.	PAGE
59173-81A	223
59173-81A	369
59176-88	223
59180-80	223
59180-80	347
59180-80	349
59181-80	223
59181-80	349
59182-84	223
59197-87	223
59211-74	223
59211-74	349
59231-86	223
59231-86	349
59235-86	223
59236-89	223
59244-89	319
59244-90	319
59245-89	319
59245-90	319
59245-90	357
59246-89	223
59250-88	223
59251-90	227
59252-87	325
59253-87	223
59254-72	129
59254-72	135
59254-72	137
59254-72	223
59254-72	227
59255-72	167
59255-72	227
59255-72	319
59255-72	349
59256-84A	137
59256-84A	223
59256-84A	227
59256-84A	319
59257-84A	281
59258-88	161
59259-90	319
59259-90	357
59261-77	223
59262-90	229
59263-79	227
59263-79	319
59263-79	357
59264-86	325
59265-90	161
59267-83A	165
5926B	93
59270-84A	165
5940	325
59504-84	231
59505-84	231
59542-87	231
59544-87	231
59548-87	231
59558-87	231
59569-83	227
59573-83	227
59579-85	227
59591-87	231
59596-89	227
59626-84	229
59634-81A	227
59648-84A	227
59658-79	227
5965B	151
59710-84	281
5989	211
59914-86A	227
59924-80	223
59938-72	337
59954-86	231
59955-86	231
59959-86	279
59964-86	231
59964-86	231
59969-86	231
59969-86	231
59971-80	229
59977-89	231
59978-89	231
59983-75	229
59984-73	229
59986-75	229
59988-72	163
59988-72	229
59993-80A	229
600	305
60001-55	229
60005-77	229
6003	79
60031-61	321
6005	63
6007	73
601	69
601	355
6012	181
6016	7
6016	13
6016	19
6016	31
6016	45
6016	57
6016	59
6016	69
6016	73
6016	151
6016	155
6016	233
6016	255
6016	257
6019	7
6019	19
6019	73
6019	99
6019	159
6019	181
6019	203
6019	241
6029	225
60295-87	365
60296-88	93
60297-87A	93
60298-88A	93
60299-85	93
6036	179
6036	197
6036	297
60362-86A	93
60363-86A	161
60363-86B	161
60397-85A	93
604	155
604	173
604	337
604	339
6040	145
60415-89	93
6042	145
60432-86	235
60432-86	367
60432-89	235
60432-90	235
60441-86A	235
60441-89	235
60441-90	235
6047	317
6048W	45
60507-86A	235
60507-89	235
6053	193
6053	203
6053	357
60533-86	93
60537-89	93
60539-86	235
60539-89	235
60543-86A	235
60543-89	235
6055	175
6055	319
6055	321
60567-90	235
6057	69
60572-86	235
60612-86	235
60612-89	235
60612-90	235
60630-86A	235
60630-89	235
60630-90	235
60642-85	235
60646-89	67
60647-90	67
60661-86A	235
60661-89	235
60661-90	235
60662-86A	235
60662-89	235
60662-90	235
60664-85B	235
60664-89	235
60665-85B	235
60665-85B	367
60665-89	235
60667-85	235
60668-84B	233
60668-84B	367
60670-85	235
60670-85	367
60673-85	235
60678-85	235
608	311
609	73
60954-89	359
60956-81	249
60957-81	249
60957-89	249
60958-81	237
60962-82	237
60964-82	249
60969-82	249
60969-89	249
60971-90	249
60972-90	249
60973-90	249
60974-90	249
6099	13
6099	23
6099	53
6099	73
6099	89
6099	95
6099	233
6099	255
61006-87A	241
61019-83A	237
61019-89A	239
61029-82A	237
61029-82A	239
61044-82C	241
61060-82A	241
61072-79	237
61073-79	237
61075-79	237
61077-82	237
61077-82	239
61077-82	311

PART NO.	PAGE
61078-80	237
61079-82	241
6107B	93
61082-79	237
61083-79A	237
61084-79	237
61086-83	237
61089-83	249
6109	45
6109	93
6109	93
6109	165
6109	203
6109	217
6109	239
6109	241
6109	257
6109	325
61091-88	239
61093-79	249
61095-83	237
61102-83B	241
61102-83B	245
61103-83A	245
61109-85A	241
61109-85A	245
61112-82	239
61112-82	241
61117-86	197
61117-86	243
61120-83	249
6113	185
6113	251
61134-87	249
61134-88	249
61137-87	241
6115	119
61155-84	245
61157-87	245
61165-89	245
61192-88	243
61211-84B	245
61218-85B	245
61228-84C	245
61237-91	245
6127	123
61270-88	239
61278-88	239
61279-88	239
613	305
61311-82	243
61313-88	239
61321-80	243
61322-80B	237
61322-80B	239
61322-80B	243
61324-88	243
61335-83	241
614	305
61411-82	243
61413-86	243
61421-88A	241
6150W	311
61631-84	263
61640-82	245
61641-84	245
61643-88	249
61644-88	271
61648-85	199
61648-85	249
61649-83	237
61661-84	245
61667-84	245
6182W	203
6182W	313
6192	271
6192	311
6192	313
6192	315
62043-81A	245
62043-81A	271
62123-66	161
62150-85	363
62161-75	237
62161-75	239
62161-75	241
62161-75	245
62166-81A	241
62166-81A	245
62167-81	239
62167-81	245
62167-83	237
62170-81A	237
62170-81A	239
62172-75	237
62172-75	239
62172-75	241
62172-75	245
6220W	105
6220W	111
6220W	115
6220W	221
6228W	331
6229W	321
6235	93
6235	211
6235	237
6235	297
6235	299
6235	325
6235	361
6236B	63
6237	241
6237	245
6237	331
62375-57	77
62406-86	251
62414-86	251
6242W	53
6242W	81
62460-86	251
62489-79C	251
62493-89	251
62495-89A	251
62498-86A	251
62498-89A	251
6253W	199
62540-83	251
62563-65	251
62563-65	363
6257W	155
6261	213
62634-84	251
62637-84	251
62663-84	251
62665-85	77
62665-85	251
62665-89	77
62665-89	251
62670-84	105
62704-84	251
62707-84	251
62725-90	251
6314W	69
6316HW	69
6317	105
6324W	311
6332B	331
6333	151
6333	167
6333	203
6333	207
6333	299
6333	321
6334	115
6334	151
6334	159
6335	221
6335	331
6335	347
6335	357
6336B	95
634	73
6340	339
63497-89	253
63500-68	49
63501-68	43
63501-68	77
63501-68	237
63501-68	239
63501-68	241
63501-68	245
63502-84	251
63502-89	251
63504-83	253
63505-84	43
63505-84	237
63505-84	239
63505-84	241
63505-84	245
63505-84	289
63509-86A	49
63515-86	253
6353	143
63531-87	77
63533-41	21
63533-41	29
63533-41	77
63533-41	147
63540-62	75
63546-87	113
63550-89	253
63551-82	105
63551-82	109
63551-82	113
63551-82	345
63553-86	253
63553-89	253
63553-90	253
63556-87	77
63556-87	253
63557-84	253
63557-90	253
63558-85	77
63559-84	253
63559-89	253
63561-84	109
63561-87	109
63563-85A	253
63572-86	253
63573-82	113
63573-82	345
63592-89	237
63592-89	239
63599-90	253
63609-72	345
6365	245
6366	107
6366	111
6366	115
6375B	339
63796-77A	77
6379W	7
6379W	169
6379W	231
6379W	325
6379W	339
63805-80A	77
63858-49	15
6398	93
6398	325
6400HB	7

PART NO.	PAGE
6400HB	91
6400HB	173
6410	165
6410	167
6410	225
6410	321
6416	331
6416	353
64511-63	93
64511-63	315
6474	159
6497HW	7
6497HW	69
6506	17
6516HW	7
6516HW	115
6516HW	167
65185-84	259
6519	73
65190-84	259
65276-62	255
65276-62	257
653	19
653	23
6530	181
65302-82	257
65324-83A	255
65324-83A	257
65325-83	255
65325-83	257
65328-83	255
65328-83	257
65380-85	257
65380-90	257
65381-89	257
65382-86	259
65382-89A	259
65395-86	259
65395-89A	259
65401-86	259
65410-83	259
65411-80A	259
65432-89	259
65447-86	259
65458-86A	259
65459-84A	259
65460-87A	259
65464-89	259
65475-89	259
65483-89	259
65487-89	259
65492-89	259
65502-83A	255
65502-89	255
65519-52B	255
65522-89	259
65538-85	255
65539-86	255
65571-82	259
65603-86	259
65621-83	255
65626-85	255
65627-85	255
65630-83A	255
65632-83A	255
65634-81C	255
65636-85	255
65645-85	255
65645-89	255
65647-83	255
65657-87	259
65668-87	259
65669-87	259
65670-82B	259
65674-87	259
65675-87	259
65678-85A	255
65680-85	255
65680-89A	255
65682-85	255
65682-89A	255
65689-89	259
65699-86	259
65699-90	259
65702-86	259
65721-85	255
65722-85	255
65723-85	255
65724-85	255
65732-86	259
65738-87	259
65738-89A	259
65739-87	259
65739-89A	259
65747-87	259
65781-82	259
65782-82	259
65802-90	259
6590HW	101
65991-82A	261
66000-80	261
66010-82A	261
66014-79	261
66029-80	153
66030-88	143
66042-79A	253
66042-79A	261
66047-80A	253
66104-84	195
66104-84	261
66105-77	261
66106-86	261
66183-82	261
66188-82A	261
66210-85A	261
66308-80	261
66309-84	261
66349-84	157
66350-84	157
6639	101
6645	151
6645	155
6645	165
6645	217
6653	101
6653	347
6653	355
6655	119
6655	123
6655	131
6655	139
66600-84	153
66997-86	263
66998-86	263
66999-86	263
67000-85B	263
67003-86A	263
67009-72	153
6700B	343
6701	7
6701	93
6701	131
6701	147
6701	149
6701	151
6701	155
6701	159
6701	167
6701	169
6701	193
6701	203
6701	213
6701	231
6701	257
6701	271
6701	279
6701	321
6701	325
6701	331
6701	337
6701	339
67014-87	267
67015-87A	267
67018-87A	267
6702	69
6702	93
6702	105
6702	107
6702	115
6702	127
6702	129
6702	135
6702	137
6702	139
6702	147
6702	151
6702	159
6702	163
6702	191
6702	193
6702	217
6702	221
6702	225
6702	237
6702	239
6702	241
6702	251
6702	255
6702	257
6702	263
6702	283
6702	327
6702	339
6702	361
67020-85A	267
67021-85B	267
67024-84A	271
67025-87	267
67027-81E	271
67029-86A	269
6703	59
6703	89
6703	91
6703	93
6703	95
6703	127
6703	155
6703	159
6703	163
6703	165
6703	175
6703	191
6703	197
6703	199
6703	203
6703	221
6703	225
6703	229
6703	233
6703	237
6703	251
6703	255
6703	261
6703	311
6703	315
6703	327
6703	331
6703	357
6703	361
67030-81F	273
67034-83A	265
67036-86	265

PART NO.	PAGE
67037-85A	265
67040-81F	271
67041-83A	265
67042-83	265
67042-85	265
67046-86A	265
67048-83A	265
67052-78B	265
67054-83B	269
67056-81F	273
67060-87A	263
67067-76	261
67067-76	271
67068-76	271
67069-76	271
67069-76	299
67070-76	227
67070-76	271
67070-76	279
67072-87B	263
67073-87A	263
67075-57A	55
67078-85A	267
67079-86A	271
67080-87	267
67085-83	265
67085-83	267
67086-85	243
67086-85	267
67094-85	265
67094-85	267
67094-85	269
67095-85	267
67096-87	263
67097-86	269
67098-87	265
67098-87	267
67098-87	269
67098-87	271
67103-83	265
67104-83	265
67104-83	267
67105-83	265
67106-83	265
67106-83	267
67107-83	265
67108-83	265
67108-83	267
67112-83	265
67117-85	263
67117-85	265
67117-85	267
67117-85	271
67118-87	271
67119-85	243
67120-84B	271
67122-85	265
67122-85	267
67123-86	263
67125-86A	271
67126-87	267
67127-84A	265
67127-84A	267
67127-84A	269
6712B	343
67132-85A	267
67136-85	243
67152-86	269
67153-86	269
67154-86	269
67155-86	269
67156-86A	269
67157-86	269
6716	53
6716	59
6716	105
6716	107
6716	111
6716	175
6716	179
6716	191
6716	221
6716	229
6716	237
6716	243
6716	297
6716	303
6716	325
6716	325
6716	331
6716	343
6716	357
67166-88	271
67168-88A	265
67169-88A	265
6717	175
6717	197
6717	211
6717	211
6717	319
6717	321
6717	357
67171-88	265
67172-88A	265
6718	169
6718	181
6718	337
67185-88	243
67186-88	265
67187-88	265
67200-86A	267
67201-86A	267
67202-86	267
67211-86	263
67215-68	271
67215-89	271
67216-86A	263
67217-68	271
67219-86	263
67229-85	263
6723	337
67232-85	263
67233-80C	263
67234-84	263
67235-80	263
67236-80	263
67237-80	263
67238-80	263
67239-83	363
6724	183
67243-84	263
6736	13
6736	69
6737	13
6738	29
6738	173
6738	181
6753	185
6756	143
6758	99
67608-86	263
67615-87	217
67615-89	217
6762B	13
67636-86	195
67636-86	205
67668-83	217
67668-89	217
67696-81	197
67696-81	205
67697-81	197
67697-81	205
67698-81B	213
67700-83	205
67701-83B	205
67702-81A	197
67704-83	197
67709-83	205
6771	31
67710-83	205
67712-83	197
67712-83	205
67713-86	213
67715-86	205
67716-60A	197
67716-60A	205
67717-65A	195
67718-60A	197
67718-60A	205
67719-63	213
67724-71	197
67724-71	205
67725-63	213
67726-71	197
67726-71	205
67727-87	213
67731-87	213
67732-71A	197
67732-71A	205
6774	321
67740-87	213
67743-84	213
67744-75	213
67746-85	195
67748-87	213
67749-77	217
67755-81A	197
67755-81A	205
67762-87	213
67768-86	213
67769-82	213
67771-88	213
67772-80	215
67773-80A	137
67773-80A	215
67775-81A	195
67777-80A	215
67778-60	197
67778-60	205
67780-60	197
67780-60	205
67782-60A	197
67789-91	215
67790-82	215
67790-93A	215
67795-85A	197
67795-85A	263
67805-86A	215
67807-86	215
67808-86	141
6781	283
67815-59A	215
67816-86	141
67817-83	197
67819-86	141
67820-86	141
67821-87	141
67822-88	275
67826-87	267
67827-88	275
67828-88	275
67829-88	275
67834-83	215
67838-85	199
67839-74	215
67843-70	197
67843-70	217
67843-70	311
67844-70	197
67844-70	217
67846-70	191
67846-70	197

PART NO.	PAGE
67846-70	217
67846-70	303
67846-70	311
67851-86	265
67851-86	267
67858-89	191
67858-89	197
67858-89	197
67858-89	217
67858-89	219
67858-89	313
67862-86	265
67862-86	267
67864-86	265
67864-86	267
67865-89	157
67865-89	173
67865-89	215
67872-89A	215
68008-73B	279
68008-73B	351
68022-91	265
68025-73	351
68026-73	279
68027-90	279
68027-90	351
68033-90	279
68033-90	351
68046-79	227
68047-79	227
68089-80	195
68089-80	205
68092-80	195
68092-80	205
6812	143
6812	145
6812	213
68123-73	279
68123-73	351
68163-84	195
68163-84	219
68163-84	277
68163-84	281
68163-84	281
68168-89	179
68168-89	195
68168-89	205
68168-89	217
68168-89	275
68168-89	279
68168-89	351
68392-90	281
68398-88	195
68399-88A	195
68400-86	217
68401-90	219
68401-90	281
68402-86	279
68402-86	353
68403-86A	281
68406-86C	275
68407-86	279
68408-86C	277
68410-87B	279
68419-87	267
68420-87	267
68421-87	267
68424-89	279
68430-89	279
68440-86	195
68440-86	217
68440-86	279
68440-86	353
68451-86	195
68451-86	217
68451-86	281
68451-86	353
68452-86	195
68452-86	217
68452-86	275
68452-86	281
68452-86	353
68455-86	277
68455-86	281
68456-89	229
68457-86	277
68457-86	281
68459-84A	263
68462-64	271
68464-86	265
68465-83	205
68465-86	269
68473-88A	265
68477-73	277
68480-73	281
68486-82A	277
68487-82	277
68489-83	269
68493-87	281
68493-90	281
68504-83	277
68505-90	195
68505-90	219
68506-90	281
68507-90	281
68510-74B	281
68519-68	195
68519-68	217
68536-75	191
68536-86	265
68536-86	267
68537-89C	281
68537-89C	311
68541-64A	311
68543-64B	205
68543-64B	277
68543-64B	281
68543-64B	311
68550-83	205
68550-83	277
68550-83	281
68550-83	313
68555-87	277
68559-87	277
68559-87	281
68561-79	311
68566-90	277
68572-64B	281
68572-64B	353
68574-83	269
68574-86	265
68578-84A	281
68588-86	269
68594-84	223
68597-86	265
68602-79	197
68602-79	219
68602-79	263
68602-79	311
68608-83	265
68608-83	267
68608-83	269
68619-83	197
68619-83	219
68633-83	219
68633-89	219
68634-86	197
68643-83B	281
68659-86	127
68659-86	291
68661-87	217
68668-87	217
68671-69	219
68672-38	219
68674-69	219
68684-86	219
68688-89	191
68690-69	219
68720-62	219
68721-62	219
68725-62	219
68740-91	265
69006-84	283
69007-84	283
69016-76A	285
69017-76	285
69031-83A	285
69031-90	285
69117-65	285
69118-84	285
69125-65	285
69149-65	285
69504-80	223
69505-89	223
69512-83	205
69540-78	243
69545-86	287
69545-89	287
69551-85	287
69551-89	287
69555-87	287
69555-89	287
69556-89	289
6960	337
69600-89	287
69606-82	285
6961	337
69617-82	243
69618-82A	243
69619-82	243
6962	181
6962	337
69620-86	287
6963	337
6969	45
6970	175
70003-83	287
70004-83	287
70005-70	291
70008-86	287
70011-84B	287
70011-89	287
70015-87	297
70015-87	299
70016-65A	285
70019-86	287
70022-83	287
70027-83	287
70028-85A	349
700287-81	349
70029-90	287
70033-79A	287
70033-89	287
70034-82	287
70043-81	293
70047-82	307
70049-83	287
7005	197
70050-83	287
70062-85	287
70064-84A	287
70069-65B	287
7007	115
70073-89	287
70082-82	307
70083-89	287
70094-87	309
70095-87	309
70098-87	309
70098-88	309
70099-87	309
70099-88	309

PART NO.	PAGE
70100-79A	287
70106-86	287
7012	107
7012	145
70132-89	287
70141-89	191
70141-90	191
70142-86	187
70142-86	287
70147-86	205
70149-86	297
7015	263
7015	283
7015	317
70150-86	205
70158-89	199
70158-89	287
70160-89	299
70168-89	299
7017	197
70172-86	287
70172-89	287
7018	197
7018	199
70180-87	307
70180-88	307
70181-87	307
70181-88	307
70186-82	77
70186-82	157
70186-82	287
70187-82	55
70191-73A	129
70191-73A	135
70191-73A	187
70191-73A	287
70196-86	223
70197-86	187
70199-87A	315
70216-87A	287
70216-89	287
70218-87	307
70219-87	307
7022	101
7022	119
7022	123
70232-89	287
70236-87	289
70245-89A	289
70245-89A	289
70253-88	287
70262-79	289
70263-87	289
70263-88	289
70268-92	287
70277-86	289
70277-89	289
70281-89	289
70282-86	289
70282-88	289
70282-89	289
70283-89	289
70285-87	289
70285-89	289
70287-81	263
70287-81	293
70288-81	293
70288-81	349
70289-89	293
70291-89	293
70292-89	293
70293-87	293
70294-87	293
70296-89	289
70296-89	299
7030W	207
7030W	331
70312-89	191
70316-90	191
70321-89	289
70328-84	237
70328-84	289
70341-89	299
70345-84	185
70345-84	293
70345-84	307
70349-89	199
70349-89	299
7036	29
7036	53
7036	59
7036	63
7036	69
7036	127
7036	165
7036	167
7036	169
7036	175
7036	179
7036	221
7036	229
7036	233
7036	237
7036	239
7036	297
7036	299
7036	305
7036	327
7036	331
7036	339
7036	357
7036	361
7038	7
7038	19
7038	111
7038	115
7038	131
7038	149
7038	155
7038	169
7038	173
7038	181
7038	203
7038	213
7038	257
7038	339
7038	347
7039	7
7039	127
7039	137
7039	139
7039	151
7039	155
7039	159
7039	173
7039	331
7039	337
7039	339
7041	53
7041	57
7041	59
7041	63
7041	69
7041	93
7041	95
7041	127
7041	129
7041	135
7041	137
7041	139
7041	147
7041	149
7041	151
7041	155
7041	159
7041	169
7041	173
7041	191
7041	203
7041	207
7041	213
7041	217
7041	221
7041	225
7041	245
7041	251
7041	255
7041	257
7041	271
7041	283
7041	325
7041	327
7041	331
7042	185
7042	275
7042	279
7043	331
7043	337
7043	339
7043	355
7045	63
7045	213
7045	279
70465-86	297
70465-86	299
70504-81	189
70550-85	289
70551-69	289
70552-69	289
70553-69	289
70554-69	289
70555-69	289
70556-71	289
70558-71	289
70559-71	289
70576-68	271
70576-68	293
70578-89	67
70578-89	293
70579-65	271
70579-65	293
70581-73	353
70642-89	303
70643-79A	177
70644-79A	177
70646-79	177
70646-88	177
70648-89	177
7068	101
7068	167
7068	169
7068	181
7068	185
7068	213
7068	337
7068	339
7069	23
7069	53
7069	59
7069	105
7069	127
7069	193
7069	217
7069	237
7069	239
7069	243
7069	263
7069	279
7069	311
7069	315
7069	317
7069	325

NUMERICAL INDEX

PART NO.	PAGE
7069	325
7069	331
7069	353
706A	251
70908-82	153
70908-82	327
70933-90	363
70936-87	271
70937-90	289
70939-84A	271
70941-84A	271
70955-89	191
70956-90	191
70958-89A	191
70958-90A	191
70966-84	289
70970-82C	315
70979-86	315
70980-87	289
70980-88	289
70980-89	289
70985-89A	289
7100	73
7100	151
7100	155
7101	151
7101	279
71090-64	271
71092-68A	271
71099-74	243
71099-74	263
7112	321
71134-68	273
71141-68	273
71143-75	273
71143-90	273
71144-75A	273
71145-75	273
7115	89
7115	175
7115	263
71158-86	273
71162-70	273
7118	53
7118	105
7118	179
7118	221
7118	225
7118	283
7118	297
7118	299
7118	347
71182-47A	273
7124	51
7124	63
7124	127
7124	139
7124	159
7124	175
71241-68B	273
7127	51
7127	73
7127	111
7127	233
7127	255
7127	275
7127	283
7127	311
7127	361
7129	297
7129	299
71294-89	239
71295-68	273
71297-68	273
71298-89	273
71300-79	273
7130W	151
7130W	193
7130W	213
7130W	279
7130W	321
7142	159
71424-83	315
71425-77	315
71426-87	311
71427-79A	311
71451-78	315
7145W	159
7145W	169
7145W	305
7145W	323
71467-65	305
71469-65B	305
71473-77B	305
7150	283
71501-73A	317
71502-86	199
71505-89	199
71506-84	317
71512-89	313
71513-89	191
71517-86	311
71518-80	237
71518-80	313
71518-80	315
71521-89	303
71526-80	313
71536-82A	313
71541-84	317
71549-82A	313
71550-75	315
71552-75	315
71554-75	315
71560-84	317
71563-82A	307
71564-82A	307
71567-82	307
71568-82A	307
71570-82A	307
71571-82	307
71572-82A	307
71573-82A	307
71574-82	307
71579-82A	309
71580-84	317
71581-82A	309
71583-85	317
71585-89	191
71585-90	191
71592-86	307
71592-88	307
71593-86	307
71593-88	307
71594-86	309
71594-88	309
71595-86	309
71774-77	293
71795-63A	227
71805-88	309
71806-86	309
71806-88	309
71807-86	309
71807-88	309
71809-88	299
71813-89	303
71875-81	51
720	19
72023-51A	105
72023-51A	109
72023-51A	113
72023-51A	117
72023-51A	313
72023-51A	317
72028-83	293
72029-84	293
72029-84	349
72034-71	293
72035-71	293
72036-71	293
72037-71	293
72037-71	349
72038-71	147
72038-71	149
72038-71	243
72038-71	263
72038-71	265
72038-71	267
72038-71	269
72038-71	293
72038-71	309
72038-71	349
72039-71	195
72039-71	197
72039-71	219
72039-71	243
72039-71	263
72039-71	267
72039-71	269
72039-71	277
72039-71	281
72039-71	293
72039-71	309
72039-71	349
72040-71	293
72041-71	293
72041-71	349
72043-71	243
72043-71	263
72043-71	267
72043-71	293
72043-71	309
72044-71	263
72044-71	293
72044-71	349
72045-90	293
72046-79	293
72047-71	295
72048-90	293
72051-77	55
72051-77	295
72052-79	177
72054-84	349
72057-84	349
72059-89A	303
721	57
722	73
7220	53
7220	59
7220	95
7220	105
7220	129
7220	135
7220	211
7220	213
7220	221
7220	287
7220	305
7220	311
72275-74	295
72275-74	349
72276-74	195
72276-74	295
72277-74	295
72278-74	205
72278-74	295
7229W	51
7229W	261
7229W	271
7229W	275
7229W	279
7229W	311
7229W	313

PART NO.	PAGE
7230	59
7230	69
7230	159
7230	173
7230	191
7230	211
7230	229
7230	279
7230	287
7230	327
72300-89	313
72301-89	313
72302-89	313
72306-88	313
72309-79B	313
72310-70	205
72312-73	205
72314-86	147
72316-89	313
7232	19
7232	143
7232	151
7232	155
7232	163
7232	165
7232	237
7232	239
7232	241
7232	271
7232	283
72320-89	313
72501-74	215
72502-74	215
727	57
728	155
728	159
729	263
735	155
735	321
738	45
739	73
739	233
740	155
741	325
7415A	211
7415A	321
7419	321
74405-86	253
74406-87	27
74407-86	295
74408-89	303
74423-68	337
74516-86	51
74519-88	51
74521-77	55
74521-77	177
74521-77	295
74526-86	199
74527-86	199
74529-79	51
74536-77A	55
74536-77A	177
74536-77A	295
74536-77A	349
74536-77A	351
74539-77A	55
74539-77A	177
74539-77A	295
74539-77A	349
74539-77A	351
74539-77A	353
74589-73	313
74589-73	315
74589-73	317
74598-73	315
74599-77B	313
74599-77B	315
74599-77B	317
7501	279
7501	351
75013-86	199
75031-86	199
75032-87	199
75034-82	243
75037-84	237
75039-86	243
75040-88	239
75044-84	201
75045-84	201
75047-88	243
75049-88	243
75057-88	243
75058-88	243
7506	19
7507	93
7507	221
7507	241
7507	257
7510	327
75101-82	67
75101-82	237
75101-82	263
7513	159
7515	69
7520	175
7520	321
7531	211
7531	221
7531	225
7531	231
7531	255
7531	257
7531	321
7531	327
7549	271
7561	123
7566	299
7590	175
7590	243
7602	271
7606	213
7608	175
7608	243
7608	283
7608	359
7609W	191
7609W	237
7609W	297
7609W	299
7613A	221
76163-87	297
76163-87	299
76164-87	297
76164-87	299
76170-86	205
76170-88	299
76171-86	297
76172-86	297
76173-86	205
76173-88	299
76175-86	179
76175-86	201
76176-86	201
76192-89	359
7620W	59
7620W	179
7620W	311
76234-86	205
76236-86	205
76238-86	201
7624	89
7624	221
7624	229
7624	347
76240-86	297
76240-88	301
76241-86	201
76242-86	201
76243-86	201
76243-86	297
76243-86	301
76244-86	201
76244-86	297
76244-86	301
76245-86	201
76246-86	201
76247-86	201
76248-86	297
76248-86	301
76249-86	297
76249-86	301
76250-86A	297
76250-86A	301
76252-86	297
76252-86	301
76253-86	297
76253-86	301
76255-86	297
76255-86	301
76258-86	301
76260-89	301
7626W	203
7626W	325
7627	143
7627	145
76274-88	301
76277-88	301
76280-88	301
76281-88	301
76282-88	301
76283-88	301
76283-89	301
76284-89	163
76290-89	179
76292-89	289
76294-89	303
76295-89	301
76295-89	303
76296-89	301
76297-89	303
76298-89	301
76299-89	359
76303-89	179
76304-89	179
76307-89	179
7634	23
7634	53
7638	45
7638	53
7638	221
7638	225
7638	237
7638	239
7638	243
7638	263
7638	271
7638	305
7638	311
7638	315
7638	317
7638	331
7638	347
7643W	231
7643W	323
7651	207
7652	337
7652	339
7653	197
7654W	207
7654W	333
7667	145
7667	231

PART NO.	PAGE
7667	279
7667	305
7669	93
7676	105
7680W	143
7680W	167
7680W	213
7680W	231
7682	89
7682	197
7682	221
7683	53
7683	111
7683	221
7683	327
7686	53
7686	95
7686	155
7686	163
7686	165
7686	191
7686	193
7686	197
7686	199
7686	203
7686	225
7686	229
7686	251
7686	255
7686	297
7686	299
7686	311
7686	321
7686	361
7688	51
7688	59
7688	115
7688	229
7688	311
7688	333
7688	339
7688	357
7689W	107
7689W	159
7689W	191
7689W	221
7689W	229
7689W	261
77004-80	201
77004-80	297
77004-80	301
77008-86A	297
77025-86	297
77026-89	299
77028-86	297
77029-86	297
77029-86	301
77029-86	359
77032-89	359
77035-86	297
77036-86	201
77042-86	201
77043-86	201
77060-86	201
77070-88A	201
77071-88A	201
77092-89	303
77093-89	303
77100-89A	303
77101-89	191
77101-90A	191
77106-89	191
77109-89	191
77111-89	191
77112-89	191
77113-89	191
77135-89	191
7716	211
7716	211
7725	105
7725	151
7725	155
7725	193
7725	245
7725	341
7727	341
7729	255
7729	343
7734W	337
7736	69
7736	159
7736	283
7737W	63
7737W	327
7739	7
7739	95
7739	101
7739	185
7739	203
7739	237
7739	239
7739	241
7739	299
7739	321
7739	325
7739	357
7740	107
7740	115
7741	181
7742	111
7742	173
7742	191
7742	255
7742	311
7743	239
7743	243
7743	319
7744	45
7744	69
7744	107
7744	111
7744	207
7744	271
7744	275
7748W	115
7748W	127
7748W	129
7748W	135
7748W	137
7748W	139
7748W	151
7748W	155
7748W	191
7748W	251
7748W	257
7748W	283
7748W	333
77500-89	191
77503-89	191
77508-89	191
7752	321
7753	19
7753	51
7753	53
7753	69
7753	151
7753	159
7753	173
7753	225
7753	255
7753	257
7753	327
7753	333
7763W	271
7768W	185
7775	7
7775	147
7775	151
7775	193
7775	231
7775	333
7775	337
7776W	7
7776W	119
7776W	169
7776W	321
7776W	327
7778	7
7778	91
7778	123
7778	159
7778	169
7778	217
7778	325
7778	337
7778	341
7780	19
7780	333
7780	353
7782	19
7782	159
7782	257
7783	19
7783	111
7783	115
7783	131
7783	159
7783	341
7783	347
7800W	7
7800W	213
7800W	279
7813	101
7823	347
7823	355
7824	151
7824	155
7824	181
7825	115
7837W	151
7844	185
7845	101
7845	169
7845	341
7848W	81
7848W	85
7855W	107
7855W	111
7855W	333
7880	169
7880	213
7986	119
7986	123
7987	123
7993	343
7994	101
8098	283
8099	155
8099	179
8099	251
8099	325
8099	361
8101	251
8101	255
8102	225
8107	193
8107	269
8108	115
8108	139
8108	159
8108	243
8108	245

PART NO.	PAGE
812	53
8125	283
8126	221
8128	299
813	155
8131W	221
8131W	347
8135B	225
8151	203
8155	151
8155	271
8307	151
8316	357
83162-51	27
83162-51	55
8325	191
8469	105
8476	361
8483	189
8483	203
8483	225
8483	229
8483	313
8483	317
84850-67	177
84850-67	195
84850-67	319
84850-67	321
8498	303
8498	311
8498	313
8500	175
8502	175
8505	221
8519	45
8519	213
8519	221
8519	311
8519	313
852	13
8533	321
853A	185
853A	265
854	129
854	213
855A	99
855A	337
856A	69
856A	147
856A	151
857	73
857A	91
8625	45
864	45
8672	271
8672	275
8672	279
8672	311
8672	315
8672	317
8672	327
867A	185
868	167
8687	203
8687	317
8688	175
8688	333
8692	193
8692	225
8696	333
8696	357
8699	23
8699	53
87002-83	345
87006-85	333
87007-85	341
87008-85	341
87008-88	341
87010-85	341
87011-85	341
87013-85	341
87014-85	333
87015-85	341
87018-85	341
87019-85	341
87020-85	341
87022-85	341
87022-88	341
87023-85	341
87023-88	341
87024-85	341
87025-85A	341
87027-85	349
87029-85	345
87030-85	333
87032-85	345
87038-85	345
87039-85	345
87040-85	345
87041-85	345
87042-85	345
87043-85	345
87048-88	341
87053-79	333
87055-79	333
87056-83B	333
87056-83B	337
87057-79	333
87058-79	333
87068-87	333
87071-89	345
87073-79	345
87075-87	333
87078-87	333
87079-87	333
87113-83	337
87113-83	345
87114-83	337
87117-36	333
87120-79	335
87120-79	353
87121-79	353
87122-83	337
87123-83	337
87131-83B	337
87132-83B	337
87137-83	337
87140-83	337
87141-83	337
87142-83	337
87144-83	337
87148-83	337
87156-83	337
87157-83	333
87157-87	333
87159-83	335
87160-83	333
87160-83	337
87166-83C	337
872	169
87435-83	335
87435-83	355
87444-33	335
87444-33	355
87672-76	345
87700-79	355
87701-79	335
87705-79	355
87706-79	355
87706-83	345
87710-83	355
87711-83	355
87712-83	355
87713-83	345
87714-83	345
87752-58A	345
87752-89	345
87776-83	337
87776-83	345
87778-64A	345
87901-83A	349
88100-24A	335
88172-25	335
88174-37	335
88261-36	335
88264-36	335
883	339
88300-79	335
88301-79	335
88301-79	353
88302-79	335
88302-79	353
88314-37	335
88314-37	353
88403-89	359
88404-89	359
88425-67	335
88481-67	333
88483-89	357
88484-89	357
88487-67	333
88489-89A	357
88490-88A	357
88493-67	333
88494-89	357
88495-89	357
88496-89	357
88497-89	357
88500-89	357
88501-89	357
88506-89	357
88528-67	333
88530-89A	357
88540-89	357
88541-89	357
88542-89	357
88543-89	357
88544-89	357
88545-89	357
88546-89	357
8860	173
88694-67	335
88695-67	335
88698-67	335
8873	29
8873	73
8876A	79
8877	63
8879	63
8882	63
88862-67	335
88865-89	357
88883-67	335
88885-67	335
88895-67	335
8904	79
8977	73
8996	73
8998	73
9028	19
90346-90	325
90350-89	323
90351-89	323
90357-89	323
90358-89	47
90359-89	323
90360-89	323
90361-90	325
90480-85	341
90488-83	227
90488-83	321
90492-85B	321

NUMERICAL INDEX

PART NO.	PAGE
90493-83	157
90493-83	205
90493-83	321
90499-83B	321
9052	101
9052	123
9052	355
9058	23
90594-85	327
9062	57
9063	57
9063	233
90633-82A	319
90640-86	325
90644-86	325
90649-85	177
90649-85	319
90655-83	321
90657-84	321
90658-84	321
90663-85	177
90663-85	319
90685-83	321
90688-85	177
90688-85	319
90689-84	177
90689-84	319
90689-84	321
90699-83	321
907	243
90702-89	323
90703-89	323
90718-79	327
90720-79	327
90743-88	177
90745-79A	319
90747-79	319
9076	159
90763-79	301
90764-83	327
9077	63
90770-79	89
90771-79	295
90781-85	327
90785-86	325
90785-90	325
90787-86	325
90787-90	325
90789-83	319
90790-83	319
90791-83	319
90797-80	319
90801-83	327
90820-74A	319
90820-74A	321
90820-74A	325
90821-74A	177
90835-90	325
90844-80	179
90844-80	241
90844-80	325
90844-80	325
909	311
90940-79	327
90941-79	327
90964-63	177
90964-63	319
90965-63	177
90965-63	319
90967-64	177
90967-64	319
90971-79	175
90989-63	325
910	63
91013-79	227
91023-79	227
91085-83B	223
91086-90	223
91089-58	97
91090-77A	223
9110	19
91107-77	223
91123-77	227
9120	19
9121	19
9122	19
9123	19
9124	19
9125	19
9126	19
9127	19
9128	19
9129	19
9130	19
9131	19
9132	19
9133	19
9134	19
9135	233
9139	145
9140	145
9141	145
91583-86	163
917	63
91721-82	201
91768-85	167
91808-89	195
91808-89	201
91812-89	195
91812-89	201
91836-82	321
91849-85A	209
91850-87	167
91851-88	319
91852-88	319
91875-82	285
91875-88	285
91892-82	285
91892-88	285
919	165
91902-86	285
91902-88	285
91904-86	285
91904-88	285
920	169
92061-83	265
92061-83	267
92061-83	269
92068-83	269
92070-86	267
92077-83	269
92079-88	265
92080-88	265
922	199
922	203
922	211
922	211
922	299
923	95
923	139
923	233
923	243
923	267
924	233
924	245
924	299
932	209
933	53
933	193
933	203
933	357
94436-82A	329
94443-82	329
94445-82	329
94447-82	329
94452-85	329
94453-85	329
94515-68A	329
95578-41	103
95578-41	125
95581-47	103
95581-47	125
95582-47	103
95582-47	125
95594-84	103
95594-84	125
95594-84	355
95595-84	103
95595-84	125
96210-80	21
9851A	115
9851A	169
9856	175
9856	243
9856	291
9857	53
9857	149
9857	197
9857	213
9857	243
9857	265
9857	267
9857	283
9857	291
9858	291
9859	203
9859	291
9860	53
9860	291
9861	291
9862	51
9862	291
9863	291
9864	291
9865	291
9866	291
9868	291
9869	291
9871	175
9871	291
9875	291
9875	307
9879	291
9881	53
9885	53
9890	361
9892	291
9893	361
9894	243
9898	203
9898	291
9898	307
9900	53
9900	217
9900	291
99000-77	167
99013-82	165
9903	291
9904	291
9905	291
9907	217
9907	291
9908	53
9914	147
9928	291
9930	203
9930	291
9937	291
9938	291
9945	291
9946	147
9952	203

NUMERICAL INDEX

PART NO.	PAGE
9952	213
9952	271
9952	275
9952	279
9952	311
9952	313
9952	315
9952	317
9955	255
9955	257
9959	151
9959	251
9969	251
9988	189
9988	241
9988	361
9990W	53
9990W	89
9990W	111
9991A	31
9996	237