Removal

1. See Figure 12. Lift locking tab up.
2. Turn locking tab 1/4 turn counterclockwise until it clicks.
3. Pull up on locking tab to remove fuel filler cap.

Installation

1. Position fuel filler cap on fuel tank with locking tab up.
2. Turn locking tab 1/4 turn clockwise. Push locking tab down.

REAR SHOCK ABSORBER

See Figure 13. The actions of the rear suspension are controlled by a single rear shock absorber with an external, coil-over spring. The rear shock absorber is located under the seat and is not adjustable.

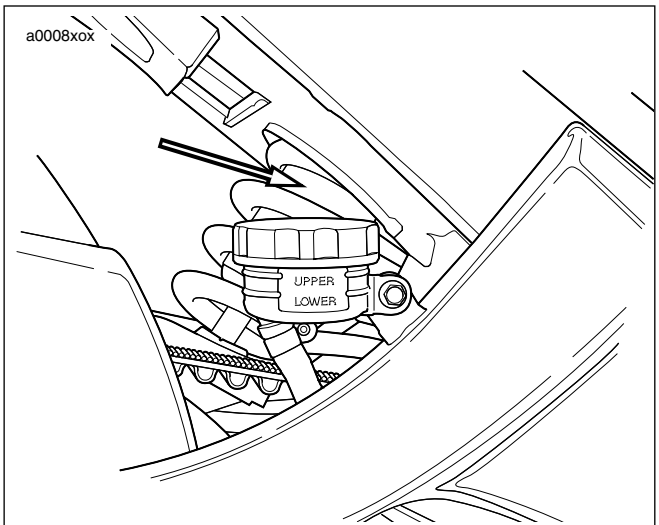


Figure 13. Rear Shock Absorber

FOOTPEGS

Two sets of footpegs (rider and passenger) are standard on the motorcycle. The rider footpegs are fixed in the extended position. The passenger footpegs are retractable and should be in the retracted position when not in use.

NOTES