INSTRUCTIONS



J02063

2007-09-11

TAIL LAMP CHROME COLLAR KIT

GENERAL

Kit Number

68311-01, 68332-08

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley -davidson.com (English only).

Kit Contents

See Figure 1 and Table 1.

INSTALLATION

- Remove and discard the two screws fastening the tail lamp lens to the base.
- 2. Fasten the tail lamp chrome collar over the tail lamp lens using two new screws (2). Tighten the screws to 2.2–2.5 N·m (20–24 **in-lbs**).

A WARNING

Be sure that all lights and switches operate properly before operating motorcycle. Low visibility of rider can result in death or serious injury. (00316a)

3. Test the tail lamp and turn signals for proper operation.

SERVICE PARTS

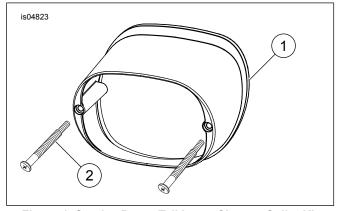


Figure 1. Service Parts: Tail Lamp Chrome Collar Kit

Table 1. Service Parts Table

Item	Description (Quantity)	Part Number
1		Not Sold Separately
2	Screw, pan head (2)	68312-01