

INSTRUCTIONS

J03474



PASSENGER BACKREST PAD KIT

GENERAL

Kit Number

51587-05. 51687-06 and 51983-08

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley -davidson.com (English only).

Additional Parts Required

The Passenger Backrest Kit requires the separate purchase of One-Piece Passenger Upright Kit 53618-05, which is available from a Harley-Davidson dealer.

Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Backrest pad	Not Sold
	Separately
Screw, button head 1/4-20 x 3/4 in.	923
(chrome) (2)	
Mounting bracket	51596-05


INSTALLATION

- Install the Detachable Passenger Upright Kit following the instructions in that kit.
- See Figure 1. Position the backrest pad (1) against the passenger upright (2) lining up the holes.

NOTE

To avoid misalignment and cross threading, start both screws into the backrest before fully tightening either of them.

Fasten the pad to the passenger upright using the mounting bracket (3) and screws (4). Torque screws to 30 in-lbs (3.4 Nm).

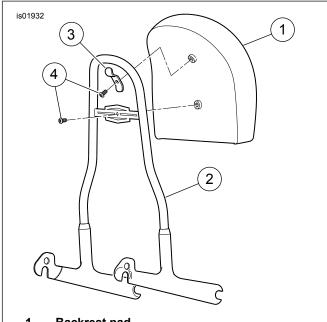

- **Backrest pad** 1.
- 2. Passenger upright (sold separately)
- 3. Mounting bracket
- Screw (2)

Figure 1. Passenger Backrest