



INSTRUCTIONS

J01041

2013-11-01



CHROME FOOTPEG HARDWARE KIT

GENERAL

Kit Number

94139-01

Models

This kit is designed to fit all male mount style footpegs.

Kit Contents

See Figure 1 and Table 1.

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Screw, hex head, chrome	Not sold
2	Lock nut	94030-92T
Items mentioned, but not included in kit		
A	Foot rest supports	
B	Spring washer	
C	Footpeg	

INSTALLATION

NOTE

A Service Manual for your motorcycle is available at your Harley-Davidson Dealer.

NOTE

The screws supplied in this kit are designed for a onetime installation only. If this kit is removed after initial installation, you must re-apply Loctite 243 (Blue) to the threads of the screws. Failure to re-apply Loctite to screw threads when re-installing footpegs may cause footpegs to come loose or fall off leading to loss of control of vehicle resulting in death or serious injury.

NOTE

The spring washer, Part No. 50912-72, should be saved and reused. If the spring washer is missing or damaged, it should be replaced. A new washer is available from your Harley-Davidson dealer.

1. Remove existing nut, spring washer, and screw securing footpeg to passenger footrest support. Discard nut and screw.
2. See Figure 1. Install screw through passenger footrest support, spring washer, and footpeg. Verify that the spring washer is positioned inside the footpeg support with the square edge towards the inside of the support.
3. Install nut to screw. Tighten hardware to 10-16 ft-lbs. (13.5-21.6 Nm).
4. Repeat steps 1 through 3 for the opposite side.

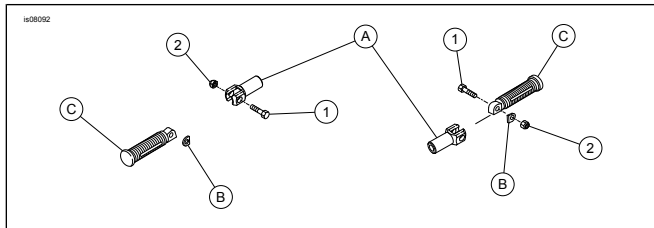


Figure 1. Service Parts