



# INSTRUCTIONS

J02854

2007-05-10



## CHROME FORK SLIDERS

### GENERAL

#### Kit Number

46562-04A, 46487-08

#### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required

Harley-Davidson TYPE E FORK OIL (99884-80) will be required.

Loctite® 243 Threadlocker and Sealant - Blue (99642-07)

Loctite® Anti-Seize Lubricant (98960-97)

#### ▲ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

#### NOTE

*This instruction sheet references Service Manual information. A Service Manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.*

#### Tools Required

- Air impact wrench
- Torque wrench
- Fork spring compression tool
- Damper tube extension tool
- Fork Tube Holder HD-41177
- Front Fork Oil Level Gauge HD-59000-A
- Fork Seal and Bushing Tool HD-36583

#### Kit Contents

See Figure 2 and Table 1.

### INSTALLATION

The chrome fork sliders included in this kit install in the same manner as the original equipment parts. Refer to the Service Manual for proper installation procedures.

Pay close attention to all warnings, cautions, and torque specifications when installing these fork sliders.

#### NOTE

*Prior to installation of this kit, check the bores of the new chrome sliders to be certain they are free of dirt and debris or damage to the new sliders may occur.*

1. Support the motorcycle so the front end is off the floor and the forks are fully extended.
2. Remove the front fender, front brake caliper(s), and front wheel according to instructions found in the Chassis section of the appropriate Service Manual. Drain and remove the front forks. See the Chassis Section of the Service Manual.

#### NOTE

*On some models other parts will also need to be removed to access the front forks. See the Service Manual.*

#### ▲ WARNING

**Wear safety glasses or goggles when servicing fork assembly. Do not remove slider tube caps without relieving spring preload or caps and springs can fly out, which could result in death or serious injury. (00297a)**

3. Disassemble the front fork tubes according to instructions in the Service Manual, and replace the original fork sliders with the chrome sliders (see Figure 2, items 1 and 2) from the kit.
4. Assemble the front fork tubes, replacing worn seals, bushings or other additional items as needed. Two **new** slider oil seals (5) are included in the kit.
5. Fill with TYPE E FORK OIL (Harley-Davidson part number 99884-80) according to the instructions found in the Service Manual.
6. Install the front fork and any parts that were removed to access the front forks. Install the front fender, wheel, and caliper according to the instructions found in the CHASSIS section of the Service Manual.

#### NOTE

*The original equipment front fork reflectors located on both sliders will be removed, cleaned and installed on the new chrome sliders.*

*Ambient temperature should be **at least** 60° F (16° C) for proper adhesion of the reflectors to the sliders.*



**▲ WARNING**

**Federal Motor Vehicle Safety Standard (FMVSS) 108 requires motorcycles to be equipped with rear and side reflectors. Be sure rear and side reflectors are properly mounted. Poor visibility of rider to other motorists can result in death or serious injury. (00336b)**

7. Using a piece of dental floss (or similar material) in a back and forth motion, loosen the reflector ( Figure 2, A) from the fork slider at both ends. Rotate the reflector from side to side until it can be removed from the fork slider. Retain the reflector for installation to the **new** slider. Repeat the procedure on the opposite side fork slider.
8. Remove any excess adhesive from both reflectors. Surface must be clean for reinstallation.

**NOTE**

*The bottom edge of the reflector should be two inches (50 mm) above the center of the axle shaft.*



**Figure 1. Reflector Placement**

9. Peel the liner from one side of the foam double-sided tape. Position the tape to the back of the reflector, and press firmly into place. Peel the remaining liner from the tape. Place the reflector in position on the fork slider as shown in Figure 1, and press firmly into place. Repeat the procedure on the opposite side fork slider.

**NOTE**

*Allow AT LEAST 24 hours after applying the reflectors before exposing the area to vigorous washing, strong water spray or extreme weather.*


**▲ WARNING**

**Whenever a wheel is installed and before moving the motorcycle, pump brakes to build brake system pressure. Insufficient pressure can adversely affect brake performance, which could result in death or serious injury. (00284a)**

10. Pump the brakes prior to test riding the motorcycle.
11. Test ride the vehicle to ensure proper fork travel and rebound.

# SERVICE PARTS

is02778

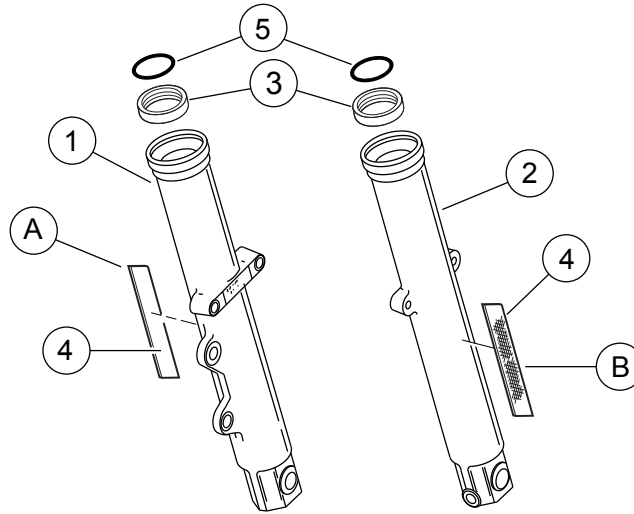

**Figure 2. Service Parts: Chrome Fork Sliders**

**Table 1. Service Parts: Chrome Fork Sliders**

Item	Description (Quantity)	Part Number
Kit 46562-04A	Chrome Fork Sliders	Includes items 1-5 below
1	Fork slider, left side, (chrome)	46563-04
2	Fork slider, right side (chrome)	46564-04
3	Drain screw with washer	45815-03
4	Tape, double sided foam (2)	53791-06
5	Oil Seals (2)	45378-87
Kit 46487-08	Chrome Fork Sliders	Includes items 1-5 below
1	Fork slider, left side, (chrome)	46563-04
2	Fork slider, right side (chrome)	46489-08
3	Drain screw with washer	45815-03
4	Tape, double sided foam (2)	53791-06
5	Oil seal (2)	45378-87
<b>Items mentioned in text, but not included in kit:</b>		
A	Reflector, left	59482-00
B	Reflector, right	59481-00