



INSTRUCTIONS

J02860

2011-10-28



BILLET CLUTCH CABLE CLAMP KIT

GENERAL

Kit Number

91249-04, 10800035

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-Davidson.com.

Additional Parts Required

In addition to the kit components, LOCTITE® Threadlocker and Sealant 243, (blue) (Harley-Davidson Part Number 99642-97) is required to install this kit. LOCTITE can be purchased at a Harley-Davidson dealer.

NOTE

A Service Manual for your model motorcycle is available from a Harley-Davidson Dealer.

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

1. See Figure 2. Apply LOCTITE 243 (blue) to the screw (1).
2. See Figure 1. Position the two halves of the cable bracket (1) on the frame tube (2) and cable (3) as shown. Mount the bracket between the clutch-cable boot and the bottom of the frame. Position the clamp so the cable is to the outside of the frame down tube.

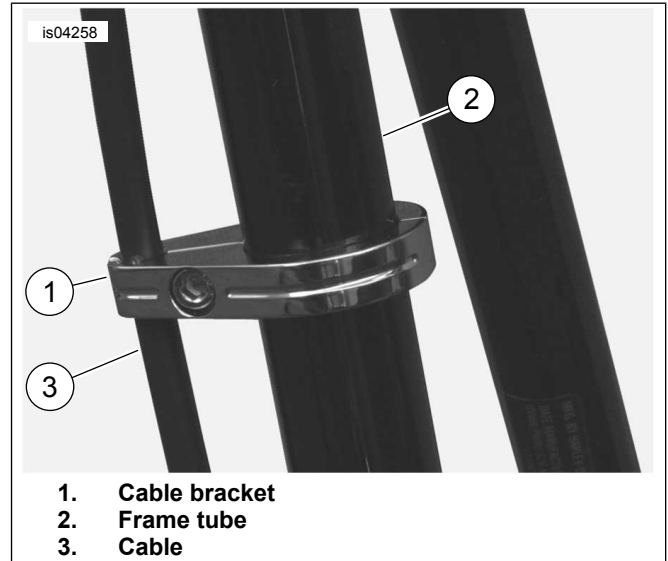


Figure 1. Bracket Installed

3. Verify that the fender will not strike the bracket when the front forks are fully compressed.
4. Tighten the fastener to 0.9–1.1 N·m (8–10 in-lbs).

SERVICE PARTS

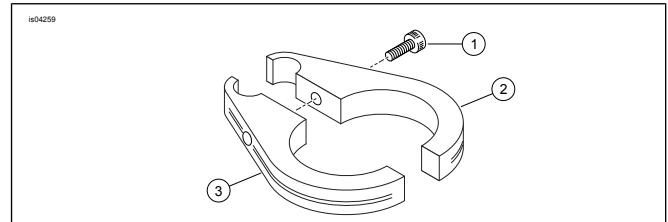


Figure 2. Service Parts: Billet Cable-Bracket Kit

Table 1. Service Parts Table

Item	Description (Quantity)	Part Number
1	Capscrew, sockethead	94311-91T
2	Bottom cable clamp	Not Sold Separately
3	Top cable clamp	Not Sold Separately