



INSTRUCTIONS

J02907

2013-09-16



POLYURETHANE HANDLEBAR RISER BUSHING KIT

GENERAL

Kit Numbers

56165-03, 56298-03A

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Installation Requirements

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet refers to service manual information. A service manual for this year/model motorcycle is required for this installation. One is available from a Harley-Davidson dealer.

Kit Contents

See Figure 1 and Table 1.

There are no service parts available for this kit.

INSTALLATION

NOTE

Cover painted parts to protect finish.

1. See Figure 1. **2013 and Earlier Touring Models:2014 and Later Touring Models:ALL Other Models:**
 - a. See the service manual to remove the fairing.
 - b. Remove and **retain** the two cap screws (C) beneath the upper fork bracket that hold the existing lower handlebar risers (B) in place.

- c. Move the handlebar assembly (A) from the installed position. Carefully allow gauges and handlebar to rest on vehicle.
- d. Remove and discard cup washers (D), rubber bushings (E) and spacers (F).
- a. See the service manual to remove the fairing.
- b. Remove and **discard** the two cap screws (C) beneath the upper fork bracket that hold the existing lower handlebar risers (B) in place.
- c. Move the handlebar assembly (A) from the installed position. Carefully allow gauges and handlebar to rest on vehicle.
- d. Remove and discard cup washers (D), rubber bushings (E) and spacers (F).
- a. Remove and **retain** the two cap screws (C) beneath the upper fork bracket that hold the existing lower handlebar risers (B) in place.
- b. Move the handlebar assembly (A) from the installed position. Carefully allow gauges and handlebar to rest on vehicle.
- c. Remove and discard cup washers (D), rubber bushings (E) and spacers (F).

NOTE

*The **new** upper and lower bushings must be oriented with the larger diameter ends opposite each other as shown.*

2. Install the new polyurethane riser bushings (1) in place of the removed cup washers, bushings and spacers.
3. Align components as shown in Figure 1.
4. **2014 and Later Touring Models:** Secure components with two **new** hex head cap screws (2). Insert the cap screws, from the bottom, through the upper fork bracket, through the bushings (1) and into the handlebar risers. See the service manual for torque specification. **ALL Other Models:** Secure components with two hex head cap screws (C) removed in Step 1. Insert the cap screws, from the bottom, through the upper fork bracket, through the bushings (1) and into the handlebar risers. See the service manual for torque specification.
5. See the service manual to install the handlebars.
6. **Touring Models:** Install the fairing per the service manual.

SERVICE PARTS

is04261a

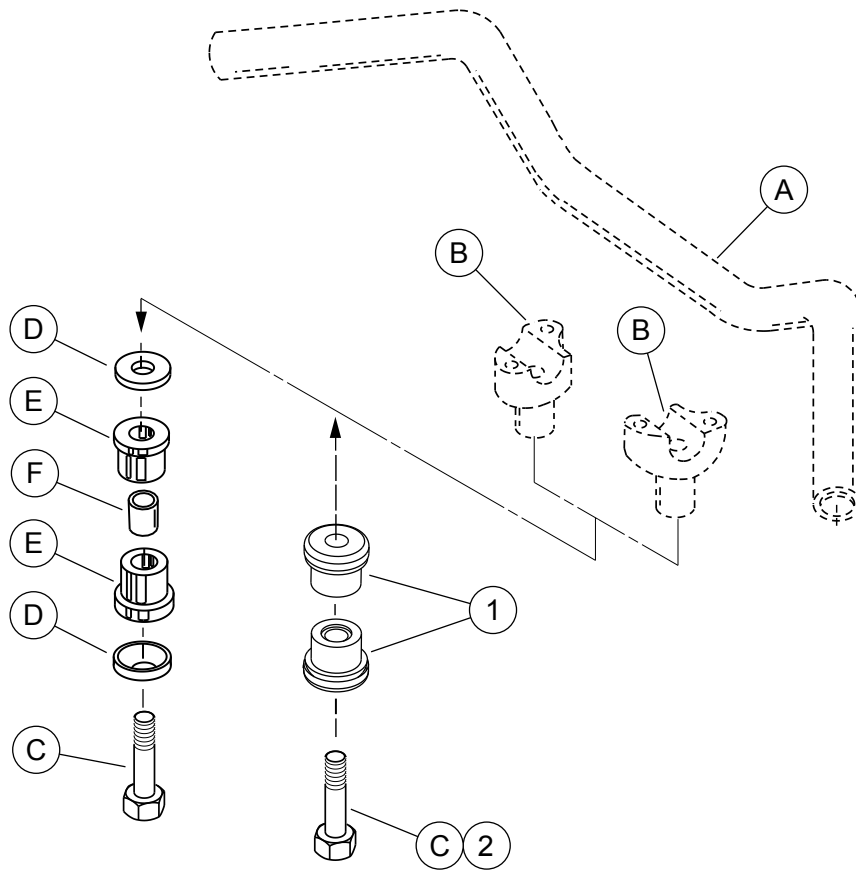


Figure 1. Service Parts: Handlebar Polyurethane Riser Bushing Kit

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Polyurethane riser bushing (4)	Not sold separately
2	Screw (2)	12600119
Items mentioned in text, but not included in kit:		
A	Handlebar	
B	Lower handlebar riser (2)	
C	Upper fork bracket screw (2)	
D	Cup washer (4)	
E	Rubber bushing (4)	
F	Spacer (2)	