



INSTRUCTIONS

J03557

2006-09-22



CHROME FRONT FENDER HARDWARE KIT

GENERAL

Kit Number

94415-05

Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Does not fit models with Billet Fork Slider Kit or Inverted Fork Kit.

Additional Parts Required

Loctite[®] 243 (Blue) Threadlocker and Sealant (H-D Part Number 99642-97) is required for the proper installation of this kit.

Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Screw, socket head (chrome) (4)	94337-91TS

INSTALLATION

NOTE

Remove and replace **one** screw before removing the next.

- FL models:** Remove **one** front fender attaching screw and hex flanged locknut. Discard only the screw. **FX models:** Remove **one** front fender attaching screw, acorn nut and two flat washers. Discard only the screw.
- Apply a drop of Loctite[®] 243 (blue) to the threads of a **new** chrome screw from the kit. Install the screw with the saved hardware from Step 1. Tighten to 20.3–28.5 N·m (15–21 ft-lbs).
- Repeat for the remaining three screws.

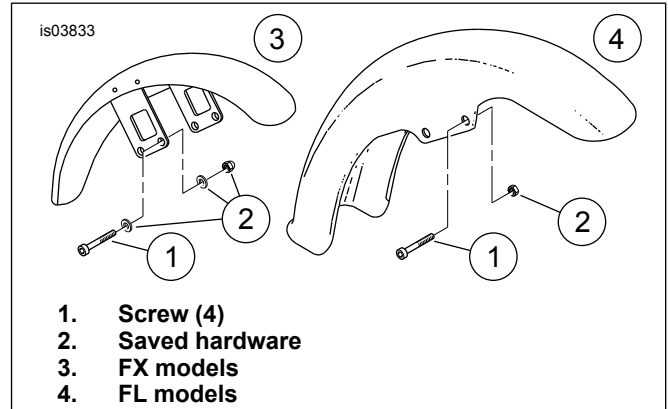


Figure 1. Front Fender Mounting Hardware