



INSTRUCTIONS

J01684

2013-11-01



BAR & SHIELD WINDSHIELD MOULDING

GENERAL

Kit Number

59133-99

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

Table 1. Kit Contents

Quantity	Description
3	Washers, rubber
3	Washers, stainless
3	Screws, 1/4-20 x .625
1	Trim, windshield

INSTALLATION

1. See Figure 1. Remove the three original equipment (OE) screws in the locations shown.

NOTE

Properly align the trim piece, fairing, windshield and brass insert before starting screws to prevent damage to the brass inserts due to cross-threading.

NOTICE

Over tightening windshield fasteners can crack windshield and/or fairing. (00451b)

2. Install windshield trim (4) with rubber washer (1), stainless washer (2) and screws (3) from the kit in same locations as OE screws as shown. The rubber washers (1) must be between the trim (4) and the fairing as shown. Start the center screw first, then start the two end screws. Center the windshield trim ends with the end of the fairing. Tighten center screw to 8-13 **in-lbs** (0.9-1.4 Nm), then tighten the two end screws to 8-13 **in-lbs** (0.9-1.4 Nm). Do not over tighten screws.

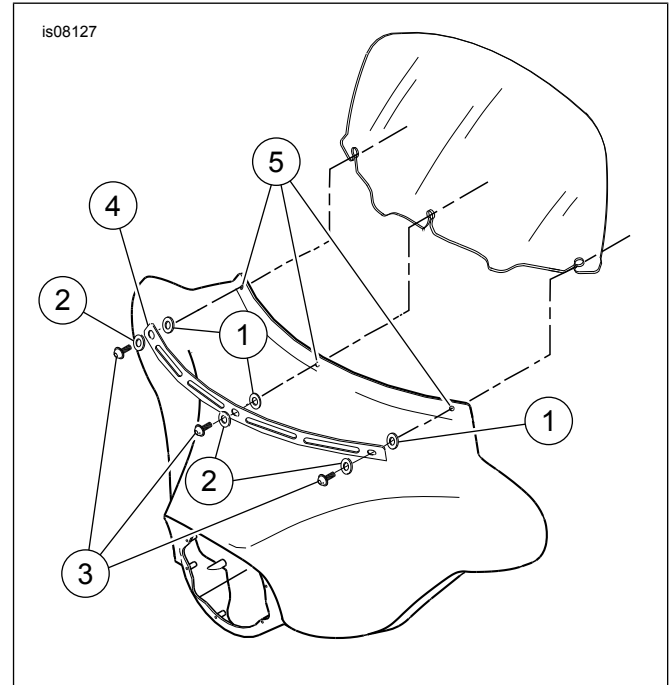


Figure 1. Service Parts

Table 2. Service Parts

Item	Description (Quantity)	Part Number
1	Washer, rubber (3)	57765-99
2	Washer, stainless (3)	6383
3	Screw, 1/4-20 x .625 (3)	94676-99
4	Trim, windshield	Not sold separately
5	Remove OE screws from these locations	

