

# **INSTRUCTIONS**

J03828

	$ \sim $
2006-10-12	

# **RADIO FACEPLATE TRIM**

## GENERAL

#### Kit Number

77142-06

77143-07

#### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of www.harley -davidson.com (English only).

### **Kit Contents**

**Table 1. Kit Contents** 

Description (Quantity)	Part Number
Radio faceplate trim	Not Sold Separately

### INSTALLATION

NOTE


Mounting surface of radio faceplate trim must be above  $60^{\circ}F$  ( $16^{\circ}C$ ), or the trim may not stay attached.

1. Using a 50:50 isopropyl alcohol/water solution, thoroughly clean the surface where the radio faceplate trim will be installed.

#### NOTICE

Do not clean with denatured alcohol, mineral spirits, or other solvent products, or component damage may occur. (00411c)

- 2. Allow the surface to dry completely before continuing to install kit.
- 3. Test the fit of the radio faceplate trim prior to removing adhesive backing.
- 4. Remove the adhesive backing from the back of the radio faceplate trim.
- 5. Open the auxiliary jack cap and feed it through the radio faceplate trim.
- 6. See Figure 1. Position the radio faceplate trim and press firmly into place.
- 7. Let the adhesive cure for at least 24 hours at no less than  $60^{\circ}$ F (16°C).

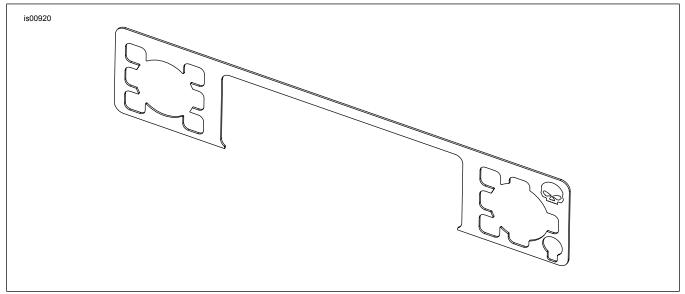

#### Figure 1. Radio Faceplate Trim

1 / 1