



INSTRUCTIONS

J02436

2013-11-01



CLEAR/SMOKED DOMED OR FLAT TURN SIGNAL LENS KITS

GENERAL

Kit Numbers

69305-02, 69306-02, 69307-02, 69308-02

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

NOTE

A Service Manual for your motorcycle is available from your Harley-Davidson Dealer.

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

1. See Figure 1. Remove existing turn signal lenses and discard. Retain lens mounting screws for installation.
2. Remove bulbs from turn signal assemblies.
3. Obtain new amber bulbs from kit. Install bulbs marked **1157A** (Dual Filament) to the front turn signal assemblies. Install bulbs marked **1156** (Single Filament) to the rear turn signal assemblies.

4. See Figure 1. Using screws saved during removal, install the new turn signal lenses to front and rear turn signal assemblies.
5. Check turn signals for proper operation.

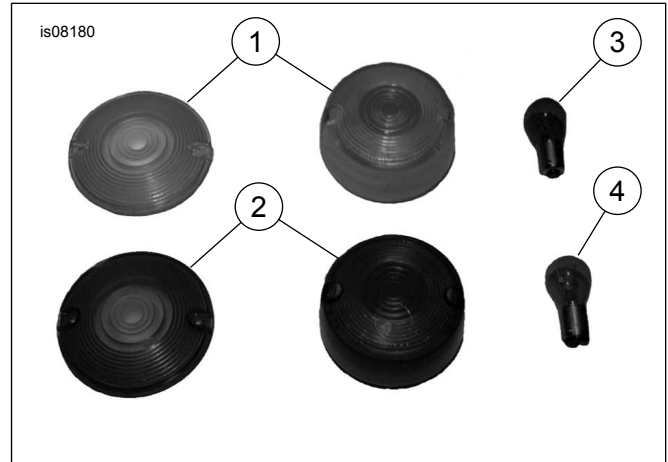


Figure 2. Service Parts

Table 1. Service Parts

Item	Description (Quantity)	Part Number
Kit 69307-02		
1	Clear lens, flat, front and rear (4)	69328-02
Kit 69308-02		
2	Smoked lens, flat, front and rear (4)	69329-02
3	Bulb, amber (front) double filament (2)	69331-02
4	Bulb, amber (rear) single filament (2)	69330-02
Kit 69305-02		
1	Clear lens, domed, front and rear (4)	69326-02
Kit 69306-02		
2	Smoked lens, domed front and rear (4)	69327-02
3	Bulb, amber (front) double filament (2)	69331-02
4	Bulb, amber (rear) single filament (2)	69330-02

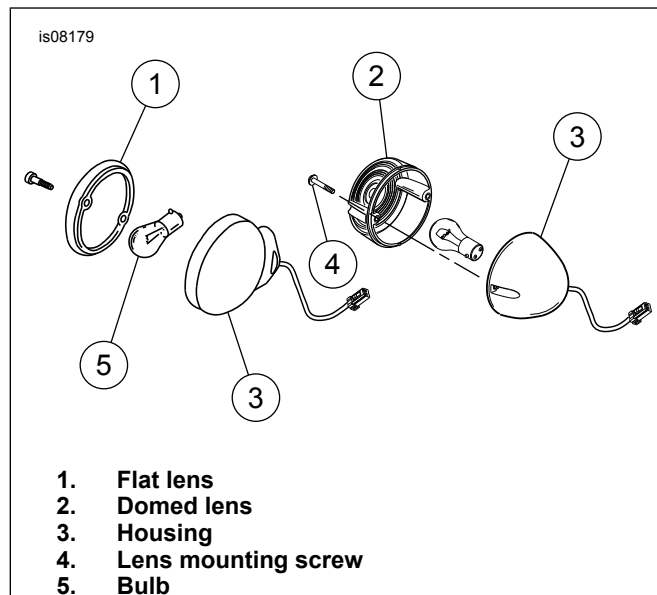


Figure 1. Flat and Domed Lens Turn Signals