



# INSTRUCTIONS

J02732

2011-10-28



## BILLET BRAKE LINE CLIP

### GENERAL

#### Kit Number

91336-03, 91364-03, 91367-03, 91369-03, 10800038 and 10800039

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Additional Parts Required

Loctite® 243 Threadlocker and Sealant - Blue (99642-97) is available from a Harley-Davidson dealer.

#### Kit Contents

See Figure 2 and Table 1.

**Table 1. Kit Contents (91336-03, 91364-03 and 10800039)**

Description (Quantity)	Part Number
Billet brake line clip (1)	Not Sold Separately
Screw, hex socket button #10-24 x 1/2 in. (1)	94381-92T

**Table 2. Kit Contents (91367, 91369-03 and 10800038)**

Description (Quantity)	Part Number
Billet brake line clip (1)	Not Sold Separately
Screw, hex socket button #10-24 x 3/8 in. (1)	8650

### INSTALLATION

#### NOTE


Place clean cloth or towel over front fender before installing this kit.

- See Figure 1. Remove and discard existing top screw (1) and P-clip (2) right side of upper triple tree (3). The screw and P-clip are held in place with a clip nut.
- See Figure 2. Apply Loctite 243 (Blue) to threads of screw (1).
- Install chrome screw (1) and billet brake line clip (2) on right side of upper triple tree (3).
- Tighten screw to 20-22 **in-lbs** (2.3-2.5 Nm).

#### NOTE

On Softail and FXDWG models, the brake line should be offset to the left of the clip mounting hole.

On XL and other Dyna models, the brake line should be offset to the right of the clip mounting hole.

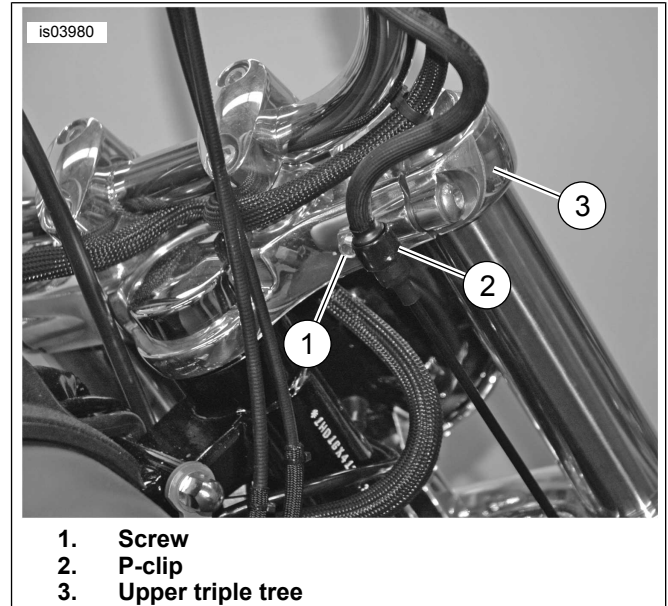

**Figure 1. Existing P-Clip and Screw**



**Figure 2. Billet Brake Line Clip and Screw**

