



INSTRUCTIONS

J02778

2013-11-01



2004-LATER SUPPLEMENT KIT FOR SPORTSTER SADDLEBAG INSTALLATION

GENERAL

Kit Number

91405-04

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

NOTE

You will need to refer to Instruction Sheet J01890 when performing these procedures.

Kit Contents

See Figure 2 and Table 1.

INSTALLATION

1. Perform Steps 1 through 14 as outlined in Instruction Sheet (J01890).
2. See Figure 1. When performing Step 15 in Instruction Sheet (J01890), substitute screw (part number 4287) from this kit for Screw (part number 4288) originally called for in Instructions.
3. Perform Step 15 as described in Instruction Sheet (J01890).
4. Perform Step 17 as described in Instruction Sheet (J01890).
5. See Figure 1. When performing Step 18 in Instruction Sheet (J01890), substitute hex spacer (part number 6258) from this kit in place of the hex spacer (part number 91394-00) originally called for in instructions (J01890).
6. See Figure 1. When performing Step 26 in Instruction Sheet (J01890), install the 3/4 inch spacer (part number 6256) from this kit onto screw after screw is installed through the frame and fender strut.
7. Perform the remaining Steps as described in Instruction Sheet (J01890).



Figure 1. Hardware Substitution When Installing Saddlebag to Sportster with Docking Hardware

Service Parts

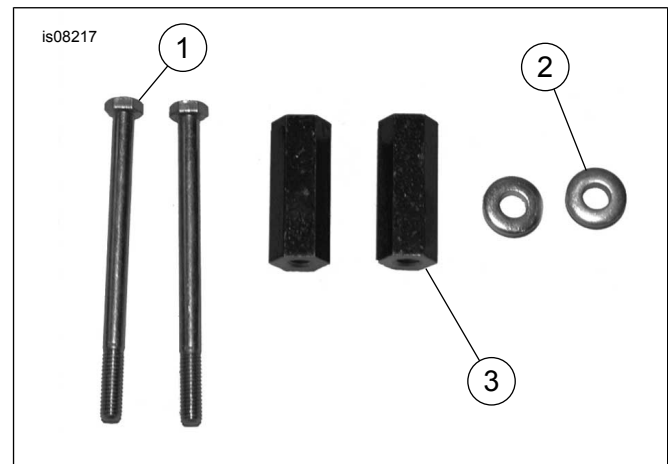


Figure 2. Service Parts

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Screw, Hex Cap (2)	4287
2	Spacer (2)	6256
3	Spacer, hex 2.6 inches (2)	6258