



INSTRUCTIONS

J04534

2008-09-22



FLHTCUTG FENDER TRIM

GENERAL

Kit Number

83812-09

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

Kit Contents

There are no Service Parts available with this kit.

INSTALLATION

NOTE

Do Not install the fender trim at temperatures below 50° F (10° C).

1. Clean the outside fender edge with a 50/50 mix of isopropyl alcohol and water.
2. See Figure 1. Get the left side fender trim (2). It is marked with the word "Left".
3. Position the trim on the fender. Do not remove the adhesive tape backing.
4. Locate the trim in the desired position and hold it in place with masking tape.
5. Apply a small piece of masking tape to the fender to mark the location of the leading tip of the trim.
6. Remove the trim.
7. Remove a section of the adhesive tape backing from the trim starting at the front end tip.
8. Align the leading tip of the trim with the masking tape and press in place.

9. Remove the rest of the adhesive backing in stages. Work around the trim to the trailing tip. Press the trim in place as you follow the arc of the fender.
10. Slide both thumbs along the face of the trim starting at one end and moving to the opposite end while applying firm pressure. Small spring clamps or binder clips may be used to apply continuous pressure while curing.
11. Allow the adhesive to cure overnight before operating the vehicle.
12. Repeat steps 1-11 for the right side trim (1).

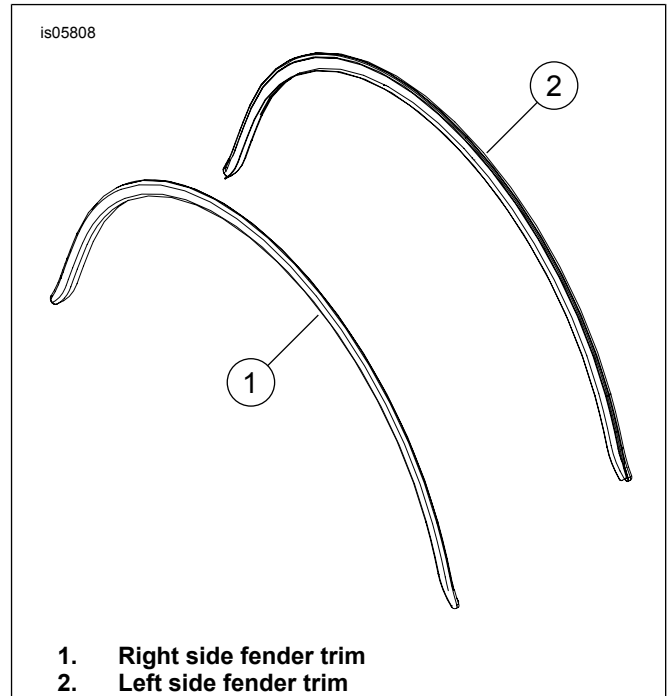


Figure 1. FLHTCUTG FENDER TRIM

