

# **INSTRUCTIONS**

J04724



## SADDLEBAG GUARDRAIL TRIM

## GENERAL

#### **Kit Number**

90251-09, 90255-09

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

## **Additional Parts Required**

#### WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

#### NOTE

This instruction sheet references Service Manual information. A Service Manual for your model motorcycle is required for this installation and is available from a Harley-Davidson Dealer.

## **Kit Contents**

See Figure 1 and Table 1.

## INSTALLATION

- 1. Remove the saddlebags according to Service Manual instructions.
- 2. See Figure 1 and Table 1. Remove the screws fastening the stock upper front guardrail mounts to the guard rail. Discard the stock upper front guardrail mounts.
- 3. Fasten the new front brackets (2, 5) where the stock upper front guardrail mounts were removed in step 2. Tighten the screws to 8.1–13.5 N⋅m (72–120 **in-lbs**).

- 4. Loosely fasten the rear inside brackets (9) to the guardrail rear trim (12) using screws (16), spacers (15), flat washers (10), and keps nuts (11) as shown.
- 5. Remove the inner and outer stock guardrail brackets. Discard the stock inner brackets
- 6. Loosely fasten the guardrail side trim (1, 8) to the front brackets (2, 5).
- 7. Remove the stock screws fastening the stock upper and lower guardrail tabs to the vehicle. Save the screws for installation.

#### NOTE

For steps 8 and 9, see the Service Parts illustration for exact orientation of the rear trim flange relative to the side trim flange, and rear inside bracket orientation relative to the guardrail tabs.

- Position the rear inside brackets (9), with rear trim loosely attached, on the outboard side of the stock upper and lower guardrail tabs. Loosely fasten the rear inside brackets (9) to the guardrail tabs and vehicle using the screws removed in step 7
- 9. Loosely fasten the side and rear trim flanges between the stock outer guardrail bracket and the new inner guardrail brackets (7, 13) using screws (6) and wave washers (3).
- 10. If using **Kit 90255-09**, attach the skull medallions (18) securely with flat head screws (17) to the side trim rail inserts.
- Align all installed components and use the Allen wrench (14) from this kit to tighten the fasteners.
- Tighten screws at the upper and lower guardrail tabs to 20–27 N·m (15–20 ft-lbs).
- Tighten the fasteners from this kit (4, 6, 11) to 3.4–5.6 N·m (30–50 in-lbs).

1/2

12. Install the saddlebags.

## SERVICE PARTS

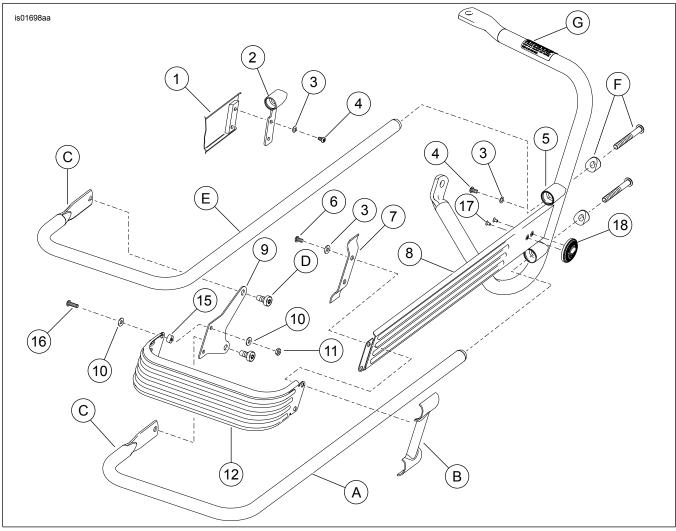


Figure 1. Service Parts: Saddlebag Guardrail Trim

Table 1. Service Parts Table	Table 1. Service Part	s Table
------------------------------	-----------------------	---------

Item	Description (Quantity)	Part Number	Item	Description (Quantity)	Part Number	
1	Guardrail side trim, left-hand	Not Sold Separately	13	Bracket, inner guardrail, left-hand	Not Sold Separately	
				(not shown)		
2	Bracket, front left-hand	Not Sold Separately	14		Not Sold Separately	
3	Wave washer, #10 (8)	6065	15	Spacer, aluminum, 1/2 in. O.D. (4)		
4	Screw, 10-32 x .375 in. (4)	Not Sold Separately	16		Not Sold Separately	
5	Bracket, front right-hand	Not Sold Separately	17		Not Sold Separately	
				(4), kit 90255-09 only		
6	Screw, 10-24 x .50 in. (4)	Not Sold Separately	18		Not Sold Separately	
				only		
7	Bracket, inner guardrail right-hand	Not Sold Separately	Stock	k Items:		
8	Guardrail side trim, right-hand	Not Sold Separately	A	Lower guardrail		
9	Bracket, rear inside (2)	Not Sold Separately	B	Outer guardrail bracket		
10	Flat washer, #10 (8)	6716	С	Guardrail tab		
11	Keps nut, 10-32 (4)	7629	D	Bolt		
	Guardrail rear trim (2)	Not Sold Separately	E	Upper guardrail		
NOTE	<b>NOTE:</b> Items 2 & 5 replace stock upper front guardrail mounts.			Bolt and washer		
			G	Guardrail		