



INSTRUCTIONS

J04668

2012-02-02



TRIKE MUDFLAP KIT

GENERAL

Kit Number

83833-09, 59600019

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

See Figure 4 and Table 1.

INSTALLATION

1. See Figure 1. Center drilling template on the rear fender. Adjust template to the bottom edge of the fender and tape template to fender.

2. Center punch the two template drilling locations.

NOTE

Use caution to prevent damage to the tire when drilling the attachment holes for the mudflaps.

3. Use a 17/64 (.266) inch bit to drill the template holes.
4. See Figure 2. Install the mudflap using one stud, washer and nut in each fastening hole. Tighten to 6.8–13.6 N·m (5–10 ft-lbs).
5. Repeat Steps 1-4 for the opposite fender.

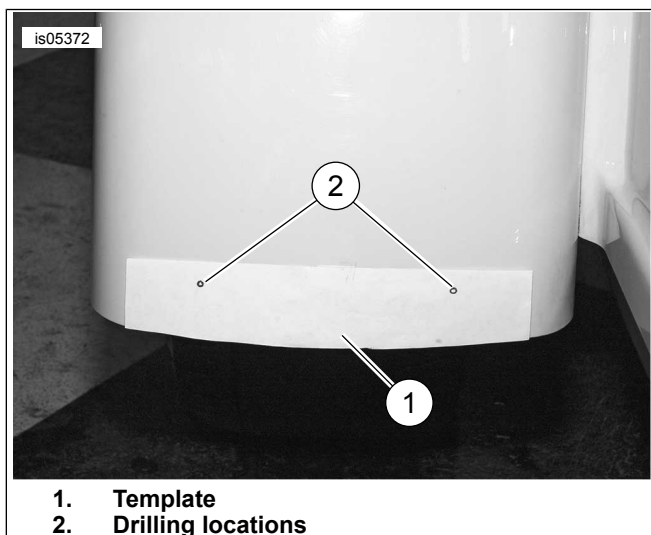


Figure 1. Attaching Template

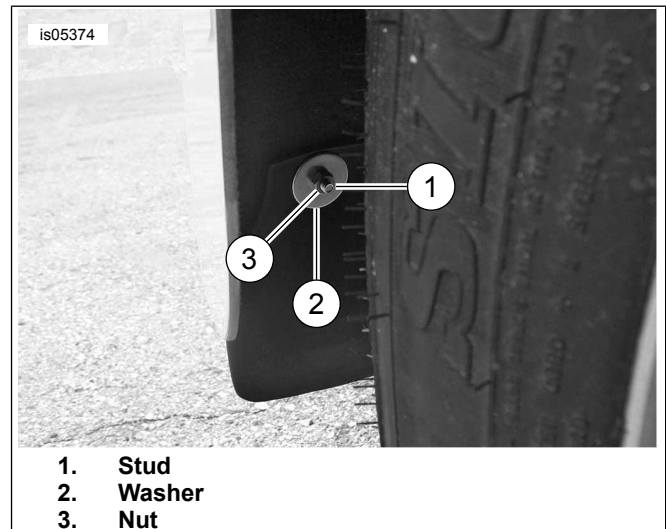


Figure 2. Mudflap Hardware

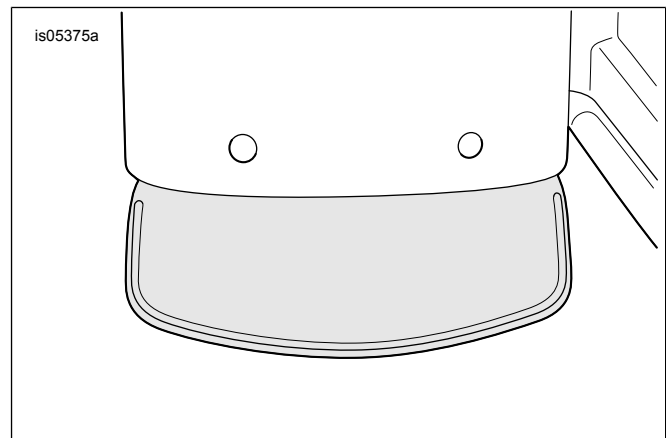


Figure 3. Installed Mudflap

SERVICE PARTS

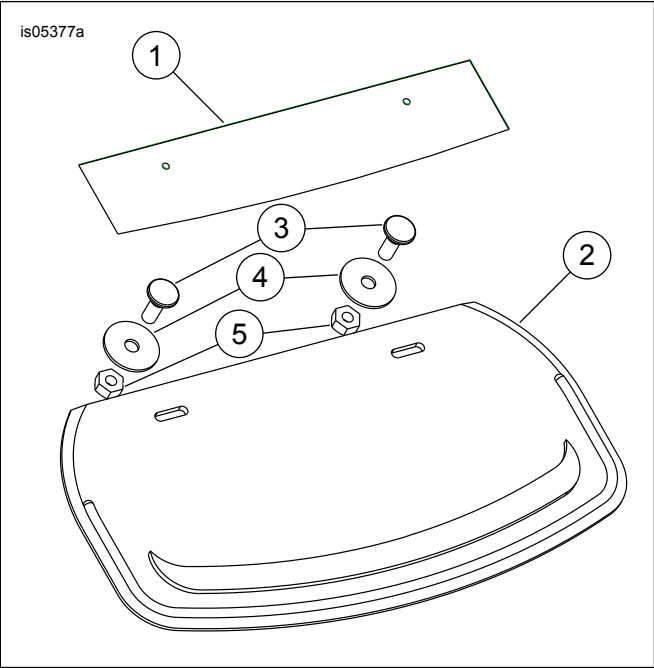


Figure 4. Service Parts: FLHTCUTG Mudflap Kit

Table 1. Service Parts

Item	Description (Quantity)	Part Number
1	Mudflap template	Not Sold Separately
2	Fender mudflap (2)	Not Sold Separately
3	Stud, 1/4-20 (4)	8310
4	Flat washer (4)	6036
5	Hex nut (4)	7688