



INSTRUCTIONS

J05096

2011-05-20



WINDSHIELD KIT

GENERAL

Kit Numbers

57164-10, 57400091, 57400092

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

REMOVAL

1. See Figure 1. Loosen but do not remove three screws (2) (with flat washers) securing the windshield to the fairing (1).
2. Raise and remove the windshield.

INSTALLATION

1. See Figure 1. Place the windshield into position between the inner and outer fairings (1) engaging the slotted holes in the windshield with the threaded bosses on the inner fairing.
2. Tighten three screws (2) to 2.8–3.4 N·m (25–30 in-lbs).

CARE AND CLEANING


NOTICE

Polycarbonate windshields/wind deflectors require proper attention and care to maintain. Failure to maintain polycarbonate properly can result in damage to the windshield/wind deflector. (00483e)

- Do not use benzene, paint thinner, gasoline or any other type of harsh cleaner on the windscreen/windshield. Doing so will damage the surface.
- Do not clean polycarbonate in hot sun or high temperature.
- Powdered, abrasive or alkaline cleanser will damage the windscreen/windshield.
- Sunlight reflections off of the inside curvature of a windscreen/windshield can, at certain times of the day, cause extreme heat build-up on motorcycle instruments. Exercise care in parking. Park facing the sun, place an opaque object over the instruments, or adjust the windscreen/windshield to avoid reflections.
- Do not use benzene, paint thinner, gasoline or any other cleaning agents on the rubber bushings. Doing so will damage the bushing surfaces.

NOTE

Harley-Davidson Windshield Water Repellent Treatment part number 99841-01 is approved for use on Harley-Davidson polycarbonate windshields.

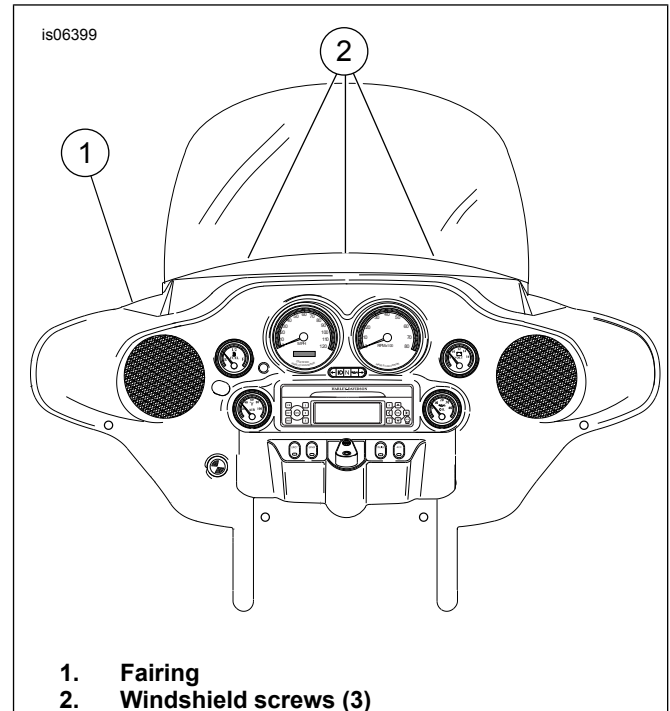

1. Fairing
2. Windshield screws (3)

Figure 1. Windshield Installation

