



INSTRUCTIONS

J05126

2010-01-29



TRI-GLIDE BODY SCUFF KIT

GENERAL

Kit Number

83968-10

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

There are no service parts available with this kit.


INSTALLATION

1. Clean body scuff kit mounting area thoroughly with a solution of equal parts water and isopropyl alcohol. Allow to dry thoroughly.

NOTE


The left and right panels are embossed with "Left" and "Right".

2. See Figure 1. Obtain the right body scuff panel (1). Do not remove the adhesive tape backing from the panel.
3. See Figure 2. Before removing the adhesive tape backing from the panel, test the placement of the panel (1). If the fender scuff panel (2) has been installed, align the body scuff panel with the fender scuff panel.
4. Remove the adhesive tape backing. Carefully adhere the body scuff panel to the body. Press from the inward side to the outward side of the panel to make a firm bond.
5. Repeat for the left side body scuff panel.
6. Allow AT LEAST 24 hours after applying the scuff panels before operating vehicle or exposing the area to vigorous washing, strong water spray or extreme weather.

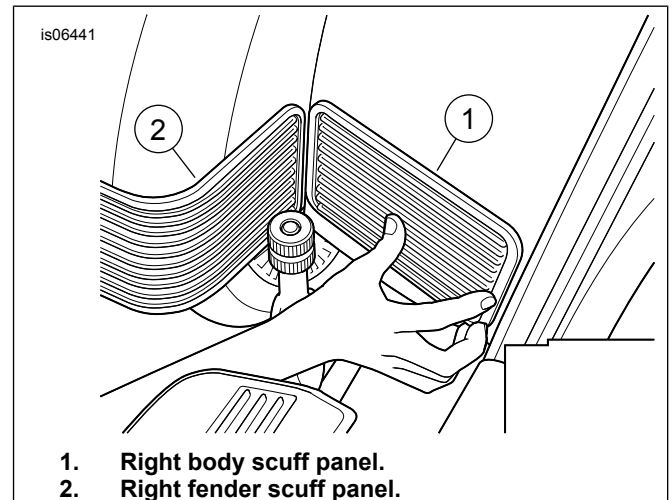

1. Right body scuff panel.
2. Right fender scuff panel.

Figure 2. Body Scuff Panel Positioning

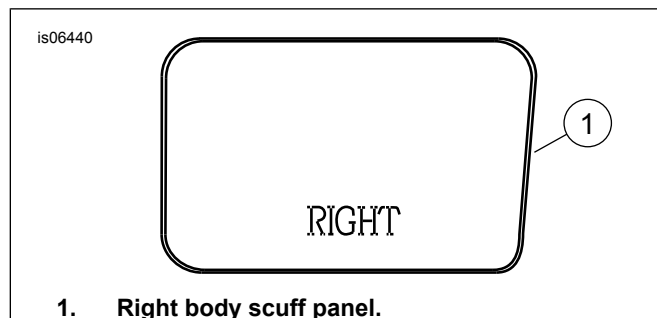

1. Right body scuff panel.

Figure 1. Body Scuff Panels