



# INSTRUCTIONS

J05127

2010-01-29



## TRI-GLIDE FENDER SCUFF KIT

### GENERAL

#### Kit Number

83976-10

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

#### Kit Contents

There are no service parts available with this kit.

### INSTALLATION

1. Clean the fender scuff kit mounting area thoroughly with a solution of equal parts water and isopropyl alcohol. Allow to dry thoroughly.

#### NOTE

The left and right panels are embossed with "Left" and "Right".

2. See Figure 1. Obtain the right fender scuff panel. Do not remove the adhesive tape backing from the panel.
3. See Figure 2. Position the panel (1) approximately 1/4 inch above the leading edge of the fender.
4. See Figure 3. Hold the inner half of the panel (1) in place while removing the adhesive tape backing (2) from the outer half of the panel.
5. Carefully adhere the outer half of the panel to the fender. Press from the inward side to the outward side of the panel to make a firm bond.
6. Remove the adhesive tape backing from the inner half and adhere the inner half to the fender.
7. Repeat for the left side fender scuff panel.
8. Allow AT LEAST 24 hours after applying the scuff panels before operating vehicle or exposing the area to vigorous washing, strong water spray or extreme weather.

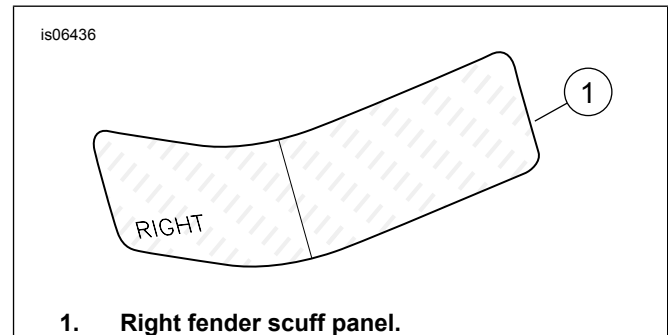


Figure 1. Fender Scuff Panels

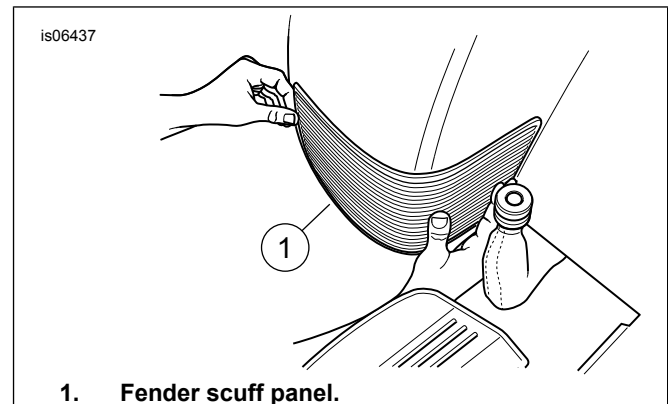


Figure 2. Fender Scuff Panel Positioning

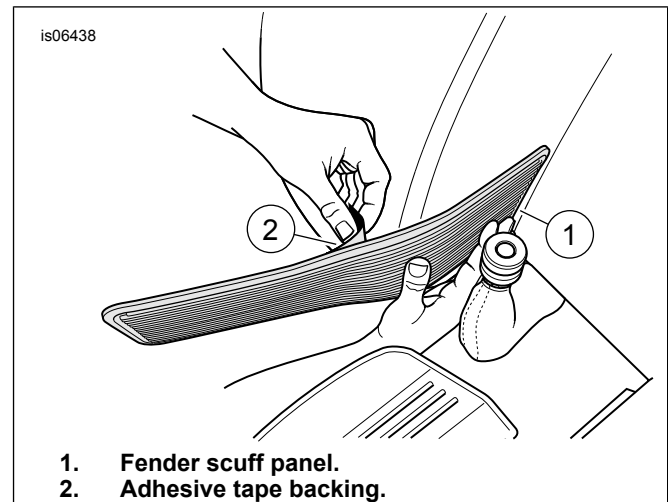


Figure 3. Removing Adhesive Tape Backing

