# **INSTRUCTIONS**

J05328



## FXS WINDSHIELD-MOUNTED SPEAKER BRACKET KIT

#### **GENERAL**

#### Kit Number

76000155

#### Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

### **Additional Parts Required**

Proper installation of this kit requires the separate purchase and installation of a Harley-Davidson windshield kit, Windshield-Mounted Speaker and Amplifier Kit (Part No. 76321-09), Horn Relocation Bracket Kit (Part No. 69015-08) and Electrical Connection Kit (Part No. 72673-11).

Connection to an audio device (MP3 player or similar device, purchased separately) with a 3.5 mm (1/8 in) stereo output (headphone jack or audio line out) is required.

#### NOTE

A Boom! Audio Tank Pouch (Part No. 91003-10) can be used to secure a **solid-state** audio device.

DO NOT secure an MP3 player or similar device with a **hard drive memory** on or to the vehicle.

#### Kit Contents

This kit contains a speaker bracket and two flat washers.

There are no service parts available with this kit.

#### INSTALLATION


This kit is designed to allow the installation of the Windshield-Mounted Speaker and Amplifier Kit (Part No. 76321-09) on Softail FXS model motorcycles. Proper installation requires the following:

- Replace the speaker bracket installed on the speaker pod in the Windshield-Mounted Speaker and Amplifier Kit with the speaker bracket included in **this** kit. Do this before performing any part of the speaker and amplifier kit installation.
- Relocate the horn according the instructions in the Horn Relocation Kit (Part No. 69015-08).
- Install the two flat washers included in this kit when installing the amplifier and amplifier bracket.

Read the instructions below, then follow the Softail installation instructions included in the Windshield-Mounted Speaker and Amplifier Kit (Part No. 76321-09), performing the instructions for **this** kit when necessary.

## **Replace Speaker Bracket**

- See Figure 1. Remove four screws (3) and the installed speaker bracket (2) from the speaker pod (1). Save the screws and discard the speaker bracket.
- 2. Install the speaker bracket from **this** kit and the four screws removed in the previous step to the speaker pod.

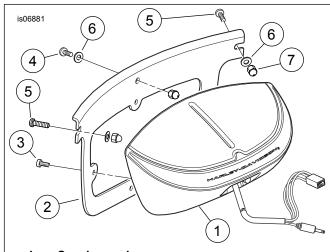

- 1. Speaker pod
- 2. Speaker pod bracket
- 3. Screw. M5 (4)
- 4. Screw, pan head, TORX, #12-24 x 0.81 in
- 5. Screw, pan head, TORX, #12-24 x 1.0 in (2)
- 6. Washer, flat (3)
- 7. Acorn nut, #12-24

Figure 1. Install Speaker Bracket

## **Amplifier and Amplifier Bracket Installation**

- Remove the horn and relocate it according to the instructions included in the horn relocation kit (Part No. 69015-08).
- Install the amplifier and amplifier bracket from the Windshield-Mounted Speaker and Amplifier Kit (Part No. 76321-09) according to the instructions included in **that** kit for Softail models, with the following exception: See Figure 2. Install the two flat washers (3) included in **this** kit as shown.

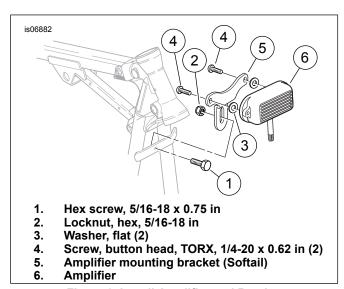


Figure 2. Install Amplifier and Bracket

2/2 J05328