



INSTRUCTIONS

J05338

2010-11-10



MID-FRAME AIR DEFLECTOR TRIM

GENERAL

Kit Number

61400028

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

This kit contains a left side and right side mid-frame air deflector trim piece.

There are no Service Parts available with this kit.


INSTALLATION

1. Without removing the adhesive backing, test the fit of the trim pieces on the mid-frame air deflectors. Note the lip on the trim piece that is designed to engage the front edge of the mid-frame air deflector.
2. Thoroughly clean the mid-frame air deflectors:
 - a. Clean mid-frame air deflectors thoroughly with soap and water and allow to dry.
 - b. Clean the trim mounting area of the mid-frame air deflectors with an approximately 1:1 mixture of isopropyl alcohol and water. Allow to dry completely.
3. Rub the adhesive backings on the trim pieces to activate the adhesive.

NOTE

Ambient temperature should be **at least** 10 °C (50 °F) for proper adhesion.

4. See Figure 1. Remove the adhesive backing from a trim piece and install onto the mid-frame air deflector. Start at the top, front corners of the mid-frame deflector and install downward around the mid-frame deflector. Make sure that the lip of the trim piece engages the front edge of the mid-frame deflector. Repeat this step for the opposite side deflector.

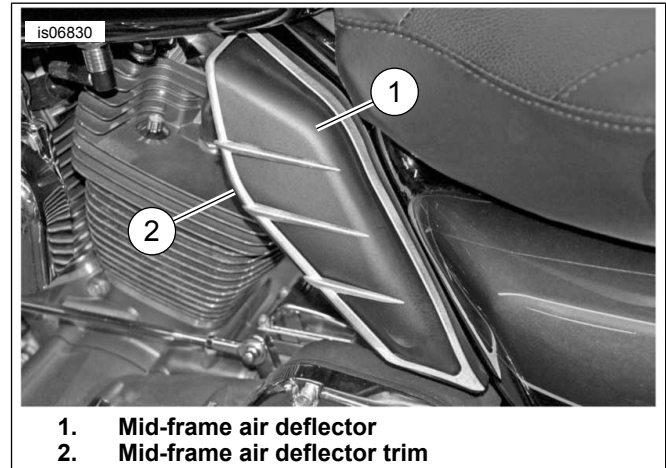

1. Mid-frame air deflector
2. Mid-frame air deflector trim

Figure 1. Mid-Frame Air Deflector Trim

