
INSTRUCTIONS



J05746

SADDLEBAG WALL ORGANIZER KIT

GENERAL

Kit Number

90200882

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

This kit does not fit saddlebags with liners.

Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Wall Organizer, Right	Not Sold Separately
Wall Organizer, Left	Not Sold Separately

INSTALLATION

WARNING

Do not exceed saddlebag weight capacity. Put equal weight in each bag. Too much weight in saddlebags can cause loss of control, which could result in death or serious injury. (00383a)

NOTE

Maximum load capacity of the wall organizer is 1.1 kg (2.43 lb). The combined load of wall organizer and saddlebag must not exceed 6.8 kg (14.99 lb).

1. Open saddlebag.

NOTE

On some motorcycles, the bail wire has been removed from the quick-release fastener. Turn the fasteners with a screwdriver.

- See Figure 1. Rotate quick-release fastener (2) a 1/4 turn in a counterclockwise direction. Remove quick-release fastener (2) and flat washer (1). Retain washer and quick-release fastener for installation.
- 3. Place flat washer (1) on quick-release fastener (2).

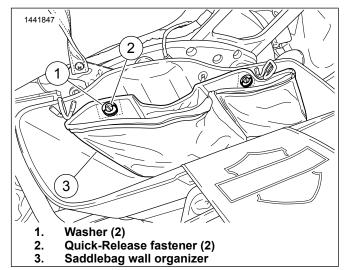


Figure 1. Install Saddlebag Wall Organizer

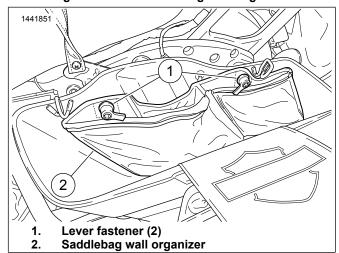


Figure 2. Install Saddlebag Wall Organizer (2017 and later)

- 4. Align the mounting hole of the saddlebag wall organizer (3) with the saddlebag mounting location. Install quick-release fastener (2) and flat washer (1) and turn fastener 1/4 turn clockwise to secure saddlebag and saddlebag wall organizer. The fastener snaps into place.
- 5. Repeat Steps 2 through 4 for other quick-release fastener.
- Close saddlebag.
- 7. Repeat procedure for opposite saddlebag.