

# **INSTRUCTIONS**

J06131



# FUEL TANK KNEE PAD KIT

### **GENERAL**

#### Kit Number

57300065

#### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

#### **Kit Contents**

See Figure 1 and Table 1.

#### PREPARATION

NOTE

Mounting surfaces must be above 60°F (16°C), or the pads may not adhere.

NOTICE

Do not clean with denatured alcohol, mineral spirits, or other solvent products, or component damage may occur. (00411c)

- 1. Using a 50:50 isopropyl alcohol/water solution, thoroughly clean the surface where the pads will be installed.
- 2. Allow the surface to dry completely before continuing to install kit.

#### NOTE

Tank pads cannot be repositioned after initial installation. Verify that they are properly aligned before pressing into place.

Hold the tank pads in desired location. Apply masking tape 3. to serve as a guide for locating the tank pads for installation.

NOTE

Let the adhesive cure for at least 24 hours at no less than 60°F (16°C).

#### INSTALLATION

- 1. Install the pads to the tank.
  - a. Remove the liner from the tape and apply the tape.
  - b. Apply in desired location.
  - c. Press firmly from the inward side to the outward side of the tank.
- 2. Repeat on other side.

## **KIT CONTENTS**

#### Table 1. Kit Contents

Item	Description (Quantity)	Part Number
1	Knee pad, left	Not Sold Separately
2	Knee pad, right	Not Sold Separately

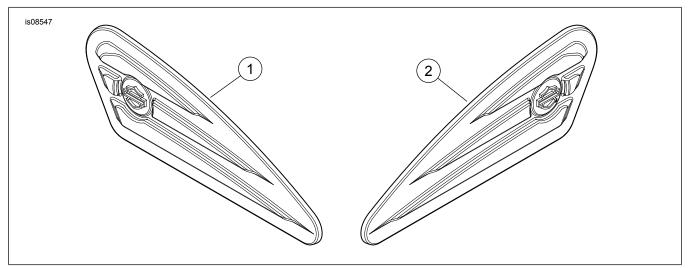


Figure 1. Kit Contents: Fuel Tank Pads