



INSTRUCTIONS

J06064

2015-04-21



WINDSHIELD TRIM

GENERAL

Kit Number

57400299, 57400320

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

Kit Contents

See Figure 1 and Table 1.

INSTALLATION

1. See Figure 1. Begin on one side. Remove two original equipment (OE) screws and washers. Discard.
2. Install windshield trim (2 or 3) and screws (1). Leave fasteners loose.
3. Repeat previous steps on the other side.

NOTE

Do not over-tighten screws.

4. Tighten screws to 0.9–1.3 N·m (8–12 in-lbs).

SERVICE PARTS

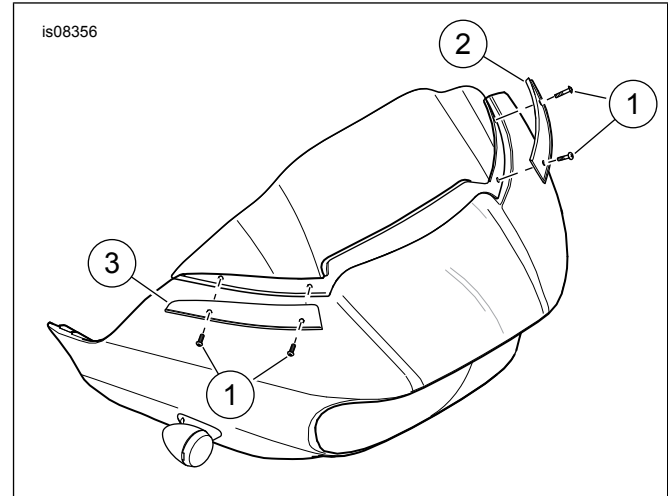


Figure 1. Windshield Trim

Table 1. Service Parts Table

| Item | Description (Quantity) | Part Number |
|------|-------------------------------------|-------------|
| 1 | Screw, silver (4) | 2495 |
| | Screw, black (4) | 10200400 |
| 2 | Windshield trim, left side, chrome | 57400269 |
| | Windshield trim, left side, black | 57400309 |
| 3 | Windshield trim, right side, chrome | 57400268 |
| | Windshield trim, right side, black | 57400308 |