



INSTRUCTIONS

J06249

2015-03-15



WOUNDED WARRIOR FLAG KIT: TOUR-PAK & HARD SADDLEBAGS

GENERAL

Kit Number

61400377

Models

This kit fits all motorcycle models equipped with a Tour-Pak® or hard saddlebags.

NOTE

Flags are not intended for highway use. The construction of these flags will not hold up to the wind speeds at highway speeds. These flags are designed for parade use only.

Kit Contents

Table 1. Kit Contents

Description (Quantity)	Part Number
Wear pads (2)	94620-98
Flag mast	Not Sold Separately
Flag mast retainer	Not Sold Separately
Rubber pad	61079-82
Flag	61400376

There are no Service Parts available with this kit.

INSTALLATION

NOTE

Water may enter Tour-Paks/saddlebags with flag mast installed during inclement weather.

NOTE

Attaching a flag mast to a Tour-Pak or saddlebag without wear pads in place may result in damage to the Tour-Pak or saddlebag exterior. Periodically check to verify the flag mast remains in contact with wear pads.

1. See Figure 1. Remove the adhesive backing from the wear pads and fasten them where the mast base contacts the painted Tour-Pak or saddlebag.
2. Fasten the flag mast bracket over the pads on the Tour-Pak or saddlebag as shown.

NOTE

Attaching flag mast to Tour-Pak or saddlebag without rubber pads in place may result in damage to exterior of Tour-Pak or saddlebag.

3. Cut the self-adhesive rubber pad in half.
4. Remove the adhesive backing from the rubber pads.
5. See Figure 2. To stabilize the flag mast laterally, place on pad on either side of the flag mast bracket on the inside of the Tour-Pak or saddlebags.

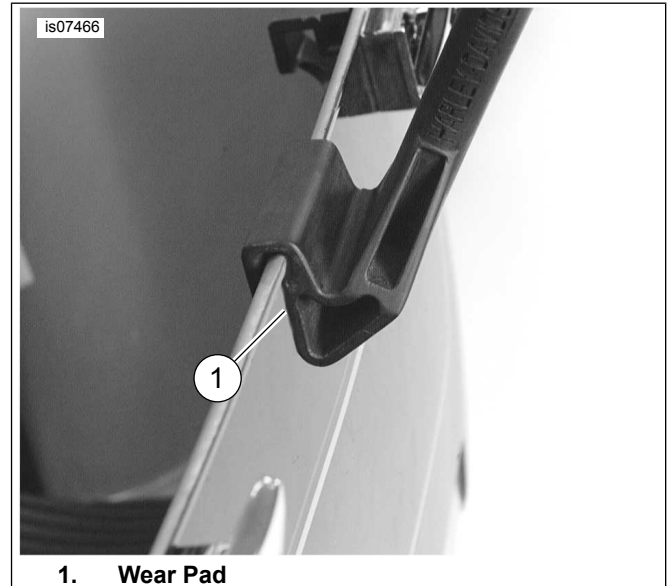


Figure 1. Flag Mast and Wear Pads on Tour-Pak

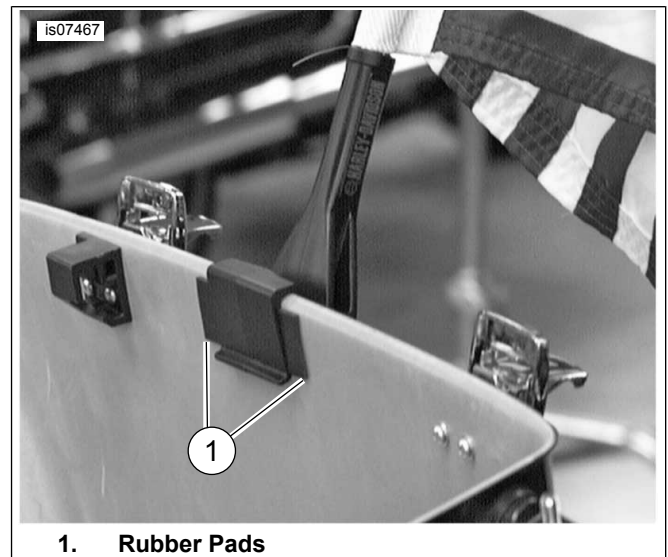


Figure 2. Rubber Pads Installed on Tour-Pak Interior

