INSTRUCTIONS

2012-05-23



REDUCED CLUTCH REACH HANDLEBARS

GENERAL

Kit Number

55800180, 55800181, 55800182

J05558

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Additional Parts Required

A WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for your model motorcycle is required for this installation and is available from a Harley-Davidson dealer.

Kit Contents

See Figure 1 and Table 1.

INSTALLATION

This handlebar installs in the same manner as the original equipment (OE) handlebar. See the service manual for instructions on removing and installing the handlebar.

A WARNING

Be sure that steering is smooth and free without interference. Interference with steering could result in loss of vehicle control and death or serious injury. (00371a)

- Cables should not catch on headlamp hardware or pass in front of headlamp.
- Cables should not catch on turn signal mounting hardware or turn signals.
- Cables should not catch on fuel cap or fuel gauge.
- Cables should not catch on speedometer or tachometer.
- Be sure cables are not pinched between the frame and/or forks.
- Be sure clutch cables do not pull tight when handlebars are turned fully to left or right fork stops.

• Be sure throttle/idle control cables do not pull tight when handlebars are turned fully to left or right fork stops.

LEFT HANDGRIP REPLACEMENT

Use the following procedure if it becomes necessary to replace the left hand grip.

Removal

Slice the hand grip open with a sharp knife. Peel the hand grip open to remove.

Installation

- Clean grip area of handlebar to remove all residual adhesive.
- 2. Rough the left grip end of the handlebar with emery cloth.
- Clean the grip end with acetone.
- Apply LOCTITE 770 PRISM PRIMER to the inside of a new hand grip. Remove any excess primer with a clean cloth. Wait two minutes for the primer to set.
- Apply LOCTITE 411 PRISM INSTANT ADHESIVE to the inside of the new hand grip.

NOTE

LOCTITE 411 PRISM INSTANT ADHESIVE will set in four minutes and cure in 24 hours.

- Install the **new** hand grip with a pushing motion until the grip bottoms out.
- See Figure 1. To complete the grip install, pull inward on grip from the inward end (A) to make sure the grip is fully seated.

SERVICE PARTS

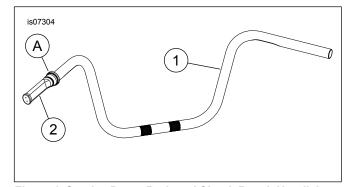


Figure 1. Service Parts: Reduced Clutch Reach Handlebars

Table 1. Service Parts

ſ	Item	(_ (_ (_ (_ (_ (_ (_ (_ (Part Number
	1	Reduced Clutch Reach Handle-	Not Sold Separately
		bar	
	2	Reduced Clutch Reach Grip	56100053