



# INSTRUCTIONS





J03066

2019-01-15



## SKULL FOOTBOARD INSERT KITS

Table 1. General Information

Kits	Suggested Tools	Skill Level <sup>(1)</sup>	Time
50704-04, 50707-04, 50710-04, 50713-04, 50501285, 50501286, 50501287, 50501289, 50501290	Safety Glasses, Flat-blade Screw- driver, Pliers, Dish Soap	   	1 hour
<i>(1) Only simple tools and techniques required</i>			

### KIT CONTENTS

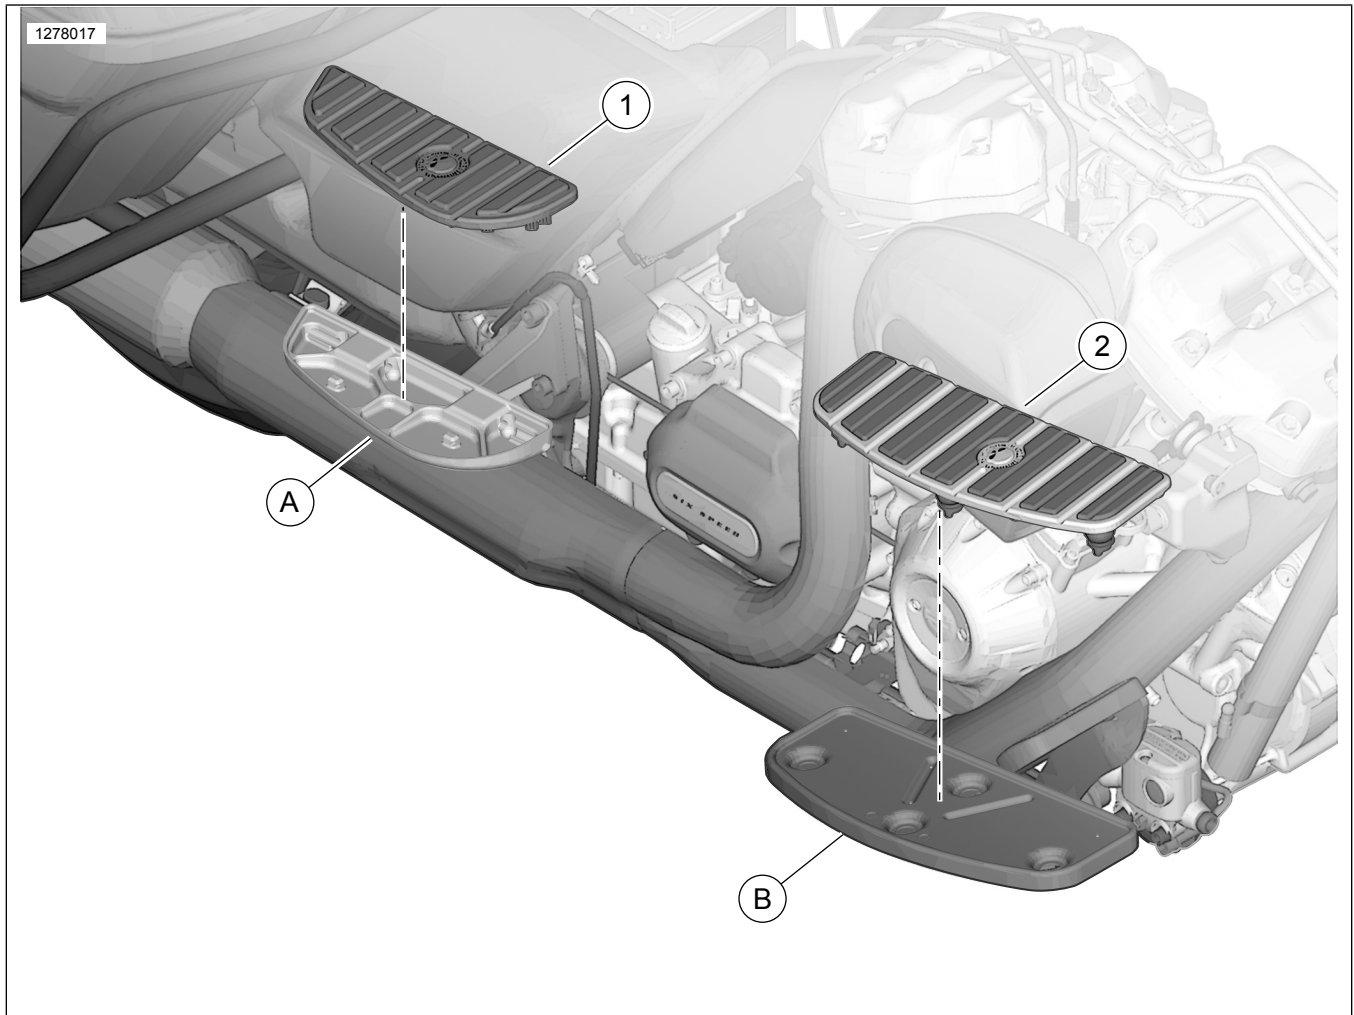


Figure 1. Kit Contents: Skull Footboard Insert Kits

**Table 2. Kit Contents: Skull Footboard Insert Kits**

<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1	2	Rubber pads, Passenger	Not sold separately	
<input type="checkbox"/>	2	2	Rubber pads, Rider	Not sold separately	
Items mentioned in text but not included in kit					
<input checked="" type="checkbox"/>	A	2	Footboard, Passenger		
<input checked="" type="checkbox"/>	B	2	Footboard, Rider		

**NOTE**

Verify all contents are present in the kit before installing or removing items from vehicle.

## GENERAL

### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

Ensure you are using the most current version of the instruction sheet which is available at: [www.h-d.com/isheets](http://www.h-d.com/isheets)

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

## Installation Requirements

**⚠ WARNING**

**Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)**

## REMOVE

**NOTE**

Avoid the contact of chrome or black surfaces with abrasive materials (stones, sand, etc.) as damage will result.

### Rider

- Remove rubber pads.
  - From bottom of footboard, use a flat-blade screwdriver to push rubber beads on pad up through the holes in the footboard pan.
- Repeat steps on other side.

### Passenger

- Kits 50707-04, 50501289, 50501290:** Remove rubber pads.
  - Position footboard in the "down" position.

- Using a flat-blade screwdriver, carefully raise an outside corner of the rubber pad off of footboard. Take care to avoid scratching the chrome.
- Continue around edge of footboard.
- If necessary, use a second flat-blade screwdriver to pry up and remove rubber pad.

- Repeat steps on other side.

- Kits 50713-04, 50501285:** Remove rubber pads.

- Position footboard in the "up" position.
- If present, remove underside chrome footboard cover.
- Apply dish soap to rubber beads protruding from bottom of footboard pan.
- Using a flat-blade screwdriver, push rubber beads on pad through holes in footboard pan and remove rubber pad.

- Repeat steps on other side.

## INSTALL

**NOTE**

Avoid the contact of chrome or black surfaces with abrasive materials (stones, sand, etc.) as damage will result.

### Rider

- Install **new** rubber pad (2).
  - Moisten rubber beads on bottom of rubber pad (2) with soapy water.
  - Position rubber pad (2) on footboard (B).
  - From bottom of footboard (B), use pliers to pull rubber beads into its mating holes in footboard pan until beads protrude through the pan.
  - Pull rubber beads through holes on footboard (B).
- Repeat steps on other side.

## Passenger

1. Install **new** rubber pad (1).
  - a. Moisten rubber anchors on bottom of rubber pad (1) with soapy water.
  - b. Position rubber pad (1) on footboard (A).
  - c. From bottom of footboard (A), use pliers to pull rubber beads into its mating holes in footboard pan until beads protrude through the pan.
  - d. Pull rubber beads through holes on footboard (A).
2. **Kits 50713-04, 50501285:** Cut off rubber pull end on tips of each rubber bead.
  - a. If present, attach underside chrome footboard cover.
3. Repeat steps on other side.