



INSTRUCTIONS





J04731

2024-01-23



RIDER BACKREST PAD

Table 1. General Information

| Kits | Suggested Tools | Skill Level ⁽¹⁾ |
|---|--------------------------------------|---|
| 51564-09A, 51631-09A, 52530-09A, 52572-09A, 52583-09A, 52900-09A, 52914-09A, 52300008, 52300732 | Safety glasses, Hex wrench (3/16 in) |     |
| (1) Tightening to torque value or other moderate tools and techniques required | | |

KIT CONTENTS

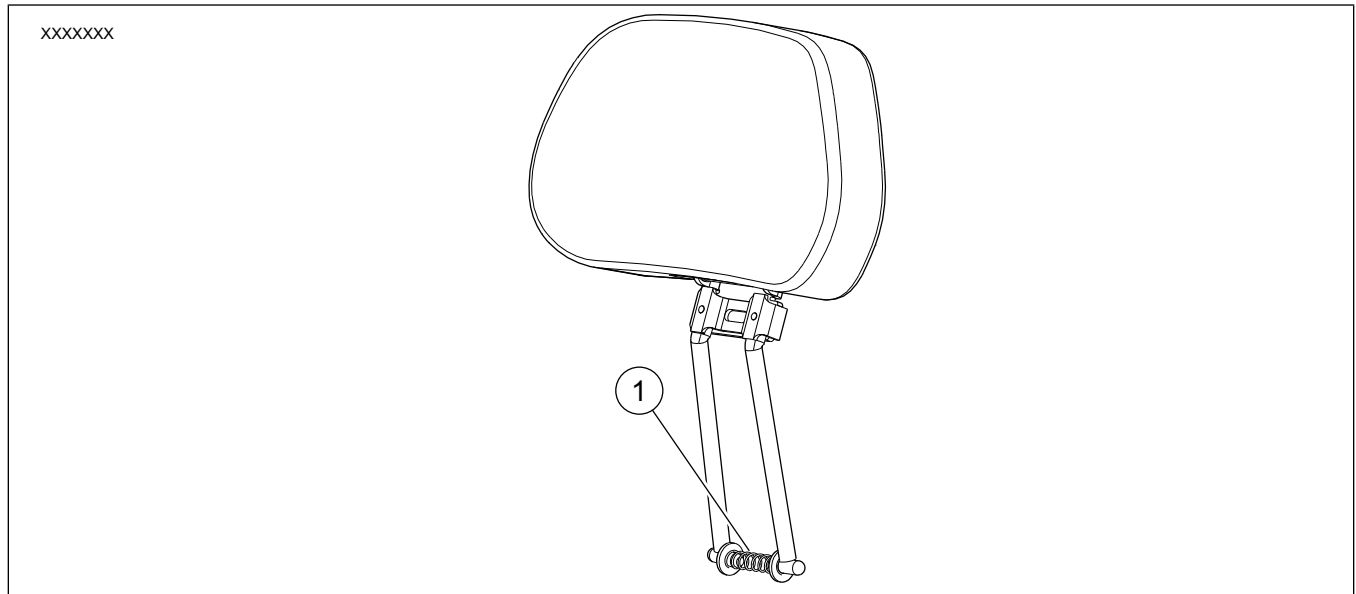


Figure 1. Kit Contents: Rider Backrest Pad Kit

Table 2. Kit Contents: Rider Backrest Pad Kit

| <input checked="" type="checkbox"/> | Item | Qty | Description | Part No. | Notes |
|-------------------------------------|------|-----|-------------|----------|-------|
| <input type="checkbox"/> | 1 | 1 | Spring | 10406 | |

NOTE

Verify all contents are present in the kit before installing or removing items from vehicle.

GENERAL

Models

For model fitment information see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Verify you are using the most current version of the instruction sheet which is available at: www.harley-davidson.com/isheets.

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

INSTALL

1. Install appropriate mounting bracket hardware (sold separately).

2. Install appropriate mounting bracket hardware (sold separately).
 - a. On rider backrest, compress backrest rods and spring.
 - b. Insert rods into backrest mounting bracket.

ADJUSTMENT

1. Adjust fore/aft position of backrest pad.
 - a. Use 3/16 inch hex wrench to adjust set screw that is accessible through eyelet opening on rear of pad.
 - b. If possible, do not remove set screw because it is difficult to install.