



# INSTRUCTIONS

J06660

2019-08-21



## LIVEWIRE SPEED SCREEN BLADE CARBON FIBER

### GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level <sup>(1)</sup>	Time
57400400	Safety Glasses, Torque Wrench		1 hour

(1) Tightening to torque value or other moderate tools and techniques required

### KIT CONTENTS

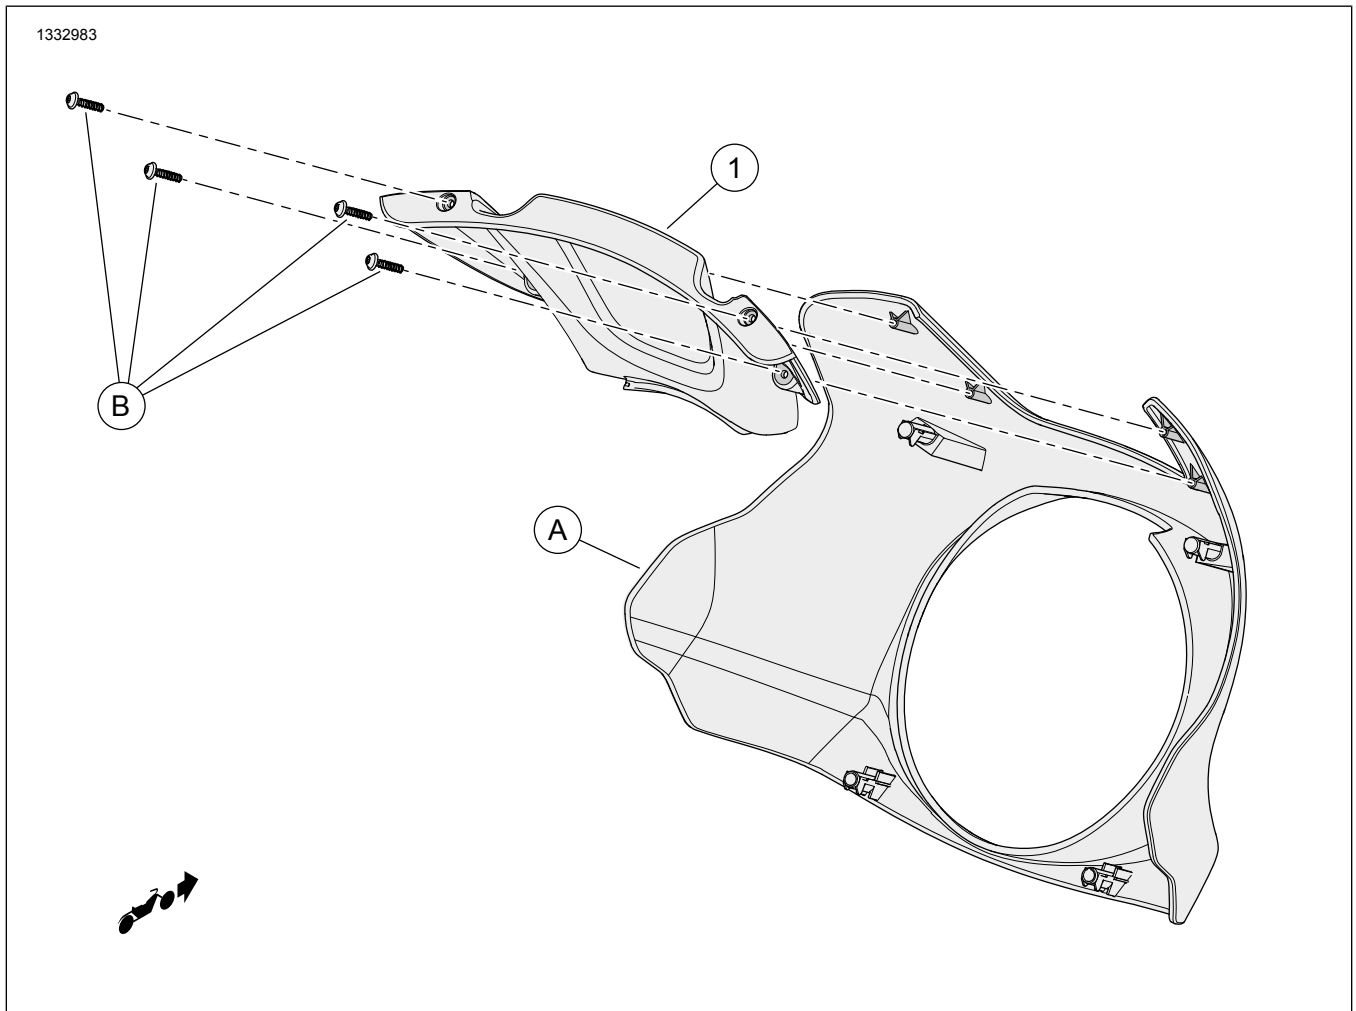


Figure 1. Kit Contents: Speed Screen Components



**Table 2. Kit Contents: Speed Screen Components**

<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1		Speed screen, carbon fiber	Not sold separately	
<b>Items mentioned in text, but not included in kit</b>					
<input checked="" type="checkbox"/>	A	1	Original Equipment (OE) Fairing		
<input checked="" type="checkbox"/>	B	4	OE screw	10200721	Torque 0.5-0.65 Nm (4-6 in-lbs)

**NOTE**

Verify all contents are present in the kit before installing or removing items from vehicle.

## GENERAL

### Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).


Verify that the most current version of the instruction sheet is used. It is available at: [www.harley-davidson.com/isheets](http://www.harley-davidson.com/isheets)

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

### Installation Requirements

**⚠ WARNING**

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

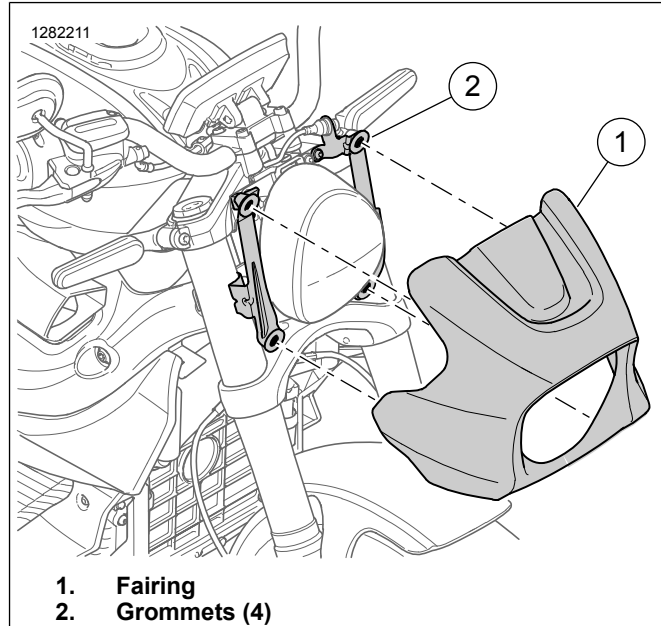

**Figure 2. Front Fairing**

## REMOVE

1. See Figure 2. Remove outer fairing (1) from grommets (2).
  - a. Pull fairing (1) by pulling directly forward on outer edge towards front of vehicle.
2. See Figure 1. Remove OE screws (B).
3. Remove OE wind screen (1).

## INSTALL

1. Install **new** carbon fiber speed screen (1) to fairing (A) using OE screws (B).
2. Secure screws (B). tighten.  
Torque: 0.5–0.65 N·m (4–6 **in-lbs**)
3. See Figure 2. Install outer fairing (1).
  - a. Align fairing (1) with grommets (2).
  - b. Install fairing (1) on grommets (2).