



# INSTRUCTIONS





J06750

2019-08-21



## TANK STRAP

Table 1. General Information

Kits	Suggested Tools	Skill Level <sup>(1)</sup>	Time
61301076	Safety Glasses, Isopropyl alcohol	   	1 hour

(1) Only simple tools and techniques required

### KIT CONTENTS

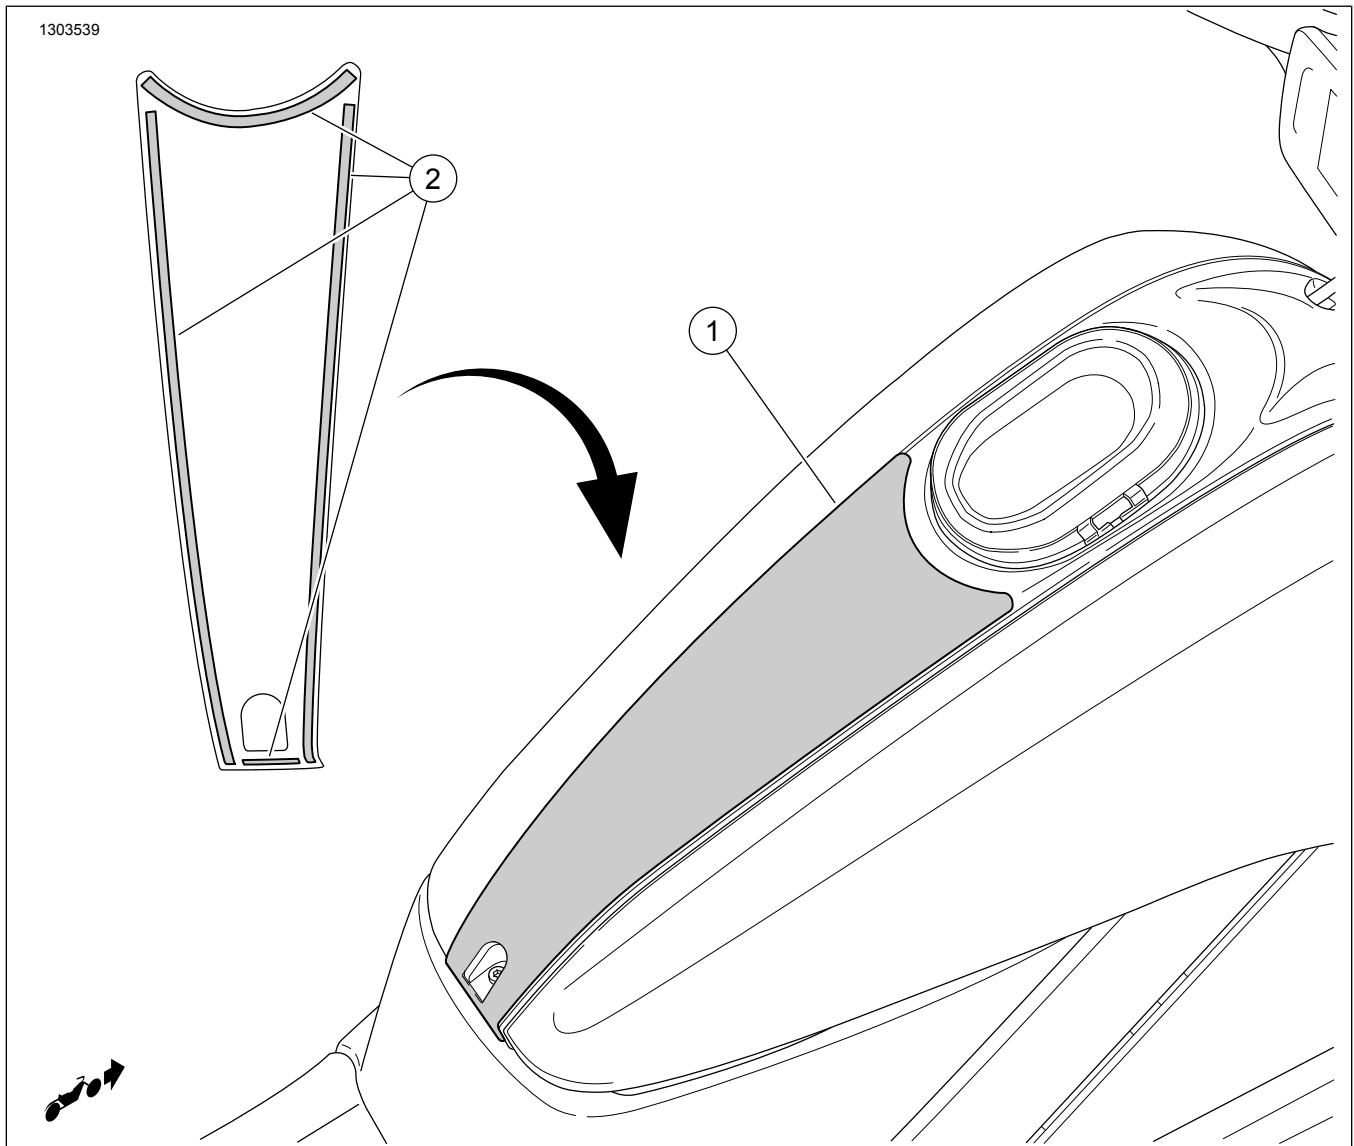


Figure 1. Kit Contents: Tank Strap

**Table 2. Kit Contents: Tank Strap**

<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1		Tank Strap	Not sold separately	

**NOTE**

Verify all contents are present in the kit before installing or removing items from vehicle.

## GENERAL

### Models

For model fitment information, please see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

Ensure you are using the most current version of the instruction sheet which is available at: [www.harley-davidson.com/isheets](http://www.harley-davidson.com/isheets)

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

### Installation Requirements

**⚠ WARNING**

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

## INSTALL


**NOTE**

Install panels when ambient temperature is 16 °C (61 °F) or above.

- See Figure 1. Thoroughly clean area with a 50:50 mix of isopropyl alcohol and water. Allow to dry completely.
- Remove tape protecting the adhesive pads (2) on the inside of the tank strap.
- See Figure 2. Install tank strap to tank.
  - Start at base of tank.
  - Continue working up the tank.
- Press firmly on top surface of cover.
- Hold for 30 seconds.

**NOTE**

Wait 24 hours before exposure to water, temperature change or operating vehicle. Adhesive will fully cure after 72 hours at room temperature.

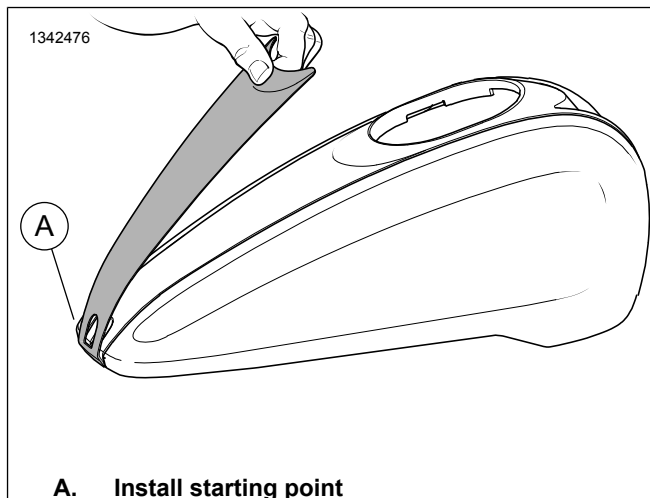

**A. Install starting point**

**Figure 2. Tank Strap Installation**