



# INSTRUCTIONS

J03476

2020-01-14



## TOURING PASSENGER FOOTBOARD PAN KIT

### GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level <sup>(1)</sup>	Time
50752-04, 50501799	Safety Glasses, Torque Wrench, Flat Blade Screwdriver, small, Brass Drift, Rubber Mallet, Needle Nose Pliers		1 hour
<i>(1) Tightening to torque value or other moderate tools and techniques required</i>			

### KIT CONTENTS

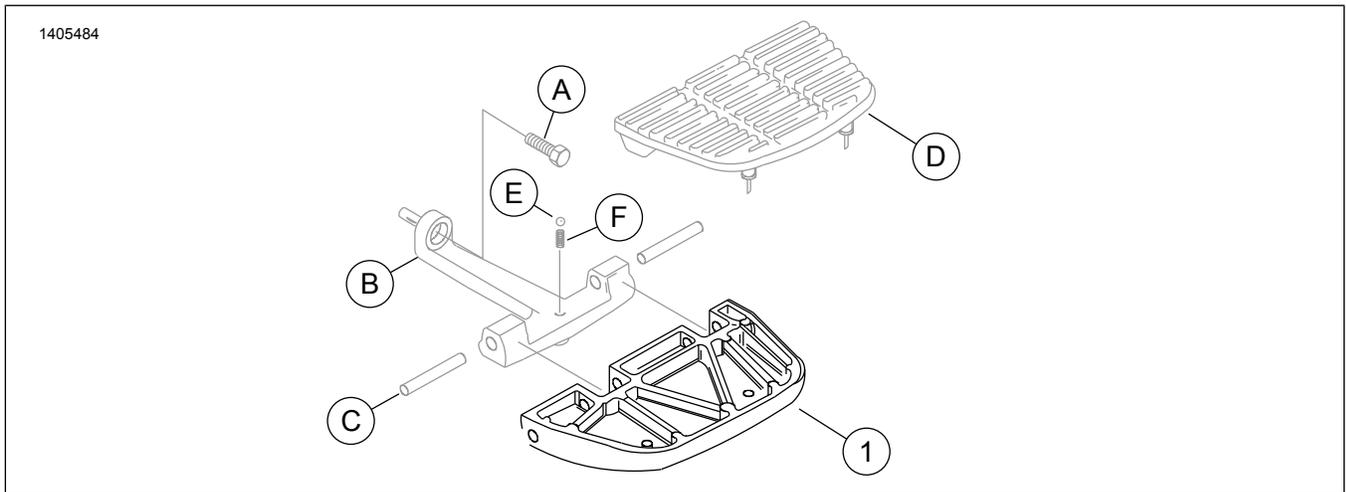


Figure 1. Kit Contents: Passenger Footboard Pan Kit Components

Table 2. Kit Contents: Passenger Footboard Pan Kit Components

<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1	1	Passenger footboard pan, chrome (Kit 50752-04)	52721-04	
<input type="checkbox"/>			Passenger footboard pan, black (Kit 50501799)	50501809	
<b>Items mentioned in text, but not included in kit:</b>					
<input checked="" type="checkbox"/>	A	1	Screw, socket		
<input checked="" type="checkbox"/>	B	1	Support bracket, footboard		
<input checked="" type="checkbox"/>	C	2	Pivot pins		
<input checked="" type="checkbox"/>	D	1	Pad, footboard		
<input checked="" type="checkbox"/>	E	1	Detent ball		
<input checked="" type="checkbox"/>	F	1	Spring		

#### NOTE

Verify that all contents are present in the kit before installing or removing items from vehicle.



## GENERAL

### Models

This kit is designed for installation on 1986 - Later Touring and 2000 - Later Softail models equipped with passenger footboards.

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of [www.harley-davidson.com](http://www.harley-davidson.com) (English only).

Verify that the most current version of the instruction sheet is used. It is available at: [www.harley-davidson.com/isheets](http://www.harley-davidson.com/isheets)

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

### Installation Requirements

#### ▲ WARNING

**Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)**

#### NOTE

*This instruction sheet references service manual information. A service manual for the year and model motorcycle is required for this installation and is available from:*

- A Harley-Davidson dealer.
- H-D Service Information Portal, a subscription-based access available for most 2001 and newer models. For more information see *Frequently ask questions about subscriptions*.

### REMOVE

1. Remove socket screw (A) from footboard support (B).
2. Place footboard support (B) on a clean flat surface.
3. Remove pad (D) from footboard pan (1).
  - a. From bottom of footboard pan (1), use a small flat blade screwdriver to push beads on pad (D) up through holes in footboard pan (1).
4. Using a brass drift and rubber mallet, tap two pivot pins (C) towards center of footboard pan (1). Remove.
5. Remove footboard pan (1) from support bracket (B) taking care to remove and retain detent ball (E) and spring (F) from footboard support (B).

### INSTALL

1. Install spring (F) and detent ball (E) into footboard support (B).

2. Install **new** footboard pan (1).
  - a. Position footboard pan (1) and insert pivot pins (C) using brass drift and rubber mallet.
3. Install pad (D).
  - a. Moisten rubber beads on pad (C) with soapy water.
  - b. Place pad (C) into position on footboard pan (1).
  - c. From bottom of footboard pan (1), use needle nose pliers to pull rubber beads down through holes in footboard pan (1).
4. Engage nubs on inboard corners on footboard pad (D) with holes in footboard pan (1).
5. Install socket screw (A) into footboard support (B). Tighten. Torque: 13.6 N·m (120 **in-lbs**)
6. Repeat steps for other side.