



INSTRUCTIONS

94100071

2021-03-08



TACTICAL TREKKER ENGINE GUARD

GENERAL INFORMATION

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾
49000192	Safety Glasses, Torque Wrench	

(1) Tightening to torque value or other moderate tools and techniques required

KIT CONTENTS

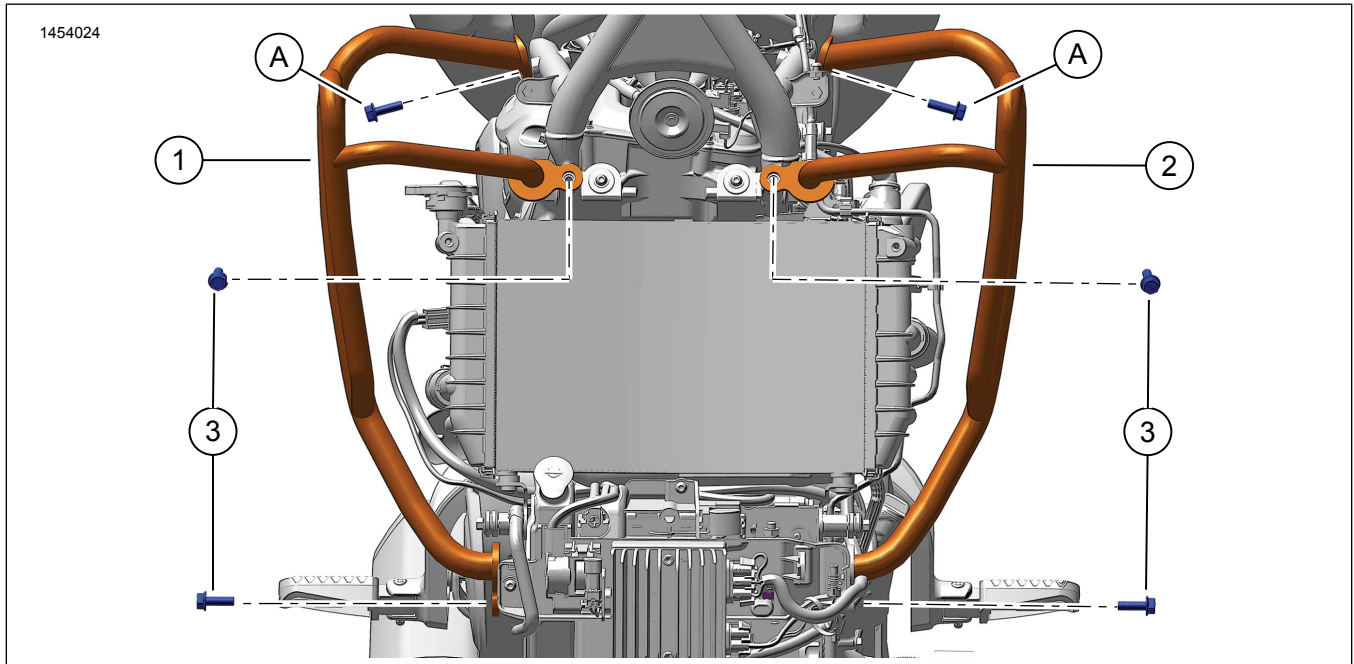


Figure 1. Kit Contents: Tactical Trekker Brush Guard

Table 2. Kit Contents: Brush Guard Kit

Verify that all contents are present in the kit before installing or removing items from vehicle.					
<input checked="" type="checkbox"/>	Item	Qty	Description	Part No.	Notes
<input type="checkbox"/>	1	1	Engine guard - right	49000160	
<input type="checkbox"/>	2	1	Engine guard - left	49000161	
<input type="checkbox"/>	3	4	Screw - M8X1.25-25	10201227	24–29.5 N·m (18–22 ft-lbs)
Items mentioned in text, but not included in kit					
<input checked="" type="checkbox"/>	A	2	Original Equipment (OE) Headlamp bar screw - M8X1.25-25		

GENERAL

Models

For model fitment information, see the Parts and Accessories (P&A) Retail Catalog or the Parts and Accessories section of www.harley-davidson.com.

Verify that the most current version of the instruction sheet is used. It is available at: h-d.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

⚠ WARNING

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00333b)

NOTE

This instruction sheet references service manual information. A service manual for the year and model motorcycle is required for this installation and is available from:

- A Harley-Davidson dealer.
- H-D Service Information Portal, a subscription-based access available for most 2001 and newer models. For more information see *Frequently ask questions about subscriptions*.

PREPARE

1. **If necessary:** Remove skid plate. See service manual.

REMOVE

1. Remove headlamp bar screws (A). Save for later use.

INSTALL

1. See Figure 1. Install engine guards (1, 2).
2. Install lower screw (3). Hand tighten.
3. Install mid screw (3). Hand tighten.
4. Install headlamp bar screw (A). Hand tighten.
5. Tighten all screws.
Torque: 24–29.5 N·m (18–22 ft-lbs)

COMPLETE

1. **If removed:** Install skid plate. See service manual.