INSTRUCTIONS

2023-01-09

LARGE BRAKE PEDAL KIT

GENERAL INFORMATION

J06348

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾			
50600179, 50600185, 50600186, 50600463, 50600464, 50600465, 50600511, 50600512	Safety glasses, Torque wrench	FFF			
(1) Tightening to torque value or other moderate tools and techniques required					

KIT CONTENTS

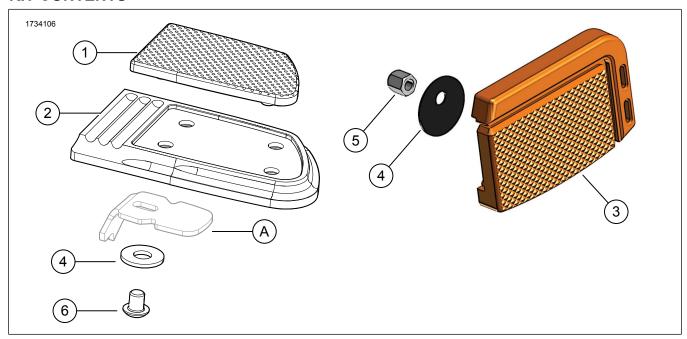


Figure 1. Kit Contents: Large Brake Pedal Kit

Table 2. Kit Contents: Large Brake Pedal Kit

	Item	Qty	Description	Part No.	Notes	
	1	1	Pad, brake pedal	Not sold separately		
	2	1	Trim Cover, brake pedal	Not sold separately		
	3	1	Brake pedal assembly, Kit	Not sold separately		
	4 1	1	Washer, Kits 50600179, 50600185, 50600186, 50600463, 50600464, 50600465	6333		
			Washer, offset, Kits 50600511, 50600512	6421		
	5	1	Locknut, acorn, Kits 50600511, 50600512	7549A		
6	6	1	Screw, Kits 50600179, 50600185, 50600186	4278		
	o l		Screw, Kits 50600463, 50600464, 50600465	10201226		
Items mentioned in text, but not included in kit						
	Α	1	Original Equipment (OE) Brake pedal			

NOTE

Verify that all contents are present in the kit before installing or removing items from vehicle.

GENERAL

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Verify that the most current version of the instruction sheet is used. It is available at: www.harley-davidson.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

REMOVE

 See Figure 1. Remove and discard previously installed brake pedal cover from foot brake lever.

INSTALL

- Align new pad assembly over foot brake pedal (A) as shown.
- 2. Apply threadlocker to screw (6).

Consumable: LOCTITE 243 MEDIUM STRENGTH THREADLOCKER AND SEALANT (BLUE) (99642-97)

- 3. Assemble washer (4) and screw (6).
- Thread screw (6) through hole in brake lever and into back of pad.
- 5. Tighten screw

Torque: 13.56 N·m (10.0 ft-lbs)

- Kits 50600511, 50600512: Install washer (4) onto threaded stud.
- 7. Install locknut (5) onto threaded stud. Tighten.

Torque: 13.6 N·m (10 ft-lbs)

2/2 J06348