



INSTRUCTIONS

J01143

2023-01-09



TOUR-PAK AND HARD SADDLEBAG MOUNT FLAG KITS

GENERAL

Kit Numbers

94626-98, 94837-02, 94839-07, 94901-03, 61400204, 61400377, 61400723

NOTE

Flags are not intended for highway use. The construction of these flags will not hold up to the wind speeds seen at highway speeds. These flags are designed for parade use only.

Models

For model fitment information, see the P&A retail catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Kit Contents

Table 1. Kit Contents

Item	Description	Part Number
1	Wear pads (2)	Not sold separately
2	Flag mast, trunk mount	Not sold separately
3	Retainer, flag mast	Not sold separately
4	Flag, standard, trunk mount	94625-98
	Flag, 100th anniversary, trunk mount	94838-02
	Flag, 105th anniversary, trunk mount	94842-17
	Flag, POW-MIA, trunk mount	94902-03
	Flag, 110th anniversary, trunk mount	61400203
	Flag, wounded warrior, trunk mount	61400376
	Flag, 120th anniversary, Tour-Pak/Saddlebag	61400720
5	Rubber pad	Not sold separately

INSTALLATION

NOTE

Water may enter Tour-Paks/saddlebags with flag mast installed during inclement weather.

NOTE


Attaching a flag mast to a Tour-Pak or saddlebag without wear pads in place may result in damage to the Tour-Pak or saddlebag exterior. Periodically check to verify the flag mast remains in contact with wear pads.

1. See Figure 1. Remove adhesive backing from wear pads and place on area where mast base contacts painted portion of Tour-Pak or saddlebag.
2. Attach flag mast to Tour-Pak or saddlebag.

NOTE

Attaching flag mast to Tour-Pak or saddlebag without rubber pads in place may result in damage to exterior of Tour-Pak or saddlebag.

3. Cut adhesive rubber pad in half.
4. Remove adhesive backing from rubber pads.
5. See Figure 2. To stabilize flag mast laterally, place one pad on either side of flag mast bracket on inside of Tour-Pak or saddlebags.

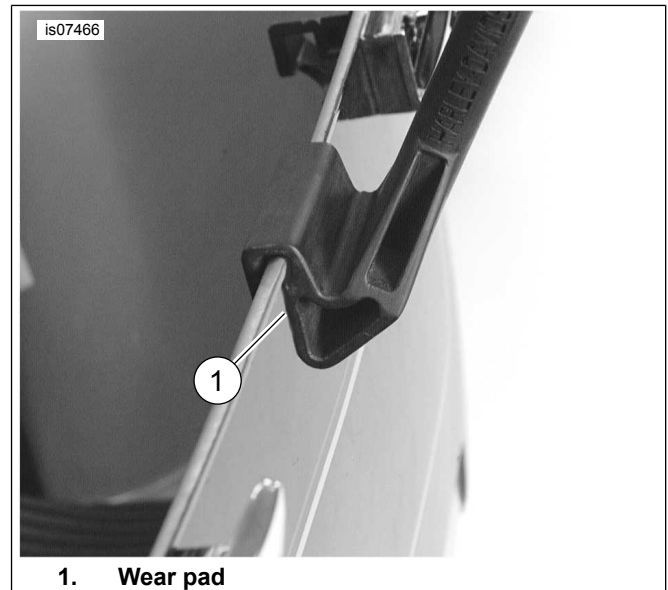


1. Wear pad

Figure 1. Flag Mast Installed on Tour-Pak



is07467

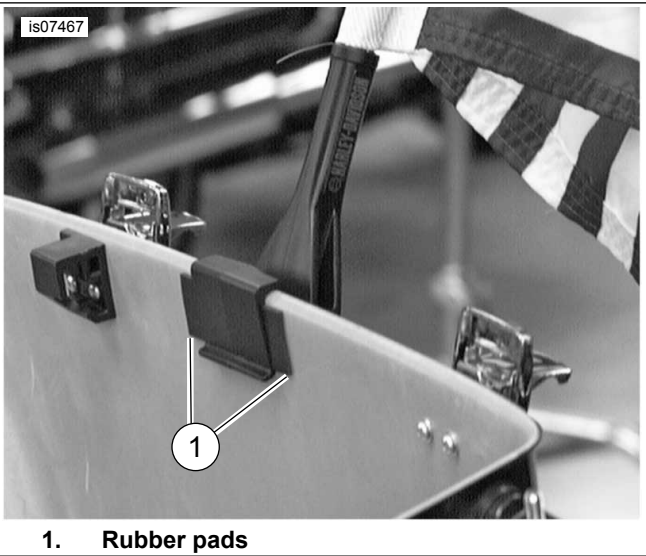

1. Rubber pads

Figure 2. Rubber Pads Installed on Interior of Tour-Pak