INSTRUCTIONS

2024-01-24



BRAKE PEDAL PAD KIT

GENERAL INFORMATION

J06529

Table 1. General Information

Kits	Suggested Tools	Skill Level ⁽¹⁾		
50600248, 50600255, 50600256, 50600257, 50600258, 50600259, 50600466, 50600467, 50600468, 50600507, 50600508, 50600546, 50600547	Safety glasses, Torque wrench	prop		
(1) Tightening to torque value or other moderate tools and techniques required				

KIT CONTENTS

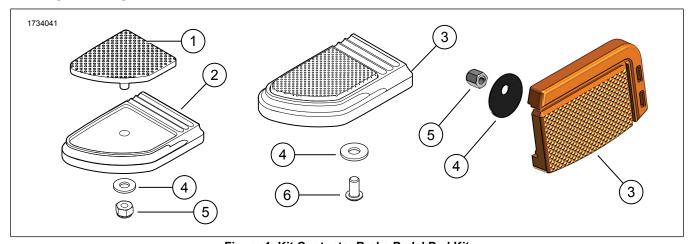


Figure 1. Kit Contents: Brake Pedal Pad Kit

Table 2. Kit Contents: Brake Pedal Pad Kit

	Item	Qty	Description	Part No.	Notes
	1	1	Pad, brake pedal	Not sold separately	
	2	1	Trim Cover, brake pedal	Not sold separately	
	3	1	Brake pedal assembly, Kit	Not sold separately	
	4	1	Washer, Kits 50600248, 50600255, 50600256	6703	
			Washer, Kits 50600257, 50600258, 50600259, 50600466, 50600467, 50600468, 50600507, 50600508	6333	
			Washer, offset, Kits 50600507, 50600508, 50600546, 50600547	6421	
	5	1	Hex locknut, 1/4-20, Kits 50600248, 50600255, 50600256	7686	
			Locknut, acorn, Kits 50600507, 50600508	7549A	
	6		Screw, Kits 50600257, 50600258, 50600259	3540	
			Screw, Kits 50600466, 50600467, 50600468	10201203	
			Screw, Kits 50600546, 50600547	3340	

NOTE

Verify that all contents are present in the kit before installing or removing items from vehicle.

GENERAL

Models

For model fitment information, see the P&A Retail Catalog or the Parts and Accessories section of www.harley-davidson.com (English only).

Verify that the most current version of the instruction sheet is used. It is available at: www.harley-davidson.com/isheets

Contact Harley-Davidson Customer Support Center at 1-800-258-2464 (U.S. only) or 1-414-343-4056.

Installation Requirements

A WARNING

Rider and passenger safety depend upon the correct installation of this kit. If the procedure is not within your capabilities or you do not have the correct tools, have a Harley-Davidson dealer perform the installation. Improper installation of this kit could result in death or serious injury. (00308b)

REMOVE

 Remove brake pedal pad from vehicle foot brake lever. Discard pad.

INSTALL

Small Brake Pedal Pads: Kits 50600248, 50600255, 50600256

- See Figure 1. Align **new** brake pedal pad (1) with recess in trim cover (2).
- Insert threaded stud through holes in trim cover and vehicle foot brake lever.
- 3. Install washer (4) onto threaded stud.
- 4. Install 1/4-20 hex locknut (5) onto threaded stud. Tighten. Torque: 10.9 N·m (8 ft-lbs)

Large Brake Pedal Pads: Kits 50600257, 50600258, 50600259, 50600466, 50600467, 50600468

- See Figure 1. Align **new** brake pedal assembly (3) with vehicle foot brake lever.
- Apply threadlocker to screw (6).
 Consumable: LOCTITE 243 MEDIUM STRENGTH
- THREADLOCKER AND SEALANT (BLUE) (99642-97)

 3. Kits 50600257, 50600258, 50600259, 50600466,
- 50600467, 50600468: Install washer (4) onto screw (6).
- Install screw (6) through foot brake lever and into brake pedal assembly. Tighten.

Torque: 10.9 N·m (8 ft-lbs)

- Kits 50600507, 50600508: Install washer (4) onto threaded stud.
- 6. Install locknut (5) onto threaded stud. Tighten.

Torque: 10.9 N·m (8 ft-lbs)

2 / 2 J06529